 


# User Manual

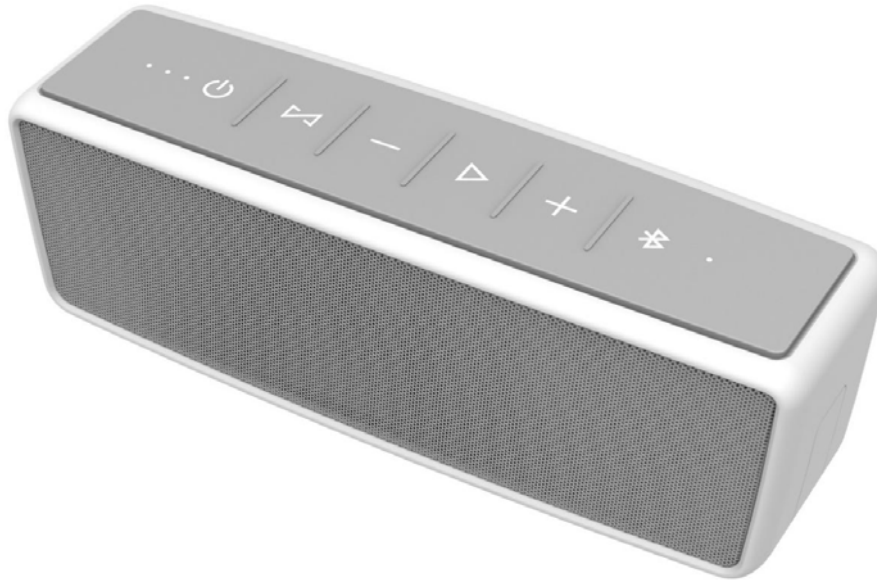

 
**Product Name: Wireless Speaker**

**Model No.: HFD-X1**

## Box Content

1. 1\* True Wireless Speaker
2. 1 \* Charging Cable
3. 1\* Audio Cable
4. 1\* User Manual

## Product Overview

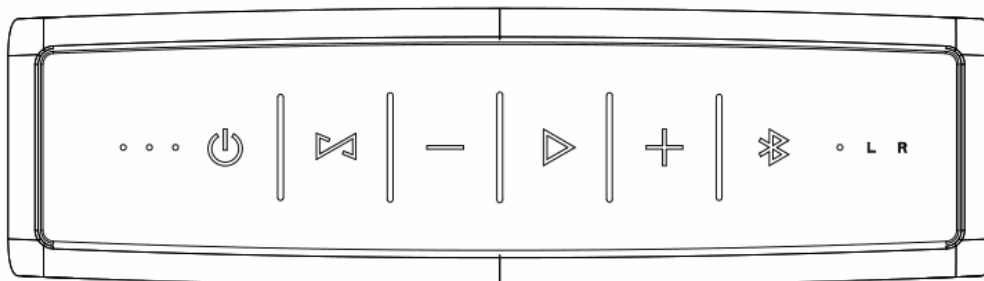

### 1. Battery Level Indicator

- 30% Battery
- 60% Battery
- 100% Battery

## **2. Power Button**

Press and hold for 3 seconds to power on/off the speaker.

## **3. Multi-function Button**

Short press this button to toggle between Bluetooth/AUX/TF card modes.

Press and hold this button to activate True Wireless pairing mode.

## **4. V(olume)- /Prev button**

Press and hold to decrease the volume.

Simply press to navigate the previous track.

## **5. Play/Pause/Phone Button**

Simply press the button to play / pause the music.

Press to answer / end or press and hold to decline the call.

press and hold for 2 seconds to activate or end SIRI, when in bluetooth mode.

## **6. V(olume)+/Next Button**

Press and hold to increase the volume.

Simply press to navigate the next track.

## **7. Bluetooth button**

Press and hold this button for 2 seconds to enter into bluetooth pairing mode with the alert "Pairing" or disconnect the pairing.

## **8. Multi-function Indicator**

Solid blue: Speaker is powered on

Flash Blue Fast: Waitting to be paired

Flash Blue Slowly: Bluetooth paired successfully

Flashing blue & red: True wireless pairing

Solid green: The speaker is in Aux mode

Solid orange: The speaker is in TF Card mode

Flashing red: Battery low

## **9. L&R Indicator**

 
Solid "L": The speakers are paired successfully by true wireless, this one is the Master.

Solid "R": Paired successfully by true wireless, this one is the Slave.

Notes:

The indicators are all in dark, if use solely.

They will be flashing in the same time until the speakers are paired successfully with the sound alert "Connected", when True Wireless pairing.

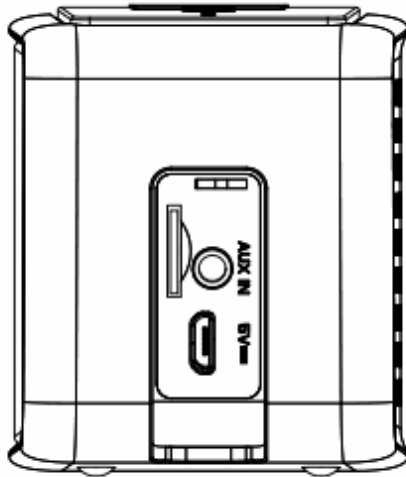

### **1. AUX IN Port**

Use this port to connect an external media device via the audio cable.

### **2. Charging Port**

Insert the power cord into the Micro-USB port of the device(Use with 5V/1A adapter). Charging begins automatically even if the device is powered off. (USB power adapter not included)

### **3. TF Card Port**

Insert the TF card into this slot to play stored media sources.

## **INSTRUCTIONS**

### **Bluetooth Mode**

1. Press and hold the bluetooth button for 2 seconds to enter bluetooth pairing mode with a sound alert "Pairing", the indicator is flashing fast in blue.
2. BT Pairing Mode will automatically be canceled after 3 minutes. To re-enter pairing mode, simply begin again at step #1.
3. Ensure bluetooth is enabled on the device you wish to pair with the speaker.
4. Keep your device within 3 feet with the speaker, and search bluetooth name "X1" on your device to pair them together (sometimes called a "Passkey", "PIN Number" enter "0000").
5. Play music to enjoy amazing wireless sound by the speaker.
6. The speaker will record this device as the last device paired.
7. Incoming calls will override music and other media with an incoming call voice alert, simply press the button "Play/Pause" to answer/end or press and hold for 2 seconds to decline the call.
8. When in BT mode, press the button "Play/Pause" press and hold 2S to activate Siri/ S-Voice.
9. Should you wish to switch music players, simply press and hold the bluetooth button to disconnect the paired device, then re-press and hold the button to enter pairing mode like normal.

### **True Wireless Function**

1. Connected one speaker to your device as normal bluetooth connection.
2. Power on another speaker
3. Press and hold the multi-function buttons on these two speakers at the same time the Red and blue lights alternately flash, when the indicators “L” & “R” on both speakers are flashing together, they will be paired to each other successfully with the sound alert “Connected” .
4. The speaker connected with your device is the Master with the indicator “L” in solid white, the other is the Slave with the indicator “R” in solid white.
5. Play music on your device, both of them will work together.

#### **Notes:**

- 1.If you just want to use one, press and hold the buttons “Volume-” and “Volume+” together until the “L” and “R” light off on the speakers to clear the pairing records, then either of them can be used solely after re-power it.
- 2.If you use the Slave individually without clearing the paired record,Press and hold the Bluetooth Button for 2 seconds,will with the sound alert “Pairing”, “L” and “ R” Light off, Blue light flashing,use you phone connect it.Now the Slave is connect you phone. Open the Master,can’t return to TWS status,need disconnect the phone bluetooth,and Reboot the two speaker,it will return the TWS status.

### **TF Card Mode**

1. Put in Micro SD card into the slot, it will switch to TF Card mode automatically.
2. The indicator is in orange, when pause the music.

**Notes:** Simply press the Multi-function button to switch the mode between BT/AUX/TF Card modes, the one will be ignored if no input media sources.

### **FEATURES**

1. Advanced BT Truwireless Chipset, Real Wireless Stereo Sound in Rich Quality
2. Bluetooth, AUX and TF Card Connection Capability
3. IPX6 Waterproof
4. 10hours of Extended Playtime(at 50% volume)
5. Handsfree Call with High-sensitive Microphone
6. SIRI and S-Voice Supported
7. Auto Idle Shutoff in 40 minutes to Save Power

### **SPECIFICATIONS**

1. Bluetooth version : BT 5.0 chip with TWS function.
- 2.Outpower: 15W per Unit, Two Speakers can Work together (30W).
- 3.Charging voltage: DC 5V
- 4.built-in Rechargeable Li-ion battery
- 5.Battery pack capacity : 4000mAh
- 6.THD: < 0.3%

- 7.SNR: > 85dB
8. Frequency Response: 65Hz-18KHz
- 8.Modes: Bluetooth, TF Card, AUX in
- 9.Response distance: 15 meters.
- 10.Microphone built in
11. Handfree Calls, Voice prompt, SIRI or S-Voice Supported
12. Demension: 50\*61\*188mm

### **Touble shooting**

#### **Speaker will not turn on**

- \*If operating on Charging mode, ensure your speaker is connected to a working Power Adapter.
- \*If operating on battery power, the battery may be in protection mode or discharged. Connect to a power adapter to restore the battery to operational mode.

#### **Cannot pair and connect the speaker with my BT device**

- \*Ensure your speaker is discoverable (BT status indicator blinks blue quickly).
- \*Ensure BT is activated on your device, you have selected the right bluetooth name in the BT device list, and the connection has been confirmed by your device.
- \*Your BT devices may be out of range. Try moving it closer to the speaker.
- \*If possible, turn off all other nearby BT devices or disable their BT functionality.

Turn the speaker off and back on, and pair your device and speaker.

#### **The speaker indicates a connection, but is not playing music**

- \*Ensure the device you want to hear is connected to the speaker and playing audio.
- \*Ensure the speaker is not muted and the speaker volume is turned up.
- \*Turn up the volume on your device.
- \*Your device may be out of range. Try moving it closer to the speaker.

Move your device away from any device that generates electromagnetic interference, such as another BT device, cordless phone, micro- wave oven, or wireless router.

- \*Turn off or disable BT functionality on all other nearby paired devices and reconnect the device you want to hear.
- \*Turn the speaker off and back on.

### **Proper Use**

- 1.Please charge your new speakers for at least two hours before first use.
- 2.To prevent damage and risk of electrical shock, do not expose this device to dust, vibration, rain, water or liquids of any kind.
- 3.Do not place device in close proximity to open flames or extreme heat sources. Always place your device on level, flat and stable surfaces.
- 4.Avoid placing items on top of the speakers.
- 5.Do not use excessive force when pressing buttons or handling speakers.
- 6.To clean your speakers, use a dry, soft cloth or minimally damp cloth without any corrosive solvent or cleaning agent.

**Safety**

To prevent fires, shock or injury, please do not disassemble or replace any parts of this device. In the event that your device may be damaged or in need of repair, please contact a professional maintenance or qualified service center for assistance.

We are not responsible for any personal injury or property damage caused by improper use of this product.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.