The Hammacher Schlemmer **Projection Alarm Clock and** Weather Monitor.

USER'S MANUAL

KSPO: 0882-13(HAM) Hammacher Schlemmer PCR325/TS02 MANUAL(ENG) SIZE:W105 X H148(mm) BY Lai HZ 17/12/13

INTRODUCTION

Congratulations on your purchase of the Hammacher Schlemmer Projection Alarm Clock and Weather Monitor. The basic package comes with a main unit (the weather forecast station), two remote wireless weather sensing units (operating at 433 MHz), and an AC adapter (AC 120V, 60Hz-DČ5.0V, 100mA).

PRECAUTIONS


This product is engineered to give you years of satisfactory service if handled carefully. Here are a few precautions:

1. Do not immerse the unit in water.

- 2. Do not clean the unit with abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronic circuits. 3. Do not subject the unit to excessive force, shock, dust, temperature, or
- humidity, which may result in malfunctions, shorter lifespan, damaged batteries, and damaged parts. 4. Do not tamper with the unit's internal components. Doing so will

2

- invalidate the warranty and may cause damage. The unit contains no user-serviceable parts. 5. Only use fresh batteries. Do not mix new and old batteries.
- 6. Read the user's manual thoroughly before operating the unit.

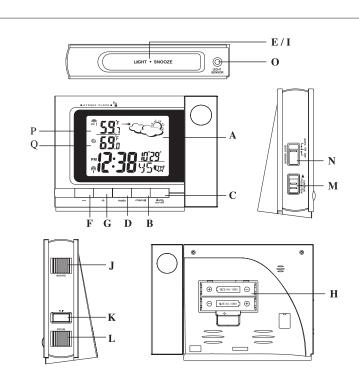

For easy reading of indoor and outdoor weather conditions, calendar, and

B. CHANNEL BUTTON

Toggles between the three remote sensor readings.

C. ALARM BUTTON

For setting alarm and displaying alarm status.

D. MODE BUTTON

Toggles between display modes and allows manual setting of clock and calendar.

E. LIGHT/SNOOZE BUTTON

Activates the snooze function and backlighting. F. DOWN (-) BUTTON

Decreases the value of a setting.

G. UP (+) BUTTON Advances the value of a setting.

H. BATTERY COMPARTMENT For two "AA" batteries.

I. PROJECTION LIGHT AND ADJUSTMENT * Press E / I [LIGHT/SNOOZE]- Projection light will come on and turn off automatically after 5 seconds.

- * Turn the dial J [ROTATE] to manually rotate the projection display. * Press button K [FLIP] to rotate the projection display 180°.
 * Turn the focus dial L [FOCUS] to adjust the sharpness of projection
- * When AC adapter is plugged in, slide button M [CONTINUE PROJECTION] for continuous time and temperature projection.
- N. LIGHT SENSOR BUTTON

When the AC adapter is plugged in, position the light sensor switch at: * "AUTO" for automatic LCD backlighting when the room grows dark. * "ON" for continuous LCD backlighting.

O. LIGHT SENSOR


* "OFF" to deactivate LCD backlighting.

NOTE: AC Adapter must be plugged in for the light sensor option to work

P.OUTDOOR TEMPERATURE Remote unit temperature

Q. INDOOR TEMPERATURE Main unit temperature

MAIN FEATURES: REMOTE UNIT(S)

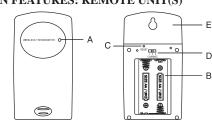

A. LED INDICATOR

Flashes once when the remote unit transmits a reading to the main unit. Flashes twice to indicate low battery.

B. BATTERY COMPARTMENT For two "AA" batteries.

C. RESET BUTTON

Resets unit in case of channel selection change. D. CHANNEL SELECTOR

To coordinate the sensor with the main unit, select the desired channel number before installing batteries.

E. WALL-MOUNT RECESSED HOLE

BEFORE YOU BEGIN For best operation,

1. Insert batteries into remote sensors **before** inserting batteries in the

- 2. Position the remote units and main unit within effective transmission
- range, typically up to 100 feet. Note that the effective range depends upon many factors, including structural surroundings. Though the remote units are weatherproof, they should be placed away from direct sunlight, rain, and snow. **BATTERY INSTALLATION: REMOTE UNITS**

1. Remove the screws on the battery compartment. 2. Select the desired channel.

- 3. Install 2 alkaline "AA" batteries.
- 4. Replace battery compartment door and secure screws.
- **BATTERY INSTALLATION: MAIN UNIT**

2. Install 2 alkaline "AA". 3. Replace the battery compartment door.

LOW BATTERY WARNING

A low-battery indicator [] will appear on the indoor or outdoor temperature reading to show when the corresponding sensor's batteries

GETTING STARTED After batteries are installed, remote sensors will transmit temperature readings at 45 second intervals. The main unit may take up to two minutes

to receive the initial readings; upon successful reception, outdoor temperatures will be displayed. The main unit will automatically update

readings at about 45-second intervals. If no signals are received by the main unit after two minutes, "-- " will be

displayed. Hold [-] for 2 seconds to begin another signal search. If no signals are received, try moving the base unit closer to the remote sensor, face the remote sensor towards the base unit, and minimize

obstructions such as doors and walls between the sensor and base unit.

MANUAL SETTINGS It is necessary to set the desired US TIME ZONE.

1. Press MODE button so that the Day of the Week abbreviation is

- displayed to the right of the time; for example 2:37 TU.


 2. Select the Time Zone by pressing and holding "+" button for 3 seconds. 3. Keeping holding "+" button until the desired US Time Zone (Pacific, Mountain, Central, Pacific) is highlighted on the display's US map, located to the right of the time display above the day of the week.

 4. Release the "+" button, the Time Zone is set.
- HOW TO SET THE CLOCK MANUALLY Press and hold MODE for 3 seconds: the display will flash the year. Press

"+" or "-" to change the values of the flashing digits. After the first value is set, press MODE again. Continue setting month,

day, hour, minutes, language, and Fahrenheit or Celsius display option. When you've set the last value, press **MODE** a final time to return to regular mode. Display will stop flashing. The clock can also be set atomically. See section How to Set the Radio Controlled Clock.

To install the AC adapter for Continuous Projection:

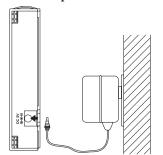

Use 2 AA batteries and the included AC adapter (AC120V, 60Hz-DC5.0V,

PROJECTION IMAGE OF CURRENT TIME AND OUTDOOR **TEMPERATURE:**

2. Press "FLIP" to rotate projection image 180° clockwise.

3. Press and hold the "FLIP" button for 2 seconds to change temperature information from outdoor temperature to indoor temperature.

25 lc 12:38

4. Press and hold the "FLIP" key for 2 seconds again, and the display will alternate between indoor and outdoor temperatures every 5 seconds.

Date is displayed in month-date format. Each press of the MODE button will change the clock display setting between time with seconds, time with day of week, time in new zone (for use when traveling to other time zones) with seconds and time in new zone with day of week.

CALENDAR AND CLOCK DISPLAY MODES

ALARM FEATURE * Weekday Alarm

The alarm will sound and the alarm icon will flash at the set time on Mondays through Fridays.

* Single Day Alarm

The alarm will sound and the alarm icon will flash at the set time, but will not activate on subsequent days.

If the outdoor temperature is at or below 32° F/0° C, the pre-alarm will sound and the icon will flash 15, 30, 45, 60 or 90 minutes prior to the weekday or single alarm time. Press and hold [ALARM] for two

seconds in Pre-Alarm mode to set pre-alarm duration.

" I-IW " (Weekday alarm) " I-IS " (Single day alarm), and "Pre-AL"
(Pre-alarm) icons will be displayed to indicate which alarm mode is armed. You can arm or disarm an alarm by pressing the [+],[-] button at alarm display mode. Press MODE to toggle between alarm modes and to return to the regular display.

HOW TO SET THE ALARM Note: Unit must contain batteries or alarm will not sound! To set an alarm,

- 1. Press [ALARM] once to display alarm time. If the alarm is off, the time will be displayed as "OFF" 2. Press and hold [ALARM] for two seconds. The hour digit will blink.
- 3. Enter the hour using [+] or [-].
- 4. Press [ALARM] again. The minute digits will blink.
- 5. Enter the minutes using [+] or [-].
- 6. Press [ALARM] again to exit.
- 7. Repeat the same procedure to set single alarm.

When the alarm sounds, press the snooze key to temporarily silence the alarm. After 5 minutes, the alarm sound will resume. If the alarm sounds for 4 minutes, it will automatically stop.

HOW TO STOP AN ALARM

Press [ALARM] on the unit to deactivate an alarm. The time will be displayed as "OFF".

HOW TO READ THE KINETIC WAVE DISPLAY The kinetic wave display shows the signal status of the main unit.

Searching for signal.	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
Temperature signals successfully received.	
No signal.	••. °C

WWVB RADIO CONTROLLED TIME

The NIST radio station, WWVB, is located in Ft. Collins, Colorado, and transmits the exact time signal continuously throughout the United States at 60 KHz. The signal can be received up to 2,000 miles away through the internal antenna in the Hammacher Schlemmer Projection Alarm Clock and Weather Monitor. However, due to the nature of the Earth's ionosphere, reception can be limited during daylight hours. The radio control clock will search for an alternate station that derives its signal from the NIST Atomic clock in Boulder, Colorado.

The WWVB tower icon [on the main unit's display will flash to indicate that the clock is receiving a radio signal from the WWVB radio station. If the tower icon is not fully lit, or if the time does not automatically set, please read the following:

- * During nighttime hours, atmospheric disturbances are typically less severe and reception may be improved. A single daily reception is sufficient to keep the clock accurate to within 1 second.
- * Make sure the main unit is positioned a minimum distance of 8 feet from any interference source such as a TV, computer monitor, microwave, etc.
- * Within concrete rooms such as basements or office buildings, the received signal may be weakened. Try positioning the unit near a window.

WEATHER FORECAST The weather monitor is capable of detecting atmospheric pressure

changes. Based on collected data, it can predict the weather for the approaching 12 to 24 hours.

When the display shows	✡	Ŋ	θ		
the forecast is	sunny	Partly Cloudy	Cloudy	Chance of Rain	Rain Likely

1. The accuracy of a pressure-based forecasting is approximately 70%. 2. Display shows forecasted conditions, not current conditions.

3. The "Sunny" icon indicates clear weather, even when displayed during the nighttime.

11

MAXIMUM AND MINIMUM TEMPERATURE The maximum and minimum record of the indoor and outdoor

temperature will be automatically stored in the memory. It will display the minimum, maximum and the current reading upon each press of both "channel" & "-" buttons, the unit will revert back to the current temperature display after 15 seconds. To clear the memory, press "channel" & "-" buttons again, the maximum and minimum readings will

10

DISCONNECTED SIGNALS If the display for a remote sensor goes blank unexpectedly, press [-] for 2 seconds to begin a signal search. If a signal still isn't received, please

check the following: 1. The remote units are positioned in its proper location.

2. The distance between main and remote units are no more than 100 feet, and the path between units is clear of obstacles of possible interference.

Shorten the distance between units if necessary. 3. Charged batteries are installed in both the remote unit and main unit. (Note: When the temperature falls below freezing, the batteries in outdoor remote sensors may have reduced voltage supply and a shorter effective

TRANSMISSION COLLISION

Signals from other household devices, such as doorbells, home security systems, and entry controls, may interfere with those of this product and may cause temporary reception failure. This is normal and will not affect the general performance of the product. The transmission and reception of temperature readings will resume once the interference subsides.

HOW TO SET THE RADIO CONTROLLED CLOCK

1. After the main unit receives temperature readings from the remote unit(s), the WWVB time signal receiver will automatically search for the time signal. This will take 5-8 minutes in typical conditions. 2. If the radio signal is received, the date and time will be set

automatically, and the [] icon will appear.

3. If the time signal has not been received after 8 minutes, use the "MODE" button to set the time manually. The clock will continue to

automatically search for the WWVB time signal for every hour between 1:00 am and 4:30 am each day. When the signal has been successfully obtained, the time and date will be updated automatically.

SPECIFICATIONS

Temperature Measurement Main unit

Indoor Temperature measurement Proposed operating range: $23.0^{\circ}F$ to $122.0^{\circ}F$ (-5°C to +50°C) Temperature resolution: 0.1°C/0.2°F

Remote unit(s)

Proposed operating range (with alkaline batteries): $-4^{\circ}F$ to + 158°F (-20°C to + 70°C)

Proposed operating range (with lithium batteries): -38.8°F to +158°F (-38.8°C to +70°C)

Temperature resolution: 0.1°C/0.2°F

RF Transmission Frequency: 433 MHz Maximum no. of Remote units: 3 RF Transmission Range: Maximum 100 feet Temperature sensing cycle: approximately 45 seconds

Calendar and Clock

12 hour display in hh : mm format Date Format: Month – Day format

Day of week selectable in 3 languages (English, French, Spanish) Dual 4-minute crescendo alarm with snooze

Pre-alarm for ice alert

Main unit: 2 AA batteries and AC adapter Remote units: 2 AA batteries

Main unit: 0.67 lb. (without battery)

Remote sensing units: 0.13 lb. (without battery) Dimension Main unit: 6.25(L) x 4.5(H) x 1.25(D) inches

Remote sensig units: 2(L) x 4(H) x 1(D) inches

FCC STATEMENT This device complies with Part 15 of the FCC Rules. Operation is subject

operate the equipment.

to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to

NOTE: This equipment had been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment, installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct turning the interference by one or more of the following measures: 1. Reorient or relocate the receiving antenna 2. Increase the separation between the equipment and receiver.

which the receiver is connected.

3. Connect the equipment to an outlet on a circuit different from that to 4. Consult the dealer or an experienced radio / TV technician for help.

14

13