




1 ACCESSORIES LIST


- User Manual
- Quick Setup Guide
- Important information
- Remote Control
- Screw (M4 × 12) × 6
- Screw (ST4 × 14) × 2
- Screw (M5 × 12) × 4
- Batteries: AAA × 2
- For 39" 42": Spacer × 4
- Screw (M6 × 30) × 4

2 INSTALLING THE STAND


Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to the screen.

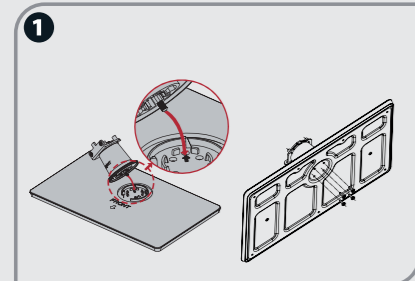


Insert the stand column into the base plate, aligning the ridge on the column with the groove in the base plate. Making sure the FRONT of stand column matched with the FRONT of base plate. Secure the stand column to the base plate with the 4 Screws (M4 × 12).

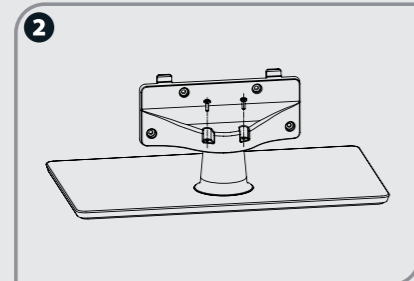

Secure the stand cover to the stand column vertically with the 2 screws (M4×12) provided.

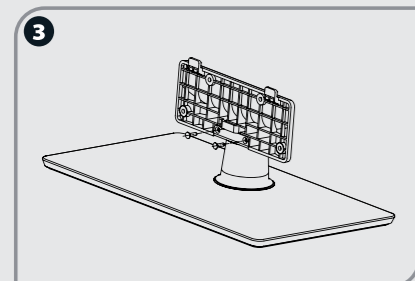

Secure the stand cover to the stand column horizontally with the 2 screws (ST4×14) provided.

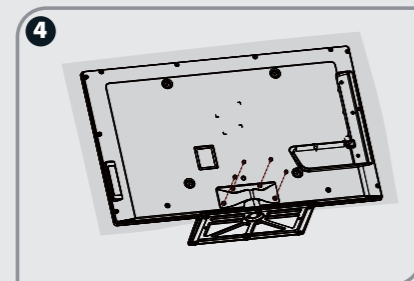

Secure the stand cover to the TV with the 4 screws (M5×12) provided.

NOTE

The Picture is Only for Reference.

CAUTION



Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to the screen. To reduce the potential for personal injury or damage to the TV, the TV and Stand must be attached to a table desk or so it is secured from tipping or falling.

Locate the TV and Stand in the desired position on the table or desk.

For a 32" TV, mark a rectangle 12"(304mm) x 4.7"(120mm).

Drill a 0.25"(6mm) diameter hole at each corner of the rectangle.

Using M5 bolts, attached the TV and Stand to the table or desk. Use a bolt length equal to the thickness of the table or desk plus 0.3"-0.4" (8-10mm). E.g. if table thickness = 0.6" (15mm); use an M5×25 bolt.

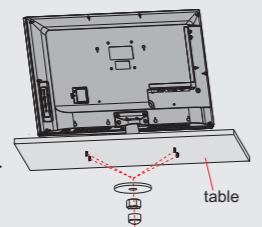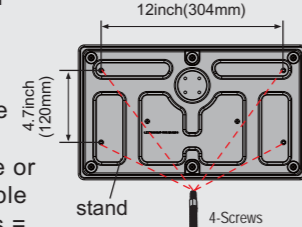

NOTES

Included with the TV Stand are four (4) double-end studs. One end is M5 and attaches to the TV Stand. The other end is M6 and is suitable for mounting the TV Stand on a table or desk up to 1" (25mm) thick. Also included are four (4) M6 washers and four (4) M6 nuts for attaching the TV Stand to the table or desk using the double-end studs.

INSTALLING A WALL-MOUNT BRACKET


If you want to attach the TV to a wall-mount bracket, you should first remove the stand if it is pre-attached. Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

Insert four spacers (provided) into the corresponding bracket screw holes on the back of your TV, then attach the wall-mount bracket to your TV using four screws (provided) or the screws/spacers provided with the wall-mount bracket.

See the instructions that came with the wall-mount bracket for screw/washer configurations and information on how to correctly hang your TV.

Note: Only for LHD39A300MH & 42A300MH, 32K366MH dose not need spacers.


To prevent internal damage to the TV and ensure the TV is mounted securely, be sure to use fixing screws (provided)

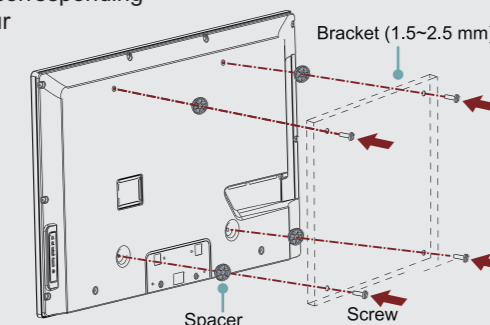

Wall-mount hole pattern VESA (mm)	100×100 (32") 200×200 (39" 42")
Wall-mount screw size (mm)	M4 (32") M6 (39" 42")

Follow instructions provided with the wall bracket. If you are not sure of your ability to complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or incorrect assembly. Be sure to use the provider spacers between the TV and the bracket when attaching the mount.


3 MAKING CONNECTIONS

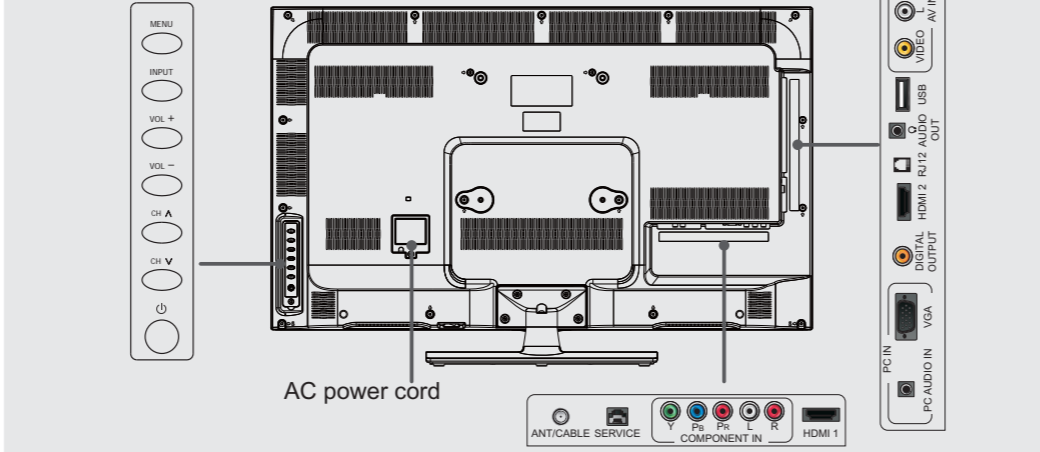

Item	Description
MENU	Display the on-screen menu to setup your TV's features.
INPUT	Select the different input signal sources.
VOL +/-	Adjust the volume.
CH ▲/▼	Select the channel.
(Power button)	Turn on the TV or put the TV in standby mode. Caution: The TV continues to receive power even in standby mode. Unplug the power cord to disconnect power.
ANT/CABLE	Connect an antenna or cable TV to this jack.
HDMI	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all digital audio/video interface between this TV and any HDMI-device, such as a set-top box, Blu-ray disc player, or A/V receiver.
COMPONENT IN	Connect to a DVD player, Digital Set-Top-Box, or other A/V devices with component (YPbPr) video and audio output jacks.
AV IN	Connect to the composite video and audio (L/R) output jacks on external video devices.
VGA/PC/DVI AUDIO IN	Connect to a PC or other devices with a VGA or DVI interface.
○/AUDIO OUT	Connect headphone or analog sound system using RCA Y-cable (1/8"-stereo mini to L/R phono-not provided).
DIGITAL OUTPUT	Connect an audio amplifier to this jack.
USB	Port for Digital Media Player and for software update.
RJ12	Connect a RJ-12 Cable to this jack, then to an external control device (such as a computer or A/V control system), to control the TV functions externally.

Check the jacks' for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.


HDMI / COMP / AV Connect an HDMI cable or Comp/AV Adapter from an external A/V equipment.

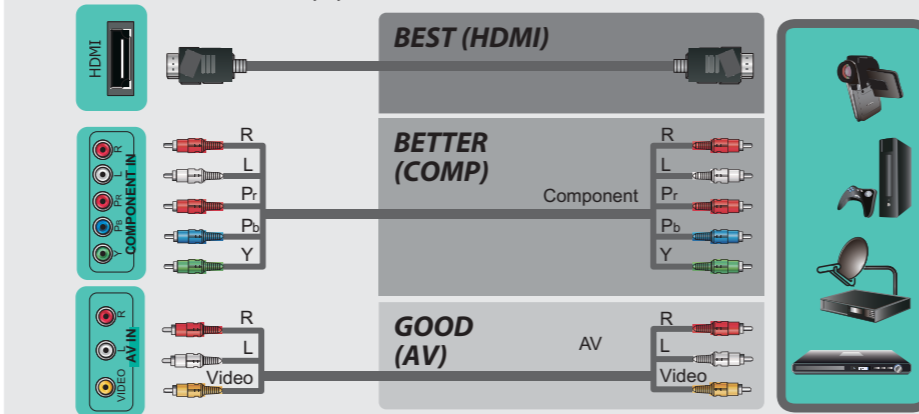


HEADPHONE Connect Headphone for audio out of the TV.




USB Connect a USB device for browsing photos and music.

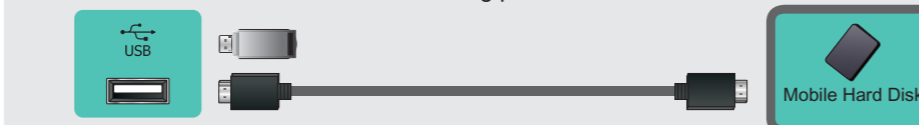


DIGITAL AUDIO OUT Connect a digital audio device to this jack.

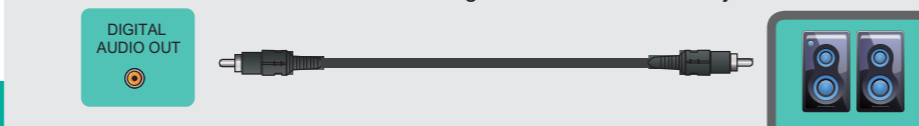

ANT Connect an outdoor VHF/UHF antenna.

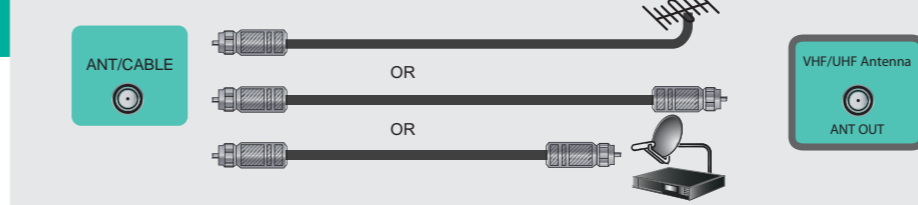


VGA & PC AUDIO IN Connect a VGA cable and an audio cable from the PC.

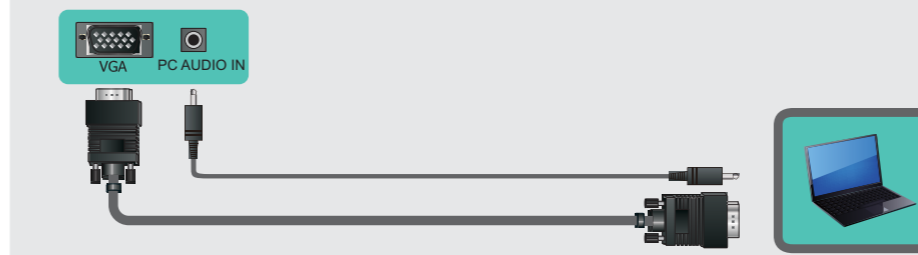

5 TV SETUP

TV Setup.

- Turn on the TV using the Power key on the remote control (top/left).
- Press the "MENU" key on the remote control.
- Press the "DOWN" arrow key three times to highlight the Installation icon.
- Press the "ENTER" key to select the Installation submenu.
- Use the "UP" or "DOWN" arrow keys to navigate in the Installation submenu:
 - Language
 - Channels
 - Time
 - Source Labels
 - Reset AV settings

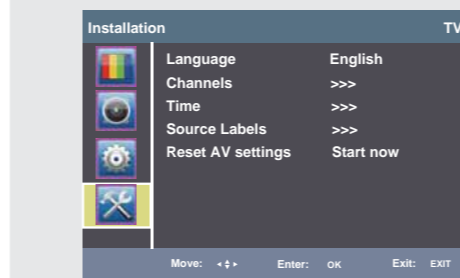

- Select "Channels" and press the "ENTER" key on the remote control.
- Select "Installation Mode/Tuner source" and press the "ENTER" key on the remote control.
 - Select appropriate connection: "Antenna" or "Cable" and press the "ENTER" key on the remote control.
 - Select "Auto Program/Auto Scan" and press the "ENTER" key on the remote control.
 - When the Auto Programming is complete, press the "EXIT" key on the remote control.
- To set up the tuner with a custom channel map, see Step-6.
- For Pro:Idiom™ Standard & High Definition Systems with custom channel remapping:
 - Turn TV on using the Power key on the remote control.
 - Press "MENU".
 - Select "SOUND" sub-menu and press "ENTER".
 - Select "BALANCE" and press "ENTER".
 - Use the Arrow keys on the remote control to adjust balance to zero then enter access code "5 4 8" using the numeric keys on the remote control to open the Hotel menu. Press the "ENTER" key on the remote control.
 - Select "SSID Setting" (scroll down below Clone option) and press the "ENTER" key on the remote control.
 - Select "Set SSID" and press the "ENTER" key on the remote control.
 - TV will display "Set SSID" menu. Use the remote control to navigate the virtual keyboard and enter the SSID.
 - Select "DONE" and press the "ENTER" key on the remote control.
 - To set up the tuner with a custom channel map, see Step-6.


Duplicating Setup for multiple TV installations.

- Turn on the TV using the Power key on the remote control (top/left).
- Press the "MENU" key on the remote control.
- To simplify multiple TV set installation, after configuring a TV all its settings may be cloned (copied) to additional TV units via USB; to begin:
 - Connect a fully configured TV to AC Power.
 - Plug a USB drive into USB port on the side of the TV.
 - Turn TV on using the Power key on the remote control.
 - TV will display "USB connection, are you sure you want to switch to USB?"
 - Press "MENU".
 - Select "SOUND" sub-menu and press "ENTER".
 - Select "BALANCE" and press "ENTER".
 - Use the Arrow keys on the remote control to adjust balance to zero then enter access code "5 4 8" using the numeric keys on the remote control to open the Hotel menu. Press the "ENTER" key on the remote control.
 - Select "CLONE" and press the "ENTER" key on the remote control.
 - TV will display "Cloning Function - Read Out". Select "YES" and press the "ENTER" key on the remote control.
 - TV will display "Please wait..." then "Upload Success" and automatically exit the Hotel menu.
 - The TV settings have been saved to the USB drive.
- Clone setting to additional TVs. Note: the target TV does not need input source(s) connected during the cloning process.

- Connect target TV to AC Power.
- Plug pre-loaded USB drive (prepared in Step-5a) into USB port on the side of the target TV.
- Turn target TV on using the Power key on the remote control.
- TV will display "USB connection, are you sure you want to switch to USB?"
- Press "MENU".
- Select "SOUND" sub-menu and press "ENTER".
- Select "BALANCE" and press "ENTER".
- Use the Arrow keys on the remote control to adjust balance to zero then enter access code "5 4 8" using the numeric keys on the remote control to open the Hotel menu. Press the "ENTER" key on the remote control.
- Select "CLONE" and press the "ENTER" key on the remote control.
- TV will display "Cloning Function - Write In". Select "YES" and press the "ENTER" key on the remote control.
- TV will display "download success, system rebooting" and automatically exit the Hotel menu.
- The TV settings have been transferred to the target TV.
- Turn target TV off using the Power key on the remote control.
- Remove the USB drive from the target TV.

Channel Setting and Custom Channel Map.

- Turn TV on using the Power key on the remote control.
- Press "MENU".
- Select "SOUND" sub-menu and press "ENTER".
- Select "BALANCE" and press "ENTER".
- Use the Arrow keys on the remote control to adjust balance to zero then enter access code "5 4 8" using the numeric keys on the remote control to open the Hotel menu. Press the "ENTER" key on the remote control.
- Select "Channel Setting" and press the "ENTER" key on the remote control.
- Select "Tuner Source" and press the "ENTER" key on the remote control.
 - Select appropriate connection: "Antenna" or "Cable" and press the "ENTER" key on the remote control.
 - Select "Auto Scan" and press the "ENTER" key on the remote control. Start now is displayed; press the "ENTER" key on the remote control.
 - When the Auto Scan is complete, select "FINISH" and press the "ENTER" key on the remote control.
- To customize the channel map, select "Program Guide Edit" and press the "ENTER" key on the remote control.
 - Use the "UP" or "DOWN" arrow keys and the "ENTER" key on the remote control to highlight the channel entry to modify.
 - On the remote control there are four color coded keys to modify the highlighted channel entry:
 - Rename the highlighted channel entry= RED.
 - Skip the highlighted channel entry= GREEN.
 - Copy the highlighted channel entry= YELLOW.
 - Delete the highlighted channel entry= BLUE.
 - In addition the "RIGHT" arrow key on the remote control modifies the highlighted channel entry's position in the channel map.

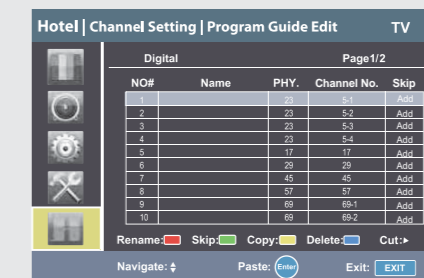

Hotel | Channel Setting | Program Guide Edit | TV

- Use the remote control to navigate the virtual keyboard and enter the desired channel name.
- Select "DONE" and press the "ENTER" key on the remote control.
- Skip (GREEN remote control key)
 - Press the "GREEN" key on the remote control to toggle the channel entry skip setting (on and off).
- Copy (YELLOW remote control key)
 - Press the "YELLOW" key on the remote control to copy the highlighted entry.
 - Use the "UP" or "DOWN" arrow keys on the remote control to move the cursor to the desired channel map position and press the "ENTER" key on the remote control to insert a copy of the highlighted entry into the channel map.
- Delete (BLUE remote control key)
 - Press the "BLUE" key on the remote control to remove the highlighted entry from the channel map.
- Insert ("RIGHT" arrow remote control key) may be used to adjust the location of channels in the channel map.
 - Notes:
 - When the "CH UP" and "CH DN" keys are pressed on the remote control, the channels are tuned in the order they are saved in the channel map.
 - The auto scan function searches for analog channels first the digital channels so the preset order will start with analog channels from position number 1 and follow with digital channels. A typical use of the Insert function would be to relocate the digital channels to start from position number 1 and follow with the analog channels or to locate a custom hotel greeting or information channel at the top of the channel map.
 - Press the "RIGHT" arrow remote control key to select the highlighted entry.
 - Use the "UP" or "DOWN" arrow keys on the remote control to move the cursor to the desired channel map position and press the "ENTER" key on the remote control. The channel will be moved to the selected position and inserted into the channel map.
 - For example, to move the channel in position 8 to position 1.
 - Highlight the channel in position 8 and press the "RIGHT" arrow key on the remote control.
 - Use the "UP" arrow key on the remote control to move the cursor to position 1 and press the "ENTER" key on the remote control.
 - The channel that was in position 8 will now be in position 1 and any channels affected by the insertion will automatically be shifted accordingly in the channel map.
- Press the "EXIT" key on the remote control when finished making changes to the channel map. The hotel menu will automatically close.