

RSAG2.025.****SS-1





Quick Start Guide

Model: RLDED4350-UHD-B-SM

Before using the TV, please read this guide thoroughly and retain it for future reference.
For more detailed instructions, please see the Instruction Manual.

Contents

- Packaged contents 2
- Attach the TV stand or wall mount bracket 3
- Buttons and Ports 5
- Using your TV remote control 11
- Power on the TV 13
- Product specifications 16
- Quick problem-solving tips 17
- Certification and Compliance 18


1. Packaged contents

Your package in which you purchased your new TV contains the following items:

- 2 AAA batteries
- *Quick Start Guide*
- 4 screws (ST4×16)
- Remote Control
- 2 legs that form the TV stand
- *Instruction Manual*
- Power Cord

IMPORTANT:

To prevent accidentally discarding items that came with your TV, be sure to **check ALL of the foam** in the carton box.

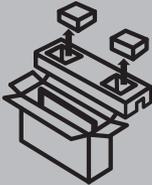

- Please check foam for accessories before discarding.
- Veuillez vérifier la mousse pour qu'il n'y ait pas d'accessoires avant de la jeter.
- Antes de desechar la espuma, asegúrese de retirar todos los accesorios.

Required tools and devices

- Wireless router (not included) for Internet connectivity
- Phillips screwdriver (not included) to secure the TV stand
- HDMI and other types of cables (not included) to connect external devices to the TV
- Wall mount bracket (not included) if you prefer to mount the TV to the wall

2. Attach the TV stand or wall mount bracket (not included)



Attach the TV Stand (For steps to attach the wall mount see page 4)

CAUTION:

- Be sure to disconnect the A/C power cord before installing a stand or Wall-Mount brackets.
- The LED display is very fragile and must be protected at all times when installing the legs that form the stand. Be sure to protect the TV screen from getting scratched or damaged by any hard objects. In addition, DO NOT exert pressure on the front of the TV at any time because it could crack.

To attach the left and right leg that forms the stand:

1. Carefully place your TV face down on a soft, flat surface to prevent damage to the TV or scratching to the screen.

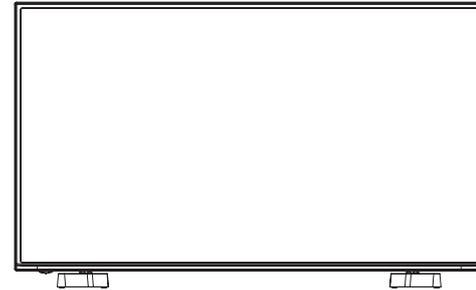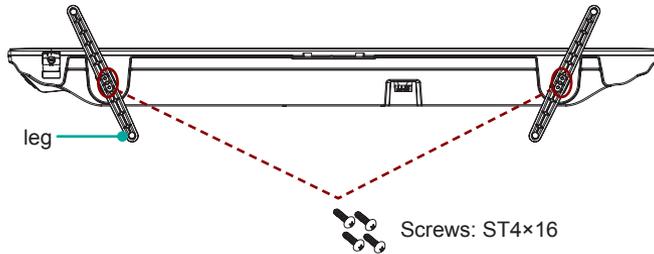


2. Place the legs into the bottom slots of the TV, insert and tighten the screws (found in the accessories bag) in the circled area with the screwdriver (not provided).
3. Then the TV is ready for use now.

Attach the Wall Mount Bracket (not included)

Before you begin the third-party manufacturer instructions, be sure to do the following things:


1. Place the TV face down on a clean, safe and cushioned surface.
2. Remove the TV stand if you already attached it.
3. Place the spacers (not included) in the corresponding bracket holes.

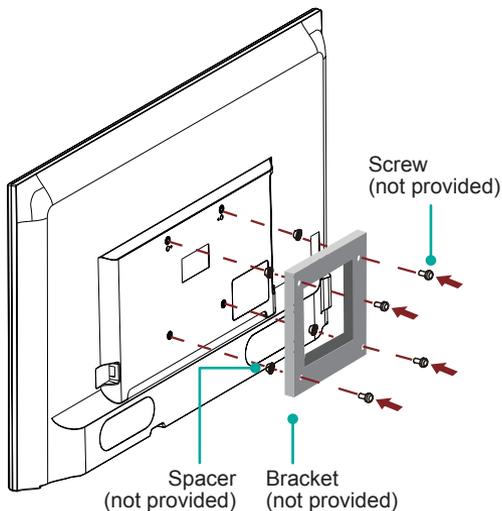

CAUTION:

- When you attach the mount, be sure to use the spacers (provided by the third-party manufacturer) between the TV and the bracket.

- To prevent internal damage to the TV and ensure it is mounted securely, be sure to use fixing screws (not provided) that are 9.5 - 11.5 mm in length when measured from the attaching surface of the mounting hook.

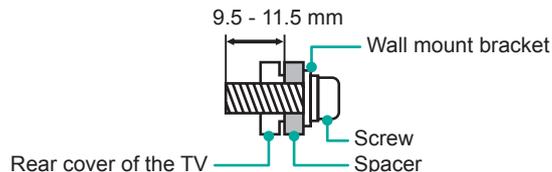


Wall mount hole pattern VESA (mm)	200 × 200
Wall mount screw size (mm)	M6

Follow instructions provided with the Wall mount bracket.

- To complete the installation, please contact the wall-mount manufacturer or the retailer from which you purchased the TV.
- The selected screws are 9.5 - 11.5 mm in length when measured from the attaching surface of the rear cover. The diameter and length of the screws differ depending on the Wallmount bracket model.

NOTE: The diameter and length of the screws differ depending on the wall mount bracket model.

3. Buttons and Ports

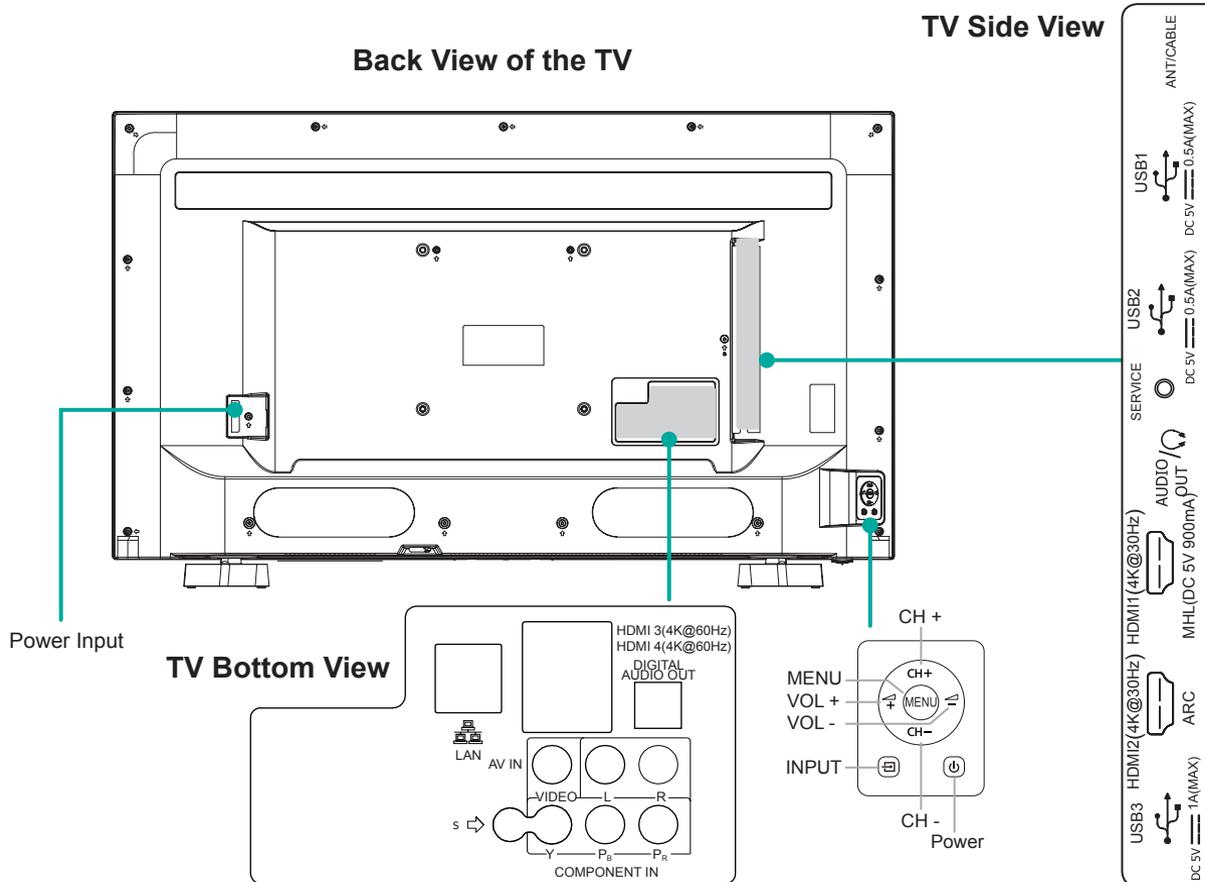



Connect devices to your TV






You have several options for connecting your TV to different devices. The method in which you connect will be based upon the type of cables you have and the available outputs on your device.


Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

The TV may not be compatible with all external devices. To check compatibility, please refer to the user manual of external device.

  Do not connect external equipment while TV's power cord is plugged in. It may cause electric shock.

TV label	Port	Cable	External Equipment	Brief Description
ANT/CABLE			 Antenna  RF Out	<p>Connect an antenna, cable set-top box or satellite receiver.</p> <p>Using your remote, press the [INPUT] button and select TV as the input source.</p>
HDMI			 VCR  DVD Player/Recorder  Video Camera  Set-top Box  Satellite Receiver  Satellite antenna cable	<p>This 4K TV has two different software versions of HDMI ports to connect HDMI-enabled devices. The two high-powered HDMI version 2.0(HDMI 3, HDMI 4) inputs enable you to connect 4K Ultra-HD external devices that require more bandwidth to transmit to the TV screen. For example, if you have an X-box or Blu-ray player that supports the 2.0 standard. The two HDMI version 1.4 inputs are great for any of your external devices that support a standard full high-definition resolution of 1080p.</p> <p>Connect an HDMI cable (not provided) from an AV device.</p> <p>Using your remote, press the [INPUT] button and select the corresponding HDMI input.</p> <p>Recommend to use HDMI Cable with 2 cores as shown in the figure.</p>

     TV label	Port	Cable	External Equipment	Brief Description
COMPO- NENT IN	Y	 Green	 VCR  DVD Player/Recorder  Video Camera  Set-top Box  Satellite Receiver  Satellite antenna cable	<p>Connect a component video cable (not provided) and left-right audio cables (not provided) from an external AV device.</p> <p>Using your remote, press the [INPUT] button and select Component as the input source.</p> <p>One AV device can be connected to the TV using a component video or composite video cable.</p>
	P _B	 Blue		
	P _R	 Red		
	L	 White		
	R	 Red		
AV IN	VIDEO	 Yellow		<p>Connect a composite video cable (not provided) and left-right audio cables (not provided) from an external AV device.</p> <p>Using your remote, press the [INPUT] button and select AV as the input source.</p>
	L	 White		
	R	 Red		
DIGITAL AUDIO OUT			 Audio Amplifier  Speaker	<p>Connect an optical cable (not provided) from an external digital audio system.</p> <p>When a digital audio system is connected to the [DIGITAL AUDIO OUT] jack, decrease the TV and system volume.</p>
AUDIO OUT 				<p>Connect headphones (not provided) to hear audio from the TV.</p>
			 Speaker  Audio Amplifier	<p>Connect an audio adapter (not provided) from an external analog audio system.</p>

 TV label	Port	Cable	External Equipment	Brief Description
HDMI2 /ARC			 Digital Sound Bar	<p>Connect an HDMI cable (not provided) from a digital sound bar to use Audio Return Channel (ARC) feature.</p> <p>By using this feature, you will also be able to control the soundbar with your TV remote instead of having to use multiple remotes for each device.</p> <p>This feature of the specific operation steps to see "Connecting a digital sound bar to use Audio Return Channel".</p>
HDMI1 /MHL			 MHL-enabled device	<p>Connect an HDMI-to-MHL cable (not provided) from an MHL-enabled device, such as a cell phone, and view the screen of your device on the TV.</p> <p>Recommend to use MHL Cable with 2 core as shown in the figure.</p>
 USB				<p>Connect a USB 3.0 device to transfer photos, music and movies to your TV at a rate that's 10 times faster than the USB 2.0 port</p> <p>NOTE: You can still plug a USB 2.0 device into a USB 3.0 port; however, the rate of speed will not be as fast. USB 3.0 devices are also backwards compatible with USB 2.0 ports.</p>
LAN			 LAN	<p>Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.</p> <p>For more information, see "Connecting Your TV to a Wired or Wireless Network".</p>
SERVICE		This port is not available for you to connect an external device. It can only be used by our factory for testing purposes.		

Connecting a digital sound bar to use Audio Return Channel (ARC)

To connect a digital sound bar with an HDMI cable:

1. Connect the cable that's attached to the soundbar to the **[HDMI / ARC]** port on the TV.
2. Turn on the soundbar by pressing the Power button.
3. Press the **Quick Setup menu** button on your remote and press the right arrow on the **[D-pad]** of your remote to show the full menu settings and go to **System > HDMI Function**.
4. Turn on the **CEC&MHL Control** setting.
5. Press the **Quick Setup menu** button on your remote and press the right arrow on the **[D-pad]** of your remote to show the full menu settings.
6. Select **Sound > Advance Audio Settings**
7. Go to the section of the screen that reads **TV Speaker & ARC** and select **ARC First**.

NOTES:

- **Only digital sound bars that require a wired connection are compatible with the Smart TV.**
- **If the device has an Input Selector feature then make sure to change it to TV.**


Connecting Your TV to a Wired or Wireless Network

Connecting to a Wired (Ethernet) Network

Connect your TV to your network by connecting the LAN port on the back of your TV to an external modem or router using a LAN (Ethernet/Cat 5) cable. See the illustration below.

We recommend to use a modem or router that supports Dynamic


Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS, so you don't have to enter them manually. Most home networks already have DHCP.

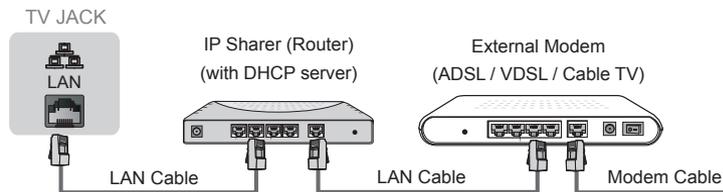

Connecting to a Wireless Network

Connect your TV to your network wirelessly, you need a wireless router or modem. See the illustration below.

The TV's built-in Wireless LAN Adapter supports the IEEE 802.11 ac/b/g/n communication protocols. We recommend using IEEE 802.11ac router. Low transfer rates for b/g/n may have the influence on the quality of streamed videos and other media.

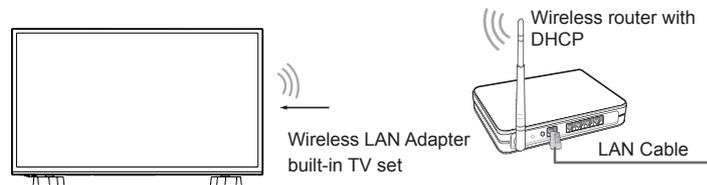


NOTES

- You must use the built-in Wireless LAN Adapter to use a wireless network because the set doesn't support external USB network adapter.
- If the wireless router supports DHCP, your TV can connect more easily to the wireless network.
- If you apply a security system other than the systems listed below, it will not work with the TV.
Security system : WPA, WEP, WPA2.
- In order to guarantee smooth network, the distance between router and TV is less than 10 meters.


4. Using your TV remote control

Buttons on your TV remote

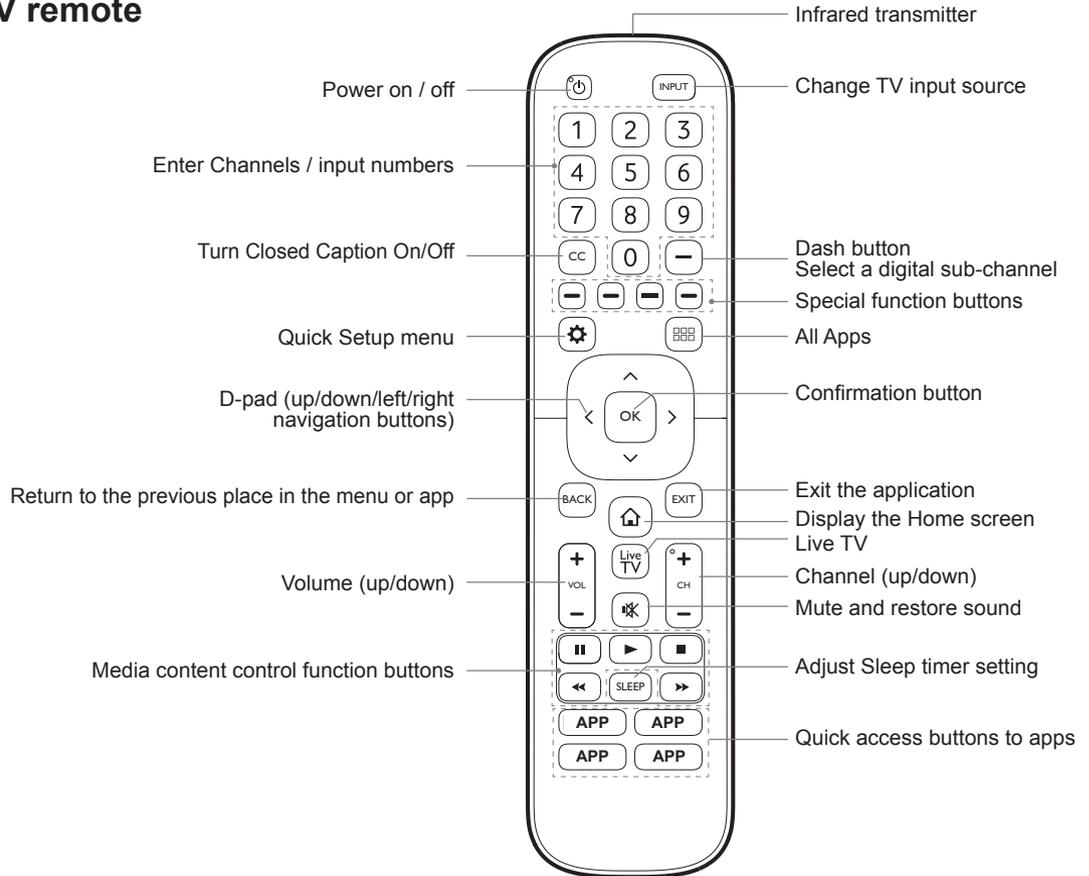


Begin using your remote

 
1. Slide the back cover to open the battery compartment of the remote control.



Gently push and slide

 

Insert the batteries

 

Gently push and slide

2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Replace the battery compartment cover.

Important Information about the remote and batteries:


- Discard batteries in a designated disposal area. Do not throw them into a fire.
- Remove old batteries immediately to prevent them from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, then remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin then wash it immediately.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd, NiMH, etc.) batteries.
- Do not continue using the remote if it gets warm or hot.

Remote Control Range Information

- The remote control can work at a distance of up to 26 feet in front of the TV set.
- It can work at a 30 degree horizontal or vertical angle.

5. Power on the TV

Plug the power cord into a power outlet.

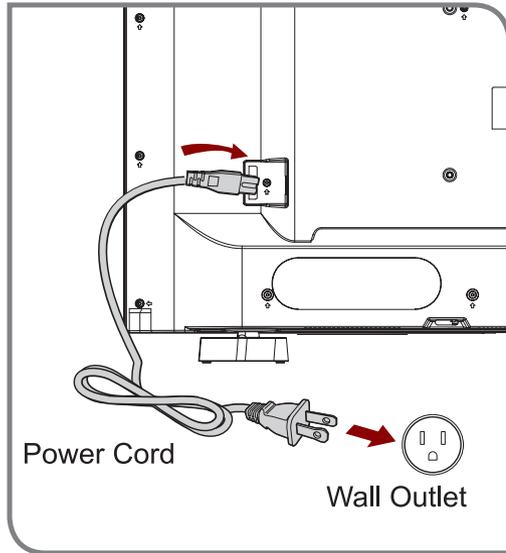

Press the **Power button** (⏻) on the remote to turn on the TV. A splash screen that shows the RCA logo appears. Next, the First-Time Setup Menu begins by prompting you to choose your **Language, Country, and Time Zone.**



Complete the first-time setup menu

After the splash screen that shows the RCA logo appears, begin the first-time setup menu.



Screen	Task
LANGUAGE AND LOCATION	<ul style="list-style-type: none"> Using the D-pad arrows of your remote, choose your Language, Country and Time Zone. Next, navigate to the Forward arrow and press OK.
TERMS OF SERVICE	<ul style="list-style-type: none"> Press OK to select Accept All. When you're done navigate to the Forward arrow and press OK.
TV USAGE MODE	<ul style="list-style-type: none"> Select Home (which appears by default). Next, navigate to the Forward arrow and press OK. Note: 'Store mode' should only be selected by Retailers who plan to demonstrate the TV.
NETWORK CONNECTION	<ul style="list-style-type: none"> If your TV does not automatically detect an Ethernet connection, then select Wi-Fi. When you're done, select your network from the list that displays and move to the next screen.

Screen	Task
REMOTE BUTTON SETUP	<p>Select how you receive your TV channels. Choose from one of the following sources below and then move to the next screen.</p> <ul style="list-style-type: none"> TV AV COMPONENT HDMI <p>TIP: You only need to scan for channels if your TV is connected to an Antenna.</p>

CONGRATULATIONS! Your TV is now ready to use.

Press the **OK** confirmation button on your remote if you are fine with the selections that appear on the screen. Otherwise, navigate to the back arrow on the screen to change your selection.

Begin to enjoy your TV

Your Smart TV is easy to use and brag-worthy!

Now that you've completed the first-time setup menu, the **Home** screen is your starting point for navigating the TV. Gone are the days where your TV only provides one way for you to be entertained. This showpiece provides you the convenience of watching a program on a live channel, accessing Video on Demand to watch a movie and many other entertainment options.

Using your remote, press the **Home** button to begin enjoying your TV.

Disclaimer: Subscriptions or other payments may be required to access content through some applications. Some or all of the included or downloaded application services in this manufacturer device may not function depending on the Internet connection, local limitations of included applications or other reasons outside of manufacturer's control. MANUFACTURER EXPRESSLY DISCLAIMS RESPONSIBILITY FOR ANY APPLICATION SERVICE FROM FUNCTIONING AT ANY TIME, FOR CONTENT IN ANY APPLICATION SERVICE, FOR DISRUPTIONS OF SERVICE, LOCAL OR REGIONAL LIMITATIONS, WARRANTIES OF TITLE, NO INFRINGEMENT, AND FOR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. By purchasing this device, you accept such Disclaimer without any claim on Manufacturer at any time.

6. Product specifications

Model Name		43"
Dimension (W × H × D)	Without Stand	38.2 × 22.2 × 3.4 inches (969 × 563 × 87 mm)
	With Stand	38.2 × 23.6 × 8.1 inches (969 × 599 × 206 mm)
Weight	Without Stand	22.1 lbs (10 kg)
	With Stand	22.5 lbs (10.2 kg)
Active Screen Size (Diagonal)		42.6 inches
Screen Resolution		3840 × 2160
Audio Power		7 W + 7 W
Power consumption		110 W
Power Supply		120 V ~ 60 Hz
Picture Quality		Screen resolution: 3840 x 2160, HDR processing, UHD Upscaler
Refresh rate	Component Input	480i / 60Hz, 480p / 60Hz, 576i / 50Hz, 576p / 50Hz, 720p / 50Hz, 720p / 60Hz, 1080i / 50Hz, 1080i / 60Hz, 1080p / 50Hz, 1080p / 60Hz
	HDMI Input	60 Hz (640×480, 800×600, 1024×768), 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P), 50 Hz (576 I, 576 P, 720 P, 1080 I, 1080 P), 24Hz 30Hz (3840x2160 for HDMI 1/HDMI 2), 24Hz 30Hz 50Hz 60Hz (3840x2160 for HDMI 3/HDMI 4)
Receiving systems	Analog	NTSC
	Digital	ATSC / QAM
Key Apps		Netflix, Vudu, YouTube, Amazon Instant Video, Pandora and Opera App (Some apps only for USA)
Ports		4 HDMI ports, 3 USB ports, LAN port for Ethernet, 1 Digital Audio Output, 1 RF Input, 1 Earphone Audio Output, 1 RCA Composite Video Input , 1 left/right Audio Input for Composite, 1 RCA Component Video Input
Other features		Smart TV, Dynamic contrast Picture, VESA standard wall mount support

Disclaimer: All product, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

7. Quick problem-solving tips

When you experience an issue with your TV, turn it off and on again. If this does not resolve the problem, then refer to the tips below. If the problem is still not resolved, then contact Manufacturer Customer Care.

ISSUES	POSSIBLE SOLUTIONS
No sound or picture	<ul style="list-style-type: none">• Check if the power cord is plugged into a powered AC outlet.• Press the Power button on the remote control to activate the unit from 'Standby' mode.• Check to see if the LED light is on or not. If it is, then the TV is receiving power.
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none">• Check for the correct output connection on the external source and for the correct input connection on the TV.• Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my TV, there is a delay for a few seconds before the picture appears. Is this normal?	<ul style="list-style-type: none">• Yes, this is normal. The TV is initializing and searching for previous setting information.
The picture is normal but there is no sound	<ul style="list-style-type: none">• Check the volume settings.• Check if 'Mute' mode is set to On.
Sound but no picture or black and white picture	<ul style="list-style-type: none">• If the picture is black and white, unplug the TV from the AC outlet and replug it after 60 seconds.• Check that the Color is set to 50 or higher.• Try different TV channels.
The sound and/or picture is distorted or appears wavy	<ul style="list-style-type: none">• An electric appliance may be affecting the TV. Turn off any appliances that are nearby and move it farther away from the TV.• Insert the power plug of the TV set into another power outlet.
The sound and picture is blurry or cuts out	<ul style="list-style-type: none">• If using an external antenna, check the direction, position and connection of the antenna.• Adjust the direction of your antenna or reset or fine tune the channel.
A horizontal or vertical stripe appears on the picture and/or the picture is shaking	<ul style="list-style-type: none">• Check if there is an appliance or electric tool nearby that is causing interference.
The plastic cabinet makes a "clicking" type of sound	<ul style="list-style-type: none">• The 'click' sound can occur when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.
The remote control does not work	<ul style="list-style-type: none">• Confirm that TV still has power and is operational.• Change the batteries in the remote control.• Check if the batteries are correctly installed.

8. Certification and compliance

FCC Notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

The Wi-Fi Module complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

