

Basic Features

Using the Lock Menu

When you first use this function, the default password is [0000]. Once you input this password, you can set options.



You can adjust:

Channel Block – Block selected Channels on the TV.

Program Block – Block selected Programs on the TV.

Rating Enable: Block or unblock TV ratings.

U.S. TV Ratings: Restrict TV programs by USA Ratings.

U.S. Movie Ratings: Restrict movie by USA Ratings.

Canadian English/French Ratings: Restrict movie and TV programs by Canadian Ratings.

Open V-Chip: Display an advanced V-Chip ratings table for digital channels (USA only).

Block Unrated TV: Block unrated TV programs.

Input Block – Block selected Input source on the TV.

Change Password – If you want change the default password, first enter the new password then enter the same password again.

Clean All – You can reset all locks to factory mode.

Following is the description of these ratings.

U.S. Movie Ratings

Rating	Defined as
G	General audience
PG	Parental Guidance suggested
PG-13	Parents strongly cautioned
R	Restricted
NC-17	No one 17 and under admitted
X	Adult audience only

U.S. TV Ratings

Age	Defined as
TV-Y	All children
TV-Y7	Directed to older children
TV-G	General audience
TV-PG	Parental Guidance suggested
TV-14	Parents Strongly cautioned
TV-MA	Mature Audience only

Contents	Defined as
A	All of the ratings below that rating set blocked automatically
D	Suggestive dialogue
L	Strong language
S	Sexual situations
V	Violence
FV	Fantasy Violence

Canadian English Ratings

Rating	Description
C	Children
C8+	Children 8 years and older
G	General Programming, suitable for all audiences
PG	Parents Guidance
14+	Viewers 14 years and older
18+	Adult Programming

Canadian French Ratings

Rating	Description
G	General
8 ans+	8+General; Not recommended for young children
13 ans+	Programming may not be suitable for children under the age of 13
16 ans+	Programming is not be suitable for children under the age of 16
18 ans+	Programming restricted to adults

Advanced Features

 
Network Connection

You can set up your TV so that it can access the Internet through your local area network (LAN) with a Ethernet or wireless connection.


■ Connecting to a Wired Network

You can attach your TV to your LAN by using matchable cable in three ways:


- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a Cat 5 cable. See the diagram below.

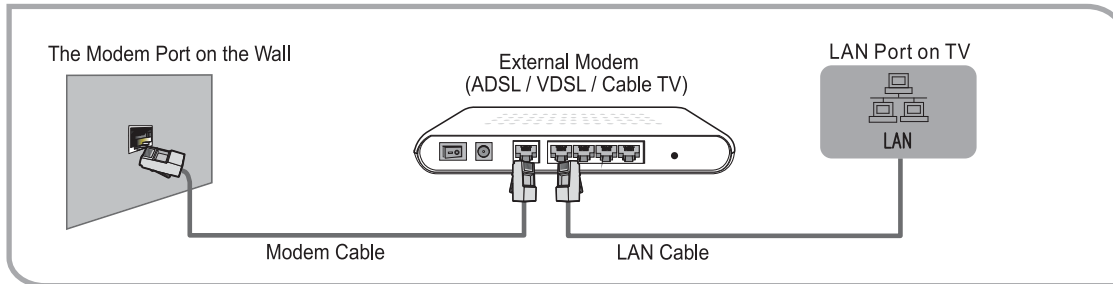

 - You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an IP Sharer which is connected to an external modem. Use LAN cable for the connection. See the diagram below.

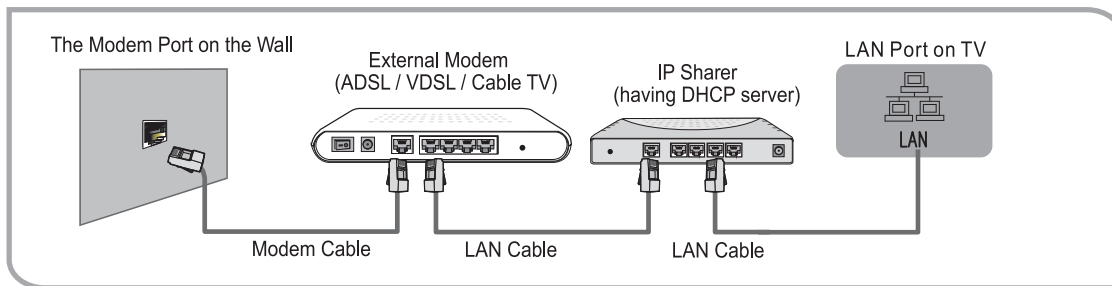

 - Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet with a Cat 5 cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

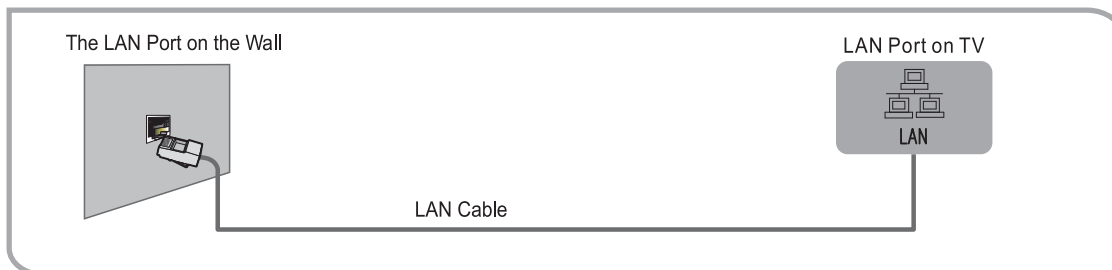

If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS, so you don't have to enter them manually. Most home networks are Dynamic Networks.

Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP).

If you have a Windows computer, you can also get these values through your computer.

☑ NOTE

You can use ADSL modems that support DHCP if your network requires a Static IP address. ADSL modems that support DHCP also let you use Static IP addresses.

Advanced Features

■ Network Setup (Auto)

 
Use the Automatic Network Setup while your connecting the TV to a network that supports DHCP. To set up your TV's cable network connection automatically, follow these steps:

How to set up automatically

1. Connect your TV to your LAN as described in the previous section.
2. Turn on your TV, operate according to the description in the **Settings** menu until the **Network** screen appears.



3. On the **Network** screen, select **Configuration** and press [ENTER] button to enter the submenu.
4. Set **Internet Connection** to **On** and **Interface** to **Ethernet**.

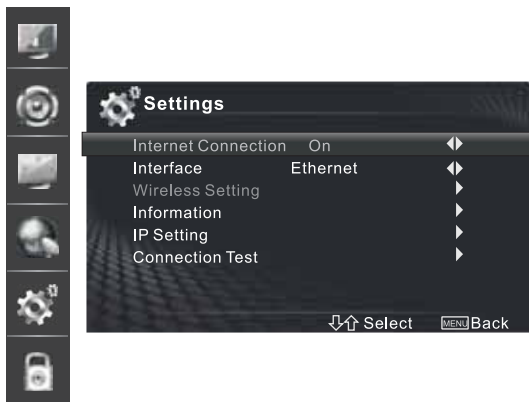

5. Select **IP Setting** and press [ENTER] button to enter it.
6. Set Address Type to Auto.
7. Auto acquires and enters the needed internet values automatically.
8. If the Network function has not acquired the network connection values, go to the manual for directions.

■ Network Setup (Manual)

Use the Automatic Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values

 
To get the network connection values on most windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support tab, click the Details button. The network connection values are displayed.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:

1. Follow Steps 1 through 5 in the "How to set up automatically" procedure.
2. Set **Address Type** to **Manual**.
3. Press [▲/▼] button to select **IP Address** and press [◀/▶] button to move the cursor to the entry field. Then press 0~9 buttons to enter the numbers.
4. Press [Menu] button to exit **IP Address** and press [▲/▼] button to select the next options to enter the numbers.

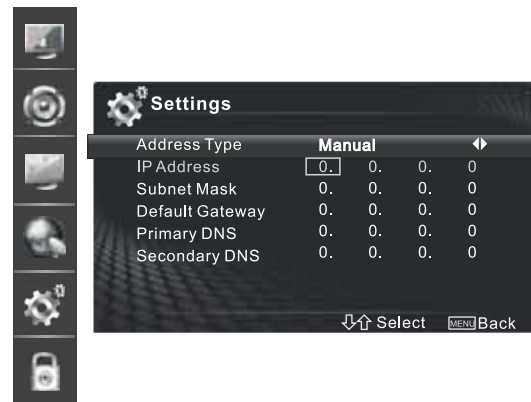


5. When done, press [Menu] button to return to the previous menu.
6. Select **Connection Test** to check the internet connectivity.

Advanced Features

Connecting to a Wireless Network

 To connect your TV to your network wirelessly, you need a wireless router or modem. See the illustration below.

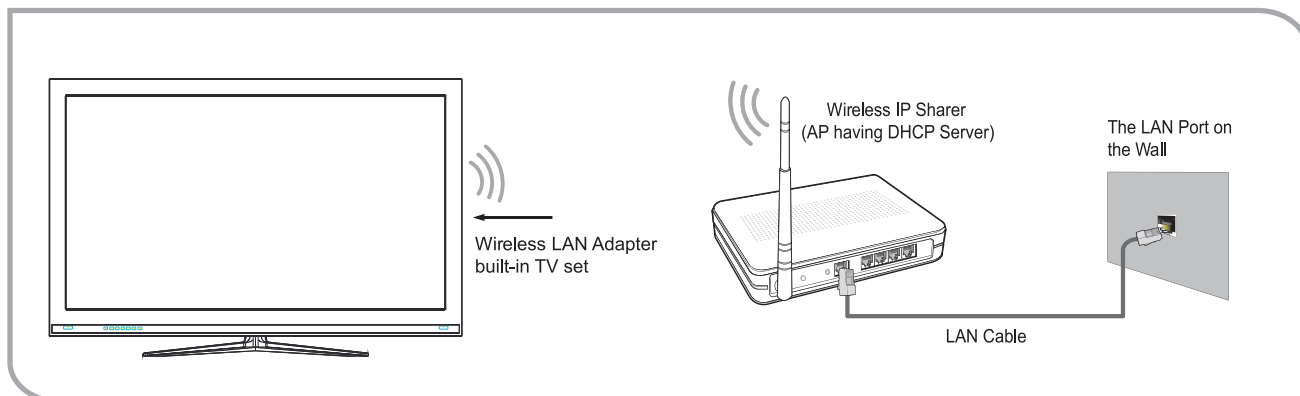

Hisense's built-in Wireless LAN Adapter supports the IEEE 802.11 b/g/n communication protocols. Hisense recommends using IEEE 802.11n router. When you play the video over a IEEE 802.11b/g connection, the video may not play smoothly.

NOTE

 
- You must use the Hisense's built-in Wireless LAN Adapter to use a wireless network, the set doesn't support external USB network adapter.
- To use a wireless network, your TV must be connected to a wireless IP sharer. If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.
- If you apply a security system other than the systems listed below, it will not work with the TV.
- If Pure High-throughput (Greenfield) 802.11N mode is selected and the Encryption type is set to WEP, TKIP or TKIP-AES (WPS2Mixed) for your AP, Hisense TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your AP supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.
- If your router, modem, or device isn't certified, it may not connect to the TV .
- Connection Methods: You can setup the wireless network connection three ways.
 - Scan
 - Manual
 - Auto

Advanced Features


■ Wireless Setting

How to set up

1. Turn on your TV, operate according to the description in the **Settings** menu until the **Network** screen appears.
2. On the **Network** screen, select **Configuration** and press [ENTER] button to enter the submenu.

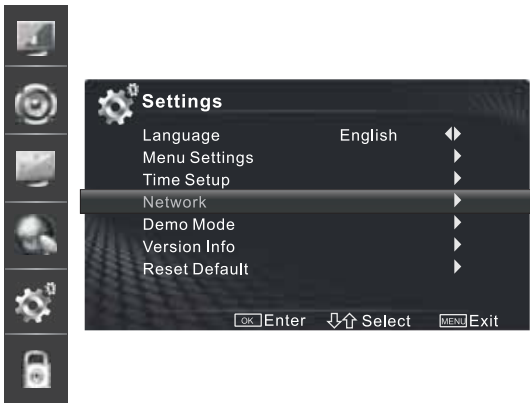


 3. Set **Internet Connection** to **On** and **Interface** to **Wireless**.

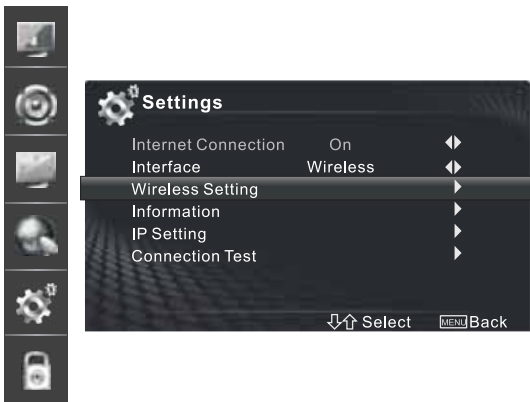


5. Select **Wireless Setting** and press [ENTER] button to enter it.

 
You can select: Scan\Manual\Auto.

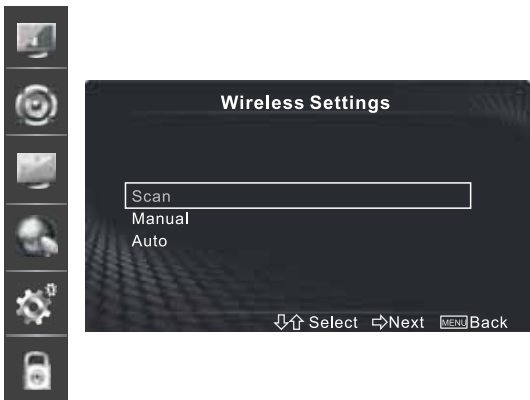

 5. If you have a wireless network around, the screen will appear when all the existing wireless network. When connecting to certain network, Press [▲/▼] button to select the wireless network you want to connect and press [▶/OK] button to confirm.

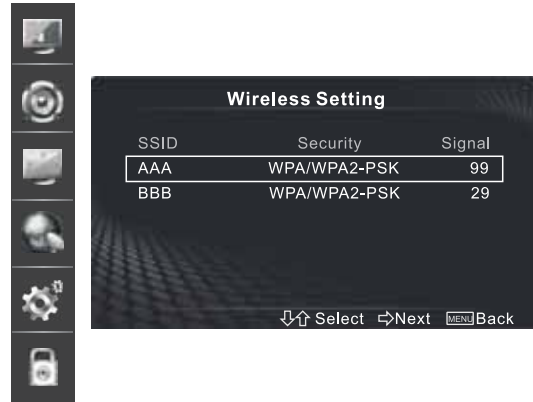

 6. the soft keyboard of Enter Password will pop up. After entering the password, press **OK** to connect. If there is no password, you can press **Next** button to connect directly.

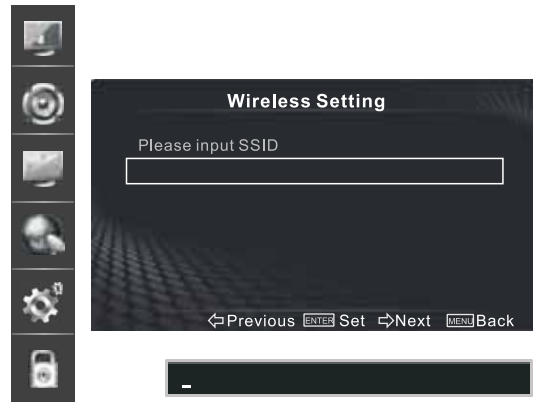

Advanced Features

DLNA Settings

 
Computer, TV and other digital devices can be connected via DLNA and they can share files with each other. You can use the TV set as a DLNA DMP device to enjoy movies, pictures, music and other multimedia materials in your computer through DLNA connection.

DLNA Setting needs to be set on TV and computer Respectively.


The Network setup on the TV 's screen:

Network setup:

1. Turn on your TV, operate according to the description in the **Settings** menu until the **Network** screen appears.
2. On the **Network** screen, select **Configuration** and press [ENTER] button to enter the submenu.
3. Set **Internet Connection** to **On** and Interface to Ethernet.
4. Select **IP Setting** and press [ENTER] button to enter it.
5. Set **Address Type** to **Auto**.
6. Auto acquires and enters the needed internet values automatically.

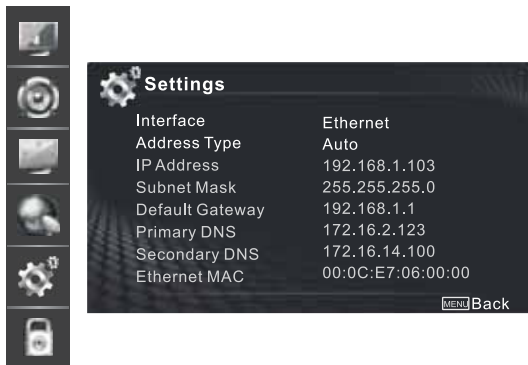

 7. If the Network function has not acquired the network connection values, go to the manual for directions.
8. If set **Address Type** to **Manual**, enter **IP Setting**. Then press [▲/▼] button to select IP Address and press [◀/▶] button to move the cursor to the entry field. Then press 0~9 buttons to enter the numbers.

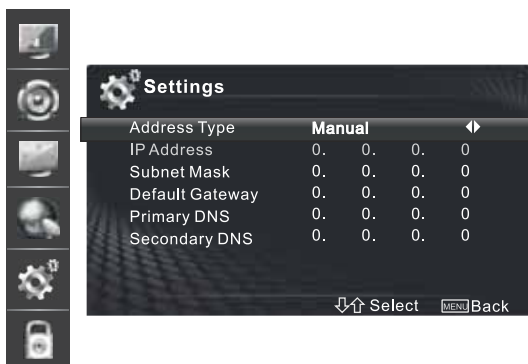

9. Press [Menu] button to exit **IP Address** and press [▲/▼] button to select the next options to enter the numbers.
10. When done, press Menu to return to the previous menu.
11. Select **Connection Test** to check the internet connectivity.
If the test is not successful, please check Whether the configuration is correct. If the test is successful, operate as the following instructions.

Set DLNA to On:

1. On the Network screen, select **Applications** and press [ENTER] button to enter the submenu.
2. Press [◀/▶] button to set **DLNA** to **On**.



Media Share Settings in computer

 
If your computer can not support DLNA, you need install the software that supports DLNA such as TVerseity and Windows Media Player11. It is recommended to select Windows Media Player11 to set and its setup is more simple.

1. Start the Windows Media Player11.
2. Click "Library" and then "Add to Library...".




Advanced Features

3. The “Add To Library” will pop up on the screen. Click “Add”.

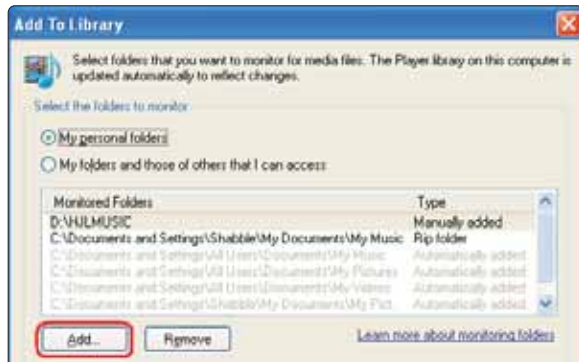

 2. Click the box right before “Share my media” to select it.

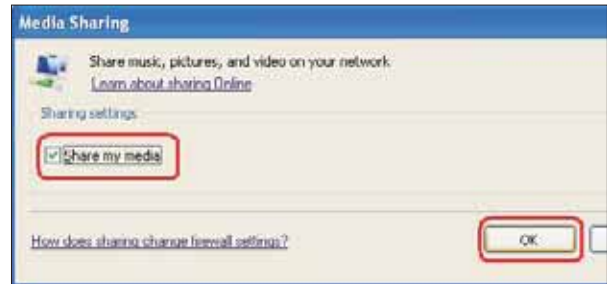

3. An equipment icon will appear on the white area if the DLNA Settings has been correctly set. Select the sign and then click “Allow”.



4. Select a folder and click OK button.



5. Click “Close” to close the dialog.



4. Then the TV would directly access the shared files in the computer.



Setting to share files

1. Click “Library” and move the cursor to select “Media Sharing...”



Advanced Features

 
Network Function

NOTICE FOR USE

If you use VUDU services, see the following note before using it.

1. Use of internet services requires a working broadband internet connection (1 to 2 Mbps for SD video, 2.25 to 4.5 Mbps for HD video and 4.5 to 9 Mbps for HDX video).
2. VUDU and other internet-based services are not provided by Hisense, may change or be discontinued at any time and may be subject to restrictions imposed by your internet service provider. The quality, functionality, or availability of such services may be affected by the capacity of your Internet connection. Use of VUDU video-on-demand and other internet services may require the creation of a separate account through a computer with internet access.
3. Not all VUDU services would be used on this model.
4. VUDU video-on-demand and other internet services may require payment of one-time and/or recurring charges.
5. You are solely responsible for any charges incurred as a result of using internet-based content, including, without limitation, communications charges for the provision of internet or network services and any charges incurred for third-party internet content services, such as video on demand or subscription services. All third-party services are provided in accordance with whatever terms and conditions are established between such third-party providers and you.
6. HISENSE MAKES NO REPRESENTATIONS OR WARRANTIES ABOUT THE CONTENT, AVAILABILITY OR FUNCTIONALITY OF THE VUDU SERVICE OR OTHER INTERNET DELIVERED THIRD-PARTY SERVICES AND DOES NOT WARRANT THAT ANY OF THEM WILL BE UNINTERRUPTED, ERROR FREE OR SATISFACTORY. ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF ANY THIRD PARTY CONTENT OR SERVICE, IS EXPRESSLY EXCLUDED AND DISCLAIMED. UNDER NO CIRCUMSTANCES WILL HISENSE BE LIABLE IN CONTRACT, TORT OR UNDER ANY OTHER THEORY FOR ANY DAMAGES ARISING OUT OF OR IN CONNECTION WITH YOUR USE OF ANY CONTENT OR SERVICE PROVIDED BY ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.


Operational buttons

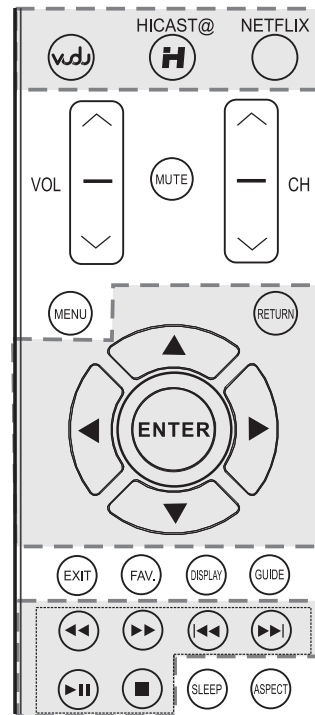

Buttons	Description
	Press to enter VUDU HD Movies directly.
HICAST@ 	Links to various internet services.
NETFLIX 	Press to launch Netflix instant streaming directly.
	Selects the on-screen menu items
ENTER	Confirms selections
EXIT	Closes the menu.
RETURN	Returns to the previous menu.
	Stops playback and displays the movie title screen.
	Sets pauses and still pictures. Press the button to return to playback.
	Displays the TrickPlay screen and fast forwards playback.
	Displays the TrickPlay screen and fast reverses playback.
	Plays the next video.
	Plays the previous video.

Advanced Features

 Press the [HICAST@] button to display network main menu.

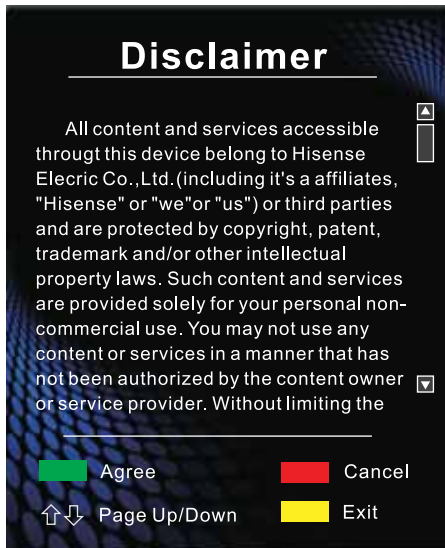

Please read the content of the Disclaimer first. If agree, press [Green] button and then access the network main menu. If disagree, press [Red] button or [Yellow] button to cancel or exit Disclaimer menu, then network cannot be used.

Advanced Features

VUDU HD Movies

Brief introduction

 
VUDU is an on-demand service that offers high-definition movies on Web.

For enjoying more movies, please register and log in to your account.

Operation instructions


You can access the VUDU HD Movies by the following methods:

1. Press the [HICAST@] button to display network main menu.

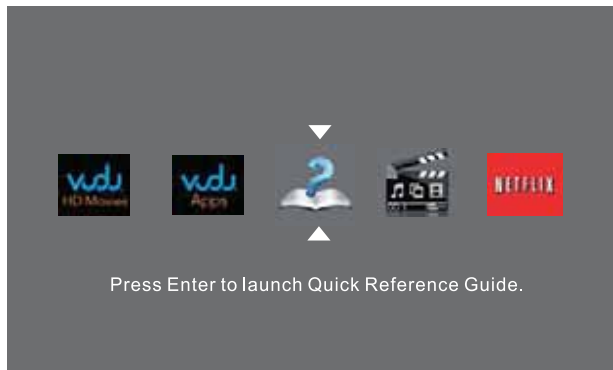

2. Press [◀/▶] button to select the **VUDU HD Movies** icon and press [ENTER] to enter it, or press [VUDU] button to enter directly.
3. Select the **Sign Up** icon on the VUDU HD Movies interface, and press [ENTER] to enter.
4. Enter your email address to start your VUDU experience. (Refer to “How to Input the Email Address”)
5. Press [▲/▼/◀/▶] button to move the cursor to select service items in the **VUDU HD Movies** home page, and press [ENTER] button to confirm.
6. In the process of watching a movie, press [ENTER] button to display/exit the tool bar, press [◀/▶] button to select the function icon, and press [ENTER] button to confirm.
7. Press [RETURN] button to return the upper menu, or press [EXIT] button to close the menu.

 
Tool Bar

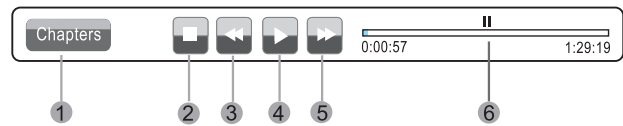

1. Chapters
Then press [ENTER] button to enter and press [◀/▶] button to select the chapter.
2. Stop playback
3. Fast backward
Then press [ENTER] button to select the backward speed. You can press [◀◀] button to achieve the function.
4. Play/Pause
You can press [▶||] button to play/pause directly when there is no control bar on the screen.
5. Fast forward
Then press [ENTER] button to select the forward speed. You can press [▶▶] button to achieve the function.
6. Progress bar
The progress bar when playing.

How to Input the Email Address

 1. Press [▲/▼/◀/▶] button to move the cursor to the address bar and press [ENTER] button to confirm.
2. Press [ENTER] button to display the keyboard. There are some shortcuts on the bottom of the keyboard so that you can input part of the address often used directly. Other keys are used as the keyboard of your computer.
3. Press [▲/▼/◀/▶] button to move the cursor to the characters you want to select and then press [ENTER] button to confirm. If you want to delete one character, move the cursor to Back key <ⓧ> and press [ENTER] button to confirm.
4. Move the cursor to Done key and press [ENTER] button to confirm if you have completed the address input. Then the new address will appear on the address bar.

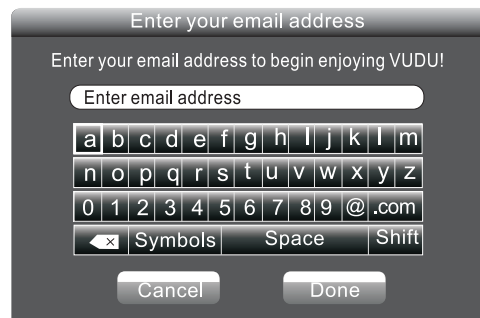


Shortcuts

Advanced Features

NOTE

TV screen may be difference with picture.

 VUDU HD Movies home page

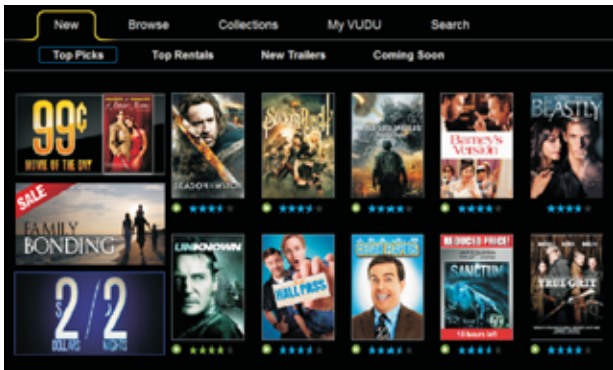

New: The latest movies

Top Picks: Mostly picked up movies

Top Rentals: Mostly rented movies

New Trailers: Latest trailers

Coming Soon: The movies can be picked soon

Browse: Browse all the movies in VUDU

Collections: Browse the classified movies

My VUDU: The movies user bought or rented

Search: Search movies in VUDU

VUDU HD Movies subpage



Rent/Own: To rent or buy current movie

Watch Trailer: To watch trailer of the current movie

2 Minute Preview: To preview current movie for 2 minutes

Add to Wishlist: Add current movie to your wishlist

Rate/share: To rate current movie or share it to your friends in Facebook or Twitter

Overview: The overview of current movie

Cast&Crew: The cast and crew of current movies and find their related movies

Reviews: The reviews of current movie

Similar: The similar types of movies

More Info: The detail information of current movie

VUDU Apps

Brief introduction

VUDU Apps - The applications platform for connected TVs

- VUDU Apps provides customers with access to a wide range of Internet services and applications including streaming video, music on demand, photo browsing, social networking and more.
- VUDU Apps supports the development of responsive apps designed specifically for use on home HD televisions.
- VUDU Apps uses a unique, cloud-based architecture optimized for consumer electronics devices, including delivering the latest applications to consumers without the need for software downloads or frequent firmware updates.
- Devices featuring VUDU Apps* will begin shipping to consumers since the first quarter of this year.
- VUDU Apps** allows you to see app updates while watching live television.

Operation instructions

You can access the VUDU Apps by the following methods:

1. Press the [HICAST@] button to display network main menu.
2. Press [◀/▶] button to select the **VUDU Apps** icon and press [ENTER] to enter it.
3. Press [◀/▶/▲/▼] button to select the widget you want to access, and press [ENTER] to enter it.
4. You can press [RETURN] to return the upper menu or press [EXIT] button to close the Widgets display.

VUDU Apps home page



Advanced Features

My favorites: The user's favorite Apps
Most popular: The most popular Apps in VUDU
Newest: The newest Apps in VUDU
Browse by genre: Browse Apps by genre
Show Ticker: Show the Apps at the bottom of screen while watching TV
Info&settings: VUDU Apps system information

Netflix

Netflix unlimited membership required.

NOTE

TV screen may be difference with picture.

Brief introduction

Instantly watch thousands of TV episodes & movies streaming over the internet from Netflix. Unlimited membership required.

NOTE

- For more information on Netflix visit <http://www.netflix.com/help> or login to your Netflix account and click "Help" at the top of the page.
- Your broadband fluency and picture quality depend on the network speed and original bit rate.
- Illustrations are examples and may differ from the actual Netflix screens. The display and operations may change as a result of a software update. Use Netflix without configuring a proxy server. Part or all of Netflix may not be available when connecting to the Internet via a proxy server.

Operation instructions

- Press the [HICAST@] button to display network main menu.
- Press [◀/▶] button to select the **Netflix** icon and press [ENTER] to enter it, or press [NETFLIX] button to enter Netflix website directly.
- Input Email and Password in following window to sign in. (Refer to "How to Input the Email Address")



- Press [▲/▼/◀/▶] button to move the cursor to select service items in the **Netflix** home page, and [ENTER] button to confirm.
- In the process of watching a movie, press operational buttons to control the movie.
- Press [RETURN] button to return the upper menu, or press [EXIT] button to close the menu.

Netflix Movies home page



Suggestions for you: The movies suggested for you by Netflix

New Arrivals: The new arrivals

Genres: Browse movies in different genres

Instant Queue: Your list of movies

Search: Search for available titles

Opera

How to use the Opera Browser function

- The function of the buttons on the remote control**

▲/▼/◀/▶: Press these buttons to move the cursor on the screen as the mouse of the computer.

Menu: Press the button to display/cancel the keyboard on the screen.

OK: Press the button to confirm the selection.

Press the button twice to search the new website.



Advanced Features

 
● How to enter the Opera Browser

The Network setup must be correct. Then you can use the network.

After entering the network main menu interface (according to **How to enter the network main menu interface**), Press [◀/▶] button to select the Opera Browser icon and press [OK] button to enter it.

● The function of the buttons on the screen:

Then the default interface will appears on the screen. There are some function icons on the bottom of the screen:

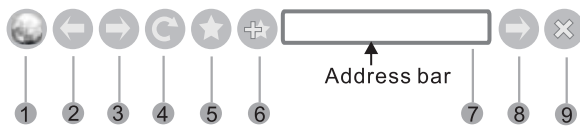

1. Back to main page

Move the cursor to the icon and press [OK] button to return to the default interface.

2. Back to previous page

Move the cursor to the icon and press [OK] button to return to the previous viewed web page.

3. Return a page

Move the cursor to the icon and press [OK] button to go forward to the previous viewed web pages.

4. Refresh page

Move the cursor to the icon and press [OK] button to refresh the current page.

5. Folder

Move the cursor to the icon and press [OK] button to enter the favorite folder.

6. Add Folder

Move the cursor to the icon and press [OK] button to add the website to the favorite folder.

7. Address bar

Input the website you want to view.

8. Sure to enter the Address of the page

Move the cursor to the icon and press [OK] button to search the website.

9. Exit Opera

Move the cursor to the icon and press [OK] button to close the page.

● How to Input the New Address



1. Press [▲/▼/◀/▶] button to move the cursor to the address bar and press [OK] button to confirm.

2. Press Menu to display the keyboard.

There are some shortcuts on the bottom of the keyboard so that you can input part of the address often used directly.

Other keys are used as the keyboard of your computer.

3. Press [▲/▼/◀/▶] button to move the cursor to the characters you want to select and then press [OK] button to confirm.

If you want to delete one character, move the cursor to Back key and press [OK] button to confirm. Or if you want to re-enter all the characters, move the cursor to Reset key and press [OK] button to confirm.

4. Move the cursor to Enter key and press [OK] button to confirm if you have completed the address input. Then the new address will appear on the address bar.

5. Move the cursor to the address bar and press [OK] button twice to enter the website.

Or move the cursor to the [→] and press [OK] button to search.

✔ NOTE

There is only recommend to open the English website.

 
● How to Add a Bookmark

If you want to find the often viewed website from the favorite folder, you can follow the steps to add it to the folder.

1. Firstly, input the address on the address bar and enter it.

2. Press [▲/▼/◀/▶] button to move the cursor to the [+] and press [OK] button to confirm.

The menu will pop up on the screen.

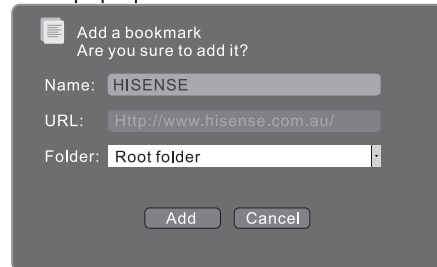


3. Press [▲/▼/◀/▶] button to move the cursor to the icon marked with dashed box on the right screen. Then press [OK] button to confirm to display all the folders.

4. Press [▲/▼] button to select the folder you want to add the bookmark to. And press [OK] button to confirm.

5. Move the cursor to the Add button and then press [OK] button to confirm.

 
If you do not want to add the book mark, move the cursor to the Cancel button and press [OK] button to confirm.

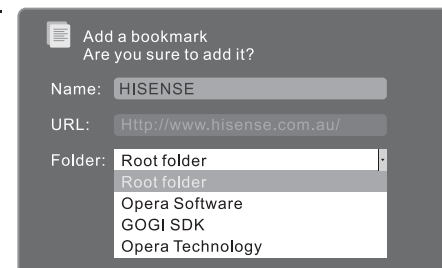


Advanced Features


● How to Add a Folder

You can add a folder to the favorite as follows:

 1. Move the cursor to the  icon and press [OK] button to confirm. The menu will pop up on the screen.
2. Move the cursor to **Add a folder** button and press [OK] button to confirm.
A pop-up menu appears on the screen.
3. Move the cursor to Name bar and press [OK] button to confirm. Follow the steps 2~4 in "How to Input the New Address" to input the name.
4. Move the cursor to Add button and press [OK] button to confirm and the new folder has been added.

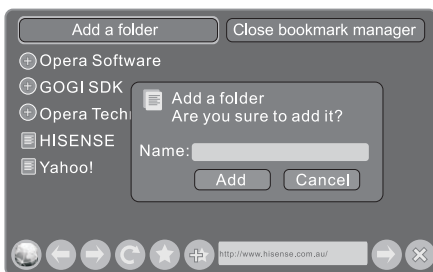

● How to Edit/Delete a Folder/Bookmark

 
 
1. Move the cursor to the  icon and press [OK] button to confirm. The menu will pop up on the screen.
2. Move the cursor to the folder /bookmark directly and there will be two icons on the right of it. Move the cursor to one of the icons and press [OK] button to display a pop-up menu.

:Edit button

- Move the cursor to the Name/URL bar and press [OK] button to confirm. Follow the steps 2~4 in "How to Input the New Address" to edit it.
- Move the cursor to Edit button, then press OK to confirm and the folder/bookmark will be saved as editing just now.

:Delete button

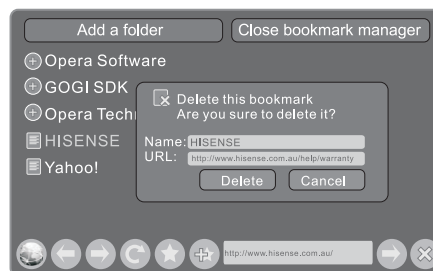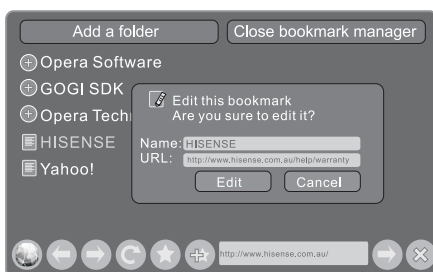

- Move the cursor to the Delete button and press [OK] button to confirm. Then the folder/bookmark will be deleted from the favorite folder.

 


✔ NOTE

There is only Name bar on the pop-up menu for folder.

● How to select the Website from the favorite folder

1. Move the cursor to the  icon and press [OK] button to confirm. The menu will pop up on the screen.
2. Move the cursor to the  icon before the folder name and press [OK] button to confirm.
The websites in the folder will appear in the following lines.
3. Move the cursor to the website you want to view and press [OK] button to confirm.
If the website is in the root folder, you can select it directly. And do not need operate as step 2.

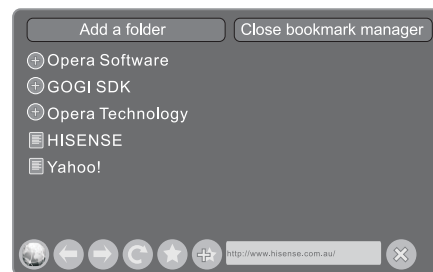

● How to exit the manager

Move the cursor to the Close bookmark manager icon and press [OK] button to confirm.

Other

If you encounter any other issues during activation, refer to the following online resources:

 
- **VUDU customer care:** To learn more about VUDU, visit the frequently Asked questions at www.vudu.com/support.
- **Netflix customer service:** US: (866) 716-0414
Canada: (866) 348-2353

Advanced Features

View the shared files on TV

1. Press [INPUT] button to select the **DMP** and press [ENTER] button to enter DMP mode.
2. The **DMP** menu appears on the screen as follow. Then you can view the shared folders.

You can see more operation of DMP in the next chapter.

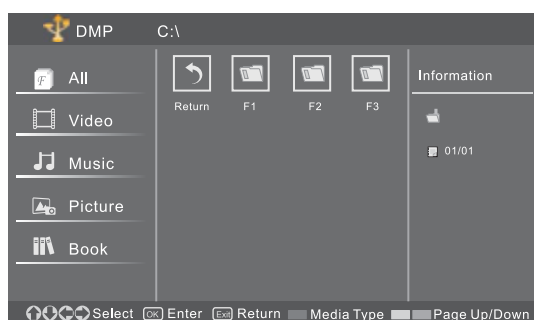

Digital Media Play

 
Please note that Hisense will not assume any responsibility for any lost data and cannot guarantee perfect compatibility with all mass storage devices. Be sure to insert the USB disk or mobile hard disk with standard USB2.0 port.

- Press [INPUT] button to display the **INPUT** menu, press [▲/▼] button to highlight the **DMP** source, then press [ENTER] button to confirm. (If you want to exit DMP, you can press [EXIT] button or press [INPUT] button to switch to other sources).
 - Press [RED] button to switch the media type.
 - Press [YELLOW/BLUE] to turn to the previous/next page.
1. Press [▲/▼/◀/▶] button to select the folder/file you want to open and then press [ENTER] to enter/play the folder/file.
 2. Press [EXIT] to return to the previous directory.


Enjoy Video Files

1. Press [RED] button to switch to All or Video.
2. Press [▲/▼/◀/▶] to select the video you want to view.
3. Press [ENTER] button to play the video.
4. Press [■/EXIT] button to exit the video and return to the previous directory.
5. Press [◀/▶] button to select the function icon and then press [ENTER] to confirm.

● Tool Bar

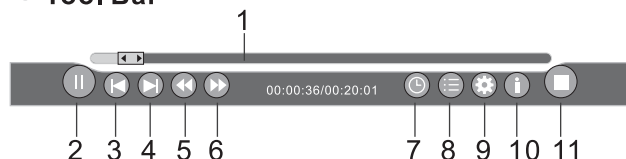

1. The progress bar when playing.
2. Play/Pause.
You can press [▶||] button directly to play/pause when there is no control bar on the screen.
3. Play the previous video.
You can press [◀◀] button directly to achieve the function when no control bar display on the screen.
4. Play the next video.
You can press [▶▶] button to achieve the function when no control bar display on the screen.
5. Fast backward.
Then press [ENTER] button to select the backward speed. You can press [◀◀] button to achieve the function.
6. Fast forward.
Then press [ENTER] button to select the forward speed. You can press [▶▶] button to achieve the function.
7. Select time to play
 - 1) Press [◀/▶] button to select the position you want to set.
 - 2) Press 0~9 to set the time and press [▲/▼/◀/▶] button to adjust it.
 - 3) Press [ENTER] button to confirm and the video will play at the time you have set.
8. Play list
 - 1) Press [YELLOW/BLUE] button to page and press [▲/▼] button to select the video.
 - 2) Press [ENTER] button to confirm. And press [EXIT] button to exit the menu.
9. Options
 - 1) Press [▲/▼] button to select the options in the menu.
 - 2) Press [◀/▶] button to select the settings.
 - 3) Press [ENTER] button to confirm.
10. Program info
It allows you to view the program information.
11. Stop playback

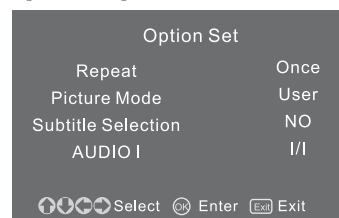 

Advanced Features

NOTE


You can press [ASPECT] button to change the aspect ratio(Normal , Full Screen , Original Size) while playing the video.

Playable format list


Files Format	Playable format
Photo	JPG
Music	Mp3
Video	MPEG1(.dat), MPEG2(.mpg/.ts), XVID (.avi), H.264(.mov/.ts/.mkv)

Enjoy Music Files

 1. Press [Red] button to switch to All or Music.
2. Press [▲/▼/◀/▶] button to select the music you want to view.

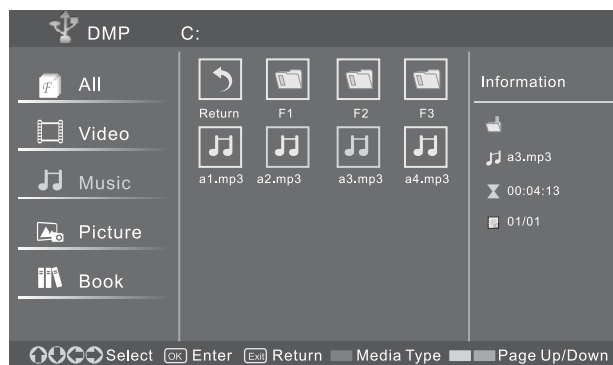

 
3. Press [ENTER] to play the music.
4. All the music is listed on the left. Press [▲/▼] button to select the music and press [▶] button to mark it. You can press [YELLOW/BLUE] button to turn to the previous /next page.
 - Press [GREEN] button to select the Mode: Mark/All/Single.

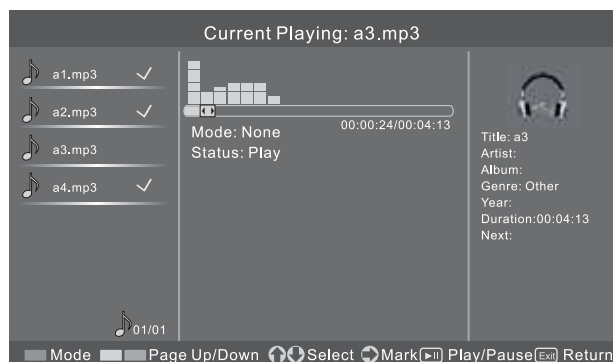


5. Press Exit to exit the music playback interface.

Browse the Pictures

 1. Press [RED] button to switch to All or Picture.
2. Press [▲/▼/◀/▶] button to select the picture you want to view.
3. Press [ENTER] to browse the picture.
4. Press [■/EXIT] button to exit the picture and return to the previous directory.

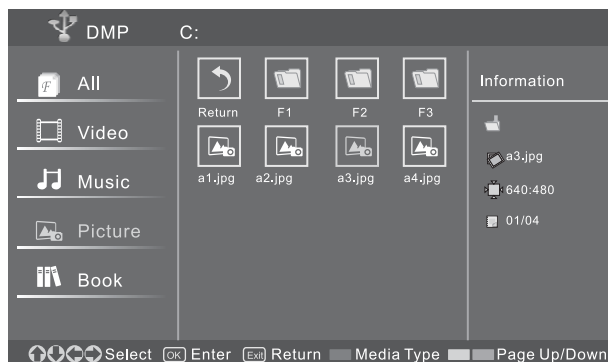

Tool Bar

 

When browsing the pictures

Press [ENTER] button to display/exit the picture control bar, and press [◀/▶] button to select the function icon and then press [ENTER] button to confirm.

1. Browse the previous picture. You can press[|◀◀] button directly to achieve the function when no control bar displays on the screen.
2. Browse the next picture. You can press [▶▶|] button directly to achieve the function when no control bar displays on the screen.
3. Allows the picture to rotate 90 degrees clockwise.
4. Allows the picture to rotate 90 degrees anticlockwise.
5. Play/pause. You can press [ENTER] button directly when no control bar on the screen.
6. Stop browsing the picture. You can press [■] button directly when no control bar on the screen.
7. Zoom in the picture.
8. Zoom out the picture.

 
Advanced Features

9. Option Set. Press [▲/▼] button to select the options and press [◀/▶] button to set them.

Speed - Allows you to browse the picture at different speed.

Effect - Allows you to set how the picture appears on the screen.

Background Music - Allows you to enjoy the music when browsing the pictures if it is set On.

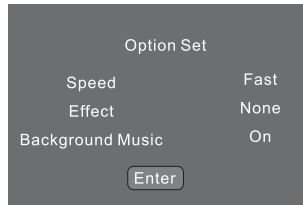


10. Picture info. Allows you to view the picture information.

Browse the Text Files

1. Press [Red] button to switch to All or Book.

 2. Press [▲/▼/◀/▶] button to select the text you want to view.

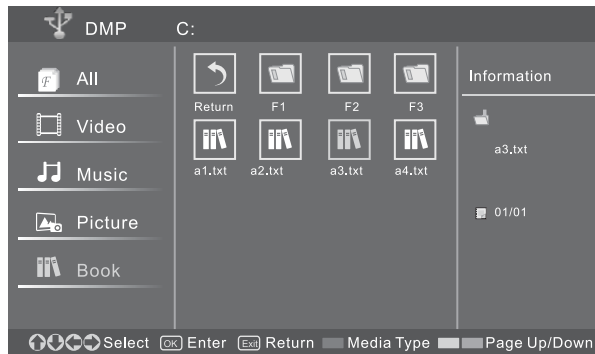

3. Press [ENTER] button to confirm.

4. Press [■/Exit] button to exit it and return to the previous directory.

Other Information

Trouble Shooting

When something appears wrong with your TV refer to below chart. If the proposed remedy's do not work , then unplug the AC cord from wall, wait at least 60 seconds, plug AC back in and then turn on the TV. If the problem still cannot be solved, please contact the help line provided on the warranty card or a professional technician.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture.	<ul style="list-style-type: none"> ● Check if the power cord is in the AC outlet and if it has electricity. ● Check if you have pressed [POWER] button on the TV or [POWER] button on the remote control. ● Check to see if LED light is either red or blue. If illuminated, power to TV is OK.
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"> ● Check for the correct output connection on the external source and for the correct input connection on the TV. ● Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my television, there is a few second delay before the picture appears. Is this normal?	Yes, this is normal. That is the TV searching for previous setting information and initializing the TV.
Picture is normal, but no sound.	<ul style="list-style-type: none"> ● Check the volume settings. ● Check if Mute mode is set "on".
Sound but no picture or black and white picture.	<ul style="list-style-type: none"> ● If black and white picture first unplug TV from AC outlet and replug after 60 seconds. ● Check Color Setting if picture is black and white.
Sound and picture distorted or appear wavy.	<ul style="list-style-type: none"> ● An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV. ● Insert the power plug of the TV set into another power outlet.
Sound and picture is blurry or cuts out momentarily.	<ul style="list-style-type: none"> ● If using an external antenna, check the direction, position and connection of the antenna. ● Adjust the direction of your antenna or reset or fine tune the channel.
Horizontal/vertical stripe on picture or picture is shaking.	Check if there is interfering source nearby, such as appliance or electric tool.
The plastic cabinet makes a "clicking" type of sound.	"Click" sound can be caused when the room temperature changes. This change causes the television cabinet to inflate or contract, which makes the sound. This is normal and TV is OK.
Black square appears in the center of my television screen?	The Closed Caption function is set in the "text" mode. To remove it, access Closed Caption from the menu screen and change the Mode setting from "text" to either "CC1" or "off".
On some channels getting another language or sometimes no sound at all.	<p>That would indicate that the MTS mode on your unit is set to "SAP" mode. We suggest setting the MTS mode to either "Stereo" or "Mono". For further instruction, please see "Audio Adjust" or "MTS/SAP" in your user manual.</p> <ul style="list-style-type: none"> ● SAP is Second Audio Program. It's a second audio channel that is usually used for a second language or descriptive audio for the visually impaired. ● MTS stands for Multichannel Television Sound, a standard that allows the encoding of 3 channels of audio within a standard NTSC (analog) video signal to a television. A television that is able to receive MTS Stereo allows you to watch television with stereo sound.
Not getting all of my cable channels on the television or I'm only getting 13 channels.	<ul style="list-style-type: none"> ● Check the cable connection for an incoming signal. Make sure the signal is coming OK. Best way to confirm signal is to use another TV and/or contact your cable company. ● Reprogram your channels. Press [MENU] button on your TV remote control, change Input Source setting to "Cable", then use "Auto Channels Search" to reprogram your channels.

Other Information

Trouble Shooting

SYMPTOMS	POSSIBLE SOLUTIONS
[CHA / V] don't work when I set the Channel to Cable? They work with the Air setting?	After switching to Cable, please auto program the channels. The TV will "remember" all the channels then the TV will allow you to surf the channels with [CHA / V] buttons.
Remote control does not work.	<ul style="list-style-type: none"> ● Confirm that TV still has power and is operational. ● Change the batteries in the remote control. ● Check if the batteries are correctly installed. ● Clean the front of the remote control (LED window). ● If using a universal remote, be sure to select the TV mode on the remote. ● If the remote still does not work: <ul style="list-style-type: none"> -remove and reinstall the batteries correctly to reset the remote or install new batteries. -press TV and then Power to turn on the TV. With a universal remote if you have reset or changed the batteries you will need to reprogram the remote for the other units. ● Check if there is obstruction between the remote control and the TV. <p>TIP: If you have a digital camera/camera phone, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while pressing a button on the remote control; you should see flashing light on the screen. If there is no light observed, the remote control is not working. You need to repair or replace the remote control.</p>
Network connection fail.	<ul style="list-style-type: none"> ● Check network physical connection, make sure connection is correct. ● Enter "Menu", "Settings", "Network", "Configuration", make sure configuration is correct according to your network service provider. ● Enter "Menu", "Settings", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.
Connect VUDU/Netflix fail.	<ul style="list-style-type: none"> ● Check network connection is correct, both physically and configuration. ● Enter "Menu", "Settings", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful. ● For VUDU: Enter "Menu", "Settings", "Network", "Configuration", "Applications", "VUDU", "Deactivation" to reset VUDU account. ● For Netflix: Enter "Menu", "Settings", "Network", "Configuration", "Applications", "Netflix", "Deactivation" to reset Netflix account.
Log out VUDU/Netflix or change log in account.	<ul style="list-style-type: none"> ● For VUDU: <ol style="list-style-type: none"> 1. Press [EXIT] button on remote to exit VUDU. 2. Enter "Menu", "Settings", "Network", "Configuration", "Applications", "VUDU", "Deactivation" to reset VUDU account. ● For Netflix: <ol style="list-style-type: none"> 1. Press [EXIT] button on remote to exit VUDU. 2. Enter "Menu", "Settings", "Network", "Configuration", "Applications", "Netflix", "Deactivation" to reset Netflix account.
DLNA does not work.	<ul style="list-style-type: none"> ● Check network connection is correct, both physically and configuration. ● Make sure DLNA server (PC or Mac) has shared media content and TV has permission to access shared media. ● Enter "Menu", "Settings", "Network", "Applications", turn on "DLNA". ● Select Hi-DMP source to find shared contents. Select "Hi-DMP" source by using [INPUT] button on remote or press [HICAST@] button and then select "Multi-Media" Icon.
How do I get easy IPTV to work on my TV?	<ul style="list-style-type: none"> ● You need a broadband (high speed) Internet service with a speed of no less than 1.5 Mbps. ● Connect the TV to the internet through your router by an Ethernet Cable or wireless. If connection fails, check with your internet service provider or router manufacturer to determine if there is a firewall, content filter, or proxy settings that may block the TV from accessing the internet. ● Before calling for service, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn it on again. ● Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.

Other Information

General

NOTE

Features, appearance and specifications are subject to change without notice.

Model Name		F55T39EGWD
Dimension	Without stand	Width: 51.8 inches(1317.1 mm) Height: 32.3 inches(820.9 mm) Depth: 1.5 inches(39 mm)
	With stand	Width: 51.8 inches(1317.1 mm) Height: 34.8 inches(887 mm) Depth: 12.1 inches(308 mm)
Weight	Without stand	51.1 lbs(23.2 kg)
	With stand	56 lbs(25.4kg)
LCD Panel Minimum size (diagonal)		55 inches
Screen resolution		1920×1080
Audio power		10W+10W
Power consumption		150 W
Power supply		120V ~60 Hz
Receiving systems	Analog	NTSC
	Digital	ATSC, 8-VSB, Clear-QAM
Environmental conditions		Temperature: 41°F~95°F(5°C~ 35°C), Humidity: 20%-80% RH Atmospheric pressure: 86kPa-106kPa
Component Input		480I, 480P, 720P/60Hz 1080I/60Hz, 1080P/60Hz
VGA Input		VGA(640×480/60Hz), SVGA(800×600/60Hz) XGA (1024×768/60Hz)
HDMI		RGB/60Hz (640×480, 800×600, 1024×768) YUV/60Hz (480I, 480P, 720P, 1080I, 1080P)

Hisense

INNOVATION IS LIFE

Hisense and associated logos where applicable are registered trademarks of Hisense Group in the United States and/or other countries. All other trademarks are property of their respective owners. © 2011 Hisense USA, Corporation. All Rights Reserved. Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

* Specifications subject to change without notice.

印刷条码

