

1 ACCESSORIES LIST

- User Manual • Quick Setup Guide • Warranty Card • Remote Control • Battery x 2
- TV • Base Plate • Stand Cover • Spacer x 4 • Stick Spacer x 2
- Screw (M5 x 16mm) x 6 • Screw (ST5 x 14 mm) x 2
- Wall-mounted screw (M6 x 25mm) x 4
- Screw (M5 x 16mm) x 10 • Wall-mounted screw (M6 x 25mm) x 4

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.

1 Please check foam for accessories below attaching.

2 Carefully press your TV on soft, padded, surface to prevent damage to the screen.

3 Stand Cover Screws: M5 x 16

4 Base Plate

5 Stick 2 spacers into the positions as illustration.

6 Align the base stand with the screw holes on the bottom of TV back, secure the base stand to the TV back.

3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached (see Step 1).

1 Make sure the TV is held face-down on a clean, stable, and combined space, remove the original screws in the bracket holes on the TV back.

2 Mark the hole while your back cover mount hole coincides to be used screws.

3 Place the provided spacers in the pre-drilled bracket holes on the TV with 4 screws which are in the original spacing. Follow instructions provided with the wall-mount bracket.

4 The TV's rear cover

5 Wall-Mount Bracket

6 Follow instructions provided with the Wall-Mount Bracket. Do not contact a professional installer or service technician for assistance. The manufacturer is not responsible for any injuries that occur due to misinstalling or incorrect assembly.

- The diameter of screws are 9.5 - 11.5 mm in length when the distance and length of the screws differ depending on the Wall-Mount Bracket model.

4 REMOTE CONTROL

Power on/off
Select input source
Display the favorite channel list
Set the sleep timer
Direct channel selection
Select a digital sub-channel
Dash/plus button
MENU button
Navigate Up/Down/Left/Right
Return to the previous channel
Confirm selections
Increase volume
Decrease volume
Launch YouTube App
More function buttons
Select sound mode
Select picture mode
Media/Play button
Enter TV source

Remote setting window
Select input source
ASPECT button (if available)
Go to the previous channel (see Notes)
Special function buttons
Close the menu
Display the information banner
Next channel
Previous channel
Launch Netflix
Adjust Closed Caption (CCD) mode
Adjust select bottom
Select VOX / HDMI source

NOTE:
1. Illustration are for your reference only.
2. Red arrows (shown) buttons are used for automatic program guide (APG). After pressing the [GUIDE] button, white arrows will appear on the screen. To search for additional TV channels, press the [OK] button. To return the steps shown in the OSD.
3. Mark the remote control with TV, please see the label or remote control or the back of the remote control in the USER MANUAL.

5 MAKING CONNECTIONS

TV Side Panel

Back View

TV Side Panel

Check the ports for position and type before making any connections. Loose connections can bring on cable damage. Make sure that all connections are tight and secure.

- ▶ **ANT** Connect an outdoor VHF/UHF antenna.
- ▶ **VGA & AUDIO** Connect a VGA cable and an audio cable from the PC.
- ▶ **LAN** Connect an internet cable to access a network or the Internet. TV also features wireless connectivity.

7 SPECIFICATIONS

Model Name	55T8800W	58T8800W
Without Stand	Width: 48.58 inches (1234 mm) Height: 28.35 inches (720 mm) Depth: 2.32 inches (59 mm)	Width: 51.18 inches (1300 mm) Height: 28.69 inches (734 mm) Depth: 2.32 inches (59 mm)
With Stand	Width: 48.58 inches (1234 mm) Height: 35.43 inches (901 mm) Depth: 11.89 inches (302 mm)	Width: 51.18 inches (1300 mm) Height: 35.83 inches (910 mm) Depth: 13.58 inches (345 mm)
Weight	Without Stand: 56.42 lbs (25.5 kg) With Stand: 66.14 lbs (29.7 kg)	70.97 lbs (32 kg) 87.5 inches
LCD Panel Minimum size (diagonal)	54.6 inches	57.5 inches
Screen resolution	3840 x 2160	3840 x 2160
Auto power	19 W ± 10 W	19 W ± 10 W
Power supply	128 V ~ 60 Hz	19 W ± 10 W
Receiving systems	NTSC	NTSC
Receiving channels	ATSC / QAM	ATSC / QAM
Tuner type	VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125	VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125
Environmental conditions	Digital Terrestrial Broadcast (DTMB): 2 ~ 89 Digital Cable (DVB-C, DMB): 1 ~ 133	Digital Terrestrial Broadcast (DTMB): 2 ~ 89 Digital Cable (DVB-C, DMB): 1 ~ 133
Frequency	Frequency synthesized	Frequency synthesized
Temperature	41°F ~ 99°F (5°C ~ 35°C)	41°F ~ 99°F (5°C ~ 35°C)
Humidity	10% ~ 90%	10% ~ 90%
Atmospheric pressure	88 kPa ~ 106 kPa	88 kPa ~ 106 kPa
Component input	480 I (60 Hz), 480 P (60 Hz), 720 I (60 Hz), 720 P (60 Hz), 1080 I (60 Hz), 1080 P (60 Hz)	480 I (60 Hz), 480 P (60 Hz), 720 I (60 Hz), 720 P (60 Hz), 1080 I (60 Hz), 1080 P (60 Hz)
VGA Input	RGB (60 Hz) (640x480, 800x600, 1024x768)	RGB (60 Hz) (640x480, 800x600, 1024x768)
HDMI Input	Y/Y/P (60 Hz) (480 I, 480 P, 720 P, 1080 P, 1080 P) 3840x2160@24Hz, 3840x2160@25Hz, 3840x2160@30Hz (only for UHD port)	Y/Y/P (60 Hz) (480 I, 480 P, 720 P, 1080 P, 1080 P) 3840x2160@24Hz, 3840x2160@25Hz, 3840x2160@30Hz (only for UHD port)

Note:
Source of Input/Out content must be connected to the digital input. For the moment digital television channel do not deliver 3D content. Features dependent on specifications are subject to change without notice.

8 HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips. If the problem cannot be resolved, please contact Hisense for additional assistance 1-855-344-7367.

SYMPTOMS

- No sound or picture**
- Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity.
 - Check if the power button on the TV is working.
 - Check the volume settings.
 - Check if mute mode is set "on".
- Picture is normal, but no sound**
- Check the correct audio connection on the external source and for the correct input connection on the TV.
 - Make sure you have made the correct selection for the input mode for the incoming signal.
- I have connected an external source to my TV and I get no picture and/or sound.**
- Check network physical connection, make sure connection is correct.
 - Enter "Menu", "Network", "Configuration", make sure configuration is correct according to network connection.
 - Enter "Menu", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.
- Network connection fail.**
- Check network physical connection, make sure connection is correct.
 - Enter "Menu", "Network", "Configuration", make sure configuration is correct.
 - Enter "Menu", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.
- Connect internet fail.**
- You need a broadband (high speed) internet service with a speed of no less than 1.5 Mbps.
 - Connect the TV to the internet through your router by Ethernet.
 - If you are using a wireless connection, check if the router has internet service provider or make sure the router is connected to the internet service content filter, or proxy settings that may block the TV from accessing the internet.
 - If you are using a wireless connection, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn on again.
 - Contact the internet service provider for further assistance.
 - Contact Hisense for additional assistance.

6 TURNING THE TV ON FOR THE FIRST TIME

MENU OPERATIONS

- Press [ENTER] to start the wizard, then press [A/W] button to select your language.
- In the Welcome screen introduced the available input devices and interface.
- Press [A/W] button to select the country where you will operate the TV.
- Daylight Saving: Set the Daylight Saving time for your area.
- If you select Retail Mode, a message appears: "Are you sure to change to retail mode?"
- Home Mode is the recommended setting which offers full functionality of the television. If you selected Retail Mode, Energy Saving is not available.
- The Select Network: Connect your TV to access the network.
- Press [A/W] to select your TV's network.
- Press [ENTER] to scroll through the pages. Please read it carefully. If you want to access the internet, press the [Home] button to see your TV's network connections.
- Press [A/W] to select "Share" to share the TV's network.
- You can select the network configuration in the menu. For more information, please refer to the section titled "Network Connection" and "Network Setup" in the user manual.
- Press [A/W] to select your TV's mode: Antenna or Cable. Press [ENTER] button to confirm.
- If you select "Share", your TV does not scan for channels.
- Confirm: If you select "Share", your TV automatically scans Channel (installation) available in your viewing area. If you select "Share", your TV does not scan for channels.
- Please allow the process to complete without interruption.
- After completion, you will enter the Home Screen. You will see a welcome message and a guide to use the TV.

Channel Search

- Press [A/W] to select your TV's mode: Antenna or Cable. Press [ENTER] button to confirm.
- Confirm: If you select "Share", your TV does not scan for channels.
- Please allow the process to complete without interruption.
- After completion, you will enter the Home Screen. You will see a welcome message and a guide to use the TV.

Note:
If you are using cable or satellite box and have connected to the TV using a coaxial cable, you should enter the cable option. If you use a cable or satellite box to receive the channel scan, if you use a cable or satellite box connected to the TV, Component or RGB, you don't need to scan for channels.