


**HITACHI**  
Inspire the Next

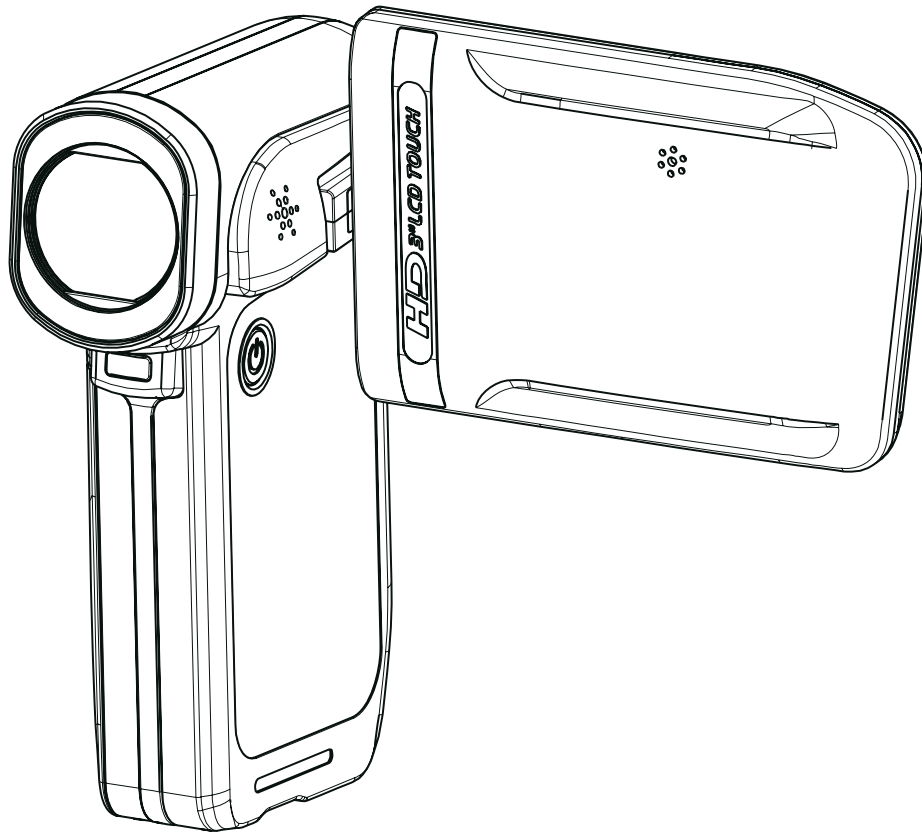

# Instruction Manual

## DZ-HV575E

# Precautions

## Safety Instruction

- Do not store the camera to intense heat or cold for long periods of time, as this may result in permanent damage to the camera.
- Do not use or store the product in dusty, dirty, or sandy areas, as its components may be damaged.
- Do not drop, puncture or disassemble the camera. High-voltage internal components create the risk of electric shock when exposed.
- Use the camera with care. Rough handling may damage the internal components.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the product. Clean only with a slightly damp soft cloth.
- Do not ignite the flash close to eyes, or closer than prescribed minimum distances as this may result in damage to vision. When using the flash, the camera should be at least one meter from the eyes of the subject.
- Do not open the battery cover while an image is being recorded. Doing so will not only make storage of the current image impossible, it can also corrupt other image data already stored in file.
- Test for proper operation before using the camera

## Operating Environment Conditions

- This camera is designed for use in temperatures ranging from 5°C to 35°C (41°F to 95°F).
- Do not use or keep the camera in the following areas:
  - In areas subject to direct sunlight
  - In areas subject to high humidity or dust
  - Near air conditioners, heaters, or other areas subject to temperature extremes
  - Inside of a closed vehicle, especially one parked in the sun.
  - In areas subject to strong vibration

## Battery Usage and Power Supply

- Use only the type of battery that came with your camera. Do not use batteries of different specifications. Doing so may lead to the potential for serious damage.
- Insert the battery according to the instructions. Inserting the battery incorrectly can cause damage to the product and possibly start a fire.
- Remove the battery to avoid the fluid leakage if the camera is not going to be used for an extended time.
- If the battery is crushed or damaged, remove it immediately to avoid the battery fluid leakage and abnormal expansion.
- The camera may feel warm after long periods of continuous use which is normal and not a malfunction. Battery will be in high temperature after long time using (about 1hr), Please be careful while taking out the battery.
- Please be careful if you may need to take out the battery by finger nail.

## SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

\*\*\*\*\*

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

\*\*\*\*\*

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL

--- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock;

--- NEVER guess or take chances with electrical equipment of any kind

--- it is better to be safe than sorry!

\*\*\*\*\*

# Contents

<b>Section 1</b>	<b>Getting to Know Your Camera.....</b>	<b>5</b>
<b>Section 2</b>	<b>Getting Started.....</b>	<b>8</b>
<b>Section 3</b>	<b>Enjoying the Record Mode .....</b>	<b>10</b>
<b>Section 4</b>	<b>Enjoying the Playback Mode .....</b>	<b>20</b>
<b>Section 5</b>	<b>Setting Your Camera .....</b>	<b>26</b>
<b>Section 6</b>	<b>Viewing Pictures and Movies on a TV .....</b>	<b>30</b>
<b>Section 7</b>	<b>Viewing Movie &amp; Picture on PC.....</b>	<b>31</b>
<b>Section 8</b>	<b>Burning the Recorded Clip into DVD.....</b>	<b>32</b>
<b>Section 9</b>	<b>Uploading Video Files to YouTube.....</b>	<b>34</b>
<b>Section 10</b>	<b>Specifications and System Requirements .....</b>	<b>38</b>
<b>Section 11</b>	<b>Troubleshooting.....</b>	<b>40</b>
<b>Section 12</b>	<b>Additional Information .....</b>	<b>41</b>

# Section 1

## Getting to Know Your Camera

### Overview

The camera with 5 Mega Pixel sensor can take H.264 movies. By way of using H.264 technology, more videos can be taken within certain amount of memory. High quality images with up to 12 mega-pixels can also be delivered smoothly. With a color LCD monitor, users can compose images and examine them easily.

The camera features 3" LCD touch panel which is an ideal platform for you to operate your camera. The menu options are accessible with your finger. With the touch panel, you can select the options directly and quickly.

The camera also features movie recording at HD resolution of 1920x1080. You can also connect it to an HDTV via HDMI cable, and easily playback recorded high-definition videos on the wide screen HDTV.

Moreover, the camera has an advanced uploading feature. With the exclusive built-in **YouTube Direct** application, you can upload the videos captured by the camera to YouTube more effortlessly .

ISO sensitivity and color balance can either be adjusted automatically or allowed to be changed manually. A 5x optical zoom increases you control over the movies and pictures you take.

Built-in memory allows you to take pictures and movies without memory card. The memory card slot allows users to increase the storage capacity.

**Hitachi cannot compensate for any damages caused when recording is not made normally or recorded contents cannot be played back because of a defect in the digital camera device or memory card. Hitachi cannot be responsible for your recorded video and audio.**

**If you or a third party make a mistake when handling this digital camera device or memory card, etc., the recorded contents may be lost. Hitachi cannot be responsible for compensation for damage due to loss of recorded contents.**



#### **Note**


*Partial memory of the built-in memory is used for Firmware code.*

### Standard Accessories


Unpack the package and make sure all standard accessories listed are included:

- Camera
- USB Cable
- AV Cable
- HDMI Cable
- Adaptor
- Lithium-ion Rechargeable Battery
- Quick Guide
- CD-ROM (Software and User's Manual)
- Pouch
- Strap


## Front View

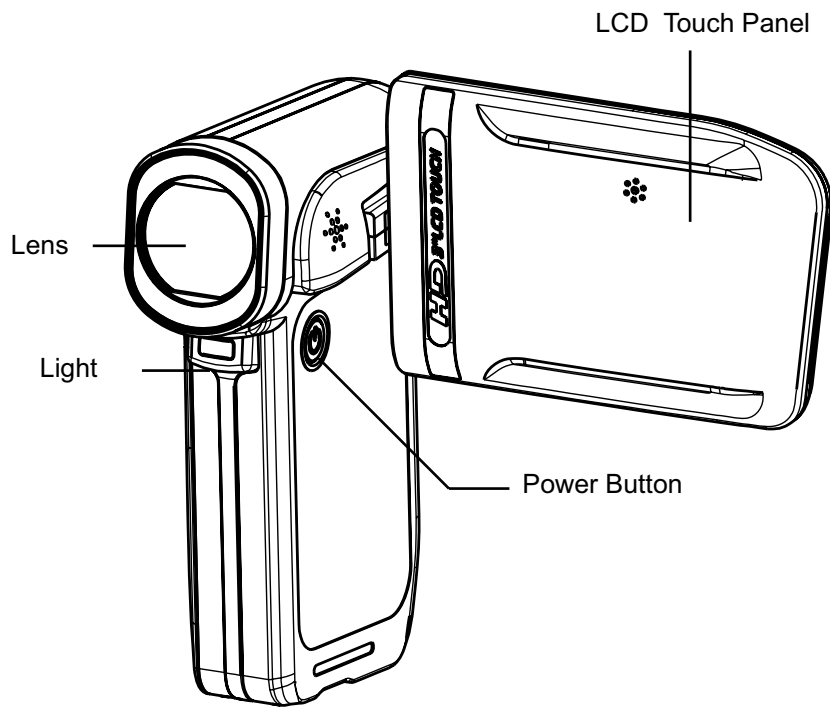


## Rear View

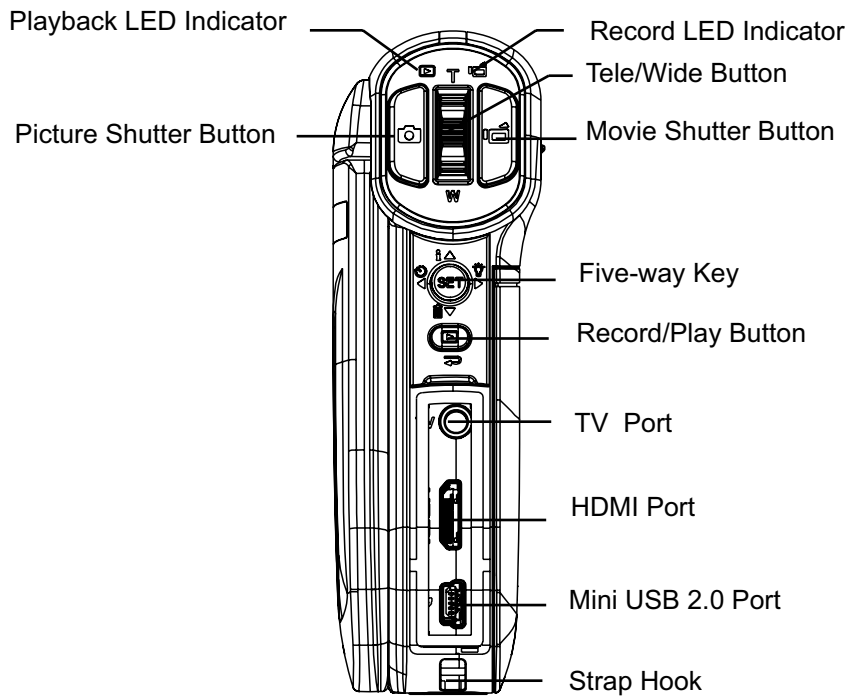

## Side View

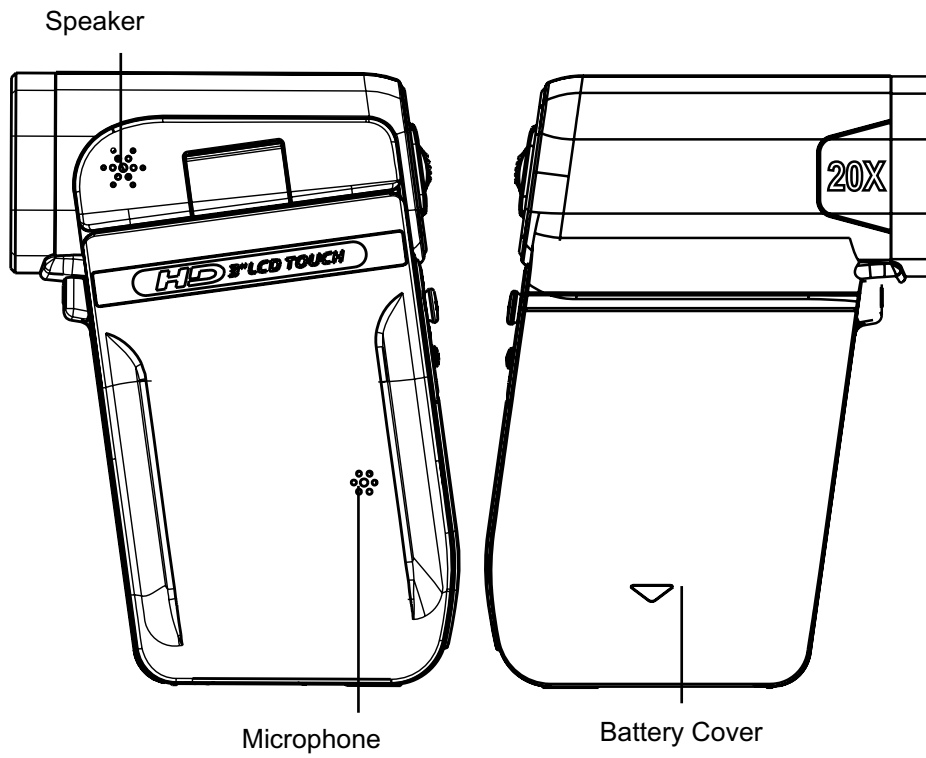

## Bottom View

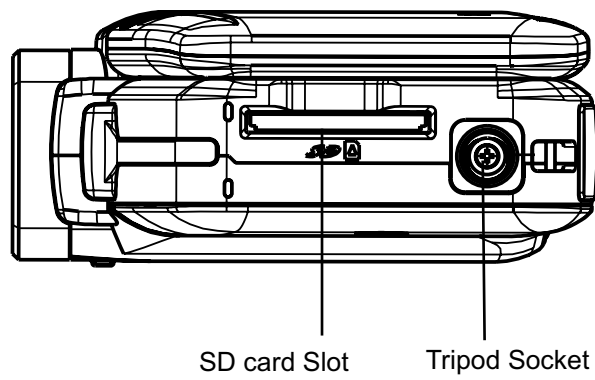


## Section 2 Getting Started

### Loading the Battery

Before using the camera, users must load Lithium-ion rechargeable battery


1. Insert the battery following to the correct polarity marks (+ or -).
2. Close the battery cover firmly.

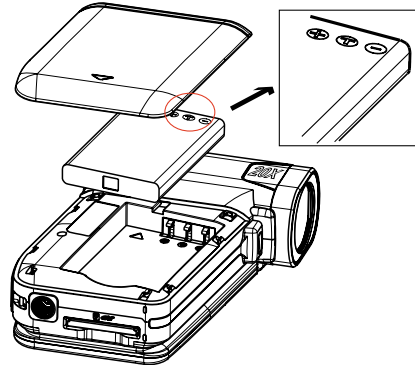

### Charging the Battery

You must use the supplied AC charger or USB cable.


Camera must be turned OFF; blinking light confirms charging, but light is constant when charging has been completed.

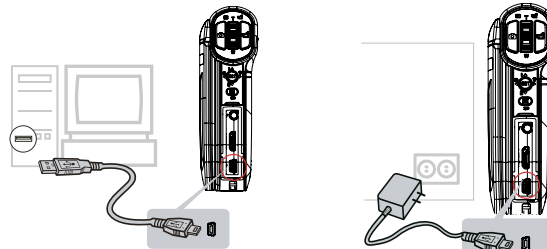

### Inserting and Removing an SD Card (Optional)


The camera comes with internal memory which allows you to store pictures and movies. You can expand the memory capacity by using an optional SD/SDHC memory card.

1. Insert the memory card into the right position. Please refer to the figure.
2. To remove an installed SD card, press the card inwards to release it.
3. When the card pops out, gently remove it from its slot.
4. Recommended memory capacity: 1GB above.

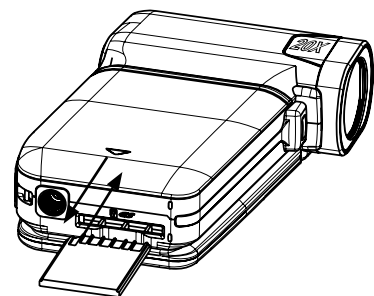

#### Note


- When a memory card is fitted, movies/pictures are saved on card rather than on the built-in memory.
- *Protecting Data on an SD Card: SD card is read-only by locking the SD card. No pictures and movies can be recorded when the SD card is locked. Make sure the lock is on writeable position before recording any media.*

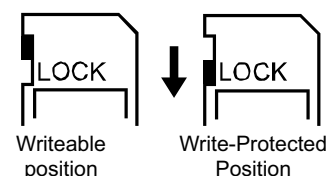






## Turning the Camera On and Getting Started

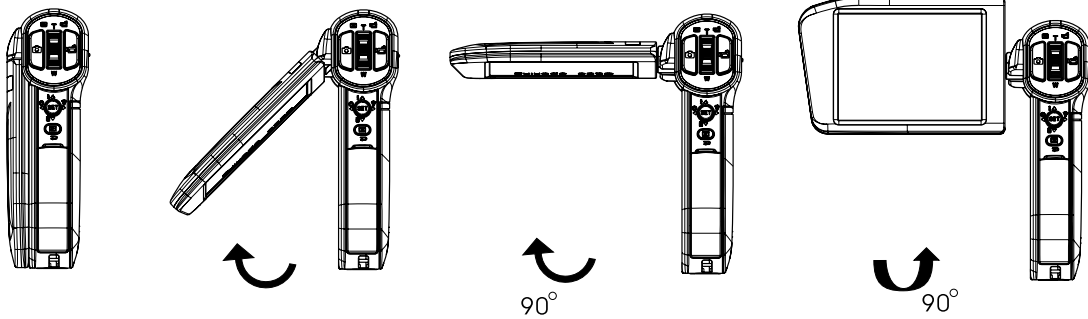
- To turn on the camera:
  - Flip out the LCD panel; the camera will turn on automatically.



- Or press Power Button for one second to turn on it.

- To take a movie: Press the Movie Shutter Button (  ).
- To take a picture: Press the Picture Shutter Button (  ) halfway down till the focusing frame turns from white to green. Then, press the Picture Shutter Button fully down to take picture.

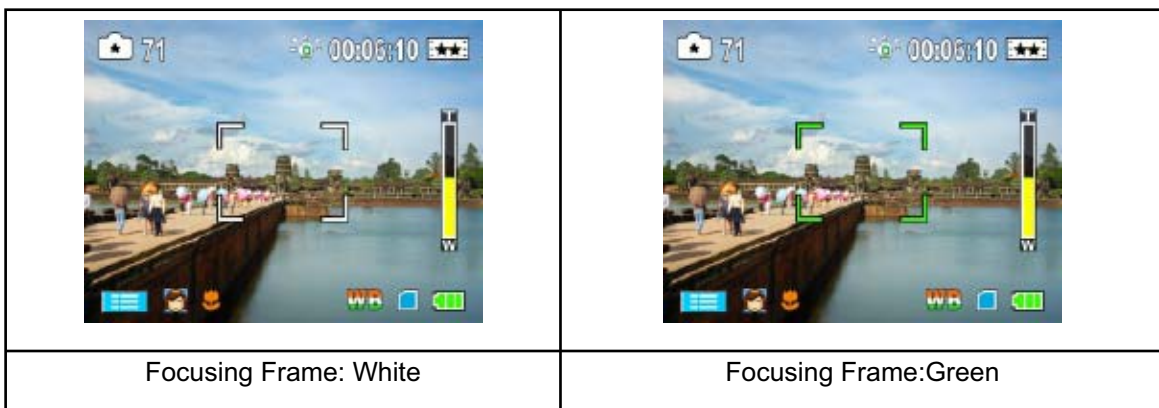

To view stored movies and pictures, press Record/Play Button (  ) once to switch to Playback Mode. Press a second time to return to Record Mode.

- In record mode, the blue Record LED indicator will light up. In playback mode, the green Playback LED indicator will light up.






## Turning the Camera Off

- To turn off the camera, you can either press the Power Button for one second, or you can place the LCD panel back to its original position.

## Section 3
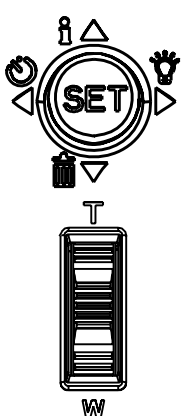
# Enjoying the Record Mode

### Button/Key Function














 <p style="text-align: center;">W</p>	<p><b>Five-way key:</b></p> <p><b>Right Key:</b> Digital Light On/Light On/ Light OFF</p> <p><b>Left Key:</b> Self timer ON/OFF</p> <p><b>Up Key:</b> LCD Information ON (Show the indicators on the LCD screen) / OFF (Do not show the indicators on the LCD screen)</p> <p><b>SET Key:</b> Menu On. Validate the setting</p> <p><b>Tele Button :</b> Zoom In</p> <p><b>Wide Button :</b> Zoom out</p>
	<p><b>Power Button:</b> Press down for one second to turn on or turn off the camera</p>
	<p><b>Record/Play Button functions:</b></p> <ol style="list-style-type: none"> <li>1. Switch between Record /Playback Mode</li> <li>2. Return to the previous page</li> <li>3. For quick review, press it after recording</li> </ol>
	<p><b>Movie Shutter Button:</b></p> <ol style="list-style-type: none"> <li>1. Start to take movie.</li> <li>2. To stop recording, press it again.</li> </ol>
	<p><b>Picture Shutter Button:</b> Start to take picture.</p>

## LCD Monitor Information

The indicators shown below may display on LCD when movies and pictures are recorded:



(1)	Movie Resolution	
		HD (1080p) (30fps)
		HD (720p) (30fps)
		WVGA (60fps)
		VGA (30fps)
		QVGA (30fps)
	Picture Resolution	
		High
		Standard
	Low	
(2)	<b>71</b>	Number of images that can still be taken at current resolution
	<b>00:06:10</b>	Recording time of movie that can still be taken at current resolution
(3)		Digital light On
		Light On
(4)		Self-timer enabled



(5)		Motion Detection
(6)		Option menu On
(7)	Scene	
		Skin
		Night
		Backlight
(8)		Macro Position Focusing
(9)	<b>WB</b>	Manual White Balance
(10)		SD Card inserted
(11)		Battery: full power
		Battery: medium power
		Battery: low power
		Battery: power empty
(12)		Zoom meter: HD(1080p):1X~5X (5X Optical zoom and 1X Digital zoom) Other video resolution:1X~20X (5X Optical zoom and 4X Digital zoom)
(13)		Stabilization








### Note

Scene: B/W / Classic / Negative effect can be previewed immediately without indicator on the LCD

## Movie Recording

- Press Movie Shutter Button (  ) to start recording. When a movie is recording, a time indicator will display on LCD monitor. To stop recording, press Movie Shutter Button (  ) again.
- Press RECORD/PLAY Button to view the recorded movie.
- Five resolution settings are available:

Video Quality	
	HD (1080p) (30fps)
	HD (720p) (30fps)

	WVGA (60fps)
	VGA (30fps)
	QVGA (30fps)

## Picture Recording









- Press the Picture Shutter Button (  ) halfway down till the focusing frame turns from white to green. Then, press the Picture Shutter Button fully down to take picture.
- Press RECORD/PLAY Button to view the picture.
- Three resolution settings are available:


Image Quality	
	<b>High Quality:</b> 12 Mega Pixels
	<b>Standard Quality:</b> 5 Mega Pixels
	<b>Low Quality:</b> 3 Mega Pixels

## Using Digital Light or Light Function



- To use light function:
  1. Press Right Key, the Digital Light icon(  ) will appear on the screen to extend dynamic range for backlight and high contrast sense so that the objects will be brighter and clearer.
  2. Press again, the Light icon(  ) will appear on the screen. The light will be turned on and keeps providing light.
  3. Press Movie Shutter Button (  ) to start recording or press Picture Shutter Button (  ) to take picture.
  4. Press Right Key again to suspend the light.



### Note

The light will be disabled automatically when battery power is low (  ).

## Using Self-timer for taking pictures

- To use Self-timer:
  1. Press Left Key, the Self-timer icon(  ) will appear on the screen.
  2. Press Picture Shutter Button(  ) to take the picture, the self-timer light on the front of the camera blinks until the shutter operates (about 10 second later). The speed of blinking will increase just before the picture is taken.






## Using Zoom Function

- The zoom magnifies images when recording movies or taking pictures.
  1. To zoom in/out, press the Tele/Wide Button.
  2. It can be set from 1X~5X (5X Optical zoom and 1X Digital zoom)/1X~20X (5X Optical zoom and 4X Digital zoom)



## Options for Record Menu

Movie Mode	Picture Mode	Effect
<ul style="list-style-type: none"> <li>• Resolution</li> <li>• Stabilization</li> <li>• Motion Detect</li> </ul>	<ul style="list-style-type: none"> <li>• Resolution</li> </ul>	<ul style="list-style-type: none"> <li>• Macro Mode</li> <li>• Scene</li> <li>• WB (White Balance)</li> <li>• ISO</li> </ul>




## Operations for Record Mode

Operation	Screen
<p>1. Touch  (on-screen icon) when in Record Mode. The Record menu will show on the screen.</p>	
<p>2. Touch the option icons on the screen lightly with your finger to move between main menu options, which are Movie Mode, Picture Mode, and Effect.</p> <p>3. Submenu will pop out while move to each main menu option.</p> <p>4. Touch to select the specific option you want to adjust, then touch OK icon to validate the setting. After validating the settings, touch exit icon (  ) to back to Record mode.</p> <p>5. Or touch exit icon (  ) to exit to Record mode without any change.</p>	




## Movie Mode Submenu Setting

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Record Mode, touch  (on-screen icon) to enter record menu screen.</li> <li>2. Touch [Movie Mode] icon on the screen. Submenu of Movie Mode will pop out on the screen.</li> <li>3. The Movie Mode submenu contains 3 options-- Resolution, Stabilization, and Motion Detect--for you to adjust the camera setting.</li> </ol>	

## Movie Resolution

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Movie Mode submenu, touch [Resolution] on the screen.</li> <li>2. Touch  on the screen to move between five settings.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	

## Stabilization




Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Movie Mode submenu, touch [Stabilization] on the screen.</li> <li>2. Touch  on the screen to choose On or Off.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	



### Note



Stabilization doesn't support HD(1080p) and WVGA(60fps).

## Motion Detection




Operation	Display Screen
<ol style="list-style-type: none"><li>1. In Movie Mode submenu, touch [Motion Detect] on the screen.</li><li>2. Touch  on the screen to choose On or Off.</li><li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li><li>4. Camera will start to record video automatically if it detects a movement. Stop recording if it does not detect a movement.</li></ol>	 <p>The screenshot shows a camera settings menu with a blue background. At the top, there are four icons: a person, a camera, a globe, and a wrench. Below these are three settings: 'Resolution' set to 'HD(720p)', 'Stabilization' set to 'Off', and 'Motion Detect' set to 'Off'. At the bottom, there are two buttons: 'OK' and a back arrow icon.</p>







## Picture Mode Submenu Setting

Operation	Display Screen
<ol style="list-style-type: none"> <li>In Record Mode, touch  (on-screen icon) to enter record menu screen.</li> <li>Touch [Picture Mode] icon on the screen. Submenu of Picture Mode will pop out on the screen.</li> <li>The Picture Mode submenu contains 1 option, Resolution, for you to adjust the camera setting.</li> </ol>	

## Picture Resolution


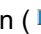

Operation	Display Screen
<ol style="list-style-type: none"> <li>In Picture Mode submenu, touch [Resolution] on the screen.</li> <li>Touch  on the screen to move between three settings.</li> <li>Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	

## Effect Submenu Setting

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Record Mode, touch  (on-screen icon) to enter record menu screen.</li> <li>2. Touch [Effect] icon on the screen. Submenu of Effect will pop out on the screen.</li> <li>3. The Effect submenu contains 4 options--Macro Mode, Scene, WB, and ISO--for you to adjust the camera setting.</li> <li>4. Touch  /  on the screen to change the page.</li> </ol>	

### Macro Mode


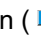

With Macro Mode set to Macro, you could take closer movies/images of objects in distance of 1cm to 80cm.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Effect submenu, touch [Macro Mode] on the screen.</li> <li>2. Touch  on the screen to choose Macro or Normal.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	

### Scene

You can select the mode according to the scene condition.

- **Auto:** Shoot without any special effect on the image.
- **Skin:** Shoot with an effect that makes skin tones more natural.
- **Night:** Use Night mode for night scenes or low light conditions.
- **Backlight:** You can take shots when bright light is behind the subject.
- **B/W:** The image is converted to black-and-white.
- **Classic:** The image is converted to sepia look is applied to the image.
- **Negative:** The image is converted as the negative of the normal

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Effect submenu, touch [Scene] on the screen.</li> <li>2. Touch  on the screen to move between 7 settings.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	






#### Note

To avoid blurry pictures, place the camera on a flat, steady surface, or use a tripod when take shots in Night mode.

## WB (White Balance)

The camera adjusts the color balance of images automatically. Three manual white balance settings are available:




- **Auto:** The camera automatically adjusts white balance.
- **Daylight:** Under outdoors.
- **Fluorescent:** Under fluorescent light condition.
- **Tungsten:** Under tungsten light condition.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Effect submenu, touch [WB] on the screen.</li> <li>2. Touch  on the screen to move between 4 settings. The change can be previewed immediately.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	

## ISO

The camera adjust the ISO sensitivity of images automatically. Two manual ISO sensitivity settings are available. The larger the number, the higher the sensitivity.

- **Auto:** The camera automatically adjusts ISO sensitivity.
- **ISO 800**
- **ISO 1600**




Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Effect submenu, touch [ISO] on the screen.</li> <li>2. Touch  on the screen to move between three settings.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	

## Section 4

# Enjoying the Playback Mode

### Button/Key Function

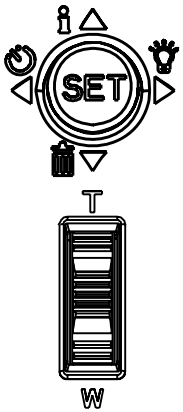

















The Buttons/Keys have the following functions in Movie and Picture Playback Modes.





	<p><b>Five-way Key:</b></p> <p><b>Right Key:</b> Go to the next movie/picture. Fast forward</p> <p><b>Left Key:</b> Go to the previous movie/picture. Fast rewind</p> <p><b>Up Key:</b> Volume increase. Information ON/OFF</p> <p><b>Down Key:</b> Volume decrease. Delete the current or all movies/pictures</p> <p><b>SET Key:</b></p> <ol style="list-style-type: none"> <li>1. Validate the setting.</li> <li>2. In Movie Playback Mode, press to select the current movies to upload to YouTube.</li> <li>3. In Picture Playback Mode, press to start slideshow.</li> <li>4. In Picture Magnification Mode, press to exit to Picture Playback Mode.</li> </ol> <p><b>Tele Button :</b> Magnification mode On. Zoom in.</p> <p><b>Wide Button :</b> Magnification mode Off. Zoom out</p>
	<p><b>Record/Play Button functions:</b></p> <ol style="list-style-type: none"> <li>1. Switch between Record and Playback modes.</li> <li>2. Return to the previous page.</li> </ol>
	<p><b>Movie Shutter Button:</b></p> <p>Start playing the recorded movie.</p>

## LCD Monitor Information

Indicators on the LCD screen while in Playback Mode:





(1)		HD (1080p) (30fps)
		HD (720p) (30fps)
		WVGA (60fps)
		VGA (30fps)
		QVGA (30fps)
		High
		Standard
		Low
(2)	<b>0005/0005</b>	Current number/ Total number of movie.
(3)	<b>00:06:10</b>	Movie playback time counter
(4)		Volume
(5)		Previous movie/picture
(6)		Movies fast rewind
(7)		Movies Play
		Movies Pause
(8)		Movies fast forward
(9)		Next movies/ picture
(10)		Delete
(11)		Magnification Indicator.
(12)		Movies is selected to upload to YouTube




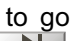






(13)		Exit
(14)		Slideshow
		Slideshow stop
(15)		Consecutive number of picture

## Operations for Playback Mode

The Playback Mode is for viewing and managing movies and pictures on the built-in memory or on an SD card.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Press RECORD/PLAY Button (  ) to switch from Record Mode to Playback Mode Main Menu. There are 2 options in the Playback Mode, Movie and Picture.</li> <li>2. Touch to select the specific option.</li> </ol>	

## Movie Playback







Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch [Movie] on the screen to enter Movie Playback Mode.</li> </ol>	
<ol style="list-style-type: none"> <li>2. Touch  to play or pause the movies.</li> <li>3. Sweep to the left or touch  to go to the previous movie; sweep to the right or touch  to go to the next movie.</li> <li>4. While playing movies, touch  /  to fast rewind/forward.</li> <li>5. Touch  to increase the volume; touch  to reduce the volume.</li> <li>6. Touch exit icon (  ) to exit.</li> <li>7. Press SET key to select the current movies to upload to YouTube.</li> </ol>	



### Note

When the LCD is idle for few seconds, the playback function bars will disappear automatically.

## Delete Movies








Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  /  to select the movies.</li> <li>2. Touch  to go to the Delete option screen.</li> </ol>	
<ol style="list-style-type: none"> <li>3. Touch [Yes] to delete the current movies or [No] to cancel the operation and exit; touch [All] to delete all movies.</li> <li>4. Before all movies are deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.</li> </ol>	
	



### Note

- If a memory card is inserted, you can delete only those movies stored on the card.
- Movies on a written-protected memory card cannot be deleted.

## Picture Playback

Operation	Display Screen
<p>1. Touch [Picture] on the screen to enter Picture Playback Mode.</p>	
<p>2. Sweep to the left or touch  to go to the previous picture; sweep to the right or touch  to go to the next picture.</p> <p>3. While the picture is selected, press on the screen as well as go up to enter Magnification Mode. In the Magnification Mode, press on the screen as well as go up to zoom in or go down to zoom out.</p> <p>4. To navigate the magnified picture, press on the screen as well as move (The inner Magnification Indicator turns red). Press Set Key to exit navigation mode.</p> <p>5. Touch  /  to start or stop the slide show.</p> <p>6. Touch exit icon (  ) to exit.</p>	









### Note

When the LCD is idle for few seconds, the sildeshow function bars will disapear automatically.



## Delete Picture

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  /  to select the picture.</li> <li>2. Touch  to go to the Delete option screen.</li> </ol>	
<ol style="list-style-type: none"> <li>3. Touch [Yes] to delete the current picture or [No] to cancel the operation and exit; touch [All] to delete all pictures.</li> <li>4. Before all pictures are deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.</li> </ol>	 







### Note

- If a memory card is inserted, you can delete only those pictures stored on the card.
- Pictures on a written-protected memory card cannot be deleted.

## Section 5




# Setting Your Camera

### Setting Menu

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Record Mode, Press  (on-screen icon) to enter record menu screen.</li> <li>2. Touch [Setting] icon on the screen. Submenu of Setting will pop out on the screen.</li> <li>3. The Setting submenu contains 6 options for configuring your camera set up. They are Sound (operation sound), TV, Language, Format, Time Setting, and Default Setting.</li> <li>4. Touch  /  on the screen to change the page.</li> </ol>	

### Sound

Enable or disable KeyPad tone and operation sound.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In Setting submenu, touch [Sound] on the screen.</li> <li>2. Touch  on the screen to choose On or Off.</li> <li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li> </ol>	




## TV

Ensure that the appropriate TV standard of your area is selected – either NTSC or PAL.

Wrong TV system setting may cause image flicker.




**NTSC standard:** USA, Canada, Japan, South Korea and Taiwan etc.

**PAL standard:** UK, Europe, China, Australia, Singapore and Hong Kong etc.

Operation	Display Screen
<ol style="list-style-type: none"><li>1. In Setting submenu, touch [TV] on the screen.</li><li>2. Touch  on the screen to choose NTSC(60Hz) or PAL(50Hz).</li><li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li></ol>	 A screenshot of a camera's settings menu. At the top, there are four icons: a camera, a camera with a flash, a globe, and a wrench. Below these are three menu items: 'Sound' with 'Off' to its right, 'TV' with 'NTSC(60Hz)' to its right, and 'Language' with 'Deutsch' to its right. At the bottom, there are three buttons: 'OK', an exit icon (a square with a right-pointing arrow), and a 'P+' icon.

## Language



Use this option to select the language of user interface which you want.

Operation	Display Screen
<ol style="list-style-type: none"><li>1. In Setting submenu, touch [Language] on the screen.</li><li>2. Touch  on the screen to choose the language options.</li><li>3. Touch OK icon to validate the setting then touch exit icon (  ) to back to Record mode.</li></ol>	 A screenshot of a camera's settings menu, similar to the one above. The 'TV' setting is still 'NTSC(60Hz)', but the 'Language' setting is now 'English'. The 'Sound' setting remains 'Off'. The bottom buttons are 'OK', an exit icon, and 'P+'.

## Format

**Yes:** Format the built-in memory ( When there is no SD card in the camera ) / SD Card (When there is an SD card in the camera).

**No:** Do not format the built-in memory ( When there is no SD card in the camera ) / SD Card (When there is an SD card in the camera).



Operation	Display Screen
1. In Setting submenu, touch [Format] on the screen to go to the format confirmation screen.	
2. Touch [Yes] to execute the operation and [No] to cancel the operation.	



### Note



All the data will be erased if the SD card is formatted. Make sure all the data are backup to PC before formatting SD card.
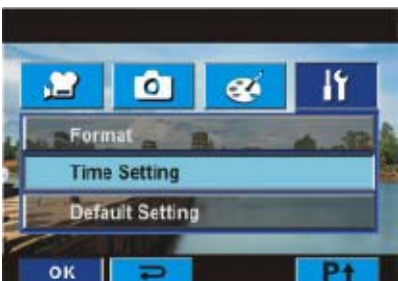
## Time Setting

Operation	Display Screen
1. In Setting submenu, touch [Time Setting] on the screen to go to the Time Setting menu.	
2. Touch Year, Month, Day, Hour, or Minute to be set. 3. Adjust the numeric value by touching ▲/▼ . 4. Touch OK icon to validate the setting then touch exit icon ( ⏪ ) to back to Record mode.	

## Default Setting

To restore the default factory setting, select this option.

Operation	Display Screen
1. In Setting submenu, touch [Default Setting] on the screen to go to the Default Setting confirmation screen.	
2. Touch [Yes] to execute the operation and [No] to cancel the operation.	

The following table indicates the camera's default setting


Setting	Default Factory Setting
<b>Resolution</b>	HD (1080p) for Movie Standard for Picture
<b>Stabilization</b>	Off
<b>Motion Detect</b>	Off
<b>Macro Mode</b>	Normal
<b>Scene</b>	Auto
<b>WB (White Balance)</b>	Auto
<b>ISO</b>	Auto
<b>Sound</b>	On
<b>TV</b>	Depends on shipping area
<b>Language</b>	Depends on shipping area
<b>Volume</b>	Level 7
<b>Light</b>	Off
<b>Self-timer</b>	Off

## Section 6

# Viewing Pictures and Movies on a TV

### Connecting to a High-Definition 16:9(Wide) TV

1. Connect one end of the HDMI cable to your camera's HDMI out port.
2. Connect the other end of the cable to a television.
3. Set video input source of a TV to "HDMI" option.
4. Use buttons/keys to view stored pictures and movie on a TV.
  1. Use Right/Left Keys to go to the next or last movie/picture.
  2. Press Movie Shutter Button to play movies and press it again to pause.
  3. While playing movies, press Right/Left Keys to fast forward/rewind, then release the key to stop.
  4. Use Up/Down Keys to adjust volume.
  5. In Picture Playback mode, use Tele Button to magnify the picture. To navigate the magnified picture, use Five-way keys to navigate the magnified picture. Press Set Key to exit navigation mode.

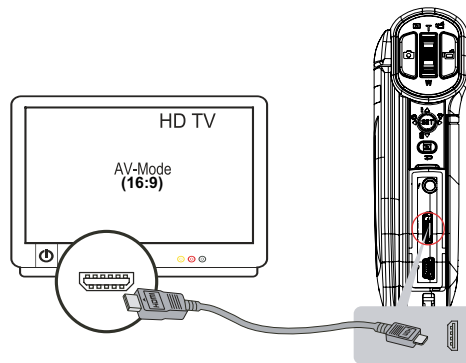


#### Note

The camera can not run movie recording and picture taking when it is connected to an HDTV. The LCD Panel does not display when the camera is connected to an HDTV.

### Connecting to a non-high-definition 4:3 TV

1. Connect one end of the AV cable to your camera's AV out port.
2. Connect the other end of the cable to a television.
3. Use buttons/keys to view stored pictures and movie on a TV.

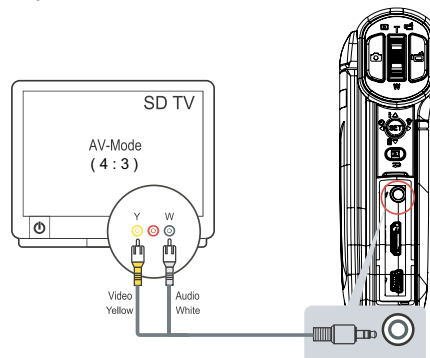

#### Note

The LCD Panel does not display when the camera is connected to a TV.

## Section 7

# Viewing Movie & Picture on PC

### Installing Bundled Software

The CD-ROM supplied with this camera contains 2 pieces of software.

- **ArcSoft MediaImpression** is a user-friendly application that helps you managing your media, burning your video into DVD, and uploading your videos to YouTube easily.
- **Adobe Reader** is a popular program that you need to have installed to read the User's Manual. Many computer users will find they already have this software installed on their computer.

To install the bundled software:

1. Insert the CD-ROM into your computer's CD-ROM drive. The autorun screen appears.
2. Click "**Install ArcSoft MediaImpression**". Follow the on-screen instructions to complete the installation.



#### **Note**

*The detailed information can be found in online help of all the bundled software.*

### Transferring Pictures or Movies to a Computer

You can transfer pictures or movies stored on your camera to a computer and send them in emails to friends or post them on websites.

To do this you should:

1. Connect the computer and camera with the supplied mini USB 2.0 cable. The LED will light up and blink.
2. After the LED stops blinking, movies and picture(s) can be found on your computer at "My Computer\Removable Disk\DCIM\100MEDIA".
3. Under this folder, you can view, delete, move, or copy any movie/picture you want.
4. Use the bundled ArcSoft application software to edit the movies or pictures.

## Section 8

# Burning the Recorded Clip into DVD

Bundled software CD contains ArcSoft MediaImpression features burning the movie clip into DVD. You can share this DVD movie with family and friends by using regular DVD player.

To create a DVD:


1. Install ArcSoft MediaImpression (Refer to Section 7).
2. Click Windows [ Start ] → [ (All) Programs ] → [ ArcSoft MediaImpression ].
3. ArcSoft MediaImpression main Screen will appear on your desktop.
4. Click [ Make Movie ] .





5. The operation screen will appear:

- Select the folder that contains the video files you want to burn.
- Select the file(s).
- Click button to add the files into slide.
- Click [Burn to Disc].

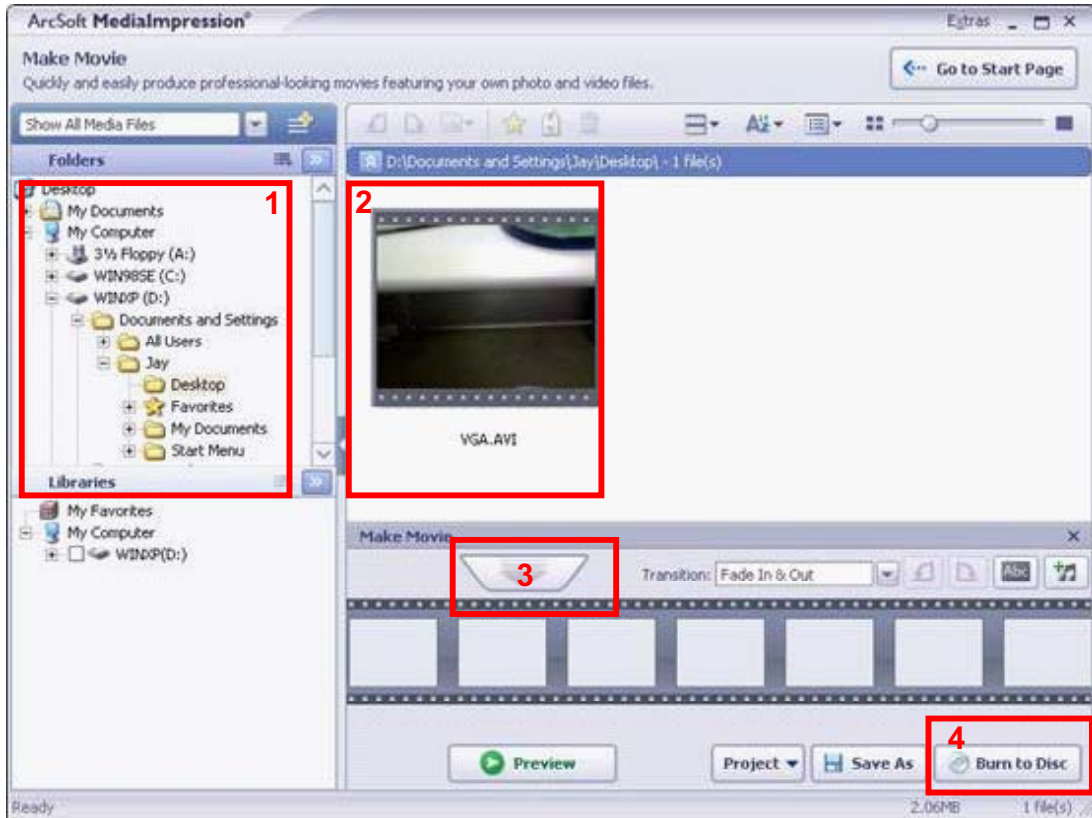

6. Click [ Start ] to start DVD burning.




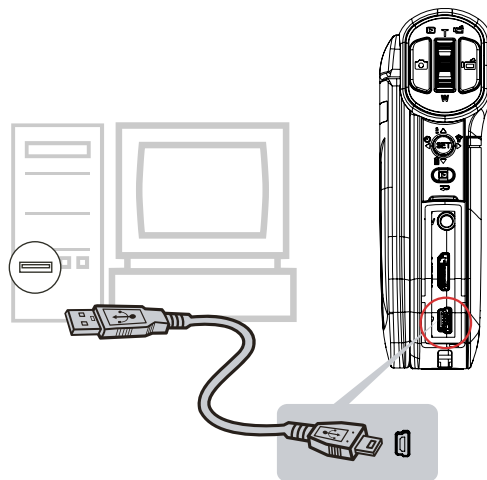
## Section 9

# Uploading Video Files to YouTube

The built-in **YouTube Direct** application offers you an easy way to upload your video clips to YouTube instantly. It helps you share them with your family and friends on YouTube website.

To upload video files to YouTube:

1. Select the video clips in Movie Playback Mode by pressing SET Key .
2. Connect the camera and computer with the supplied USB cable.



3. After making a USB connection, the auto-run screen will appear. Click [YouTube Direct]→ [OK] as the main screen appears automatically on the desktop.



### Note

If the auto-run screen does not appear. Click [My Computer]→[DV(X:)]→[dvap.exe] to execute the application.

- Preview the video: double click on the video clip in thumbnail screen. Click Play/Pause icon to play/pause. Click Return icon to back to thumbnail preview screen.



#### 5. Upload video clip

- Upload single video clip or selected video clips: In thumbnail screen, click up/down icon to change the pages. Click on the video clip you want to upload (+ Ctrl Button to select two or more video clips), and then click [Upload selected videos to youtube] icon.



- Upload the video clips which are selected in the camera earlier: Click [Upload DV-selected videos to youtube] icon.




6. Fill in the information in the blanks.

The screenshot shows the 'YouTube Link' application window. It is divided into three main sections: 'User Info', 'Upload Info', and 'File Info'. The 'User Info' section has input fields for 'User Name' (containing 'test1') and 'Password' (containing '\*\*\*\*\*'), with 'SignUp' and 'Save User Info.' buttons to the right. The 'Upload Info' section shows 'Total-Upload: 1/1', a dropdown menu with 'IMAG0004.AVI', and a thumbnail image of a flower. The 'File Info' section includes fields for 'Title' (IMAG0004.AVI), 'Description' (20090123 21:06:01), 'tags' (MyDV), 'Video Category' (Autos & Vehicles), and 'Broadcast Option' (Public selected). At the bottom, there are 'Upload Videos...' and 'Exit' buttons, and a note: 'click "Upload Videos..." to start upload file'.

7. If you do not have a YouTube account, click [SignUp] to register a new YouTube account firstly. Then, the YouTube sign-up screen will appear. Please follow the instruction on YouTube website. If you want to save the user's name and password, click [Save User Info].


This screenshot is identical to the previous one, but with two red boxes highlighting specific elements. One red box highlights the 'SignUp' and 'Save User Info.' buttons in the 'User Info' section. Another red box highlights the 'Upload Videos...' button at the bottom of the window.

8. Click [Upload Videos] to upload the video(s).

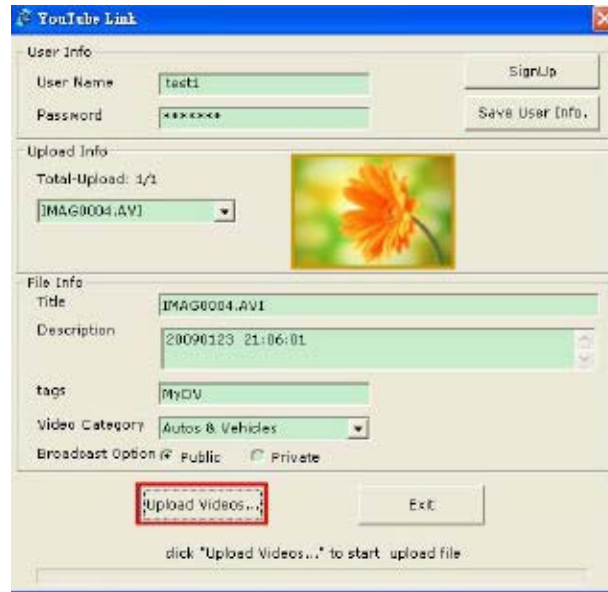

The screenshot shows a window titled "YouTube Link" with the following sections:

- User Info:** Includes fields for "User Name" (containing "test1") and "Password" (containing "xxxxxx"). There are "SignUp" and "Save User Info." buttons.
- Upload Info:** Shows "Total Upload: 1/1" and a dropdown menu with "[MAG004.AVI]". A small image of a yellow flower is displayed to the right.
- File Info:** Includes fields for "Title" (containing "IMAG0004.AVI"), "Description" (containing "20090123 21:06:01"), "tags" (containing "MyDV"), and "Video Category" (containing "Autos & Vehicles"). There are radio buttons for "Broadcast Option" with "Public" selected and "Private" unselected.
- Buttons:** "Upload Videos..." (highlighted with a red dashed box) and "Exit".
- Footer:** A note that says "click 'Upload Videos...' to start upload file."

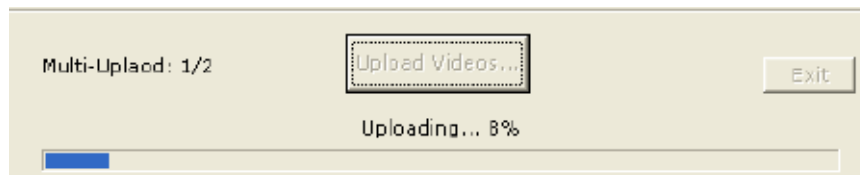

This screenshot shows the bottom portion of the application window during an upload process:

- Text on the left: "Multi-Upload: 1/2"
- Text in the center: "Uploading... 8%"
- A progress bar below the text, with a small blue segment on the left.
- Buttons: "Upload Videos..." (highlighted with a dashed box) and "Exit".

## Section 10

# Specifications and System Requirements

Specification	
Image sensor	5 Mega pixel CMOS sensor
Operation modes	Movie record, Picture record
Lens	F3.5 - 3.7 (f = 6.8 - 34 mm)
Focus range	10cm~infinite (Normal mode) 1cm~80cm (Macro mode)
Zoom	HD(1080p):1X~5X (5X Optical zoom and 1X Digital zoom) Other video resolution:1X~20X (5X Optical zoom and 4X Digital zoom)
Shutter	Electronic
LCD monitor	3" touch LCD
Storage media	Built-in 128MB memory (partial memory is used for firmware code); SD/SDHC card slot support (up to 32GB)
Image resolution	High 4000x3000 (12M pixels) Std 2592x1944 (5M pixels) Low 2048x1536 (3M pixels)
Movie resolution	HD(1080p) 1920X1080(30fps) HD(720p) 1280X720(30fps) WVGA 848X480(60fps) VGA 640X480(30fps) QVGA 320X240(30fps)
White balance	Auto/Manual (Daylight, Fluorescent, Tungsten)
ISO	Auto/800/1600
Self-timer	10 seconds delay
Light	Digital Light On/ Light On/Off
File format	Picture: JPG Movie: AVI
Image play	Single image/Slideshow
PC interface	Mini USB 2.0 port
TV out	NTSC/PAL selectable, HDMI
Battery	Lithium-ion rechargeable battery
Dimension	109(H) * 80(W) * 28(D) mm
Weight	136 g (without battery)

## System requirements

- Microsoft Windows 2000/XP/Vista/7
- Intel Pentium III 800MHz or above
- 256 MB RAM
- CD-ROM Drive
- 700 MB free HDD space
- Available USB port
- 16-bit Color Display



### **Note**

*The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.*

# Section 11

## Troubleshooting

### Troubleshooting

**1. If the LCD image is not clear when shooting, how can the focus be adjusted?**

Try to switch between Macro and Normal Mode. (Macro Mode: For object in distance about 1cm to 80cm, Normal Mode: For object in distance beyond 10cm)

**2. The light is not working.**

The battery power is low.

**3. The files on the memory card do not display smoothly when the LCD shows the “!” marking.**

The “!” means the SD card is low speed or having wrong content inside. The way to solve this condition is to format SD card by camera instead of PC (Please refer to the detailed Format instruction in Section 5).

**4. Why do some of my indoor pictures look blurry and dark?**

Camera extends pictures exposure time under low light/ indoor condition. Keep camera (and photographed subject) steady for several seconds when taking pictures. Shutter will sound when picture has been taken.

**5. How do I charge battery?**

You must use the supplied AC charger or USB cable.

Camera must be turned OFF; blinking light confirms charging, but light is constant when charging has been completed.



## Section 12

# Additional Information


### Regulatory Information



The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.


We continually strive to improve our products; specifications may change with out prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment. Hitachi cannot compensate for any damages caused when recording is not made normally or recorded contents cannot be played back because of a defect in the digital camera device or memory card. Hitachi cannot be responsible for your recorded video and audio. If you or a third party make a mistake when handling this digital camera device or memory card, etc., the recorded contents may be lost. Hitachi cannot be responsible for compensation for damage due to loss of recorded contents.

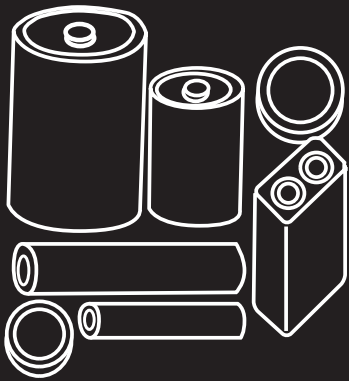


# BATTERY SAFETY GUIDELINES

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused — resulting in leakage or, in extreme cases, fire or explosion.

Here are some simple guidelines to safe battery use designed to eliminate any such problems.

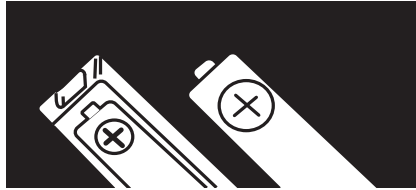

Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.

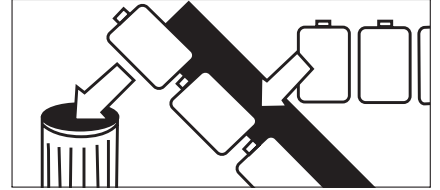


Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.



Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.




Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.

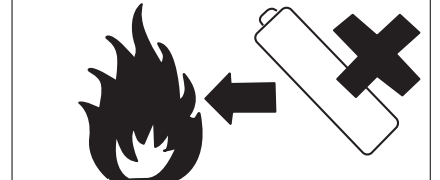


Never dispose of batteries in fire as this can cause them to explode. Please put dead batteries in with the normal household waste.




Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.

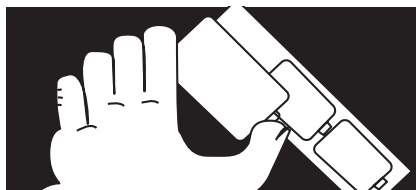


Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.

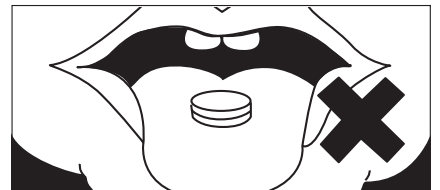


Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

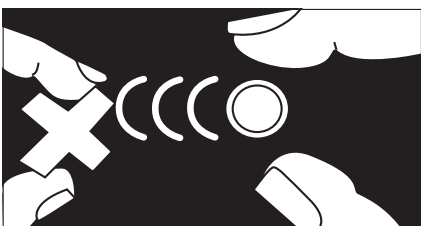

Keep loose button cells away from young children.

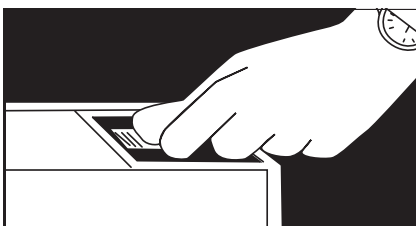

Make sure battery compartments are secure.

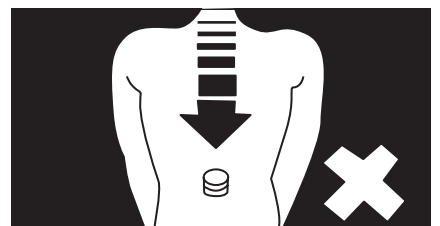

Seek medical advice if you believe a cell has been swallowed.

**ARGOS**  
**Product Guarantee**

This product is guaranteed against manufacturing defects for a period  
of  
1 Year

This does not cover the product where the fault is due to misuse,  
abuse, use in contravention of the instructions, or where the product  
has been the subject of unauthorised modifications or alterations, or  
has been the subject of commercial use

In the event of a problem with the product within the guarantee period  
please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time  
of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Home Retail Group  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW