


HITACHI

Model

C 10FR

Jobsite Table Saw

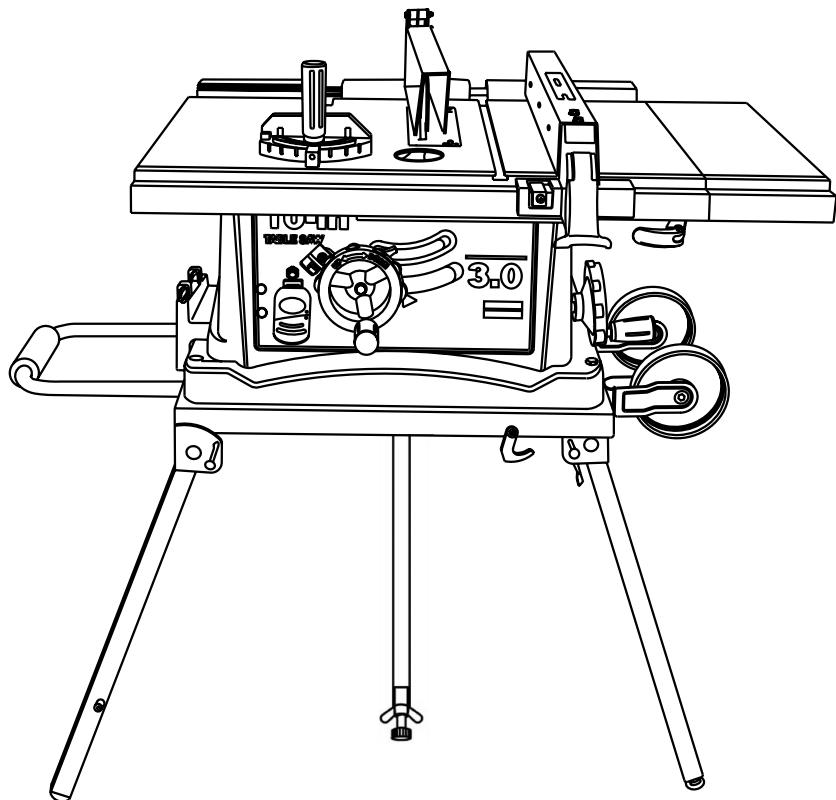

INSTRUCTION MANUAL AND SAFETY INSTRUCTIONS

⚠ WARNING

Improper and unsafe use of this power tool can result in death or serious bodily injury!
This manual contains important information about product safety. Please read and understand
this manual before operating the power tool. Please keep this manual available for others before
they use the power tool.

Hitachi Koki

CONTENTS

SECTION	PAGE	SECTION	PAGE
Product Specifications	3	Know Your Table Saw	9
Power Tool Safety	4	Assembly and Adjustments	10
Table Saw Safety	5	Operation	17
Electrical Requirements and Safety	6	Maintenance	21
Accessories and Attachments	7	Troubleshooting Guide	22
Tools Needed For Assembly	7	Push Stick Pattern	23
Carton Contents	7	Parts List	24

HITACHI AUTHORIZED SERVICE CENTERS

Service under this warranty is available from Hitachi Koki U.S.A., Ltd. at :

IN THE U.S.A.

3950 Steve Reynolds Blvd. Norcross, GA 30093

9409 Owensmouth Ave. Chatsworth, CA 91311

OR CALL: (800) 546-1666 for a service center nearest you. OR CALL: (800) 970-2299 for a service center nearest you.

IN CANADA

6395 Kestrel Road Mississauga, ON L5T 1Z5

⚠ WARNING

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as dust masks that are specially designed to filter out microscopic particles.

PRODUCT SPECIFICATIONS

MOTOR

HP (Maximum developed)	3.0
Type	Universal
Amps	15
Voltage	120
Hz	60
RPM (no load)	5000
Overload Protection	YES

SAW

Table Size	26-1/16" x 19-21/64"
Table Extensions	2- Right, Rear
Extension Fence Capacity	24" Right
Blade Size	10"
Rip Scale	YES
Rip Fence	YES
Miter Gauge	YES
Maximum Cut Depth @ 90°	3-1/8"
Maximum Cut Depth @ 45°	2-1/2"
Net Weight	64.5 LBS

⚠ WARNING

To avoid electrical hazards, fire hazards or damage to the table saw, use proper circuit protection.

This table saw is wired at the factory for 110-120 Volt operation. It must be connected to a 110-120 Volt / 15 Ampere time delay fuse or circuit breaker. To avoid shock or fire, replace power cord immediately if it is worn, cut or damaged in any way.

Before using your table saw, it is critical that you read and understand these safety rules. Failure to follow these rules could result in serious injury to you or damage to the table saw.

POWER TOOL SAFETY

⚠ WARNING

Before using your table saw, it is critical that you read and understand these safety rules. Failure to follow these rules could result in serious injury or damage to the table saw.

Good safety practices are a combination of common sense, staying alert and understanding how to use your power tool. To avoid mistakes that could cause serious injury, do not plug in your power tool until you have read and understood the following safety rules:

1. **READ** and become familiar with this entire Operator's Manual. **LEARN** the tool's applications, limitations and possible hazards.

2. ⚠ WARNING

Look for this symbol that identifies important safety precautions. It means CAUTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

3. **NEVER OPERATE THIS MACHINE WITHOUT THE SAFETY GUARD IN PLACE FOR ALL THROUGH SAWING OPERATIONS.**

4. **DO NOT USE IN A DANGEROUS ENVIRONMENT** such as damp or wet locations or exposure to rain. Keep work area well lighted.

5. **DO NOT** use power tools in the presence of flammable liquids or gases.

6. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.

7. **KEEP CHILDREN AWAY.** All visitors should be kept at a safe distance from the work area.

8. **DO NOT FORCE THE TOOL.** It will do the job better and safer at the rate for which it was designed.

9. **USE THE RIGHT TOOL.** Don't force the tool or attachment to do a job for which it is not designed.

10. **WEAR PROPER APPAREL.** DO NOT wear loose clothing, gloves, neckties, rings, bracelets or other jewelry that may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.

11. **WEAR A FACE MASK OR DUST MASK.** Sawing, cutting and sanding operations produce dust.

12. **DISCONNECT TOOLS** before servicing and when changing accessories such as blades, cutters, etc.

13. **REDUCE THE RISK OF UNINTENTIONAL STARTING.** Make sure the switch is in the OFF position before plugging into the power supply.

14. **USE ONLY RECOMMENDED ACCESSORIES.** Consult the Operator's Manual for recommended accessories. The use of improper accessories may cause injury to you or damage to the tool.

15. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning ON.

16. **NEVER LEAVE TOOL RUNNING UNATTENDED.** TURN THE POWER "OFF". Do not leave the tool before it comes to a complete stop.

17. **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.

18. **DO NOT OVERREACH.** Keep proper footing and balance at all times.

19. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for most efficient and safest performance. Follow instructions for lubricating and changing accessories.

20. **CHECK FOR DAMAGED OR LOOSE PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, loose mounting and any other conditions that may affect its safe operation. A guard or other part that is loose or damaged should be properly adjusted, repaired or replaced.

21. **MAKE WORKSHOP CHILD PROOF** with padlocks, master switches or by removing starter keys.

22. **DO NOT** operate the tool if you are under the influence of any drugs, alcohol or medication that could impair your ability to use the tool safely.

23. **USE DUST COLLECTION SYSTEM** wherever possible. Dust generated from certain materials can be hazardous to your health and in some cases, a fire hazard. Always operate the power tool in a well-ventilated area with adequate dust removal.

24. **ALWAYS WEAR EYE PROTECTION.** Any power tool can throw foreign objects into your eyes that could cause permanent eye damage. **ALWAYS** wear safety goggles (not glasses) that comply with ANSI safety standard Z87.1. Everyday glasses have only impact resistant lenses. They **ARE NOT** safety glasses.

NOTE: Glasses or goggles not in compliance with ANSI Z87.1 could cause serious injury when they break.

25. **DIRECTION OF FEED.** Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.

TABLE SAW SAFETY

1. **ALWAYS USE SAW BLADE GUARD**, splitter and anti-kickback pawls for every operation for which they can be used, including through sawing. Through sawing operations are those in which the blade cuts completely through the workpiece when ripping or crosscutting.
2. **ALWAYS HOLD WORK FIRMLY** against the miter gauge or rip fence.
3. **USE A PUSH STICK** when required. Always use a push stick especially when ripping narrow stock. Refer to ripping instructions in this Operator's Manual where the push stick is covered in detail. A pattern for making your own push stick is included on page 23.
4. **NEVER PERFORM ANY OPERATION FREE HAND, which means using only your hands to support or guide the workpiece. Always use either the fence or the miter gauge to position and guide the work.**
WARNING: FREEHAND CUTTING IS THE MAJOR CAUSE OF KICK-BACK & FINGER/HAND AMPUTATIONS.
5. **NEVER STAND** or have any part of your body in line with the path of the saw blade. Keep your hands out of the saw blade path.
6. **NEVER REACH** behind or over the cutting tool for any reason.
7. **REMOVE** the rip fence when crosscutting.
8. **DO NOT USE** a molding head with this saw.
9. **FEED WORK INTO THE BLADE** against the direction of rotation only.
10. **NEVER** use the rip fence as a cut-off gauge when crosscutting.
11. **NEVER ATTEMPT TO FREE A STALLED SAW BLADE** without first turning the saw OFF. Turn power switch OFF immediately to prevent motor damage.
12. **PROVIDE ADEQUATE SUPPORT** to the rear and the sides of the saw table for long or wide workpieces.
13. **AVOID KICKBACKS** (work thrown back towards you) by keeping the blade sharp, the rip fence parallel to the saw blade and by keeping the splitter, anti-kickback pawls and guards in place, aligned and functioning. Do not release work before it has passed all the way past the saw blade. Do not rip work that is twisted, warped or does not have a straight edge to guide it along the fence.
14. **AVOID AWKWARD OPERATIONS** and hand positions where a sudden slip could cause your hand to move into the saw blade.
15. **NEVER USE SOLVENTS** to clean plastic parts. Solvents could possibly dissolve or otherwise damage the material. Only a soft damp cloth should be used to clean plastic parts.
16. **MOUNT** your table saw on a bench or stand before performing any cutting operations. Refer to **ASSEMBLY AND ADJUSTMENTS** on page 10.
17. **NEVER CUT METALS** or materials which may make hazardous dust.
18. **ALWAYS USE IN WELL-VENTILATED AREA.** Remove sawdust frequently. Clean out sawdust from the interior of the saw to prevent a potential fire hazard. Attach a vacuum to the dust port for additional sawdust removal.
19. **NEVER LEAVE THE SAW RUNNING UNATTENDED.** Do not leave the saw until it comes to a complete stop.
20. For proper operation follow the instructions in this Operator's Manual entitled **ASSEMBLY AND ADJUSTMENTS** (Page 10). Failure to provide sawdust fall-through and removal hole will allow sawdust to build up in the motor area resulting in a fire hazard and potential motor damage.

ELECTRICAL REQUIREMENTS AND SAFETY

POWER SUPPLY REQUIREMENTS

⚠ WARNING

To avoid electrical hazards, fire hazards or damage to the table saw, use proper circuit protection. Always use a separate electrical circuit for your tools. This power tool is wired at the factory for 120V operation. Connect it to a 120V, 15 Amp circuit and use a 15 Amp time delay fuse or circuit breaker. To avoid shock or fire, replace the cord immediately if it is worn, cut or damaged in any way.

EXTENSION REQUIREMENTS

⚠ WARNING

Any extension cord must be GROUNDED for safe operation.

MINIMUM GAUGE FOR EXTENSION CORDS (AWG type / 120 Volt only)					
Ampere Rating		Total length in feet			
More Than	Not More Than	25'	50'	100'	150'
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Applicable	

GUIDELINES FOR EXTENSION CORDS

Any extension cord used for power tools MUST be grounded (3-wire with two flat prongs and one round ground prong).

Make sure the extension cord is in good condition. When using an extension cord, make sure you use one heavy enough to carry the current the tool will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The table above shows the correct size to use according to extension cord length and nameplate ampere rating. If in doubt, use the next heavier gauge cord. The smaller the gauge number the heavier the cord.

NOTE: The 12 to 16 Amp rating is correct for this tool. It is highlighted in the table above.

Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified person before using it. Protect your extension cords from sharp objects, excessive heat and damp or wet areas.

Before connecting the saw to the extension cord, make sure the saw switch is turned OFF.

GROUNDING INSTRUCTIONS



IN THE EVENT OF A MALFUNCTION OR BREAKDOWN, grounding provides a path of least resistance for electric current and reduces the risk of electric shock. This saw is equipped with an electric cord that has an equipment grounding conductor and a grounding plug. The plug MUST be plugged into a matching receptacle that is properly installed and grounded in accordance with ALL local codes and ordinances.

DO NOT MODIFY THE PLUG PROVIDED. If it will not fit the receptacle, have the proper receptacle installed by a qualified electrician.

IMPROPER CONNECTION of the equipment grounding conductor can result in risk of electric shock. The conductor (wire) with the green insulation (with or without yellow stripes) is the equipment grounding conductor. If repair or replacement of the electric cord or plug is necessary, DO NOT connect the equipment grounding conductor to a live terminal.

CHECK with a qualified electrician or service personnel if you do not completely understand the grounding instructions, or if you are not sure the saw is properly grounded.

Use only 3-wire extension cords that have 3-prong grounding plugs and 3-pole grounding receptacles that accept the saw's plug. Repair or replace damaged or worn cords immediately.

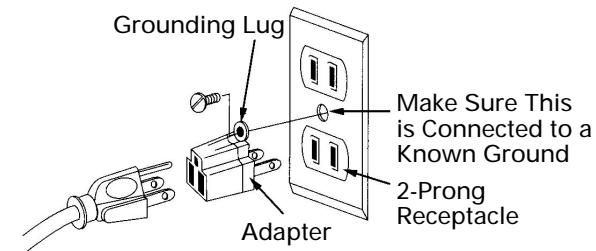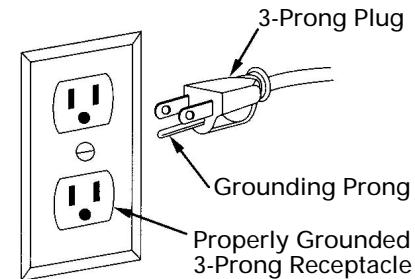

ACCESSORIES AND ATTACHMENTS

RECOMMENDED ACCESSORIES

⚠ WARNING

Visit your Hardware Department or see the Power and Hand Tools Catalog to purchase recommended accessories for this power tool

 
⚠ WARNING

To avoid the risk of personal injury:


- Do not use adjustable (wobble) type dadoes or carbide tipped dado blades; maximum dado width is 1/2" .
- Do not use a dado with a diameter larger than 6" .
- Do not use molding head set with this saw.
- Do not modify this power tool or use accessories not recommended by Store.

TOOLS NEEDED FOR ASSEMBLY


TOOLS NEEDED



Medium screwdriver

 

#2 Philips screwdriver

 

Straight edge



Adjustable wrench



Combination square

CARTON CONTENTS

UNPACKING AND CHECKING CONTENTS

Separate all parts from packing materials. Check each part with the illustration on the next page and the "Table of Loose Parts" to make certain all items are accounted for, before discarding any packing material.

⚠ WARNING

If any part is missing or damaged, do not attempt to assemble the table saw, plug in the power cord, or turn the switch ON until the missing or damaged part is obtained and is installed correctly.

TABLE OF LOOSE PARTS


ITEM	DESCRIPTION	QUANTITY
A.	Table saw assembly	1
B.	Blade	1
C.	Blade wrenches	2
D.	Miter gauge	1
E.	Hex key	1
F.	Bolt, flat washer, toothed washer, Oval washer, spring washer	1 each
G.	Blade guard and splitter	1
H.	Rip fence	1
I.	Rear table extension	1
J.	Rear table extension tube	2
K.	Location seat	4
L.	Dome nuts	2
M.	Hand wheels	2
N.	Table extension	1
O.	Dust collect elbow	1
P.	Parallel washer hardware	1 each

STAND:

Q.	Stand assembly	1
R.	Hex. head bolts	4
S.	Flat washers	4
T.	Roller wheels	2
U.	Square neck bolts	2
V.	Nuts	2
W.	Support rod	1
X.	Batteries	2


NOTE: To make assembly easier, keep contents of box together. Apply a coat of automobile wax to the table. Wipe all parts thoroughly with a clean dry cloth. This will reduce friction when pushing the workpiece. To avoid injury, the styrofoam block should be removed between the motor and the table.

UNPACKING YOUR TABLE SAW

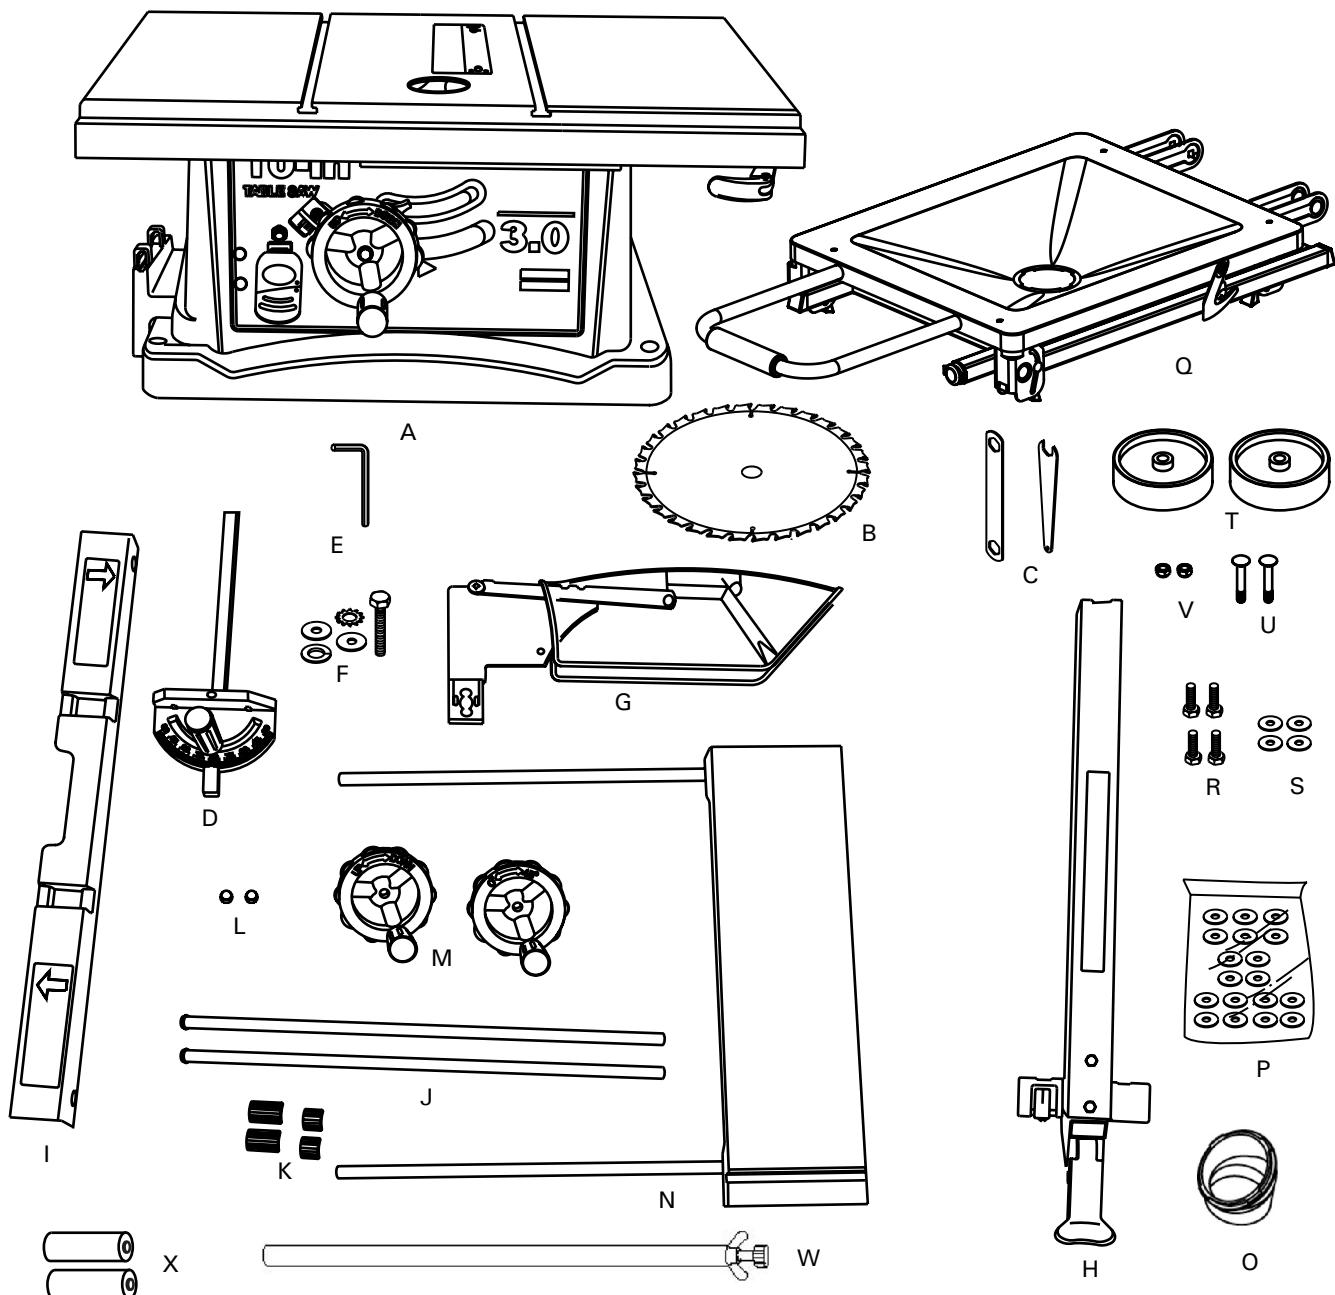


KNOW YOUR TABLE SAW

The Front of Table Saw

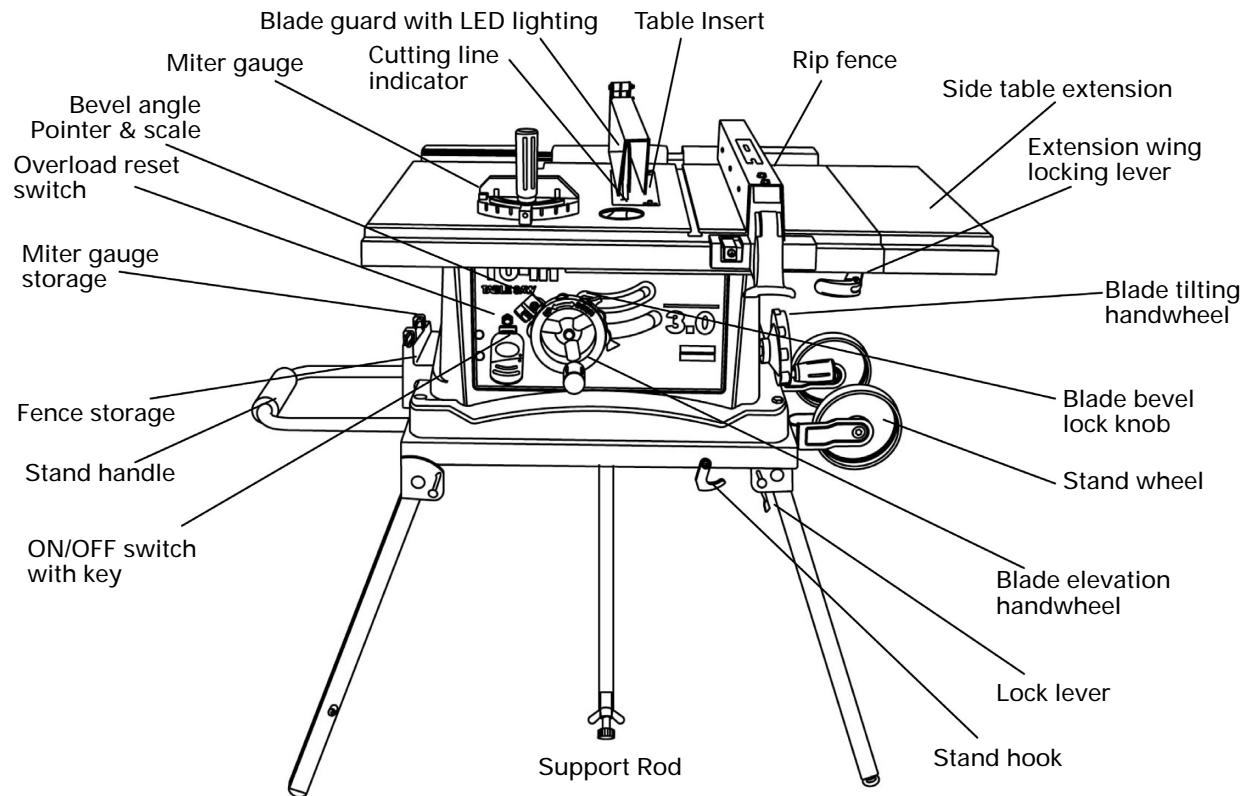

The Rear of Table Saw

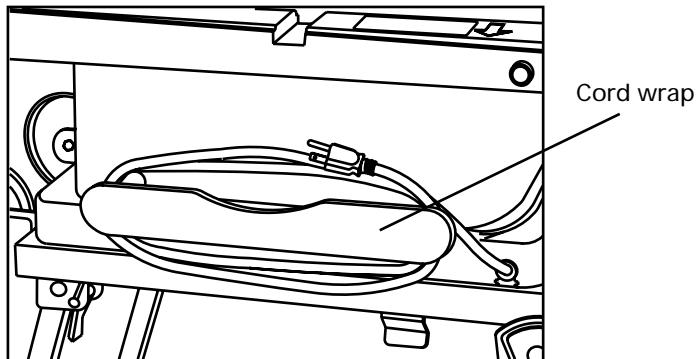

ASSEMBLY AND ADJUSTMENTS


ESTIMATED ASSEMBLY TIME 25~40 MINUTES

FOLDING THE STAND (Fig. A-1)

1. Release the stand hook (1).
2. Unfold the wider leg set (2). Pull the lever (3) downward and push it to lock in place. Then, put down the wider leg set on the ground.
3. Lift the stand up and unfold the narrower leg set (4).
4. Pull the lever downward and push it to lock in place.

NOTE: Make sure the stand is locked securely.

Fig. A-1

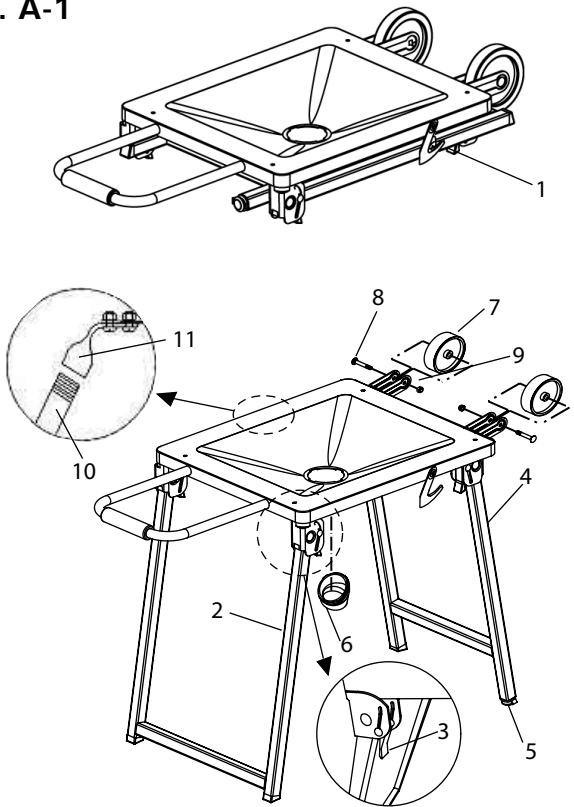

ASSEMBLING THE ROLLER WHEEL (Fig. A-1)

Attach the roller wheel (7) to roller wheel bracket using square neck bolt (8) and nut (9) as shown.

INSTALLING THE DUST COLLECTION ELBOW (Fig. A-1)

1. Align the dent with the slot on the exhaust port. Install the dust collection elbow (6) onto the exhaust port.

NOTE: The elbow can be used to attach either the dust bag or a vacuum hose to remove sawdust from the work area.

ASSEMBLING TABLE SAW TO STAND (Fig. A-1,A-2)


1. Place stand on level surface and adjust front right adjustable stand pad (5) to make stand stable.
2. Place table saw on the top of stand aligning holes in base with holes in stand.
3. Insert four hex. head bolts (6) through flat washer and holes in base and stand.

4. Tighten all four bolts.

NOTE: Do not over tighten bolts holding saw to stand. This will damage the saw base.

5. Carefully set the saw in its upright position on a clean level surface.
6. Thread the support rod (10) into the socket (11) at the rear of stand. Adjust the adjustable foot (12) properly.

Fig. A-2

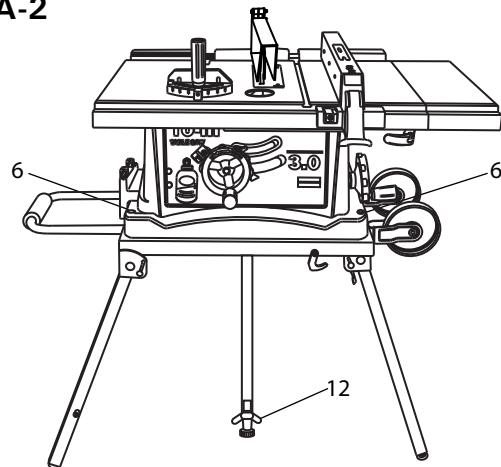


FOLDING THE TABLE SAW/STAND (Fig. A-1, A-3)

1. Release the lever of the narrower leg set and keep the lever on top. Hold the table and lift the saw up just above the ground and fold up the narrower leg set. **NOTE:** The narrow leg set can be held by a "spring clip".
2. Then reposition on the saw onto the ground. Release the lever of the wider leg and keep the lever on top set then fold the leg set up into position.
3. Then fix the legs with stand hook.


SETTING UP THE TABLE SAW/STAND (Fig. A-3)

1. Release the stand hook.
2. Unfold the wider leg set and lock the lever in place.
3. Put down the wider leg set on the ground, lift the saw up and unfold the narrower leg set.
4. Pull the lever downward and lock into place. **NOTE:** Make sure the saw is locked in position securely before operation.

 Fig. A-3



SET-UP

 


SAW MOUNTED TO WORK SURFACE (Fig. B)

1. If the leg set will not be used, the saw must be properly secured to a sturdy workbench using the four mounting holes at the base of the saw.
2. The surface of the table where the saw is to be mounted must have a hole large enough to facilitate sawdust fall-through and removal.
3. Square the saw on the mounting surface and mark the location of the four 3/8" mounting holes (1).
4. Drill 3/8" hole into the mounting surface.
5. Mark an 11" square (2) centered between the four mounting holes (1).
6. Cut out and remove the square.
7. This opening will allow sawdust to fall through the saw base.
8. Place the saw on the work surface, and align the mounting holes of the saw with those drilled through the surface.
9. Fasten the saw to the work surface.

⚠ WARNING

Do not operate this machine on the floor. This is very dangerous and may cause serious injury.

Fig. B

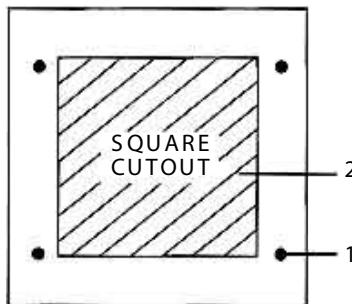

⚠ WARNING

Failure to provide the sawdust fall-through hole will cause sawdust to build up in the motor area, which may result in fire or cause motor damage.

KEEPING THE AREA CLEAN


1. Sawdust and wood chips that fall from under the saw will accumulate on the floor.
2. Make it a practice to pick up and discard this dust when you have completed cutting.

ADJUSTING THE CUTTING LINE INDICATOR (Fig. C)

1. Take off the cover (1) by loosening screws (2).
2. Adjust the pointer (3) to align to the blade.
3. Mount the cover on the table to fix the pointer.

NOTE: The pointer was set up to align to the right side of the blade when packing.


Fig. C

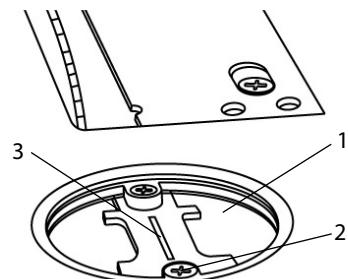

INSTALLING BATTERY FOR LED LIGHTING(Fig. B)

1. Open the cover (1) of battery box on the top of blade guard.
2. Install 2 pieces of 1.5V 3A batteries into the battery box in right direction.
3. Close the cover.
4. Turn on the switch (2) to check the LED lighting.


Fig. D

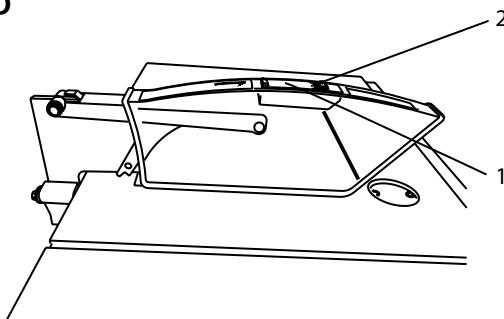

BLADE RAISING HANDWHEEL (Fig. E, F)

1. Attach the handwheel (1) to the elevation screw (2) at the front of the saw. Make sure the slots (3) in the hub of the handwheel engage with the pins (4). (Fig. E)
2. Attach and tighten the dome nut (5) at the end of the shaft (Fig. F).


Fig. E

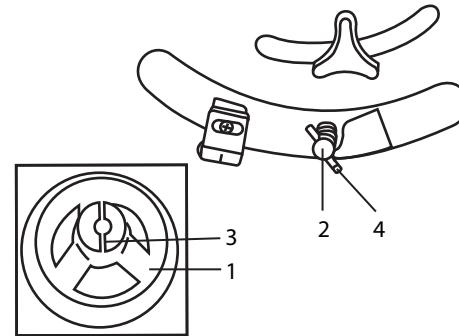

BLADE TILTING HANDWHEEL (Fig. G, F)

1. Attach the other handwheel (6) to the blade tilting screw on the side of the saw in the same manner as above.
2. Attach and tighten the handwheel dome nut (5).


Fig. F

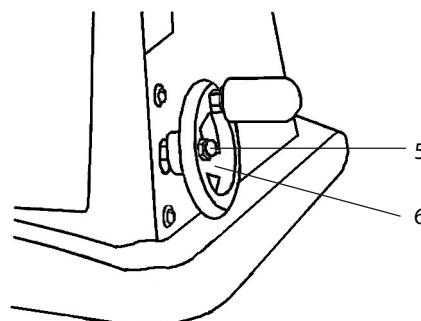

RIP FENCE (Fig. G)

1. Lift upward on the rip fence handle (1) so that the holding clamp (2) is fully extended.
2. Place the rip fence on the saw table and engage the holding clamp (2) to the table rear. Lower the front end onto the front rail (3).
3. Push down on the fence handle (1) to lock.

Fig. G

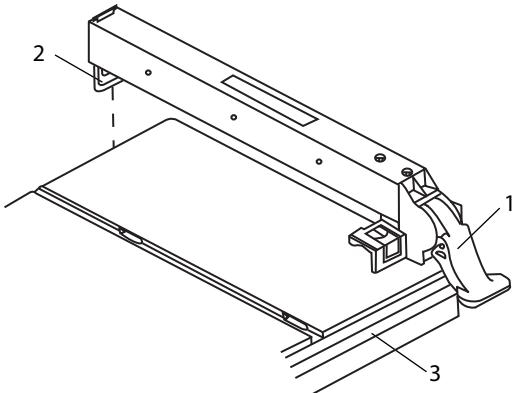


INSTALLING AND CHANGING THE BLADE (Fig. H, I, J)

⚠ WARNING

- To avoid injury from an accidental start, make sure the switch is in the OFF position and the plug is not connected to the power source outlet.
- To avoid serious injury, table insert must be level with the table. If the table insert is not level with the table, adjust the screw (3) until it is level with the table. To raise the insert, turn the screw counterclockwise, to lower the insert, turn the screw clockwise.

1. Remove the table insert (1) by unscrewing the two screws (2, 3). Be careful not to lose the rubber washer that is on the back screw (3) beneath the table insert. (Fig. H)

Fig. H

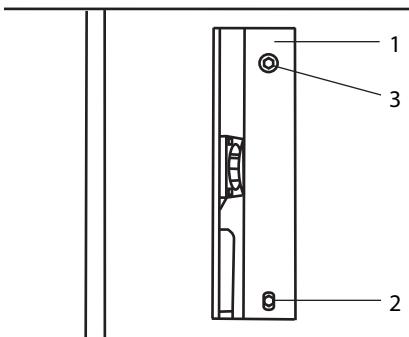


2. Raise the blade arbor (4) (Fig. G) to the maximum height by turning the blade raising handwheel counterclockwise.

3. Place the open-end wrench jaws on the flats of the saw arbor to keep the arbor from turning. (Fig. H) and place the box-end wrench (8) on the arbor nut (5), and turn anti-clockwise.
4. Remove the arbor nut (5) and flange (6), remove blade.
5. Install the saw blade onto the arbor with the blade teeth pointing toward the front of the saw.
6. Install the flange (6) against the blade and thread the arbor nut (5) as far as possible by hand. Ensure that the blade is flush against the inner side of the blade flange.

⚠ WARNING


To avoid possible injury and damage to the workpiece be sure to install the blade with the teeth pointing toward the front of table in the direction of the rotation arrow on the blade guard.

Fig. I

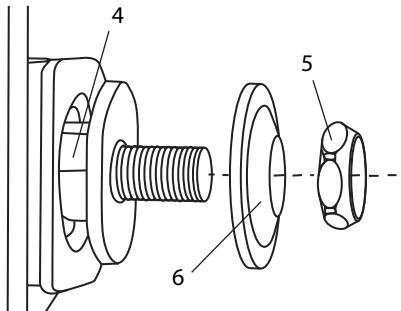

7. To tighten the arbor nut (5) place the open-end wrench jaws on the flats of the saw arbor to keep the arbor from turning. (Fig. J)
8. Place the box-end wrench (8) on the arbor nut (5), and turn clockwise (to the rear of the saw table).
9. Replace the blade insert in the table recess, insert the screws through the front and rear holes and tighten.

Fig. J

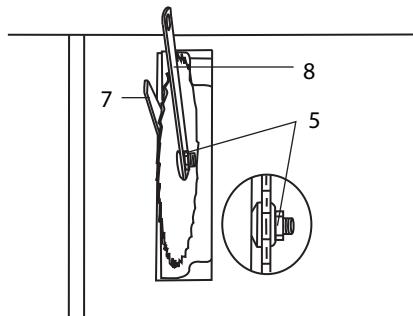


⚠ WARNING

To avoid injury from a thrown workpiece, blade parts, or blade contact, never operate saw without the proper insert in place. Use the saw blade insert when sawing. Use the dado head insert when using a dado.

BLADE GUARD ASSEMBLY (Fig. K, L, M)

1. Set the blade to maximum height and the tilt to zero degrees on the bevel scale with the hand wheels. Lock the blade lock knob.
2. Place the external toothed lock washer (1), a steel flat washer (2) and a spring washer (10) onto the long hex head bolt (3). Insert the bolt into the splitter bracket (4) as shown. (Fig. K)


Fig. K

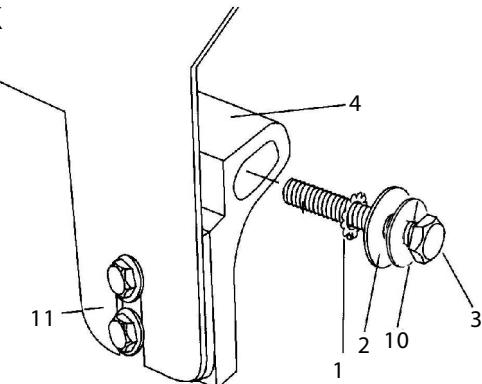

3. Place the oval washer (5) on the pivot rod (6). (Fig. L)
4. Install the bracket assembly (4) at the rear of the saw table and snugly - do not tighten. Thread the bolt (3) into the internally threaded pivot rod.

NOTE: The splitter is removed from the illustration for clarity.

Fig. L

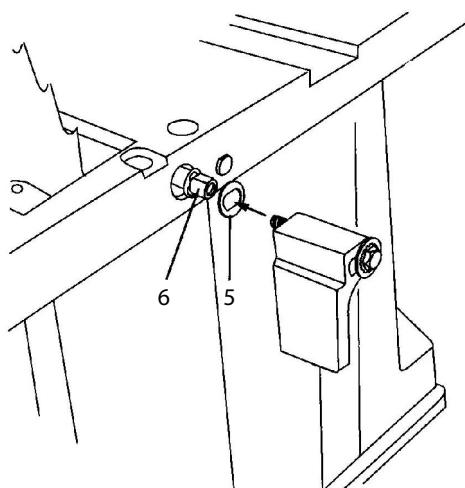


5. Position the blade guard arm (7) to the rear of the table.
6. Using a straight edge, check to see if the blade guard splitter (8) is aligned with the saw blade (9).
7. If straightening adjustment is necessary, loosen the bolt (3) and shift the splitter assembly to right or left, or rotate.
8. When the splitter is properly aligned with the saw blade, tighten the bolt tightly.
9. If height adjustment is necessary, loosen the bolts (11) and raise the splitter assembly to the desired height and tighten the bolts. (Fig. K)
10. **NOTE:** The splitter must always be correctly aligned so that the cut workpiece will pass on either side without binding or twisting to the side.

⚠️ WARNING

Improper splitter alignment can cause "kickback" and serious injury.

Fig. M

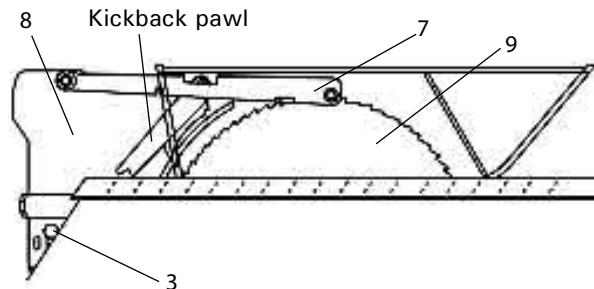

INSTALLING TABLE SIDE EXTENSIONS (Fig. N)


1. Identify the right hand table extension.

NOTES:

For illustration purposes the view in Fig. N looks "through" the saw table to the under side of the table. The right hand table extension is the one with the measuring scale (1) visible from the front of the saw when it is installed to the right hand side of the saw table (Fig. N).

2. Open both front and rear cam locking levers (2) on the right hand side of the saw base by pulling them out from the cam locking assemblies (4).
3. Insert the table extension mounting tubes (3) into the two matching holes in the cam lever assemblies. **NOTE:** Make sure the front mounting tube has the measuring scale visible from the front of the saw.
4. Slide the table extension toward the table until it rests against the saw table.
5. Lock both cam locking levers by pushing them in toward the cam locking lever assemblies.

Fig. N

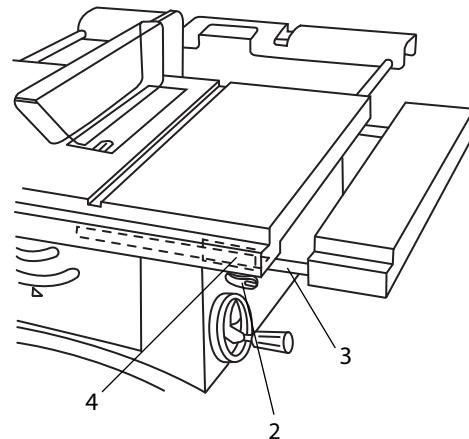

INSTALLING TABLE SIDE EXTENSIONS- cont'd (Fig. O)


- Snap one short location seat (5) over the end of the rear table extension tube (3). Make sure the locating pin (6) in the location seat fits into the matching hole in the extension tube (Fig. O).

NOTES: Install location seat on front table extension tube.

NOTE:

For illustration purposes the view in Fig. O looks "through" the saw table to the under side of the table.


Fig. O

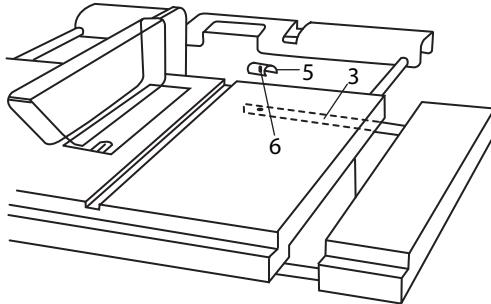

INSTALLING REAR TABLE EXTENSION (Fig. P)

- Place the rear table extension onto the two rear table extension tubes (1).
- Snap two long location seats (4) over the two rear table extension tubes (1). Make sure the locating pin in the location seat fits into the matching hole (5) in the extension tube.
- Insert rear table extension tubes (1) into the two holes in the rear of the saw table (3) and into extension tube brackets under the table.
- Position rear table support so instruction labels are up.
- Snap one short location seat (4) over the end of the left rear table extension tube (1). Make sure the locating pin in the location seat fits into the matching hole in the extension tube.

Fig. P

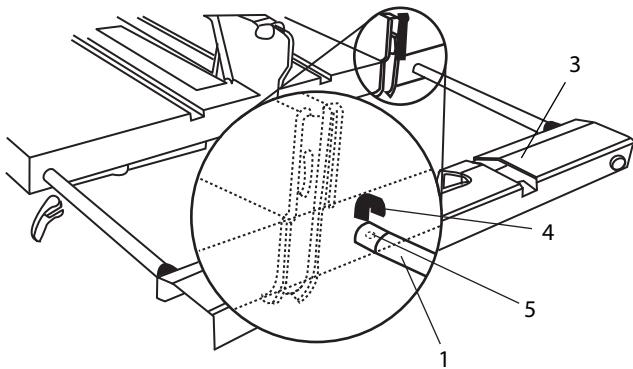

ADJUSTING REAR TABLE EXTENSION

- Rear table extension should be positioned as close as possible to the rear of the table when ripping short work pieces.
- Rear table extension should be pulled out fully until the location seat prevents it from moving outward when ripping long work pieces that require extra support as you are completing the cut.


RIP FENCE ADJUSTMENT (Fig. Q)

- The fence (1) is moved by lifting up on the handle (2) and sliding the fence to the desired location. Pushing down on the handle locks the fence in position.
- Position the fence on the right side of the table, and along one edge of the miter gauge grooves.
- Lock the fence handle. The fence should be parallel with the miter gauge groove.
- If adjustment is needed to make the fence parallel to the groove, do the following:
 - Loosen the two screws (3) and lift up on the handle (2).
 - Hold the fence bracket (4) firmly against the front of the saw table. Move the far end of the fence until it is parallel with the miter gauge groove.
 - Tighten both screws and push the handle to lock.
- If fence is loose when the handle is in the locked (downward) position, do the following:
 - Move the handle (2) upward and turn the adjusting nut (5) clockwise until the rear clamp is snug. Do not turn the adjusting screw more than 1/4 turn at a time.
 - Over-tightening the adjusting screw will cause the fence to come out of alignment.

⚠ WARNING

Failure to properly align fence can cause "kickback" and serious injury.

Fig. Q

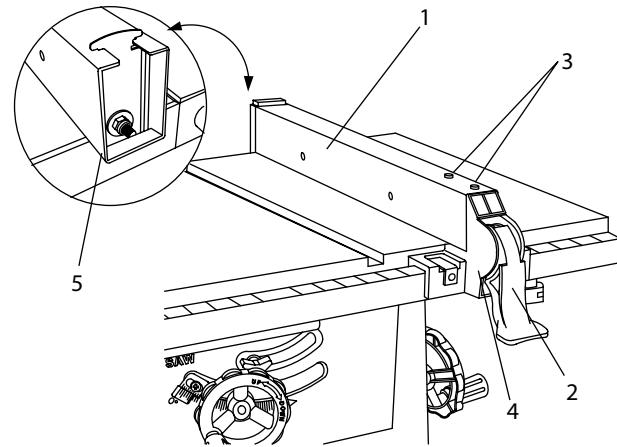

RIP FENCE INDICATOR ADJUSTMENT (Fig. Q)

1. The rip fence indicator (6) points to the measurement scale (8). The scale shows the distance from the side of the fence to nearest side of the blade.
2. Measure the actual distance with a rule. If there is a difference between the measurement and the indicator, adjust the indicator (6).
3. Loosen the screw (7) and slide the indicator to the correct measurement on the scale. Tighten the screw and remeasure with the rule.

⚠️ WARNING

To avoid injury from an accidental start, make sure the switch is in the OFF position and the plug is not connected to the power source outlet.

ADJUSTING THE 90° AND 45° POSITIVE STOPS

(Fig. Q-1, Q-2, Q-3)

Your saw has positive stops that will quickly position the saw blade at 90° to the table. Make adjustments only if necessary.

90° Stop

1. Disconnect the saw from the power source.
2. Turn the blade elevation handwheel and raise the blade to the maximum elevation.
3. Loosen the blade bevel lock handle (2) and move the blade to the maximum vertical position. Tighten the lock handle (2).
4. Place a combination square on the table and against the blade (1) to determine if the blade is 90° to the table. (Fig. Q-2)
5. If the blade is not 90° to the table, loosen the two set screws (4), located on the bottom of the table saw, (Fig. Q-3) with the hex key, and back off the collar.
6. Loosen the bevel lock knob. Turn the blade tilting handwheel to move the blade until it is 90° to the table.
7. Adjust the collar (5) so it contacts the bracket (3) when the blade is 90° to the table. Tighten the two set screws (4).

Fig. Q-1


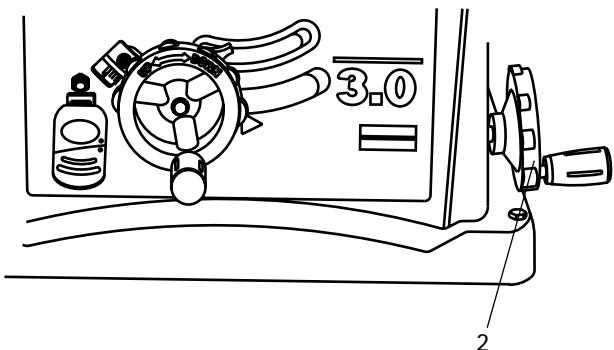


Fig. Q-2

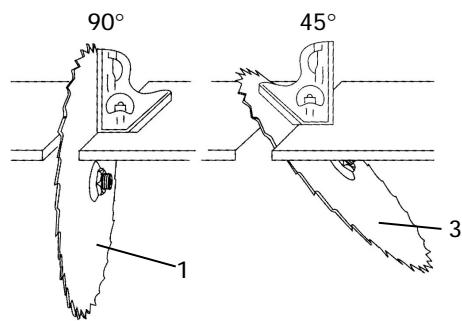

45° Stop


1. With the blade in the upright 90° position, loosen the bevel lock knob and move the blade to the 45° position as far as it will go.
2. Place the combination square on the table as shown in (Fig. Q-2) to check if the blade is 45° to the table.
3. If the blade is not 45° to the table, adjust the screw (4) (Fig. Q-3) with a screw driver until the blade is 45° to the table.
4. Tighten the bevel lock handle.
5. Tighten the screw (4) until resistance is felt. Do not overtighten.

BLADE TILT POINTER

1. When the blade is positioned at 90°, adjust the blade tilt pointer to read 0° on the scale.
2. Loosen the holding screw, position pointer over 0° and tighten the screw.

NOTE: Make a trial cut on scrap wood before making critical cuts. Measure for exactness.

Fig. Q-3

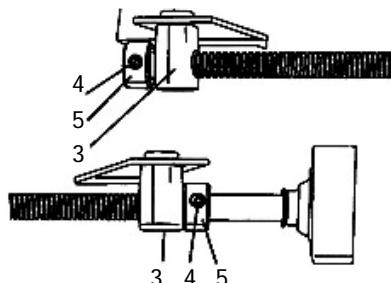

**BLADE PARALLEL TO THE MITER GAUGE GROOVE
(Fig. R, S)**

⚠ WARNING

This adjustment was made at the factory, but it should be rechecked and adjusted if necessary.


⚠ WARNING

To prevent personal injury:

- Always disconnect plug from the power source when making any adjustments.
- This adjustment must be correct or kickback could result in a serious injury and accurate cuts can not be made.

1. Remove the yellow switch key and unplug the saw.
2. Move the blade guard out of the way.
3. Raise the blade to the highest position and set at the 0° angle (90° straight up).
4. Select and mark, with a felt tip marker, a blade tooth having a "right set".
5. Place the combination square base (1) into the right side miter gauge groove (2). (Fig. R)
6. Adjust the rule so it touches the front marked tooth and lock ruler so it holds its position in the square assembly.
7. Rotate the blade bringing the marked tooth to the rear and about 1/2 inch above the blade.
8. Carefully slide the combination square to the rear until the ruler touches the marked tooth.
9. If the ruler touches the marked tooth at the front and rear position, no adjustment is needed at this time. If not, perform adjustment procedure described in next section.

Fig. R

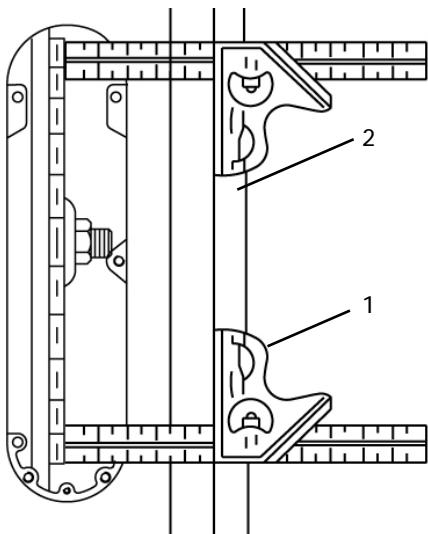

Additional blade adjustments (Fig. S)

The adjusting mechanism is located on top of blade height adjusting hand wheel under the tabletop. If the front and rear measurements are not the same, adjust the alignment by the mechanism as follows:


If the blade is partial to right side:

1. Loosen the two nuts (1) and the right side screw, then adjust the left side screw.
2. Tighten the nuts (1) and the right screw and remeasure, as described in steps 4 to 9 in the prior section.

If the blade is partial to left side:

3. Loosen the two nuts (1) and the left side screw, then adjust the right screw.
4. Tighten the nuts (1) and the left screw and remeasure, as described in steps 4 to 9 in the prior section.
5. Recheck blade clearance making sure that the blade does not hit the table insert or other parts when at the 90° and 45° settings.

Fig. S

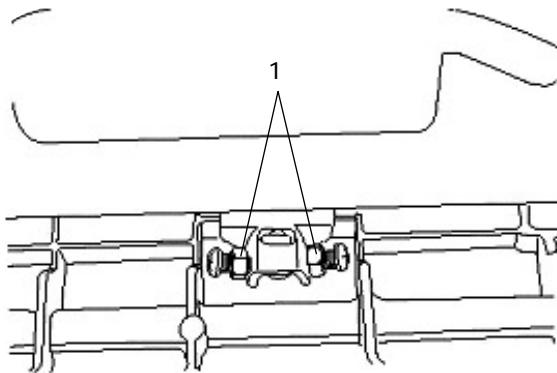


OPERATION

BASIC SAW OPERATIONS

RAISE THE BLADE (Fig. T)

To raise or lower the blade, turn the blade elevation handwheel (1) to the desired blade height, and then tighten lock handle (2) to maintain the desired blade angle.

Fig. T

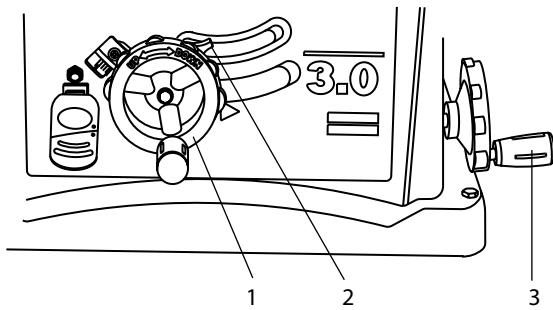

TLTING THE BLADE (Fig. T)


1. To tilt the saw blade for bevel cutting, loosen the lock knob (2) and turn the tilting handwheel (3).
2. Tighten the lock knobs (2) to secure.

ON/OFF SWITCH (Fig. U)

The ON / OFF switch has a removal key. With the key removed from the switch, unauthorized and hazardous use by children and others is minimized.

1. To turn the saw ON, insert key (1) into the slot in the switch (2). Move the switch upward to the ON position.
2. To turn the saw OFF, move the switch downward.
3. To lock the switch in the OFF position, grasp the end (or yellow part) of the switch toggle (1), and pull it out.
4. With the switch key removed, the switch will not operate.
5. If the switch key is removed while the saw is running, it can be turned OFF but cannot be restarted without inserting the switch key (1).

Fig. U

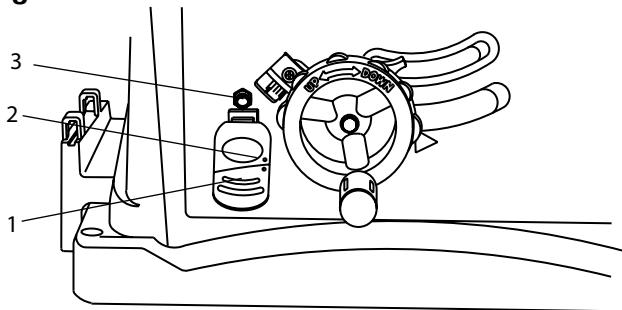

OVERLOAD PROTECTION (Fig. U)

This saw has an overload relay button (3) that resets the motor after it shuts off due to overloading or low voltage. If the motor stops during operation, turn the ON / OFF switch to the OFF position. Wait about five minutes for the motor to cool. Push in on the reset button (3) and turn the switch to the ON position.

⚠ WARNING


To avoid injury, the ON / OFF switch should be in the OFF position and the plug removed from the power source while the cool down takes place, to prevent accidental starting when the reset button is pushed. Overheating may be caused by misaligned parts or a dull blade. Inspect your saw for proper setup before using it again.

USING THE TABLE EXTENSION (Fig. V, V-1)

If the table extension is not parallel with the table. Remove the bolts (1) and position the parallel washers (2) between the table extension and tube until it is parallel with the table, then tighten the bolts.

NOTE: Parallel washer (2) see page 7 for table of loose parts ITEM: Q.


Fig. V

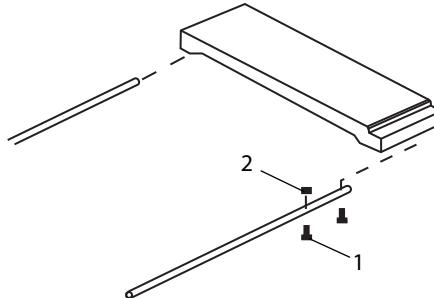

NOTE: Move and lock the fence to the 15" left or right side scale. The fence is now clear of the table.

1. Release the extension lock handles.
2. Slide the extension out until the correct measurement is displayed on the tube scale. The user sights the scale off the edge of the table.
3. Tighten all extension lock handles.

Fig. V-1

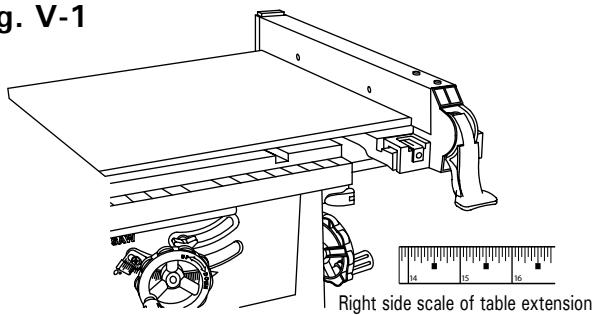

Right side scale of table extension

CUTTING OPERATIONS

There are two basic types of cuts: ripping and crosscutting. Ripping is cutting along the length and the grain of the workpiece. Crosscutting is cutting either across the width or across the grain of the workpiece. Neither ripping nor crosscutting may be done safely freehand. Ripping requires the use of the rip fence, and crosscutting requires the miter gauge.

⚠ WARNING

Before using the saw each and every time, check the following:

1. Blade is tight on the arbor.
2. Bevel angle lock knob is tight.
3. If ripping, fence knob is tight and fence is parallel to the miter gauge grooves.
4. Blade guard is in place and working properly.
5. Safety glasses are being worn.

The failure to adhere to these common safety rules, and those printed in the front of this manual, can greatly increase the likelihood of injury.

RIPPING (Fig. W, X)

⚠ WARNING

To prevent serious injury:


- Never use the miter gauge when ripping.
- Never use more than one rip fence during a single cut.
- Do not allow familiarity or frequent use of your table saw to cause careless mistakes. Remember that even a careless fraction of a second is enough to cause a severe injury.
- Keep both hands away from the blade and path of the blade.
- The workpiece must have a straight edge against the fence and must not be warped, twisted, or bowed.

1. Remove the miter gauge. Secure the rip fence to the table.
2. Raise the blade so it is about 1/8" higher than the top of the workpiece.
3. Place the workpiece flat on the table and against the fence. Keep the workpiece about 1" away from the blade.
4. Turn the saw ON and wait for the blade to come up to speed.
5. Slowly feed the workpiece into the blade by pushing forward only on the workpiece section (1) that will pass between the blade and the fence. (Fig. W)

⚠ WARNING

AVOID KICKBACK by pushing forward on the section of the workpiece that passes between the blade and the fence.


Fig. W

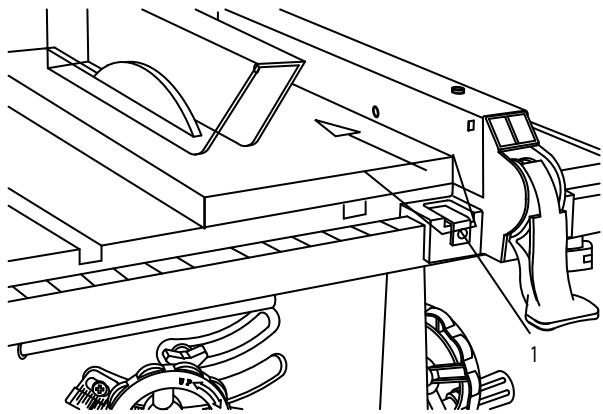

NOTE: When width or rip is 2" to 6" wide use the push stick to feed the work. When width of rip is narrower than 2" the push stick cannot be used because the guard will interfere... Use the auxiliary fence as page 20.

6. Keep your thumbs off the table top. When both of your thumbs touch the front edge of the table (2), finish the cut with a push stick. Make a push stick using the pattern on page 23.
7. The push stick (3) should always be used when the ripped workpiece is 2" to 6" wide. (Fig. X)
8. Continue pushing the workpiece with the push stick (3) until it passes the blade guard and clears the rear of the table.
9. Never pull the piece back when the blade is turning. Turn the switch OFF. When the blade completely stops raise the anti-kickback pawls on each side of the splitter and slide the workpiece out.

Fig. X

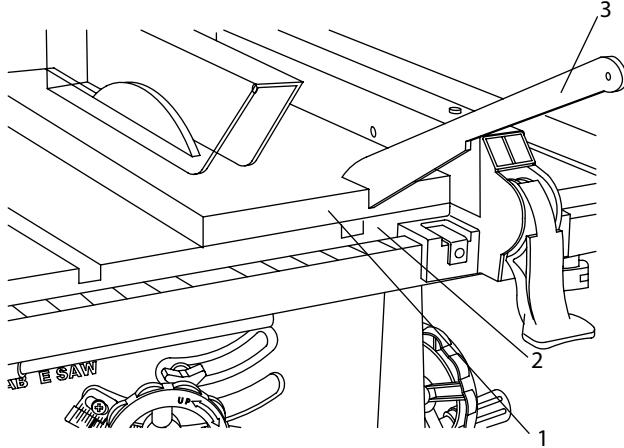

BEVEL RIPPING

This cut is the same as ripping except the blade bevel angle is set to an angle other than "0".

⚠ WARNING

Cut only with the workpiece and the fence on the right side of the blade.

RIPPING SMALL PIECES

⚠ WARNING

Avoid injury from the blade contact. Never make through saw cuts narrower than 1/2" wide.

1. It is unsafe to rip small pieces. Instead, rip a larger piece to obtain the size of the desired piece.
2. When a small width is to be ripped and your hand cannot be safely put between the blade and the rip fence, use one or more push sticks to move the workpiece.

CROSSCUTTING (Fig. Y)

⚠ WARNING

To prevent serious injury:

- Do not allow familiarity or frequent use of your table saw to cause careless mistakes. Remember that even a careless fraction of a second is enough to cause a severe injury.
- Keep both hands away from the blade and the path of the blade.

1. Remove the rip fence and place the miter gauge in the left side groove.
2. Adjust the blade height so it is 1/8" higher than the top of the workpiece.
3. Hold the workpiece firmly against the miter gauge with the blade path in line with the desired cut location. Move the workpiece to one inch distance from the blade.
4. Start the saw and wait for the blade (1) to come up to full speed.
5. Keep the workpiece (2) against the face of the miter gauge (3) and flat against the face of the gauge and flat against the table. Then slowly push the workpiece through the blade. (Fig. Y)
6. Do not try to pull the workpiece back with the blade turning. Turn the switch OFF, and carefully slide the workpiece out when the blade is completely stopped.

USING WOOD FACING ON THE MITER GAUGE (Fig. Y-1)

Slots are provided in the miter gauge of attaching an auxiliary facing (1) to make it easier to cut very long or short pieces. Select a suitable piece of smooth wood, drill two holes through it and attach with screws. Make sure the facing does not interfere with the proper operation of the sawblade guard. When cutting long workpieces, you can make a simple support by clamping a piece of plywood to a sawhorse.

Fig. Y


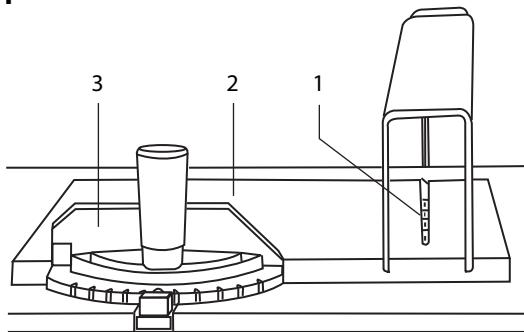


Fig. Y-1

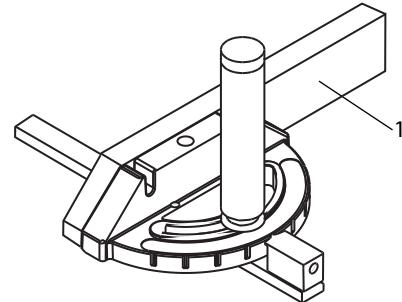


BEVEL CROSSCUTTING (Fig. Z)

This cutting operation is the same as crosscutting except the blade is at bevel angle other than 0°.

1. Adjust the blade (1) to the desired angle, and tighten the blade bevel lock knob.
2. Always work to the left side of the blade. The miter gauge (3) must be in the left side groove (2).

Fig. Z

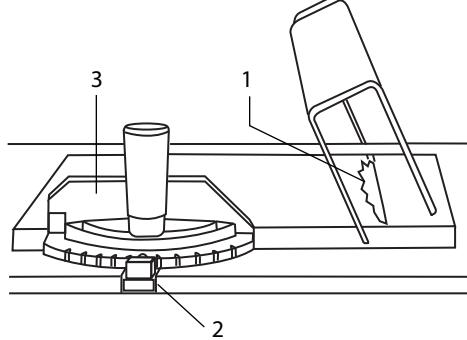


COMPOUND MITER CROSSCUTTING (Fig. AA)

This sawing operation is combining a miter angle with a bevel angle.

1. Set the miter gauge (3) to the desired angle. Use only the left side groove (2).
2. Set the blade (1) bevel to the desired angle.
3. Carefully push the miter gauge to begin the cutting operation.

Fig. AA

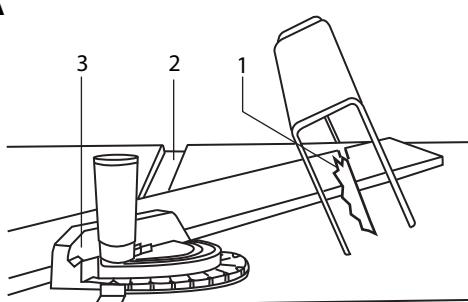


MITERING (Fig. BB)

This sawing operation is the same as crosscutting except the miter gauge is locked at an angle other than 90°

1. Hold the workpiece (2) firmly against the miter gauge (3).
2. Feed the workpiece slowly into the blade (1) to prevent the workpiece from moving.

Fig. BB

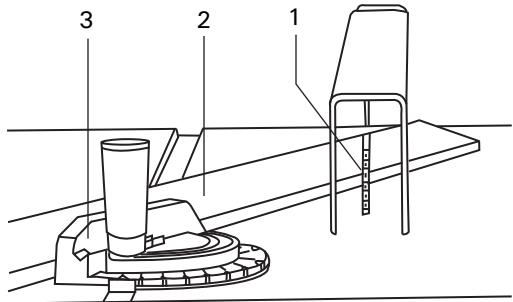


USING WOOD FACING ON THE RIP FENCE (Fig. CC)

When performing some special cutting operations, add a wood facing (1) to either side of the rip fence (2).

1. Use a smooth straight 3/4" thick wood board (1) that is as long as the rip fence.
2. Attach the wood facing to the fence with wood screw (3) through the hole in the fence. A wood fence should be used when ripping material such as thin paneling to prevent the material from catching between the bottom of the fence and the table.

Fig. CC

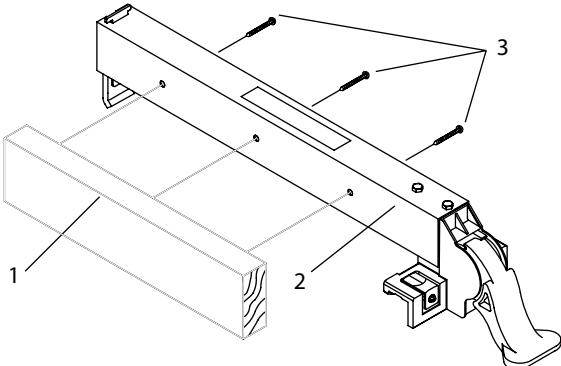

AUXILIARY FENCE (Fig. CC-1)

Making the base:

- Start with a piece of 3/8" plywood at least 5-1/2" wide or wider and 30" long or longer.
- Cut the piece to shape and size shown:

Making the side:

- Start with a piece of 3/4" plywood at least 2-3/8" wide or wider and 27" long or longer.
- Cut the piece to shape and size shown:

Putting it together:


- Put the pieces together, as shown:

⚠ WARNING

Make sure the screw heads do not stick out from the bottom of the base, they must be flush or recessed.


The bottom must be flat and smooth enough to rest on the saw table without rocking.

Fig. CC-1

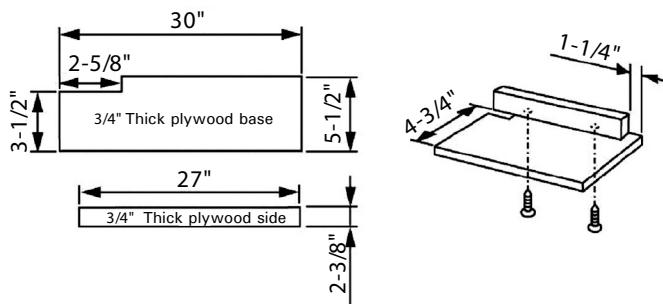

Attach auxiliary fence to rip fence with two "C" clamps. (Fig. CC-2)

Fig. CC-2

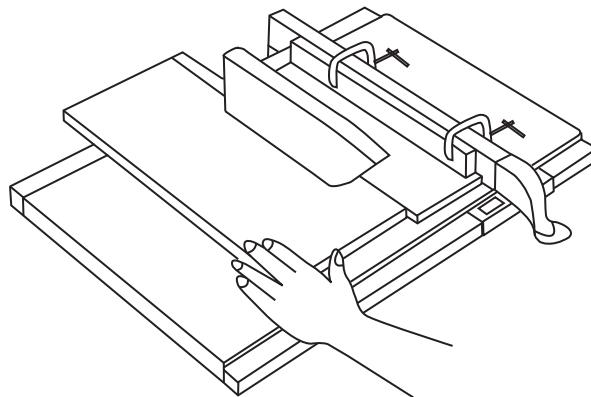

MAINTENANCE

MAINTAINING YOUR TABLE SAW

GENERAL MAINTENANCE

WARNING

For your own safety, turn the switch OFF and remove the switch key. Remove the plug from the power source outlet before maintaining or lubricating your saw.

1. Clean out all sawdust that has accumulated inside the saw cabinet and the motor.
2. Polish the saw table with an automotive wax to keep it clean and to make it easier to slide the workpiece.
3. Clean cutting blades with pitch and gum remover.
4. A worn, cut, or damaged power cord should be replaced immediately.

WARNING

All electrical or mechanical repairs should be attempted only by a trained repair technician. Contact Hitachi Authorized Service Center for service. Use only identical replacement parts. Any other parts may create a hazard.

5. Use liquid dish washing detergent and water to clean all plastic parts.

NOTE: Certain cleaning chemicals can damage plastic parts.


6. Avoid use of the following cleaning chemicals or solvents, ammonia and household detergents containing ammonia.

BLADE RAISING AND TILTING MECHANISM (Fig. EE)

After each five hours of operation, the blade raising mechanism and tilting mechanism should be checked for looseness, binding, or other abnormalities. With the saw dis-connected from the power source, turn the saw upside down and alternately pull upward and downward on the motor unit. Observe any movement of the motor mounting mechanism. Looseness or play in the blade raising screw (1) should be adjusted as follows:

1. Using a wrench, loosen nut (2).
2. Adjust nut (3) until it is finger-tight against the bracket (4), then back off the nut (3) 1/6 turn.
3. Tighten nut (2) with the wrench, while holding nut (3) in place. Maximum allowable play of screw rod (1) is 0.16" (4 mm).

Fig. EE

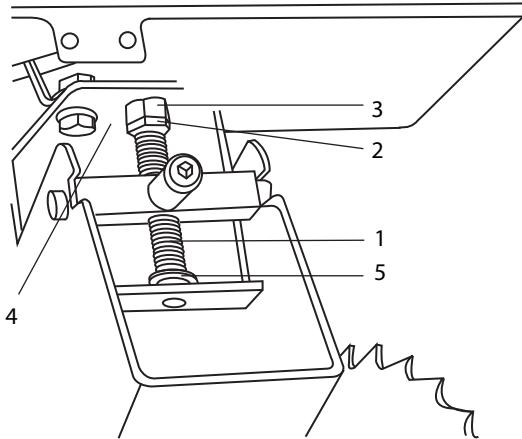

Place a small amount of dry lubricant on bevel gear (2). Screw rod (1) must be kept clean and free of sawdust, gum, pitch, and other contaminants for smooth operation.

If excessive looseness is observed in any parts of the blade raising mechanism or tilting mechanism, take the complete unit to Hitachi Authorized Service Center.

LUBRICATION

All motor bearings are permanently lubricated at the factory and require no additional lubrication. On all mechanical parts of your table saw where a pivot or threaded rod are present, lubricate using graphite or silicone. These dry lubricants will not hold sawdust as would oil or grease.

TROUBLESHOOTING GUIDE

⚠ WARNING

To avoid injury from an accidental start, turn the switch OFF and always remove the plug from the power source before making any adjustments.

- Consult Hitachi Authorized Service Center if for any reason the motor will not run.

SYMPTOM	POSSIBLE CAUSES	CORRECTIVE ACTION
Saw will not start	1. Saw not plugged in 2. Fuse blown or circuit breaker tripped 3. Cord damaged	1. Plug in saw 2. Replace fuse or reset circuit breaker 3. Have cord replaced by Hitachi Authorized Service Center
Does not make accurate 45° and 90° rip cuts	1. Positive stop not adjusted correctly 2. Tilt angle pointer not set accurately	1. Check blade with square and adjust positive stop 2. Check blade with square and adjust to zero
Material pinched blade when ripping	1. Rip fence not aligned with blade 2. Warped wood, edge against fence is not straight	1. Check and adjust rip fence 2. Select another piece of wood
Material binds on splitter	1. Splitter not aligned correctly with blade	1. Check and align splitter with blade
Saw makes unsatisfactory cuts	1. Dull blade 2. Blade mounted backwards 3. Gum or pitch on blade 4. Incorrect blade for work being done 5. Gum or pitch on blade causing erratic feed	1. Replace blade 2. Turn the blade around 3. Remove blade and clean with turpentine and coarse steel wool 4. Change the blade 5. Clean table with turpentine and steel wool
Material kicked back from blade	1. Rip fence out of adjustment 2. Splitter not aligned with blade 3. Feeding stock without rip fence 4. Splitter not in place 5. Dull blade 6. The operator letting go of material before it is past saw blade 7. Miter angle lock knob is not tight	1. Align rip fence with miter gauge slot 2. Align splitter with blade 3. Install and use rip fence 4. Install and use splitter (with guard) 5. Replace blade 6. Push material all the way past saw blade before releasing work 7. Tighten knob
Blade does not raise or tilt freely	1. Sawdust and dirt in raising and tilting mechanisms	1. Brush or blow out loose dust and dirt
Blade does not come up to speed	1. Extension cord too light or too long 2. Low house voltage	1. Replace with adequate size cord 2. Contact your electric company
Machine vibrates excessively	1. Saw not mounted securely to workbench 2. Bench on uneven floor 3. Damaged saw blade	1. Tighten all mounting hardware 2. Reposition on flat level surface Fasten to floor if necessary 3. Replace blade
Does not make accurate 45° and 90° cross cuts	1. Miter gauge out of adjustment	1. Adjust miter gauge

PUSH STICK

Make from 1/2" or 3/4" wood or thickness less than width of material to be cut.

CAUTION!

Use only good strong wood or plywood. Use a jigsaw or bandsaw to cut out.

Cut off here to push 1/4" wood.

Cut off here to push 1/2" wood.

Notch to help prevent hand from slipping.

1/2" Squares.

Optional hanging hole.

PARTS LIST


10" JOB SITE TABLE SAW

MODEL NO. C10FR


Always order by I.D. Number


PARTS LIST FOR SCHEMATIC A

I.D.	Description	Size	Qty	I.D.	Description	Size	Qty	I.D.	Description	Size	Qty
2178	EXTENTION WING (RIGHT)		1	0J8D	FLAT WASHER	3/8*3/4-5/64	1	0KQW	NUT CHECK	M5*0.8 T=5	1
2771	ANGLE ROD		1	0J8D	FLAT WASHER	3/8*3/4-5/64	1	OKRX	HEXAGON NUT AND FLAT WASHER M6*1.0		2
08VH	CLAMP-CORD		1	0J95	SPRING WASHER		1	OKRX	HEXAGON NUT AND FLAT WASHER M6*1.0		1
09JK	WRENCH HEX.		1	0JAA	WASHER		1	OKSW	STRAIN RELIEF		1
0B22	HEIGHT REGULATING BOLT		1	0JAE	EXTERNAL TOOTH LOCK WASHER		2	OKWZ	LEAD WIRE ASS'Y		1
0B22	HEIGHT REGULATING BOLT		1	0JAF	EXTERNAL TOOTH LOCK WASHER		1	OLMG	LOCKING CABLE TIE		1
0B23	SADDLE		1	0JC9	SPRING PIN		1	OLSL	CIRCUIT BREAKER SWITCH		1
0B24	SPRING		1	0JCA	SPRING PIN		1	OT00	SLIDING BASE ASS'Y		2
0B27	POINTER BRACKET		1	0JCA	SPRING PIN		1	10GN	UPER TUBE		1
0B2B	NEEDLE POINTER		1	0JCR	SPRING PIN		1	10GP	UPER TUBE		1
0B2E	SWITCH BOX		1	0JED	C-RING	A-16	1	20WQ	HEX. HD. BOLT	M6*1.0-50	1
0B3H	INSERT		1	0JFY	E-RING	E-9	1	216F	SWITCH KEY		1
0B3R	WRENCH		1	0JPB	HEX. HD. BOLT	M5*0.8-20	2	237U	COVER		1
0B84	WASHER		1	0JX7	HEX. SOC. SET SCREW	M6*1.0-6	2	238S	POINTER		1
0B97	MOTOR BRACKET		1	0JXL	HEX. SOC. SET SCREW	M10*1.5-12	1	275D	EXTENTION WING		1
0B99	SPACER		1	0KOZ	HEX. HD. SCREW AND WASHER	M8*1.25-16	4	275E	UPER TUBE		2
0B9C	PLUNGER HOUSING		1	0K16	HEX. HD. SCREW AND WASHER	M8*1.25-16	1	275F	LOCATION SEAT		2
0B9P	CLAMP		2	0K25	HEX.SOCKET HD.CAP SCREWS	M5*0.8-20	1	275R	LOCATION SEAT		1
0B9S	BRACKET		1	0K3G	CR.RE. PAN HD. SCREW & WASHER	M5*0.8-12	1	275U	SPACER		1
0B9W	BRACKET		1	0K57	CR.RE.COUNT HD. SCREW	M5*0.8-16	1	27QV	PARTS BOX CARTON		1
0BA4	SPACER		1	0K7K	CR. RE. ROUND WASHER HD. SCREW	M6*1.0-12	2	287H	RETAINING CLIP		1
0BA9	SPACER		2	0K8C	CR. RE.COUNT HD. TAPPING SCREW	M4*18-10	4	28CK	POWER CABLE ASS'Y		1
0BAA	CLAMP		1	0K8D	CR. RE.COUNT HD. TAPPING SCREW	M4*18-16	2	28FK	TABLE		1
0BAB	SHIM		1	0K9T	HEX. HD. TAPPING SCREW	M5*16-16	6	28KX	BODY SHELL		1
0BAC	SET NUT		1	0K9U	HEX. HD. TAPPING SCREW	M5*16-25	4	28L9	LOCK KNOB		1
0BAE	ARBOR COLLAR		1	0K9U	HEX. HD. TAPPING SCREW	M5*16-25	4	28MC	PARALLEL BRACKET ASS'Y		1
0BAT	NUT		1	0KA4	CR.RE. PAN HD. TAPPING SCREW	M4*16-16	2	28MD	MITER GAUGE ASS'Y		1
0BAU	SUPPORTING PLATE		1	0KAP	CR.RE. PAN HD. TAPPING SCREW	M5*0.8-10	1	28MG	HAND WHEEL ASS'Y		1
0BAX	STIFFENER		1	0KC8	CR. RE. TRUSS HD. TAPPING SCREW	M4*16-16	2	28MH	HAND WHEEL ASS'Y		1
0BAY	SCREW BAR		1	0KCA	CR. RE. TRUSS HD. TAPPING SCREW	M5*12-12	2	28N2	BATTERY ASSEMBLY		1
0BAZ	BEARING SEAT		1	0KCH	CR.RE. PAN HEAD TAPPING & WASHER SCREW	M5*0.8-12	2				
0BB1	SHAFT		1	0KCX	CROSS-RECESSED PAN HD PLAIN WASHER TAPPING SCREW	M5*0.8-10	6	28P2	ROCKER SWITCH		1
0BB2	PARRLE RING		1					28PA	KNOB		1
0BC2	LOCATION SEAT		2	0KCY	CR. RE. PAN HD PLAIN WASHER TAPPING SCREW	M5*0.8-12	4	28W3	LABEL		1
0GDO	BLADE		1	0KDR	CR. RE. PAN HD. SCREW	M5*0.8-10	1	28W4	STICKER		1
0J3U	WRENCH HEX.		1	0KDU	CR. RE. PAN HD. SCREW	M6*1.0-12	2	28W6	STICKER		1
0J4F	FLAT WASHER	?8*16-2.5	1	0KFG	CR. RE. PAN HD. SCREW	M5*0.8-12	2	28W7	CAUTION LABEL		1
0J4H	FLAT WASHER	?10*30-0.2	2	0KHZ	CAP HD. SQ.NECK BOLT	M6*1.0-12	2	28W8	LABEL		1
0J5L	FLAT WASHER	?5*10-0.3	10	0KJ4	CAP HD. SQ.NECK BOLT	M6*1.0-35	1	28W9	SCALE		1
0J6T	FLAT WASHER	3/16*3/4-1/16	4	0KJ5	CAP HD. SQ.NECK BOLT	M6*1.0-80	1	28WA	CAUTION LABEL		1
0J6U	FLAT WASHER	3/16*1/2-3/64	1	0KMR	HEX. NUT	M5*0.8 T=4	1	28WB	WARNING LABEL		1
0J6V	FLAT WASHER	3/16*3/8-0.022	8	0KMS	HEX. NUT	M6*1.0 T=5	1	28WC	WARNING LABEL		1
0J70	FLAT WASHER	1/4*3/4-7/64	1	0KMV	HEX. NUT	M10*1.5 T=8	1	28WD	CAUTION LABEL		1
0J76	FLAT WASHER	1/4*3/4-1/16	1	0KMW	HEX. NUT	M10*1.5 T=4	1	28WE	SCALE		1
0J76	FLAT WASHER	1/4*3/4-1/16	1	0KMY	HEX. NUT	M8*1.25T=6.5	1	28WF	WARNING LABEL		1
0J80	FLAT WASHER	5/32*13/32-3/64	2	0KND	HEX. NUT	M5*0.8 T=4	2	28WL	WARNING LABEL		1
				OKQJ	CROWN NUT	M8*1.25 T=12.5	2	28X4	BLADE GUARD ASS'Y		1
				OKQW	NUT CHUCK	M5*0.8 T=5	1	290T	MOTOR		1

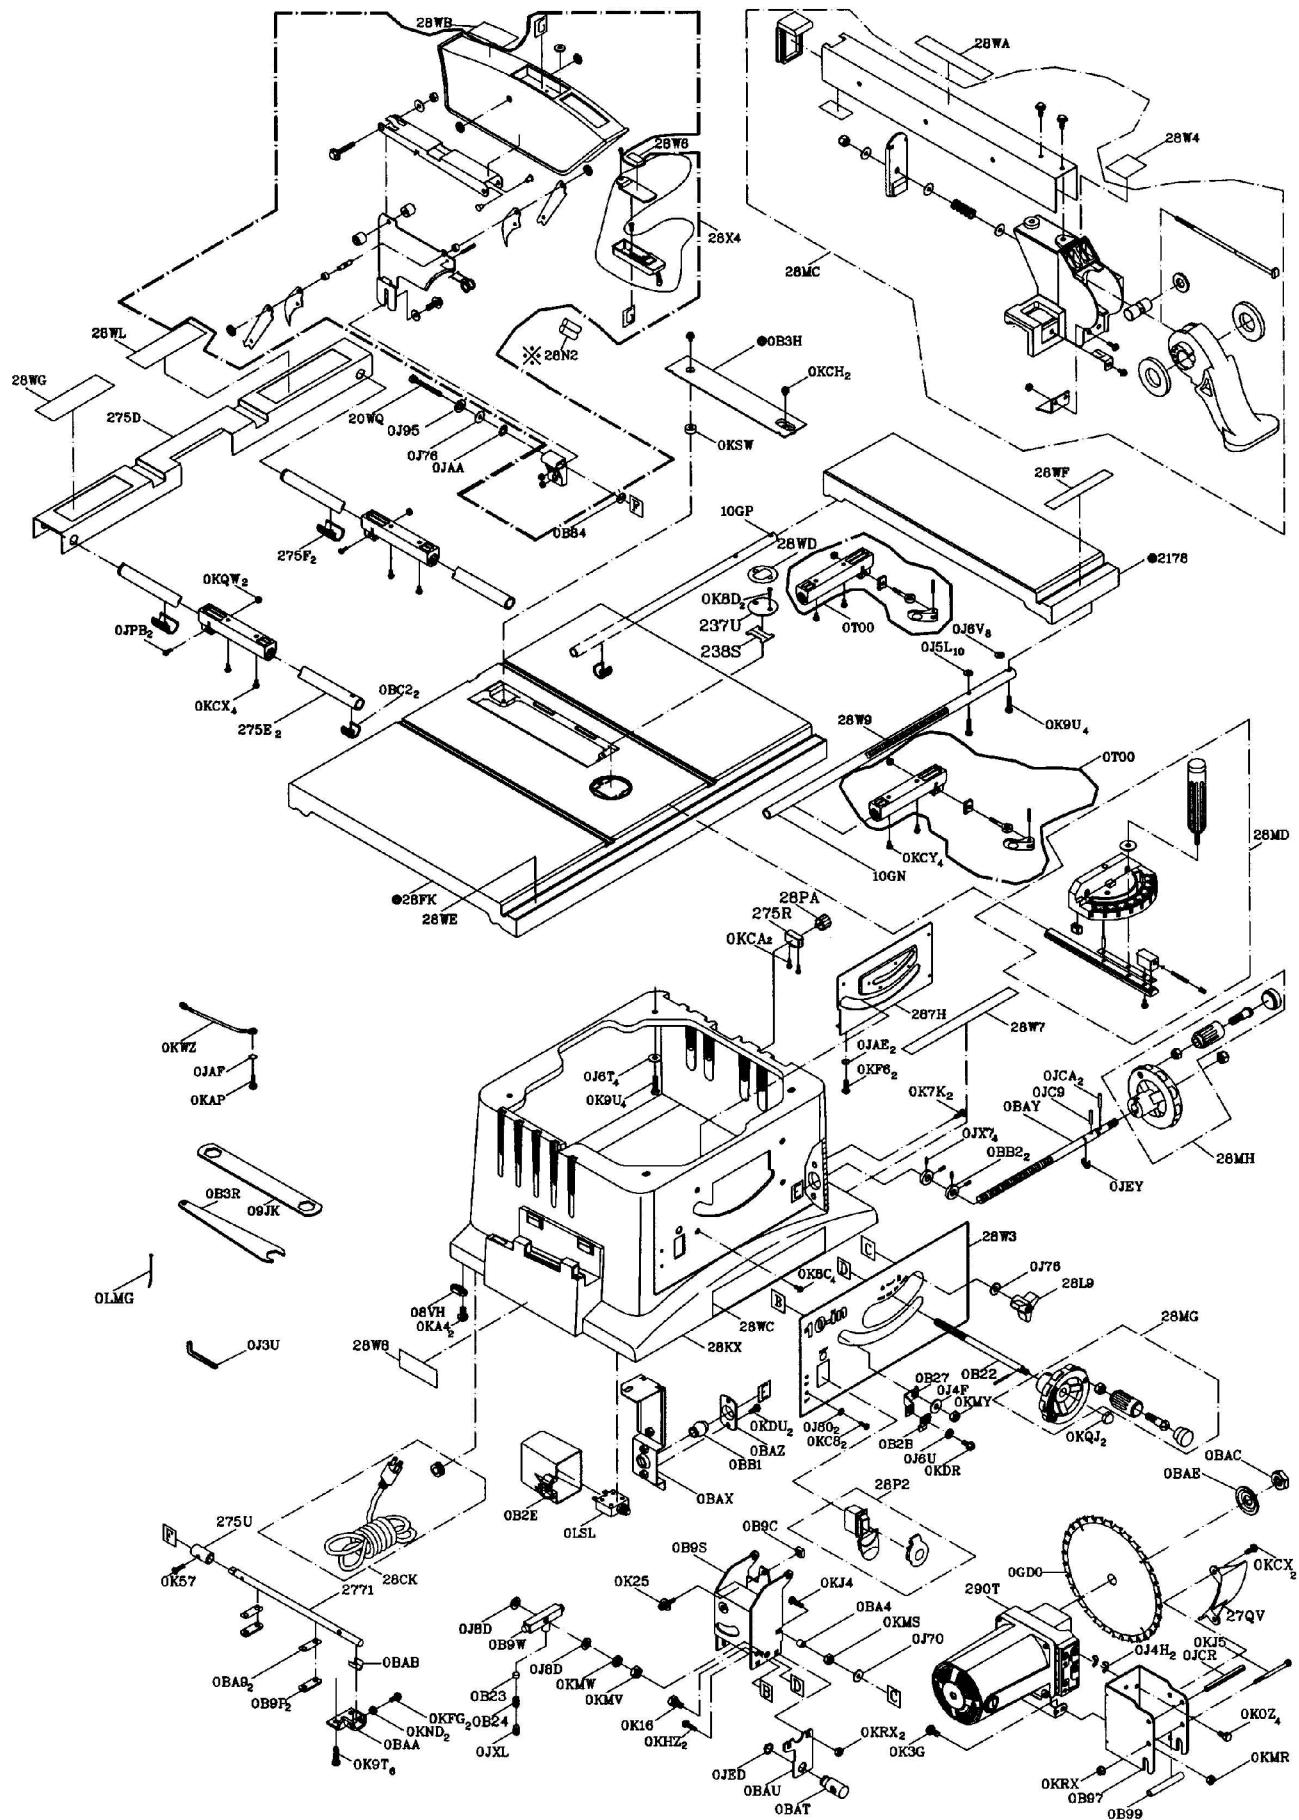

I.D.	Description	Size	Qty	I.D.	Description	Size	Qty
01AD	WING NUT		1	27DJ	FOAM		1
01AE	LEVELING PAD		1	27DL	HANDLE		1
0J4E	FLAT WASHER	ø6*13-1	4	27DM	BRACKET ASS'Y (RIGHT)		1
0J4F	FLAT WASHER	ø8X16-2.5	4	27DV	LEVELING PAD		3
0JAZ	WAVE WASHER	WW-6	2	27DW	DUST COLLECTOR ASS'Y		1
0K7D	CR. RE. ROUND WASHER HD. SCREW	M6*1.0-10	2	27DY	COUPLING		1
0K7M	CR. RE. ROUND WASHER HD. SCREW	M6*1.0-18	1	27DZ	BRACKET ASS'Y (LEFT)		1
0KDJ	CR. RE. PAN HD. SCREW	M5*0.8-12	2	27E6	HOOK		1
0KDR	CR. RE. PAN HD. SCREW	M5*0.8-10	4	27RQ	CAP HD. SQ.NECK BOLT	M8*1.25-40	4
0KKU	CR.RE. PAN HD. ROUND NECK SCREW	M5*08-10	1	27RR	CR.-RE. TRUSS HD. SCREW	M6*1.0-45	4
0KMS	HEX. NUT	M6*1.0 T=5	1	288R	HEX. HD. BOLT	M8*1.25-55	4
0KQ4	WING NUT	M8*1.25	1	28BU	FLOOR PLATE		1
0KQW	NUT CHUCK	M5*0.8 T=5	6	28BX	CROSS-RECESSED PAN HD PLAIN WASHER TAPPING SCREW	M5*0.8-10	4
0KQW	NUT CHUCK	M5*0.8 T=5	1	28L2	CLAMP HANDLE		4
0KQX	NUT CHUCK	M6*1.0 T=6	4	28L3	FOLLOWER PLATE		1
0KQY	NUT CHUCK	M8*1.25 T=8	4	28VU	HOOK		2
0KQY	NUT CHUCK	M8*1.25 T=8	2	28VV	CONNECTOR		1
213T	ROLLING WHEEL		2	28VX	SUPPORTING TUBE ASS'Y		1
22FZ	CAP HD. SQ.NECK BOLT	M8*1.25-45	2	28VZ	LEVELING PAD		1

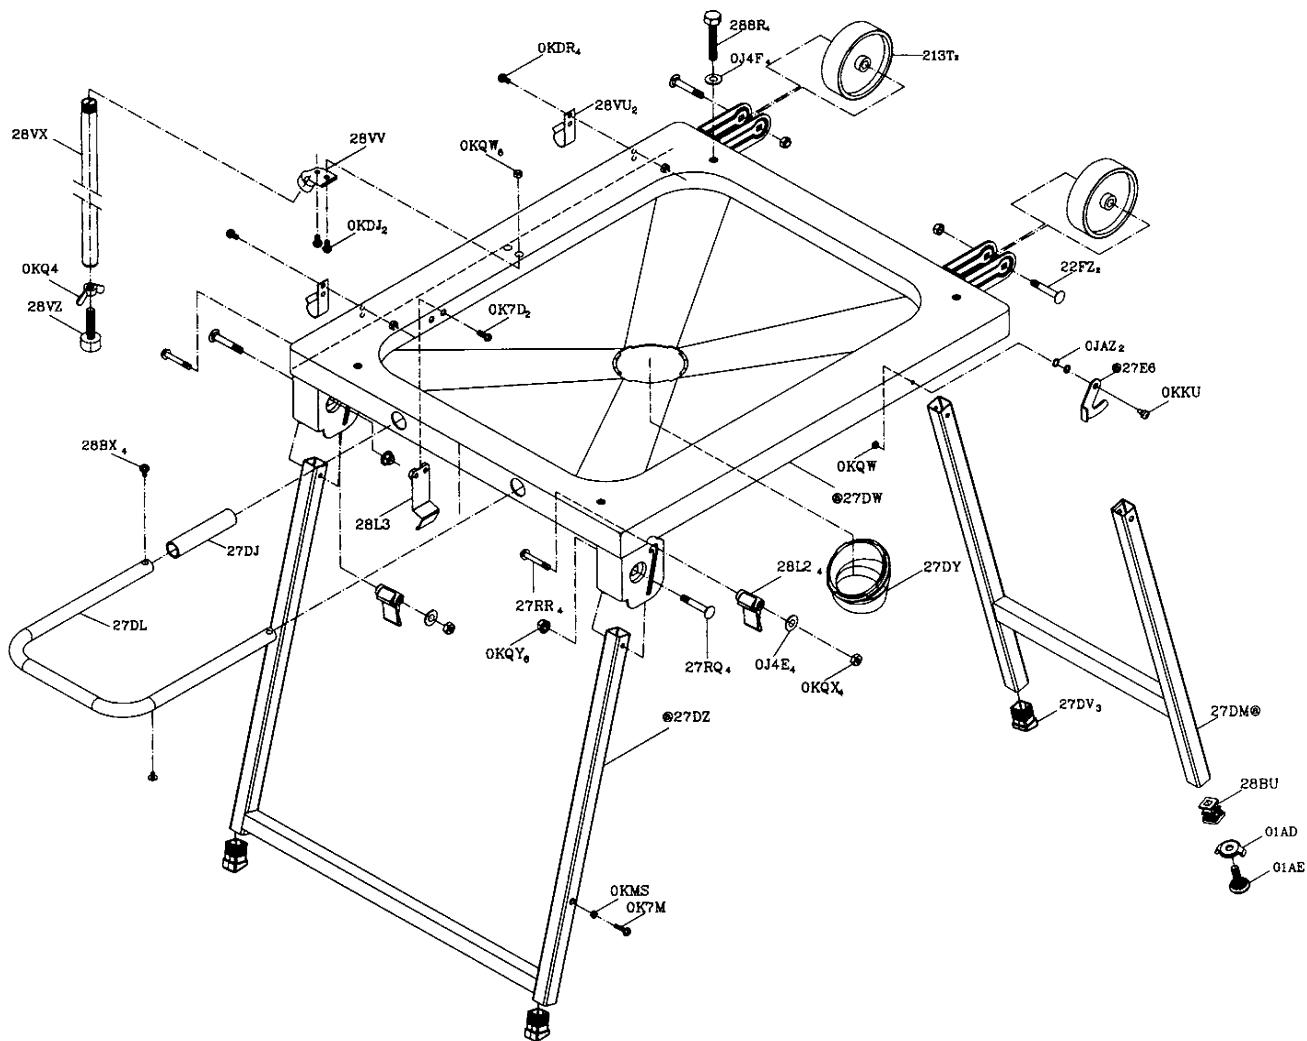

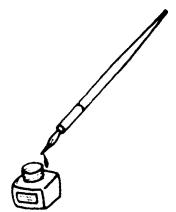

Issued by

 **Hitachi Koki Co., Ltd.**

Sinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo 108-6020, Japan

Distributed by

 **Hitachi Koki U.S.A., Ltd.**

3950 Steve Reynolds Blvd.
Norcross, GA 30093

 **Hitachi Koki Canada Co.**

6395 Kestrel Road
Mississauga ON L5T 1Z5

407

Code No. C99135061
Printed in Taiwan