

## 0703-2.4G Remote Control EXCAVATOR Instruction Manual



HobbyEngine Model Limited  
Address: Rm 619, 6/F, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon, Hong Kong.  
Website: www.hobbyengine.com.hk

1

## PRODUCT FEATURES:

On scale EXCAVATOR model with 2.4G Radio control system.

Hidden antenna on EXCAVATOR & remote controller.

Full digital proportional control

Working platform turn left & right 360 degrees freely.

Body spin 360 degrees freely.

Crane up to 20 degrees.

Individual track control.

Scoping light.

**Warning:** Use of this equipment to this unit not expressly approved by the party responsible for competence could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas causer d'interférence nuisible, et

(2) l'appareil doit accepter toute interférence nuisible, y compris celle qui pourrait entraîner un fonctionnement non désiré de l'appareil.

REMARKS: Charge the battery pack 6 hours for the first time, 4 hours from 2<sup>nd</sup> time.

2

## INCLUDED

1. 0703 EXCAVATOR returned from site.....	1
2. 2.4G Digital Radio Controller.....	1
3. 7.2V X 800mAh Rechargeable Battery.....	1
4. D.C 9V, 200mA, 1.8VA charger.....	1

## INSTALL BATTERY TO REMOTE CONTROL

1. Turn screw anti-clockwise on battery door to open.
2. Install batteries follow polarities crafted inside battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Push the slide switch on front panel to 'ON' mark. A Red LED below will be luminate to show installation was activated.



## INSTALL BATTERY ON EXCAVATOR

1. Turn screw anti-clockwise on battery door under EXCAVATOR to open.
2. Plug with fully charged battery pack on socket in battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Activate EXCAVATOR by sliding switch to 'ON'.

REMARKS: Charge the battery pack 6 hours for the first time, 4 hours from 2<sup>nd</sup> time.



## MATCH THE REMOTE CONTROLLER TO THE EXCAVATOR


1. Spin remote controller power switch to 'ON', LED illuminated to Red.
2. Spin EXCAVATOR power switch to 'ON'.
3. Press 'MATCHING' button on top deck of EXCAVATOR. The LED on side will be flashed for 5 seconds.
4. LED stop blinks, the EXCAVATOR is already matched with controller and ready to work.




## 2.4G REMOTE CONTROLLER BUTTON MAP



## MOTION CONTROL

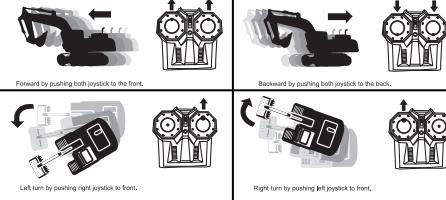

5

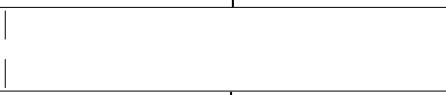

Left spin by pushing left joystick to back and right joystick to front.

Right spin by pushing right joystick to back and left joystick to front.





Working platform left turn by pressing (L1) button.

Working platform right turn by pressing (R1) button.



Main arm up by pressing (L2) button.

Main arm down by pressing (R2) button.

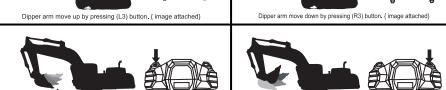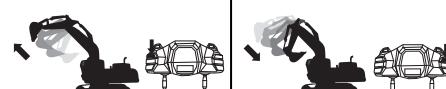

Bucket move up by pressing (L4) button. (Image attached)

Bucket move down by pressing (R4) button. (Image attached)

## TROUBLE SHOOTING

1. Check the battery connection on remote controller or replace with new battery.
2. Check the battery connection inside EXCAVATOR & remote controller or recharge battery.
3. Recharge battery procedures by switching remote and EXCAVATOR on again. Press the matching button.
4. Contact us at our Email: [info@hobbyengine.com.hk](mailto:info@hobbyengine.com.hk)

## SAFETY

1. Operation temperature 0°C-30°C
2. Recharge battery ONLY with charger included in packing.

7



8