

i>clicker+ Remote FCC

FCC ID: T24-RLR15

Changes not expressly approved by Holtzbrinck Publishers could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an output on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with FCC OET Bulletin 65 radiation exposure limits set forth for an uncontrolled environment.

i>clicker+ Remote IC

IC: 6495A-RLR15

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Registering your i>clicker+

Check with your instructor to find out whether you should register your remote through your institution's Course Management System or the iclicker website.

Use the 8-character ID printed on the back of the remote to register.

Turning on your i>clicker+

Press the **Power** button.

- A solid green ● **Power** light indicates your remote is on.

Changing the Frequency

1. Press and hold the **Power** button until the **Power** light flashes green ●.
2. Use the **A-E** buttons to enter the 2-letter frequency code provided by your instructor.

Green ● lights indicate that the frequency was changed successfully.

Flashing red ● **A-E** lights indicate that the frequency was not changed successfully. Check the frequency code provided by your instructor and try again.

Answering Questions

Press the **A-E** button that corresponds to your answer.

- A steady green ● light indicates that your answer was received.
- A flashing red ● light indicates that your answer was not received or your instructor has not started polling.

NOTE: This i>clicker remote can be used for polling questions that requires **A-E** responses only. For questions that require alphanumeric responses, you must use the **i>clicker2** remote.

Replacing the Batteries

A flashing red ● **Low Battery** light indicates less than 10 hours of battery life remain.

1. Open the battery cover on the back of the remote.
2. Remove both batteries.
3. Replace the batteries with two new AAA batteries.
NOTE: Alkaline batteries recommended.
4. Replace the battery cover.