

## Honda SMART Key Battery

### Replacing the Honda SMART Key Battery

If the Honda SMART Key indicator flashes 5 times when the ignition switch is turned **I** (On), or the operating range becomes unstable, replace the battery as soon as possible.

We recommend to see your dealer for this service.

**Battery type:** CR2032


1. Remove the upper case by inserting a coin or a flat head screwdriver covered with a protective cloth into the slit.
  - ▶ Wrap a coin or a screwdriver with a protective cloth to prevent scratching the Honda SMART Key.
  - ▶ Do not touch the circuit or terminal. This may cause problems.
  - ▶ Be careful to avoid scratching the waterproof covering or allowing dust to enter.
  - ▶ Do not forcibly dismantle the Honda SMART Key body.

Maintenance

*continued* 99

## Honda SMART Key Battery ▶ Replacing the Honda SMART Key Battery

Maintenance

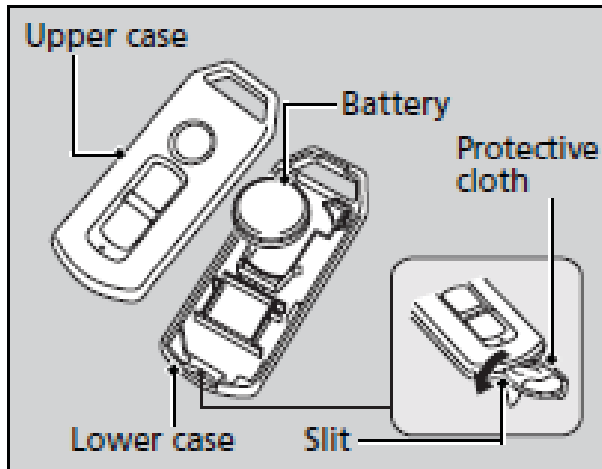

2. Replace the old battery with a new battery with the negative  $\ominus$  side facing up.
3. Snap the two halves of the remote transmitter back together.
  - ▶ Make sure that upper and lower cases are set in the right position.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning Indicators On or Flashing ► Honda SMART Key Indicator

## Honda SMART Key Indicator

### When the Honda SMART Key indicator flashes 5 times

#### Replacing the Honda SMART Key Battery

► P. 99

### When the Honda SMART Key indicator is flashing while the ignition switch is on

The Honda SMART Key indicator flashes when communication between the your scooter and Honda SMART Key stops after turning on the ignition switch.

It is probably caused by the following:

- Strong radio waves or noise are affecting the system
- You lose the Honda SMART Key while riding

However, this does not affect the operation of your scooter until the ignition switch is locked.

If you turn the ignition switch to the SEAT, ○ (Off) or 🔒 (LOCK) position while the Honda SMART Key indicator is flashing, the ignition switch ring, turn signal lights, Honda SMART Key indicator will come on, and the buzzer rings for about 20 seconds, automatically go off, and then the ignition switch is locked.

Also, to stop this flashing and ringing, press and hold the ignition switch for more than 2 seconds. After the flashing and ringing stop, the ignition switch is locked.


If you do not have the Honda SMART Key, the ignition switch can be unlocked by using the emergency key and the ID tag. ► P. 113

## When the Honda SMART Key System Does Not Operate Properly

When the Honda SMART Key system does not work properly, perform the following.

- Check that the Honda SMART Key system is activated.

Lightly push the ON/OFF button on the Honda SMART Key.

If the LED of the Honda SMART Key is red, switch the Honda SMART Key system to activation.  P. 37

If the LED of the Honda SMART Key does not respond, replace the battery of the Honda SMART Key.

- Check that there is no communication failure in the Honda SMART Key system. The Honda SMART Key system uses low-intensity radio waves. The Honda SMART Key system may not work properly in the following environments:

- When there are facilities nearby that generate strong radio waves or noise such as TV towers, power stations, radio stations, or airports.
- When you carry the Honda SMART Key with a laptop or wireless communication device such as a radio or mobile phone.
- When the Honda SMART Key comes into contact with or is covered by metal objects.

## When the Honda SMART Key System Does Not Operate Properly

- Check that a registered Honda SMART Key is used.  
Use a registered Honda SMART Key.  
The Honda SMART Key system cannot be activated without an registered Honda SMART Key.
  - Make sure that you do not use a broken Honda SMART Key.  
If you use a broken Honda SMART Key, the Honda SMART Key system cannot be activated. Bring the emergency key and ID tag to your dealer.
  - Check the battery condition and battery lead in your scooter.  
Check the battery and battery terminals.  
If the battery is weak, contact your dealer.
- If the Honda SMART Key system cannot be activated due to other causes, contact your dealer.

Troubleshooting

## Keys

### Honda SMART Key

Carrying the Honda SMART Key allows you to lock or unlock the ignition switch, and to release the seat lock, and to lock or unlock the steering.

The ID number of the Honda SMART Key is on the ID tag. You can also unlock the ignition switch by inputting the ID number.

Always carry both the emergency key and ID tag, but separate from the Honda SMART Key, to avoid losing all of them at the same time.

Also store a copy of your ID number in a safe place other than your scooter.

The Honda SMART Key contains electronic circuits that are activated by the Honda SMART Key system. If the circuits are damaged, the Honda SMART Key will not start the engine, release the ignition switch, open the seat or lock or unlock the steering.

- Do not drop the Honda SMART Key or set heavy objects on them.
- Protect the Honda SMART Key from direct sunlight, high temperature, and high humidity.
- Do not scratch or puncture.
- Do not store near any magnetized products such as a magnetized key chain.
- Always keep the Honda SMART Key away from electric appliances such as a TV, radio, PC or low-frequency massage device.

Information

## Keys

- Keep the Honda SMART Key away from liquids. If it gets wet, dry it immediately with a soft cloth.
- Keep the Honda SMART Key away from the scooter while washing the scooter.
- Do not burn.
- Do not wash in the ultrasonic cleaner.
- If fuel, wax, or grease adhere to the Honda SMART Key, wipe it off immediately to avoid cracking or warping.
- Do not disassemble the Honda SMART Key other than when changing a battery. Only the cover of the Honda SMART Key can be disassembled. Do not disassemble other parts.
- Do not lose your Honda SMART Key. If you lose it, you will need to register a new Honda SMART Key. See your dealer with your emergency key and ID tag for registration.

The battery in the Honda SMART Key system normally lasts about 2 years.

Do not keep mobile phones or other radio transmitting devices in luggage box. The radio frequency from the devices will interrupt the Honda SMART Key system.

To get add additional Honda SMART Key, take the Honda SMART Key and the scooter to your dealer.

This Honda SMART Key system comply with the MOIC (Ministry of Information and Communications) Directive.

Information