

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Accessories Precautions

The GPS antenna is located in the roof. Trees, tall buildings, freeway/highway overpasses, tunnels, or overhead electrical power wires can easily interrupt or interfere with GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

Important Safety Information

WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Enter information before you begin driving or when stopped. As you drive, listen to the audible instructions and use voice commands when possible. Pull to the side of the road if you need more time to look at the screen or operate the controls.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.

 **System Limitations** P. 402

NOTICE

This vehicle's navigation system display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste. Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on the audio/information screen and On Demand Multi-Use Display™.

Contents

➤ System Setup P. 21

Start-up 22	Voice Control System 24	Interface Settings 28	Personal Information 40
Routing 55	Guidance 64	Map 71	
On Demand Multi-Use Display™ 89		Customized Features 90	Data Reset 123

➤ Navigation P. 125

Entering a Destination 126	Calculating the Route 151	Driving to Your Destination 154	Map Menu 161
Changing Your Route 168	Changing Your Destination 177	Resuming Your Trip 180	

➤ Audio P. 181

Audio System 182	Audio Remote Controls 188	Audio Settings 190	Playing FM/AM Radio 194
Playing SiriusXM® Radio 200	Playing a Disc 220	Playing Hard Disc Drive (HDD) Audio 227	
Playing an iPod 239	Playing Internet Radio 251	Playing a USB Flash Drive 256	Playing Bluetooth® Audio 262

➤ Bluetooth® HandsFreeLink® P. 265

Bluetooth® HandsFreeLink® 266	Text/E-mail Message 300	Roadside Assistance 307	HFL Menus 308
-------------------------------	-------------------------	-------------------------	---------------

➤ AcuraLink® Messages P. 313

AcuraLink® 314

➤ Rear Entertainment System* P. 325

Rear Entertainment System 326	Rear Control Panel Operation 329	Front Control Panel Operation 338	Wireless Headphones 342
-------------------------------	----------------------------------	-----------------------------------	-------------------------

➤ Other Features P. 345

Trip Computer 346	Power Distribution Monitor 347	Calendar 350	Information Functions 351
Multi-View Rear Camera* 353	Surround View Camera* 355	HomeLink® Universal Transceiver 380	

➤ Troubleshooting P. 383

Troubleshooting 384	Error Messages 391
---------------------	--------------------

➤ Reference Information P. 399

System Initialization 400	System Limitations 402	Client Assistance 404	Legal Information 407
---------------------------	------------------------	-----------------------	-----------------------

➤ Voice Commands P. 413

Voice Commands 414

Quick Reference Guide	P. 2
-----------------------	------

System Setup	P. 21
--------------	-------

Navigation	P. 125
------------	--------

Audio	P. 181
-------	--------

Bluetooth® HandsFreeLink®	P. 265
---------------------------	--------

AcuraLink® Messages	P. 313
---------------------	--------

Rear Entertainment System*	P. 325
----------------------------	--------

Other Features	P. 345
----------------	--------

Troubleshooting	P. 383
-----------------	--------

Reference Information	P. 399
-----------------------	--------

Voice Commands	P. 413
----------------	--------

Index	P. 419
-------	--------

Overview—Functions at a Glance

Navigation

You can select any place/landmark as a destination by using voice control or the Interface Dial. The navigation system gives you turn-by-turn driving directions to your destination.



Store home address P. 48

Register **1** home address.

Store contacts P. 41

Store up to **200** contacts in **2** address books.

Enter destination P. 126

Select your destination using **13** methods.

Select route P. 153

Set route preferences and select one of **3** routes.



Track route P. 154

Follow your route in real-time with voice guidance.

U.S. models

Traffic Information* P. 165

View and avoid congestion and traffic incidents.

* 1: Available only in certain areas.

Canadian models

Subscription service

AcuraLink Real-Time Traffic™ P. 165

Bypass congestion and traffic incidents.

Avoid certain areas P. 62

Set streets and areas to detour around.

Add waypoints P. 170

Add up to **4** "pit stops" along your route.



Audio

The advanced audio system provides clear, well-defined sound and makes the most of your music. Enjoy listening to a variety of audio sources, such as:



FM/AM Radio ➔ P. 194

SiriusXM® Radio ➔ P. 200

Compact Disc ➔ P. 220

Hard Disc Drive (HDD) ➔ P. 227

iPod ➔ P. 239

Internet Radio ➔ P. 251

USB Flash Drive ➔ P. 256

Bluetooth® Audio ➔ P. 262



AcuraLink® ➔ P. 314

AcuraLink® provides you with important information and messages between your vehicle and Acura.




Voice Control ➔ P. 24

Use voice commands for safer system control while driving. You can operate all key functions of the navigation, audio, *Bluetooth*® HandsFreeLink®, and climate control systems.

Bluetooth® HandsFreeLink® ➔ P. 266

Pair a compatible mobile phone to receive incoming and make outgoing calls. You can operate the phone features without ever taking your hands off the wheel.

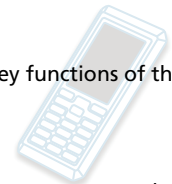

Rear Entertainment System* ➔ P. 325

Rear seat passengers can enjoy a completely separate entertainment source than front passengers, including movies, games, and other audio choices.

System Controls

Audio/Information Screen

- 1 **PHONE** Button ➔ P.266
 - 2 **(Power)** Button
 - 3 **Volume** Knob
 - 4 **NAV** Button
 - 5 **BACK** Button
 - 6 **(Display Mode)** Button ➔ P.76
 - 7 **Interface Dial/ENTER** Button ➔ P.7
 - 8 **INFO** Button
 - 9 **MENU** Button
 - 10 **SETTINGS** Button
- Models with Surround View Camera System
- 11 **CAMERA** Button
- Models with RES
- 12 **FRONT AUDIO** Button
 - 13 **REAR AUDIO** Button ➔ P.329
 - 14 **REAR (Power)** Button

On Demand Multi-Use Display™

- 15 **(Eject)** Button



- 16 **Microphone** ➔ P.266



- 17 **Left Selector Wheel** ➔ P.188
- 18 **SOURCE** Button ➔ P.188

- 19 **(Pick-Up)** Button ➔ P.266

- 20 **(Hang-Up/Back)** Button ➔ P.266

- 21 **(Talk)** Button ➔ P.6

Models without RES

- 22 **AUDIO** Button ➔ P.182

- | | |
|---|---|
| █ Navigation | █ Voice Control
Bluetooth® HandsFreeLink® |
| █ Rear Entertainment System | █ Audio |

On Demand Multi-Use Display™ Basic Operation

Source

Select to change an audio source.



You can change the position of icons.

Shortcuts

Select to display the shortcut menu.



Places → P. 46

Phone → P. 279

 
Audio → P. 186

More

Select to display the menu items.



Select Tune.



Select Presets.



Select and hold a desired number where you want to store the station/channel. Select to listen to a preset station/channel.

FM/AM/SiriusXM®/Pandora®/Aha™



- ◀ ▶: Select the preset station (FM/AM/Pandora®/Aha). Select to search that category/channel on the tune screen (SiriusXM®). Select and hold to search that station/channel on the preset screen (AM/FM/SiriusXM®). Select and hold to search up or down 10 channels on the tune screen (SiriusXM®).
- ◀▶ ▶▶: Select to search the selected band for a station with a strong signal. (AM/FM)
Select a song (Pandora®) or contents (Aha).
- ◀ ▶: Select the channel. In channel mode, select and hold to change the channel rapidly. (SiriusXM®)
Select to skip to the next/previous channel on the tune screen.
Select and hold to fast-forward/fast-rewind the current selection on tune screen (SiriusXM®).


CD/HDD/USB flash drive/Bluetooth® Audio

 
- ◀ ▶: Select ▶ to skip to the next folder and ◀ to skip to the beginning of the previous folder.
 - ◀▶ ▶▶: Select to change tracks. Select and hold to move rapidly within a track.
- iPod**
Album bar: Select an album.
- ◀▶ ▶▶: Select to change tracks. Select and hold to move rapidly within a track.


 

 


Voice Control Operation

Voice Portal Screen

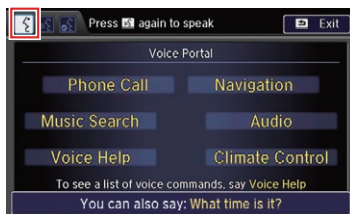
- 1 Press and release the  (Talk) button on the top screen of any mode. The system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt.




- The system beeps when ready for a command. Press the  (Hang-Up/Back) button to cancel.
 - Available voice commands are highlighted on the screen.
- 2 Say a voice command. After that follow the voice prompt and say a voice command.

- The audio system is muted during voice control mode.
- You can use other voice commands on the Voice Portal screen. The system recognizes only certain commands. Available navigation voice commands  **P. 414**
- Say  "Voice Help" to enter supported commands for the current screen. A voice help tutorial is also available. **Voice Help**  **P. 17**
- During the voice control mode, press and hold the  (Hang-Up/Back) button to return to the Voice Portal screen.
- Set **Voice Prompt** to **Off** to bypass the voice prompt. **Voice Recognition Settings**  **P. 26**
- Carefully read the usage note for the voice control. **Voice Control System**  **P. 24**


Interface Dial/ENTER Button Operation

Rotate dial 


Changes scale
Map screens







Highlights menu options
Menu screens

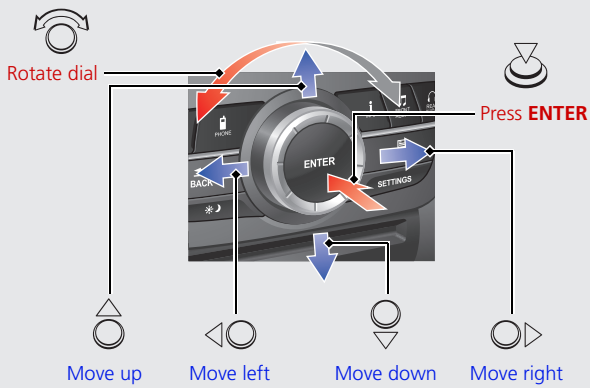


You will see these icons in each chapter.
They represent how you can operate the Interface Dial.




Move


 **up**  **down**  **left**  **right**

Scrolls map (8 directions)
Map screens

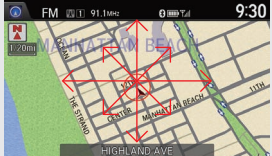
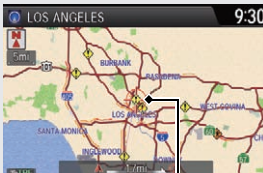


Selects labeled function
Menu screens




Press ENTER 

Selects function
Selects map icon
Map screens


Selects highlighted option
Menu screens


 




How to Enter Information



You can enter information (e.g. city names, street names, personal names, business names comprising letters, numbers, and symbols) when prompted on the input screen.


Using the Interface Dial

Rotate  to highlight a character.

- Select  to display upper/lower case characters.
- Select  to display symbols and accented characters.
- Select **Edit** (or move ) to edit the entered characters.

Press  to enter the highlighted character.

- Move  to select **Space** to enter a space character.
- Move  to select **Delete** to remove the last entered character.

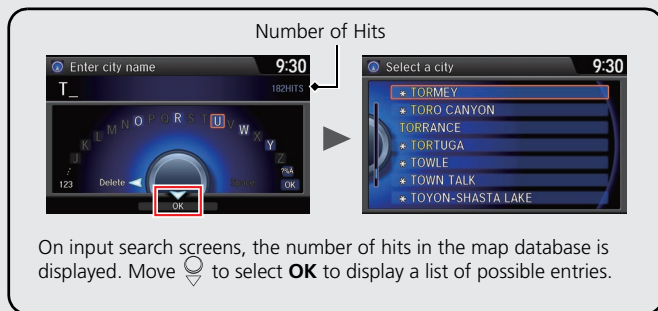

- You can also use the touchscreen to enter information.

U.S. models

Certain screen functions are limited or inoperable while the vehicle is moving. For these functions, use available voice commands or pull over to proceed.

Canadian models

Certain screen functions are limited or inoperable while the vehicle is moving.

Map Screen Legend

Map orientation → P. 78

- North up
- Heading up
- 3D map

AcuraLink® Message icon → P. 15

Streets

- Freeway/highway
- State route
- Road
- Unverified road
- Scenic road
- Pedestrian street
- State line
- One-way

GPS signal strength

- Best reception
- Good reception
- No icon: Poor/No reception

Current map scale

Map scale → P. 83

Feature areas

Park	Body of Water
Hospital	Cemetery
Shopping Mall	University
Golf Course	Industrial complex
Airport	Military Base

Current vehicle position → P. 81


Current street name

AcuraLink® signal indicator → P. 324


Landmark icons → P. 73

- Acura dealer
- Honda dealer (U.S.)
- Honda dealer (Canada)
- ATM
- School
- Parking lot
- Parking garage
- Grocery store
- Hotel/Lodging
- Gas station
- Hospital
- Post office
- Restaurant
- Freeway exit information (U.S.) / Highway exit information (Canada)



Traffic Information*/AcuraLink Real-Time Traffic*

Displays continuously updated traffic information and recalculates your route in response to traffic flow, incidents, or road closures. Traffic information is only available in certain areas.  P.165


Traffic incident icons

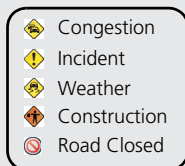

Traffic status indicator

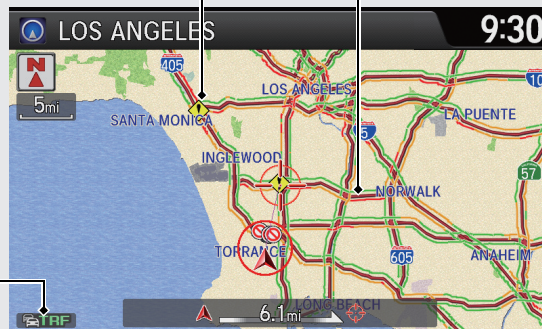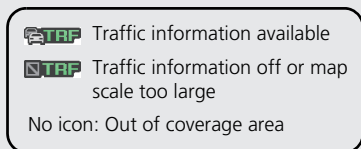

Traffic flow indicator

 

Canadian models

NOTE: AcuraLink Real-Time Traffic™ is a subscription service. For more information, contact an Acura dealer or visit www.acura.ca/owners/acuralink.

During Route Guidance

During route guidance, route information is displayed on the map screen and guidance screen. Press the NAV button to toggle between the map and guidance screen.

Map Screen

Tracking dots → P. 158

Guide to destination or waypoint

Estimated time to destination (waypoint) 0:05 to go 1.8 mi

Distance to destination (waypoint) 20mi

Distance of the actual route

Calculated route → P. 154

Next guidance indicator 21st St 0.4 mi

Distance to the next guidance point

Calculated route (unverified roads) → P. 156

Destination icon

Waypoint → P. 170

Guidance Screen

Guidance point

Guide to destination or waypoint

Estimated time to destination (waypoint) 0:31 to go 28 mi

Distance to destination (waypoint) 3.1mi

Distance of the actual route

Guidance indicator Street name of guidance point and distance to the guidance point


Lane guidance

Guidance point

No entry icon

Day or Night Mode

Press the (Display Mode) button to manually switch between day and night mode.

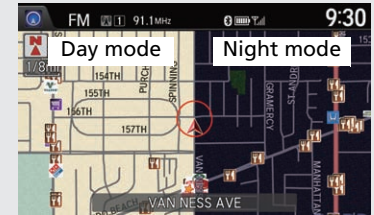

Multi-information Display

Turn-by-Turn Directions

The next guidance point appears on the multi-information display.

Remaining distance 500 ft

Street name of next guidance point Main St

Next driving maneuver is approaching



Navigation—Home Addresses and Going Home

The "Home" feature automatically routes you to your home address from any location simply by selecting Go Home.



Storing Your Home Address


- 1 Press the **SETTINGS** button.




- 2 Rotate  to select **Navi Settings**. Press .





- 3 Rotate  to select **Edit Go Home**. Press .

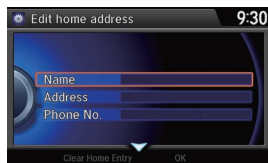- 4 Rotate  to select **Name**. Press .





- 5 Enter a name.






- 6 Rotate  to select **Address**. Press .

- 7 Enter an address.

- 8 Rotate  to select **Phone No.** Press .

- 9 Enter a phone number.





- 10 Move  and rotate  to select **OK**. Press .

Going Home

- 1 From the map screen, press the **MENU** button.



- 2 Rotate  to select **Go Home**. Press .



- 3 Rotate  to select **Set as Destination**. Press .

Navigation—Entering a Destination

Enter your destination using one of several methods, then follow route guidance on the map or guidance screen to your destination.

- 1 From the map screen, press the **MENU** button.



- 2 Rotate the dial to select **Address**. Press the **OK** button.



- 3 Rotate the dial to select **Street**. Press the **OK** button.



- 4 Enter the name of your destination street.



- 5 Rotate the dial to select your destination street from the list. Press the **OK** button.




- 6 Enter the street number. Move the dial to select **OK** when finished.



- 7 If there is more than one city with the specified street, a list of cities is displayed. Rotate the dial to select the desired city from the list. Press the **OK** button.




- 8 Rotate the dial to select **Set as Destination**. Press the **OK** button. Route guidance to the destination begins.

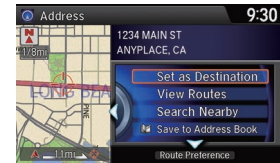

- **View Routes:** Choose one of three routes.



- **Route Preference:** Choose **Max** or **Min** for the five settings.

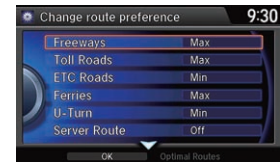

Navigation—Changing Route or Destination

You can alter your route by adding waypoints to visit, adding streets to avoid, or changing your destination during route guidance.

Adding a Waypoint (“Pit Stop”)

You can add up to four waypoints along your route. [➔ P.170](#)

- 1 From the map screen, press the **MENU** button.



- 2 Rotate to select **Destination List**. Press .

- 3 Rotate to select **Add New Destination**. Press .

- 4 Rotate to select **Find Along Route**. Press .

- 5 Rotate to select location and search method. Press .



- **Search Around:** Search around a location.
- **Search Along:** Search between two locations.

- 6 Select the icon category and location to add to the Destination List when prompted. Edit the order of destinations if necessary.

- 7 Move and rotate to select **Start Route**. Press .

Changing Your Destination

There are several methods you can use to specify a new destination during route guidance.

- **Selecting an icon on the map** [➔ P.178](#)
Scroll the map to position the cursor over a place/landmark icon or a new area on the map. Press twice.
- **Entering a new destination** [➔ P.179](#)
Press the **MENU** button. Move to select **Destination** and enter a new destination.

Canceling Your Route

- 1 Press the **MENU** button.




- 2 Rotate to select **Cancel Route**. Press .



AcuraLink®

AcuraLink® Messages

AcuraLink® provides a direct communication link between you and Acura. It sends and receives several kinds of messages through the Acura server.

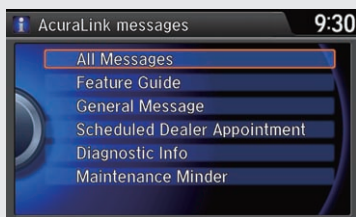

The following features are available:

- Vehicle feature guide
- Operating quick tips
- Safety and maintenance information
- Diagnostic information
- Dealer appointment and maintenance reminders

Rear Entertainment System* P. 325


The rear passengers can enjoy a wide array of audio/visual sources with the Rear Entertainment System (RES). The rear passengers can use wireless headphones and operate the system with the rear control panel.

Overhead Screen and Rear Control Panel

Press the Open button to open and pull down the screen.



Select the audio source.

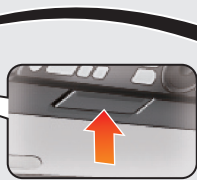

Press the Release button to remove the rear control panel.



Rotate the Interface Dial to select items.

(Power) Button

Turn the system on or off (when rear power is turned on).

(Light-up) Button

Illuminate the buttons on the rear control panel.

CH/FOLDER Bar

Select a channel (Radio) or a folder (Disc/USB).

TUNE/SKIP Bar

Find stations (FM/AM). Skip to the start/end of tracks or press and hold to fast reverse/fast forward (Disc/USB/DVD).

CATEGORY Bar

Select a category (SiriusXM®).



(Play/Pause) Button

Play or pause the playback.

TITLE SCROLL Button

Display track title, artist, and other text information.


Basic Operation


- 1** Open the overhead screen.
- 2** Press the **REAR**  (Power) button on the front control panel. 
- 3** Select the audio source. Press the **SOURCE** button and rotate the Interface Dial on the rear control panel to select an audio source. Press the **ENTER** button.

Voice Help


This navigation system comes with voice help, which shows you what command to say when using the voice command functions.

 
Command Help

- 1 Press and release the  (Talk) button.


- 2 Say  "Voice Help".




The voice help screen is displayed. The  "Voice Help" command is available on most screens.

 - 3 Say one of the options for a list of available commands by category (e.g.,  "Navigation Commands").






- 4 Say one of the options for a list of available commands by category (e.g.,  "Find Place Commands").




- 5 The system displays a list of all available commands for the category. Press  to hear the list read aloud.



Getting Started Tutorial




- 1 Move  and rotate  to select **Getting Started** on the voice help screen. Press .



For "Voice Settings" and "All Commands."  **P.26, 414**

- 2 The system reads the tips for the voice control.



- Rotate  to read the tips.
- Move  or  to display the previous/next page.

Q Why does the vehicle position icon on the map “lag” a short distance behind my actual position, especially at intersections?

A This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal.

Q Why does the “time to destination” display sometimes increase even though I am getting closer to my destination?

A The “time to destination” is based on your actual road speed and traffic conditions to give you a better estimate of arrival time.

 
Q How do I specify a destination when an entered city or street could not be found?


A Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.

Q How do I turn on the navigation system voice guidance?

A On the map screen, press  to display the Map Menu. Rotate  to select **Guidance Volume**. Adjust it to the preferred volume level.

Q My battery was disconnected or went dead and the navigation system is asking for a code. Where do I find it?

A In most cases you do not need to enter a code. Simply press and hold the  (Power) button for two seconds; the system should reactivate.

 **System Initialization** P. 400

How to Use This Manual


This section explains different methods on how you can easily find information in this manual.



Searching the Table of Contents

➔ P.1

Two types of Tables of Contents help you find your desired information.

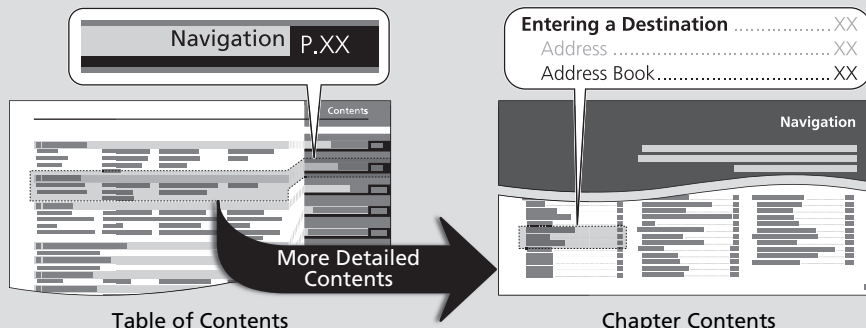

First, find the general chapter related to what you are looking for (e.g., entering a destination from the Address Book). Then, go to that chapter to view a more specific table of contents.


This more detailed table of contents shows you exactly what information is listed by section and title.



Searching the Index

➔ P.419

Menu items displayed on the audio/information screen (e.g., Address Book) can be found individually in the Index.

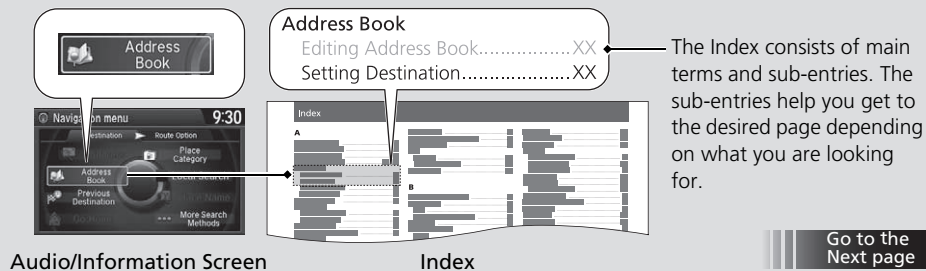

The Index consists of main terms and sub-entries. The sub-entries help you get to the desired page depending on what you are looking for.


Go to the Next page



▶▶ Entering a Destination ▶▶ Address Book

Address Book


MENU button ▶ Address Book

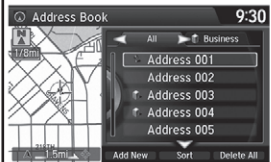Select an address stored in your address book to use as the destination.


 


1. Rotate  to select your destination from the list. Press .
2. Set the route to your destination.
 - ▶ Calculating the Route P. 92
 - ▶ Move <◀ or ▶> to display only the entries in the categories you have created.
 - ▶ Selecting an Address Book Category P. 26

Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select OK. PINs are optional.

- ▶ PIN Numbers P. 28

Move  and rotate  to select the following items:

- Add New Address: Adds an entry to the address book.
 - ▶ Adding an Address Book Entry P. 23
- Sort: Selects Sort by Name or Sort by Distance.
- Delete All: Deletes all entries in the address book.


After following the menu tree, step-by-step instructions explain how to achieve the desired result.

Menu Tree

The menu tree helps guide you through the system's menu options. To get to your desired function, follow the menu tree in order of the steps shown.

All menu options can also be activated with voice commands.

MENU button ▶ Address Book

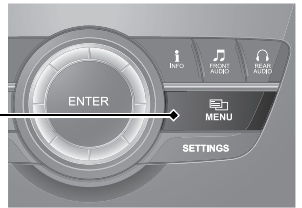



Press the hard button on the system control panel.

Press the **MENU** button.



Select the menu option with the Interface Dial.

Rotate  to select **Address Book**. Press .

Sample pages and images in this section may differ from the actual ones.



System Setup


This section describes the start-up procedure and the navigation and setup functions.



Start-up	22	Routing	55	Color	75
Voice Control System	24	Route Preference	56	View (Map Orientation)	78
Command Input	24	Unverified Routing	58	3D Angle Adjustment	79
Voice Recognition	25	Traffic Rerouting	60	Straight Line Guide	80
Voice Recognition Settings	26	Edit POI Search Radius Along Route	61	Current Location	81
Siri Eyes Free	27	Avoided Area	62	Map Legend	82
Interface Settings	28	Guidance	64	Display Tracking	86
Personal Information	40	Guidance Mode	65	Correct Vehicle Position	88
Address Book	41	Street Name Guidance	67	On Demand Multi-Use Display™	89
Home Address	48	Non-map Screens	68	Changing the Screen Settings	89
PIN Numbers	49	Guidance Point	69	Customized Features	90
Previous Destination	50	Estimated Time	70	Data Reset	123
Category History	51	Map	71	Defaulting All the Settings	123
Download POI	52	Showing Icons on Map	73		


The navigation system starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following Confirmation screen is displayed.

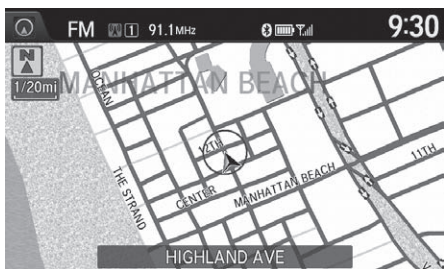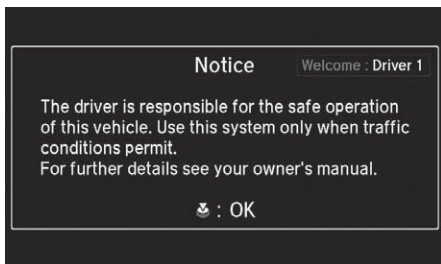

1. Press  to select **OK**.
 - ▶ If you do not select **OK**, the map screen is displayed after a certain period of time.
 - ▶ Your current position is displayed on the map screen.

2. Press the **NAV** button if a different mode is selected.
 - ▶ Your current position is displayed on the map screen.

 Start-up

If the navigation system loses power at any time, you may need to press and hold the  (Power) button for more than two seconds, or you may be prompted for the five-digit security code.

System Initialization P. 400

At start-up, the driver's keyless access remote is automatically detected and the address book settings, setup preferences, wallpapers, and audio settings for that driver (e.g., Driver 1) are loaded.

"OK" on the Confirmation screen cannot be selected by using a voice command.

The first time the **NAV** or any other mode button is pressed after you set the power mode to ACCESSORY or ON, a message guiding you to its menu screen is displayed.

■ Limitations for Manual Operation



Disabled option



Certain manual functions are disabled or inoperable while the vehicle is in motion.

U.S. models

You cannot select a grayed-out option using the Interface Dial until the vehicle is stopped.

Voice commands are still operable while the vehicle is in motion.

Your vehicle has a voice control system that allows hands-free operation for most of the navigation system functions.

The voice control system uses the  (Talk) and  (Hang-Up/Back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

A "Getting Started" feature provides a tutorial that explains how to use the voice control system.

 **Getting Started Tutorial** P. 17


Command Input

If the system does not understand a command or you wait too long to give a command, the system asks you to repeat the command.

When you give a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, listening to the feedback will help familiarize you with the way the system expects commands to be phrased.



If the system cannot perform a command or the command is not appropriate for the screen you are on, the system beeps.

On character input screens, a list of possible characters is displayed if the system does not recognize your command.

You can find out which voice commands are available for a particular screen using the  "Voice Help" command. The system will display and read the list of available commands to you.

 **Voice Help** P. 17

Voice Control System

When you press the  (Talk) button, the system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt and give a command.

Command Input

The audio system is muted while using the voice control system.

Voice Recognition

To achieve optimum voice recognition when using the navigation voice control system:

- Make sure the correct screen is displayed for the voice command that you are using.

The system recognizes only certain commands. Available navigation voice command.

➤ **Voice Commands** P. 414

- Close the windows and moonroof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak in a clear, natural speaking voice without pausing between words.
- Reduce any background noise and the climate controls fan speed if possible. The system may misinterpret your command if more than one person is speaking at the same time.
- Refer to the Voice Help feature.

➤ **Voice Help** P. 17



☒ Voice Recognition

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

Voice Recognition Settings

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Voice Reco**



Rotate  to select an item. Press .

The following items are available:

 


- **Voice Prompt:** Turns the voice prompt on or off.
On (factory default): Provides the voice prompts.
Off: Disables the feature.
- **Song By Voice:** Turns the Song By Voice™ on or off.
➤ **Settings Song By Voice™ (SBV)** P. 246
- **Song By Voice Phonetic Modification:** Modifies a voice command of music stored in the HDD or an iPod.
➤ **Phonetic Modification** P. 248
- **Phonebook Phonetic Modification:** Modifies a voice command for the phonebook.
➤ **Phonebook Phonetic Modification** P. 282
- **Guidance Volume:** Adjusts the voice prompt volume level.
➤ **Sound and Beep Settings** P. 29

Siri Eyes Free

When your compatible iPhone is paired and linked to the system via *Bluetooth*[®], you can say Siri-related commands. Make sure the Siri feature on your iPhone is turned on.

▶ Pairing a Phone P. 269



1. Press and hold the  (Talk) button for more than two seconds until you hear the Siri tone.
2. Talk to Siri.
 - ▶ When you hear the Siri tone, you can continue to respond without pressing any button. If the Siri tone times out, you have to press and hold the  (Talk) button again to reactivate Siri Eyes Free.
 - ▶ Press the  (Hang-Up/Back) button to cancel Siri Eyes Free.

▶ Siri Eyes Free

iPhone and Siri are trademarks of Apple, Inc.

Siri Eyes Free is available only on iPhone with iOS 6.0 and above.

Some commands work only on specific phone features or apps.

Some features may not be available for all countries or all areas. For details about Siri, refer to <http://www.apple.com>.

We recommend against using Siri other than in Eyes Free mode while operating a vehicle.


On Siri Eyes Free, the display remains the same and no feedback or commands appear.





While using Siri, you cannot operate the system with the built-in voice recognition.

Display Settings

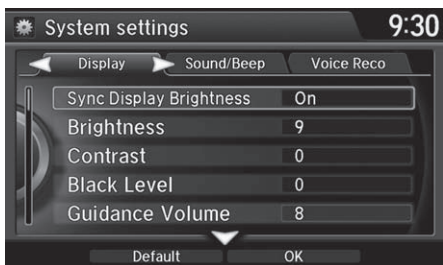 **SETTINGS** button ► **System Settings** ► **Display**

Adjusts the screen's preferences.



1. Rotate  to select an item. Press .
2. Rotate  to make the adjustment. Press .

The following items are available:

- **Sync Display Brightness:** Selects whether the display brightness synchronizes with the instrument panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.

Display Settings



You can set separate daytime and nighttime settings for **Brightness**, **Contrast**, and **Black Level**. Adjust each setting when the display is in either daytime or nighttime mode.

Sound and Beep Settings

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Sound/Beep**

Changes the system sound and beep settings.



Rotate  to select an item. Press .

The following items are available:

- **Guidance Volume:** Adjusts the navigation system volume level.
- **Verbal Reminder:** Turns the verbal reminders on and off.
On: Sets the verbal reminders.
Off: Disables the feature.

☒ Sound and Beep Settings

Guidance Volume


If you set **Guidance Volume** to **0**, you will not hear route guidance or voice command confirmations. You can adjust **Guidance Volume** by rotating the volume knob while the route guidance or voice command confirmations are announced.



If you then select **Voice** in the Map Menu, you will hear route guidance at the default volume.

Clock Adjustment

🔍 **SETTINGS** button ▶ **System Settings** ▶ **Clock**

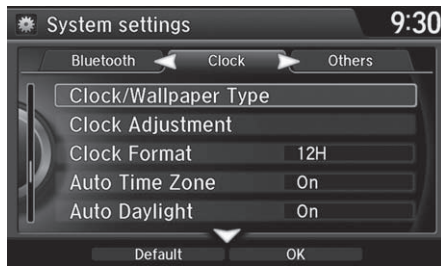Set the automatic adjustment of the system clock for daylight saving and international time zones.



Rotate  to select an item. Press .

The following items are available:

- **Clock/Wallpaper Type:** Changes the clock display type and the wallpaper type.
 - ▶ **Setting the Clock Type** P. 31
- **Clock Adjustment:** Adjust the current time manually.
 - ▶ **Setting the Clock** P. 31
- **Clock Format:** Sets the time notation to either 12-hour clock (**12H**, factory default) or 24-hour clock (**24H**).
- **Auto Time Zone:** The navigation system automatically adjusts the clock when driving through different time zones.
 - On** (factory default): Adjusts the clock automatically.
 - Off:** Disables the feature.
- **Auto Daylight:** The navigation system automatically adjusts the clock (“spring ahead” or “fall back” by one hour) when a daylight saving time change occurs.
 - On** (factory default): Adjusts the clock automatically.
 - Off:** Disables the feature.
- **Clock Reset:** Resets the settings of all items in the **Clock** group.

🔍 Clock Adjustment

Auto Time Zone

If you live and work in two different time zones, you may want to turn **Auto Time Zone** to **Off**. When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

Auto Daylight

This function is not activated in areas that have not adopted daylight saving time, even if you have set **Auto Daylight** to **On**.

You can turn the clock display in the audio/information screen on and off.

▶ **Header Clock Display** P. 39

Setting the Clock Type


SETTINGS button ▶ System Settings ▶ Clock ▶ Clock/Wallpaper Type
▶ Clock



1. Rotate to select an option to change the design. Press .
2. Move to select OK. Press .

Setting the Clock

SETTINGS button ▶ System Settings ▶ Clock ▶ Clock Adjustment

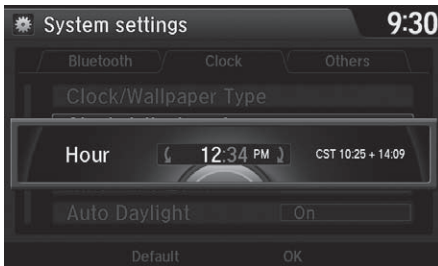

1. Rotate to select an item. Press .
2. Rotate to select a minute. Press .










Wallpaper Settings

Select, delete, and import wallpaper pictures for display on the screen.

Import Wallpaper

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type**



1. Connect the USB flash drive to the USB port.
2. Move  to select **Wallpaper**.
▶ The screen will change to the wallpaper list.
3. Move  and rotate  to select **Add New Wallpaper**. Press .
4. Rotate  to select a desired picture. Press .
▶ The preview is displayed on the left side on the screen.
5. Move  and rotate  to select **Start Import**. Press .
▶ The confirmation message will appear. Then the display will return to the wallpaper list.

Wallpaper Settings

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 255 characters.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is 10 MB.
- The maximum image size is 5,800 × 5,800 pixels.
- Up to 10 files can be saved for each driver (Driver 1 and Driver 2).
- If the USB flash drive does not have any pictures, the No files detected message appears.

Select Wallpaper

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type** ▶ **Wallpaper**



1. Rotate 🔄 to select a desired wallpaper. Press ⏹.
 - ▶ The preview is displayed on the left side on the screen.
 - ▶ The pop-up menu appears on the screen.
2. Rotate 🔄 to select **Set**. Press ⏹.
 - ▶ The display will return to the wallpaper list.

☒ Select Wallpaper

From the pop-up menu, rotate 🔄 to select **Preview** and press ⏹ to see a preview at full-size screen.


To go back to the previous screen, press ⏹ to select **OK**, or press the **BACK** button.

When the file size is large, it takes a while to be previewed.

Continued

■ Delete Wallpaper

📌 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type**
▶ **Wallpaper**

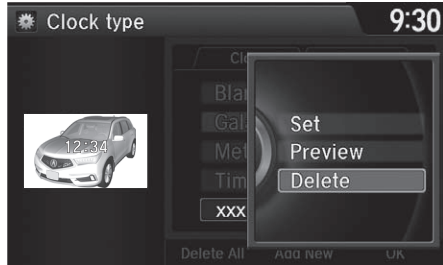



1. Rotate 🔄 to select a wallpaper that you want to delete. Press 🗑️.
 - ▶ The preview is displayed on the left side on the screen.
 - ▶ The pop-up menu appears on the screen.
2. Rotate 🔄 to select **Delete**. Press 🗑️.
 - ▶ The confirmation message will appear.
3. Rotate 🔄 to select **Yes**. Press 🗑️.
 - ▶ The display will return to the wallpaper list.

Unit Settings

🔧 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Units**

Sets the map units to either mile or km.



Rotate  to select the map unit.
Press .

Language Settings

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Language**

Set the system language used on all screens. You can choose from three languages: **English**, **Français** (French), **Español** (Spanish).



Rotate 🔄 to select the system language. Press ⏸.

🔗 Language Settings


Voice confirmation of cities and streets only occurs when **English** is the system language.



When **Français** or **Español** is selected, some messages continue to be displayed in English.

Operation Restriction Tips*

🔊 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Operation Restriction Tips**

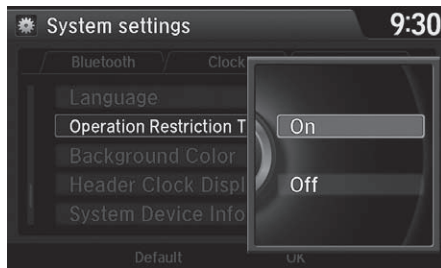Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.



Rotate  to select the map unit.
Press .


The following items are available:



- **On** (factory default): Displays a message.
- **Off**: Disables the message.

Background Color

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Background Color**

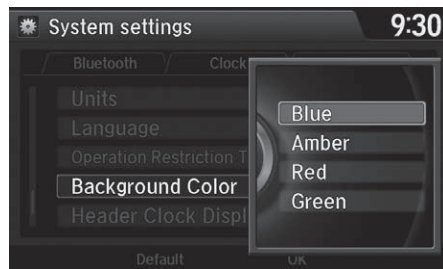Changes the background color of the audio/information screen and the On Demand Multi-Use Display™.






Rotate  to select a desired color.
Press .

Header Clock Display

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Header Clock Display**

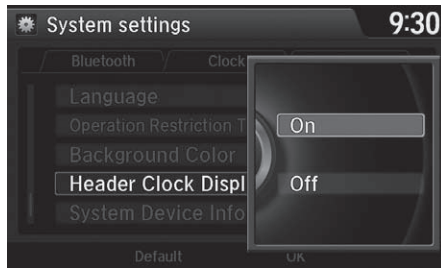Selects whether the clock display comes on.




Rotate  to select an option. Press .



The following options are available:

- **On** (factory default): The system displays the clock in the audio/information screen.
- **Off**: Disables the feature.

📍 SETTINGS button ► Navi Settings ► Personal Info

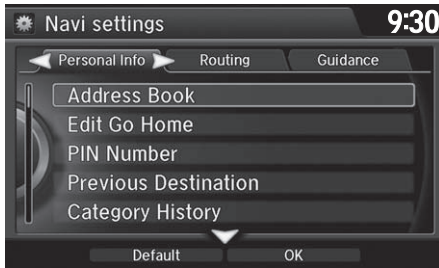Use the personal information menu to select and set your address books, home address, and PINs. You can also delete unwanted destinations from the list of previously routed destinations.



Rotate  to select an item. Press .

The following items are available:

- **Address Book:** Stores new addresses or edits your address book.
 ➤ **Address Book** P. 41
- **Edit Go Home:** Sets or edits your home address.
 ➤ **Home Address** P. 48
- **PIN Number:** Sets or changes your PIN.
 ➤ **PIN Numbers** P. 49
- **Previous Destination:** Deletes the destination history.
 ➤ **Previous Destination** P. 50
- **Category History:** Deletes the place categories you recently used.
 ➤ **Category History** P. 51
- **Download POI:** Edits and deletes the Imported POI categories.
 ➤ **Download POI** P. 52


📄 Personal Information

Personal information cannot be backed up or moved to another navigation system.

Address Book

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**


Store up to 200 address entries in two address books (Driver 1 and Driver 2). You can add, edit, and delete information in the address books.

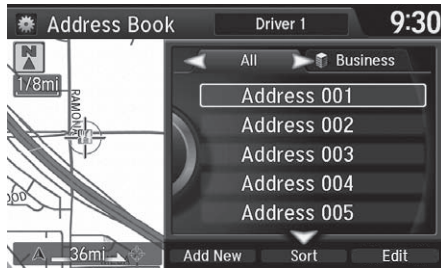


Move ◀○ or ○▶ to display only the addresses in the selected category. Move 📍 to change the user address book (**Driver 1** or **Driver 2**).

Address Book

Up to 200 addresses can be stored to each address book of Driver 1 and Driver 2 separately.

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

 **PIN Numbers** P. 49

Any address book categories you create are also displayed.

 **Selecting an Address Book Category** P. 44


■ Adding an Address Book Entry

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

This section explains how to enter the name and address.



1. Move 📍 and rotate 🔄 to select **Add New Address**. Press 📁.

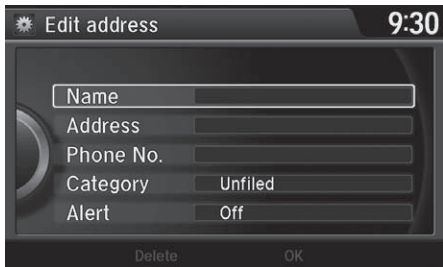

2. Rotate 🔄 to select an item. Press 📁.

The following items are available:

- **Name:** Edits the name of the entry.
- **Address:** Edits the address of the entry.
- **Phone No.:** Edits the phone number of the entry.
- **Category:** Specifies the category of the entry.

▣ Adding an Address Book Entry

If you do not give the address a name, one is automatically assigned (e.g., Address 001). You can re-enter, edit, or make changes to any entry. “**Address**” is the only required field.

- **Alert:** Alerts you when you approach the address entry.
On: Beeps and displays a message when your vehicle gets near the entry.
Off (factory default): Disables the feature.



3. Rotate to select **Name**. Press .
4. Enter a name or title. Move to select **OK**.
5. Rotate to select **Address**. Press .
6. Rotate to select an item for specifying the address. Press .

The following items are available:

- **Address:** Enter an address on the character input screen when prompted.
Address P. 128
- **Previous Destinations:** Select a previous destination.
Previous Destination P. 136
- **Current Position:** Select your current location.
- **Place Category:** Select a category to search for a place/landmark (e.g., Banking, Lodging).
Place Category P. 137
- **Local Search:** Sets a destination by using Local Search.
Local Search P. 139
- **Place Name:** Enter the name of a place/landmark.
Place Name P. 141
- **More Search Methods:** Displays additional search method entries.
Entering a Destination P. 126

Adding an Address Book Entry


When you use **Place Name** or **Place Category**, the phone number is automatically entered.

You can also add a phone number and category.

Continued

■ Editing an Address Book Entry

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

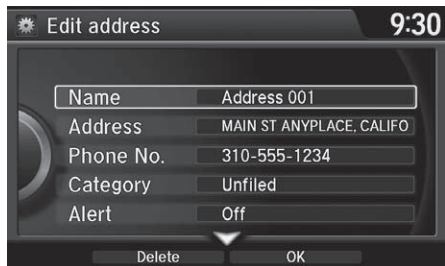


1. Rotate to select the address to edit. Press .
2. Enter the name, address, phone number, and category fields.
 - **Adding an Address Book Entry** P. 42
3. Move and rotate to select OK. Press .

▶▶ Editing an Address Book Entry

The entered contents are displayed on the Edit address screen.

■ Selecting an Address Book Category

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

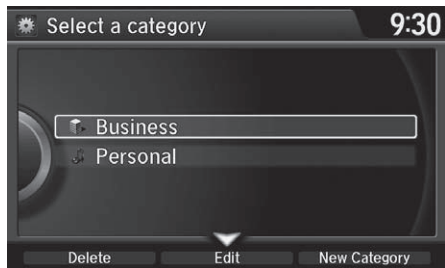




1. Rotate to select an address. Press .
2. Rotate to select **Category**. Press .
3. Rotate to select a category. Press .
 - ▶ Create a category in advance.
 - **Creating a new category** P. 45

▶▶ Selecting an Address Book Category





 
Up to 100 categories (including "Unfiled") can be stored to each address book of Driver 1 and Driver 2 separately.

If you delete a category that is used by other addresses, the category type for those addresses changes to "Unfiled".

■ Creating a new category


1. Move  and rotate  to select **New Category**. Press .
2. Enter a name and select an icon when prompted.
 - ▶ The created category is displayed in the list of categories.








■ Deleting or Editing a category

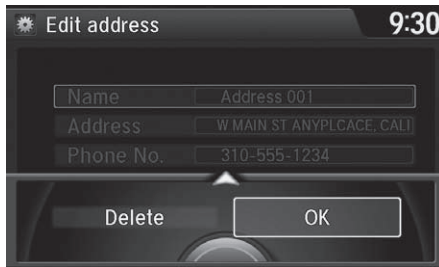1. Move  and rotate  to select **Delete** or **Edit**. Press .
2. Delete an existing category, or change the name and icon.
 - ▶ The selected category to delete is indicated with a trash icon. Move  and rotate  to select **OK**.

■ Deleting an Address Book Entry

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**



1. Rotate  to select the address to delete. Press .
2. Move  and rotate  to select **Delete**. Press .
3. Rotate  to select **Yes**. Press  to delete the address.

■ Deleting an Address Book Entry

When you transfer the vehicle to a third party, delete all address book entries.


■ Setting Place Shortcuts

You can store up to six addresses previously stored in your Address Book, and a home address for your preset destinations.

■ Storing an address on the shortcut



1. Select **Shortcuts**.
2. Select **Places**.
3. Select **Edit** or **No Entry**.
 - ▶ If you select **No Entry**, go to step 6.
4. Select **Add**.
 - ▶ All six preset icons appear.
5. Select the preset number to which you want to store an address.
 - ▶ The screen changes to a list of addresses stored in your address book.

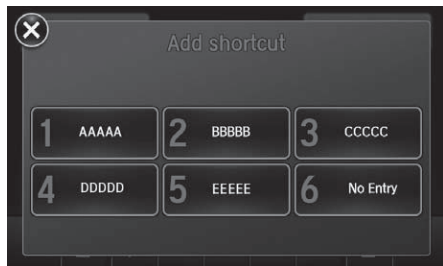



6. Select an address you want to store as a preset.


■ Deleting a preset address

1. Select Shortcuts.
2. Select Places.
3. Select Edit.
4. Select Delete.
5. Select the preset number with the destination you want to delete.

Home Address

SETTINGS button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Edit Go Home**

Set a home address that you frequently use.

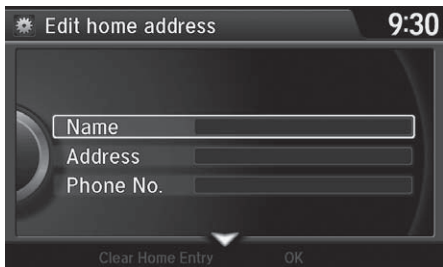

1. Edit the name, address, and phone number the same way as an address in the address book.

Adding an Address Book Entry P. 42

2. Move and rotate to select **OK**. Press .

Home Address

If you have PIN-protected your home addresses, enter your PIN when prompted. Press to select **OK**. PINs are optional.

PIN Numbers P. 49


If your home street is not in the system database, park on the nearest verified street to your home. When entering the "Address" field, rotate to select **Current Position** to use your current location as the home address and press .

You can delete a home address if necessary. Move and rotate to select **Clear Home Entry**. Press . Rotate to select **Yes**. Press .


When you transfer the vehicle to a third party, delete all home addresses.






The home icon is shown on the map screen on the 1/20 and 1/8 mile (80 and 200 m) scales.

PIN Numbers

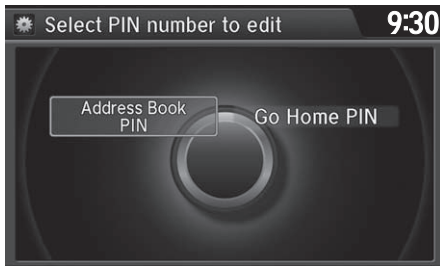 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **PIN Number**

 Set a four-digit PIN for protecting personal addresses and your home address. Once you set a PIN, you are prompted to enter it whenever you access a personal address or a home address.





1. Rotate  to select the PIN to create. Press .
2. Rotate  to select a digit to enter. Press  to select **OK**. Repeat to enter a new four-digit PIN.
3. Re-enter the new PIN, when prompted, to confirm the number you just entered. Press  to select **OK**.
 - ▶ If you have not entered the same number both times, an "INCORRECT PIN" message is displayed. Enter your PIN again.

PIN Numbers

PIN

Personal Identification Number (PIN) is a password used to access personal data.

PINs are optional. If you choose to use a PIN, keep a note of the number in a secure location. If you forget your PIN, a dealer will have to reset the navigation system and all of your stored information will be erased. The factory default is no PIN.



If you want to stop using a PIN, move  to select **Turn Off PIN Entry**. Press .

Previous Destination

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Previous Destination**



The navigation system maintains a list of your previously routed destinations as a shortcut for entering the same destination in the future. You can delete some or all of your previous destinations from the list.



1. Rotate  to select the destination to delete. Press .
 - ▶ Repeat the procedure as necessary.
 - ▶ Items to be deleted are indicated with a trash icon.





Trash icon

2. Move  and rotate  to select **OK** to delete the selected destinations.

Previous Destination


Up to 50 destinations can be stored.

To cancel the selection of a previous destination, rotate  to highlight the destination again. Press  to de-select it.


Category History

SETTINGS button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Category History**

The navigation system maintains a list of your recently used place categories as a shortcut for selecting the same categories in the future. You can delete some or all of your recently used categories from the list.

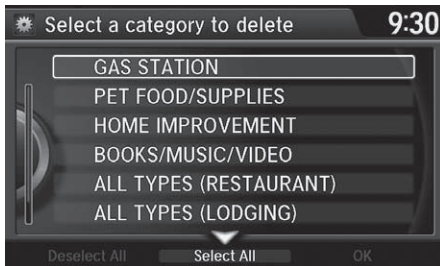

1. Rotate to select the category to delete. Press .
 - ▶ Repeat the procedure as necessary.
 - ▶ Items to be deleted are indicated with a trash icon.

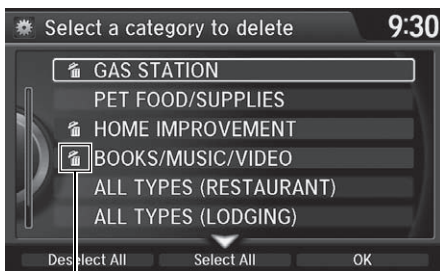

Trash icon

2. Move and rotate to select **OK** to delete the selected categories.


Category History

Up to 50 categories can be stored.

To cancel the selection of a category, rotate to highlight the category again. Press to de-select it.


Download POI

Import custom Points of Interest (POI) into the navigation system and set the POI as a destination. You can also add, edit, and delete POIs.

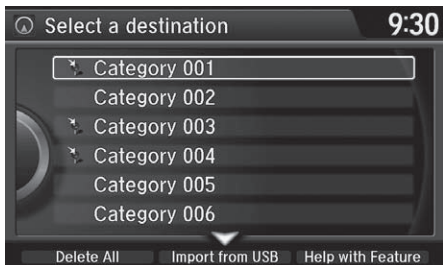

Importing POI Categories

MENU button (on map) ► **More Search Methods** ► **Download POI**

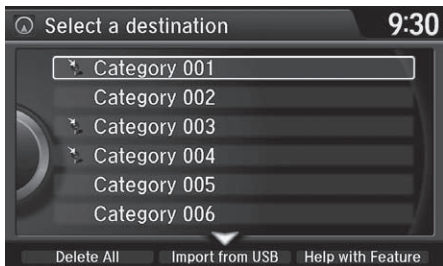

1. Connect a USB flash drive with stored POI data to the USB connector.
2. Move and rotate to select **Import from USB**. Press .

Importing POI Categories

For more information about connecting a USB flash drive.


Connecting a USB Flash Drive P. 256

POI data in csv and kml formats can be imported.

You can download POI data from various POI websites.

If you select **From AcuraLink**, you can download POI data from the AcuraLink® server.


AcuraLink® P. 314

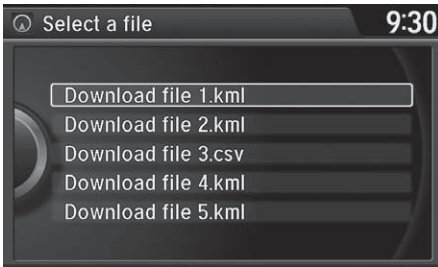

3. Rotate to select a category to import. Press .

Editing POI Categories

SETTINGS button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Download POI**

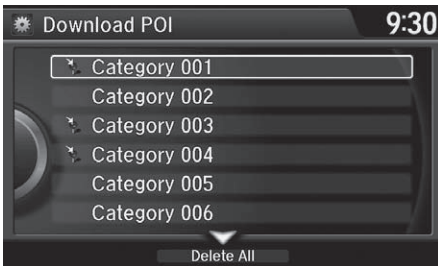



1. Rotate to select the downloaded POI category to edit. Press .

Editing POI Categories

If you select **From AcuraLink**, you can edit **Alert** only.




2. Rotate  to select an item. Press .



The following items are available:

- **Alert Setting:** Alerts you when you approach the places/landmarks in the category.
On: Beeps and displays a message when your vehicle gets near the places/landmarks in the category.
Off (factory default): Disables the feature.
- **Delete Category:** Deletes all places/landmarks and icon in the selected category.
- **Edit Icon:** Changes the category icon.

 **SETTINGS** button ► **Navi Settings** ► **Routing**

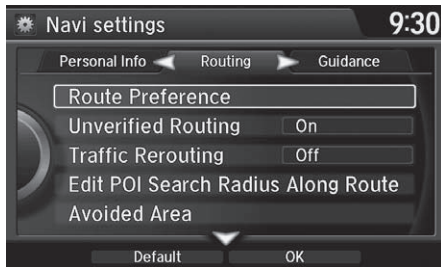Choose various settings that determine the navigation system functionality during route calculation.



Rotate  to select an item. Press .


The following items are available:

- **Route Preference:** Changes the route preferences (calculating method).
 ➤ **Route Preference** P. 56
- **Unverified Routing:** Sets whether you use the route guidance in unverified areas.
 ➤ **Unverified Routing** P. 58
- **Traffic Rerouting:** Sets whether you use automatic recalculation based on traffic information.
 ➤ **Traffic Rerouting** P. 60
- **Edit POI Search Radius Along Route:** Sets the distance from the route to find waypoints.
 ➤ **Edit POI Search Radius Along Route** P. 61
- **Avoided Area:** Specifies areas to avoid when calculating a route.
 ➤ **Avoided Area** P. 62

Route Preference

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Route Preference**

Change the route preference by selecting minimum or maximum driving methods.

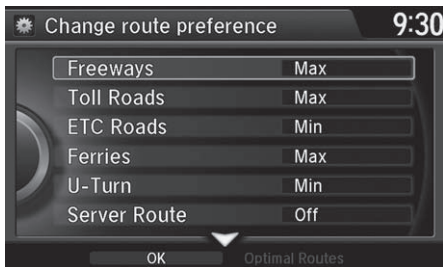

1. Rotate to select an item. Press .
2. Rotate to select **Min** or **Max**. Press .
 - ▶ Repeat step 1 and 2 as necessary.
3. Move to select **OK**. Press .

Route Preference

The calculated route may be the shortest route or the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
- Right turns are favored over left turns or U-turns.
- Time-restricted turns (turns prohibited at certain times of the day) are not used.


Check the ferry schedule when the calculated route includes ferry route.

ETC is short for the Electronic Toll Collection system.


Server Route*



- You can view three routes distributed from AcuraLink®.
 - ▶ **Viewing the Routes** P. 153
- Set to **On** and select **Optimal Routes** to select your desired route.
 - ▶ **Optimal Routes*** P. 57




Optimal Routes*



 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Route Preference**

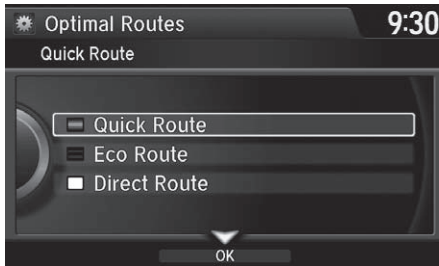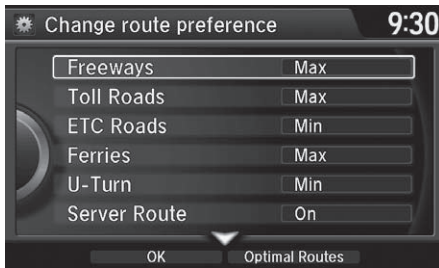


You can select desired routes by sorting the route list. The three top routes can be displayed on the **Select a route** screen.

 **Viewing the Routes** P. 153



1. Move  and rotate  to select **Optimal Routes**. Press .

2. Rotate  to select a route type. Press .

3. Move  and rotate  to select **OK**. Press .

Optimal Routes*


Optimal Routes is a subscription service. For more information, contact an Acura dealer or visit www.acura.ca/owners/acuralink.



* Not available on all models

Unverified Routing

🔗 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Unverified Routing**

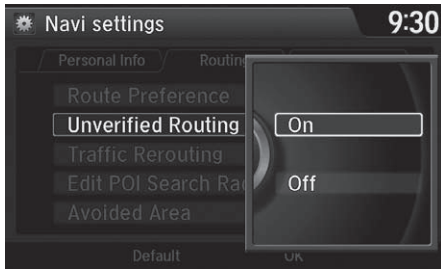Receive turn-by-turn map and voice guidance in unverified areas.





Rotate  to select **On** or **Off**. Press .

Differences	Off	On (factory default)
On or Off?	The driver wishes to manually navigate using the navigation map and choose the streets that lead to the destination.	The driver chooses to let the navigation system suggest possible routing, knowing that the guidance may not be accurate.
Route calculation	Route is usually longer, using verified roads whenever possible.	Route is shorter, but uses unverified (purple) streets that may not be accurate.

Unverified Routing

Unverified roads are found in rural areas, and typically include residential streets away from the center of a town. They may not be accurate, and can contain errors in location, naming, and address range.

Unverified roads are shown only when viewing the map in the 1/20, 1/8, 1/4, 1/2, 1 and 2 (mile) / 80, 200, 400, 800 (m), 1.6 and 3.2 (km) map scales.

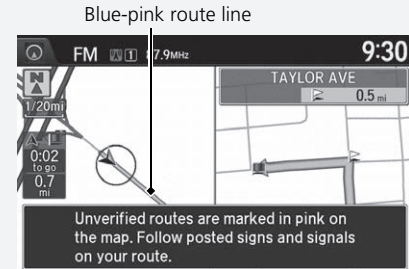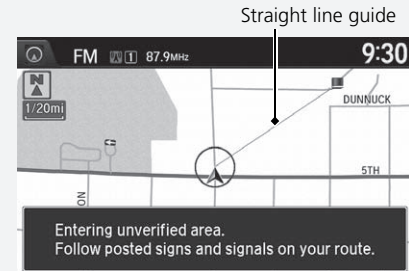


Differences	Off	On (factory default)
Route line	<p>The route line uses verified streets only (when possible). If Straight Line Guide is set to On, a pink vector line is displayed on the map that continually points to your destination.</p> <p>➤ Straight Line Guide P. 80</p>	<p>A blue-pink route line highlights suggested unverified streets on the map while traveling to your destination.</p>
Cautionary messages	<p>Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when starting route guidance, approaching an unverified area, and entering an unverified street.</p>	<p>Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when entering an unverified street.</p>
Guidance (map/voice)	<p>There is no turn-by-turn map or voice guidance.</p>	<p>Voice guidance commands end with the phrase “if possible” to remind you to verify all traffic restrictions.</p>
Directions list	<p>A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.</p>	<p>A direction list is provided showing street names and turn symbols in pink.</p>



Traffic Rerouting

🔗 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Traffic Rerouting**

A faster route can be calculated based on continuously updated traffic information.

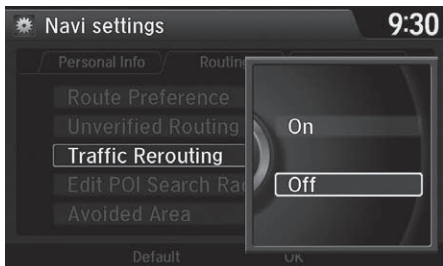➡ **Traffic Rerouting™** P. 165



Rotate  to select an option. Press .

The following options are available:

- **On:** The system reroutes automatically based on traffic information.
- **Off** (factory default): Disables the feature.

» Traffic Rerouting

You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states, Hawaii, and some cities in Canada.

➡ **Traffic Information** P. 406

Canadian models

Traffic Rerouting requires an AcuraLink Real-Time Traffic™ subscription.

➡ **AcuraLink®** P. 314

Automatic traffic rerouting may not provide a detour route depending on circumstances.


Edit POI Search Radius Along Route





 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Edit POI Search Radius Along Route**

Select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

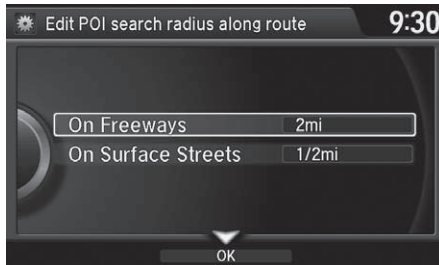 **Adding Waypoints** P. 170

You can specify a different search distance for freeways/highways and surface streets.



1. Rotate  to select an item. Press .
2. Rotate  to select a search distance. Press .

The following items are available:

- **On Freeways (U.S.)/On highways (Canada):** 1, 2, 5, or 10 miles (1.6, 3, 8, or 16 km) can be set. Factory default is 2 miles (3 km).
- **On Surface Streets:** 1/2, 1, 2, or 5 miles (0.8, 1.6, 3, or 8 km) can be set. Factory default is 1/2 mile (0.8 km).

Avoided Area

📍 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Avoided Area**

Specify up to five areas to avoid (e.g., road construction, closures), if possible, when the system calculates routes to your destination.



1. Move 📍 and rotate 🔄 to select **New Area**, or rotate 🔄 to select an existing area to edit.



2. Rotate 🔄 to select **Name** to label the area to avoid. Press 📄.
 3. Enter a name or title. Move 📍 to select **OK**.
 4. Rotate 🔄 to select **Area** to define the area to avoid. Press 📄.

The following options are available (after an area is set):

- **View Area:** Displays the selected avoided area on the map.
- **Delete:** Deletes the selected avoided area.

📄 Avoided Area



The maximum size of one side of an “avoid area” is approximately 1/2 mile (800 m).

If your selected area contains a freeway/highway, you are asked “Do you want to avoid freeways (highways)?” Answering “No” allows you to use a route through an avoid area on a freeway/highway without any pop-up messages.

You can select areas to avoid; however, you cannot select roads or areas that you want the system to use for routing.


You can enter up to 25 characters for the name.






5. Rotate  to select a method for specifying the area. Press .

The following options are available:

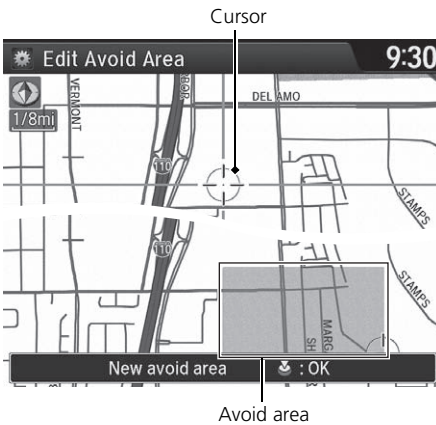- **Address:** Specify the general area by entering an address.
 - **Address** P. 128
- **Map Input:** Specify the general area by map input.
 - **Map Input** P. 148




6. If you select **Map Input**, scroll the map to position the cursor over your desired start point, adjusting the map scale as necessary. Press  to mark the start point.
- ▶ To redo the area selection, press the **BACK** button.
7. Scroll the map to “draw” the area. Press  to mark the end point.
8. Press  to select **OK**.
- ▶ The area you specify is displayed in the list of areas to avoid.



✕ Avoided Area

Avoid area can be set in the 1/20, 1/8, or 1/4 mile (80, 200, or 400 m) map scales.

📍 SETTINGS button ► Navi Settings ► Guidance

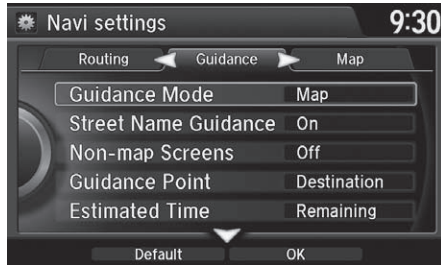Choose various settings that determine the navigation system functionality during route guidance.



Rotate  to select an item. Press .

The following items are available:

- **Guidance Mode:** Sets whether to display only the map screen or a split map-guidance screen.
 ➤ **Guidance Mode** P. 65
- **Street Name Guidance** (U.S. models): Sets whether to read out the street names during voice guidance.
 ➤ **Street Name Guidance** P. 67
- **Non-map Screens:** Sets whether the guidance screen interrupts the screen display.
 ➤ **Non-map Screens** P. 68
- **Guidance Point:** Sets whether to display the guidance information to the destination or the next waypoint.
 ➤ **Guidance Point** P. 69
- **Estimated Time:** Sets whether to display the remaining time or arrival time to the guidance point.
 ➤ **Estimated Time** P. 70

Guidance Mode

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Guidance Mode**


Select the display mode for the map and guidance screens.



Rotate to select an option. Press .

The following options are available:

- **Map** (factory default): Displays only the map screen. When you approach a guidance point, the next guidance point appears.

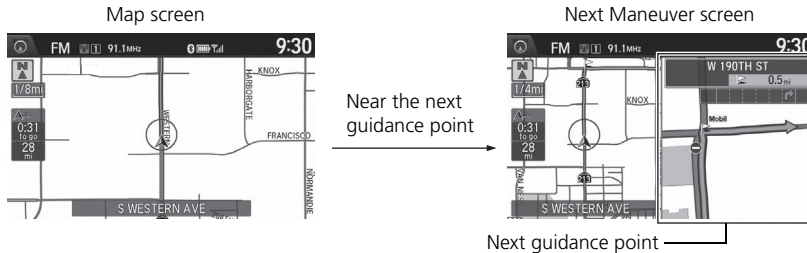

Guidance Mode

The guidance mode can also be selected from the Map Menu.


▶ **Map Menu** P. 161

Press the **NAV** button to switch between the map, next guidance direction, and a list of guidance directions.

Turn-by-Turn Directions


The next guidance point appears on the multi-information display.

▶ **Turn-by-Turn Directions** P. 11

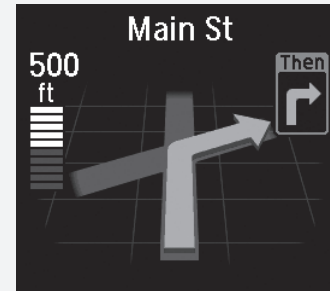


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.

- **Direction List:** Displays the map and direction list simultaneously on the map screen. When you approach a guidance point, the next guidance point appears.

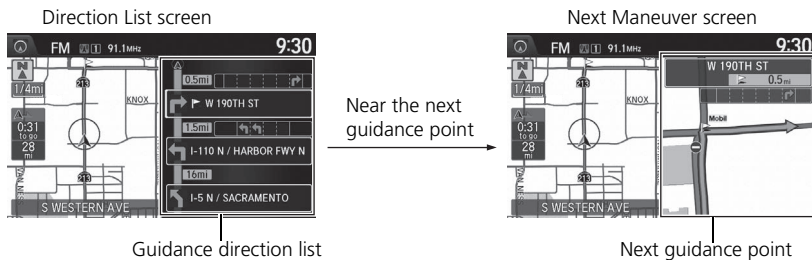

- **Next Maneuver:** Displays the map and next guidance point simultaneously on the map screen.

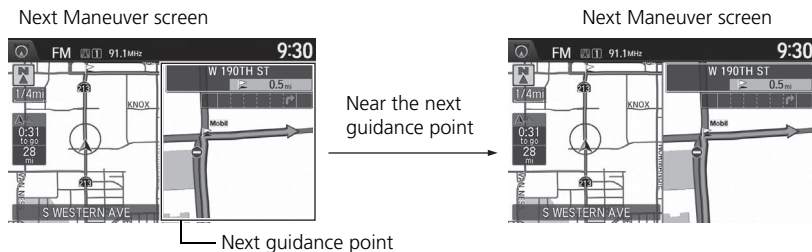



Street Name Guidance

 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Street Name Guidance**

The navigation system includes the street names during voice guidance (e.g., “Turn right on Main Street”).



Rotate  to select an option. Press .

The following options are available:

- **On** (factory default): Voice guidance includes the street names.
- **Off**: Disables the feature.

Street Name Guidance

This feature is only available when the system language is set to **English**.

This feature may not be available in non-English speaking areas.



This function is available on U.S. models only.

Non-map Screens

🔗 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Non-map Screens**

The navigation system temporarily interrupts the screen display to view the guidance screen as you approach a guidance point.



Rotate  to select an option. Press .


The following options are available:



- **On:** The guidance screen interrupts other mode screens (e.g., audio, phone, etc, except the rear view camera mode).
- **Off** (factory default): Disables the feature.

Guidance Point

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Guidance Point**

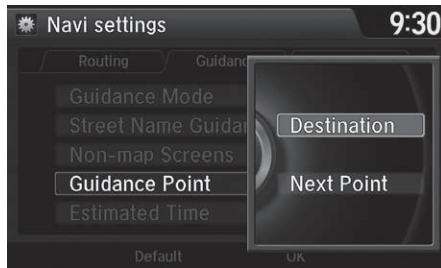Set the guidance point to display on the map screen.



Rotate  to select an option. Press .

The following options are available:



- **Destination** (factory default): Displays the remaining/arrival time and distance to the destination.
- **Next Point**: Displays the remaining/arrival time and distance to the next waypoint.

Estimated Time

🔗 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Estimated Time**

Select the estimated time to display on the screen.




Rotate  to select an option. Press .



The following options are available:

- **Arrival**: Displays the arrival time to the destination or the next waypoint.
- **Remaining** (factory default): Displays the remaining time to the destination or the next waypoint.

SETTINGS button ► **Navi Settings** ► **Map**

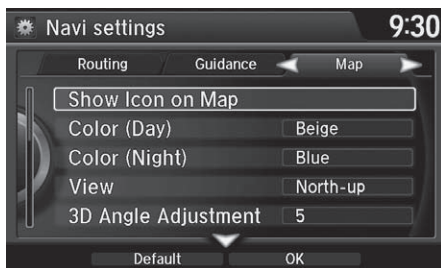Select the landmark icons to display on the map, change the orientation of the map, display your current location, and learn the meanings of the icons, colors, and symbols displayed on the map.



Rotate  to select an item. Press .

The following items are available:

- **Show Icon on Map:** Selects the icons to display on the map.
 ➤ **Showing Icons on Map** P. 73
- **Color (Day):** Selects the color of the map for the Day mode.
 ➤ **Color** P. 75
- **Color (Night):** Selects the color of the map for the Night mode.
 ➤ **Color** P. 75
- **View:** Selects the map orientation (**North-up**, **Heading-up**, or **3D map**).
 ➤ **View (Map Orientation)** P. 78
- **3D Angle Adjustment:** Adjusts the viewing angle for the 3D map.
 ➤ **3D Angle Adjustment** P. 79
- **Straight Line Guide:** Sets whether to display a straight guideline to the destination or waypoint.
 ➤ **Straight Line Guide** P. 80



- **Current Location:** Displays and saves your current location.
 - ▶ **Current Location** P. 81
- **Map Legend:** Displays an overview of the map features.
 - ▶ **Map Legend** P. 82
- **Display Tracking:** Sets whether to display the tracking dots on the map.
 - ▶ **Display Tracking** P. 86
- **Delete Tracking:** Deletes the tracking dots on the map.
 - ▶ **Deleting Tracking Dots** P. 87
- **Correct Vehicle Position:** Adjusts the position of the vehicle on the map.
 - ▶ **Correct Vehicle Position** P. 88
- **System Device Information:** Views database, software, device, and vehicle identification information.
 - ▶ **System Device Information** P. 351
- **Map Data Update:** Checks the map data update status when updating the map database.
 - ▶ **Map Data Update** P. 351

Showing Icons on Map



 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Show Icon on Map**

Select the icons that are displayed on the map.





1. Rotate  to select an item. Press .





2. Rotate  to select an option. Press .


▶ Repeat step 1 and 2 as necessary.


3. Move  to select OK. Press .

The following options are available:

- **All On:** Displays the landmark icons.
 **Map Screen Legend** P. 9
- **Customize:** Fine-tunes the icon display.
 **Fine-tuning the Icons** P. 74
- **Off:** Hides the landmark icons.

Showing Icons on Map




If you have PIN-protected your address book, enter your PIN when prompted. Move  to select **OK**. PINs are optional.


 **PIN Numbers** P. 49




■ Fine-tuning the Icons

Icons in some categories can be fine-tuned to display or hide.

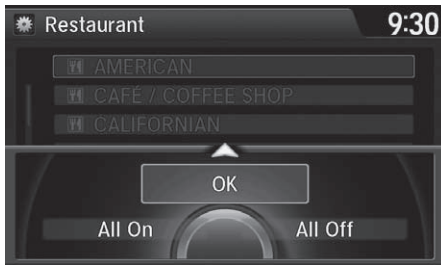

1. Rotate  to select the icons to display on the map. Press .
 - ▶ Pressing  toggles the icon display on or off.
 - ▶ Repeat the procedure as necessary.




2. Move  and rotate  to select OK. Press .



Color

Set separate map colors for Day and Night modes.

Color (Day)

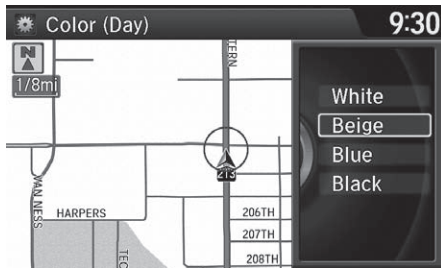SETTINGS button ▶ Navi Settings ▶ Map ▶ Color (Day)



Rotate  to select a color for the Day mode. Press .

Color (Night)

SETTINGS button ▶ Navi Settings ▶ Map ▶ Color (Night)



Rotate  to select a color for the Night mode. Press .


Color (Day)

The factory default is set to Beige.





Color (Night)

The factory default is set to Blue.

■ Switching Display Mode Manually

Set the screen brightness separately for Day and Night modes. Press the  (Display Mode) button to cycle through the display modes (Day to Night to Off).






1. Press the  (Display Mode) button.
 - ▶ The Brightness bar is displayed for a few seconds.
 - ▶ Rotate  to adjust the brightness. Press .
2. Press the  (Display Mode) button again.
 - ▶ Repeat the procedure to switch the display modes.

▣ Switching Display Mode Manually

A visual guide helps you see the difference between Day and Night modes.

▶ **Day or Night Mode** P. 11

■ Illumination	■ Priority	■ Operation
 (Display Mode) button	1	Selects Day, Night, or Off display mode. This button has the highest priority and overrides all other display control adjustments listed below. Remember: Once you press this button, you assume full manual control of the display mode until the power mode is set to VEHICLE OFF (LOCK).
Sunlight sensor (see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides the Night display and displays the Day display mode. Remember: If desired, use the  (Display Mode) button to override this automatic choice.



Illumination	Priority	Operation
Dash illumination adjustment buttons (see your Owner's Manual for location)	3	When headlights are turned on, and you wish to have the Day display mode, adjust the illumination to the full brightness setting (beeps). Remember: Adjust the dash brightness back to mid-range to allow auto switching by sensing if the headlights are on or off.
Headlights (Auto/ On/Off)	4	When turned on, the display changes to Night display mode. The previous three controls listed above can "cancel" this function. Remember: Use the  (Display Mode) button, to adjust the dash illumination to full brightness, or set the display to your desired choice.
Screen color choice	N/A	The user can select the color of the screen that will be displayed for the Day and Night display modes described above.

View (Map Orientation)

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **View**

Select the map orientation.



Rotate  to select an option. Press .

The following options are available:

- **North-up:** Displays the map with North always pointing up.
- **Heading-up:** Displays the map so that the direction you are traveling is always pointing up.
- **3D Map:** Displays the bird's eye view map.

📍 View (Map Orientation)

The red arrow in the symbol always points North.

Heading-up and 3D map view switch to the North-up view on 2 miles (3.2 km) or wider map scale.

The bird's eye view map switches to the Heading-up map while scrolling the map.


The viewing angle for the bird's eye view can be adjusted.



➡ **3D Angle Adjustment** P. 79

3D Angle Adjustment

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **3D Angle Adjustment**

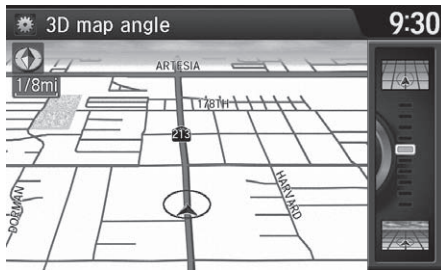Adjust the viewing angle.






Rotate  to adjust the angle. Press .

Straight Line Guide

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Straight Line Guide**

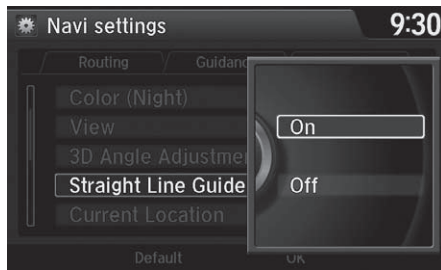Set whether to display a straight guideline to the destination or waypoint.



Rotate  to select an option. Press .

The following options are available:



- **On** (factory default): Displays the straight guideline on the map.
- **Off**: Disables the feature.



Current Location



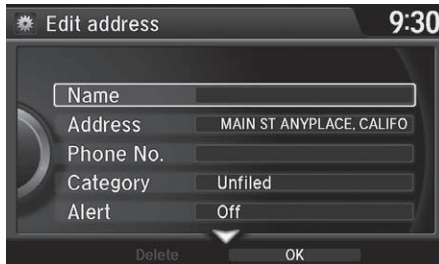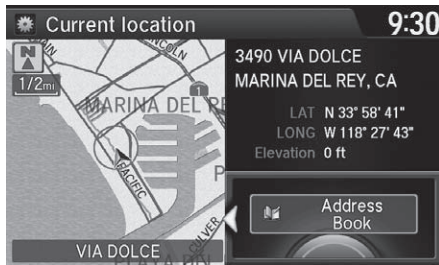

 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Current Location**

Display and save your current location for future use as a destination. The address, latitude, longitude, and elevation of your current location are displayed.


■ To save your current location in the address book:




1. Press  to select **Address Book**.
▶ Move  to scroll the map as necessary.

2. Edit the name, phone number, and category.
▶  **Address Book** P. 41
3. Move  and rotate  to select **OK**. Press .

▶▶ Current Location

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

▶  **PIN Numbers** P. 49

The elevation is not displayed if the system is receiving insufficient GPS information. When elevation is displayed, it may differ with roadside elevation signs by ± 100 ft (± 30 m) or more.

Saving your current location does not change or cancel your current route.

Map Legend

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Map Legend**

See an overview of the map lines, areas, routes, traffic information, and navigation icons.



Move ◀○ or ○▶ to select an item.

▶ The system displays the map legend.

Map Legend

A visual guide helps you see the map legend.

➤ **Map Screen Legend** P. 9

➤ **Traffic Rerouting™** P. 165

Map Scale and Functions

The functions that are available from the map screen depend on the map scale.

Function	page	Map Scale (top: mile, bottom: metric)											
		1/20	1/8	1/4	1/2	1	2	5	15	50	150	350	1000
		80	200	400	800	1.6	3.2	8	24	80	240	560	1600
Icon display													
Landmark icon	9	✓	✓										
Exit info.	9			✓	✓	✓							
One-way traffic	9	✓											
Waypoint "flag"	11	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Traffic incident	10	✓	✓	✓	✓	✓	✓	✓					
Map orientation													
Heading-up	78	✓	✓	✓	✓	✓							
North-up	78	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3D map	78	✓	✓	✓	✓	✓							
Others													
Tracking dots	158	✓	✓	✓	✓								
Unverified road	9	✓	✓	✓	✓	✓	✓						
Map features	9	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Avoid areas	62	✓	✓	✓									
Traffic speed	10	✓	✓	✓	✓	✓	✓	✓					

Continued

Map Scale and Functions

You can change between mile or km.

▶ **Unit Settings** P. 35

■ Map Icons and Functions

Display or hide all icons on the map screen, with the exception of Honda/Acura Dealer icons which are always shown.

■ Landmark icon

Type	Icon display control	Icon selectable	Icon searchable
Honda/Acura dealer	Always on	Yes	Yes
Hospital	Yes	Yes	Yes
School	Yes	Yes	Yes
ATM	Yes	Yes	Yes
Gas station	Yes	Yes	Yes
Restaurants	Yes	Yes	Yes
Post office	Yes	Yes	Yes
Grocery store	Yes	Yes	Yes
Hotel/Lodging	Yes	Yes	Yes
Police station	No icon	No	Yes
Shopping, Tourist attraction, Bank	No icon	No	Yes
Parking garage	Yes	Yes	Yes
Parking lot	Yes	Yes	Yes
Freeway/Highway exit info.	Yes	Yes	N/A

☒ Map Icons and Functions


Icon display control

Icons that can be displayed or hidden using the Interface Dial or voice command.

Icon selectable

Icons that can be selected as a destination using the Interface Dial.

Icon searchable


Icons that can be searched using the  Find Nearest voice command.

■ Traffic icon

Type	Icon display control	Icon selectable	Icon searchable
Traffic incident	Yes	No	N/A

☒ Traffic icon

When you use the Interface Dial to position the cursor (round red circle) over the traffic incident icon, you can view the summary of the incident.



Press  on the traffic incident icon to view a pop-up message describing the incident in detail.

Display Tracking

🔧 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Display Tracking**

The navigation system can be set to display white tracking dots (“breadcrumbs”) on the map screen.




Rotate  to select an option. Press .

The following options are available:

- **On:** The system displays the white tracking dots.
 ➡ **Tracking Dots** P. 158
- **Off** (factory default): Disables the feature.

■ Deleting Tracking Dots

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Delete Tracking**

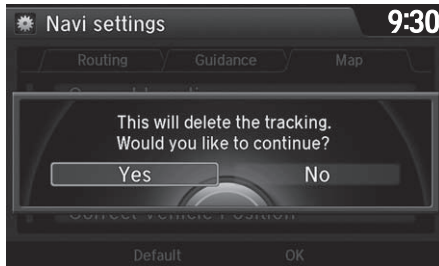

Rotate 🔄 to select **Yes**. Press 📁.


☒ Deleting Tracking Dots

When you transfer the vehicle to a third party, delete the tracking dots.

Correct Vehicle Position

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Correct Vehicle Position**

Manually adjust the current position of the vehicle as displayed on the map screen if the position appears to be incorrect.

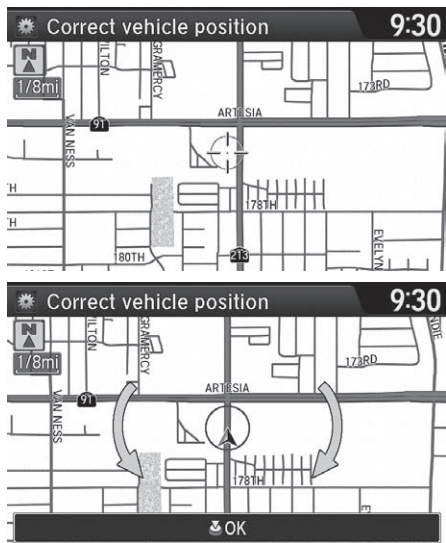

1. Put the vehicle in Park.
2. Rotate 🔄 to select **Correct Vehicle Position**. Press ⏸.
3. Scroll the map to position the cursor over at your correct position. Press ⏸.
4. Rotate 🔄 to position the arrowhead in the correct direction the vehicle is facing.
5. Press ⏸ to select **OK**.

🔍 Correct Vehicle Position

An apparent position error can occur where buildings, tunnels, and other objects block or reflect the GPS signals, forcing the system to use “dead reckoning” to determine your location and direction.

Using this function to adjust the vehicle position is not recommended. When the system reacquires a GPS signal, it will automatically place the vehicle in the correct location.

If you continually have to adjust the vehicle position, you may have problems with GPS reception or there may be database errors.

➡ **System Limitations** P. 402

Changing the Screen Settings

Adjusts the screen settings of the On Demand Multi-Use Display™.





1. Select **More**.
2. Select **Screen Settings**.
3. Use **+**, **-** or other icons to adjust the setting.
 - ▶ Use the **▲/▼** icons to turn the page.
 - ▶ Select **X** to go back to the previous screen.


The followings are adjustable screen settings:

- **Sync Display Brightness:** Selects whether the screen brightness synchronizes with the instrument panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.
- **Display:** Changes between the daytime or nighttime modes.
- **Beep:** Turns on or off the beep that sounds every time you touch the screen.
- **Keyboard:** Changes the on-screen keyboard from the alphabetical order to the qwerty type.
- **Vibration:** Turns on or off the vibration when you touch the screen.
- **Fade Timer:** Sets the screen black out timing.

Use the audio/information screen to customize certain features.


 

 


■ How to customize

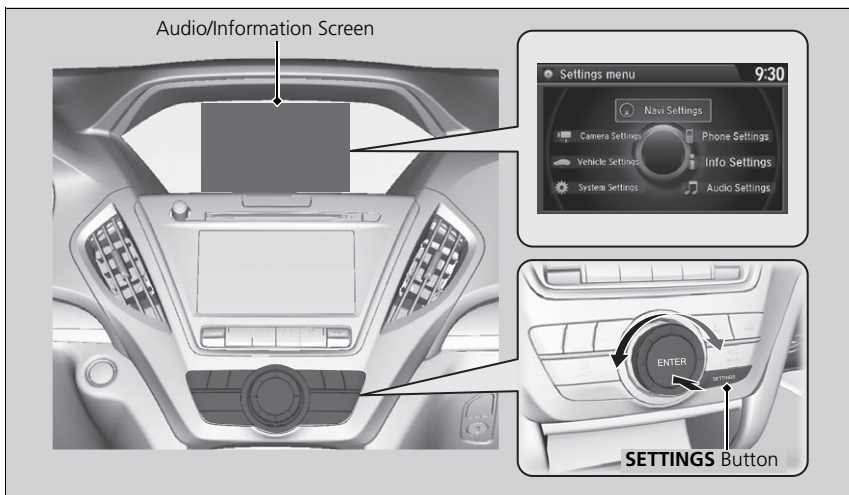Select your desired setting item by pressing the **SETTINGS** button, then rotating  while the power mode is ON and the vehicle is at a complete stop. Press .



» Customized Features


When you customize settings, make sure that the vehicle is at a complete stop and select the gear position to **P**.


To customize other features, rotate , move , , , or , and press .


➔ **List of customizable options P. 100**

■ Customization flow


Press the **SETTINGS** button.

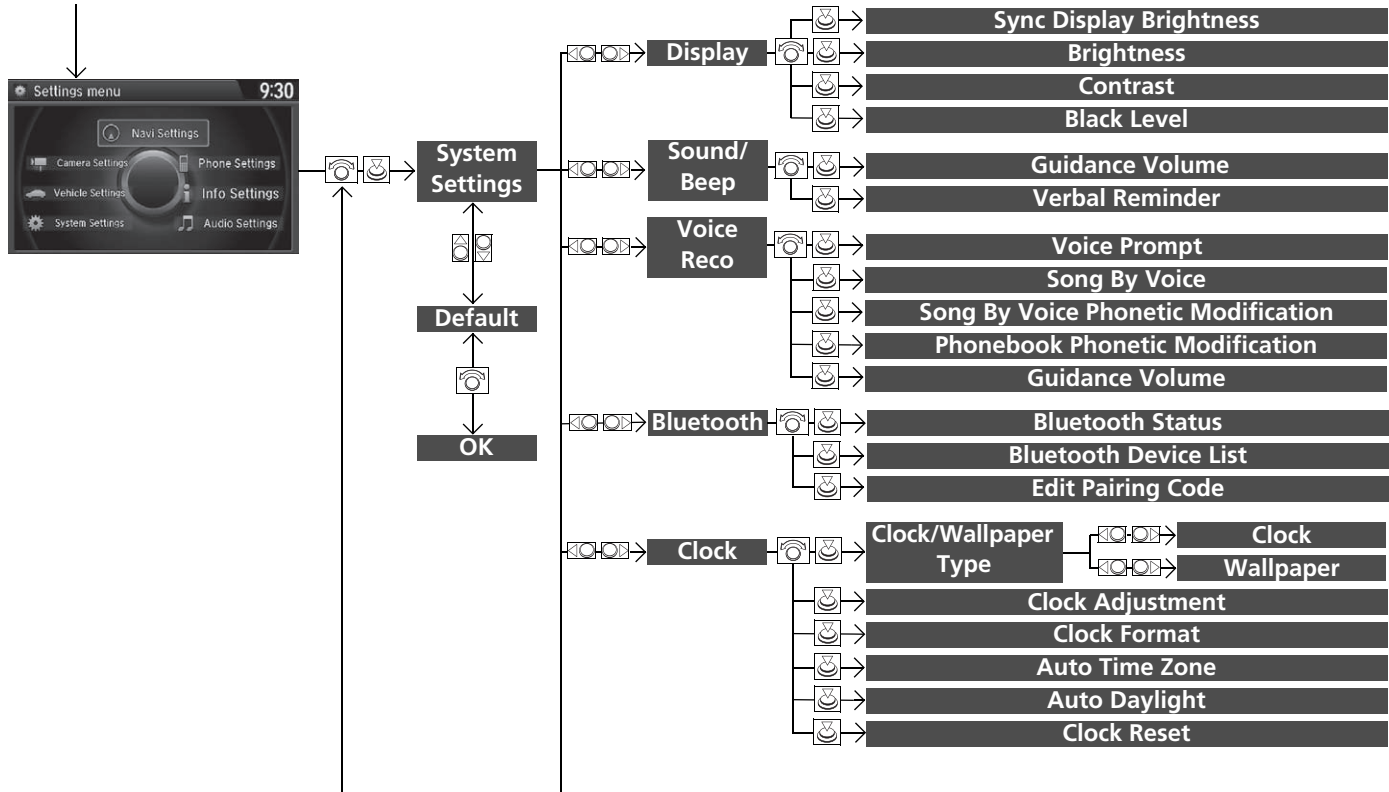


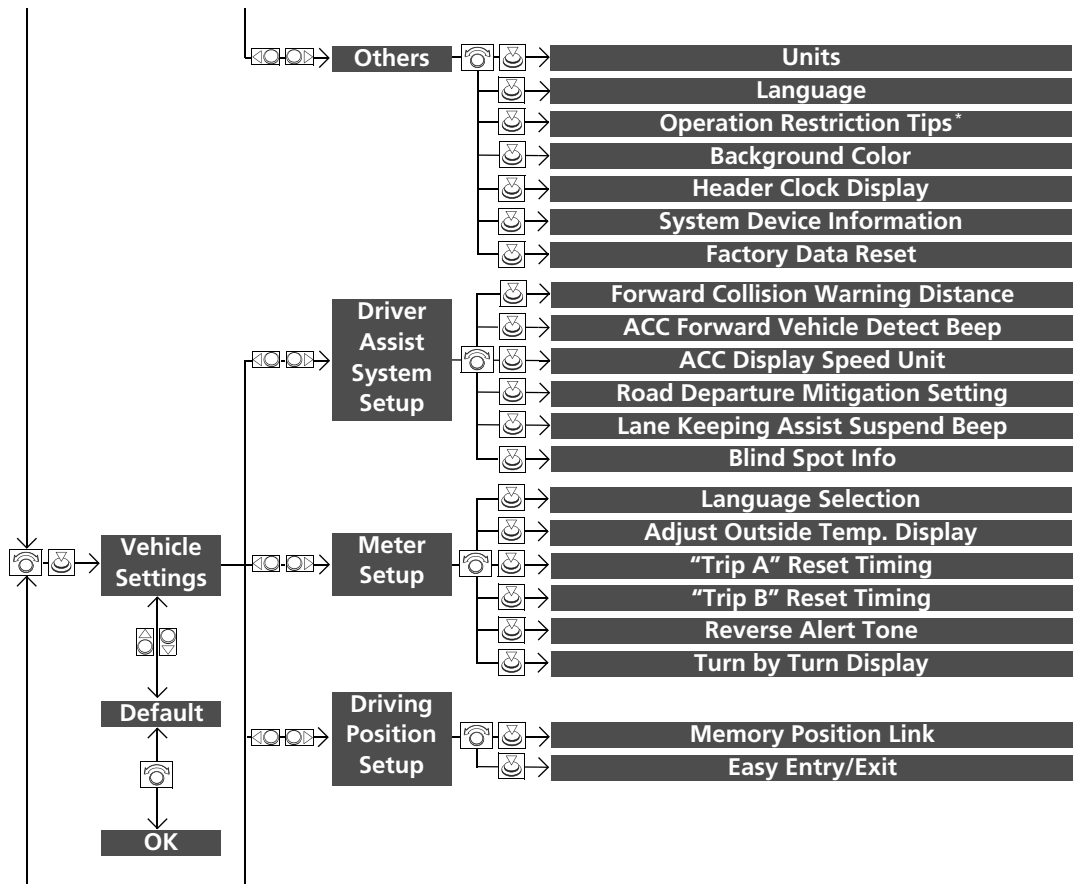


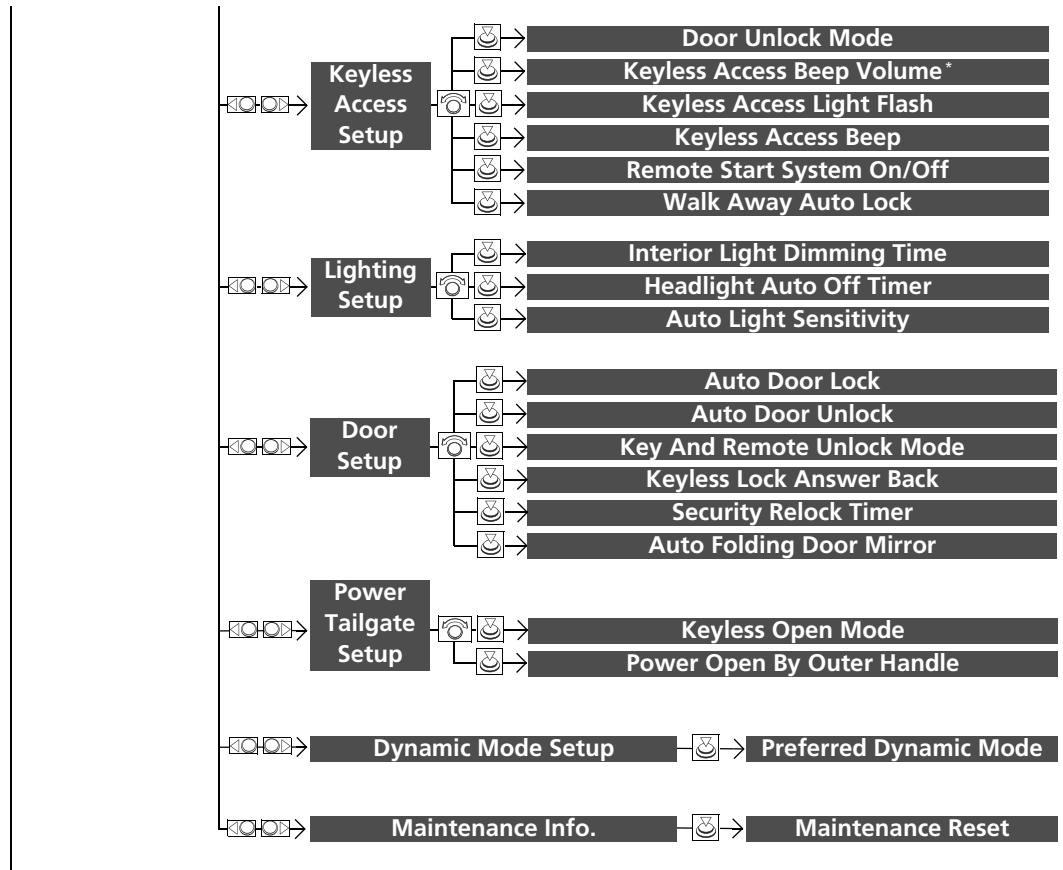


* Not available on all models

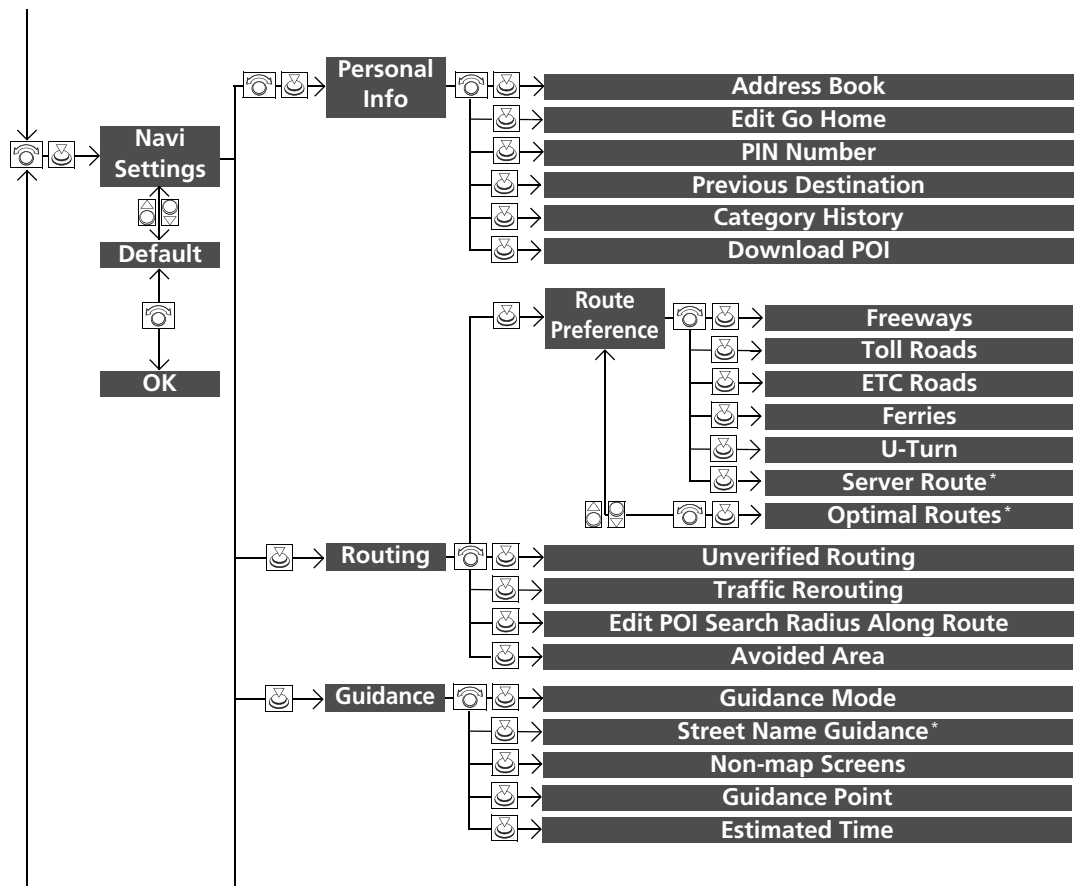

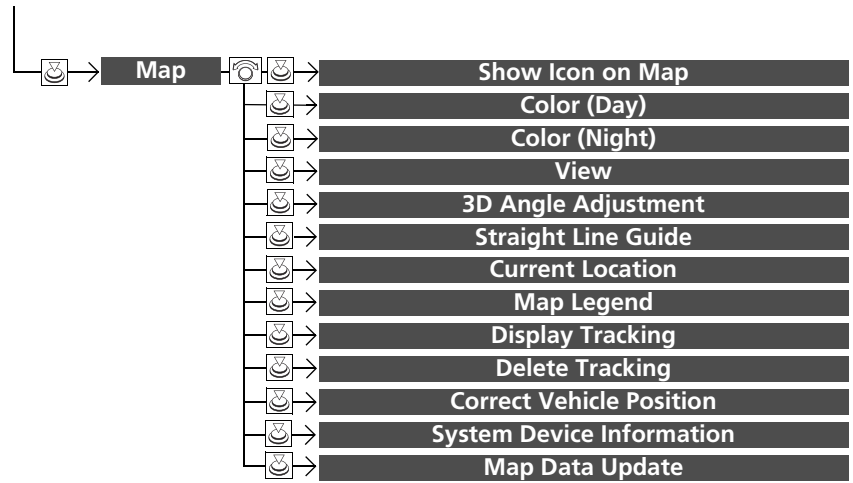


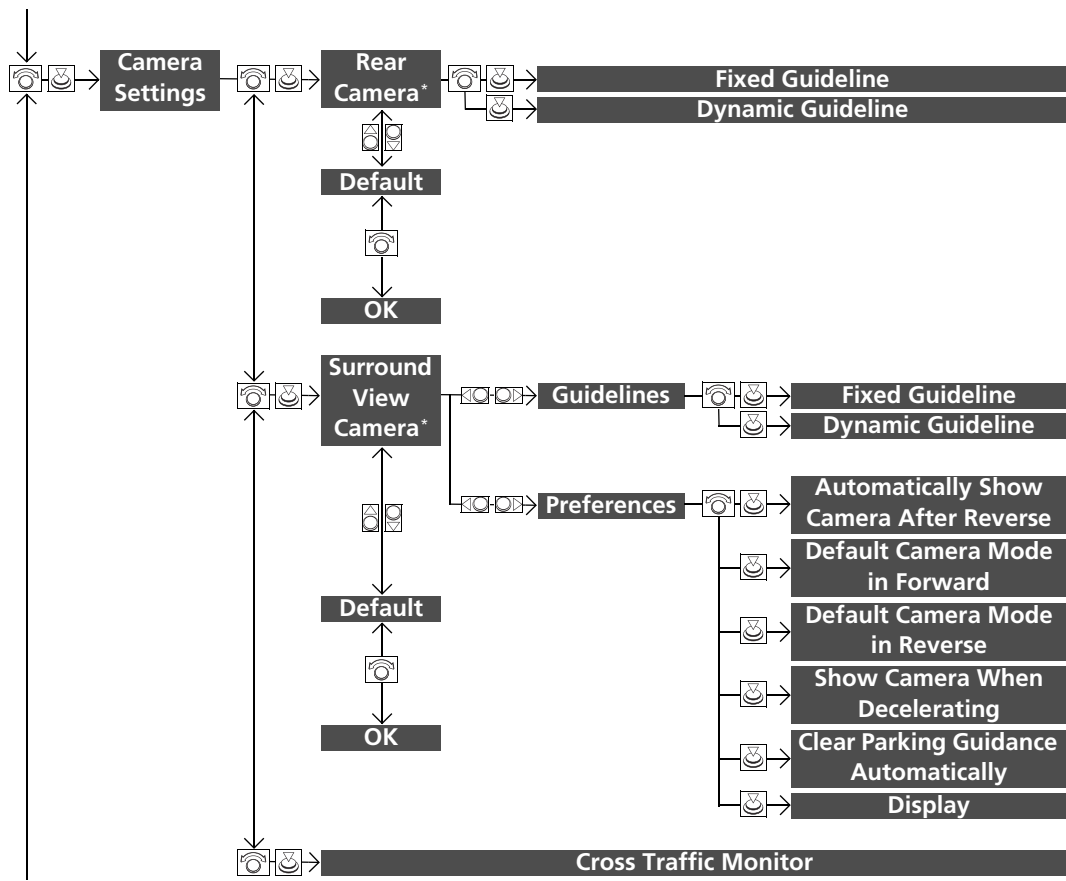


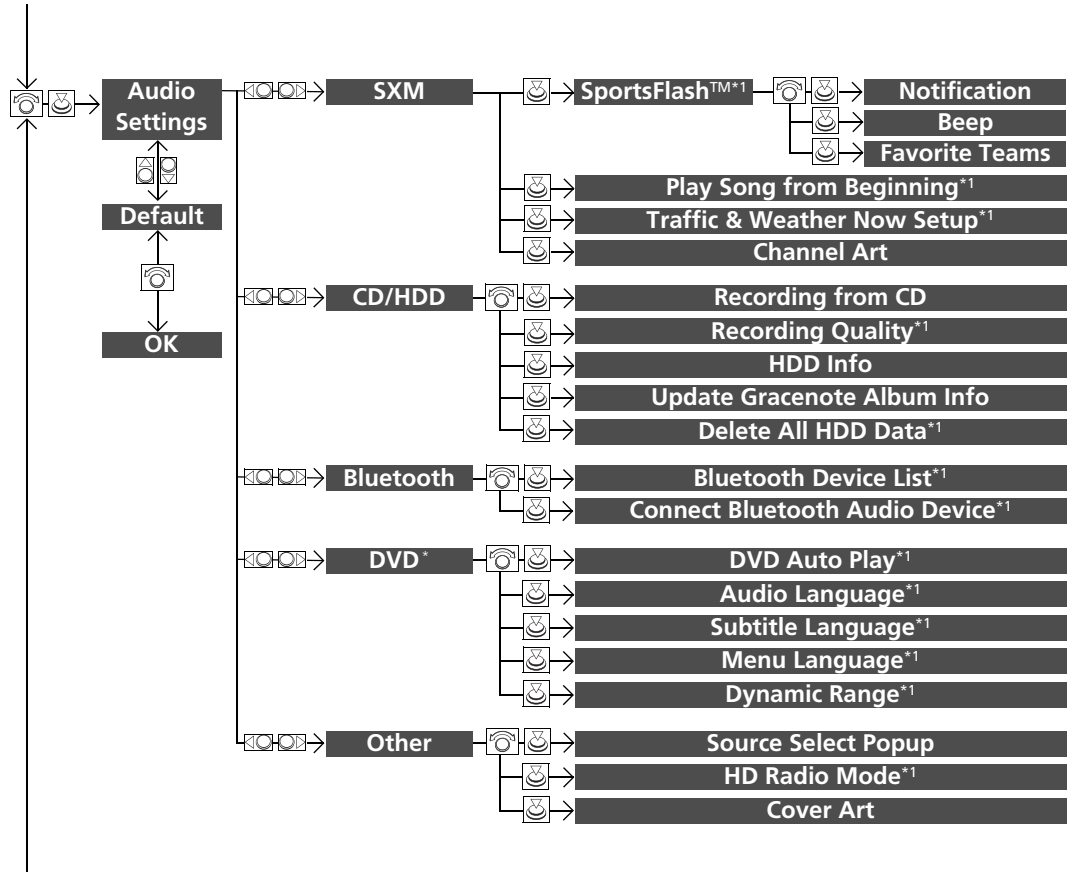

*1: May change depending on your currently selected source.

* Not available on all models

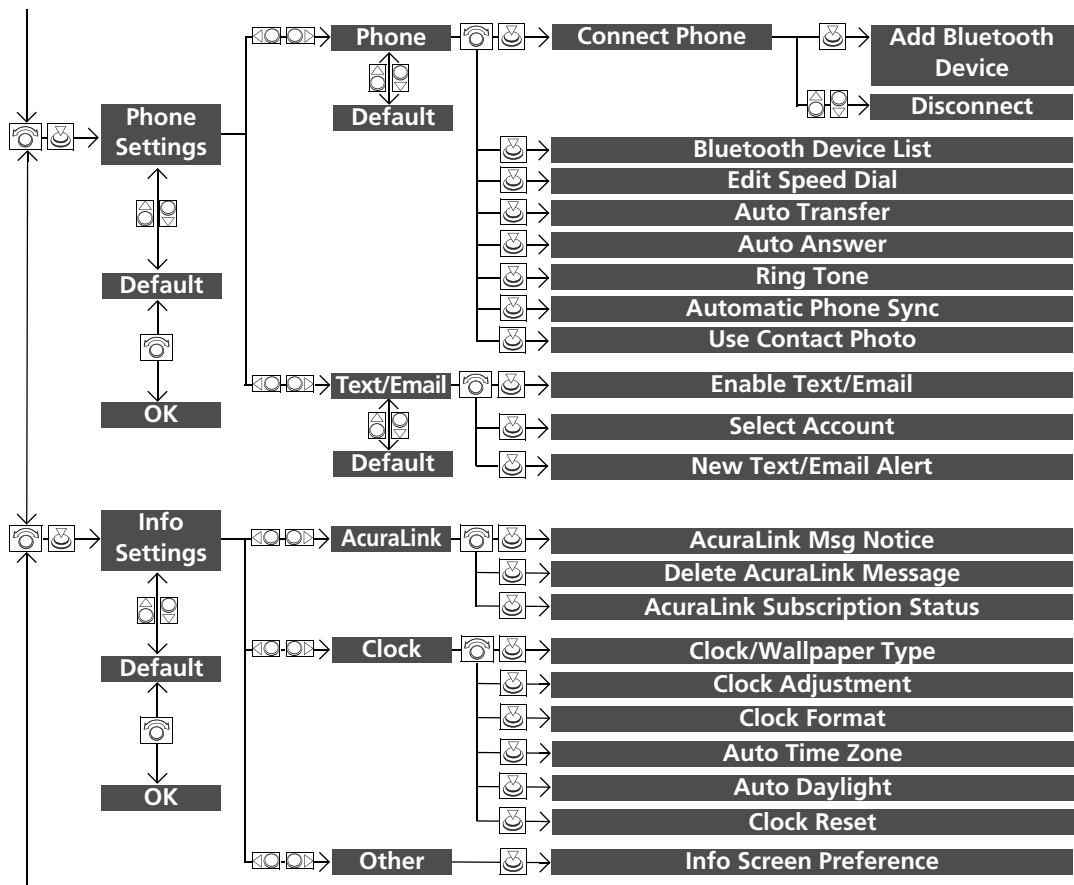

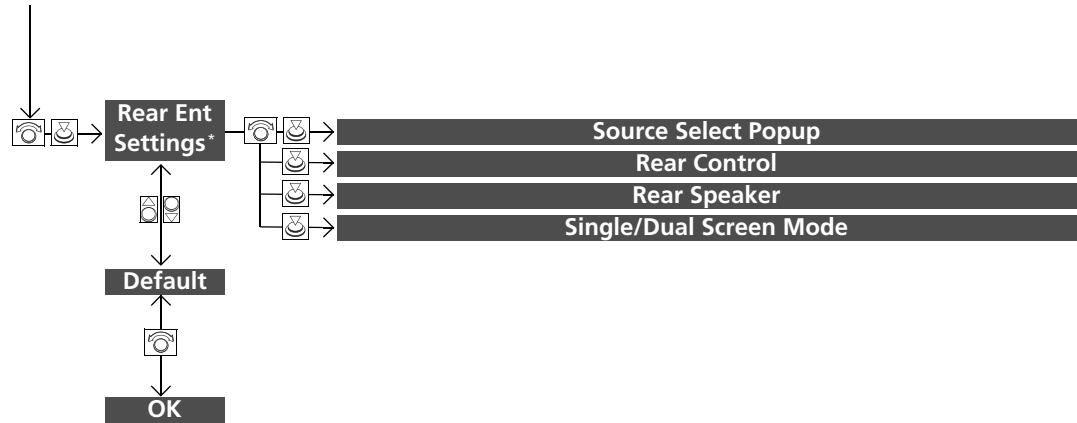

* Not available on all models

■ List of customizable options

Setup Group	Customizable Features	Description	Selectable Settings	
System Settings	Display	Sync Display Brightness	Selects whether the display brightness synchronizes with the instrument panel brightness.	On ^{*1} /Off
		Brightness	Changes the brightness of the audio/information screen.	—
		Contrast	Changes the contrast of the audio/information screen.	—
		Black Level	Changes the black level of the audio/information screen.	—
	Sound/Beep	Guidance Volume	Changes the volume of the audio speakers.	—
		Verbal Reminder	Turns the verbal reminders on and off.	On ^{*1} /Off
	Voice Reco	Voice Prompt	Turns the voice prompt on and off.	On ^{*1} /Off
		Song By Voice	Turns the Song By Voice™ on and off. ➤ Song By Voice™ (SBV) P. 246	On ^{*1} /Off
		Song By Voice Phonetic Modification	Modifies a voice command for music stored in the HDD or an iPod. ➤ Phonetic Modification P. 248	—
		Phonebook Phonetic Modification	Modifies a voice command for the phonebook. ➤ Phonebook Phonetic Modification P. 282	—
	Guidance Volume	Changes the volume of the voice prompt.	—	


*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
System Settings	Bluetooth	Bluetooth Status	On* ¹ /Off
	Bluetooth	Bluetooth Device List	—
	Bluetooth	Edit Pairing Code	Random/Fixed* ¹

* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
System Settings	Clock	Changes the clock display type.	Analog/Digital* ¹ /Small Digital/Off
	Clock/Wallpaper Type	<ul style="list-style-type: none"> Changes the wallpaper type. Imports an image file for a new wallpaper. Deletes an image file for a wallpaper. 🗲 Wallpaper Settings P. 32	Blank/Galaxy* ¹ /Metallic/Add New
	Clock Adjustment	Adjusts Clock. 🗲 Clock Adjustment P. 30	—
	Clock Format	Selects the digital clock display from 12H to 24H.	12H* ¹ /24H
	Auto Time Zone	Sets the navigation system to automatically adjust the clock when driving through different time zones.	On* ¹ /Off
	Auto Daylight	Sets the navigation system to automatically adjust the clock ("spring ahead" or "fall back" by one hour) when a daylight saving time change occurs.	On* ¹ /Off
	Clock Reset	Resets the settings of all items in the Clock group.	—

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
System Settings	Units	Changes the distance unit on the navigation map screen.	mile ^{*1} /km (U.S.) mile/km ^{*1} (Canada)	
	Language	Changes the display language.	English ^{*1} /Français/ Español	
	Others	Operation Restriction Tips [*]	Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.	On ^{*1} /Off
		Background Color	Changes the background color of the audio/information screen and the On Demand Multi-Use Display™.	Blue ^{*1} /Amber/Red/ Green
		Header Clock Display	Selects whether the clock display comes on.	On ^{*1} /Off
		System Device Information	Displays the system/device information.	—
		Factory Data Reset	Resets all the settings to their factory default.  Defaulting All the Settings P. 123	—
	Default	Cancels/Resets all customized items in the System Settings group as default.	Default/OK	

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Driver Assist System Setup	Forward Collision Warning Distance	Changes at which distance CMBS™ alerts. See the owner's manual.	Long/Normal* ¹ /Short
		ACC Forward Vehicle Detect Beep	Causes the system to beep when the system detects a vehicle or when the vehicle goes out of the ACC with LSF range. See the owner's manual.	On/Off* ¹
		ACC Display Speed Unit	Changes the speed unit for ACC on the multi-information display. See the owner's manual.	mph* ¹ /km/h (U.S.) mph/km/h* ¹ (Canada)
		Road Departure Mitigation Setting	Changes the setting for the road departure mitigation system. See the owner's manual.	Normal* ¹ /Wide/Warning Only
		Lane Keeping Assist Suspend Beep	Causes the system to beep when the LKAS is suspended. See the owner's manual.	On/Off* ¹
		Blind Spot Info	Changes the setting for the blind spot information. See the owner's manual.	Audible And Visual Alert* ¹ /Visual Alert/Off

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Meter Setup	Language Selection	Changes the displayed language on the multi-information display. See the owner's manual.	English ^{*1} /Français/ Español
		Adjust Outside Temp. Display	Adjusts the temperature reading by a few degrees. See the owner's manual.	-5°F ~ ±0°F ^{*1} ~ +5°F (U.S.) -3°C ~ ±0°C ^{*1} ~ +3°C (Canada)
		"Trip A" Reset Timing	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A. See the owner's manual.	When Refueled/IGN Off/Manually Reset ^{*1}
		"Trip B" Reset Timing	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B. See the owner's manual.	When Refueled/IGN Off/Manually Reset ^{*1}
		Reverse Alert Tone	Turns the audible notification on and off when you set the gear position to R . See the owner's manual.	On ^{*1} /Off
		Turn by Turn Display	Selects whether the turn-by-turn display comes on during the route guidance. See the owner's manual.	On ^{*1} /Off

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Driving Position Setup	Memory Position Link	Turns the driving position memory system on and off using a remote transmitter. See the owner's manual.	On*1/Off
		Easy Entry/Exit	Moves the seat rearward and steering wheel fully up when you get in/get out of the vehicle. Changes the setting for this feature. See the owner's manual.	Seat & Steering Wheel*1/Seat Only/ Steering Wheel Only/ Off

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Keyless Access Setup	Door Unlock Mode	Changes which doors unlock when you grab the driver's door handle. See the owner's manual.	Driver's Door or Tailgate Only* ¹ /All Doors
		Keyless Access Beep Volume*	Changes the volume of the keyless access beep. See the owner's manual.	High* ¹ /Low
		Keyless Access Light Flash	Causes some exterior lights to flash when you unlock/lock the doors. See the owner's manual.	On* ¹ /Off
		Keyless Access Beep	Causes the beeper to sound when you unlock/lock the doors. See the owner's manual.	On* ¹ /Off
		Remote Start System On/Off	Turns the remote engine start feature on and off. See the owner's manual.	On* ¹ /Off
		Walk Away Auto Lock	Changes the settings for the auto lock function when you walk away from the vehicle. See the owner's manual.	On/Off* ¹

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Lighting Setup	Interior Light Dimming Time	Changes the length of time the interior lights stay on after you close the doors. See the owner's manual.	60seconds/ 30seconds*1/ 15seconds
		Headlight Auto Off Timer	Changes the length of time the exterior lights stay on after you close the driver's door. See the owner's manual.	60seconds/30seconds/ 15seconds*1/0seconds
		Auto Light Sensitivity	Changes the timing for the headlights to come on. See the owner's manual.	Max/High/Mid*1/Low/ Min

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Door Setup	Auto Door Lock	Changes the setting for the automatic locking feature. See the owner's manual.	With Vehicle Speed* ¹ / Shift from P/Off
		Auto Door Unlock	Changes the setting for when the doors unlock automatically. See the owner's manual.	All Doors When Driver's Door Opens* ¹ / All Doors When Shifted to Park/All Doors When Ignition Switched Off/Off
		Key And Remote Unlock Mode	Sets up either the driver's door or all doors to unlock on the first push of the remote or built-in key. See the owner's manual.	Driver Door* ¹ /All Doors
		Keyless Lock Answer Back	LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds. See the owner's manual.	On* ¹ /Off
		Security Relock Timer	Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door. See the owner's manual.	90seconds/60seconds/ 30seconds* ¹
		Auto Folding Door Mirror	Changes how you can fold the door mirrors. See the owner's manual.	Auto Fold With Keyless* ¹ /Manual Only

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Vehicle Settings	Power Tailgate Setup	Keyless Open Mode	Anytime* ¹ /When Unlocked
		Power Open By Outer Handle	Off (Manual Only)/On (Power/Manual)* ¹
	Dynamic Mode Setup	Preferred Dynamic Mode	Last Used* ¹ /Comfort/Normal/Sport
	Maintenance Info.	Maintenance Reset	—
	Default	Cancels/Resets all customized items in the Vehicle Settings group as default.	Default/OK
Navi Settings	Personal Info	Address Book	—
		Edit Go Home	—
		PIN Number	—
		Previous Destination	—
		Category History	—
		Download POI	—

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Route Preference	Freeways	Max ^{*1} /Min	
		Toll Roads	Max ^{*1} /Min	
		ETC Roads	Change the route preference by selecting minimum or maximum driving methods.	Max/Min ^{*1}
		Ferries		Max ^{*1} /Min
		U-Turn	Max/Min ^{*1}	
		Server Route [*]	View three routes distributed from Acuralink®.	On/Off ^{*1}
		Optimal Routes [*]	You can select desired routes by sorting the route list. <input checked="" type="checkbox"/> Optimal Routes[*] P. 57	—
	Routing	Unverified Routing	Sets whether you use the route guidance in unverified areas.	On ^{*1} /Off
		Traffic Rerouting	Sets whether you use automatic recalculation based on traffic information.	On/Off ^{*1}
		Edit POI Search Radius Along Route	On Freeways	Sets the distance from the route to find waypoints.
On Surface Streets	mile: 1/2 ^{*1} , 1, 2, 5mi km: 0.8 ^{*1} , 1.6, 3, 8km			
	Avoided Area	Specifies areas to avoid when calculating a route.	—	

* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Guidance	Guidance Mode	Sets whether to display only the map screen or a split map guidance screen.	Map ^{*1} /Direction List/Next Maneuver
		Street Name Guidance	Sets whether to read out the street names during voice guidance (U.S. models).	On ^{*1} /Off
		Non-map Screens	Sets whether the guidance screen interrupts the screen display.	On/Off ^{*1}
		Guidance Point	Sets whether to display the guidance information to the destination or the next waypoint.	Destination ^{*1} /Next Point
		Estimated Time	Sets whether to display the remaining time or arrival time to the guidance point.	Arrival/Remaining ^{*1}

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Map	Show Icon on Map	Selects the icons to display on the map.	—
		Color (Day)	Selects the color of the map for the Day mode.	White/Beige ^{*1} /Blue/Black
		Color (Night)	Selects the color of the map for the Night mode.	White/Beige/Blue ^{*1} /Black
		View	Selects the map orientation.	North-up ^{*1} /Heading-up/3D Map
		3D Angle Adjustment	Adjusts the viewing angle for the 3D map.	—
		Straight Line Guide	Sets whether to display a straight guideline to the destination or waypoint.	On ^{*1} /Off
		Current Location	Displays and saves your current location.	—
		Map Legend	Displays an overview of the map features.	—
		Display Tracking	Sets whether to display the tracking dots on the map.	On/Off ^{*1}
		Delete Tracking	Deletes the tracking dots on the map.	—
		Correct Vehicle Position	Adjusts the position of the vehicle on the map.	—
		System Device Information	Views database, software, device, and vehicle identification information.	—
Map Data Update	Checks the map data update status when updating the map database.	—		


*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Rear Camera*	Fixed Guideline	Selects whether the fixed guidelines come on the rear camera monitor.	On ^{*1} /Off	
	Dynamic Guideline	Selects whether the dynamic guidelines come on the rear camera monitor.	On ^{*1} /Off	
	Default	Cancels/Resets all customized items in the Rear Camera group as default.	Default/OK	
Camera Settings	Guidelines	Fixed Guideline	Sets whether to turn on the reference line display.	On ^{*1} /Off
		Dynamic Guideline	Sets whether to turn on the projection line display.	On ^{*1} /Off
	Surround View Camera*	Automatically Show Camera After Reverse	Sets the rear view to be automatically switched to the front view when the gear position is out of R .	On/Off ^{*1}
		Preferences	Default Camera Mode in Forward	Selects which screen to display when the surround view camera system is turned on while the vehicle is moving forward.
Default Camera Mode in Reverse	Sets which screen to display when the surround view camera system is turned on while the vehicle is reversing.		Rear Ground View ^{*1} / Last Used/Rear View/ Rear Wide View	

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Camera Settings	Surround View Camera* Preferences	Show Camera When Decelerating Sets the screen to automatically return to the camera view at vehicle speeds of 7 mph (12 km/h) or lower. The screen can return only when the display has been switched to the audio/information screen at the vehicle speed of over 9 mph (15 km/h).	On/Off* ¹
		Clear Parking Guidance Automatically Turns the parking guide lines on and off.	On* ¹ /Off
		Display Adjusts the screen's preferences.	—
		Default Cancels/Resets all customized items in the Surround View Camera group as default.	Default/OK
		Cross Traffic Monitor Turns the cross traffic monitor feature on and off. See the owner's manual.	On* ¹ /Off

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings		
Audio Settings	SiriusXM® mode	Notification	Turns on and off the sports alert function.	Disable* ¹ /Enable/Enable(one time)	
		SportsFlash™	Beep	Causes the system to beep when the sports alert is notified.	On* ¹ /Off
			Favorite Teams	Selects your favorite sport teams.	—
	SXM	Play Song from Beginning	Turns on and off the Tune Start function.	On* ¹ /Off	
		Traffic & Weather Now Setup	Selects the location to display the SiriusXM® traffic and weather information.	—	
		Channel Art	Turns on and off the channel art display.	On/Off* ¹	
	CD mode	Recording from CD	Selects whether the songs on music CDs are automatically recorded to the HDD.	Auto* ¹ /Manual	
		Recording Quality	Selects the quality of the music files recorded to the HDD.	Standard* ¹ /High	
		HDD mode	HDD Info	Displays the HDD capacity.	—
	Update Gracenote Album Info		Updates the Gracenote® Album Info (Gracenote® Media Database) from CD or from USB.	Update by CD* ¹ /Update by USB	
Delete All HDD Data	 Deleting All HDD Data P. 238		—		

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Audio Settings	Bluetooth Bluetooth Device List	<i>Bluetooth</i> ® Audio, Pandora®* or Aha™ mode Edits or deletes a <i>Bluetooth</i> ® Audio device paired to HFL.	—
	Bluetooth Connect Bluetooth Audio Device	<i>Bluetooth</i> ® Audio, Pandora®* or Aha™ mode Connects, disconnects, or pairs a <i>Bluetooth</i> ® Audio device to HFL.	—
	DVD Auto Play	Turns the auto play feature on or off.	On* ¹ /Off
	Audio Language	Selects a language for the audio that is available on the DVD.	—
	DVD mode DVD* Subtitle Language	Selects a language for the subtitle that is available on the DVD.	—
	Menu Language	Selects a language for the DVD menu that is available on the DVD.	—
	Dynamic Range	Sets whether to control the range of the loud and low sounds.	On* ¹ /Off

* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Audio Settings	Source Select Popup	Selects whether the list of selectable audio sources comes on when the AUDIO button is pressed.	On/Off* ¹
	<div style="background-color: #333; color: white; padding: 2px;">FM/AM mode</div> HD Radio Mode*	Selects whether the audio system automatically switches to the digital radio waves or receives the analogue waves only.	Auto* ¹ /Analog
	<div style="background-color: #333; color: white; padding: 2px;">iPod, USB, Pandora®* or Aha™ mode</div> Cover Art	Turns on and off the cover art display.	On* ¹ /Off
	Default	Cancels/Resets all customized items in the Audio Settings group as default.	Default/OK

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Phone Settings	Phone	Connect Phone	Pairs a new phone to HFL, or connects or disconnects a paired phone. ▶ Pairing a Phone P. 269	—
		Bluetooth Device List	Pairs a new phone to HFL, edits or deletes a paired phone, or creates a security PIN. ▶ Phone Settings P. 287	—
		Edit Speed Dial	Edits, adds, or deletes a speed dial entry. ▶ Setting Up Speed Dialing P. 276	—
		Auto Transfer	Sets calls to automatically transfer from your phone to HFL when you enter the vehicle.	On ^{*1} /Off
		Auto Answer	Sets whether to automatically answer an incoming call after about four seconds.	On/Off ^{*1}
		Ring Tone	Selects the ring tone.	Fixed/Mobile Phone ^{*1} /Off
		Automatic Phone Sync	Sets a phonebook data to be automatically imported when a phone is paired to HFL.	On ^{*1} /Off
		Use Contact Photo	Displays a caller's picture on an incoming call screen.	On ^{*1} /Off



*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Phone Settings	Enable Text/Email	Turns the text/e-mail message function on and off.	On*1/Off
	Select Account	Selects a text or e-mail message account.	—
	New Text/Email Alert	Selects whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message.	—
	Default	Cancels/Resets all customized items in the Phone Settings group as default.	Default/OK

*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Acura Link	AcuraLink Msg Notice	Selects whether newly received AcuraLink messages are to be displayed.	On*1/Off
	Delete AcuraLink Message	Deletes AcuraLink messages.	—
	AcuraLink Subscription Status	Displays your current AcuraLink subscription status.	—
Info Settings	Clock/ Wallpaper Type	Clock Wallpaper	See System Settings on P. 100 to P. 103.
	Clock Adjustment		
	Clock Format		
	Auto Time Zone		
	Auto Daylight		
	Clock Reset		
	Other	Info Screen Preference	
Default		Cancels/Resets all customized items in the Info Settings group as default.	Default/OK

*1: Default Setting


Setup Group	Customizable Features	Description	Selectable Settings
Rear Ent Settings*	Source Select Popup	Select weather the list of selectable audio sources comes on when the REAR AUDIO button is pressed.	On/Off* ¹
	Rear Control	Select weather to use the rear control panel to control the RES.	On* ¹ /Off
	Rear Speaker	Sets the front audio source to play through the rear speakers, even when the RES is on. The RES source can only be heard through the wireless headphones.	On* ¹ /Off
	Single/Dual Screen Mode	Selects a source to continue playing when you switch from dual mode to single mode on the overhead screen. Rotate  to select a source and press  .	—
	Default	Cancel/Resets all customized items in the Rear Ent Settings group as default.	—





*1: Default Setting

Defaulting All the Settings

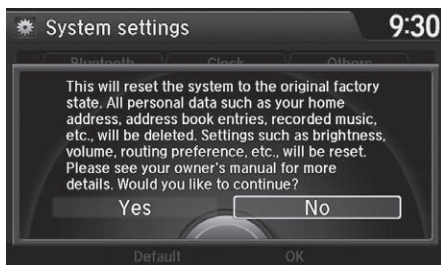 **SETTINGS** button ► **System Settings** ► **Others** ► **Factory Data Reset**

Reset all the menu and customized settings as the factory defaults.



1. Rotate  to select **Yes**. Press . ► The confirmation message will appear.
2. Rotate  to select **Yes**. Press again to reset the settings. ► The confirmation message will appear. Press  to select **OK**.

Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

The following settings will be reset:

- Routing & Guidance: Rerouting, Unverified Area Routing, Traffic Rerouting, Edit Waypoint Search Area, Guidance Mode, Street Name Guidance
- Route Preference
- Audio preset settings
- Phonebook entries
- Other display items and each item settings.

Navigation





This section describes how to enter a destination, select a route to take, and follow the route to your destination. It also describes how to change your route or destination along the way.

Entering a Destination	126	Calculating the Route	151	Adding Waypoints	170
Address	128	Viewing the Routes	153	Editing the Destination List	174
Address Book	135	Driving to Your Destination	154	Taking a Detour	176
Previous Destination	136	Viewing the Route	154	Avoiding Streets	176
Place Category	137	Listening to Voice Guidance	159	Changing Your Destination	177
Local Search	139	Reaching a Waypoint	160	Find Nearest Place	177
Place Name	141	Map Menu	161	Selecting a Destination on the Map	178
Place Phone Number	144	Displaying the Map Menu	161	Entering a New Destination	179
Download POI	145	Hide Traffic Flow	163	Resuming Your Trip	180
Scenic Route	146	Directions	163		
Intersection	147	Traffic Rerouting™	165		
Map Input	148	Changing Your Route	168		
Coordinate	150	Pausing the Route	169		
		Canceling the Route	169		

 **MENU** button (on map)

This section describes how to enter a destination for route guidance.



Rotate  to select an item. Press .

▶ Select **More Search Methods** to display additional menu entries.



The following items are available:

- **Address**: Sets a destination by entering an address.
▶ **Address** P. 128
- **Address Book**: Sets a destination by selecting an address stored in your Address Book.
▶ **Address Book** P. 135
- **Previous Destination**: Sets a destination by selecting a previous destination.
▶ **Previous Destination** P. 136

▶ Entering a Destination

If you press the **MENU** button when en route, the Route Option screen is displayed.

▶ **Changing Your Route** P. 168

Prior to departure, you can set areas along your route to avoid.

▶ **Avoided Area** P. 62



- **Go Home:** Sets your home address as a destination.
 - **Going Home** P. 12
- **Place Category:** Sets a destination by selecting a place/landmark.
 - **Place Category** P. 137
- **Local Search:** Sets a destination by using Local Search.
 - **Local Search** P. 139
- **Place Name:** Sets a destination by entering a place name.
 - **Place Name** P. 141
- **Place Phone Number:** Sets a destination by entering the phone number of a place/landmark.
 - **Place Phone Number** P. 144
- **Download POI:** Sets a destination by using a list of the imported POI (category and places) data you created.
 - **Download POI** P. 145
- **Scenic Route:** Sets a destination by using a list of scenic roads for each state or province (U.S. and Canada only).
 - **Scenic Route** P. 146
- **Intersection:** Sets a destination (intersection) by entering two streets.
 - **Intersection** P. 147
- **Map Input:** Sets a destination by scrolling through the map.
 - **Map Input** P. 148
- **Coordinate:** Sets a destination by entering latitude and longitude.
 - **Coordinate** P. 150

Address

 **MENU** button ▶ **Address**

Enter an address to use as the destination. The state or province you are currently in is displayed (e.g., California).




Rotate  to select an item. Press .



The following items are available:

- **City**: Selects your destination city.
 - ▶ **Selecting a City** P. 131
- **Street**: Selects your destination street.
 - ▶ **Selecting a Street** P. 132
- **House Number**: Enters the house number to select the street.
 - ▶ **Selecting a Street by House Number** P. 134
- **ZIP Code (U.S.)/Postal Code (Canada)**: Enters the zip code or postal code to select the city.
 - ▶ **Selecting a City by Zip Code or Postal Code** P. 130
- **Change State (U.S.)/Change Province (Canada)**: Selects the state or province.
 - ▶ **Selecting the State or Province** P. 129

Selecting the State or Province

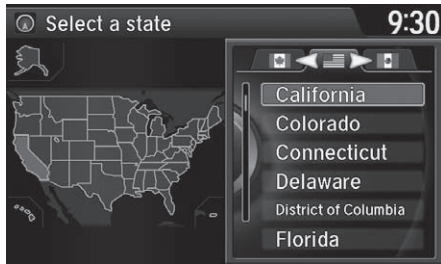 **MENU** button ▶ **Address** ▶ **Change State/Change Province**



Rotate  to select a state or province from the list. Press .

Selecting the State or Province

- Move ◀○ or ○▶ to select the following areas:
- **USA** for the U.S. mainland, Alaska, Hawaii, and Puerto Rico
 - **Canada**
 - **Mexico**

■ Selecting a City by Zip Code or Postal Code



 **MENU** button ▶ **Address** ▶ **ZIP Code/Postal Code**




1. Enter the zip code or postal code of your destination.

2. Move  to select **OK**. Press .



3. Rotate  to select the destination city from the list. Press .

▶ Next, you are prompted to enter a street name.

 **Selecting a Street** P. 132


▣ Selecting a City by Zip Code or Postal Code

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.



■ Selecting a City

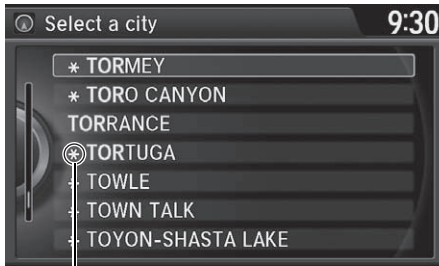

 **MENU** button ▶ **Address** ▶ **City**

The name of the city where you are currently located is displayed.



Non-detailed area mark: Try entering the street first and then select the city.

1. Enter the name of a different city, or move  to select **OK** for the current city. Press .

2. Rotate  to select your destination city from the list. Press .

▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.

▶ Next, you are prompted to enter a street name.

▶ **Selecting a Street** P. 132

▣ Selecting a City

Vehicle position may not be displayed when:

- The automobile is traveling off-road.
 - The vehicle position data cannot be updated.
- You do not need to enter spaces or symbols (e.g., &, -, %). Partial matches are supported (e.g., "ANGELES" to find "LOS ANGELES").

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

■ Selecting a Street

📍 MENU button ▶ Address ▶ Street



1. Enter the name of your destination street.

- ▶ Do not enter the street type (e.g., street, road, avenue) or direction (e.g., north, south, east, west).
- ▶ Move 📍 to select OK to display a list of streets. Press ⏹.

2. Rotate 🔄 to select your destination street from the list. Press ⏹.

- ▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.

☒ Selecting a Street



When entering the names of major freeways/highways, you can use the following abbreviations. For interstates, use an "I" (e.g., I-10). For U.S. freeways, use "US" (e.g., US-18). For state freeways, use the two-character state designation (e.g., CA-101). For county roads, use the appropriate designation (e.g., G-2). For Trans-Canada and Provincial highways, use "Hwy" (HWY-7). For County roads, use "CR" (CR-32). For Regional Roads, use "RR" (RR-5).

If you did not select a city first and there is more than one city with the specified street, a list of cities is displayed.



Rotate 🔄 to select the desired city from the list. Press ⏹.



3. Enter the street number.
 - ▶ Only valid street numbers can be entered.
4. Move  to select **OK**. Press .
5. Set the route to your destination.
 - ▶ **Calculating the Route** P. 151

■ Selecting a Street by House Number

📍 MENU button ▶ Address ▶ House Number




1. Enter the house number.
 - ▶ Only a valid house number can be entered.
2. Move 📍 to select **OK**. Press 🔄.
 - ▶ If you did not yet select a street name, enter a street name when you are prompted.
3. Rotate 🔄 to select your destination street from the list. Press 🔄.
 - ▶ Select a city when you are prompted.
4. Set the route to your destination.
 - 🗺 **Calculating the Route** P. 151

Address Book

MENU button ▶ Address Book

Select an address stored in your address book to use as the destination.

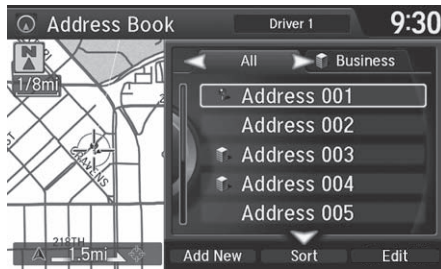

1. Rotate to select your destination from the list. Press .
2. Set the route to your destination.
 - ▶ **Calculating the Route** P. 151
 - ▶ Move or to display only the entries in the categories you have created.
 - ▶ **Selecting an Address Book Category** P. 44

Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Press to select **OK**. PINs are optional.

▶ **PIN Numbers** P. 49

Move and rotate to select the following items:




- **Add New Address:** Adds an entry to the address book.
 - ▶ **Adding an Address Book Entry** P. 42
- **Sort:** Selects **Sort by Name** or **Sort by Distance**.
- **Delete All:** Deletes all entries in the address book.
- **Driver 1 or Driver 2:** Displays the address book for the selected user.

Previous Destination

MENU button ▶ Previous Destination

Select an address from a list of your 50 most recent destinations to use as the destination. The list is displayed with the most recent destination at the top.



1. Rotate  to select a destination from the list. Press .
2. Set the route to your destination.
 **Calculating the Route** P. 151

Previous Destination

If **Previous Destination** is grayed out, there are no previous destinations entered.

Your home address and addresses stored in your address book are not added to the list of previous destinations.

Move  and rotate  to select **Delete All** to delete all previous destinations.

You can delete unwanted previous destinations from the list.



 **Previous Destination** P. 50


Place Category

 **MENU** button ▶ **Place Category**

Select the category of a place (e.g., Banking, Lodging, Restaurant) stored in the map database to search for the destination.




1. Rotate  to select a category. Press .

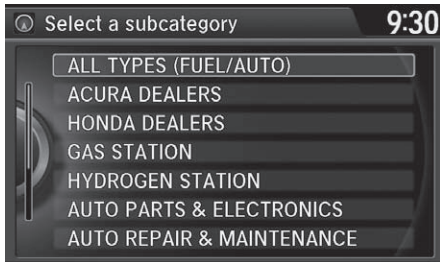


2. Rotate  to select a subcategory. Press .

Place Category

 This option is convenient if you do not know the exact name of a place or if you want to narrow down the number of matches returned for places with a common name.



 Move  to select **Category History** to access your recently used place categories. Up to 30 categories can be stored.

You can also delete your recently used place categories.

 **Category History** P. 51

Search POI Categories helps you to search the subcategory. When you enter a keyword and select **OK**, the list of appropriate subcategories is displayed.




3. Rotate  to select an item. Press .



▶▶ Place Category

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown for the highlighted place.

The following items are available:

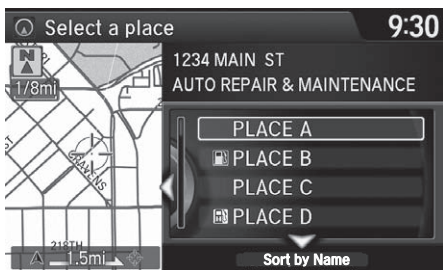- **Search by Name:** Searches for a place in the subcategory by name. Enter a place name when prompted.
- **Sort by Distance to Travel:** Displays all the places in the subcategory sorted by distance from your current location. The closest place is displayed at the top.
- **City Vicinity:** Searches for a place in the subcategory within a 20 mile (32 km) radius of a specific city. Enter a city name when prompted and then select a city. Only the first 1000 matching places/landmarks are displayed.



4. Rotate  to select a destination from the list. Press .

5. Set the route to your destination.



▶▶ **Calculating the Route** P. 151

Local Search

 **MENU** button ▶ **Local Search**

Select a place via Local Search database as the destination.



1. Rotate  to select a category (e.g., **Community**). Press .




2. Rotate  to select a subcategory. Press .




Local Search

When you select **Search by keyword**, the list of appropriate categories is displayed.

The screen in this section may differ from the actual ones.

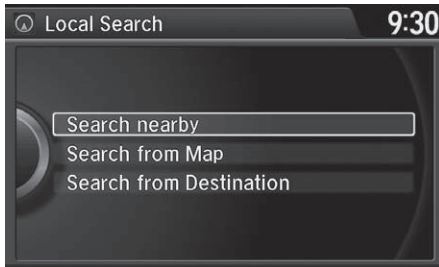Local Search is a subscription service. For more information, contact an Acura dealer or visit owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada).



3. Rotate  to select an item. Press .
4. Set the route to your destination.
 **Calculating the Route** P. 151

The following items are available:



- **Search Nearby:** Finds the nearest POI around your vehicle.
- **Search from Map:** Selects a POI by scrolling the Interface Dial on the map screen.
- **Search from Destination:** Selects a POI around the destination. Search the category by scrolling the Interface Dial.


Place Name



 **MENU** button ▶ **Place Name**

Enter the name of a place (e.g., business, hotel, restaurant) stored in the map database to use as the destination.

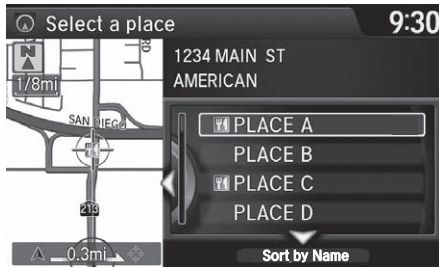


1. Enter a place name.
2. Move  to select OK to display a list of matching hits. Press .






3. Rotate  to select a place name from the list. Press .
 - ▶ If the place name is in multiple categories, the categories are displayed when you select it.
 - **Place Name in Multiple Categories** P. 142
4. Set the route to your destination.
 - **Calculating the Route** P. 151

■ Place Name in Multiple Categories

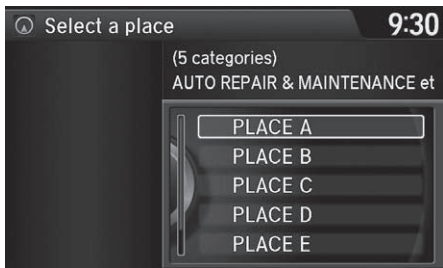If the place name is in multiple categories of the map database, the following screen is displayed.




1. Rotate  to select a place name. Press .

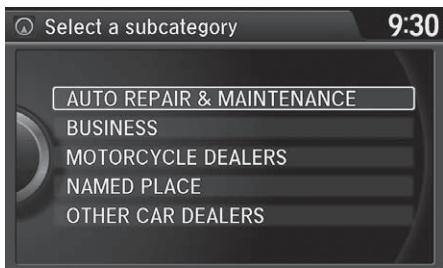




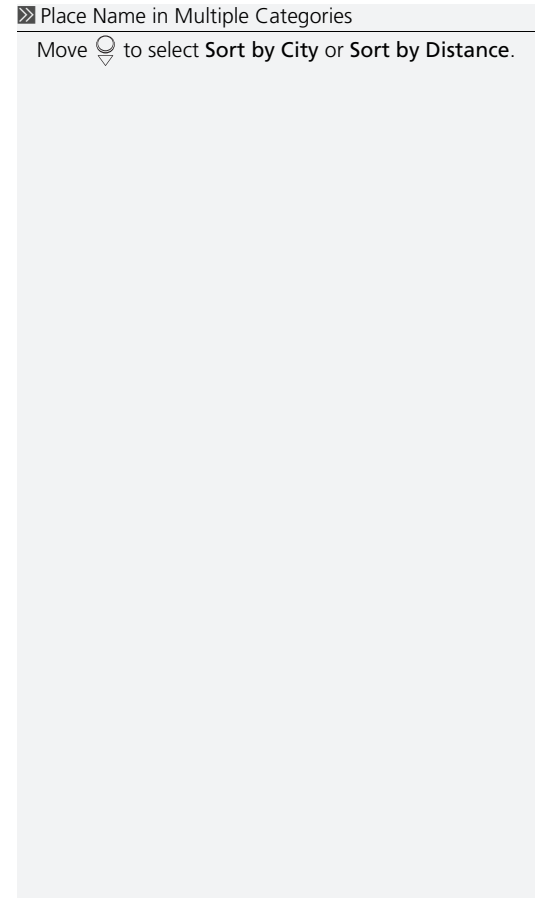
2. Rotate  to select a subcategory. Press .

▶▶ Place Name in Multiple Categories

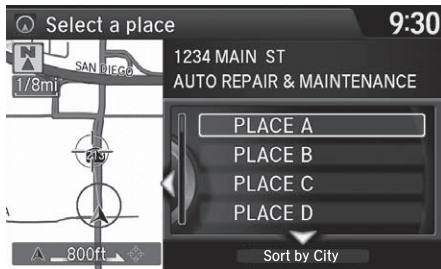Matching letters are highlighted.



3. Rotate  to select a place. Select  and press .
4. Set the route to your destination.
 - **Calculating the Route** P. 151






Place Phone Number

 **MENU** button ▶ **More Search Methods** ▶ **Place Phone Number**

Select a destination by phone number. Only phone numbers in the database are recognized.





1. Enter the area code and phone number.
2. Rotate  to select **OK**. Press .
3. Set the route to your destination.
 **Calculating the Route** P. 151

Place Phone Number

All 10 digits must be entered.

Phone numbers of private residences entered in your address book are not stored in the database and thus cannot be used to search for a destination.

A list is displayed if there are multiple locations in the database with the same phone number. Rotate  to select a place from the list. Press .

Download POI

MENU button ▶ More Search Methods ▶ Download POI

Select a place imported into the navigation system as the destination.



1. Rotate to select a category from the list. Press .



2. Rotate to select a place. Press .

3. Set the route to your destination.

Calculating the Route P. 151

Download POI

Move and rotate to select the following items:


- **Import from USB:** Imports POI data into the navigation system.
 Importing POI Categories P. 52
- **Delete All:** Deletes all POI entries.
- **Help with Feature:** Views tips for the Download POI feature.

If you select **From AcuraLink**, you can download POI data stored on the AcuraLink® server.


Scenic Route



 **MENU** button ▶ **More Search Methods** ▶ **Scenic Route**

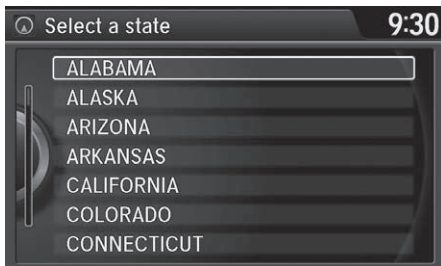
Select a scenic road as a destination (U.S. and Canada only).

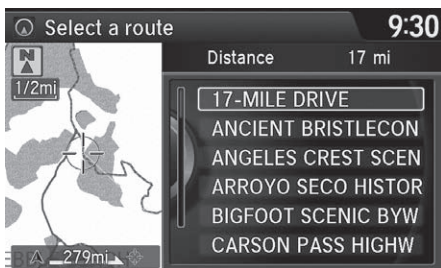

1. Rotate  to select a state/province. Press .



2. Rotate  to select a scenic road. Press .

3. Set the route to your destination.
 **Calculating the Route** P. 151

Scenic Route



If you select a scenic road that runs through multiple states or provinces, only the portion of the road in the selected state or province is displayed.

Intersection

 **MENU** button ▶ **More Search Methods** ▶ **Intersection**

Select the intersection of two streets as the destination. The state or province for your current location is displayed at the top of the screen (e.g., California).




1. Rotate  to select the intersection search method. Press .
2. Set the route to your destination.
 - ▶ **Calculating the Route** P. 151

The following options are available:

- **City:** Selects the city where the intersection is located. You are prompted to enter the name of the two intersecting streets.
 - ▶ **Selecting a City** P. 131
- **Street:** Selects the two intersecting streets. The city or cities that the streets are located in are displayed.
 - ▶ **Selecting a Street** P. 132
- **Change State (U.S.)/Change Province (Canada):** Selects the state or province.
 - ▶ **Selecting the State or Province** P. 129

Intersection

It is usually easier to select **Street** to find the streets first. The city or cities that the streets are in will be displayed. If you select **City** and your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

If the intersection is outside the state or province you are currently in, rotate  to select **Change State/Change Province**.

▶ **Selecting the State or Province** P. 129

If there is more than one intersection, you are prompted to select the intersection. If the two streets that you have selected do not intersect, no intersection is entered.



Map Input

 **MENU** button ▶ **More Search Methods** ▶ **Map Input**

Use the Interface Dial to manually select an icon or a location on the map screen as the destination.

You are prompted to define the map area to display.






1. Rotate  to select an item. Press .

The following items are available:


- **Current Position:** Your current location is centered on the map.
- **State (U.S.)/Province (Canada):** You are prompted to select the state or province.
 - ▶ **Selecting the State or Province** P. 129
- **City:** You are prompted to select the city.
 - ▶ **Selecting a City** P. 131
- **USA, Canada and Mexico:** Your current location is displayed on a map of the country.



2. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.
 - ▶ If the address is not the desired location, scroll the map to another location and try again.
3. Press  to display the route calculation menu.
 - ▶ **Calculating the Route** P. 151
4. Rotate  to select **Set as Destination**. Press .

Map Input

Auto Zoom

Press  repeatedly on the map to zoom in (to the scale 1/4 mile (400 m)) while scrolling the map.

Information icons are displayed at scales from 1 mile to 1/4 mile (1.6 km to 400 m). Place/landmark icons are displayed at 1/8 mile (200 m) or less. Roads are displayed at 1/4 mile (400 m) or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

▶ **Selecting a Destination on the Map** P. 178


Coordinate

MENU button ▶ **More Search Methods** ▶ **Coordinate**

Specify a location using latitude and longitude map coordinates.



1. Enter the latitude and select **OK**.
2. Enter the longitude and select **OK**.

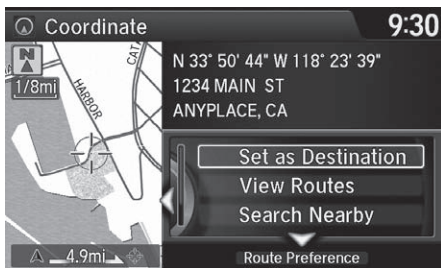




3. Move to scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.
 - ▶ If the address is not the desired location, scroll to another location and try again.
4. Press to display the route calculation menu.
 - ▶ **Calculating the Route** P. 151
5. Rotate to select **Set as Destination**. Press .

Coordinate


Latitude and longitude must be entered up to the seconds' value.

This section describes how to calculate your route.



1. Rotate  to select **Set as Destination**. Press .
 - ▶ The system calculates and displays the route line on the map screen.
 - **Route Line** P. 156
 - ▶ Move  to scroll the map around the destination.

The following options are available:

- **View Routes:** Displays three different routes.
 - **Viewing the Routes** P. 153
- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).
 - **Route Preference** P. 56

Calculating the Route

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown.

You cannot use voice commands while the system is calculating the route.

Search Nearby

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

➤ **Find Nearest Place** P. 177

Call

You can place a telephone call to the destination phone number.

➤ **Bluetooth® HandsFreeLink®** P. 266

Save to Address Book

You can add the destination address to the address book.


➤ **Adding an Address Book Entry** P. 42

Edit/Delete Entry

You can edit or delete the address book entry.

➤ **Editing an Address Book Entry** P. 44

➤ **Deleting an Address Book Entry** P. 45

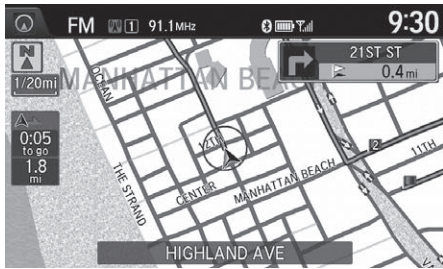

2. Follow the route guidance to your destination.

➤ **Driving to Your Destination**
P. 154

- ▶ The system provides you with pop-up messages if your route passes through unverified areas, avoid areas, or areas with traffic restrictions.

▶▶ Calculating the Route

Edit Home Entry

You can edit your home address entry.

➤ **Home Address** P. 48



More Info

You can view detailed information about the destination.

Viewing the Routes

View three different routes to your destination.



Rotate  to select a route. Press .

- ▶ The travel distance and estimated travel time is displayed for each route.
- ▶ The system calculates and displays the route line on the map screen.
 - **Route Line** P. 156

■ Using the server route*



The following items are available:

- **Quick:** Displays the route with the shortest travel time.
- **Direct:** Displays the route with the shortest travel distance.
- **Eco:** Displays the route with the best fuel efficiency.

* Not available on all models

▶▶ Viewing the Routes

It is not unusual for some calculated route options to be identical.


Canadian models

Server Routes is a subscription service. For more information, contact an Acura dealer or visit www.acura.ca/owners/acuralink.

This section describes how to follow the route guidance to your destination, receive traffic information and choose the icons displayed on the map screen.

Viewing the Route

Map Screen

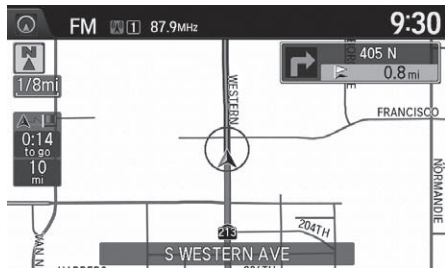


After calculating the route to your destination, the route is displayed on the map screen.

➤ **Map Screen Legend** P. 9

As you drive, the system tracks your position on the map in real time and provides guidance as you approach each guidance point on the route.

➤ **During Route Guidance** P. 11

➤ Viewing the Route

You can change the map scale by rotating .

If you scroll the map while en route, the time and distance to destination indicators are replaced with an indicator showing distance from the current vehicle position.

You can display only the map screen or a split map-guidance screen.

➤ **Guidance Mode** P. 65

Guidance Screen

The guidance screen offers an alternative way to view your route.



- ▶ The next guidance point is displayed as you approach each guidance point on the route.
- ▶ You can also view a list of guidance directions.

Guidance Screen


A visual guide helps you check the guidance screen.

➤ **Guidance Screen** P. 11

Turn-by-Turn Directions

The next guidance point appears on the multi-information display.


➤ **Turn-by-Turn Directions** P. 11

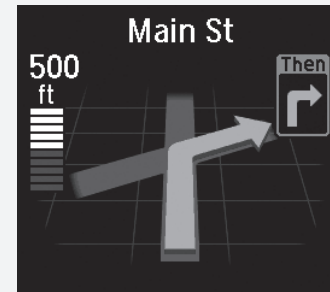


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.

Route Line

When driving on verified streets, the route line is light blue. The route line display changes when driving on unverified streets:

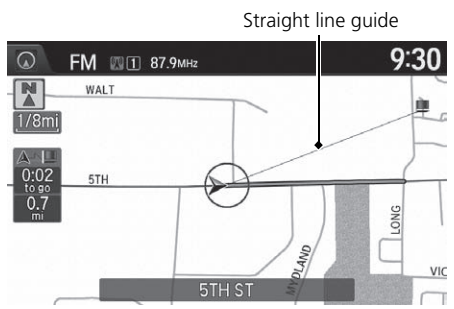

- If **Unverified Routing** is **Off**, the route line uses verified streets only (when possible). If **Straight Line Guide** is set to **On**, a pink “vector line” pointing directly towards your destination is displayed.
 - **Straight Line Guide** P. 80

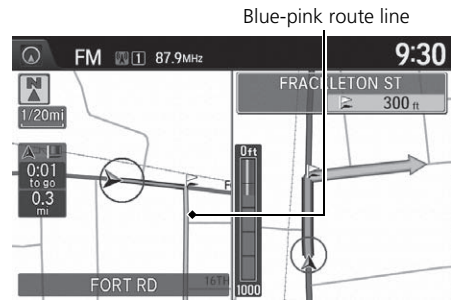

- If **Unverified Routing** is **On**, the route line changes to a blue-pink line to indicate that the route line uses unverified streets.

Route Line

You can set **Unverified Routing** to **Off** to follow your own route to the destination. If **Unverified Routing** is **On**, be aware that unverified streets may not be displayed accurately.

➤ **Unverified Routing** P. 58

The route line may also consist of red, orange, or green segments when traffic information is displayed.


➤ **Traffic Information*/AcuraLink Real-Time Traffic*** P. 10

➤ **Traffic Rerouting™** P. 165

■ Deviating From the Planned Route

If you leave the calculated route, the system automatically recalculates a route to the desired destination based on your current location and direction.


➔ **Route Preference** P. 56

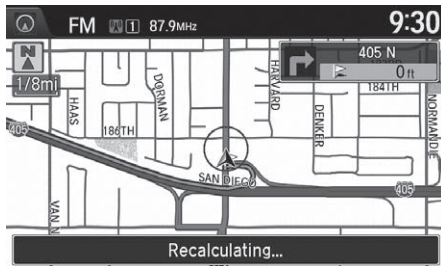

■ Tracking Dots

You can display a series of dots (breadcrumbs) to track the path you are taking. If needed, you can follow the dots back to the mapped road you originally left.

➔ **Display Tracking** P. 86

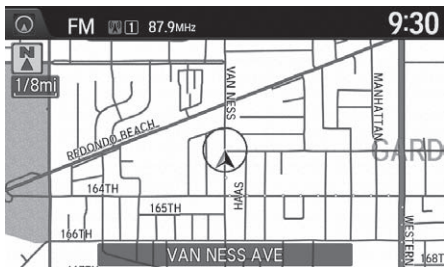

▣ Tracking Dots


A message “Not on a digitized road” may appear when you drive 1/2 mile (800 m) away from a mapped road.

Breadcrumbs may occasionally be displayed in urban areas, such as large parking lots in shopping malls, in new subdivisions where the roads are not yet in the database, or in areas where a GPS signal is unavailable, such as in a parking garage.

Breadcrumbs are limited to approximately 150 miles (240 km). Breadcrumbs at the beginning of the trail are deleted if you exceed that distance.

Breadcrumbs are displayed only at 1/20, 1/8, 1/4, and 1/2 mile (80, 200, 400, and 800 m) map scales.

Listening to Voice Guidance

 **ENTER** button (on map) ▶ **Voice**

As you approach each guidance point, a pop-up window is displayed on the map screen with instructions for you to follow. Voice guidance for each guidance point is also provided.


Typically, you hear three prompts:

- 1/2 mile (800 m) from the guidance point (2 miles (3 km) on freeway/highway)
- 1/4 mile (400 m) from the guidance point (1 mile (1.5 km) on freeway/highway)
- Just before the guidance point

To replay voice guidance, rotate  to select **Voice** in the Map Menu.

If you select **Voice** between guidance points, voice guidance for the next guidance point is provided.

Listening to Voice Guidance

You can turn voice guidance OFF if you prefer. On the map screen, press  to display the Map Menu. Select **Guidance Volume** and adjust the volume level to **0**.

You can also adjust **Guidance Volume** by rotating the volume knob or using the **VOL** buttons on the steering wheel during route guidance or voice command confirmations.

When driving in unverified areas, the phrase “if possible” is inserted before each voice guidance prompt.


Voice in the Map Menu may be grayed out if:



- The system is in process of gathering the route guidance information.
- The vehicle is out of the road (e.g., pulling in a parking lot).

The timing of voice guidance varies depending on the type of road you are on and the distance to the next guidance point.

Reaching a Waypoint

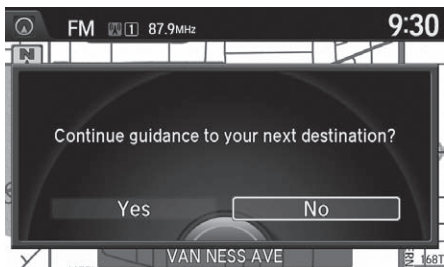When you reach a waypoint, a pop-up message is displayed. You can continue or pause the route guidance.



Rotate  to select **No** to pause the route guidance. Press .

▶ Select **Yes** to continue the guidance.

■ Resuming the Route Guidance


You can resume the route guidance in the following ways:

- Restart the engine when you stop your car (e.g., to rest, stop for gas, etc.).
 - ▶ **Resuming Your Trip** P. 180
- Select **Resume Guidance** from the navigation menu or the map menu.
 - ▶ **Map Menu** P. 161
 - ▶ **Changing Your Route** P. 168



Displaying the Map Menu

Use the Map Menu to control the icons displayed on the screen and to display traffic information and messages. You can also use the Map Menu to find locations or to cancel the route.



1. On the map screen, press .
▶ The Map Menu is displayed on the map screen.




2. Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.
▶ **Listening to Voice Guidance** P. 159
- **Guidance Volume:** Adjusts the navigation system volume level.
▶ **Sound and Beep Settings** P. 29

Map Menu

If you scroll the map while en route, press the NAV (or BACK) button to return to the current position map screen, then press .

- **Map/Guidance:** Allows you to select the map and guidance settings (display mode, icons to display on the map, map orientation, map color, and 3D view angle), display your current location, and an overview of the map features.
 - **Guidance Mode** P. 65
 - **Showing Icons on Map** P. 73
 - **Color** P. 75
 - **View (Map Orientation)** P. 78
 - **3D Angle Adjustment** P. 79
 - **Current Location** P. 81
 - **Map Legend** P. 82
- **Pause Guidance:** Pauses your current route.
 - **Pausing the Route** P. 169
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Hide Traffic Flow:** Hides the current traffic flow indicator on the map screen.
 - **Hide Traffic Flow** P. 163
- **Display Traffic Flow:** Displays the current traffic flow indicator on the map screen. This item is displayed while the current traffic flow indicator is hidden.
- **Directions:** Displays a list of the guidance points.
 - **Directions** P. 163
- **Search Nearby:** Allows you to find the nearest place/landmark (e.g., nearest gas station) by specifying a category. You can then add the location to the list of destinations, set as a waypoint, or set as your destination.
 - **Find Nearest Place** P. 177
- **Traffic Incidents:** Displays a list of the traffic incidents around your current location or on your current route.
 - **Traffic Rerouting™** P. 165

Map Menu

Directions

The system provides freeway/highway exit information only in the U.S.

Traffic Incidents

You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states.

➤ **Traffic Information** P. 406

Canadian models

You must have an AcuraLink Real-Time Traffic™ subscription to receive traffic information.

➤ **AcuraLink®** P. 314

The incident icons are displayed on the 5 mile (8 km) or less map scale.

➤ **Map Scale and Functions** P. 83

Hide Traffic Flow


ENTER button (on map) ▶ **Hide Traffic Flow**

Hide the traffic flow indicator on the map screen. Press the **ENTER** button and select **Display Traffic Flow** to display the traffic flow indicator on the map screen.


Directions

ENTER button (on map) ▶ **Directions**

Display a list of the guidance points on your route for your confirmation.

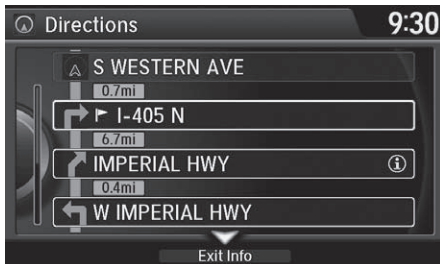

1. Rotate to select a guidance point from the list. Press .
▶ The system displays a map of the guidance point.

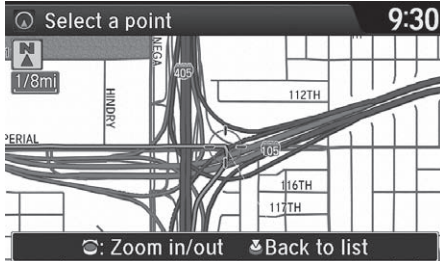

2. Press to select **Back to list** or press the **BACK** button to return to the previous screen.

Directions

Guidance points with exit information are indicated by a (freeway/highway exit information) icon. Move to select **Exit Info** to display the exit information.

Freeway/Highway Exit Information P. 164


The system provides freeway/highway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

Freeway/Highway Exit Information

📍 **ENTER** button (on map) ▶ **Directions** ▶ **Exit Info**

Display a list of the Freeway/highway exits for the route. You can view freeway/highway exit information (whether the exit is near gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route.

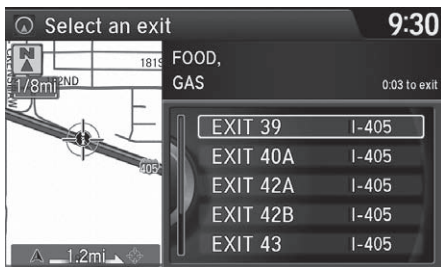

1. Rotate 🔄 to select an exit from the list. Press 📍.



2. Rotate 🔄 to select a list item. Press 📍.
 - ▶ Move ◀ or ▶ to display information for different exits.
 - ▶ You can set the route to your destination.
- ➡ **Calculating the Route** P. 151

Freeway/Highway Exit Information

You can scroll the map and select a ⓘ (Freeway/Highway exit information) icon on the map screen to display the Freeway/Highway exit information. The ⓘ icon is only displayed if there is exit information available.

Icons are displayed only at 1/4, 1/2, or 1 mile (400 m, 800 m, or 1.6 km) scale.

➡ **Map Scale and Functions** P. 83

The system provides freeway/highway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

Traffic Rerouting™

When driving to your destination, the system automatically searches for a faster route based on traffic flow information and traffic incidents.

➤ **Traffic Information*/AcuraLink Real-Time Traffic*** P. 10

➤ **Traffic Rerouting** P. 60



☒ Traffic Rerouting™

Traffic information is only available in certain areas.

Automatic traffic rerouting may not provide a detour route depending on circumstances.

The route is recalculated only when **Traffic Rerouting** is set to **On**.

➤ **Traffic Rerouting** P. 60

Canadian models

This feature requires an AcuraLink Real-Time Traffic™ subscription.


AcuraLink Real-Time Traffic™ is a subscription service. For more information, contact an Acura dealer or www.acura.ca/owners/acuralink.

* Not available on all models

■ Traffic Rerouting™ Manually

📍 **ENTER** button (on map) ► **Traffic Incidents**

Manually avoid specific incidents and/or congestion on your route:

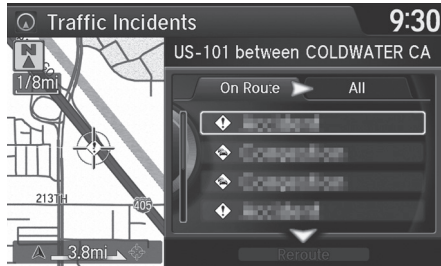

1. Rotate 🔄 to select an incident from the list. Press 📍.

► The system displays the map screen and the incident location.



2. Rotate 🔄 to select **Avoid**. Press 📍.

► Repeat step 1 to 2 as necessary.

▣ Traffic Rerouting™ Manually

Traffic rerouting is only available in certain areas.

You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states, Hawaii, and some cities in Canada.

▣ **Traffic Information** P. 406


You can choose to avoid up to 10 traffic incidents. It is not always possible for the system to calculate a route that avoids all traffic incidents or specific traffic incidents you select.



The “**On Route**” tab on the Traffic List screen is only available during route guidance.

You cannot select an incident to avoid from the “**All**” tab.


You can also detour around a traffic incident manually if you encounter an unexpected obstacle.

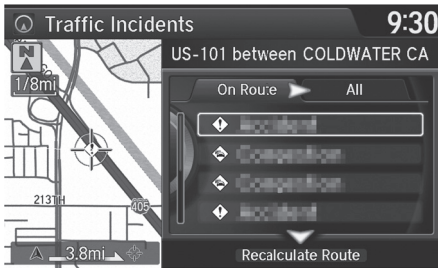▣ **Taking a Detour** P. 176





3. Move  to select **Recalculate Route**. Press .
 - ▶ The system recalculates a detour route that avoids the traffic incidents.

Changing Your Route

 **MENU** button (when en route)

This section describes how to alter your route, add an interim “waypoint” (pit stop), choose a different destination, cancel your current destination, and continue your trip after stopping.



Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.
 - **Listening to Voice Guidance** P. 159
- **Destination List:** Shows a list of waypoints. You can delete waypoints or edit the order of them.
 - **Editing the Destination List** P. 174
- **Pause Guidance:** Pauses your current route.
 - **Pausing the Route** P. 169
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Cancel Route:** Cancels the route guidance.
 - **Cancelling the Route** P. 169
- **View Routes:** Displays three different routes.
 - **Viewing the Routes** P. 153

Changing Your Route

If you press the **MENU** button when not en route, the Destination Menu screen is displayed.

➤ **Entering a Destination** P. 126

- **Change Route Preference:** Changes the route preferences (calculating method).
 - ▣ **Route Preference** P. 56
- **Detour:** Calculates a detour route.
 - ▣ **Taking a Detour** P. 176
- **Avoid Streets:** Avoids streets along your route.
 - ▣ **Avoiding Streets** P. 176

Pausing the Route

🗄 **MENU** button (when en route) ▶ **Pause Guidance**

Pause the route guidance and return to the map screen. The destination icons and all waypoint flags remain displayed on the map. Press the **MENU** button when en route and select **Resume Guidance** to resume the route guidance.

Canceling the Route

🗄 **MENU** button (when en route) ▶ **Cancel Route**

Cancel the route guidance and remove the destination and all waypoints from the destination list. The system then returns to the map screen.


▣ Pausing the Route

You can also pause your route from the Map Menu.

▣ **Map Menu** P. 161

Adding Waypoints

Add up to four waypoints (pit stops) along the route to your destination.

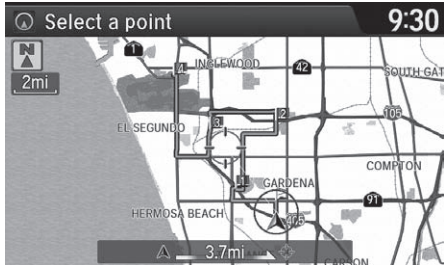

Waypoints are displayed on the map screen as small, numbered red flags. The route follows the waypoints in the order they are listed in the Destination List.

► Adding Waypoints

Waypoints allow you to stop for gas or food, for example, and then continue on to your destination.

Press the **NAV** button to return to the map screen without adding a waypoint at any time.

The search corridor used for adding waypoints can be adjusted.


► **Edit POI Search Radius Along Route** P. 61

You can delete waypoints or edit the order of waypoints in the destination list.

► **Editing the Destination List** P. 174


■ Adding Waypoints from the Route Menu

📍 MENU button (when en route) ▶ Destination List ▶ Add New Destination
▶ Find Along Route

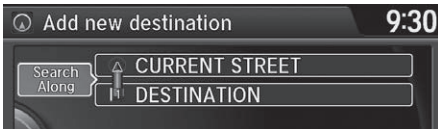

The following items are available:

- **Search Around:** Searches in a spiral pattern around the location you select.
- **Search Along:** Searches within a “corridor” on either side of the location you select.

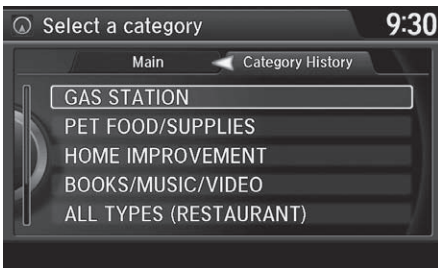



1. Rotate 🔄 to select a search method to add a waypoint. Press 📍.



2. Rotate 🔄 to select a waypoint category (e.g., **GAS STATION**). Press 📍.


▶▶ Adding Waypoints from the Route Menu

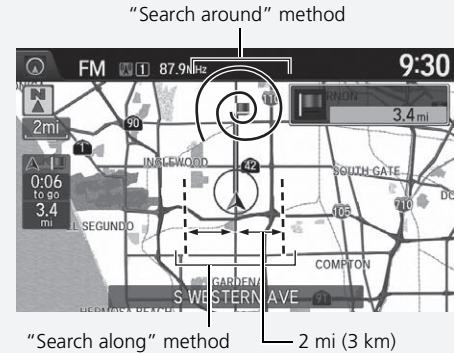

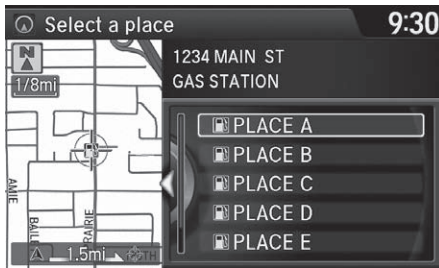Search method






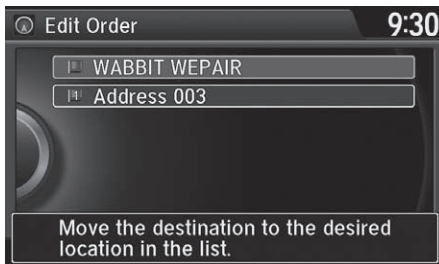


3. Rotate  to select a place. Press .
► The waypoint is added to the Destination List.

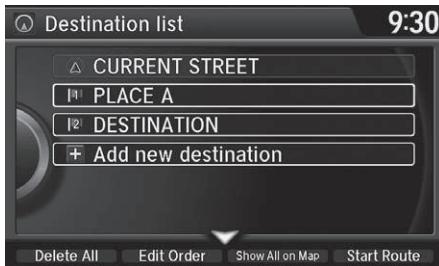

4. Rotate  to select a location and move the order of destinations. Press .




5. Move  and rotate  to select **Start Route**. Press .
► The route is automatically recalculated and displayed on the map screen.

■ Adding Waypoints from the Navigation Menu


 **MENU** button (when en route) ▶ **Destination List** ▶ **Add New Destination**






1. Rotate  to select a method to enter a waypoint.

➤ **Entering a Destination** P. 126

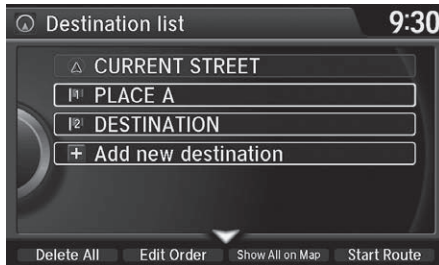▶ A new destination is added to the end of the Destination list.



2. Move  and rotate  to select **Start Route**. Press .

▶ The route is automatically recalculated and displayed on the map screen.


▣ Adding Waypoints from the Navigation Menu


You can edit the order of waypoints and destination.




➤ **Editing the Destination List** P. 174

Editing the Destination List

■ Editing the Order of Waypoints

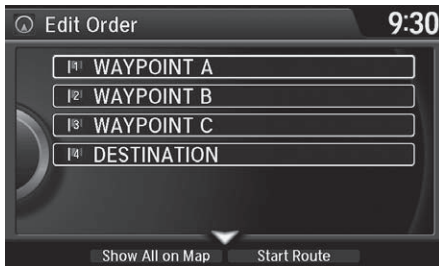


 **MENU** button (when en route) ► **Destination List**



1. Move  and rotate  to select **Edit Order**. Press .



2. Rotate  to select a list item to move. Press .

3. Rotate  to select a new location. Press .

4. Move  and rotate  to select **Start Route**. Press .

► The route is automatically recalculated and displayed on the map screen.

►► Editing the Order of Waypoints


Move  to rotate  to select **Show All on Map** to display the destination and waypoints on the map screen.

Deleting Waypoints

MENU button (when en route) ▶ Destination List



1. Rotate to select a list item to delete. Press .

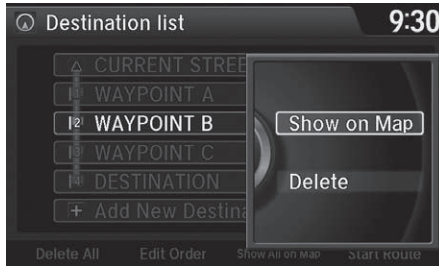

2. Rotate to select **Delete**. Press .

3. Rotate to select **Yes**. Press .

Deleting Waypoints

Move and rotate to select **Delete All** to delete the destination and all the waypoints.


Select **Show on Map** to display the waypoint on the map screen.

Taking a Detour


 **MENU** button (when en route) ► **Detour**



Calculate a detour route manually. The system attempts to calculate a new route by avoiding the next 5 miles (8 km) (while on a freeway/highway) or 1 mile (1.6 km) (while on a surface street).


Avoiding Streets

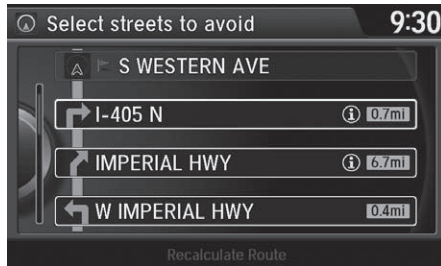

 **MENU** button (when en route) ► **Avoid Streets**

Select a street or streets along your route to avoid.

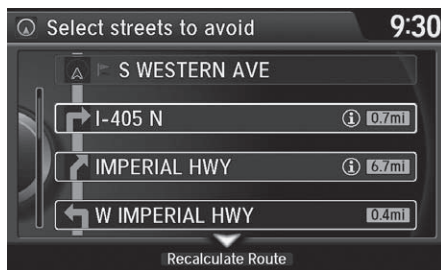

1. Rotate  to select the street you want to avoid. Press .
 - Repeat the procedure to avoid other streets.



2. Move  to select **Recalculate Route**. Press .
 - The system calculates a new route.


Taking a Detour

The detour option is convenient if you encounter an unexpected obstacle such as a road closure or extremely heavy traffic congestion.

Avoiding Streets

Avoiding certain streets is convenient if you know of road construction, road closures, or excessive traffic along the route.

You cannot choose specific streets you want to use, only those to avoid. However, you can select intersections or waypoints (places/landmarks) that the system will use in your route.

 **Adding Waypoints** P. 170

You can store up to 10 streets to avoid. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).








 




There are several methods you can use to change the route destination.

Find Nearest Place

ENTER button (on map) ► Search Nearby


Search for the nearest place/landmark on the map screen and set it as your destination.



1. Rotate  to select **Search Nearby**. Press .
2. Rotate  to select a category type. Press .
3. Rotate  to select a place. Press .
4. Rotate  to select **Set as Destination**. Press .
5. Move  to select **Clear Current Route**. Press 
 - The route is automatically recalculated and displayed on the map screen.
 - Rotate  to edit the order to set the location as a new waypoint. Press .

Selecting a Destination on the Map


Select a new destination when en route by selecting a location on the map.

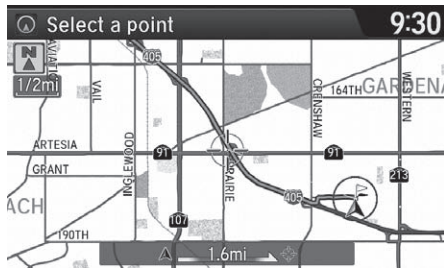

1. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .
 - ▶ If the address displayed is not the desired location, press the **BACK** button and repeat the procedure.




2. Rotate to select **Set as Destination**. Press .
 - ▶ **Calculating the Route** P. 151

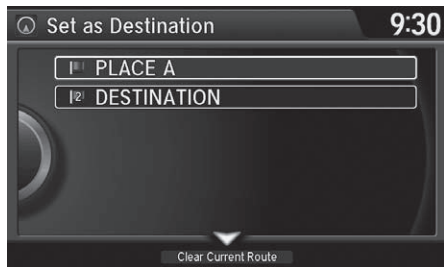

3. Move to select **Clear Current Route**. Press .
 - ▶ The route is automatically recalculated and displayed on the map screen.
 - ▶ Rotate to edit the order to set the location as a new waypoint. Press .


Selecting a Destination on the Map

If there is more than one icon or street under the map cursor, you are prompted to select the item from a list.

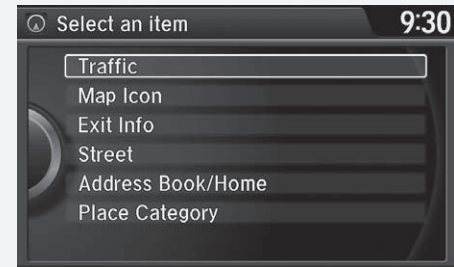



Rotate to select an item. Press .

Entering a New Destination

 **MENU** button (when en route) ► **Destination**

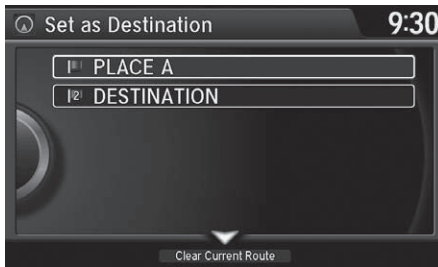

Enter a new destination using the Destination Menu screen even when you are en route.



1. Rotate  to select a method to enter a new destination.



►  **Entering a Destination** P. 126

► After entering a new destination, the address is displayed on the Calculate Route screen.

2. Rotate  to select **Set as Destination**. Press .

3. Move  to select **Clear Current Route**. Press .



► The route is automatically recalculated and displayed on the map screen.


► Rotate  to edit the order to set the location as a new waypoint. Press .


Stop your vehicle en route (e.g., to rest, stop for gas, etc.), and then continue on your route.

If you did not complete your route, the Continue Trip screen is displayed when you restart your vehicle.



Rotate  to select **Set as Destination**. Press .


- ▶ You can continue on the same route.
- ▶ Move  to scroll the map around the destination.
- ▶ Press the **BACK** button to cancel your destination.

- **View Routes:** Displays three different routes.
 - ▶ **Viewing the Routes** P. 153
- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).
 - ▶ **Route Preference** P. 56

▶ Resuming Your Trip

The Continue Trip screen has the same options as when you calculate a route.

- ▶ **Calculating the Route** P. 151

You can also cancel your destination by pressing any hard button except the  button.

Search Nearby

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

- ▶ **Find Nearest Place** P. 177

Call

You can place a telephone call to the destination phone number.

- ▶ **Bluetooth® HandsFreeLink®** P. 266

Save to Address Book

You can add the destination address to the address book.

- ▶ **Adding an Address Book Entry** P. 42

Edit/Delete Entry

You can edit or delete the address book entry.

- ▶ **Editing an Address Book Entry** P. 44
- ▶ **Deleting an Address Book Entry** P. 45

Edit Home Entry

You can edit your home address entry.

- ▶ **Home Address** P. 48

More Info

You can view detailed information about the destination.

Audio

This section describes how to operate the audio system. You can play music from a wide array of media sources, and control the audio system using the audio buttons, the Interface Dial, or voice control.


Audio System	182	Audio Menu	215	Playing Internet Radio	251
About Your Audio System	182	SiriusXM® Radio Service	218	Selecting Internet Radio Mode	251
USB Ports	183	Playing a Disc	220	Pandora® Menu *	252
Auxiliary Input Jack	185	Selecting Disc Mode	220	Aha™ Radio Menu	254
Audio System Theft Protection	185	Audio Screen Control	221	Playing a USB Flash Drive	256
Setting Audio Shortcuts	186	Audio Menu	222	Selecting USB Mode	257
Customizing Audio Source	187	Recommended CDs	225	Audio Screen Control	258
Audio Remote Controls	188	Playing Hard Disc Drive (HDD) Audio	227	Audio Menu	259
Steering Wheel Controls	188	Selecting HDD Mode	227	Playing Bluetooth® Audio	262
Audio Settings	190	Recording a Music CD to HDD	228	Selecting Bluetooth® Audio Mode	262
Adjusting the Sound	193	Audio Screen Control	229	Audio Screen Control	263
Playing FM/AM Radio	194	Audio Menu	230		
Selecting FM/AM Mode	194	Playing an iPod	239		
Audio Screen Control	195	Selecting iPod Mode	240		
Audio Menu	198	Audio Screen Control	241		
Playing SiriusXM® Radio	200	Audio Menu	243		
Selecting SiriusXM® Mode	200	Song By Voice™ (SBV)	246		
Audio Screen Control	201				

* Not available on all models

About Your Audio System

The audio system features AM/FM radio and the SiriusXM® Radio service. It can also play audio CDs, WMA/MP3/AAC files, Hard Disc Drive (HDD) audio, USB flash drives, iPod, iPhone and *Bluetooth*® devices.

You can operate the audio system from the buttons and switches on the panel, the remote controls on the steering wheel, or the icons on the On Demand Multi-Use Display™.

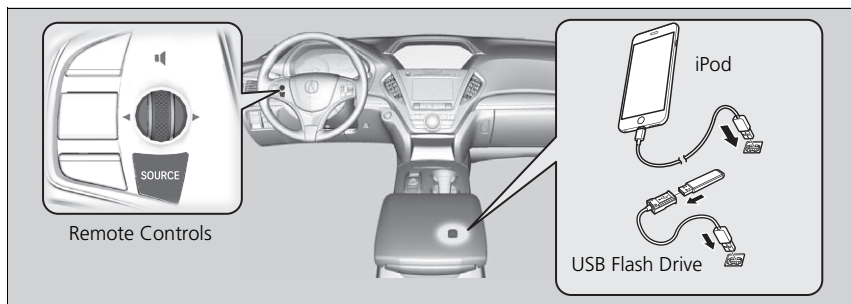

▣ About Your Audio System

SiriusXM® Radio is available on a subscription basis only. For more information on SiriusXM® Radio, contact a dealer.

▣ **SiriusXM® Radio Service** P. 218

SiriusXM® Radio is available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.

SiriusXM® is a registered trademark of SiriusXM® Radio, Inc.


Video CDs, DVDs, and 3 in (80 mm) mini CDs are not supported.

iPod, iPhone and iTunes are trademarks of Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

USB Ports

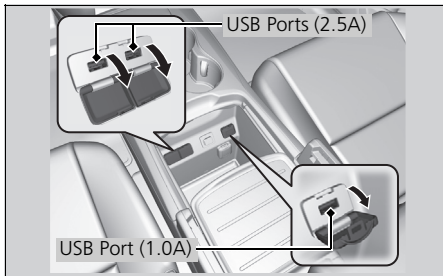

■ In the front console compartment

The USB port (1.0A) is for playing audio files on a USB flash drive and connecting a cellular phone and charging device.

The USB ports (2.5A) are only for charging devices.

■ On the back of the front console compartment*

The USB ports (2.5A) are only for charging devices.

☒ USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend using an extension cable with the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit the following website:


- U.S.: www.apple.com/ipod.
- Canada: www.apple.com/ca/ipod.

The USB port can supply up to 1.0A or 2.5A of power. It does not output 1.0A or 2.5A unless requested by the device.

For amperage details, read the operating manual of the device that needs to be charged.


Set the power mode to ACCESSORY or ON first.

* Not available on all models

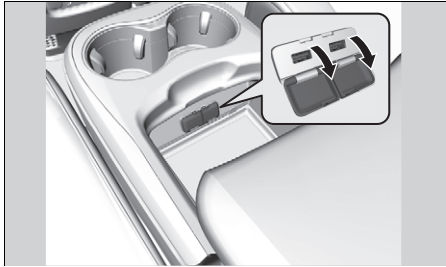

■ **In the rear console compartment***

The USB ports (2.5A) are only for charging devices.

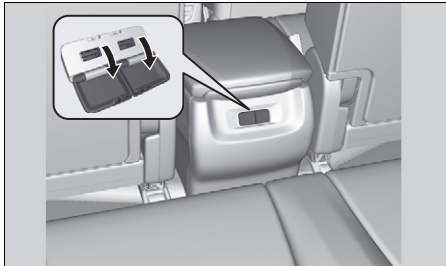

■ **On the back of the rear console compartment***

The USB ports (2.5A) are only for charging devices.


» USB Ports

USB Ports (2.5A)

This port is for battery charge only. You cannot play music even if you have connected a music player to it.

Under certain conditions, a device connected to the port may generate noise in the radio you are listening to.

Auxiliary Input Jack

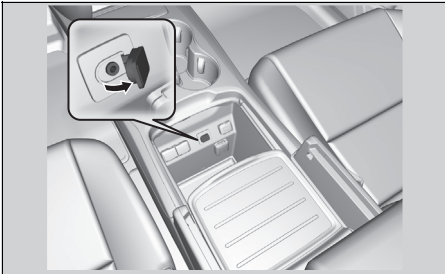


Use the jack to connect standard audio devices.

1. Open the AUX cover.
2. Connect a standard audio device to the input jack using a 1/8 in (3.5 mm) stereo miniplug.
 - ▶ The audio system automatically switches to the AUX mode.

Audio System Theft Protection

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

■ Reactivate the Audio System

1. Set the power mode to ON.
2. Turn on the audio system.
3. Press and hold the  (Power) button for more than two seconds.
 - ▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to a dealer and have the audio unit checked.



⌘ Auxiliary Input Jack

You can return to the AUX mode by selecting **Change Source** on the Audio menu screen or **Source** on the On Demand Multi-Use Display™.

Setting Audio Shortcuts

You can store up to six radio stations, and HDD audio album/play lists when playing AM, FM, SiriusXM® radio, or HDD audio.

■ Storing a Station or Song

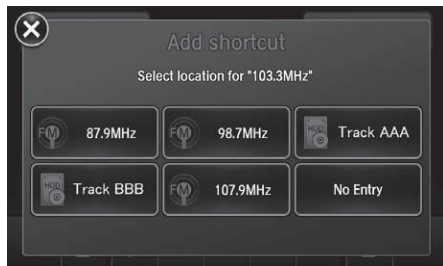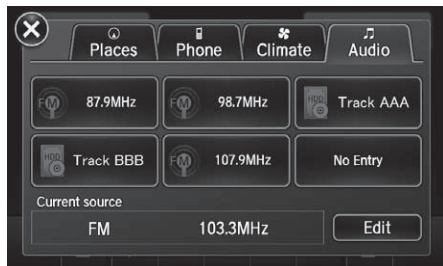

1. Select **Shortcuts**.
2. Tune to a radio station or select a song.
 - ▶ **Playing FM/AM Radio** P. 194
 - ▶ **Playing SiriusXM® Radio** P. 200
 - ▶ **Playing Hard Disc Drive (HDD) Audio** P. 227
3. Select **Audio**.
4. Select **Edit** or **No Entry**.
 - ▶ If you select **No Entry**, go to step 6.
5. Select **Add**.
6. Select the preset icon you want to store the station or song to.

▶▶ Setting Audio Shortcuts


You can also preset a station or song by pressing and holding the preset icon you want to store that station or song after step 3.

■ Deleting a Preset Station or Song

1. Select **Shortcuts**.
2. Select **Audio**.
3. Select **Edit**.
4. Select **Delete**.
5. Select the preset icon with the radio station or a song you want to delete.

Customizing Audio Source

You can customize order of the source list icons.

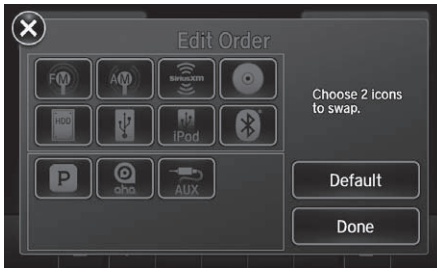


1. Select **Source**.
2. Select **Edit Order** from the second screen.
3. Select two icons you want to swap.
4. Select **Done**.
 - ▶ Select **Default** to reset the customized order.

Customizing Audio Source

This operation is not allowed while the vehicle is in motion.

Steering Wheel Controls

Allows you to operate the audio system while driving.

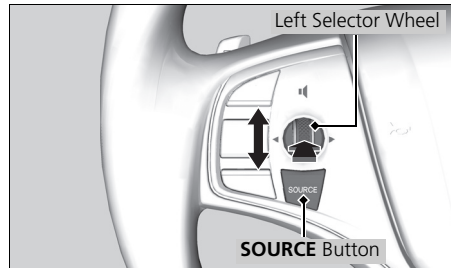

SOURCE Button

Cycles through the audio modes as follows:

FM→AM→SiriusXM®→CD→HDD→
USB→iPod→*Bluetooth*®
Audio→Pandora®*→Aha™→AUX

Left Selector Wheel

Roll Up: To increase the volume.

Roll Down: To decrease the volume.

Push: To mute. Push again to unmute.

- When listening to the radio
 - Move to the right:** To select the next preset radio station.
 - Move to the left:** To select the previous preset radio station.
 - Move to the right and hold:** To select the next strong station.
 - Move to the left and hold:** To select the previous strong station.
- When listening to a CD, HDD, iPod, USB flash drive, or *Bluetooth*® Audio
 - Move to the right:** To skip to the next song.
 - Move to the left:** To go back to the beginning of the current or previous song.
 - Move to the right and hold:** To go to the next folder. (*Bluetooth*® Audio only)
 - Move to the left and hold:** To go to the previous folder. (*Bluetooth*® Audio only)

Audio Remote Controls

The CD mode appears only when a CD is loaded.

 

The USB mode, iPod mode, *Bluetooth*® Audio mode, Pandora®* mode, and Aha™ mode appear when a connection (*Bluetooth*® or USB) is established with a device.

To select audio mode, press the **SOURCE** button, then move the left selector wheel to the right or left.

- When listening to a CD, HDD or USB flash drive
 - Move to the right and hold:** To skip to the next folder.
 - Move to the left and hold:** To go back to the previous folder.
- When listening to Pandora®* and Aha™
 - Move to the right:** To skip to the next song.
 - Move to the right and hold:** To select the next station.
 - Move to the left and hold:** To select the previous station.

SETTINGS button ► Audio Settings



1. Move ◀○ or ○▶ to select an audio mode you want to set.
2. Rotate  to select an item. Press .

The following items are available:

SXM tab

- **SportsFlash** (SiriusXM® mode):
Notification: Sets whether a notification comes on the screen when the system receives a sports alert. If you select **Enable (one time)**, the system enables the notification until turning the vehicle off.
Beep: Turns on or off the beep that sounds every time the pop-up message interrupts other audio mode screen.
Favorite Teams: Stores up to five favorite teams. Certain sports may require additional station subscriptions.
- **Play Song from Beginning** (SiriusXM® mode): Turns on or off the Tune Start function that begins playing the current song from the beginning when you tune to a music channel.
- **Traffic & Weather Now Setup** (SiriusXM® mode): Selects a city for using the SiriusXM® traffic and weather information.
- **Channel Art** (SiriusXM® mode): Turns on and off the channel art display.

Audio Settings

The “Play Song from Beginning” function is based on TuneStart™ technology of SiriusXM®.

TuneStart™ is a registered trademark of SiriusXM® Radio, Inc.

CD/HDD tab

- **Recording from CD** (CD mode): Selects whether the songs on music CDs are automatically recorded to the HDD.
- **Recording Quality** (CD mode): Selects the quality of the music files recorded to the HDD.
- **HDD Info** (HDD mode): Displays the HDD capacity.
- **Update Gracenote Album Info** (CD or HDD mode): Updates the Gracenote® Album Info (Gracenote® Media Database) from CD or from USB.
 - ▣ **Updating Gracenote® Album Info** P. 237
- **Delete All HDD Data** (HDD mode): Resets all the menu and customized settings, and delete all music data on the HDD.

Bluetooth tab

- **Bluetooth Device List** (*Bluetooth*® Audio mode): Edits or deletes *Bluetooth* Audio device paired.
- **Connect Bluetooth Audio Device** (*Bluetooth*® Audio, Pandora®* or Aha™ mode): Connects, disconnects, or pairs a *Bluetooth*® Audio device to HFL.


DVD tab*

- **DVD Auto Play** (DVD mode): Turns the auto play feature on or off.
- **Audio Language** (DVD mode): Selects a language for the audio that is available on the DVD.
- **Subtitle Language** (DVD mode): Selects a language for the subtitle that is available on the DVD.
- **Menu Language** (DVD mode): Selects a language for the DVD menu that is available on the DVD.
- **Dynamic Range** (DVD mode): Sets whether to control the range of the loud and low sounds.

Other tab

- **Source Select Popup**: Selects whether the list of selectable audio sources comes on when the **AUDIO** button is pressed.
- **HD Radio Mode*** (AM/FM mode): Selects whether the audio system automatically switches to the digital radio waves or receives the analogue waves only.
- **Cover Art** (CD (MP3/WMA/AAC), iPod, USB, Pandora®* or Aha™ mode): Turns on and off the cover art display.
- **Default**: Cancels/Resets all customized items in the Audio Settings group as default.





Adjusting the Sound

 **MENU** button ▶ **Sound**

Interface Dial






Adjust the sound bass, treble, fader, and balance. You can also adjust the strength of the sound coming from the center and subwoofer speakers. In addition, you can set Speed-sensitive Volume Compensation (SVC) and DTS Neural Surround.



1. Rotate  to select the sound mode to adjust. Press .
2. Rotate  to adjust the desired level. Press .

On Demand Multi-Use Display™



1. Select **More**.
2. Select **Sound**.
3. Use ,  or other icon to adjust the setting.
 - ▶ Use the / icons to turn the page.
 - ▶ Select  to go back to the previous screen.

Adjusting the Sound

The SVC has four modes: **Off**, **Low**, **Mid**, and **High**.


SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

DTS Neural Surround is a trademark of DTS, Inc.

When available, DTS Neural Surround converts stereo sound into surround sound.





On Demand Multi-Use Display™

Select **Off**, **Low**, **Mid** or **High** for the SVC setting.

You can also adjust the sound to select  on the On Demand Multi-Use Display™.

Selecting FM/AM Mode

Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select the frequency band (FM, AM). Press 
 - ▶ The band and frequency are displayed on the audio/information screen.

On Demand Multi-Use Display™

1. Select **Source**.
2. Select the frequency band (FM, AM) icon.
 - ▶ The band and frequency are displayed on the On Demand Multi-Use Display™.

▶ Selecting FM/AM Mode

You can control the AM/FM radio using voice commands.

 **Radio FM Commands** P. 417

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.

The radio can receive the complete AM and FM bands:

AM band: 530 to 1710 kHz


FM band: 87.7 to 107.9 MHz

You can store 6 AM stations and 12 FM stations into the preset memory.


Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

Interface Dial

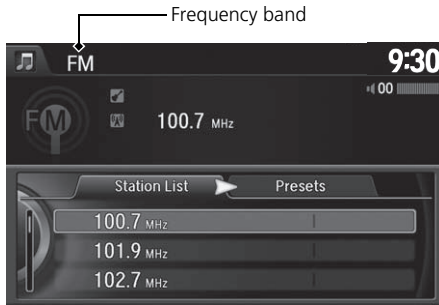


Rotate  to select a station from the list. Press .

- ▶ Rotate  and select **Refresh** to update the station list at any time.
- ▶ Press the **MENU** button to display the menu items.

➤ **Audio Menu P. 198**

On Demand Multi-Use Display™

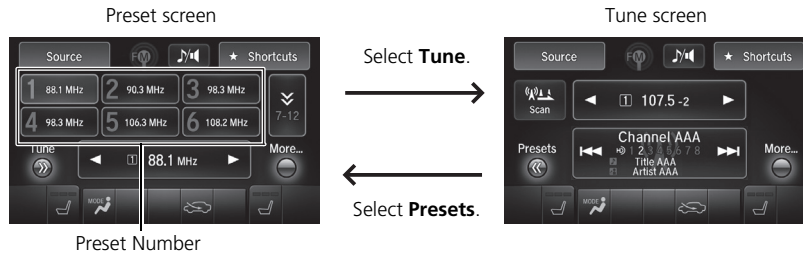




The following items are available:

- ◀ ▶: Tune the radio frequency. On the preset screen, select and hold to search up and down the selected band for a station with a strong signal.
- ⏪ ⏩: Search up and down the selected band for a station with a strong signal.
- **Preset Number**: Select and hold a desired number where you want to store the station. Select to listen to a preset station.
- **More**: Display the menu items.
 - ▶ **Audio Menu** P. 198
- **Scan**: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.

Preset Memory

Interface Dial

To store a station:

1. Tune to the desired station.
2. Move  to select **Presets**.
3. Rotate  to select a desired number on the preset station list.
4. Press and hold  a few seconds to store the current station.

To listen to a stored station, rotate  to select the preset number. Press .


On Demand Multi-Use Display™

To store a station:

1. Tune to the selected station on preset screen.
2. Select and hold a desired number.



To listen to a stored station, select the preset number.

Audio Menu



 **MENU** button (in FM/AM mode)

Interface Dial



Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Refresh Station List:** Updates a station list.
- **Radio Text:** Displays the text information broadcast by the current RDS station.
- **Save Preset:** Stores the station into the preset memory.
- **Change Source:** Changes the audio source mode.
- **Scan:** Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **Tune/Seek:** Tunes the radio to the frequency you select. Rotate  to select a frequency, then press .
- **HD Subchannel*:** Displays the subchannel list when an HD Radio™ station is selected.


▶▶ Audio Menu

U.S. models



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio and “Arc” logos are proprietary trademarks of iBiquity digital Corp.

On Demand Multi-Use Display™

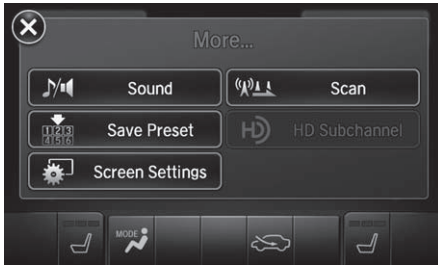

1. Select **More**.
2. Select a setting item.





The following items are available:

- **Sound**: Displays the sound preferences screen.
 - **Adjusting the Sound** P. 193
- **Save Preset**: Stores the station into the preset memory.
- **Screen Settings**: Adjusts the screen's preferences.
 - **Changing the Screen Settings** P. 89
- **Scan**: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **HD Subchannel***: Displays the subchannel list when an HD Radio™ station is selected.

* Not available on all models

Selecting SiriusXM® Mode

Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select **SXM**. Press 
 - ▶ The category, channel list, and presets are displayed on the audio/information screen.

On Demand Multi-Use Display™

1. Select **Source**.
2. Select the SiriusXM icon.
 - ▶ The category and channel are displayed on the On Demand Multi-Use display™.

▶▶ Playing SiriusXM® Radio

You can control the SiriusXM® radio using voice commands.

▶ **Radio SXM Commands** P. 417


In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.






SiriusXM® Radio channels load in ascending order, which can take about a minute. Once they have loaded, you can scroll up or down to make your selections.

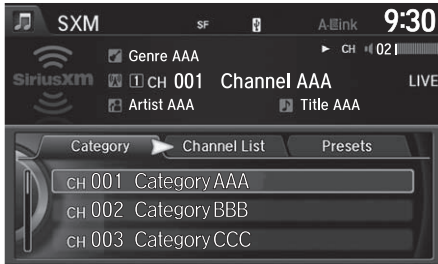Audio Screen Control


Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



Interface Dial

1. Rotate  to select a category.
Press .
▶ Move  if you want to select from the current channel list or presets.
2. Rotate  to select a channel.
Press .
▶ Press the **MENU** button to display the menu items.
▶ **Audio Menu** P. 215

On Demand Multi-Use Display™

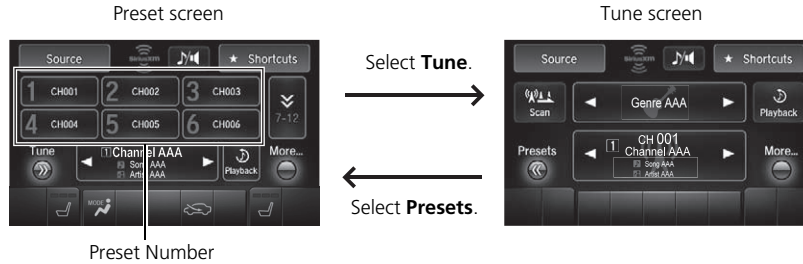




The following items are available:

- **Category bar** (Tune screen): Select ◀ or ▶ to search a category.
- **Channel bar**: Select ◀ or ▶ to search a channel. Select and hold ◀ or ▶ to search up or down 10 channels.
- **Preset Number** (Preset screen): Select a preset channel. Select and hold to search a channel.
- **Playback**: Display the **Playback** screen.
 - ▶ **Replay Function** P. 205
- **More**: Display the menu items.
 - ▶ **Audio Menu** P. 215
- **Scan**: Scans for channels in the selected mode or Presets and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.

Preset Memory

Interface Dial

To store a channel:

1. Tune to the desired channel.
2. Move  to select **Presets**.
3. Rotate  to select a desired number.
4. Press and hold  a few seconds to store the current channel.

To listen to a stored channel, rotate  to select the preset number. Press .

On Demand Multi-Use Display™

To store a channel:

1. Tune to the desired channel.
2. Select and hold a desired number.

To listen to a stored channel, select the preset number.


▶▶▶ Preset Memory

You can store 12 SiriusXM® channels into the preset memory.

■ Multi-channel preset (for music channels only)

On Demand Multi-Use Display™

You can store up to four of your preferred music channels per preset. When multiple channels exist, the music randomly skips between channels.

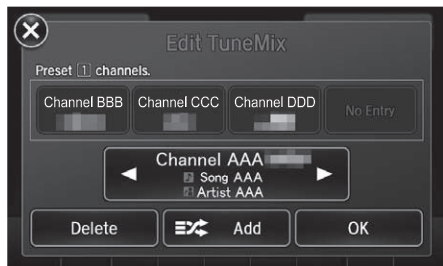

1. Select a channel you want to store.
2. Select **More**.
3. Select **Save Preset**.
4. Select **Edit TuneMix**.
5. Select a preset number where you want to add a music channel.
6. Select **Add**.
 - ▶ Select **OK** or **X** to return the previous screen.

To delete a multi-channel preset:

1. Select **More**.
2. Select **Save Preset**.
3. Select **Edit TuneMix**.
4. Select a multi-channel preset number.
5. Select **Delete**.
6. Select channel icon.
 - ▶ Select **OK** or **X** to return the previous screen.


⌘ Multi-channel preset (for music channels only)

Not all SiriusXM® channels are available to add to multi-channel preset.

Replay Function

 **MENU** button (in SiriusXM® mode) ▶ **Playback**

The system can record up to the last 60 minutes broadcast of your currently tuned channel as well as the last 30 minutes broadcast of preset channels, starting from the moment you turn the vehicle on. If you tuned to a preset channel, the system records up to 60 minutes of a broadcast instead of up to 30 minutes. You can rewind and replay the last 30 or 60 minutes of a broadcast.

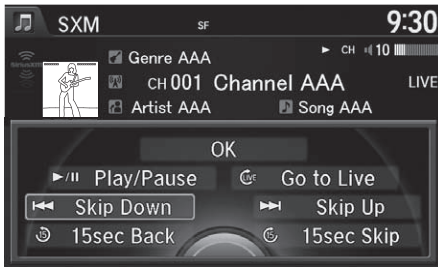

Select an option.

The following options are available:

- **OK:** Returns to previous channel.
- **Play/Pause:** Pauses or plays a storing broadcast.
- **Go to Live:** Returns to real-time broadcast.
- **Skip Down:** Skips to the previously stored channel.
- **Skip Up:** Skips to the next channel.
- **15sec Back:** Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.
- **15sec Skip:** Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.



Replay Function

The system starts storing broadcast in memory when the vehicle is turned on. You can go back to the program from that point.

You can no longer replay any program once the vehicle is turned off or if the non-preset channel has been changed.

The audio/information screen displays how long the station has been recording in the replay status bar.


To play or pause in playback mode:

Rotate  to select **Play/Pause**, press .

■ **Returning to real-time broadcast**

Rotate  to select **Go to Live**, press  while listening to the playback channel.

On Demand Multi-Use Display™

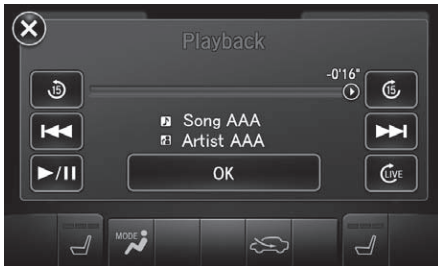

1. Select **Playback**.
2. Select an option.

The following options are available:

- **(15sec Back)**: Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.
- **(15sec Skip)**: Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.
- **(Skip Down)**: Skips to the previously stored channel.
- **(Skip Up)**: Skips to the next channel.
- **(Play/Pause)**: Pauses or plays a storing broadcast.
- **(Live)**: Returns to real-time broadcast.
- **OK**: Returns to previous channel.

To play or pause in playback mode:

Select .

■ Returning to real-time broadcast


Select while listening to the playback channel.

■ Replay status display

Display the replay status on the audio/information screen and On Demand Multi-Use display™ when you listen to the playback.

Interface Dial

Shows how much time the replayed segment is behind the real-time broadcast

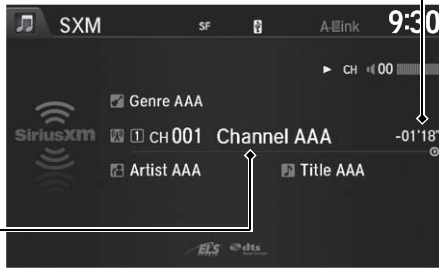


Stored length in the memory

Replayed segment

On Demand Multi-Use Display™

Shows how much time the replayed segment is behind the real-time broadcast

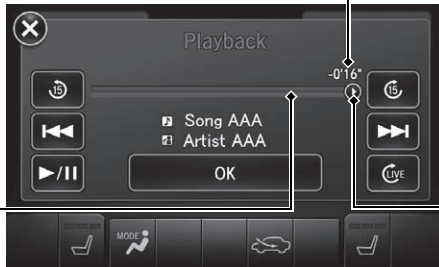

Stored length in the memory

Replayed segment

SportsFlash™ Alert

While listening to other channels, you can receive sports alerts such as scores from up to five of your favorite teams. The notification message appears on the audio/information screen and On Demand Multi-Use Display™ when receiving sports alerts.

Interface Dial



1. A pop-up appears and notifies you of a sports alert.
2. Select **Listen Now**.
 - ▶ Press the **BACK** button to return the previous screen.
 - ▶ If no operations are performed for 10 seconds, the system returns to the previous audio mode automatically.

The following items are available:

- **Check Later:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message appears again.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.

SportsFlash™ Alert

The notification message does not appear on the audio/information screen under the following circumstances:


- When you select a source other than the SiriusXM® Mode.
- When the start-up screen and Multi-view Rear Camera screen are displayed.

When a sports alert is received, the SportsFlash™ Listen indicator appears on the audio/information screen.

You can change the SportsFlash™ setting.

▶ **Audio Settings** P. 190

SportsFlash™ is a registered trademark of SiriusXM® Radio, Inc.

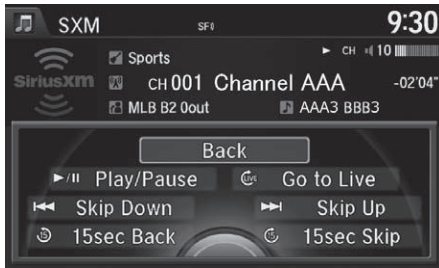


3. Select an option.

The following options are available:

- **Back:** Returns to the previous screen.
- **Play/Pause:** Pauses or plays a current sports alert.
- **Go to Live:** Returns to real-time broadcast.
- **Skip Down:** Skips to the previously stored sports alert.
- **Skip Up:** Skips to the next stored sports alert.
- **15sec Back:** Select to skip back 15 seconds to the current sports alert. Select and hold to fast-rewind the current sports alert.
- **15sec Skip:** Select to skip forward 30 seconds to the current sports alert. Select and hold to fast-forward the current sports alert.

On Demand Multi-Use Display™

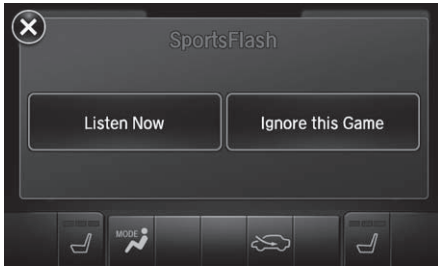

1. Select an item.
 - ▶ Select **X** to return to the previous screen.
 - ▶ If no operations are performed for 10 seconds, the system returns to the previous screen automatically.

The following items are available:

- **Listen Now:** Plays the received sports alert in the current game.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.



2. Select an option.

The following options are available:

- (15sec Back): Select to skip back 15 seconds to the current sports alert. Select and hold to fast-rewind the current sports alert.
- (15sec Skip): Select to skip forward 15 seconds to the current sports alert. Select and hold to fast-forward the current sports alert.
- (Skip Down): Skips to the previously stored sports alert.
- (Skip Up): Skips to the next stored sports alert.
- (Play/Pause): Pauses or plays a current sports alert.
- (Live): Returns to real-time broadcast.
- **Back**: Returns to the previous screen.

■ Listening to a missed sports alert


Interface Dial

If you have missed a sports alert:

1. From the audio screen, press the **MENU** button.
2. Move to select **Advanced**.
3. Rotate to select **SportsFlash™**, then press .
4. Rotate to select an alert, then press .

Traffic and Weather Information

MENU button (in SiriusXM® mode) ▶ **Advanced** ▶ **Traffic & Weather Now**
 You can receive the SiriusXM® traffic and weather information. The information displays on the audio/information screen and On Demand Multi-Use Display™.

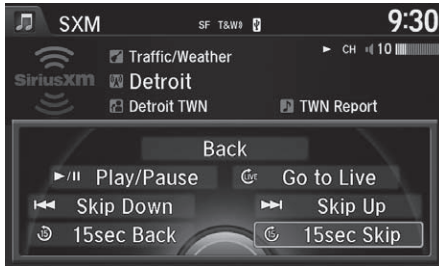

Select an option.

The following options are available:

- **Back:** Returns to previous channel.
- **Play/Pause:** Pauses or plays a storing broadcast.
- **Go to Live:** Returns to real-time broadcast.
- **Skip Down:** Skips to the previously stored channel.
- **Skip Up:** Skips to the next channel.
- **15sec Back:** Select to skip back 15 seconds in the current broadcast. Select and hold to fast-rewind the current broadcast.
- **15sec Skip:** Select to skip forward 15 seconds in the current broadcast. Select and hold to fast-forward the current broadcast.

Traffic and Weather Information

The traffic and weather information function at SiriusXM® mode only.

When you listen to the traffic and weather information service, set up the applicable city using **Traffic & Weather Now Setup**.

▶ **Audio Settings** P. 190

Traffic & Weather Now are registered trademarks of SiriusXM® Radio, Inc.



On Demand Multi-Use Display™


1. Select **More**.
2. Select **Traffic & Weather Now**.
3. Select an option.



The following options are available:

- **15 (15sec Back)**: Select to skip back 15 seconds in the current broadcast. Select and hold to fast-rewind the current broadcast.
- **15 (15sec Skip)**: Select to skip forward 15 seconds in the current broadcast. Select and hold to fast-forward the current broadcast.
- **⏮ (Skip Down)**: Skips to the previously stored channel.
- **⏭ (Skip Up)**: Skips to the next channel.
- **▶/|| (Play/Pause)**: Pauses or plays a storing broadcast.
- **LIVE (Live)**: Returns to real-time broadcast.
- **Back**: Returns to previous channel.

Audio Menu

Interface Dial

 **MENU** button (in SiriusXM® mode)

1. Move ◀○ or ○▶ to select an item.
2. Rotate  to select an item. Press .



The following items are available:

General tab

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Save Preset:** Stores the current channel into the preset memory.
- **Change Source:** Changes the audio source mode.
- **Scan:** Selects the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.
 - Scan Channels:** Scans for categories or channels with a strong signal in the selected mode.
 - Scan Songs in Presets:** Scans for desired preset channel by songs. Select **Skip Up** or **Skip Down** to skip to the next/previous stored selection.
- **Playback:** Displays the Playback screen.
 - ▶ **Replay Function** P. 205

▶▶ Audio Menu

The "Scan Songs in Presets" function is based on TuneScan™ technology of SiriusXM®.

The "Featured Channels" function is based on Featured Favorites™ technology of SiriusXM®.

TuneScan™ and Featured Favorites™ are registered trademarks of SiriusXM® Radio, Inc.


Traffic & Weather Now are registered trademarks of SiriusXM® Radio, Inc.

To find out more about these features, visit www.siriusxm.com (U.S.) or www.siriusxm.ca (Canada).

Advanced tab



- **Traffic & Weather Now:** Displays the SiriusXM® traffic and weather information.
- **Featured Channels:** Displays the list of suggested channels from SiriusXM®. Up to three channel groups can be displayed.
- **View Channel Schedule:** Displays the channel schedule.
- **SportsFlash:** Displays the list of available sports alerts. Up to two sports alerts can be displayed.

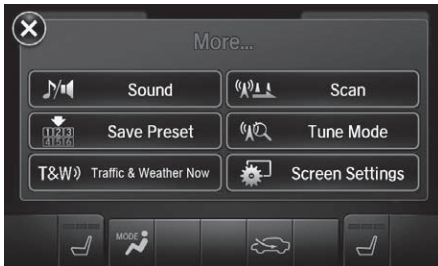On Demand Multi-Use Display™



1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.
 - ▶ **Adjusting the Sound** P. 193
- **Save Preset:** Stores the channel into the preset memory. Set to store up to five of your preferred music channels per preset if the **Preset** icon is highlighted.
 - ▶ **Multi-channel preset (for music channels only)** P. 204
- **Traffic & Weather Now:** Displays the SiriusXM® traffic and weather information.
- **Scan:** Selects the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.
 - Scan Channels:** Scans for categories or channels with a strong signal in the selected mode.
 - Scan Songs in Presets:** Scans for desired preset channel by songs. Select  or  to skips to the next/previous stored selection.
- **Tune Mode:** Sets the tune mode.
 - Channel:** Tune to select all available channels.
 - Category:** Tune to select a channel within a category (Jazz, Rock, Classic, etc.).
- **Screen Settings:** Adjusts the screen's preferences.
 - ▶ **Changing the Screen Settings** P. 89

SiriusXM® Radio Service

■ Subscribing to SiriusXM® Radio

1. You need your radio ID ready before registering for subscription. To see the ID in the display: Operate the On Demand Multi-Use Display™ until channel 0 appears.
2. Have your radio ID and credit card number ready, and either call or visit the SiriusXM® website to subscribe.

■ Receiving SiriusXM® Radio

Switch to the SiriusXM® mode by pressing the **SOURCE** button on the steering wheel, or through the On Demand Multi-Use Display™, and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

✎ Subscribing to SiriusXM® Radio

Contact Information for SiriusXM® Radio:
U.S.: SiriusXM® Radio at www.siriusxm.com or (800) 852-9696
Canada: SiriusXM® Canada at www.siriusxm.ca, or 1-877-438-9677

✎ Receiving SiriusXM® Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack

■ SiriusXM® Radio Display Messages

Loading:

SiriusXM® is loading the audio or program information.

Channel off air:

The channel is not currently broadcasting.

Channel unsubscribed:

You are not subscribed to the channel selected.

No signal:

The signal is too weak in the current location.

Channel unavailable:

No such channel exists.





Check antenna, Antenna disconnected, Antenna shorted:

There is a problem with the SiriusXM® antenna. Contact a dealer.

Your audio system supports audio CDs, CD-Rs and CD-RWs in either MP3, WMA, or AAC format. With the CD loaded, select the CD mode.

Selecting Disc Mode

Interface Dial

1. Insert a disc into the disc slot.
 - ▶ The disc automatically begins playing.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **CD**. Press .

On Demand Multi-Use Display™

1. Insert a disc into the disc slot.
 - ▶ The disc automatically begins playing.
2. Select **Source**.
3. Select the CD icon.

▶▶ Playing a Disc

NOTICE

Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

WMA and ACC files protected by digital rights management (DRM) cannot be played. The audio system displays Unplayable File, then skips to the next file.

Text data appears on the display under the following circumstances:

- When you select a new folder, file, or track.
- When you change the audio mode to CD.
- When you insert a CD.

If you eject the CD, but do not remove it from the slot, the system reloads the CD automatically after several seconds.

You can control a CD audio using voice commands.

▶▶ **Disc Commands** P. 417

Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



Track list



Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a file from the list (files in MP3, WMA, or AAC). Press .
 - ▶ Press the **MENU** button to display the menu items.
 - ▶ **Audio Menu** P. 222

On Demand Multi-Use Display™

1. Select to skip to the next folder, and to skip to the beginning of the previous folder in MP3, WMA, or AAC.
2. Select or to change tracks (files in MP3, WMA, or AAC). Select and hold to move rapidly within a track/file.
 - ▶ Select **More** to display the menu item.
 - ▶ **Audio Menu** P. 222

▶▶▶ Audio Screen Control

▶▶▶ On Demand Multi-Use Display™



- **Random:** Plays all tracks/files in random order.
- **Repeat:** Repeats the current track/file.
- **Scan:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC). Select **Stop Scan** to stop scanning and play the current selection.

Audio Menu

 **MENU** button (in CD mode)

Interface Dial




Rotate  to select an item. Press .

The following items are available, depending on the type of disc:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Music Search:** Selects a file from the Music Search list.
 - ▶ **How to Select a File from the Music Search List (MP3/WMA/AAC)** P. 224
- **Change Source:** Changes the audio source mode.
- **Scan:**
 - Scan Folders (MP3/WMA/AAC):** Provides 10-second sampling of the first file in each of the main folders.
 - Scan Tracks:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC).
- **Random/Repeat:**
 - Repeat Folder (MP3/WMA/AAC):** Repeats all files in the current folder.
 - Repeat Track:** Repeats the current track/file.
 - Random in Folder (MP3/WMA/AAC):** Plays all files in the current folder in random order.
 - Random All Tracks:** Plays all tracks/files in random order.

- **Rec to HDD:** Records a music CD onto the HDD for playback using HDD Audio.
 ➤ **Recording a Music CD to HDD** P. 228

On Demand Multi-Use Display™

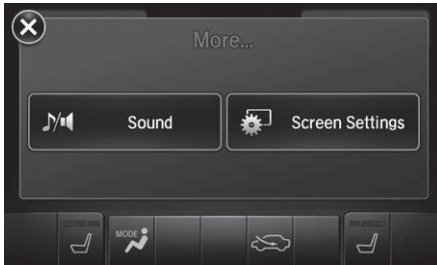


1. Select **More**.
2. Select a setting item.





The following items are available, depending on the type of disc:

- **Sound:** Displays the sound preferences screen.
 ➤ **Adjusting the Sound** P. 193
- **Screen Settings:** Displays the screen preferences screen.
 ➤ **Changing the Screen Settings** P. 89

■ How to Select a File from the Music Search List (MP3/WMA/AAC)

 **MENU** button (in CD mode) ▶ **Music Search**

 

Rotate , move  or  to select a file from the Music Search list. Press .

Recommended CDs

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped CDs.

The CD packages or jackets should have one of these marks.



Also includes:



CDs with MP3, WMA or AAC Files

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported.

Recommended CDs

A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround and Neural Surround are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

■ Protecting CDs

Follow these precautions when handling or storing CDs:

- Store a CD in its case when it is not being played.
- When wiping a CD, use a soft clean cloth from the center to the outside edge.
- Handle a CD by its edge. Never touch either surface.
- Never insert foreign objects into the CD player.
- Keep CDs out of direct sunlight and extreme heat.
- Do not place stabilizer rings or labels on the CD.
- Avoid fingerprints, liquids, and felt-tip pens on the CD.

▶▶ Protecting CDs

NOTICE

Do not insert a damaged CD. It may get stuck inside and damage the audio unit.

Examples:

Bubbled, wrinkled, labeled, and excessively thick CDs



Bubbled/
Wrinkled



With Label/
Sticker



Using Printer
Label Kit

Damaged CDs



Sealed

 


With Plastic Ring


Poor quality CDs



Chipped/
Cracked



Warped

 

Burrs

Small CDs







3 in (80 mm) CD

The Hard Disc Drive (HDD) Audio function plays tracks from music CDs that have been recorded onto the built-in HDD. You can arrange the tracks in playlists or play the tracks using various search methods.

Selecting HDD Mode

Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select **HDD**. Press  to play tracks stored on the HDD.
 - ▶ Title information is displayed if found in the Gracenote® Album Info (Gracenote® Media Database) stored on the HDD.
 - ▶ The HDD has two types of playlists: original playlists and user playlists. An original playlist is automatically created for each album when a music CD is recorded. You can customize up to six user playlists provided on the HDD by adding tracks from your original playlists.

On Demand Multi-Use Display™

1. Select **Source**.
2. Select the HDD icon to play tracks stored on the HDD.

▶▶ Playing Hard Disc Drive (HDD) Audio

You can control the HDD audio using voice commands.

- ▶ **HDD Commands** P. 417
- ▶ **Song By Voice™ (SBV)** P. 246

Music tracks recorded on HDD cannot be recorded onto CDs or other devices.

Tracks are recorded at four times the playback speed using ultra-efficient compression technology; therefore, sound quality may vary slightly from the original.

If the HDD is ever replaced, all music data is lost and cannot be recovered.


If there is a problem, you may see an error message on the display.

- ▶ **Hard Disc Drive (HDD) Audio** P. 393



Recording a Music CD to HDD

When **Recording from CD** is set to **Auto**, the songs on music CDs are automatically recorded to the HDD the first time you play each disc. You can then play the songs directly from the HDD.

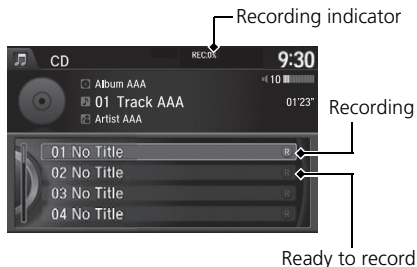➤ **Customized Features** P. 90



■ Stopping Recording

1. Press the **MENU** button. (in CD mode)
2. Rotate  to select **Cancel Record to HDD**. Press .

■ Recording a CD Manually

When **Recording from CD** is set to **Manual**, the songs on music CDs can be manually recorded to the HDD.

1. Press the **MENU** button. (in CD mode)
2. Rotate  to select **Rec to HDD**. Press .

➤ Recording a Music CD to HDD

You can add tracks to user playlists, where you can mix and match tracks from other CDs recorded on the HDD.

➤ **Editing an Album or Playlist** P. 233

➤ **Editing Track Information** P. 235

If you stop the engine or the power system is turned off while recording a CD, there may be pauses between songs when you play back from the HDD.

Repeat, random, and scan functions are not available during recording.

You can play music from other sources (e.g., SiriusXM®, HDD, etc.) while recording.


Please note that there is no compensation offered in the case of unsuccessful recording of audio data or the loss of audio data due to any cause whatsoever.

Clearing the HDD

Any music tracks stored on the HDD can be deleted.

Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

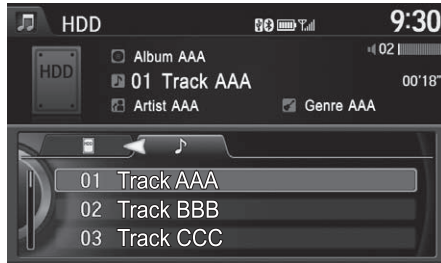

Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a track from the list. Press .

▶ Press the **MENU** button to display the menu items.

▶ **Audio Menu** P. 230

On Demand Multi-Use Display™

1. Select skip to the next playlist/album, and to skip to the beginning of the previous playlist/album.
2. Select or to change tracks.

Select and hold to move rapidly within a track.

▶ Select **More** to display the menu item.

▶ **Audio Menu** P. 230

▶▶ Audio Screen Control

▶▶ On Demand Multi-Use Display™



- **Repeat:**
 - Repeat Artist:** Repeats all tracks in the current artist.
 - Repeat Album:** Repeats all tracks in the current album.
 - Repeat Track:** Repeats the current track.
- **Random:**
 - Random in Artist:** Plays all tracks in the current artist in random order.
 - Random in Album:** Plays all tracks in the current album in random order.
 - Random All Tracks:** Plays all tracks in random order.
- **Scan:**
 - Albums:** Provides 10-second sampling of the first track in each album.
 - Tracks:** Provides 10-second sampling of all tracks on HDD.

Audio Menu

 **MENU** button (in HDD mode)

Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Music Search:** Selects a file from the Music Search list.
 - ▶ **How to Select a Track from the Music Search List** P. 232
- **Change Source:** Changes the audio source mode.
- **Scan:**
 - Scan Albums:** Provides 10-second sampling of the first track in each album.
 - Scan Tracks:** Provides 10-second sampling of all tracks on HDD.
- **Random/Repeat:** The following menu items vary depending on the category you selected by the Music Search list.
 - Repeat Artist:** Repeats all tracks in the current artist.
 - Repeat Album:** Repeats all tracks in the current album.
 - Repeat Track:** Repeats the current track.
 - Random in Artist:** Plays all tracks in the current artist in random order.
 - Random in Album:** Plays all tracks in the current album in random order.
 - Random All Tracks:** Plays all tracks in random order.

- **Edit/Delete:** Change the playlist name, album name, genre, and track order of the current playlist. You can also delete tracks, playlists, and albums.

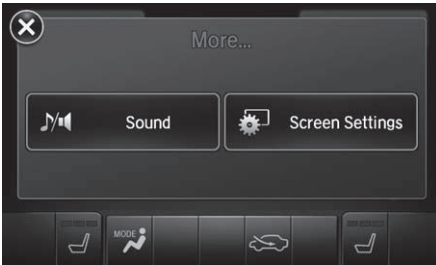On Demand Multi-Use Display™

1. Select **More**.
2. Select a setting item.

The following items are available:


- **Sound:** Displays the sound preferences screen.
 - **Adjusting the Sound** P. 193
- **Screen Settings:** Displays the screen preferences screen.
 - **Changing the Screen Settings** P. 89



■ How to Select a Track from the Music Search List

 **MENU** button (in HDD mode) ▶ **Music Search**

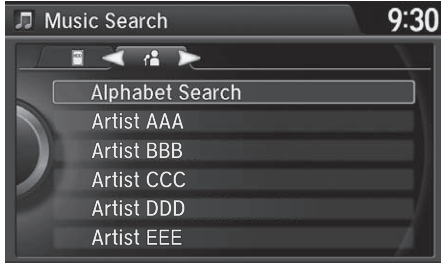


1. Move  or  to select a search category. Press .




 




2. Rotate  to select a track from the Music Search list. Press .

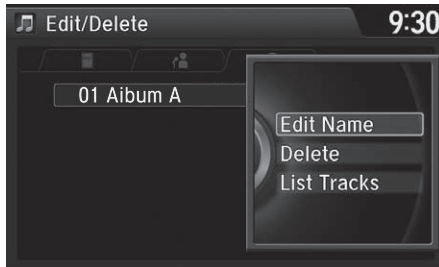■ Editing an Album or Playlist

 **MENU** button (in HDD mode) ▶ **Edit/Delete**



1. Rotate  to select **Albums or Playlist**. Press .
2. Rotate  to select an album or playlist that you want edit or delete. Press .
 - ▶ The pop-up menu appears on the screen.
3. Rotate  to select an item. Press .

The following items are available:

- **Edit Name:** Enter a new name using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes the selected album or playlist.
- **List Tracks:** Change the track title, artist name, genre, and composer. You can also delete tracks.

▣ Editing an Album or Playlist

The maximum number of original playlists is 50 with a maximum of 99 songs in each playlist.

Each album CD counts as an original playlist. Adding a track from a user playlist into the same user playlist will cause the track to appear twice in the playlist.

Deleting an album (original playlist) also deletes the album tracks you have stored in any user playlists.

Deleting a user playlist or deleting all tracks from a user playlist does not remove the playlist folder. The folder retains the playlist name and artist information.

■ Creating a New Playlist

🔑 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Playlists** ▶ **Create New Playlist**




1. Enter the playlist name using the interface dial or the On Demand Multi-Use Display™.
2. Select tracks from the music search list.

■ Editing Track Information

🔑 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Tracks**

Change the track title, artist name, genre, and composer. You can also delete tracks.

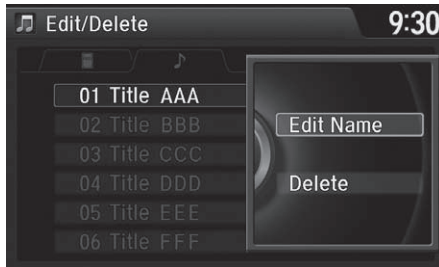

Rotate  select a track you want to edit or delete. Press .

▶ The pop-up menu appears on the screen.



The following items are available:







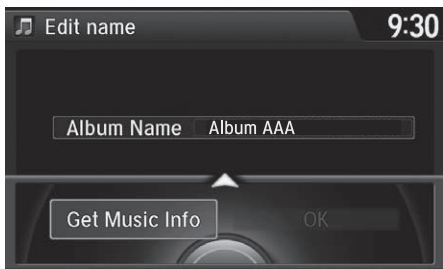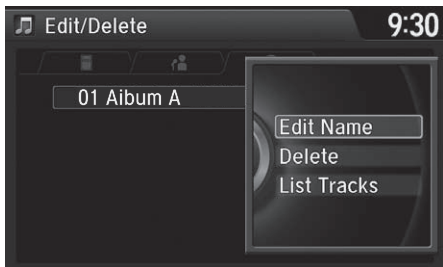

- **Edit Name:** Enter the track information (track name, track artist, etc.) using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes a track.

■ Displaying Music Information


 **MENU** button (in HDD mode) ▶ **Edit/Delete**

Music information (album name, artist name, genre) can be acquired by accessing the Gracenote® Album Info.









1. Rotate  to select **Albums**.
Press .
2. Rotate  to select an album that you want edit or delete. Press .
▶ The pop-up menu appears on the screen.
3. Rotate  to select **Edit Name**.
Press .
4. Move  to select **Get Music Info**.
Press .
▶ The system starts to access the Gracenote® Album Info.

■ Updating Gracenote® Album Info

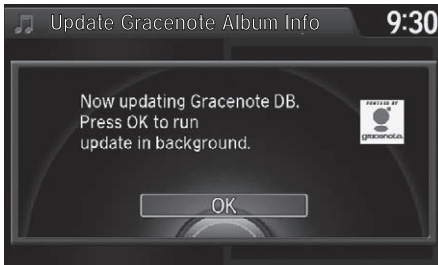 **SETTINGS** button (in HDD mode) ▶ **Audio Settings** ▶ **CD/HDD**

Update the Gracenote® Album Info (Gracenote® Media Database) that is included with the navigation system.



1. Insert the update disc into the disc slot or connect the USB flash drive that includes the update.
2. Rotate  to select **Update Gracenote Album Info**. Press .
3. Rotate  to select **Update by CD** or **Update by USB**. Press .
 - ▶ The system starts updating and the confirmation message appears on the screen. Press  to finish.

▣ Updating Gracenote® Album Info

To acquire updated files:

- Consult a dealer.
- Visit <http://www.navteq.com/gracenote/acura>.

Once you perform an update, any information you edited before will be overwritten or erased.

■ Deleting All HDD Data


🔑 **SETTINGS** button ▶ **Audio Settings** ▶ **CD/HDD** ▶ **Delete All HDD Data**

Delete all music data on the HDD.

Rotate 🔄 to select **Yes**. Press 🏠.



Connecting an iPod

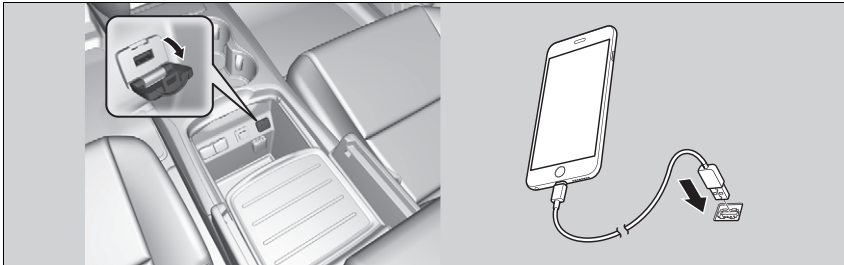

1. Open the USB cover.
2. Install the iPod USB connector to the USB port.

Model Compatibility

Model
iPod (5th generation)
iPod classic 80GB/160GB (launch in 2007)
iPod classic 120GB (launch in 2008)
iPod classic 160GB (launch in 2009)
iPod nano (1st to 7th generation) released between 2005 and 2012
iPod touch (1st to 6th generation) released between 2007 and 2015
iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4s/iPhone 5/iPhone 5s/iPhone 5c/iPhone 6/iPhone 6 Plus/iPhone 6s/iPhone 6s Plus

Connecting an iPod

- Do not connect your iPod using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

Your audio system may not work with all software versions of these devices.

If the audio system does not recognize your iPod, try reconnecting it a few times or reboot the device.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Selecting iPod Mode

Interface Dial

1. Connect the iPod to the USB port in the console compartment.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate , select **Change Source**. Press .
4. Rotate , select **iPod**. Press .

On Demand Multi-Use Display™

1. Connect the iPod to the USB port in the console compartment.
2. Select **Source**.
3. Select the iPod icon.

▶▶ Selecting iPod Mode

You can control an iPod using voice commands.

- ▶ **iPod Commands** P. 417
- ▶ **Song By Voice™ (SBV)** P. 246


Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

- ▶ **iPod/USB Flash Drive** P. 394



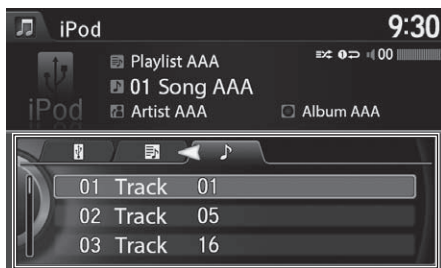



Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



Track list

 
Interface Dial

1. Rotate  or press  to display the song list.
2. Rotate  or move  or  to select a song from the list. Press .
 - ▶ Press the **MENU** button to display the menu items.
 - ▶ **Audio Menu** P. 243

Audio Screen Control

Some functions may not be available depending on your phone's model or software version.

On Demand Multi-Use Display™

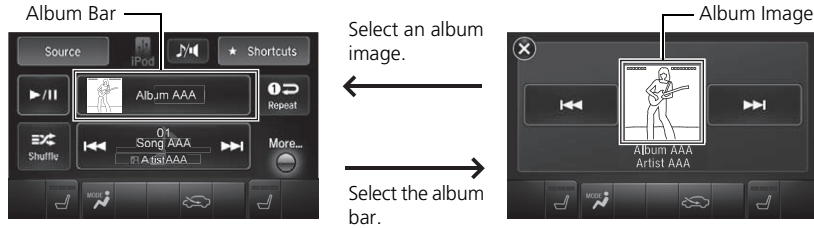


The following items are available:



- **▶/||** (play/pause): Plays or pauses a song file.
- **◀▶**: Select the previous or next track. Select and hold to move rapidly within a track.
- **Album bar**: Select to display the album search screen. Select **◀▶** or **▶▶** to search for an album.
- **Repeat**: Repeats the current track.
- **Shuffle**:
 - Shuffle Albums**: Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
 - Shuffle All Songs**: Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
- **More**: Select to display the menu item.
 - ▶ **Audio Menu** P. 243

Audio Menu

 **MENU** button (in iPod mode)

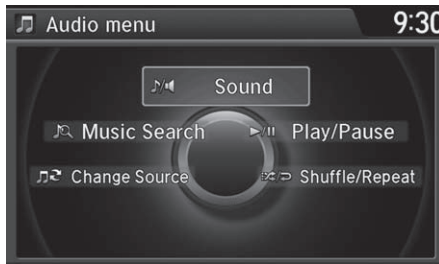Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Music Search:** Selects a song from the Music Search list.
 - ▶ **How to Select a Song from the Music Search List** P. 245
- **Change Source:** Changes the audio source mode.
- **Play/Pause:** Pauses or plays a song file.
- **Shuffle/Repeat:**
 - Repeat Song:** Repeats the current track.
 - Shuffle Albums:** Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
 - Shuffle All Songs:** Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

On Demand Multi-Use Display™

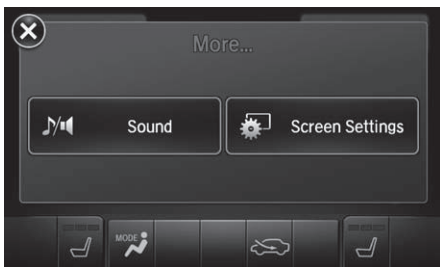


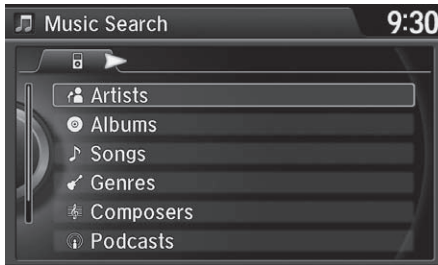
1. Select **More**.
2. Select a setting item.

The following items are available:


- **Sound**: Displays the sound preferences screen.
 - ▶ **Adjusting the Sound** P. 193
- **Screen Settings**: Displays the screen preferences screen.
 - ▶ **Changing the Screen Settings** P. 89



■ How to Select a Song from the Music Search List

 **MENU** button (in iPod mode) ▶ **Music Search**

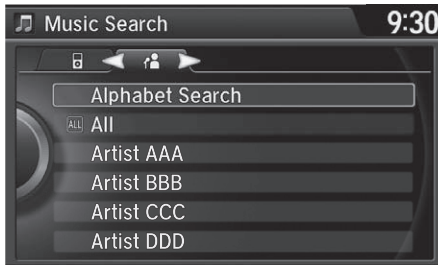

1. Rotate  to select a search category. Press .



2. Rotate  to select a file from the Music Search list. Press .


Song By Voice™ (SBV)

Use SBV to search for and play music from your HDD or iPod using voice commands.

■ Settings Song By Voice™ (SBV)

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Song By Voice**




 

Rotate  to select **On** or **Off**. Press .

The following items are available:

- **On** (factory default): Song By Voice™ commands are available.
- **Off**: Disable the feature.

Searching for Music Using Song By Voice™ (SBV)

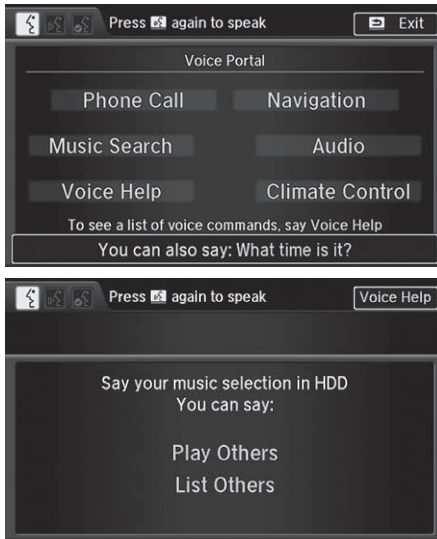

1. Set the **Song By Voice** setting to **On**.
2. Press the  (Talk) button and say "*Music Search*" to activate the SBV feature for the HDD and iPod.
3. Say a command.
 - ▶ Example 1: Say "*(List) 'Artist A'*" to view a list of songs by that artist. Select the desired song to start playing.
 - ▶ Example 2: Say "*Play 'Artist A'*" to start playing songs by that artist.
4. To cancel SBV, press the  (Hang-Up/Back) button on the steering wheel. The selected song continues playing.

Searching for Music Using Song By Voice™ (SBV)

Song By Voice™ Commands List

▶ **Song By Voice Commands** P. 417


NOTE:

Song By Voice™ commands are available for tracks stored on the HDD or iPod.

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

▶ **Phonetic Modification** P. 248

SBV may not be able to recognize languages other than English for the artist name, song title, album title, and composers.




Once you have canceled this mode, you need to press the  (Talk) button and say "*Music Search*" again to re-activate this mode.

■ Phonetic Modification



 **SETTINGS** button ▶ **System Settings** ▶ **Song By Voice Phonetic Modification**

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the HDD or iPod.



1. Move  and rotate  to select **New Modification**. Press .





2. Rotate  to select **HDD** or **iPod**. Press .


▶▶ Phonetic Modification







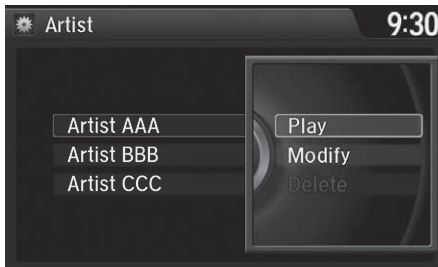

Phonetic Modification is grayed out when **Song By Voice** is set to **Off**.

You can store up to 2,000 phonetic modification items.





3. Rotate  to select the item to modify (e.g., **Artist**). Press .
 - ▶ The list of the selected item appears on the screen.







4. Rotate  to select an entry (e.g., **No Name**). Press .
 - ▶ The pop-up menu appears on the screen.
5. Rotate  to select **Modify**. Press .
 - ▶ To listen to the current phonetic modification, rotate  to select **Play**. Press .
 - ▶ To delete the current phonetic modification, rotate  to select **Delete**. Press .



6. Enter the phonetic spelling you wish to use (e.g., "Artist A") when prompted.
7. Rotate  to select **OK** to exit. The artist "No Name" is phonetically modified to "Artist A." When in the SBV mode, you can press the  (Talk) button and use the voice command "Play 'Artist A'" to play songs by the artist "No Name."

Selecting Internet Radio Mode

Interface Dial

1. Connect a compatible phone through *Bluetooth*®.
2. Press the **MENU** button. (in **AUDIO** mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **Pandora*** or **Aha**. Press .

On Demand Multi-Use Display™

1. Connect a compatible phone through *Bluetooth*®.
2. Select **Source**.
3. Select the Pandora* or Aha icon.

iPhone

You can also connect the phone using your USB connector to the USB port.

☒ Selecting Internet Radio Mode

To find out if your phone is compatible with this feature, call 1-888-528-7876 or visit acura.com/handsfreelink (U.S.) or handsfreelink.ca (Canada).

U.S. models

Pandora® Menu *



Interface Dial

Rotate  to select an item. Press



▶ Press the **MENU** button to display the menu items.

The following items are available:

- **Create Station:** Create a new station from genre, current track, or artist.
- **Skip Forward:** Skip the current song.
- **Play/Pause:** Pauses or plays a song.
- **Station List:** Displays the list of all your stored stations. Select a station from the list to play.
- **Like:** Likes the current song. Pandora® will play songs similar to the one liked.
- **Dislike:** Dislikes the current song and skips to the next song. Pandora® will avoid playing songs similar to the one disliked.
- **Bookmark Track:** Bookmarks the current song.
- **Bookmark Artist:** Bookmarks the current artist.

▶▶ Pandora® Menu *

Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.

Pandora® is a personalized Internet radio service that selects music based on an artist, song, or genre a user enters, and streams what is likely to be of interest.

You can control Pandora® using voice commands.

▶▶ **Pandora Commands*** P. 417

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

▶▶ **Pandora®*** P. 395

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit www.pandora.com for more information.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio.

Make sure Pandora® mode on your audio system is selected.




On Demand Multi-Use Display™

1. Select ◀ or ▶ to change a station.
2. Select ▶▶ to skip a song.
 - ▶ Select ▶/|| to pause or play a song.
 - ▶ Select 👍 or 👎 to evaluate a song.
 - ▶ Select **More** to display the menu item.
 - ▶ **Adjusting the Sound** P. 193
 - ▶ **Changing the Screen Settings** P. 89



▶▶ Pandora® Menu*

There are restrictions on the number of songs you can skip or dislike in a given hour.

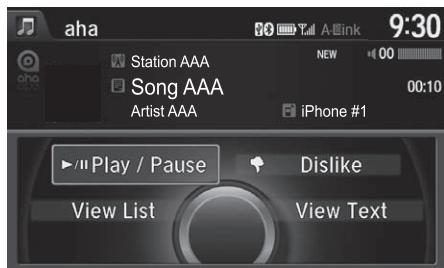Aha™ Radio Menu




Interface Dial

Rotate  to select an item. Press .

▶ Press the **MENU** button to display the menu items.

On Demand Multi-Use Display™

Select  or  to skip contents.

- Select  to pause or play a song.
- Select an icon to evaluate a song.
- Select **More** to display the menu item.

▶ **Adjusting the Sound** P. 193

▶ **Changing the Screen Settings**

P. 89

▶ Aha™ Radio Menu

Aha™ by Harman is a cloud-based service that organizes your favorite web content into live radio stations. You can access podcasts, internet radio, location-based services, and audio updates from social media sites.

You can control Aha™ Radio using voice commands.

▶ **Aha Commands** P. 417

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

▶ **Aha™ Radio** P. 398


The menu items vary depending on the station you selected.


To use this service in your vehicle, the AcuraLink® app must be installed on your phone. Visit owners.acura.com/apps (U.S.) or www.myacura.ca/apps (Canada).



You must have a previously set up Aha™ account prior to using the service in your vehicle. Visit www.aharadio.com for more information.

On Canadian models, Aha™ is referred to as Streams. Visit acura.ca/owners/acuralink/streams for more information.

■ How to Select a Station from the Station List

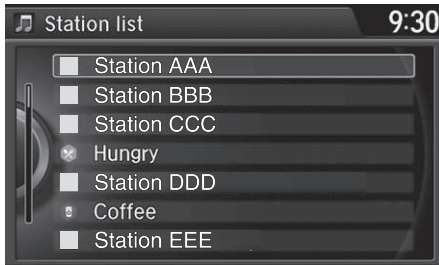 **MENU** button (in Aha™ mode) ▶ **Station List**



Rotate  to select a station from the Station list. Press .

■ Connecting a USB Flash Drive



1. Open the USB cover.
2. Install the USB flash drive to the USB port.

■ USB Flash Drives

A USB flash drive of 256 MB or higher is recommended.
Some digital audio players may not be compatible.
Some USB flash drives (e.g., a device with security lockout) may not work.
Some software files may not allow for audio play or text data display.
Some versions of MP3, WMA, or AAC formats may be unsupported.

☒ Connecting a USB Flash Drive

- We recommend connecting the USB flash drive with the USB adapter cable.
- Do not connect your USB flash drive using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.





☒ USB Flash Drives

Digital music tracks, such as MP3, WMA, AAC, etc., in USB flash drives cannot be copied to HDD. Likewise, digital music tracks recorded to HDD cannot be copied to USB flash drives.

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

Selecting USB Mode

Interface Dial

1. Connect the USB flash drive to the USB port in the console compartment.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **USB**. Press .

On Demand Multi-Use Display™

1. Connect the USB flash drive to the USB port in the console compartment.
2. Select **Source**.
3. Select the USB icon.

▶▶ Selecting USB Mode

You can control a USB flash drive using voice commands.

▶ **USB Commands** P. 417

Files in WMA/ACC format protected by digital rights management (DRM) cannot be played.


The audio system displays **Unplayable File**, and then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

▶ **iPod/USB Flash Drive** P. 394

Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

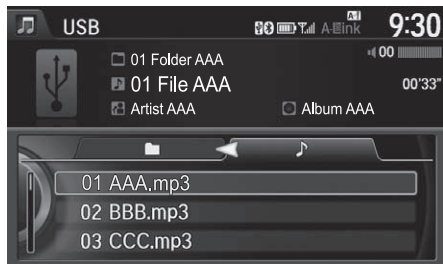

Interface Dial

1. Rotate or press to display the song list.
2. Rotate or move or to select a song from the list. Press .

▶ Press the **MENU** button to display the menu items.

➔ **Audio Menu P. 259**

On Demand Multi-Use Display™

1. Select to skip to the next folder, and to skip to the beginning of the previous folder.
2. Select or to change files. Select and hold to move rapidly within a file.

▶ Select **More** to display the menu item.

➔ **Audio Menu P. 259**

▶▶ Audio Screen Control


On Demand Multi-Use Display™



- **Random:**
Random in Folder: Plays all files in the current folder in random order.
Random All Tracks: Plays all files in random order.
- **Repeat:**
Repeat Folder: Repeats all files in the current folder.
Repeat Track: Repeats the current file.
- **Scan:**
Folders: Provides 10-second sampling of the first file in each of the main folders.
Tracks: Provides 10-second sampling of all files in the current folder.

Audio Menu

 **MENU** button (in USB mode)

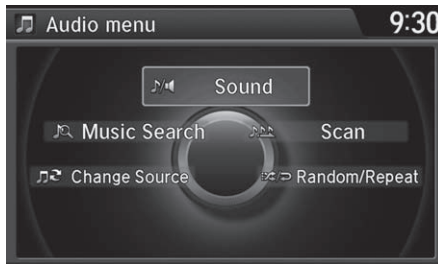Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Music Search:** Selects a file from the Music Search list.
 - ▶ **How to Select a File from the Music Search List** P. 261
- **Change Source:** Changes the audio source mode.
- **Scan:**
 - Scan Folders:** Provides 10-second sampling of the first file in each of the main folders.
 - Scan Tracks:** Provides 10-second sampling of all files in the current folder.
- **Random/Repeat:**
 - Repeat Folder:** Repeats all files in the current folder.
 - Repeat Track:** Repeats the current file.
 - Random in Folder:** Plays all files in the current folder in random order.
 - Random All Tracks:** Plays all files in random order.

On Demand Multi-Use Display™

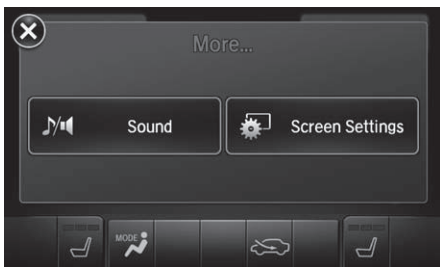


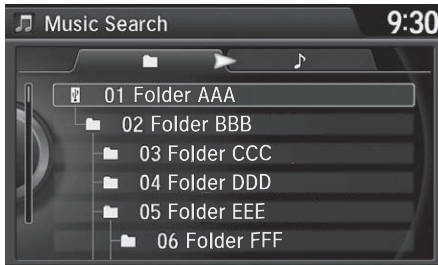
1. Select **More**.
2. Select a setting item.

The following items are available:


- **Sound**: Displays the sound preferences screen.
 - ▶ **Adjusting the Sound** P. 193
- **Screen Settings**: Displays the screen preferences screen.
 - ▶ **Changing the Screen Settings** P. 89



■ How to Select a File from the Music Search List

 **MENU** button (in USB mode) ▶ **Music Search**

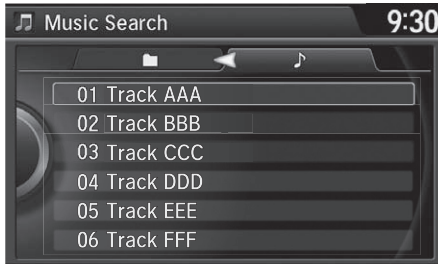

1. Move  or  to select a search category. Press .



2. Rotate  to select a file from the Music Search list. Press .

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system.

➤ ***Bluetooth*[®] HandsFreeLink[®]** P. 266



Selecting *Bluetooth*[®] Audio Mode

Interface Dial

1. Make sure that your phone is on, paired, and linked to HFL.

➤ **Pairing a Phone** P. 269

2. Press the **MENU** button. (in AUDIO mode)

3. Rotate  to select **Change Source**. Press .

4. Rotate  to select **Bluetooth Audio**. Press .

On Demand Multi-Use Display™

1. Make sure that your phone is on, paired, and linked to HFL.

➤ **Pairing a Phone** P. 269

2. Select **Source**.

3. Select the *Bluetooth* icon.

▶▶ Playing *Bluetooth*[®] Audio

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system.

For a list of compatible phones, call 1-888-528-7876 or visit www.acura.com/handsfreelink (U.S.) or www.handsfreelink.ca (Canada).

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

If more than one phone is paired to the HFL system, there will be a delay before the system begins to play.

You can control *Bluetooth*[®] Audio using voice commands.



➤ ***Bluetooth*[®] Audio Commands** P. 417

Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



Interface Dial

1. Press the **MENU** button. (in BT mode).
2. Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 - ▶ **Adjusting the Sound** P. 193
- **Music Search:** Selects a song from the Music Search list.
- **Change Source:** Changes the audio source mode.
- **Play:** Plays a song.
- **Pause:** Pauses a song.

▶▶ Audio Screen Control

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

The pause function and Music Search may not be available on some phones.

Switching to another mode pauses the music playing from your phone. This function may not be available on some phones.



On Demand Multi-Use Display™

1. Select ◀ or ▶ to change folders.
2. Select ◀◀ or ▶▶ to change files.
 - ▶ Select **More** to display the menu items, then select a setting item.
 - ▶ Select ▶ or || to play or pause a song file.

The following items are available:

- **Sound:** Displays the sound preferences screen.
 - ▶ **Adjusting the Sound** P. 193
- **Screen Settings:** Displays the screen preferences screen.
 - ▶ **Changing the Screen Settings** P. 89


Bluetooth® HandsFreeLink®

This section describes how to operate *Bluetooth*® HandsFreeLink®. You can place and receive phone calls using your vehicle's audio system without handling your cell phone.

Bluetooth® HandsFreeLink®	266	Text/E-mail Message	300
Using HFL	266	Setting a Text/E-mail Message	300
Pairing a Phone	269	Selecting a Mail Account	301
Importing Phonebook Data	275	Receiving a Text/E-mail Message	302
Setting Up Speed Dialing	276	Displaying Messages	303
Phonebook Phonetic Modification	282	Roadside Assistance	307
Phone Settings	287	HFL Menus	308
Making a Call	292		
Receiving a Call	298		
Options During a Call	299		

Using HFL

HFL Buttons

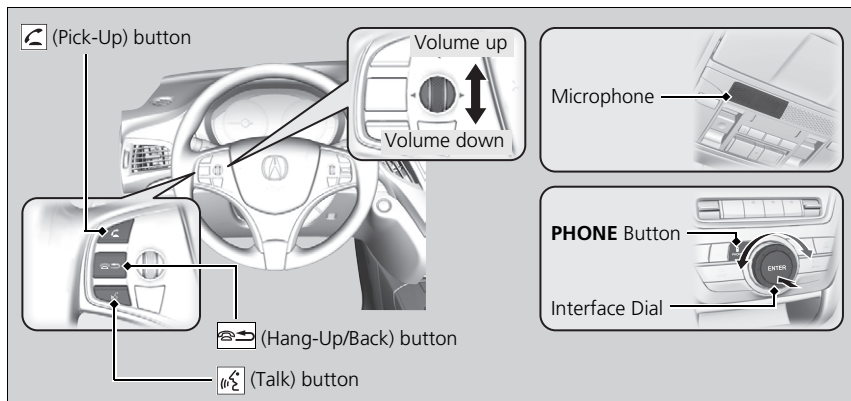

(Pick-Up) button: Press to go to the **Speed Dial/Call History** on the multi-information display or to answer an incoming call.

(Hang-Up/Back) button: Press to end a call, or to cancel a command.

(Talk) button: Press to give HFL voice commands.

PHONE button: Press to go directly to the Phone screen.

Interface dial: Rotate to select an item on the screen, then press . Move , , or to select secondary menu.

Bluetooth® HandsFreeLink®

To use HFL, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities: Call 1-888-528-7876 or visit www.acura.com/handsfreelink (U.S.) or www.handsfreelink.ca (Canada).

Voice control tips:

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the (Talk) button when you want to call a number using a stored voice tag, a phonebook name, or a number. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls on the steering wheel.


State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

If you receive a call while using the audio system, the system resumes its operation after ending the call.

If you press (Talk) button, the climate control fan speed is reduced automatically. When voice recognition ends, the fan speed returns to the previous level.

HFL Status Display

The audio/information screen notifies you when you have an incoming call.

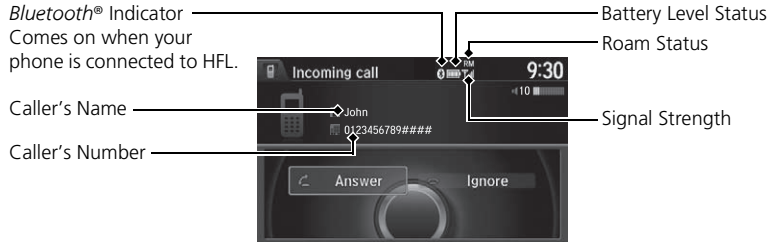

Bluetooth® HandsFreeLink®

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

Bluetooth® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's navigation system, without handling your mobile phone.

■ Limitations for Manual Operation



Certain manual functions are disabled or inoperable while the vehicle is in motion.

U.S. models

You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

➤ **Setting Up Speed Dialing** P. 276

➤ HFL Status Display

The information that appears on the audio/information screen varies between phone models.


You can change the system language to English, French, or Spanish.

➤ **Language Settings** P. 36

Pairing a Phone

PHONE button

When no *Bluetooth*-compatible phone is paired, the following screen appears:

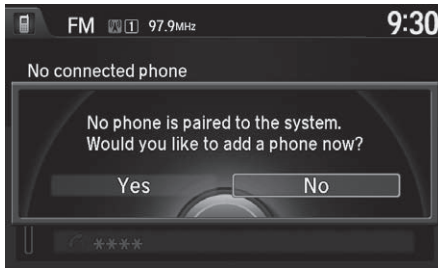

1. Rotate to select **Yes**. Press .
2. Make sure your phone is in search or discoverable mode. Press .
 - ▶ HFL automatically searches for a *Bluetooth*® device.



3. When your phone appears on the list, select it by pressing .
 - ▶ If your phone does not appear, you can select **Refresh** to search again.
 - ▶ If your phone still does not appear, move to select **Device Not Found?** and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.

Pairing a Phone

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is connected to HFL.
- If your phone is not ready for pairing or is not found by the system within three minutes, the system will time out and return to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

- : The phone can be used with HFL.
- : The phone is compatible with *Bluetooth*® Audio.



4. HFL gives you a pairing code on the audio/information screen.
 - ▶ Confirm if the pairing code on the screen and your phone match. This may vary by phone.
5. You will receive a notification on the screen if pairing is successful.

▶▶ Pairing a Phone

When pairing is completed, an **Automatic Phone Sync** prompt appears. Select **On** if you want your call history and phonebook automatically imported to HFL.

▶ **Automatic Phone Sync Setting** P. 291

Some phones may have an additional setting to allow the phone to auto connect each time you turn on your vehicle.



■ Pairing from Phone Setup

🔗 **SETTINGS** button ▶ **Phone Settings** ▶ **Connect Phone**



1. Rotate  to select **Add Bluetooth Device**.
2. Make sure your phone is in search or discoverable mode. Press .
 - ▶ HFL automatically searches for a *Bluetooth®* device.



3. When your phone appears on the list, select it by pressing .
 - ▶ If your phone does not appear, you can select **Refresh** to search again.
 - ▶ If your phone still does not appear, move  to select **Device Not Found?** and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.
4. HFL gives you a pairing code on the audio/information screen.
 - ▶ Confirm if the pairing code on the screen and your phone match. This may vary by phone.
5. You will receive a notification on the screen if pairing is successful.

■ Changing the Pairing Code

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Edit Pairing Code**



Rotate  to select **Fixed** or **Random**. Press .

▣ Changing the Pairing Code

The pairing code may be six or four digits depending on your phone.

The default pairing code is **0000** until you change the setting.

To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

■ Changing the Currently Paired Phone

🔗 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**



1. Rotate 📶 to select a paired phone you want to replace. Press 📶.
2. Rotate 📶 to select **Replace This Device**. Press 📶.
3. HFL enters the pairing process and searches a new phone.
 - ▶ Follow the prompts to pair a new phone.
4. You will receive a notification on the screen if pairing is successful.







☒ Changing the Currently Paired Phone

The replaced phone will keep the same speed dial entries, and security PIN information from the previously paired phone.

■ Deleting a Paired Phone

📌 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**



1. Rotate  to select a paired phone you want to replace. Press .
2. Rotate  to select **Delete This Device**. Press .
3. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .
4. You will receive a notification on the screen if deletion is successful.


Importing Phonebook Data



When your phone is paired, the contents of its phonebook and call history are automatically imported to HFL.

Importing Phonebook Data


When you select a person from the list in the mobile phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

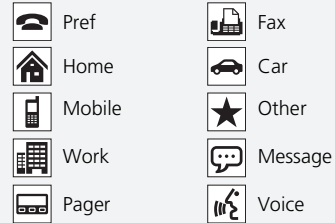


On some phones, it may not be possible to import the category icons to HFL.



The phonebook is updated after every connection. Call history is updated after every connection or call.

Setting Up Speed Dialing

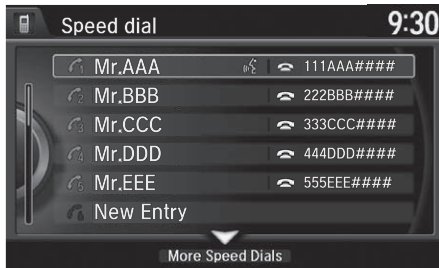

 **MENU** button (on Phone screen) ▶ **Speed Dial**

Up to 20 speed dial numbers can be stored per phone.



1. Rotate  to select **New Entry**. Press .




2. Rotate  to select a number entry method. Press .

The following options are available:

- **Import from Call History:** Select a number from the call history.
- **Manual Input:** Input the number manually.
- **Import from Phonebook:** Select a number from the linked mobile phone's imported phonebook.

▶▶ Setting Up Speed Dialing









When a voice tag is stored, press the  (Talk) button to call the number using the voice tag. Say "Call" and the voice tag name.

Voice tags allow you to call speed dial entries from the **Voice Portal** screen or **Phone call** screen by saying the voice tag name.

■ Registering a Voice Tag to a Speed Dial Entry

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Edit Speed Dial**



1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select **Voice Tag**. Press .
4. From the pop-up menu, rotate  to select **Record**. Press .
5. Press .
 - ▶ Using the  (Talk) button, follow the prompt to enter a voice tag.

☒ Registering a Voice Tag to a Speed Dial Entry









Avoid using duplicate voice tags.

Avoid using "home" as a voice tag.


It is easier for HFL to recognize a longer name. For example, use "John Smith" instead of "John."





■ To delete a voice tag

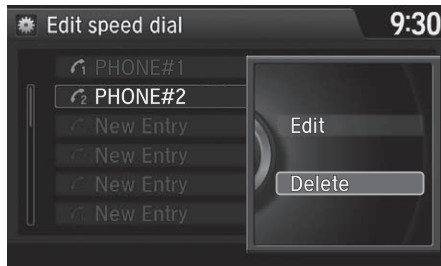

1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select **Voice Tag**. Press .
4. From the pop-up menu, rotate  to select **Clear**. Press .
5. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .

■ To delete a speed dial




1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Delete**. Press .
3. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .

Setting Phone Shortcuts

You can preset five previously stored speed dial entries, and make a call from one of the preset numbers, or call history when the phone is paired and connected to the vehicle's Bluetooth® HandsFreeLink® (HFL) system.

➤ **Setting Up Speed Dialing** P. 276

■ To preset a speed dial

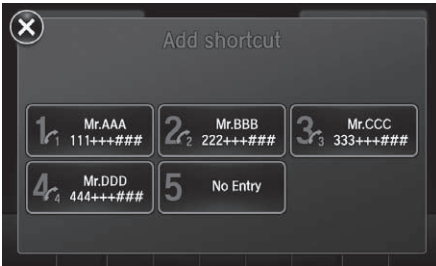

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select **Edit** or **No Entry**.
 - ▶ If you select **No Entry**, go to step 6.


5. Select **Add** and select a preset number you want to store as a shortcut.
 - ▶ Five presets appear. Select a **No Entry** preset or an existing preset.
 - ▶ The screen changes to a list of previously stored speed dial entries.


Setting Phone Shortcuts

Dial icon

You can make a call using the keyboard on the On Demand Multi-Use Display™ to input numbers.

➤ **Entering a Phone Number** P. 294

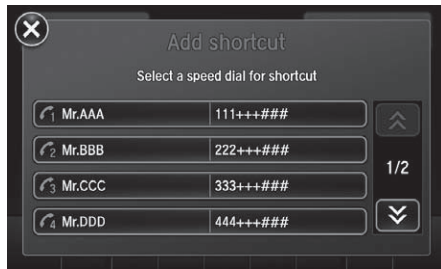


6. Select a phone number you want to store as a shortcut. Select **OK** and press .

■ To make a call from a speed dial entry




1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select a preset number.
 - ▶ Dialing starts automatically.

■ To delete a speed dial

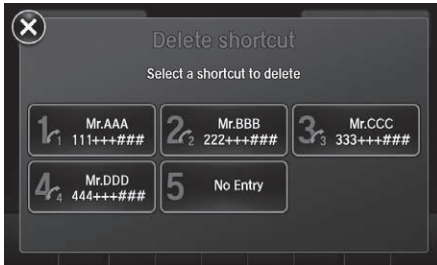

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select **Edit**.
5. Select **Delete**.
6. Select the preset number with the phone number you want to delete.

■ To make a call from call history

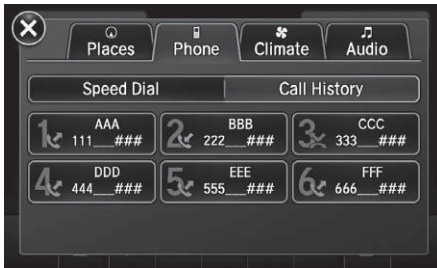

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Call History**.
4. Select a phone number.
 - ▶ Dialing starts automatically.

▣ To make a call from call history


The call history displays the last six dialed, received, or missed calls.

Phonebook Phonetic Modification


📞 **SETTINGS** button ▶ **System Settings** ▶ **Phonebook Phonetic Modification**

Add phonetic modifications or a new voice tag to the phone's contact name so that it is easier for HFL to recognize voice commands.

■ To add a new voice tag

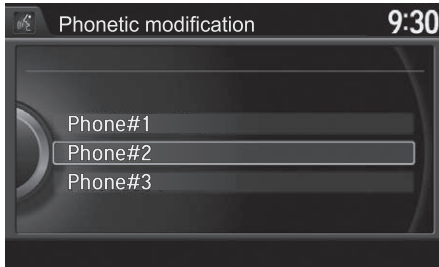



1. Rotate 📶 to select the phone you want to add phonetic modification to. Press 📞.

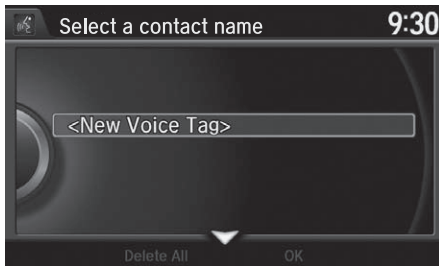







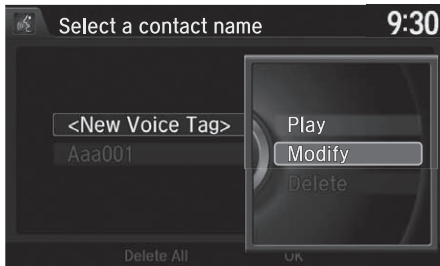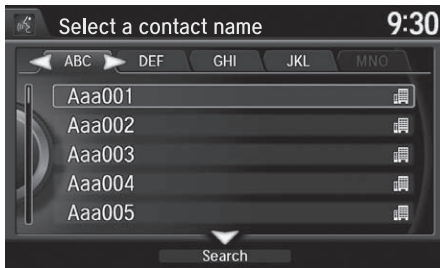



2. Rotate 📶 to select New Voice Tag. Press 📞.



☑ Phonebook Phonetic Modification







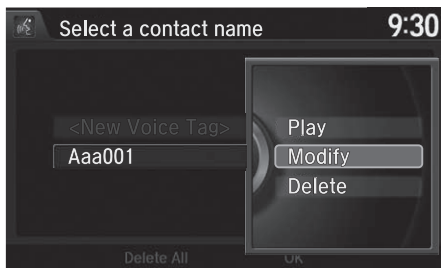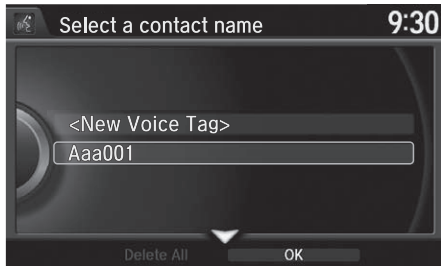


You can store up to 20 phonetic modification items.



3. Move ◀○ or ○▶ and Rotate  to select a contact name. Press .
 - ▶ The pop-up menu appears on the screen.
4. Rotate  to select **Modify**. Press .
5. Using the  (Talk) button, follow the prompts to complete the voice tag.
6. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .
7. The screen returns to the New Voice Tag screen. Move  and rotate  to select **OK**. Press .

■ To modify a voice tag




1. Rotate  to select the phone you want to add phonetic modification to. Press .
2. Rotate  to select a contact name you want to modify. Press .
 - ▶ The pop-up menu appears on the screen.
3. Rotate  to select **Modify**. Press .
4. Using the  (Talk) button, follow the prompts to complete the voice tag.
5. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .

▶▶ Phonebook Phonetic Modification

You can only modify or delete contact names for the currently connected phone.


■ To delete a modified voice tag

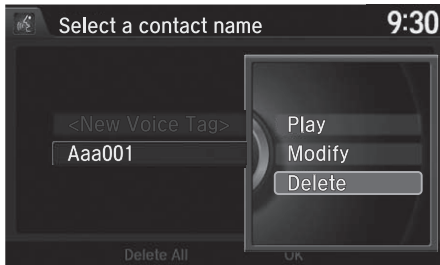




Trash icon



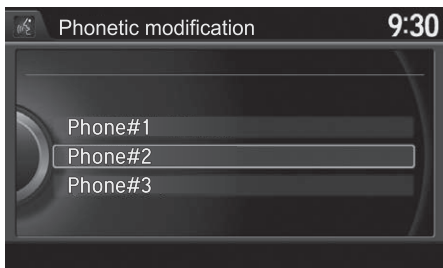


1. Rotate to select the phone for which you want to delete phonetic modification. Press .
2. Rotate to select a contact name you want to delete. Press .
 - ▶ The pop-up menu appears on the screen.
3. Rotate to select **Delete**, then press .
 - ▶ Items to be deleted are indicated with a trash icon.
4. Move and Rotate to select **OK**. Press .

■ To delete all modified voice tags

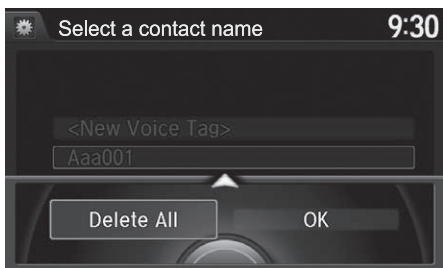

1. Rotate  to select the phone you want to delete phonetic modification. Press .
▶ The contact name list appears.



2. Move  and Rotate  to select **Delete All**. Press .
3. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .


Phone Settings

Set HFL options and features.

■ Editing a Security PIN

🔑 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**

You can protect each of the six mobile phones with a security PIN.

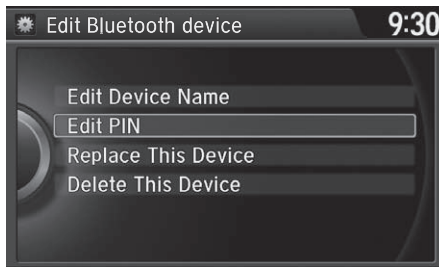

1. Rotate to select the phone you want to add a security PIN to. Press .
2. Rotate to select **Edit PIN**. Press .
3. Enter a new four-digit number. Rotate to select **OK** to enter the security PIN.
 - ▶ Move to delete.
4. Re-enter the four-digit number.
 - ▶ The screen returns to the screen in step 4.

▶▶ Editing a Security PIN

If the phone is already security PIN protected, you need to enter the current security PIN before clearing the PIN or creating a new one.

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then **OK**.




Continued

■ Editing User Name

📍 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**

Edit the user name of a paired phone as follows:

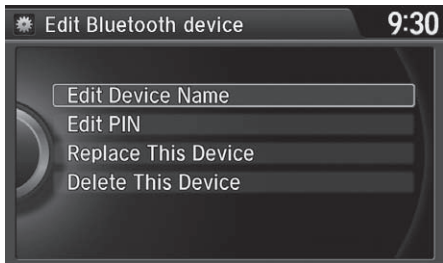

1. Rotate 📶 to select a phone you want to edit. Press 📶.
2. Rotate 📶 to select **Edit Device Name**. Press 📶.



3. Enter a new name of the phone.
 - ▶ Rotate 📶 or move 📍 to select **OK** to enter the name. Press 📶.
 - ▶ Move ◀ to delete.

▶▶ Editing User Name

You can use the keyboard on the On Demand Multi-Use Display™ to input letters and numbers.




Automatic Transferring

 **SETTINGS** button ▶ **Phone Settings** ▶ **Auto Transfer**

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFL.




Rotate  to select **On**. Press .

Auto Answer

 **SETTINGS** button ▶ **Phone Settings** ▶ **Auto Answer**

You can set HFL to automatically answer an incoming call in four seconds.



Rotate  to select **On**. Press .

■ Ring Tone

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Ring Tone**

You can change the ring tone setting.



Rotate 📞 to select your desired setting item. Press ⏏.

The following items are available:

- **Fixed:** The fixed ring tone sounds from the speaker.
- **Mobile Phone:** For certain connected phones, the ring tone stored in the phone sounds from the speakers.
- **Off:** No ring tones sound from the speaker.

Automatic Phone Sync Setting

SETTINGS button ▶ Phone Settings ▶ Automatic Phone Sync



Rotate  to select On or Off. Press .

Automatic Phone Sync Setting

Select **On** if you want your call history and phonebook automatically imported to HFL. If prompted by your phone, please accept the import request.

Not all phones require this additional step.

Use Contact Photo

SETTINGS button ▶ Phone Settings ▶ Use Contact Photo

You can display a caller's picture on an incoming call screen.




Rotate  to select On. Press .

Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.




▶▶ Making a Call


Any voice-tagged speed dial entry, phonebook name, or number can be dialed by voice from most screens. Press the  (Talk) button and say "Call" and the voice tag name, "Call by name" and the phonebook name, or "Call" and the phone number.


The maximum range between your phone and vehicles is 30 ft (10 m).

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.



Using the Phonebook

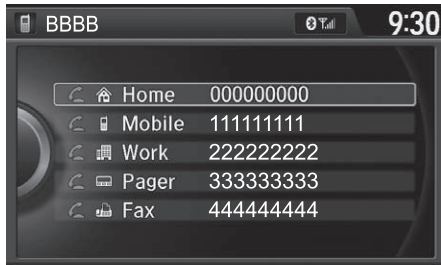 **MENU** button (on Phone screen) ▶ **Phonebook**



1. The phonebook is stored alphabetically. Move  to **Search**.

▶ You can use the keyboard on the touchscreen for an alphabetical search.

2. Rotate  to select a number. Press .

▶ Dialing starts automatically.

Using the Phonebook

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

- ▶ **Limitations for Manual Operation** P. 268
- ▶ **Setting Up Speed Dialing** P. 276






You can use the keyboard on the On Demand Multi-Use Display™ for an alphabetical search.



■ Entering a Phone Number

 **MENU** button (on Phone screen) ▶ **Dial**




1. Rotate  to select a number. Press .
2. Rotate  to select . Press .

▣ Entering a Phone Number

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

- ▶ **Limitations for Manual Operation** P. 268
- ▶ **Setting Up Speed Dialing** P. 276

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then  to start dialing.



■ Using Redial

📞 **MENU** button (on Phone screen) ▶ **Redial**

You can display a caller's picture on an incoming call screen.




Rotate 📞 to select **Dial**. Press 📞.
▶ Dialing starts automatically.

■ Using Call History

📞 **MENU** button (on Phone screen) ▶ **Call History**

Call history is stored by **All, Dialed, Received, and Missed.**

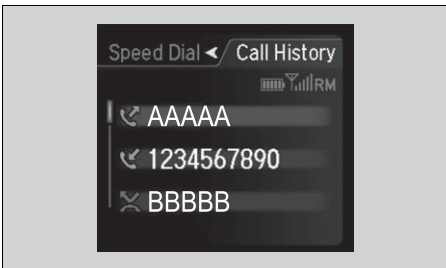

Audio/Information Screen

1. Move ◀ or ▶ to select **All, Dialed, Received, and Missed.**
2. Rotate 🔄 to select a number. Press 📞.
▶ Dialing starts automatically.

Multi-information Display

1. Press the 📞 button.
2. Move the left selector wheel right to select **Call History.**
3. Roll the left selector wheel to select a number.
4. Push the left selector wheel or the 📞 button.
▶ Dialing starts automatically.

▶▶ Using Call History

The call history displays the last 20 dialed, received, or missed calls.
(Appears only when a phone is connected to HFL.)


These icons next to the number indicate the following:


- 📞: Dialed calls
- 📞: Received calls
- 📞: Missed calls

Multi-information Display



The call history displays the last 12 dialed, received, or missed calls.

Using Speed Dial

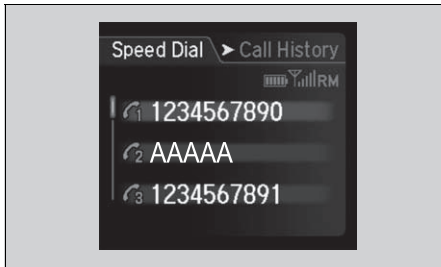 **MENU** button (on Phone screen) ▶ **Speed Dial**





Audio/Information Screen


Rotate  to select a number. Press .


▶ Dialing starts automatically.

Multi-information Display


1. Press the  button.
2. Move the left selector wheel left to select **Speed Dial**.
3. Roll the left selector wheel to select a number.
4. Push the left selector wheel or the  button.
▶ Dialing starts automatically.

Using Speed Dial

Move  to select **More Speed Dials** to view another paired phone's speed dial list. You can make a call from that list using the currently connected phone.

When a voice tag is stored, press the  (Talk) button to call the number using the voice tag.

▶ **Setting Up Speed Dialing** P. 276


Any voice-tagged speed dial entry, phonebook name or number can be dialed by voice from any screen. Press the  (Talk) button and follow the prompts.



Multi-information Display

The speed dial displays the 20 speed dial entries.

Receiving a Call

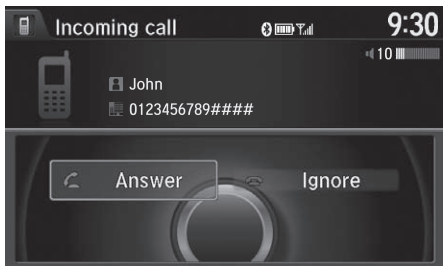
When there is an incoming call, an audible notification sounds (if activated) and the Incoming call screen appears.




1. Press the  (Pick-Up) button to answer the call.
2. Press the  (Hang-Up/Back) button to decline or end the call.


▶▶ Receiving a Call



Call Waiting

Press the  (Pick-Up) button to put the current call on hold to answer the incoming call.

Press the  (Pick-Up) button again to return to the current call.

Ignore the incoming call if you do not want to answer it.


Press the  (Hang-Up/Back) button if you want to hang up the current call.



You can select the icons on the On Demand Multi-Use Display™ instead of the  (Pick-Up) and  (Hang-Up/Back) buttons.



Options During a Call

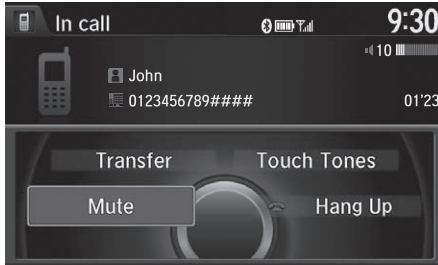The available options are shown on the Phone screen.



Rotate  to select the option. Press .

▶ The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.

The following options are available during a call:

- **Mute:** Mute your voice.
- **Transfer:** Transfer a call from HFL to your phone.
- **Touch Tones:** Send numbers during a call. This is useful when you call a menu-driven phone system.

Options During a Call

- **Touch Tones:** Available on some phones.


You can select the icons on the On Demand Multi-Use Display™.



Setting a Text/E-mail Message

To Turn On or Off the Text/E-mail Function

 **SETTINGS** button ► **Phone Settings** ► **Enable Text/Email**

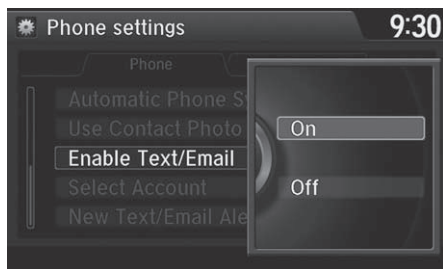


Rotate  to select **On** or **Off**. Press .

To Turn On or Off the Text/E-mail Notice

 **SETTINGS** button ► **Phone Settings** ► **New Text/Email Alert**



Rotate  to select **On** or **Off**. Press .

The following items are available:

- **On:** A pop-up notification comes on every time you receive a new text message.
- **Off:** The message you receive is stored in the system without notification.


Text/E-mail Message



Some text/e-mail features may not be available depending on a mobile phone.

Selecting a Mail Account

 **SETTINGS** button ▶ **Phone Settings** ▶ **Select Account**

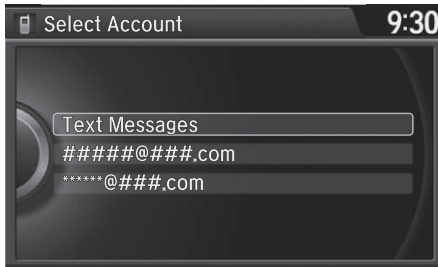
If a paired phone has text message or mail accounts, you can select one of them to be active and receive notifications.



Rotate  to **Text Messages** or an e-mail account you want. Press .

Selecting a Mail Account

You can also select a mail account from the folder list screen or the message list screen.

Move  to select **Select Account**, then press .






You can only receive notifications from one text message or mail account at a time.


Receiving a Text/E-mail Message

HFL can display newly received text and e-mail messages as well as 20 of the most recently received messages on a linked mobile phone. Each received message can be read aloud and replied to using a fixed common phrase.



1. A pop-up appears and notifies you of a new text or e-mail message.
2. Rotate  to select **Read** to listen to the message. Press .
 - ▶ The text or e-mail message is displayed. The system automatically starts reading out the message.

3. To discontinue the message read-out. Press .

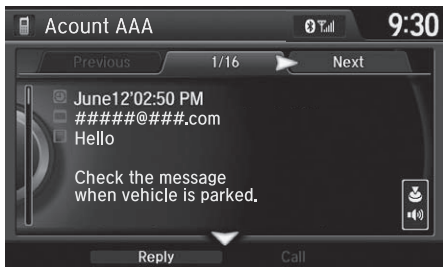


Receiving a Text/E-mail Message


The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text and e-mail messages.

State or local laws may limit your use of the HFL text/e-mail message feature. Only use the text/e-mail message feature when conditions allow you to do so safely.


When you receive a text or e-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Text/Email Alert** setting to On.

 **To Turn On or Off the Text/E-mail Notice**
P. 300

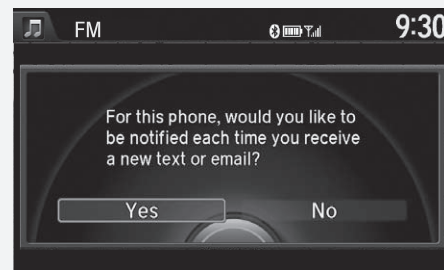




Displaying Messages

■ Displaying Text Messages

 **MENU** button (on Phone screen) ▶ **Text/Email**





1. Select account if necessary.
2. Rotate  to select a message. Press .
 - ▶ The text message is displayed. The system automatically starts reading the message aloud.

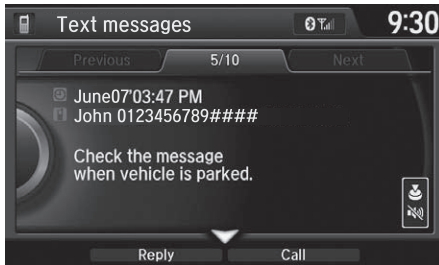

☒ Displaying Messages


The icon appears next to an unread message.

 If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.



To see the previous or next message, move  or  on the text message screen.


Some phones may have an additional setting to enable this feature.



■ Displaying E-mail Messages

 **MENU** button (on Phone screen) ▶ **Text/Email**

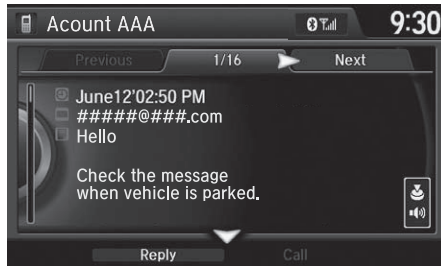

1. Rotate  to select a folder. Press .




2. Rotate  to select a message. Press .



- ▶ The text message is displayed.
- ▶ The system automatically starts reading the message aloud.

▣ Displaying E-mail Messages


Received text and e-mail messages may appear in the message list screen at the same time. In this case, text messages are titled **No subject**.

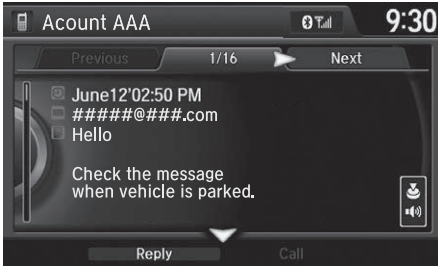


Read or Stop Reading a Message



1. Go to the text or e-mail message screen.
 - ▶ The system automatically starts reading the message aloud.
 - ▶ **Displaying Messages** P. 303
2. Press  to stop reading. Press  again to start reading the message from the beginning.

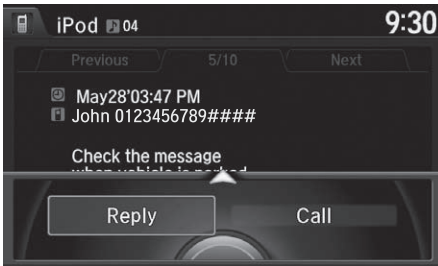

Reply to a Message



1. Go to the text or e-mail message screen.
 - ▶ The system automatically starts reading the message aloud.
 - ▶ **Displaying Messages** P. 303
2. Move  and Rotate  to select Reply. Press .

Bluetooth® HandsFreeLink®



3. Rotate  to select the reply message. Press .
 - ▶ The pop-up menu appears on the screen.
4. Select **Send** to send the message.
 - ▶ **Message Sent** appears on the screen when the reply message was successfully sent.

» Reply to a Message

The available fixed reply messages are as follows:


- Talk to you later, I'm driving.
- I'm on my way.
- I'm running late.
- OK
- Yes
- No




You cannot add, edit, or delete reply messages.

Only certain phones receive and send messages when paired and connected. For a list of compatible phones:

- U.S.: Visit www.acura.com/handsfreelink, or call 1-888-528-7876.
- Canada: Visit www.handsfreelink.ca, or call 1-888-528-7876.

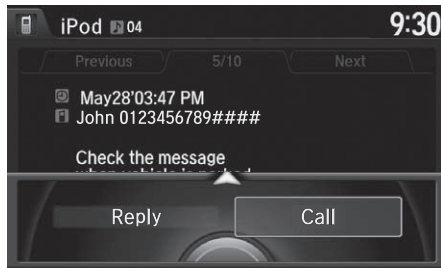
Calling the Sender





1. Go to the text message screen. The system automatically starts reading the message aloud.
 - » **Displaying Text Messages**
P. 303
2. Move  and Rotate  to select **Call**. Press .

MENU button (on Phone screen) ► Roadside Assistance

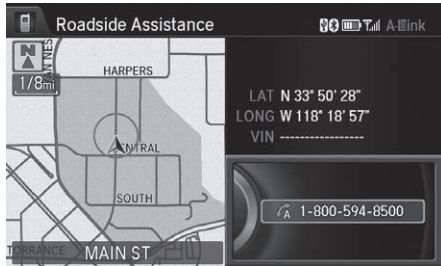Provides a nationwide service for unexpected incidents. You can call for assistance using a phone paired and connected to *Bluetooth*® HandsFreeLink®.



Rotate  to select a phone number. Press .

► Dialing starts automatically.

Roadside Assistance

If you are subscribed to a paid AcuraLink® package, you can call the roadside assistance using the **LINK** button instead of your phone.

 **AcuraLink**® P. 314

This function is not available on all models.

The power mode must be in ACCESSORY or ON to use HFL.

■ Phone settings screen





1. Press the **SETTINGS** button.
2. Rotate to select **Phone Settings**, then press .

» HFL Menu

To use HFL, you must first pair your *Bluetooth*-compatible mobile phone to the system while the vehicle is parked.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

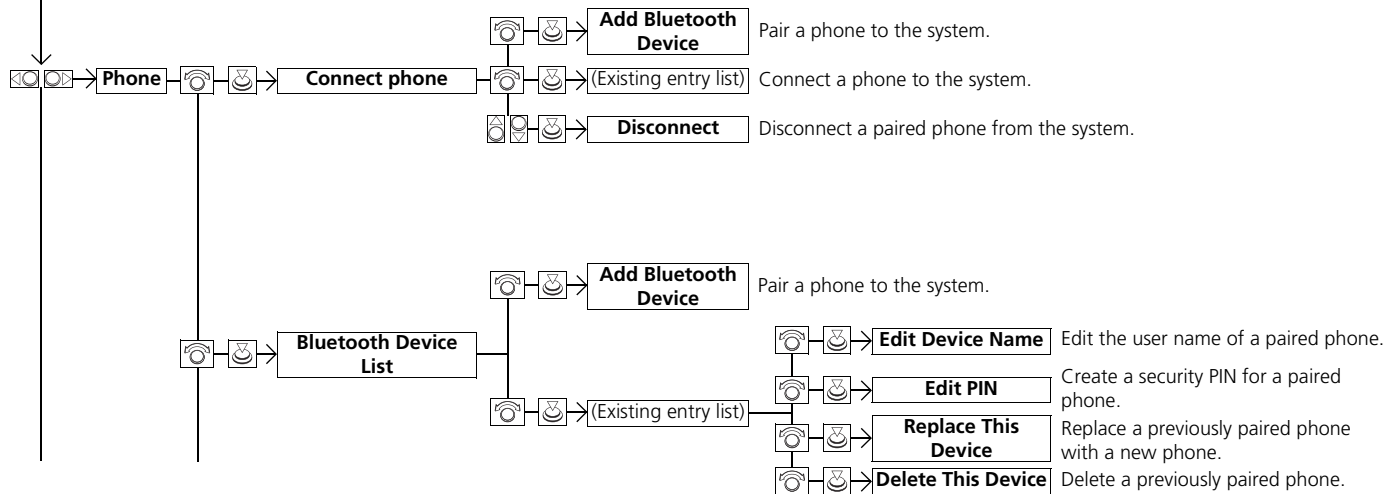

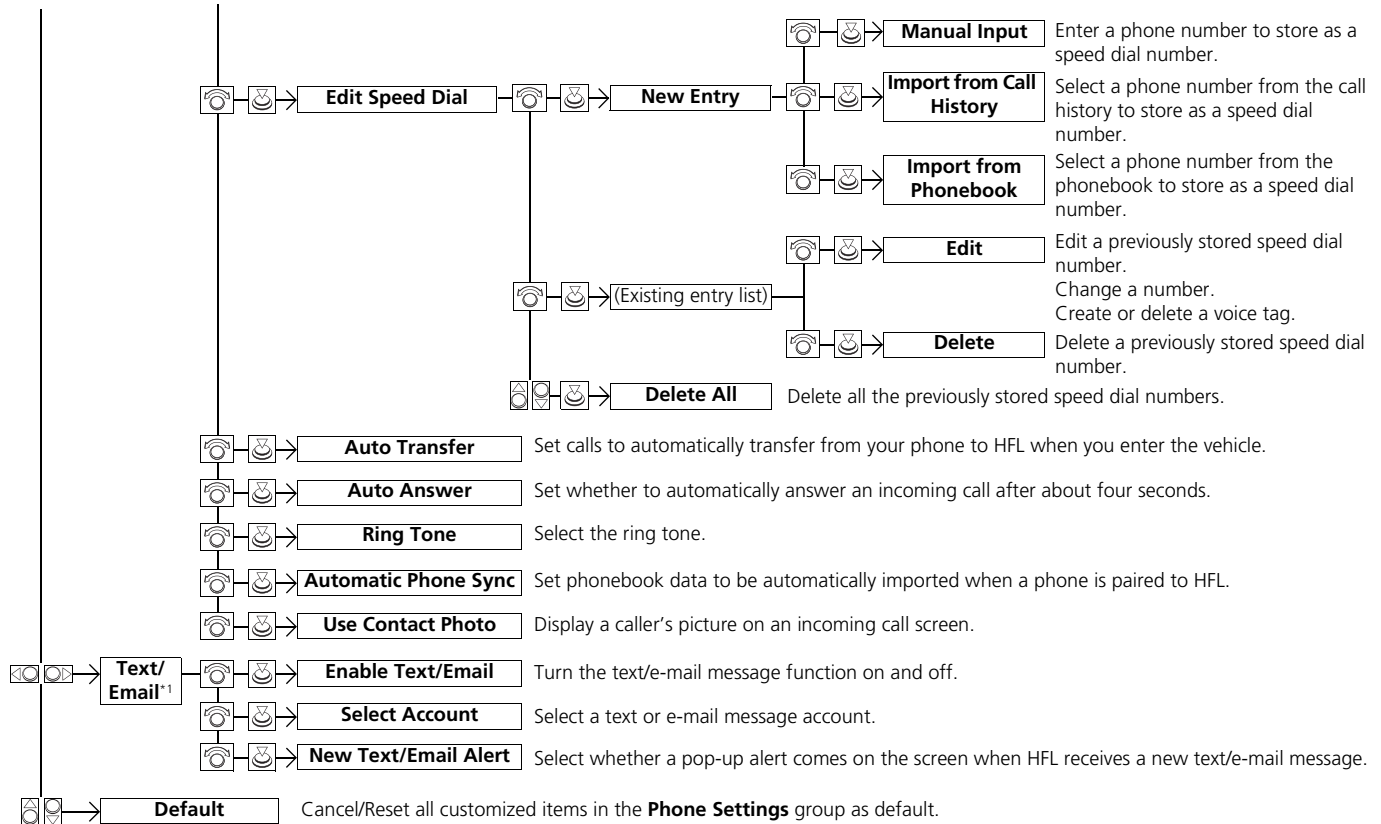


*1: Appears only when a phone is connected to HFL.

■ Phone screen




1. Press the **PHONE** button.
2. Press the **MENU** button to display the menu items.

Bluetooth® HandsFreeLink®

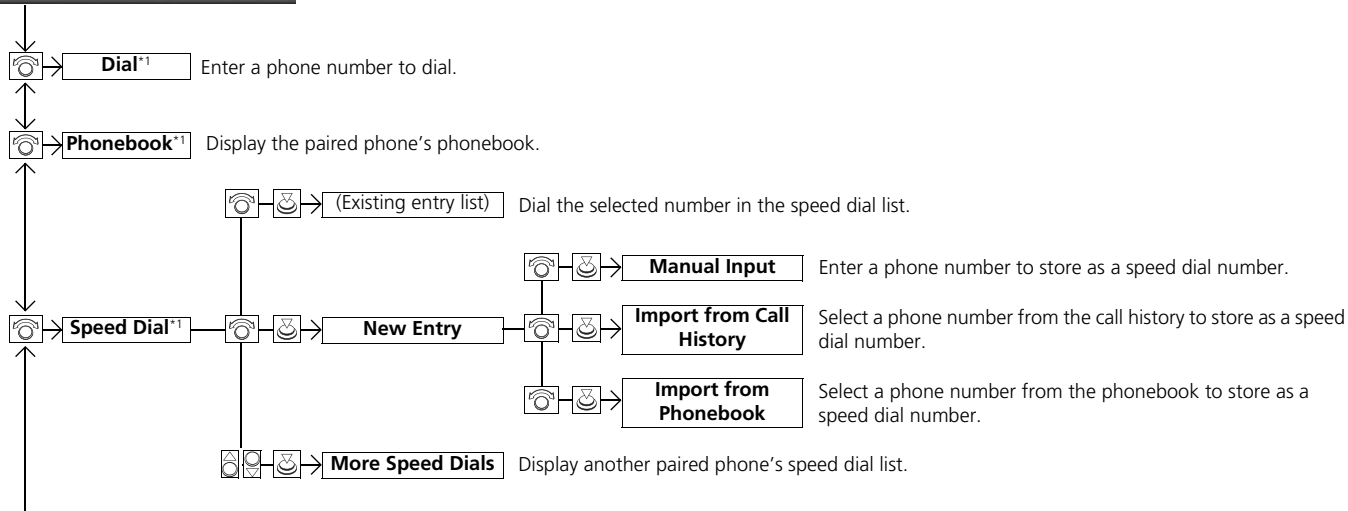

*1: Appears only when a phone is connected to HFL.

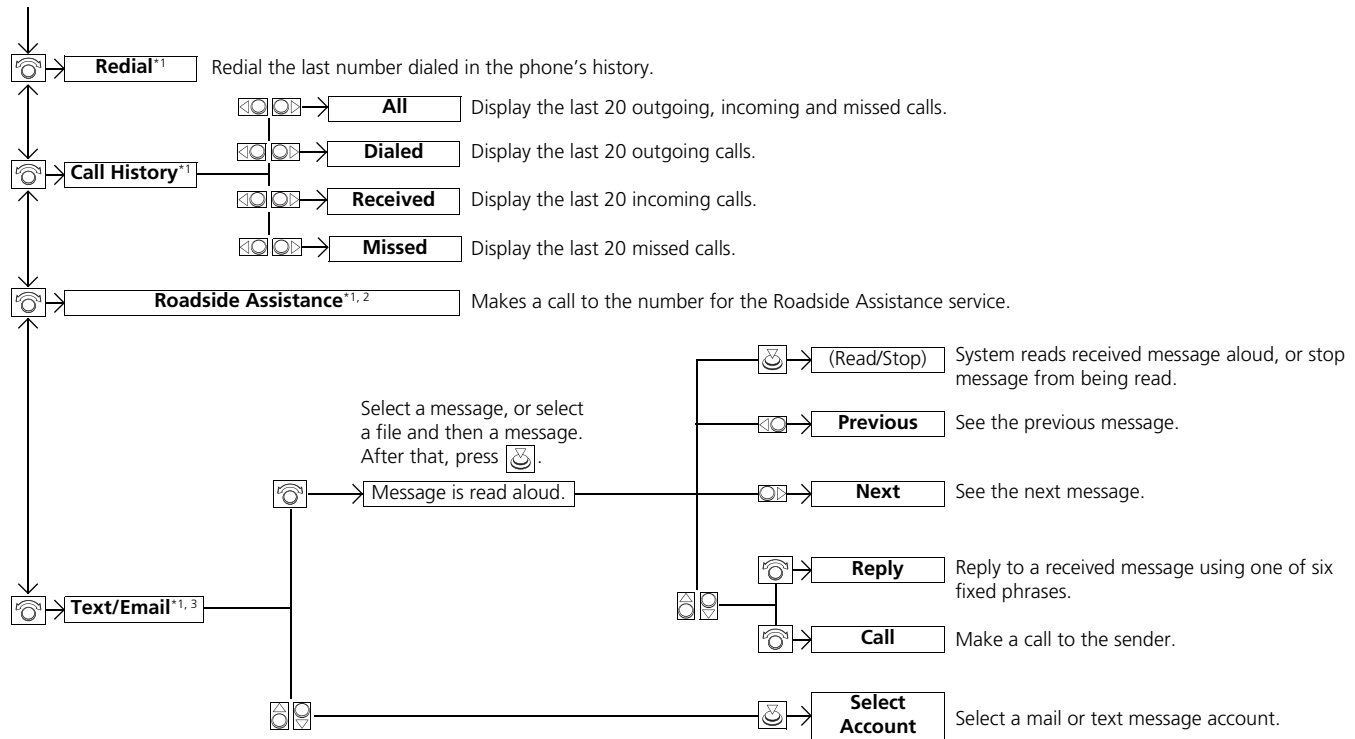

*1: Appears only when a phone is connected to HFL.
 *2: Not available on all models
 *3: This function is not available if your phone is not supported.

AcuraLink® Messages

This section describes how Acura directly communicates important information to you regarding your vehicle.

AcuraLink®	314
In Case of Emergency.....	314
Security Features	317
Operator Assistance	318
AcuraLink® Message	319
AcuraLink® Subscription Status.....	324

A subscription-based service that provides convenient features such as voice communication in case of emergency, online security, one-on-one operator assistance, and the transmission of important messages regarding your vehicle's status.

Canadian models

For information on traffic rerouting and traffic information updates, provided by the AcuraLink® server.

In Case of Emergency

Your vehicle may not be able to connect to the operator if the battery level is low, the line is disconnected, or you do not have adequate cellular coverage.

You cannot use emergency services when:

- You travel outside the AcuraLink® service coverage areas.
- There is a problem with the connecting devices, such as the **ASSIST** button, microphone, speakers, or the unit itself.
- You are not subscribed to the service or your subscription is no longer valid.

» AcuraLink®

AcuraLink® also provides services you can operate from the Internet or your smartphone.

To subscribe to AcuraLink®, or to get more information about all of its features, contact an Acura dealer or visit owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada).


» In Case of Emergency

You cannot operate other navigation or phone related functions using the screens while talking to the operator.

Only the operator can terminate the connection to your vehicle.

Automatic Collision Notification

Audio/Information Screen

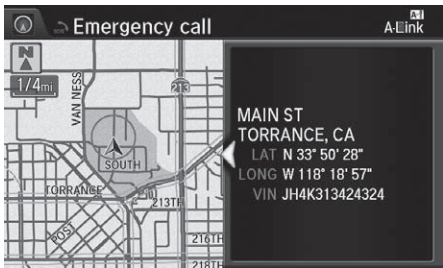

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle will automatically attempt to connect to the AcuraLink® operator. Once connected, information about your vehicle, its positioning, and its condition will be sent to the operator; you also can speak to the operator when connected.


On Demand Multi-Use Display™



Automatic Collision Notification

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

■ Manual Operator Connection

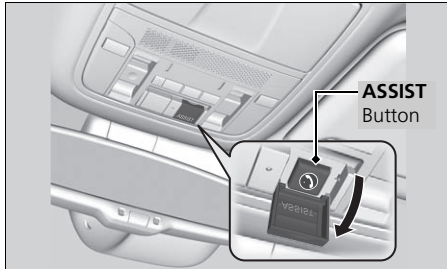

If you need to talk to the AcuraLink® operator in an emergency situation, you can manually connect to them by pressing the **ASSIST** button with the power mode in **ACCESSORY** or **ON**.

1. Open the cover attached to the ceiling console.
2. Press the **ASSIST** button.
 - ▶ You are connected to the AcuraLink® operator.

▣ Manual Operator Connection

Do not press the button while driving. When you need to contact the operator, park the vehicle in a safe place.

If the unit fails to connect to the operator, it automatically cancels the action after three minutes.

In an emergency, the cover can be broken through to press the **ASSIST** button.

Security Features

Your subscribed telematics service provider can track your vehicle's location, remotely lock or unlock doors, and help you find your vehicle.

To use these features, you need your user ID and personal identification number (PIN).

■ Stolen vehicle tracking

This feature searches and tracks down your vehicle position even if it is on the move. If you believe that your vehicle has been stolen, contact the police as well as the provider.

■ Remote door lock/unlock

The provider can remotely lock or unlock doors upon your request.

■ Vehicle finder

This feature is convenient to use when trying to locate your vehicle in large areas, such as a crowded parking lot. If you cannot locate your vehicle after using the remote transmitter's answerback function, you can contact the provider which can then flash your vehicle's exterior lights and sound the horn.

■ Security alarm notification

If the security system in your vehicle detects an abnormal condition, such as someone tampering with the lock on your vehicle, the provider notifies you by your preferred method.

☒ Security Features

The contact information of your provider, your user ID and PIN will be given when you subscribe to AcuraLink®. If you forget any of the above, contact a dealer or visit owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada).

You can also activate the remote door lock/unlock and vehicle finder features from the Internet or using your smartphone app. Ask a dealer or visit owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada).


☒ Vehicle finder

The lights will stop flashing and horn will stop sounding under the following conditions:


- When 30 seconds have elapsed.
- You unlock the doors using the remote transmitter.
- You unlock the doors using the keyless access system.
- You unlock the doors using the built-in key.
- The power mode is set to ACCESSORY or ON.


 
Operator Assistance

Connect to the AcuraLink® operator when trying to find a destination or for roadside assistance.

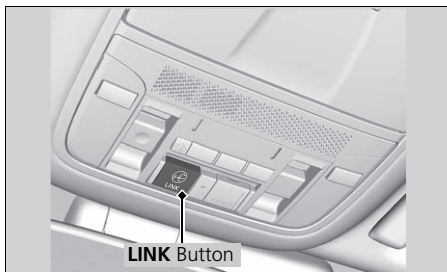

1. Press the **LINK** button.
 - ▶ Connection to the operator begins.

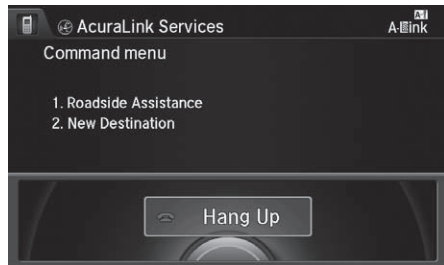


2. Talk to the operator.
 - ▶ To disconnect, rotate  to select **Hang Up**, select **End Call** on the On Demand Multi-Use Display™, or press the  (Hang-Up/Back) button on the steering wheel.

Operator Assistance

Remain attentive to road conditions and driving during operator assistance.

AcuraLink® Message

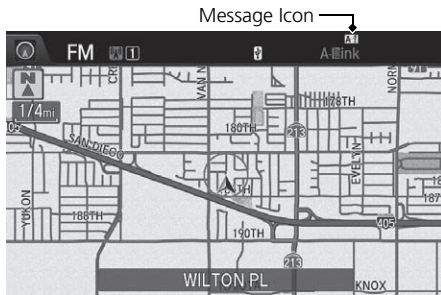

AcuraLink® sends you messages on vehicle features, safety and emissions recall campaigns, maintenance reminders, and diagnostic information.

When you receive a new message, an icon appears on the upper right corner of the audio/information screen.

✉ AcuraLink® Message


Messages may not appear immediately after your vehicle purchase. It can take several days for your dealer to register your vehicle's ID.

If an icon includes an exclamation point, it indicates that Acura gives high priority to this message compared to the one without.

- : An unread message with high priority
- : An unread message

■ Message Category

There are six message categories.

- **Feature Guide:** Messages about your vehicle and its features are sent daily for the first 90 days.
- **Quick Tips:** Supplements your Owner's Manual with updated vehicle information.
- **Scheduled Dealer Appointment:** An appointment made through the Acura server or Acura Owners website can be rescheduled or canceled from this option.
 - ▶ **Dealer Appointments (U.S. only)** P. 323
- **Diagnostic Info:** Appears when a warning indicator or message comes on. Rotate  to select **Check Later** or **Check Now**.
 - ▶ Selecting **Check Now** lets you know if you should see a dealer immediately or later in accordance with the warning severity level.
- **Maintenance Minder:** Lets you know which maintenance item is due along with a reminder message.
- **Recalls/Campaigns:** Reminds you of a recall or important safety information. You should also be notified by mail.


▣ Message Category







The types of messages you receive can be modified. Ask a dealer or visit owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada).

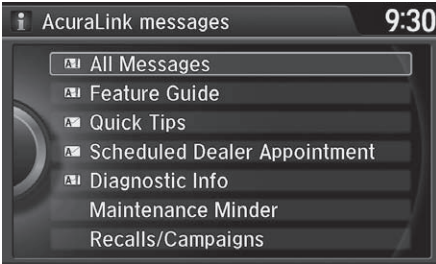You can call your dealer, find the nearest dealer, or schedule appointments from the message options in **Maintenance Minder, Recalls/Campaigns, and Diagnostic Info.**

▶ **Message Options** P. 322

Reading a Message




1. Press the **INFO** button, rotate  to select **AcuraLink/Messages**, then press .
 - ▶ If your display has changed from Info menu to **Current Drive**, press the **MENU** button.
 - ▶ Select **AcuraLink messages**.
2. Rotate  to select a category, then press .
 - ▶ If there are unread messages in a category, a message icon appears next to that category.
3. Rotate  to select a message you want to read, then press .

Reading a Message

If there is no message listed on the menu, **AcuraLink/Messages** is grayed out and cannot be selected.

The message icon disappears once you read the message.

However, the exclamation mark that indicates that the message has a high priority remains.

- : A read message with high priority.

Message Options



While a message is displayed, you can use options to take immediate action regarding the message.

Available options are:

- **Voice:** Reads the message aloud. Select Stop to cancel it.
- **Find Acura Dir.:** Searches for the nearest Acura dealer.
- **Delete:** Deletes the displayed message.
- **Call Your Dealer:** Calls your Acura dealer using HFL.
- **Schedule Dealer Appointment (U.S. only):** Automatically sets an appointment date at your dealer.
- **Phone number:** Dials a number displayed in the message via HFL.
- **Diagnostic Info:** Updates the current diagnostic message by connecting to the Acura server using HFL.

Message Options






The available options vary by message category.

You can delete all messages in a category at once.

■ Dealer Appointments (U.S. only)

You can confirm the scheduled appointment date when you receive a **Maintenance Minder** or **Recalls/Campaigns** message, or reschedule any existing appointments.



1. Select a **Maintenance Minder, Recalls/Campaigns, or Scheduled Dealer Appointment** message.
2. Rotate  to select **Scheduled Dealer Appointment** or **Reschedule Appointment** (depending on the screen). Press .
 - ▶ A suggested time and date are displayed.
3. Rotate  to select **Confirm Appointment**. Press  to accept the time and date.
4. Press  to select **OK**.

☒ Dealer Appointments (U.S. only)


To set up an automated dealer appointment when a regular maintenance is due, visit the Acura Owners website at owners.acura.com (U.S.) or www.acura.ca/owners/acuralink (Canada) and set the required option. A reminder message will be sent as the date for the dealer appointment approaches. A reminder message will also be sent if you schedule an appointment online using the Schedule Service Appointment function.

If you are not satisfied with the proposed appointment date and time, call your dealer directly.

To cancel the scheduled appointment, select **Cancel Appointment** when a message is displayed.

AcuraLink® Subscription Status

🔗 **SETTINGS** button ▶ **Info Settings** ▶ **AcuraLink Subscription Status**

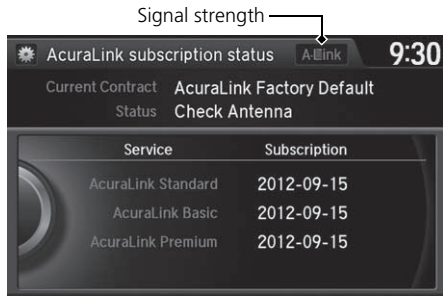

Confirm your AcuraLink® subscription status.

Item	Information
AcuraLink	You can check the signal strength.
Current Contract	The AcuraLink® subscription number and subscription level is displayed.
Service	You can confirm the type of service.
Subscription	You can confirm the expiration date.
Status	The following message can be displayed: <ul style="list-style-type: none"> • Check Antenna: There is a problem with the AcuraLink® antenna. Contact a dealer. • No data: The signal is received, but some error has occurred in the system. • OK: The system is receiving the signal or traffic data*.

Rear Entertainment System*

Rear seat passengers can enjoy a completely separate entertainment source than front passengers, including movies, games, and other audio choices.

Rear Entertainment System	326	Front Control Panel Operation	338
Auxiliary Console Panel	326	Selecting the Audio Source using front control panel	338
HDMI® Input Jack	327	Rear System Setup	339
Playable Discs	328	Setting the DVD Menu	340
Rear Control Panel Operation	329	Wireless Headphones	342
Selecting the Audio Source	329	Using the Wireless Headphones	342
Rear DVD Menu	330	Changing the Sound Source	343
Screen and Surround Settings	333	Replacing the Batteries	344
Dual Screen Mode	335		
Replacing the Batteries	337		

* Not available on all models


The Rear Entertainment System (RES) is operable from both the front control panel and the rear control panel.

➤ **Front Control Panel Operation** P. 338

➤ **Rear Control Panel Operation** P. 329

Auxiliary Console Panel

Auxiliary input jacks and headphone connectors for the rear entertainment system are on the back of the center console compartment.

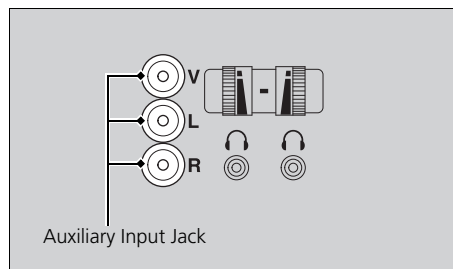

V = Video jack

L = Left audio jack

R = Right audio jack

■ Auxiliary Input Jacks

The system will accept auxiliary inputs from standard video games and video equipment. Some video game power supplies may cause poor picture quality.

■ Headphone Connectors

There are two headphone connectors for the rear passengers. Each connector has its own volume control.


➤ Rear Entertainment System

NOTICE

This vehicle's overhead mounted video display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose as hazardous waste.

HDMI® Input Jack

There is an HDMI® input jack on the back of the center console compartment. The system will accept HDMI® input from video games and video equipment which are equipped with an HDMI® jack.

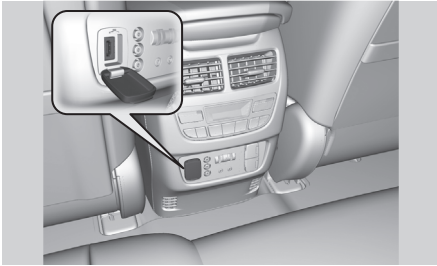

Open the outlet cover and insert the cable.

⌘ HDMI® Input Jack

The terms HDMI® and HDMI® High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Playable Discs

The discs that come with these labels can be played in your vehicle's rear entertainment system.

Also look for the region code of 1 or ALL on the package or jacket on the disc.

DVD-ROMs are not playable in this unit.

The disc packages or jackets should have one of these marks.



Also includes:



▶▶ Playable Discs

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.


Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround and Neural Surround are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, MLP Lossless and the double-D symbol are trademarks of Dolby Laboratories.


Selecting the Audio Source



1. Press the **REAR**  (Power) button on the front control panel.
 2. Press the **SOURCE** button on the rear control panel.
 3. Select the audio source. Press the **ENTER** button.
 - ▶ You can also change the audio source by the front control panel.
- **Selecting the Audio Source using front control panel**
P. 338
4. Select a station, channel, track, or chapter using the **CH/FOLDER**, **TUNE/SKIP**, or **CATEGORY** bars.

➤ Rear Control Panel Operation

In the procedures of this section, “select” means the following actions:

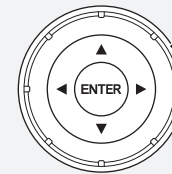

Rotate the Interface Dial on the rear control panel.


The rear control panel can be detached from the ceiling unit and used as a remote control.

➤ Overhead Screen and Rear Control Panel

P. 16

The screen is displayed on the overhead screen.



Rear DVD Menu

 **MENU** button (in the DVD mode)




Select an item. Press the **ENTER** button.

The following items are available:

- **Top Menu:** Displays the top menu of the DVD.
- **Menu:** Displays the menu of the DVD.
- **Play Mode:** Displays while a DVD is playing and changes the DVD's audio, subtitle, or angle settings.
 - **Setting the Play Mode** P. 331
- **Search/NumInput:** Skips to a title or chapter by entering the number.
 - **Searching a Title/Chapter** P. 332
- **Repeat:**
 -  **TITLE REPEAT:** Repeats the current title.
 -  **CHAPTER REPEAT:** Repeats the current chapter.
- **Pause/Play:** Pauses or resume the playback
- **Stop:** Stops the playback.
- **Return:** Hides the rear audio menu.

Setting the Play Mode

 **MENU** button (in the DVD mode) ▶ **Play Mode**

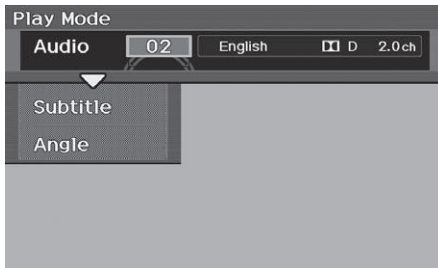


1. Select an item. Press the **ENTER** button.
2. Select an option. Press the **ENTER** button.

The following items are available:

- **Audio:** Selects the language of the DVD audio.
- **Subtitle:** Selects the language of the DVD subtitle.
- **Angle:** Selects the angle of a scene shot with multiple cameras.

■ Searching a Title/Chapter

🔍 **MENU** button (in the DVD mode) ▶ **Search/NumInput**

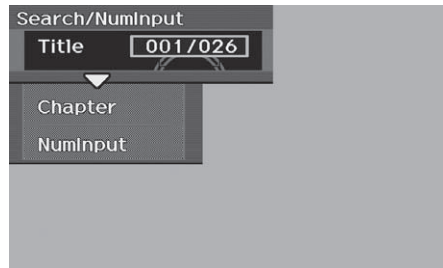


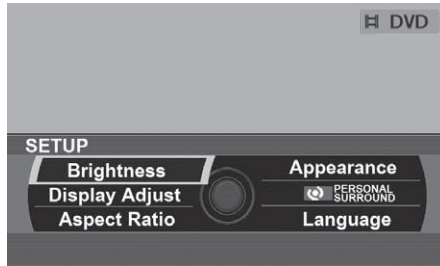
1. Select an item. Press the **ENTER** button.
2. Select a number. Press the **ENTER** button.

The following items are available:

- **Title:** Skips to a title you specify.
- **Chapter:** Skips to a chapter you specify.
- **NumInput:** Enters a number of a title or chapter to skip. Enter a number and press the **ENTER** button. Select **DONE**.

Screen and Surround Settings

 **SETUP** button (in the DVD mode)




Select an item. Press the **ENTER** button.

The following items are available:

- **Brightness:** Adjusts the screen's brightness. Adjust the brightness using the Interface Dial and press the **ENTER** button.
- **Appearance:** Selects the color of the rear menu screen.
- **Display Adjust:** Adjusts the screen's preferences.
 - ▶ **Adjusting the Screen** P. 334
- **Aspect Ratio:** Selects an aspect ratio of the image.
 - ▶ **Setting the Aspect Ratio** P. 335
- **PERSONAL SURROUND:** Sets the surround of the wireless headphones. You can choose from three options: **Music**, **Cinema**, or **Voice**. Select **Off** to disable the feature.
- **Language:** Sets the system language used on all screens. You can choose from three languages: **English**, **Français** (French), or **Español** (Spanish).

■ Adjusting the Screen

🔧 **SETUP** button (in the DVD mode) ▶ **Display Adjust**

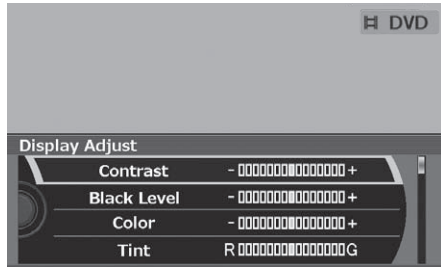

1. Select an item. Press the **ENTER** button.
2. Make the adjustment. Press the **ENTER** button.

The following items are available:

- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.
- **Color:** Adjusts the screen's color strength.
- **Tint:** Adjusts the screen's hue.
- **Reset:** Resets all the settings to their factory default.

■ Setting the Aspect Ratio

 **MENU** button (in the DVD mode) ▶ **Aspect Ratio**



1. Select an item. Press the **ENTER** button.
2. Select an item. Press the **ENTER** button.

The following items are available:

- **Wide:** Selects the wide screen option (**Normal, Full, Super Full, Ultra Full**).
- **Zoom:** Selects the zoom screen option (**Super Zoom, Ultra Zoom**).

Dual Screen Mode

Select between the two screen modes, single or dual.


■ Single Mode

The selected source is displayed in the center of the screen.

■ Dual Mode

Two separate screens are displayed side by side. You can only select one output source from the front audio system. The other source must come from “**REAR AUX Video**” or “**REAR AUX HDMI**”.


■ Single mode to Dual mode

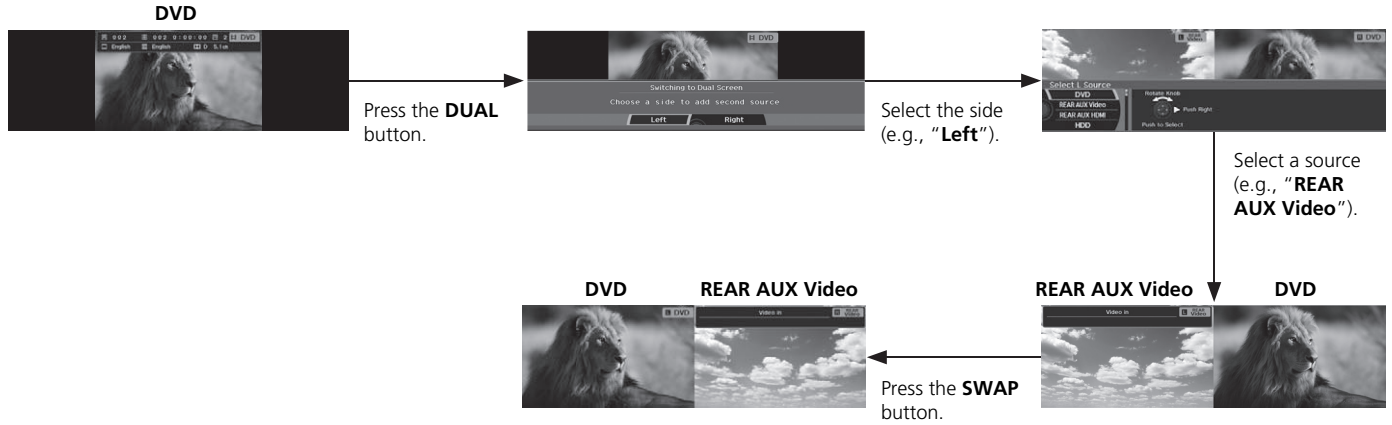

■ Dual mode to Single mode



Replacing the Batteries

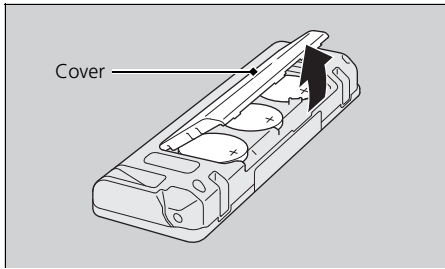

1. Remove the rear control panel.
 - ▶ **Overhead Screen and Rear Control Panel** P. 16
2. Open the cover.
3. Change the batteries.
 - ▶ Battery type: BR3032


⌘ Replacing the Batteries

An improperly disposed battery may harm the environment. Always confirm local regulations for battery disposal.

Operate the Rear Entertainment System (RES) from the front control panel.


Selecting the Audio Source using front control panel







1. Press the REAR  (Power) button on the front control panel.
2. Press the REAR AUDIO button.
 - ▶ The rear source is displayed on the front audio/information screen and the On Demand Multi-Use Display™.
 - ▶ The rear source is heard from the front speakers.
3. Select **Rear Source** on the On Demand Multi-Use Display™.
4. Select the audio source icon on the On Demand Multi-Use Display™.
5. Select a station, channel, track, or chapter in the same way as the front audio system.
 - ▶ **Audio** P. 181

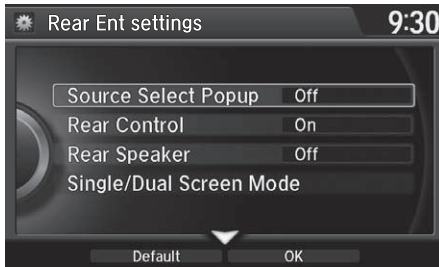

Rear System Setup

SETTINGS button ▶ Rear Ent Settings



1. Rotate  to select an item. Press .
2. Rotate  to select an option. Press .

The following items are available:



- **Source Select Popup:** Selects whether the list of selectable audio sources comes on when the **AUDIO** button is pressed.
- **Rear Control:** Sets whether to use the rear control panel to control the RES.
On (factory default): Operates the RES using the rear control panel.
Off: Disables the feature.
- **Rear Speaker:** Sets the front audio source to play through the rear speakers, even when the RES is on. The RES source can only be heard through the wireless headphones.
On (factory default): Outputs the sound of the front source to the rear speakers.
Off: Disables the feature.
- **Single/Dual Screen Mode:** Selects a source to continue playing when you switch from dual mode to single mode on the overhead screen. Rotate  to select a source and press .


Setting the DVD Menu



Interface Dial

 **MENU** button (in DVD mode)

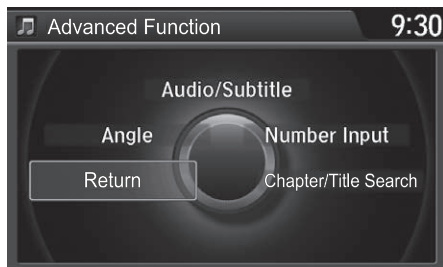

1. Rotate  to select an item. Press .
▶ Select **Advanced Function** to display additional menu entries.



2. Rotate  to select an option. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
 ▶ **Adjusting the Sound** P. 193
- **Top Menu:** Displays the top menu of the DVD.
- **Menu:** Displays the menu of the DVD.
- **Repeat:**
 Repeat Title: Repeats the current title.
 Repeat Chapter: Repeats the current chapter.

- **Change Source:** Changes the audio source mode.
- **Play/Pause:** Pauses or resume the playback.
- **Stop:** Stops the playback.
- **Audio/Subtitle:** Selects the language of the DVD audio and the DVD subtitle.
- **Angle:** Selects the angle of a scene shot with multiple cameras.
- **Return:** Hides the DVD menu.
- **Number Input:** Enters a number of a title or chapter to skip.
- **Chapter/Title Search:** Skips to a title or chapter by Interface Dial.

On Demand Multi-Use Display™




1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.
 - ▣ **Adjusting the Sound** P. 193
- **Screen Settings:** Displays the screen preferences screen.
 - ▣ **Changing the Screen Settings** P. 89

Using the Wireless Headphones

Audio for the Rear Entertainment System is sent to the wireless headphones that come with the system.

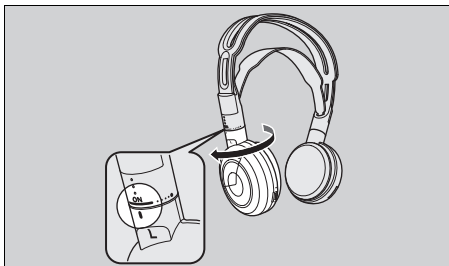

1. Pivot the earpieces outward.



2. Adjust the volume by turning the dial on the bottom of the right earpiece.

3. Wear the headphones correctly with the left and right earpieces on the correct sides.

▶ **L** (left) and **R** (right) are marked on the sides of the frame.

Using the Wireless Headphones

When you remove the headphones, the earpieces automatically pivot inward, and the headphones turn off. When not in use, store the headphones in the back pocket of either front seat.

Some state and local government agencies prohibit the use of headphones by the driver of a motor vehicle. Always obey applicable laws and regulations.


You can use wired headphones through the auxiliary input jacks.

▶ **Auxiliary Console Panel** P. 326

Changing the Sound Source

■ Wireless Headphone

In dual screen mode, you can switch the sound source of the wireless headphones between the left and right side screens.

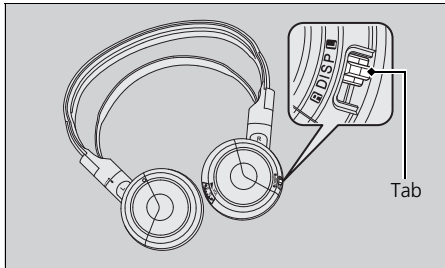



Slide the tab to "L" for the left side, or "R" for the right side.

☒ Changing the Sound Source

You can switch the sound source from the setup menu if you connected a set of wired headphones.

1. Press the **SETUP** button on the rear control panel.
2. Select Wired Headphones. Press the **ENTER** button.
3. Select Left or Right to switch the sound source. Press the **ENTER** button.

Replacing the Batteries

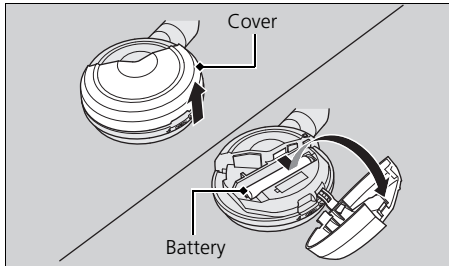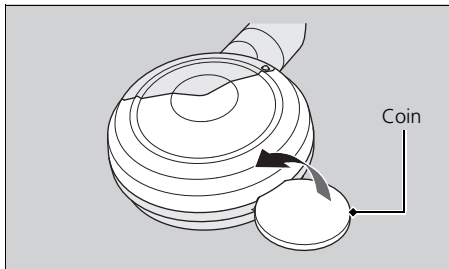

1. Insert a coin in the slot and twist it slightly to pry the cover away from the earpiece.
2. Pull the cover outward, and pivot it out of the way.
3. Remove the battery.
4. Install the new battery in the earpiece as shown in the diagram next to the battery slot.
 - ▶ Battery Type: AAA battery
5. Slide the cover back into place on the earpiece, then press down on the back edge to lock it in place.

▶▶ Replacing the Batteries

The battery is under the cover on the left earpiece.

An improperly disposed battery may harm the environment. Always confirm local regulations for battery disposal.

If static is heard in the headphones, try replacing the battery.

Other Features


This section describes the useful functions incorporated into the navigation system.

Trip Computer	346
Power Distribution Monitor	347
Calendar	350
Information Functions	351
System Device Information	351
Map Data Update	351
Info Screen Preference	352
Multi-View Rear Camera *	353
Surround View Camera *	355
Troubleshooting	377
HomeLink® Universal Transceiver	380


* Not available on all models

INFO button ► Trip Computer

View the distance traveled and average fuel consumption.

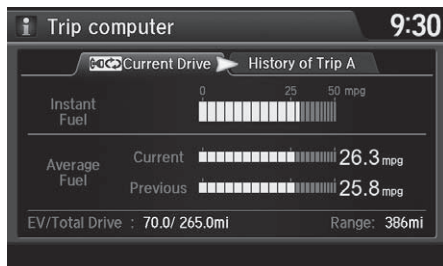

Move ◀ or ▶ to select the trip information.

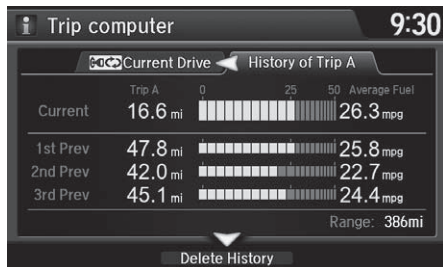

The following items are available:

- **Current Drive:** Displays the current trip information.
- **History of Trip A:** Displays information for three previous histories. The information is stored every time you reset Trip A.
- **Delete History:** Deletes the trip information. Move ◊ on the Trip A screen to select **Delete History**, then press ⏏. You will receive a confirmation message on the screen. Rotate ⌚ to select **Yes**, then press ⏏.

» Trip Computer

Displays the following trip information:


- **Instant Fuel:** The current estimated instant fuel economy.
- **Average Fuel:** The average fuel economy since the last key cycle.
- **1st, 2nd, 3rd Prev.:** The previous average fuel consumption.
- **RANGE:** The estimated distance you can travel on the fuel remaining in the tank.
- **EV/Total Drive:** Shows the EV/total drive of the current trip.

These values are estimates only.

Power Distribution Monitor

INFO button ► Power Distribution Monitor

Consists of the audio/information display showing the vehicle's power flow and torque distribution indicators.

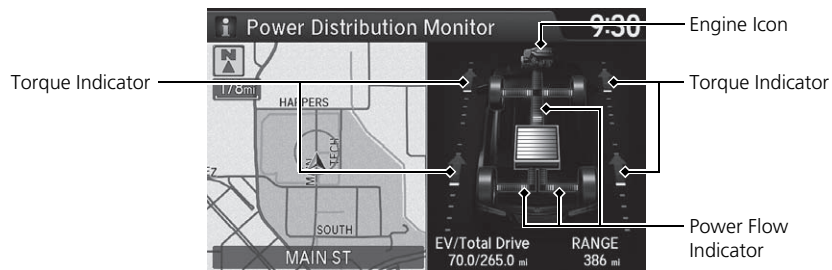


■ Power flow monitor

Shows motor and engine power flow, indicating what supplies power to the vehicle, or if the battery is being charged.

	Power flow pattern	Color of indicators
Power is supplied by the motors and the engine.		Blue




Power Distribution Monitor

While the vehicle is stationary with the engine running, the following may appear on the display.

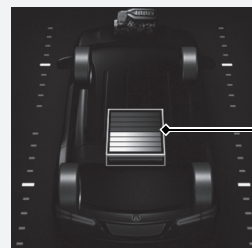


High Voltage Battery Charge Level Gauge

The High Voltage battery charge level gauge shows the current High Voltage battery charge level.

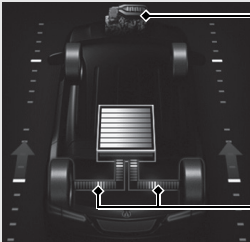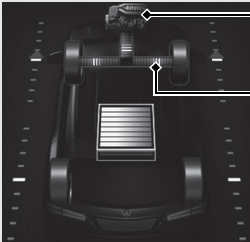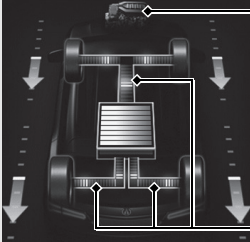	Power flow pattern	Color of indicators
<p>Power is only supplied by the motors.</p>	 <p>Engine Icon (Engine off)</p> <p>Power Flow Indicator</p>	<p>Blue</p>
<p>Power is only supplied by the engine.</p>	 <p>Engine Icon (Engine on)</p> <p>Power Flow Indicator</p>	<p>Blue</p>
<p>The motors charge the High Voltage battery.</p>	 <p>Engine Icon (Engine on)</p> <p>Power Flow Indicator</p>	<p>Green</p>

■ SPORT HYBRID SH-AWD® torque distribution monitor

The indicators on the display show the amount of torque being transferred to each wheel or regenerative energy being supplied to the High Voltage battery. See the Owner's Manual for instructions.

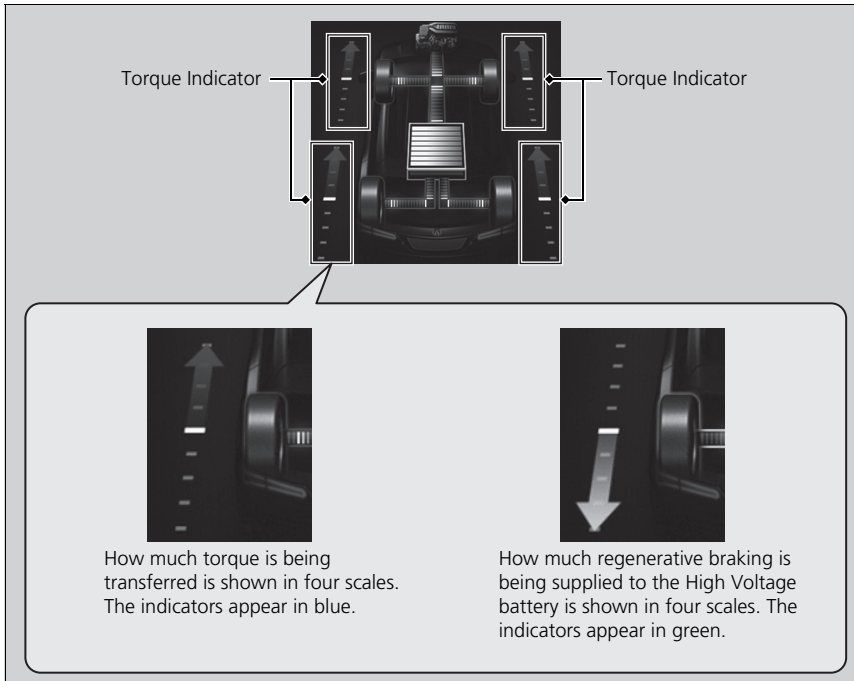

 **INFO** button ► **Calendar**

View the calendar screen.




Move ◀ or ▶ to select the months of the year.

System Device Information

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **System Device Information**


View database, software, device, and vehicle identification information.

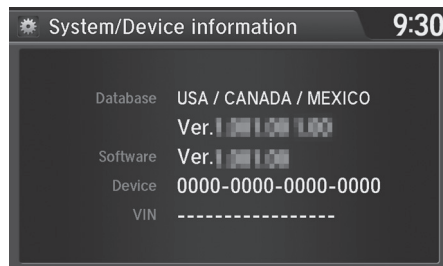

Map Data Update

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Map Data Update**

Check the map data update status when updating the map database.

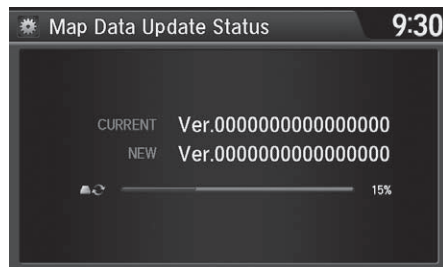

System Device Information

You will need this information when ordering a map update.

 **Obtaining a Navigation Update** P. 405

Map Data Update

This operation is only available during a database update.



 **Obtaining a Navigation Update** P. 405

Info Screen Preference

🔑 **SETTINGS** button ▶ **Info Settings** ▶ **Other** ▶ **Info Screen Preference**

Select the top menu when the **INFO** button is pressed.




Rotate  to select your desired setting item. Press .


The following options are available:


- **Info Top:** A brief menu pops up.
- **Info Menu** (factory default): A full menu pops up.
- **Off:** A menu does not pop up.

About Your Multi-View Rear Camera

Your vehicle is equipped with a multi-view rear camera. When you select gear position **[R]**, the rear view is displayed on the audio/information screen. The edge of the bumper and parking guide lines are also displayed.

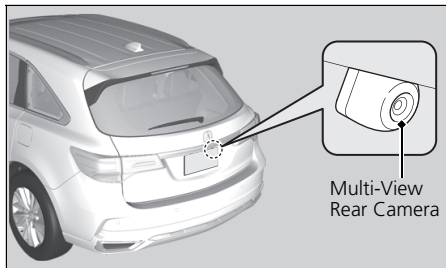

Rotate  to adjust the screen brightness.

While the rear view is displayed, press  to switch between WIDE, NORMAL, and TOP DOWN view modes.

Multi-View Rear Camera*

Always keep the camera lens clean and unobstructed. The multi-view rear camera has a lens that makes distances appear different than they actually are. Always take care when reversing, and look behind you for obstacles.


Navigation controls are disabled when in Reverse.

Adjusting the brightness for the multi-view rear camera display does not affect the brightness for the audio/information screen.


If you turn the guide lines off, they remain off until you turn them back on.

The last used viewing mode is selected the next time you shift into Reverse. However, once the power mode is set to VEHICLE OFF (LOCK), WIDE mode is selected if TOP DOWN view was last used.

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

 **Customized Features** P. 90

If you select gear position out of **[R]** in Top down view mode, then select **[R]** again 10 seconds later, Wide view mode is selected.

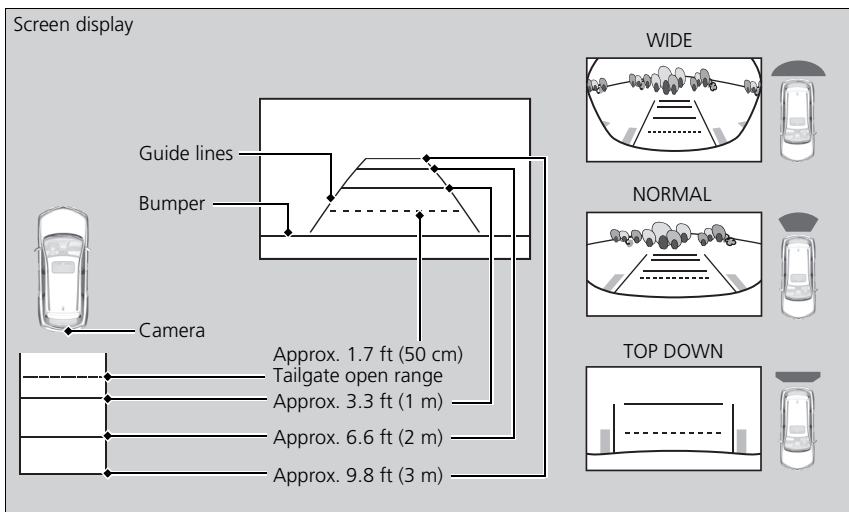

► Multi-View Rear Camera*

Fixed Guideline

On: Guidelines appear when you select gear position

R.

Off: Guidelines do not appear.

Dynamic Guideline

On: Guidelines move according to the steering wheel direction.

Off: Guidelines do not move.

The Surround View Camera System allows the driver to check the blind spots through the images displayed on the audio/information screen.

Using this support system will reduce the driver's stress in the following situations.

- Backing up the vehicle into a parking space marked with parking lines.
- Checking both ways at intersections with poor visibility.
- Parallel-parking in a parking space marked with parking lines.
- Checking for obstacles in front of the vehicle.
- Checking for obstacles at the rear of the vehicle.
- Checking for obstacles around the front right and left sides of the vehicle.

Surround View Camera*

Always keep the camera lens clean and unobstructed. The rearview camera has a lens that makes distances appear different than they actually are. Always take care when backing up, and look behind you for obstacles.

Navigation controls are disabled when in Reverse.

Adjusting the brightness for the camera display does not affect the brightness of the audio/information screen.

If you turn the guide lines off, they remain off until you turn them back on.


The Surround View Camera System is designed to reduce the driver's stress of operating the vehicle. Use this system as support for visual checks to confirm the safety in areas likely to be blind spots.

The Surround View Camera System does not eliminate all blind spots. Visually confirm safety around the vehicle with your own eyes and the mirrors. Do not rely on the camera view.

* Not available on all models


Camera locations and images

Your vehicle is equipped with four cameras. They provide different views and also a synthetically combined ground view. The views appear differently during the day and at night.

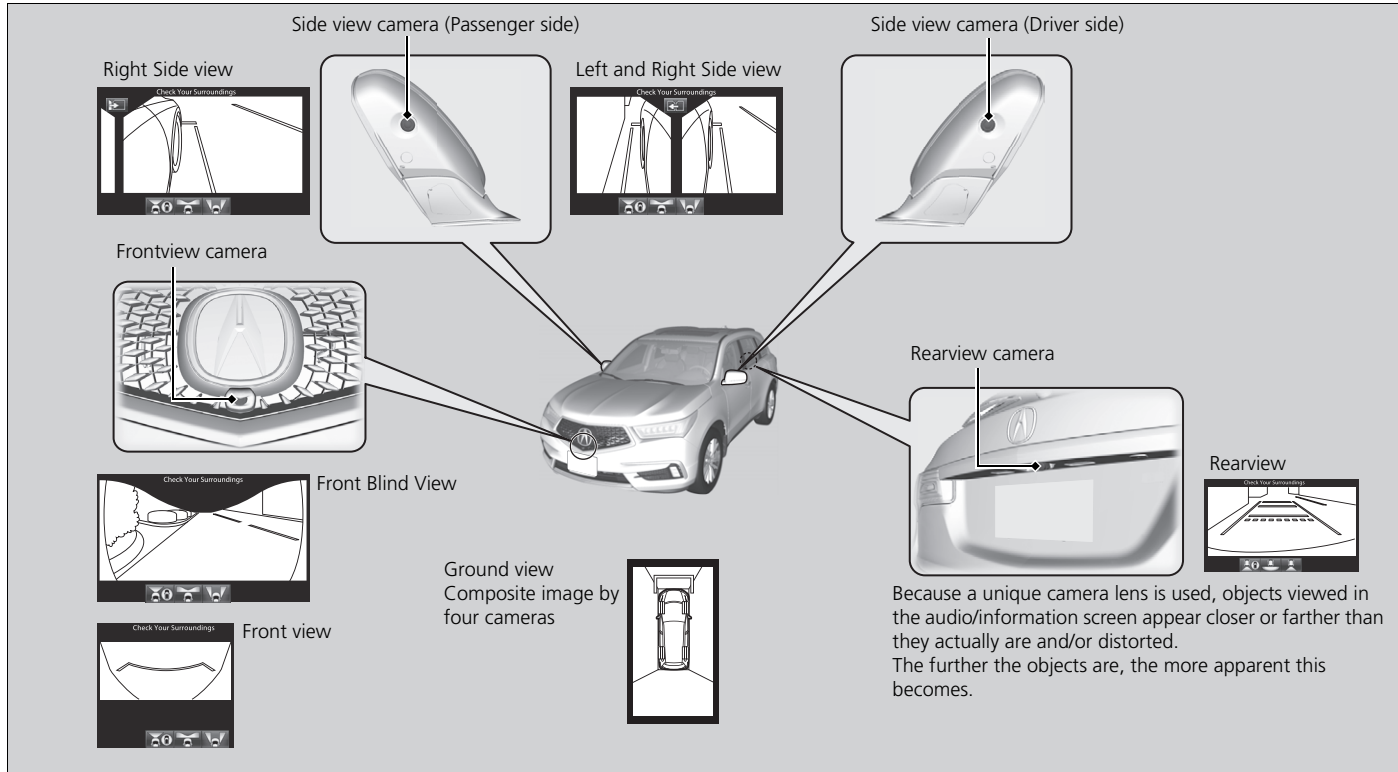

Displaying the Surround View Camera Screen

■ Using the CAMERA Button

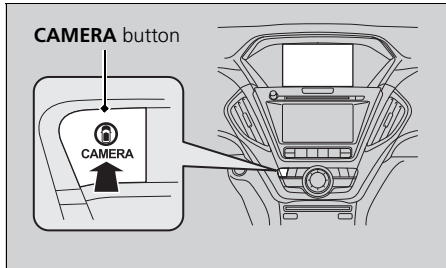

Press the **CAMERA** button while the vehicle is stopped or running slower than 7 mph (12 km/h).

▶ Displays the front view. To switch the screen, press the **CAMERA** button.


Press other mode buttons to exit the Surround View Camera System.

▣ Displaying the Surround View Camera Screen

Operating the navigation system or audio system while the Surround View Camera System screen is displayed closes the Surround View Camera System screen and starts up the navigation system screen.


▣ Using the CAMERA Button

Even when the Surround View Camera System screen is displayed, the display automatically switches to the audio/information screen if the vehicle speed exceeds 9 mph (15 km/h), and it switches back to the multi-view camera system screen if the speed is reduced to below 7 mph (12 km/h).*1

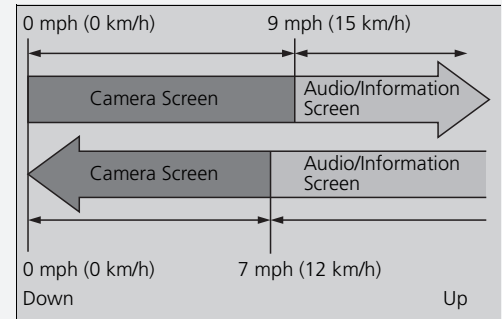

*1: For the rear view, the screen does not automatically switch based on the vehicle speed.

■ Using the Shift Button

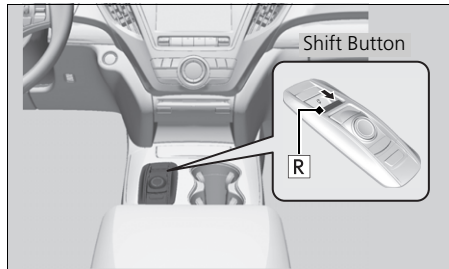

Change the gear position to **R** with the brake pedal depressed.

- ▶ Displays the rear view. To switch the screen, press the **CAMERA** button.

☒ Using the CAMERA Button

When the vehicle is decelerating rapidly, it may appear before it reaches 7 mph (12 km/h). If you press the **CAMERA** button while the vehicle speed is more than 7 mph (12 km/h), a message screen appears. When the vehicle speed is less than 7 mph (12 km/h), it switches to the Surround View Camera System screen.

☒ Using the Shift Button

If you do not touch any switches after changing the gear position to the **R** position, the display switches from the Rear View screen to the previous screen when the gear position is changed out of **R**. If you touch any switches while the gear position is in **R**, the display switches from the Rear View screen to the Front View screen when the gear position is changed out of **R**.

You can customize the display setting.


- ☒ **Customized Surround View Camera System** P. 375

You can adjust the brightness of the rearview camera.

- ☒ **Display Settings** P. 28

Switching the Screen

Front View Screen (When Gear Position is in Other than [R] Position)

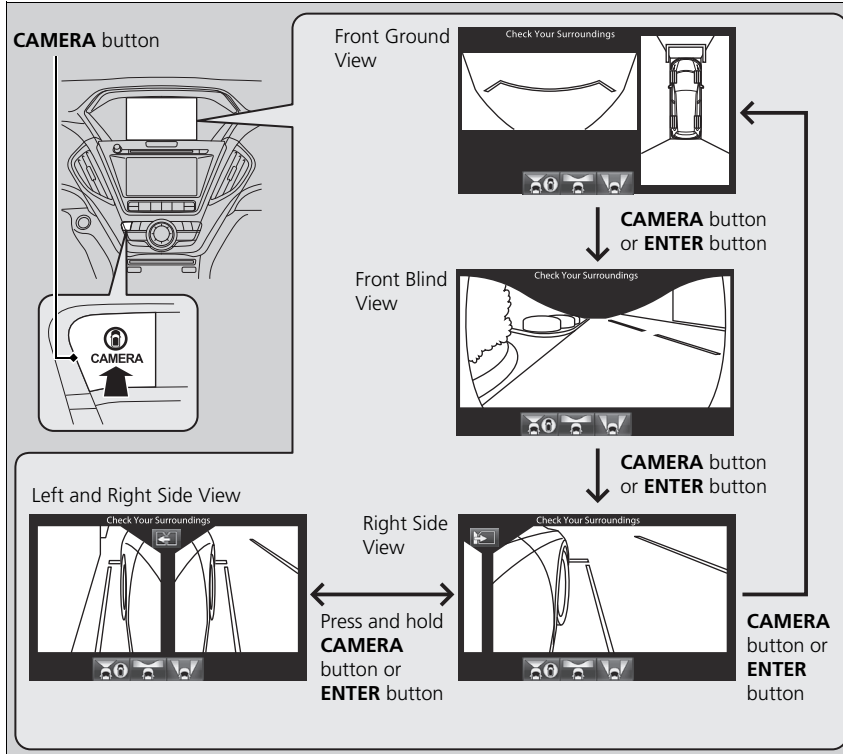

Switching the Screen

In the view image fixed guidelines are displayed which help the driver get a sense of distance between the vehicle and objects.

Dynamic guidelines are displayed which help the driver confirm the projected vehicle path.


The guidelines can be turned ON/OFF to setup.

The positions/distances indicated by the guide lines and camera views on the display may differ from the actual positions/distances due to the changes in the vehicle height, road conditions, and other factors. The guide lines should be used as a reference only.

You can also select to switch the display for the following marks on the screen.

- Front Ground View
- Front Blind View
- Right Side View/Left and Right Side View

■ Rear View Screen (When Gear Position is in [R] Position)

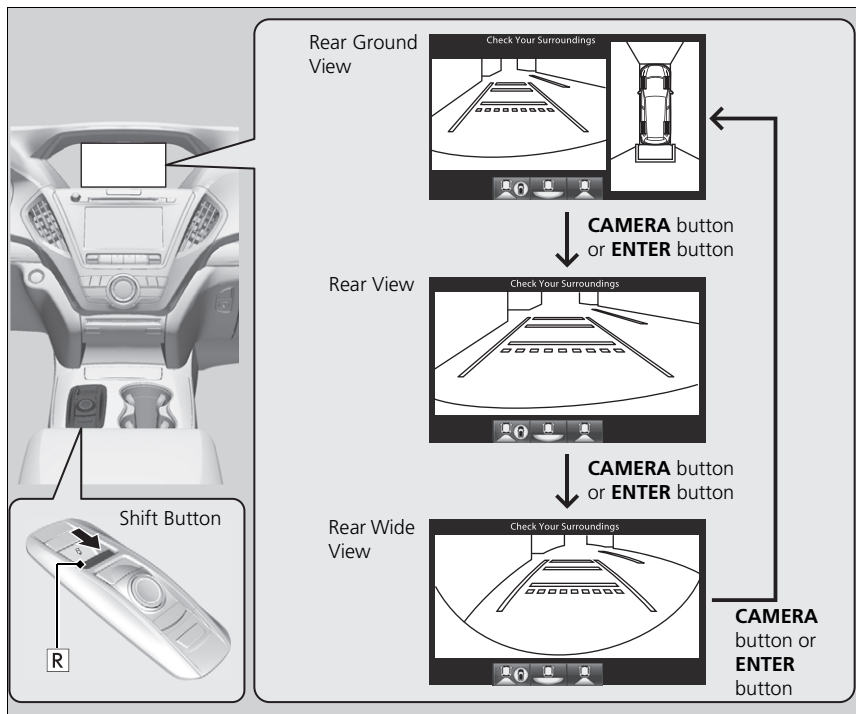

☞ Rear View Screen (When Gear Position is in [R] Position)

⚠ CAUTION




Visually confirm safety around the vehicle with your own eyes and/or using the mirrors.

The view area displayed on the screen is restricted. It may not show all people or obstacles around you. Relying only on the view on the screen may cause an accident.

Minimize the time spent looking at the view screen while driving.

Failure to do so may cause an accident as you cannot pay sufficient attention to your surroundings.

You can also select to switch the display for the following marks on the screen.


- : Rear Ground View
- : Rear Normal View
- : Rear Wide View

Backing Up The Vehicle into a Parking Space Marked with Parking Lines


When backing up the vehicle into a parking space with parking lines, the parking guide lines of the Surround View Camera System provide support to the driver during parking.

■ Before Parking

The rear reference guide lines of the Surround view camera system can be used in a parking space marked with parking lines, such as that shown in the figure below.

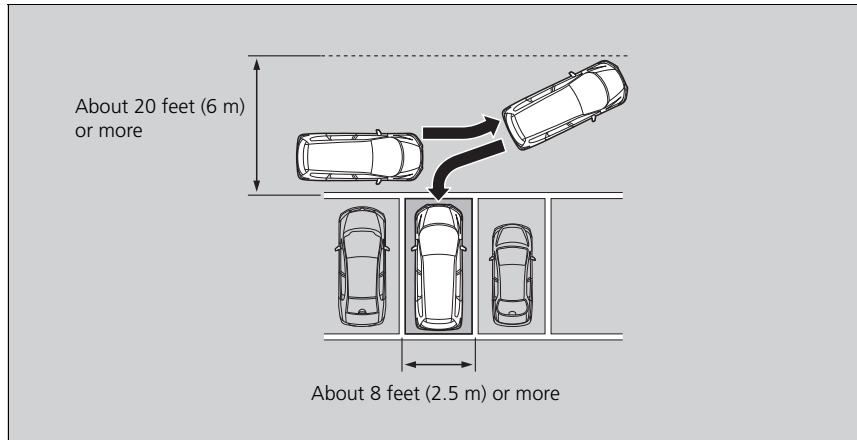


■ Selecting Rear Reference Lines

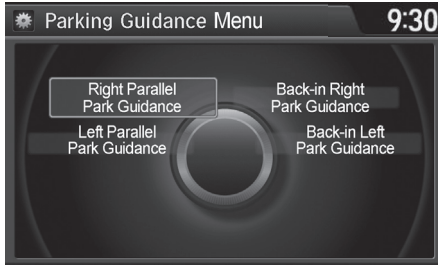


1. Press the **CAMERA** button while the vehicle is stopped.
2. Press the **MENU** button.
3. Select Back-in left park guidance or Back-in right park guidance.

■ How to park

The following section describes how to back up the vehicle into a parking space with the rear right of the vehicle in first.

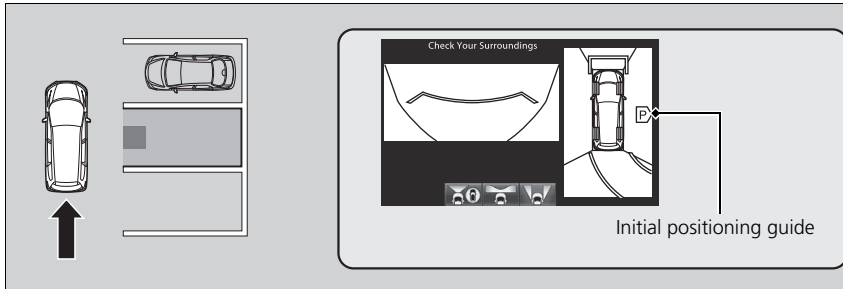

1. Move the vehicle forward perpendicular to the parking space and stop where the initial positioning guide comes to the center of the parking space.

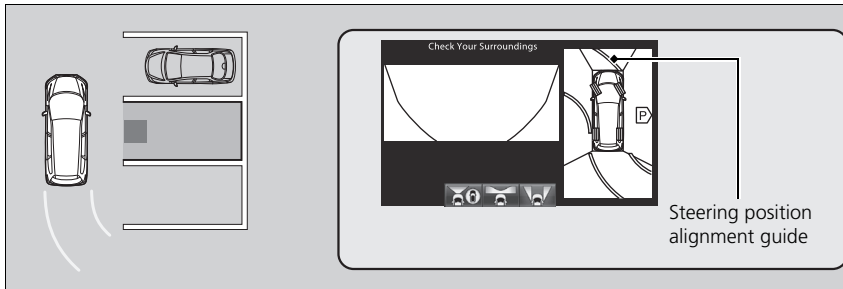


2. Turn the steering wheel fully to the left while stopped.
 - ▶ The steering position alignment guide is displayed.


☒ How to park

When you need operation instruction, press and hold the **CAMERA** button while the parking guide screen is displayed. The instruction screen appears on the screen. To close the Instruction screen, press the **BACK** button or press and hold the **CAMERA** button.

3. Slowly move the vehicle forward with the steering wheel turned fully to the left.

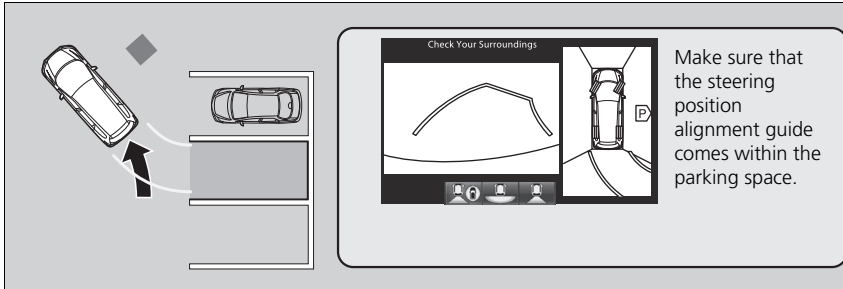

4. Stop the vehicle when the steering position alignment guide enters the parking space.

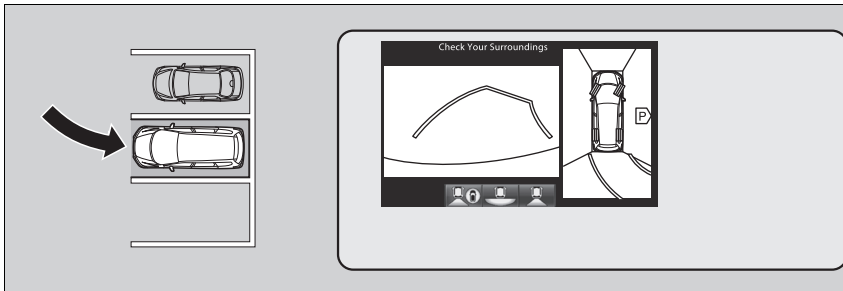

5. Turn the steering wheel fully to the left while stopped and back up the vehicle slowly.

6. Stop the vehicle when it is parallel to the parking lines.


7. Straighten the steering wheel, back up, and park the vehicle in the proper position.

How to park


If the steering position alignment guide does not fit in the parking lines, the parking space is too small for the vehicle.

This system does not work for:

- Parking spaces with crooked parking lines.

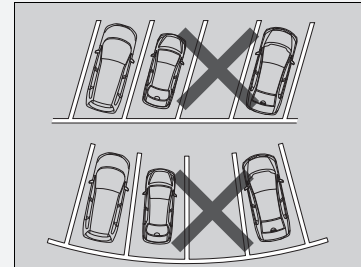

- Parking spaces where the surrounding vehicles are parked off the parking lines.

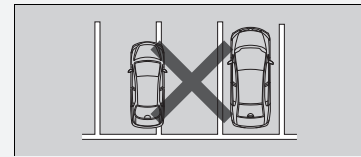


Parallel Parking the Vehicle into a Parking Space Marked with Parking Lines

The parallel parking guide lines of the Surround View Camera System provide support to the driver while parking in parking spaces, such as that shown in the figure below.

■ Before Parking


The rear reference guide lines of the Surround View Camera System can be used in a parking space marked with parking lines, such as that shown in the figure below.

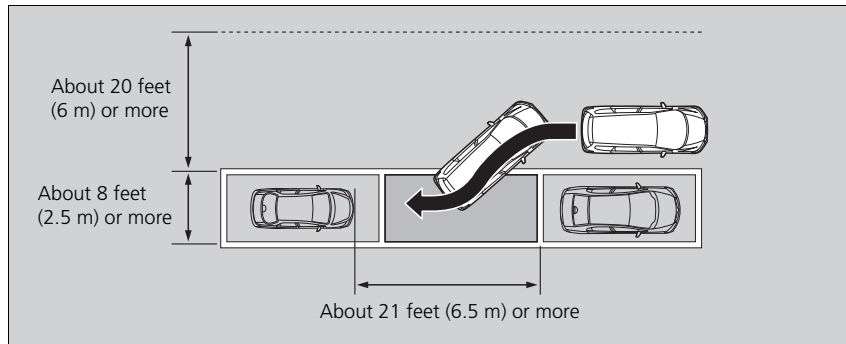

You may need to try more than once before parking the vehicle in the parking space properly depending on the condition of the space.

In such a case, adjust the vehicle position while looking around the vehicle to park the vehicle in the proper parking position.


■ Selecting Parallel Park Reference Lines

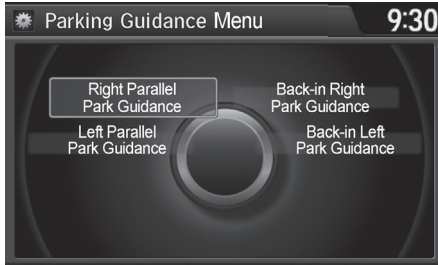


1. Press the **CAMERA** button while the vehicle is stopped.
2. Press the **MENU** button.
3. Select Left parallel park guidance or Right parallel park guidance.

■ How to park

The following section describes how to parallel-park the vehicle into a parking space at the right side of the street.

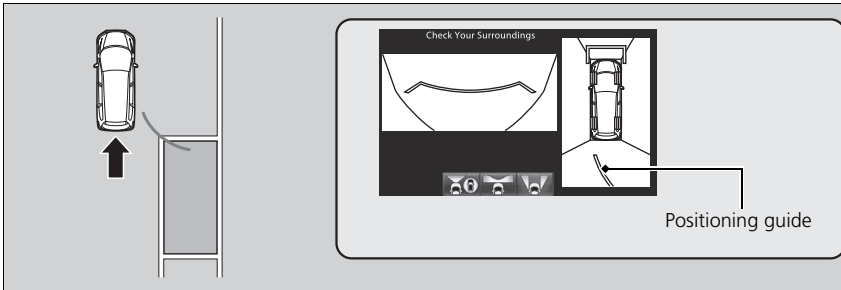

1. Move the vehicle forward parallel to the parking space and stop where the initial positioning guide overlaps the front corner of the parking space.

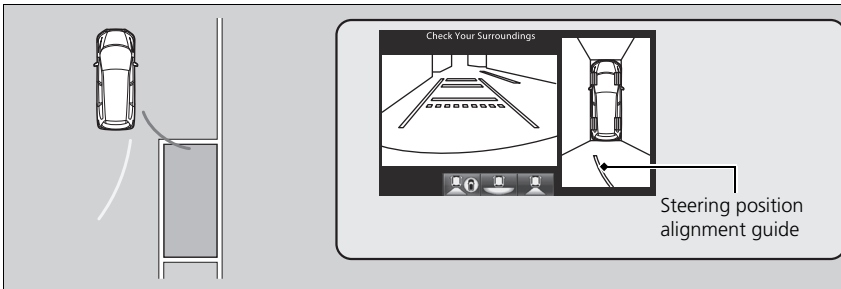


2. Turn the steering wheel fully to the right while stopped.
 - ▶ The steering position alignment guide is displayed.


☒ How to park

When you need operation instruction, press and hold the **CAMERA** button while the parking guide screen is displayed. The instruction screen appears on the screen. To close the Instruction screen, select press the **BACK** button or press and hold the **CAMERA** button.

3. Slowly back up the vehicle with the steering wheel turned fully to the right.

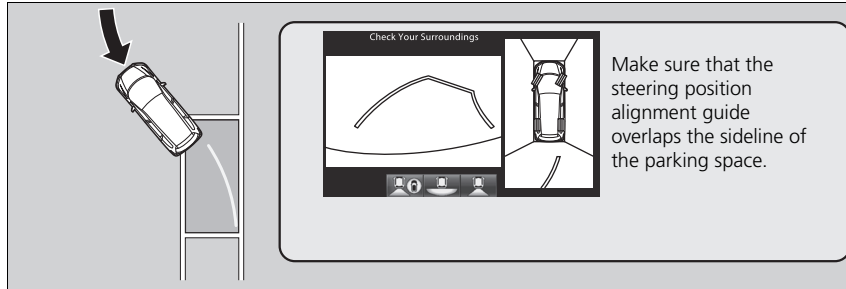

4. Stop the vehicle when the steering position alignment guide overlaps the sideline of the parking space.

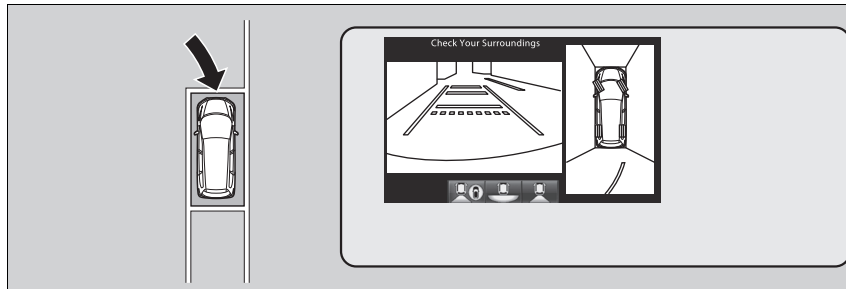

5. Turn the steering wheel fully to the left while stopped and back up the vehicle slowly.

6. Stop the vehicle when it is parallel to the parking lines.


7. Straighten the steering wheel, and then back up and park the vehicle at the proper position.

⌘ How to park


Always take care when backing up, and look behind you for obstacles.

This system does not work for:


- Parking spaces with crooked parking lines.

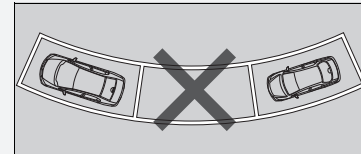

- Parking spaces where the surrounding vehicles are parked off the parking lines.

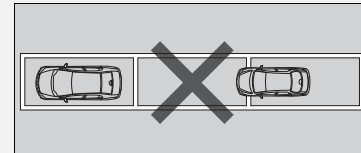

- Parking spaces without parking lines.

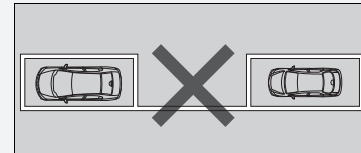

Checking for Obstacles at the Rear of the Vehicle


Display the rear view screen to check for any obstacles at the rear of the vehicle when backing up the vehicle into a garage or the like.

Switch between the rear view and ground view, as well as the rear view and mirror view accordingly.

☒ Checking for Obstacles at the Rear of the Vehicle

Each guide line display can be turned ON/OFF.

The four cameras provide the ground view on the screen even when the door mirrors are folded. Note that the view area and blind spots change when the door mirrors are folded.

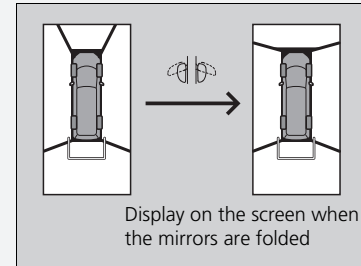

⚠ CAUTION


Do not drive the vehicle with the door mirrors folded.


The view displayed on the screen when the door mirrors are folded is for confirming the safety around the vehicle during parking.

■ Description and operation of the screens

Change the gear position to **R**.

► Display the rear ground view screen.

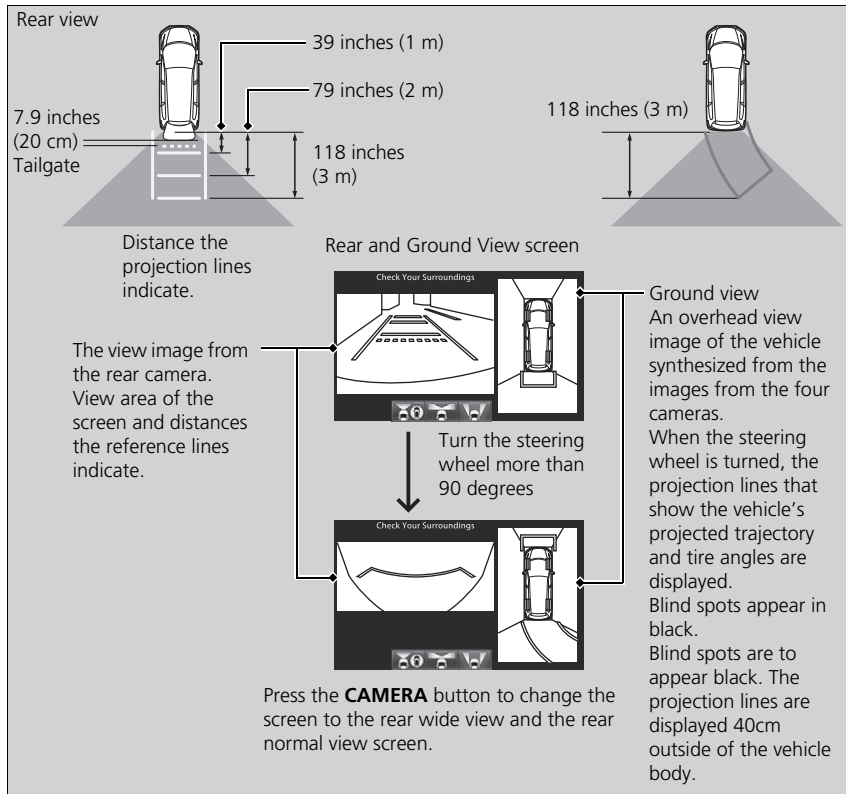

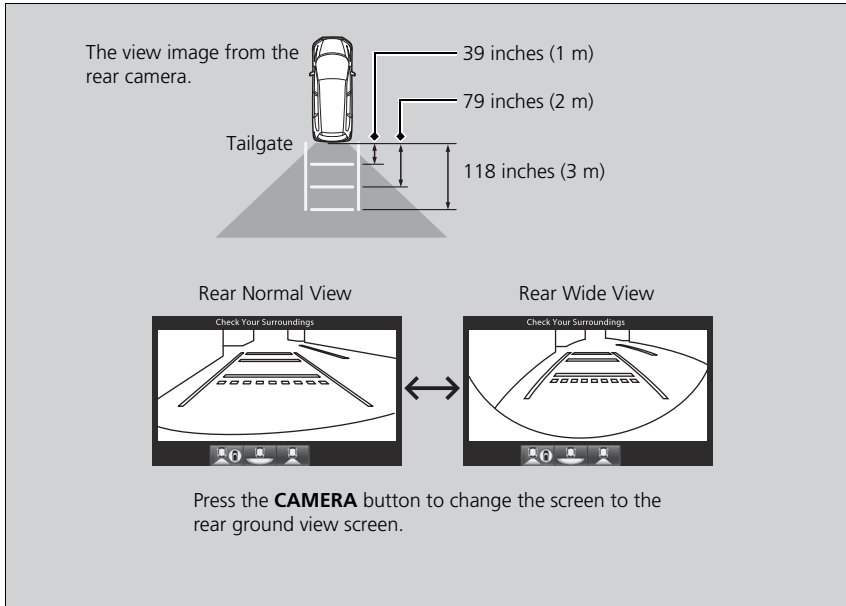

▶▶ Checking for Obstacles at the Rear of the Vehicle

Each side view is not displayed when the door mirrors are folded.


Checking the Right and Left Sides of the Vehicle at Intersections with Poor Visibility

Display the front blind view screen when conforming the right and left sides of the vehicle at intersections with poor visibility.

■ Description and Operation of the Screens

To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).

▶ Display the front blind view screen.

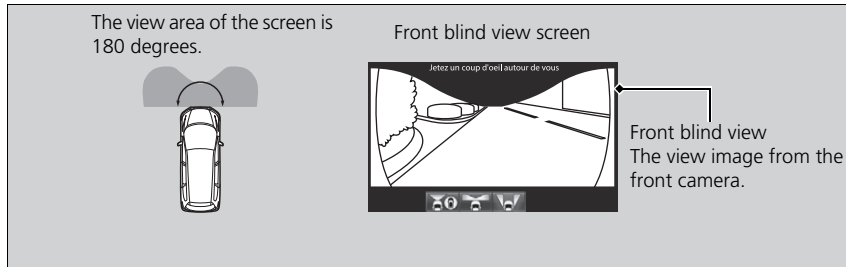

☒ Checking the Right and Left Sides of the Vehicle at Intersections with Poor Visibility

As the system uses a wide-angle view, the displayed images on the screen will be largely distorted and different from the actual distance.

The front blind view screen is switched in the order shown in the figure on P. 359.


Checking for Obstacles in Front of the Vehicle

Display the front view and ground view screen to check for any obstacles in front of the vehicle when parking the vehicle in a garage or the like.

■ Description and Operation of the Screens

To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).

▶ Display the front view and ground view screen.

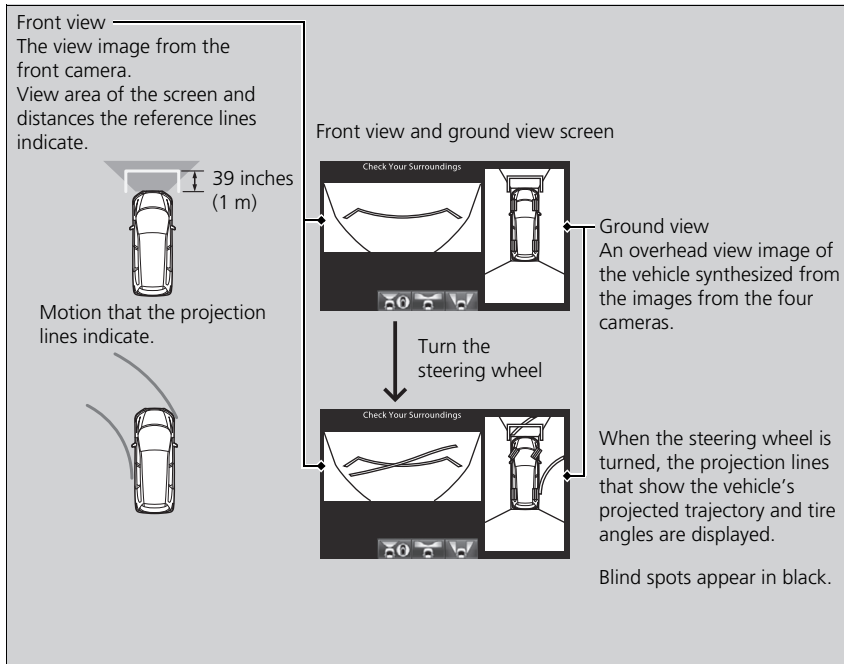


☒ Checking for Obstacles in Front of the Vehicle

Each guide line display can be turned ON/OFF.

The front view and ground view screen are switched to in the order shown in the figure on P. 359.

The four cameras provide the ground view on the screen even when the door mirrors are folded. Note that the view area and blind spots change when the door mirrors are folded.

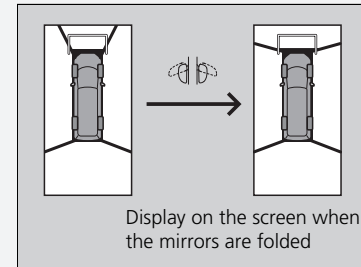

⚠ CAUTION

Do not drive the vehicle with the door mirrors folded.

The view displayed on the screen when the door mirrors are folded is for confirming the safety around the vehicle during parking.

Checking for Obstacles Around the Front Sides of the Vehicle


Display the side view screen to check the right and left sides of the vehicle when pulling up the vehicle to a curve or tollbooth or passing an oncoming car in a narrow driving condition.

The left side view screen displays only the left side view, and the right and left side view screen display the views of both sides. Switch the screens accordingly.

■ Description and Operation of the Screens

Display the side view and ground view screen.

- ▶ To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).

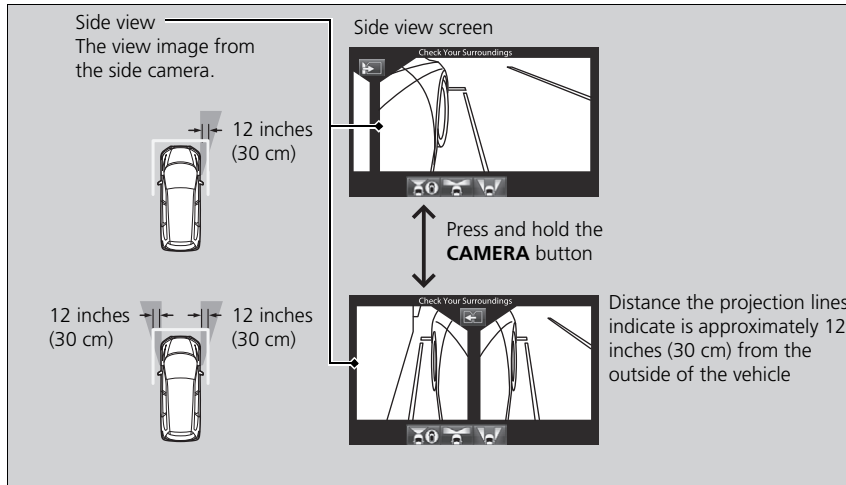

⊠ Checking for Obstacles Around the Front Sides of the Vehicle

Each guide line display can be turned ON/OFF.


When the door mirrors are folded, the side view screen is not displayed.

The side view screen is switched in the order shown in the figure on P. 359.

Customized Surround View Camera System

🔑 CAMERA button ▶ SETTINGS button ▶ Camera Settings

Set the camera screen settings.

 
 
 
 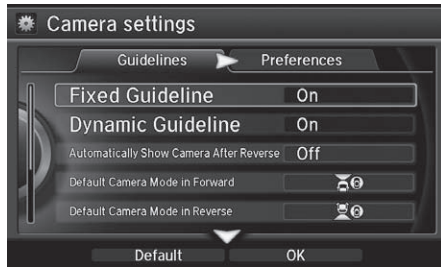

 
 
 

 

 


The following items are available:




 
 

 





- **Fixed Guideline:** Sets whether to turn the display of the reference lines on or not.
On: Displays the reference lines.
Off: Disables the feature.
- **Dynamic Guideline:** Sets whether to turn the display of the projection lines on or not.
On: Displays the projection lines.
Off: Disables the feature.
- **Automatically Show Camera After Reverse:** Sets whether to automatically switch between the cameras to use when the gear position is changed out of **R** to move the vehicle forward.
On
Off

- **Default Camera Mode in Forward:** Sets which screen to display when the multi-view camera system is turned on while the vehicle is moving forward.
 - Front ground view
 - Last Used
 - Front blind view
 - Side view
- **Default Camera Mode in Reverse:** Sets which screen to display when the multi-view camera system is turned on while the vehicle is backing up.
 - Rear ground view
 - Last Used
 - Rear normal view
 - Rear wide view
- **Show Camera When Decelerating:** Sets whether to automatically return the display to the camera view screen when the vehicle speed is reduced to lower than 7 mph (12 km/h), after the display is switched from the camera view screen to audio/information screen when the vehicle speed exceeds 9 mph (15 km/h) while the Surround View Camera System is on.
 - On
 - Off
- **Clear Parking Guidance Automatically:** Sets whether to automatically turn the display of the parking guide lines off or not.
 - On: Displays the parking guide lines.
 - Off: Disables the feature.
- **Display:** Adjust the screen's preferences.

Backing up using the parking guide lines

Vehicle position	Cause	Solution	Reference page
Turns too big.  	Did you turn the steering wheel before the initial positioning guide enters the parking space? 	<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the center of parking space. 	☑ Backing Up The Vehicle into a Parking Space Marked with Parking Lines P. 361
	Did you turn the steering wheel before the steering position alignment guide enters the parking space while backing up? 	<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the steering position alignment guide fits in the parking space. 	
	Did you fully turn the steering wheel while backing up?	<ul style="list-style-type: none"> Fully turn the steering wheel when steering. 	
Turns too short.  	Did you turn the steering wheel after the initial positioning guide comes outside of the parking space? 	<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the center of the parking space. 	
	Did the steering position alignment guide come off of the parking space while backing up? 	<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the steering position alignment guide fits in the parking space. 	
The projection line is off.	-	<ul style="list-style-type: none"> The position is automatically corrected after continuing to drive for a short amount of time. 	

 Parallel-parking using the parking guide lines

Vehicle position	Cause		Solution		Reference page
<p>Too deep.</p> 	<p>Did the steering position alignment guide come off of the curbside line of the parking space while backing up?</p>		<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the steering position alignment guide overlaps with the curbside line of the parking space. 		<p>▶ Parallel Parking the Vehicle into a Parking Space Marked with Parking Lines P. 365</p>
	<p>Did you fully turn the steering wheel while backing up?</p>		<ul style="list-style-type: none"> Fully turn the steering wheel when steering. 		
<p>Too shallow.</p> 	<p>Did you turn the steering wheel before the steering position alignment guide overlaps with the curbside line of the parking space while backing up?</p>		<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the steering position alignment guide overlaps with the curbside line of the parking space. 		
<p>Too close to the vehicle in front.</p> 	<p>Did you turn the steering wheel when the initial positioning guide is outside of the parking space?</p>		<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the corner of the parking space. 		
<p>Too close to the vehicle behind.</p> 	<p>Was the initial positioning guide inside of the parking space?</p>		<ul style="list-style-type: none"> Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the corner of the parking space. 		
	<p>Did you fully turn the steering wheel while backing up?</p>		<ul style="list-style-type: none"> Fully turn the steering wheel when steering. 		
<p>The projection line is off.</p>	-		<ul style="list-style-type: none"> The position is automatically corrected after continuing to drive for a short amount of time. 		

About camera view image

Condition	Cause	Solution	Refer to:
Camera view images are hard to see.	<p>The images may not be displayed clearly when:</p> <ul style="list-style-type: none"> • At night, in rainy condition, and a dark location. • The camera lens has insects, moist, or debris stuck to the camera lens. • The camera lens is scratched. • The temperature of the camera is high. • Strong light such as the sun's light shines on the camera.*1 • When light shines on the camera in a dark location. <p>*1: When strong light shines on the camera, halation which fogs around the light source or smearing which creates the streaks of the light may occur.</p>	<ul style="list-style-type: none"> • When the camera view image is not clearly displayed due to weather conditions, etc, visually confirm the safety using mirrors. 	-
Camera view images are not clear.	<p>If the camera lens is dirty, clear images are not displayed.</p>	<ul style="list-style-type: none"> • When the camera lens is dirty, wipe off the dirt, debris, and the like using water, mild detergent, or glass cleaner. • Never use any benzine, thinner, or polishing powder such as cleanser. It will cause damage to the lens. 	-
Camera position is shifted.	<p>The camera body or its surrounding parts have been subject to some severe impact or pressure.</p>	<ul style="list-style-type: none"> • Do not have any severe impacts or pressures on the camera body or its surrounding parts. • In case of being subject to an impact, stop using the camera and contact a dealer. 	-

The HomeLink® Universal Transceiver can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

■ Important Safety Precautions

Refer to the safety information that came with your garage door opener to test that the safety features are functioning properly. If you do not have the safety information, contact the manufacturer.


Before programming HomeLink, make sure that people and objects are out of the way of the garage or gate to prevent potential injury or damage.

When programming a garage door opener, park just outside the garage door's path.

🔗 HomeLink® Universal Transceiver

Before programming HomeLink to operate a garage door opener, confirm that the opener has an external entrapment protection system, such as an "electronic eye," or other safety and reverse stop features. If it does not, HomeLink may not be able to operate it.

Training HomeLink

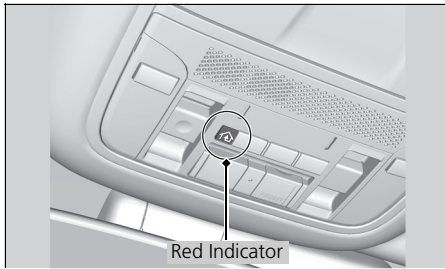


If it is necessary to erase a previously entered learned code:

- Press and hold the two outside buttons for about 20 seconds, until the red indicator blinks. Release the buttons, and proceed to step 1.
- If you are training the second or third button, go directly to step 1.


The instructions on the next page should work for most gate or garage openers, but may not work for all. For detailed instructions about your specific remote opener, visit <http://www.homelink.com> or call (800) 355-3515.

■ Training a Button

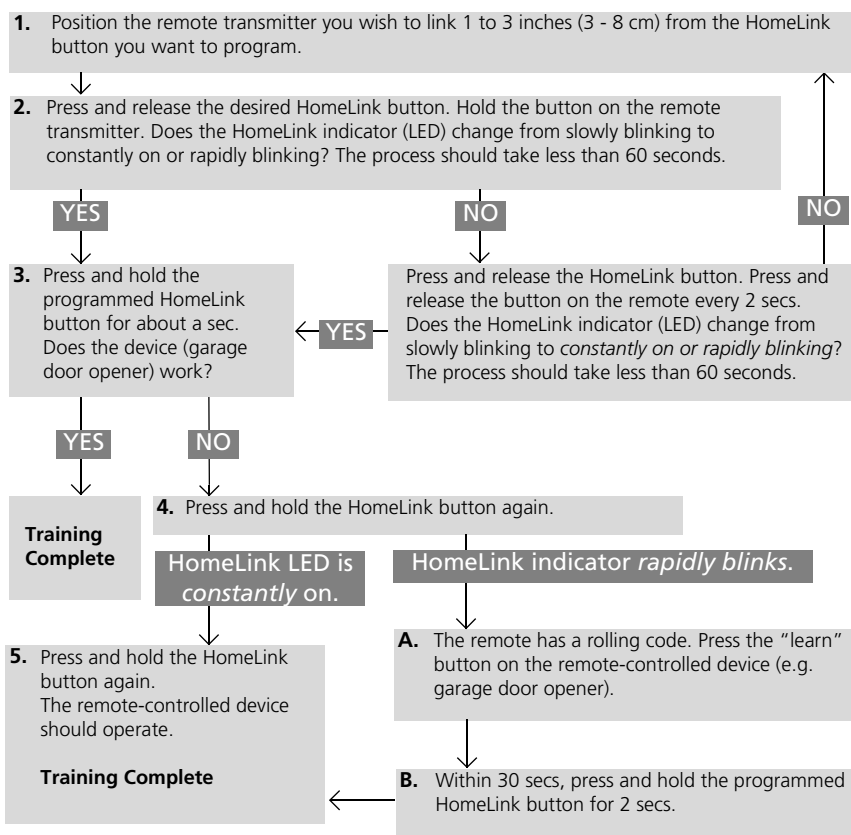

▶▶ Training HomeLink

Retraining a Button
 If you want to retrain a programmed button for a new device, you do not have to erase all button memory. You can replace the existing memory code using this procedure:

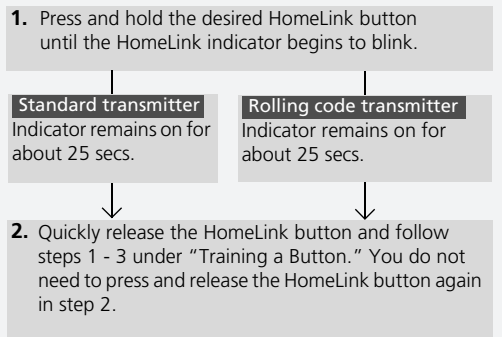

Erasing Codes
 To erase all the codes, press and hold the two outside buttons until the HomeLink indicator begins to blink (about 10 to 20 secs). You should erase all codes before selling the vehicle.

If you have any problems, see the device's instructions, visit www.homelink.com, or call HomeLink at (800) 355-3515.



HomeLink® is a registered trademark of Gentex Corporation.






Troubleshooting

Troubleshooting	384	Aha™ Radio	398
Map, Voice, Entering Destinations.....	384	Surround View Camera *	398
Traffic	386		
Guidance, Routing	387		
Update, Coverage, Map Errors	389		
Display, Accessories	389		
Multi-View Rear Camera	389		
Miscellaneous Questions	390		
Error Messages	391		
Navigation System	391		
CD Player.....	392		
Hard Disc Drive (HDD) Audio	393		
iPod/USB Flash Drive	394		
Pandora®*	395		

* Not available on all models

Map, Voice, Entering Destinations

Problem	Solution
The Startup Confirmation screen is displayed every time I start the car.	This is normal. The Startup Confirmation screen reminds you and your guest drivers to always operate the navigation system in a safe manner. The Startup Confirmation screen goes off after a certain period of time and the top screen of the last mode is displayed.
The navigation system reboots by itself (returns to the opening screen).	A reboot can be caused by extreme temperatures or shock from bumpy roads, and does not necessarily indicate a problem. If this happens frequently, please see a dealer.
How do I specify a destination when an entered city or street could not be found?	<ul style="list-style-type: none"> • Try entering the street first. Some cities are lumped in with a major metro area. In rural "unverified" areas or new subdivisions, streets may be missing or only partially numbered. • Try selecting the destination directly from the map. <p> Map Input P. 148</p>
Why do some letters become grayed out when I enter an address?	As you enter each letter in an address or a place/landmark, the navigation system looks in the database to see what letters are possible and grays out letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	<ol style="list-style-type: none"> 1. Press the SETTINGS button. Select Navi Settings > Personal Info to display the types of information. 2. Select the type of address to delete. 3. Select Delete.
I cannot hear the navigation system voice.	<ol style="list-style-type: none"> 1. Press the SETTINGS button. Select System Settings and check that Guidance Volume is not set to 0. 2. Select Voice Reco and set Voice Prompt to On.
Why is Call grayed out on the Calculate Route screen?	Your phone is not paired to Bluetooth® HandsFreeLink® or, if paired, your phone is in use.  Bluetooth® HandsFreeLink® P. 266

Problem	Solution
The voice control system is having difficulty recognizing my voice commands.	Check that the vents are not blowing air onto the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking.  Voice Recognition P. 25
I cannot give voice commands.	Make sure you selected OK at the Startup Confirmation screen.  Start-up P. 22
I cannot select an option using the Interface Dial.	To reduce potential driver distraction, certain onscreen functions and features are limited or inoperable while the vehicle is moving. Use voice commands or pull over to proceed.
The navigation system pronunciation of street names in the guidance command or destination address sounds strange.	The basic guidance phrases use a studio-recorded voice, but street names are pronounced using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.
The screen is bright when I drive at night.	<ol style="list-style-type: none"> 1. Check that the nighttime dashboard brightness control is not set to maximum. 2. Press the SETTINGS button. Select Navi Settings > Map > Color (Night).  Color P. 75
The screen is dark when I drive during the day.	Press the SETTINGS button. Select Navi Settings > Map > Color (Day) .  Color P. 75
How do I change or remove my PIN?	<ol style="list-style-type: none"> 1. Press the SETTINGS button. Select Navi Settings > Personal Info > PIN Number > Address Book PIN or Go Home PIN. 2. Enter your existing PIN. You then have the choice to change or remove the PIN.  PIN Numbers P. 49
I have forgotten my PIN. How do I reset the PIN for Home or the PIN for personal addresses?	A dealer must reset the PIN for you.




Traffic

Problem	Solution
Traffic information is missing or is not displaying properly. What is wrong?	<ul style="list-style-type: none"> • Check that the traffic status indicator is available on the map screen. <ul style="list-style-type: none"> ➤ Traffic Information */AcuraLink Real-Time Traffic* P. 10 • Traffic information relies on a clear signal. If signal strength is low, traffic data may not be available. • Check that the traffic icons are turned on. <ul style="list-style-type: none"> ➤ Showing Icons on Map P. 73 • Check the AcuraLink® subscription status.*1 <ul style="list-style-type: none"> ➤ AcuraLink® P. 314 • There may be a temporary technical problem in your metropolitan area. Call Acura Client Relations to see if there is an outage. <ul style="list-style-type: none"> ➤ Acura Client Relations Contact Information P. 404 • If the situation persists, see your Acura dealer for assistance. • Traffic information is available only in certain areas.
The navigation system sometimes provides a detour route when I am driving a route on the freeway/highway.	If Traffic Rerouting is set to On , the navigation system provides a detour route to your destination only if it can find a significantly faster route than the original one. <ul style="list-style-type: none"> ➤ Traffic Rerouting P. 60
The navigation system routes me to an exit and an alternate freeway/highway with unknown flow speeds or surface streets.	The navigation system predicts which route should be faster based on freeway/highway congestion along your route. Use your own experience to determine whether the alternate route would be faster.
How can I ignore the detour route and return to the original route?	Press the SETTINGS button. Select Navi Settings > Routing , and set Traffic Rerouting to Off . <ul style="list-style-type: none"> ➤ Traffic Rerouting P. 60

*1: Canadian models

Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go or the same way as other mapping systems.	The navigation system attempts to generate the optimal route. You can change the route preferences used when calculating a route. ➤ Route Preference P. 56
The navigation system wants to route me around potential traffic problems. How do I stop these pop-up messages?	Press the SETTINGS button. Select Navi Settings > Routing , and set Traffic Rerouting to Off . ➤ Traffic Rerouting P. 60
The street I'm on is not shown on the map screen.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. ➤ Map Coverage P. 405
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	This is normal. The signals received from the GPS satellites are extremely weak and can easily be interrupted or interfered as your vehicle travel near tall buildings or in tunnels. Check your vehicle surroundings for anything that may be blocking the reception. If this happens frequently and there is no obstruction that is interfering with reception, please see a dealer. ➤ GPS P. 402
The blue highlighted route and voice guidance stopped or turned into a blue/pink line before I got to my destination.	Your route has entered an unverified area. ➤ Unverified Routing P. 58
How do I stop the map from rotating as I drive along?	Press the SETTINGS button. Select Navi Settings > Map > View > North-up .
The "time to destination" display sometimes increases even though I am getting closer to my destination.	If your speed reduces due to slower traffic, the navigation system updates the "time to destination" based on your actual road speed to give you a better estimate of arrival time.
The vehicle position icon on the map "lags" a short distance behind, especially when I arrive at an intersection.	This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal. ➤ GPS P. 402

Problem	Solution
The screen is showing white dots as I drive along.	These dots are called “breadcrumbs.” These are displayed if Display Tracking is set to On .
How do I remove the white dots (“breadcrumbs”) from my screen?	Press the SETTINGS button. Select Navi Settings > Map , set Display Tracking to Off or select Delete Tracking to remove the white dots from the map.  Display Tracking P. 86
A road that I selected to avoid is being used when routing.	When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection.  Avoided Area P. 62
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal. The elevation can vary ± 100 ft (± 30 m) due to GPS calculation errors.  GPS P. 402
My elevation is missing on the “current position” screen.	The elevation is only displayed if the GPS antenna can receive signals from at least four satellites. Try moving the vehicle into an open area. The elevation is also not displayed if the calculated elevation is zero or below sea level.

Update, Coverage, Map Errors

Problem	Solution
My city is not part of a fully verified detailed coverage area.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. ➤ Map Coverage P. 405
Does the navigation system work outside North America?	The navigation system contains maps for the 50 U.S. states, Canada, Puerto Rico, and Mexico. The navigation system will not work in other countries. ➤ Map Coverage P. 405
How do I report errors I find in the database?	Minor errors are bound to occur in a large database. If you encounter major errors, see your dealer. ➤ Visiting Your Dealer P. 404


Display, Accessories

Problem	Solution
The display appears dim when starting the car in really cold weather.	This is normal. The display will become brighter after a few minutes.


Multi-View Rear Camera

Problem	Solution
When I shift gears, the rear camera image display is delayed.	This is normal. When shifting into or out of Reverse, you may experience a delay while the screen image switches between the audio/information screen and the rear camera image.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, rotate the Interface Dial to adjust the brightness. This adjustment does not affect the audio/information screen brightness settings.

 Miscellaneous Questions

Problem	Solution
My battery was disconnected or went dead, and the navigation system is asking for a code.	Set the power mode to ON, and press and hold the  (Power) button for two seconds. The system should reactivate. If you have installed an aftermarket system, contact a dealer.

Surround View Camera*





Problem	Solution
When I shift gears, the rear camera image display is delayed.	This is normal. When shifting into or out of Reverse, you may experience a delay while the screen image switches between the audio/information screen and the rear camera image.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, press the SETTINGS button and select Camera Settings > Surround View Camera > Preference > Display , and select or  to adjust the brightness. This adjustment does not affect the audio/information screen brightness settings.

Navigation System

Error Message	Solution
The display temperature is too high. For protection, the system will shut off until the display cools down.	This message appears briefly when the display temperature is too high. The navigation system turns off until the display cools down. The system turns back on automatically when the display cools down.
The navigation system temperature is too low. For protection, the system will shut off until the it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
The navigation system atmospheric pressure is too low. For protection, the system will shut off until the pressure returns to safe levels.	The HDD is inoperable due to low atmospheric pressure. Move your vehicle to the place where the atmospheric pressure is high.
The navigation system temperature is too high. For protection, the system will shut off until it cools down.	The navigation system has difficulty reading the HDD when the temperature is high. The navigation system starts up automatically when the system cools down.
HDD access error. Please consult your dealer.	Writing of the data to the HDD failed with a cause other than low temperature, high temperature, and low atmospheric pressure. After a short wait, try to operate the system again. If this does not solve the problem, consult with the dealer.
HDD access error. The system will reset and attempt to correct the problem.	

 CD Player

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul style="list-style-type: none"> Current track/file will be skipped. The next supported track/file plays automatically.
Bad Disc Please Check Owner's Manual Push Eject	Mechanical error	<ul style="list-style-type: none"> Press the  (eject) button and remove the disc, and check that the error message is cleared.
Mecha Error		<ul style="list-style-type: none"> Check that the disc is not damaged or deformed, and insert the disc again.  Protecting CDs P. 226
Bad Disc Please Check Owner's Manual	Servo error	<ul style="list-style-type: none"> If the error message reappears, press the  (eject) button, and pull out the disc. Insert a different disc. If the new disc plays, there is a problem with the first disc. If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.
Check Disc	Disc error	<ul style="list-style-type: none"> Check that the disc is not damaged or deformed.  Protecting CDs P. 226
Heat Error	High temperature	<ul style="list-style-type: none"> Turn the audio system off and allow the player to cool down until the error message is cleared.

Hard Disc Drive (HDD) Audio

If an error occurs while playing the Hard Disc Drive (HDD) Audio, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Cause
HDD access error. Please consult your dealer.	—
The navigation system temperature is too high. For protection, the system will shut off until it cools down.	Turn the audio system off and allow the player to cool down until the error message is cleared.
The navigation system temperature is too low. For protection, the system will shut off until it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
Unplayable File	Appears when a file format not supported. Current track will be skipped. The next supported track plays automatically.

iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Cause
USB Error	Appears when there is a problem with the audio system. Check if the device is compatible with the audio system.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
Unsupported Version	Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version.
Connect Retry	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
Unplayable File	Appears when the files in the USB flash drive are DRM or an unsupported format. This error message appears for about 3 seconds, then plays the next song.
No Data	<p>iPod Appears when the iPod is empty.</p> <p>USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive.</p> <p>iPod and USB flash drive Check that compatible files are stored on the device.</p>
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

U.S. models

Pandora®*

If an error occurs while playing Pandora®, you may see the following error messages.

If you cannot clear the error message, contact a dealer.

Error Message	Cause	Solution
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected.	Disconnect the device. Then turn the audio system off, and turn it again. Do not reconnect the device that caused the error.
Audio/Information screen There is no station list in the device. Please add the station list to your device. On Demand Multi-Use Display™ No stations have been created. Please create a station on the device.	Appears when there is no station list on the device.	Use the device to create a station.
Music licenses force us to limit the number of tracks you may skip each hour.	Appears when you try to skip a song or select Dislike over the predetermined number of times in an hour.	Try again later.
Unable to save rating. Unable to save bookmark.	Appears when the commanded operation has failed.	Try again later.
No data	Appears when no data is available with Pandora® activated.	Reboot the app and reconnect the device.
Unsupported PANDORA App version is not supported.	Appears when Pandora® version is not supported.	Update Pandora® to the latest version.
PANDORA system maintenance	Appears when the Pandora® server is in maintenance.	Try again later.

* Not available on all models

Error Message	Cause	Solution
Cannot connect to PANDORA. When stopped, check your mobile device.	The Pandora® app failed to start because of the following device errors: <ul style="list-style-type: none"> • The display on your smartphone is turned off. • Your smartphone is locked. • The home screen or the app screen (music screen) is not displayed on your smartphone. • The track is not played on your smartphone even after 30 seconds have passed. • The Pandora® app is not installed in your device, or the Pandora® version is not supported. 	<ul style="list-style-type: none"> • Turn the phone screen on, and make sure it is unlocked. • The Pandora® version is not supported. Update to the latest version.
When not driving, please see mobile device.	The Pandora® app in your smartphone is not compatible with the app launcher system.	Download the most recent version of the Pandora® app.
	The required app is not installed.	Download the HondaLink app from www.hondalink.com .
The maximum number of stations that can be created is 100. To create more, please delete one or more previously created stations.	Appears when the number of created stations reaches the limitation.	Delete the unneeded stations from the Station List.
Unable to create new station. Please try again.	Appears when you try to create a new station.	Try again later.

Error Message	Cause	Solution
Unable to play PANDORA. Please try again later.	Appears when you try to play PANDORA.	Try again later.
Unable to play PANDORA. Music licensing restricts play in this area.		Try again later.
Unable to play PANDORA. When stopped, log-in to PANDORA.		Log in to the PANDORA sever.
This PANDORA station is currently not available. Please select another station.	Appears when the station you selected is not currently available.	Select another station.

Aha™ Radio

If an error occurs while playing Aha™ Radio, you may see the following error messages.


If you cannot clear the error message, contact a dealer.

Error Message	Cause
Cannot connect to AcuraLink. When stopped, check your mobile device.	Appears when the Aha™ app is not activated. Check your device.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.

Surround View Camera *

If an error message is displayed, contact a dealer.

Reference Information



System Initialization	400	Obtaining a Navigation Update	405
Entering the Security Code	400	Traffic Information	406
Acquiring GPS Information	400	Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico	406
Startup Confirmation Screen	401	Legal Information	407
Map Matching	401	Copyrights	407
System Limitations	402	User Agreements	407
GPS	402	As required by the FCC	412
Address Calculation	402		
Database	402		
Client Assistance	404		
Resolving Problems	404		
Acura Client Relations Contact Information ...	404		
Visiting Your Dealer	404		
Map Coverage	405		


The navigation system must be initialized if power to the navigation system is interrupted for any reason (e.g., the battery was disconnected).

Entering the Security Code

In most cases, you do not need to enter a security code. Follow the steps below to reactivate the system.

Enter code

To enter the security code automatically, push and hold the audio power button for 2 seconds. If this does not work, manually enter the security code using the touch panel below.

1. Set the power mode to ON, and turn on the audio system.
2. Press and hold the  (Power) button for more than two seconds.
 - ▶ The system is reactivated when the system's control unit recognizes that the system is in your vehicle. If the control unit fails to recognize, you must go to a dealer and have the system checked.

Acquiring GPS Information

Depending on the length of time the power was interrupted, your system may require GPS initialization.

The navigation system lost power and is acquiring its location from the GPS satellites. This usually takes less than 10 minutes.

- * Start the engine.
- * Park the vehicle in an open area away from trees, power lines, and tall buildings.
- * Remove loose articles, mobile phones, or electrical accessories located near the GPS antenna.
- * If this screen is displayed repeatedly when starting the vehicle, see your dealer.

If initialization is not necessary, the system proceeds directly to the Startup Confirmation screen.

If the system fails to locate a sufficient number of satellites to locate your position within 10 minutes, the following screen is displayed.


Something is interfering with the system's ability to acquire its location. Check the following:


- * The vehicle must be in an open area with a clear view of the sky.
- * Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).
- * Check GPS antenna cable connection.
- * Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

If you are experiencing GPS reception problems:

 **GPS P. 402**

Startup Confirmation Screen

The Startup Confirmation screen is displayed when initialization has successfully completed. It is displayed every time you start your vehicle. Press  to select **OK** to continue.

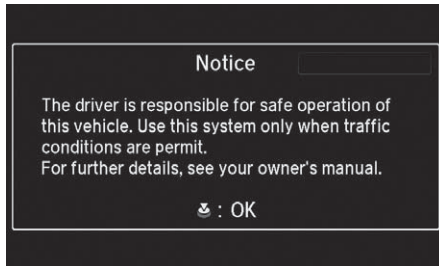

Map Matching

Map matching is the process of using the acquired GPS information to locate your position on the map screen. If you are on a mapped road, the name of the road is displayed along the bottom of the map screen when map matching is completed. Do not enter a destination until the road name is displayed.

The system may initially show your location on a different street (e.g., in urban areas where streets are close together), may show an incorrect elevation, or may delay the display of the vehicle position icon at intersections. This is normal; the system will correct itself while you drive.

GPS

The signals received from GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of the sky. The GPS antenna is located in the roof. The signal reception can easily be interrupted or interfered with by trees, tall buildings, freeway/highway overpasses, tunnels, or overhead electrical power wires.

GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into GPS for which the navigation system must constantly compensate. This can cause occasional positioning errors of up to several hundred feet or tens of meters.

Address Calculation

The destination icon shows only the approximate location of a destination address. This occurs if the number of possible addresses is different from the number of actual addresses on a block. For example, the address 1425 on a 1400 block with 100 possible addresses (because it is followed by the 1500 block) will be shown a quarter of the way down the block by the system. If there are only 25 actual addresses on the block, the actual location of address 1425 would be at the end of the block.

Database

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

For example, some places/landmarks may be missing when you search the database because the name was misspelled, the place was improperly categorized, or a place/landmark is not yet in the database. This is also true for police stations, hospitals, and other public institutions. Do not rely on the navigation system if you need law enforcement or hospital services. Always check with local information sources.

In addition, the map database contains verified and unverified areas. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. A message will warn you if your route includes unverified streets. Exercise additional caution when driving in unverified areas.

The database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Special events

Every effort has been made to verify that the database is accurate. The number of inaccuracies you experience increases the longer you go without obtaining an updated map database.

🗘 **Obtaining a Navigation Update** P. 405

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

Resolving Problems

If you run into a specific issue that you cannot resolve, consult the following help resources:

- For navigation system issues:
 - **Troubleshooting** P. 384
- There are also FAQs available online at www.acuranavi.com (U.S.) or www.acuranavi.ca (Canada).
- For traffic-related issues:
 - **Traffic** P. 386
- For reporting issues with the database or places/landmarks:
 - **Visiting Your Dealer** P. 404
- Call Acura Client Relations.
 - **Acura Client Relations Contact Information** P. 404

Acura Client Relations Contact Information

Acura Navi
American Honda Motor Co., Inc.
Acura Client Relations
Mail Stop 500-2N-7E
1919 Torrance Blvd.
Torrance, CA 90501-2746
Telephone: (800) 382-2238

Honda Canada Inc.
Acura Client Relations
180 Honda Boulevard
Markham, L6C 0H9, ON
E-Mail: acura_cr@ch.honda.com
Telephone: (888) 9-ACURA-9
Hours: 8:00 am to 7:30 pm
Monday to Friday (Eastern time)

Visiting Your Dealer

If you have a question that you cannot resolve using the available help resources, you can consult a dealer. Please identify the specific issue (e.g., error occurs when you enter a specific address, when driving on a certain road, or just when it's cold) so that the service technician can refer the issue to the factory so that a solution can be found. Be patient, the service technician may be unfamiliar with your specific issue.

Map Coverage

The navigation system provides map coverage for the United States, Canada, Puerto Rico, and Mexico. The map coverage consists of accurately mapped (verified) metropolitan areas and a less accurate (unverified) rural database. Note that unverified areas are constantly being reviewed and converted to verified areas each year.

This screen is an example.



Map coverage update information is available from Acura Client Relations or online at www.acuranavi.com (U.S.) or www.acuranavi.ca (Canada).

To find navigation system update information:

1. Visit the website.
2. Enter your vehicle model and model year.
3. Click Map Coverage to display a list of verified coverage areas on the most recent update.
4. Click Map Coverage Details to display a PDF document with a full listing of all coverage areas.
 - ▶ Adobe® Reader® is required for viewing and printing the Portable Document Format (PDF) documents. To download the latest version of Adobe Reader, visit <http://get.adobe.com/reader/>.

Obtaining a Navigation Update

Acura is continually expanding the scope of the navigation system. Navigation system software upgrades may be made available periodically, usually in the fall of each year. To purchase an update:

1. Obtain your vehicle's VIN number and the System/Device Information.
 - ▶ **System Device Information** P. 351
2. Call the Acura Navigation Disc Fulfillment Center at (888) 549-3798, or order online at www.acuranavi.com (U.S.) or www.acuranavi.ca (Canada).

An update is not available from a dealer. However, the dealer may assist you in obtaining one for you out of courtesy. There is no program for free updates.

Traffic Information

Continuously updated traffic information is available in certain areas across the lower 48 U.S. states, Hawaii, and some cities in Canada.

U.S. models

Visit automobiles.honda.com/traffic for a complete listing of coverage areas and other information.

Canadian models

To find traffic information:

1. Visit www.acura.ca/owners/acuralink.
2. Select Real-Time Traffic on the MDX.
3. Click AcuraLink Real-Time Traffic.

Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico

Map Coverage

All roads displayed on the map screens are verified roads. Information in this manual relating to “unverified” roads or areas is not applicable.

Address and Place Entry Screens

Entering a destination address or place/landmark on another island may result in a screen caution message. This is because there are no ferry routes between islands in the database.

Puerto Rico and Mexico

If **Street Name Guidance** is set to **On**, the street names will not be read out by voice guidance. This may change in a future data update.

Copyrights

- Infogroup-Data: Certain business data provided by Infogroup © 2011, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2011. All rights reserved.
- Building foot print: © ZENRIN CO., LTD. 2011. All rights reserved.
- Junction View Data: © ZENRIN USA, INC. 2011. All rights reserved.
- Brand icon: The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

User Agreements

Navigation System User Agreement

In using this HDD "Satellite Linked Navigation System" (the "HDD"), which includes HONDA MOTOR CO., LTD. software, ALPINE ELECTRONICS, INC. software, and Here database contents (hereinafter referred to as "Licensors"), you are bound by the terms and conditions set forth below. By using your copy of the HDD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the HDD to your dealer.

- The HDD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The HDD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.

- The HDD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The HDD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The HDD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The HDD is not to be used for commercial purposes.
- The Licensors do not guarantee to the client that the functions included in the HDD meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the HDD to the actual user or to any third party.
- The warranty on the HDD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the HDD.
- The right to use the HDD shall expire either when the user destroys the HDD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the HDD or software.

- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, convenience stores, and other businesses are displayed for your information and convenience, and in no way imply any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.
- The marks of companies displayed by this product to indicate business locations are the marks of their respective owners.
- The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the HDD or software.

Use, duplication, or disclosure of this HDD by or on behalf of the United States

government is subject to “Restricted Rights” as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Alpine Electronics, Inc., 20-1 Yoshima Kogyodanchi, Iwaki, Fukushima 970-1192 JAPAN., Here Corporation, 425 W Randolph St. Chicago, IL 60606, USA.

Navigation System END USER LICENSE AGREEMENT

You have acquired a device (“DEVICE”) that includes software licensed by Alpine Electronics, Inc. (collectively “ALPINE”) from an affiliate of Microsoft Corporation (collectively “MS”). Those installed software products of MS origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved. IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE INSTEAD, PROMPTLY CONTACT ALPINE

FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

- GRANT OF SOFTWARE LICENSE
This EULA grants you the following license: You may use the SOFTWARE only on the DEVICE.
- NOT FAULT TOLERANT
THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON ALPINE TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
- NO WARRANTIES FOR THE SOFTWARE
THE SOFTWARE is provided “AS IS” and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT

- OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR SOFTWARE THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.
- NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS, MICROSOFT CORPORATION AND/OR THEIR AFFILIATES BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).
 - SPEECH RECOGNITION
If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither ALPINE nor its suppliers

shall be liable for any damages arising out of errors in the speech recognition process.

- LIMITATIONS ON REVERSE ENGINEERING, DECOMPIATION, AND DISASSEMBLY
You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- ADDITIONAL SOFTWARE/SERVICES
The SOFTWARE may permit ALPINE, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-base service components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").
 - ▶ If ALPINE provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

- ▶ If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be licensor of the Supplemental Component(s).
- ▶ ALPINE, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.
- RECOVERY MEDIA
If SOFTWARE is provided by ALPINE on separate media and labeled "Recovery Media" you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.
- UPGRADES
If the SOFTWARE is provided by ALPINE separate from the DEVICE on separate media or via web download or other means, and is labeled "For Upgrade Purposes Only" you may install one (1) copy of such SOFTWARE onto the

DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

- **TERMINATION**

Without prejudice to any other rights, ALPINE or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

- **INTELLECTUAL PROPERTY RIGHTS**

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or suppliers. The SOFTWARE is licensed, not sold.

You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the

property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

- **TRADEMARKS**

This EULA does not grant you any rights in connection with any trademarks or service marks of ALPINE MS, Microsoft Corporation, their affiliates or suppliers.

- **PRODUCT SUPPORT**

Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to ALPINE support number

provided in the documentation for the DEVICE.

Should you have any questions concerning this EULA, or if you desire to contact ALPINE for any other reason, please refer to the address provided in the documentation for the DEVICE.

- **SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS**

You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

- **EXPORT RESTRICTIONS**

You acknowledge that SOFTWARE is of US-origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments.

For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>.

Gracenote Music Recognition Service (CDDB)



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery.

For more information, visit www.gracenote.com.

When music is recorded to the HDD from a CD, information such as the recording artist and track name are retrieved from the Gracenote Database and displayed (when available).

Gracenote may not contain information for all albums.

Gracenote is an internet-based music recognition service that allows artist, album, and track information from CDs to display on the HDD.

Gracenote users are allowed 4 free updates a year. More information about Gracenote, its features, and downloads are available at www.honda.com (in U.S.) or www.honda.ca (in Canada).

CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

Gracenote® END USER LICENSE AGREEMENT

This application or device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers or embedded databases (collectively, “Gracenote Servers”) and to perform other

functions. You may use Gracenote Data only by means of the intended End-User functions or this application or device. You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only.

You agree not to assign, copy, transfer, or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN. You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers.

Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce

its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted.

Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in

the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

As required by the FCC


1. This device complies with Part 15 of the FCC Rules and Canadian RSS-210/ RSSGen. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.
3. This product emits radio frequency energy, but the radiated output power of this device is far below the FCC and IC radio frequency exposure limits. This equipment complies with FCC and IC RF radiation exposure limits set forth for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.




Voice Commands


Voice Commands	414
Voice Portal Screen	414
Navigation Commands	415
Useful Commands.....	416
Phone Commands.....	416
Audio Commands	417
On Screen Commands	417
Music Search Commands	417
General Commands	418
Climate Control Commands.....	418
List of Categories	418

 Voice Portal Screen

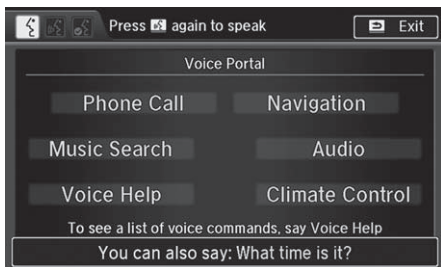

When the  (Talk) button is pressed, available voice commands appear on the screen.

For a complete list of commands, say "Voice Help" after the beep or select **Voice Help**.

You can see the list of commands in **Voice Info** on the Info menu screen. Select **Info**, then select .

*1: U.S. models only

Phone Call

This can be only used when the phone is connected. When the system recognizes the *Phone call* command, the screen will change the dedicated screen for the voice recognition of the phone.

Call <Your Contact Name>
Call <Phone Number>
Dial by Number
Redial
Call History

Music Search

This can be only used when the iPod or HDD device is connected.

Voice Help

You can see a list of the available commands on the screen.

Navigation Commands
Useful Commands
Phone Commands
Audio Commands
On Screen Commands
Music Search Commands
General Commands
Climate Control Commands
All Commands
Voice Settings
Getting Started

Navigation

The screen changes the navigation screen.

*Address (English only)*¹*
*Place Name (English only)*¹*
Find Nearest POI Category
Go Home
Previous Destination
Address Book
Place Phone Number

Audio

When the system recognizes the *Audio* command, the screen will change the dedicated screen for the voice recognition of the audio.

*Audio On**¹

*Audio Off**¹

FM

AM

SXM

Disc

HDD

USB

iPod

Bluetooth® Audio

*Pandora**

Aha

AUX

▶ **Audio Commands** P. 417

Climate Control

The screen changes the climate control screen.

▶ **Climate Control Commands** P. 418

*1: These commands toggle the function on and off, so the command may not match your intended action.

* Not available on all models

Navigation Commands

The system accepts these commands on the dedicated screen for the voice recognition of the navigation.

General Commands

What time is it?

What is today's date?

Voice help (displays commands for current screen)

Find Place Commands

Find nearest (specify place):

Fuel and auto

Acura dealers

Honda dealers

Gas station

Hydrogen station

Auto parts & electronics

Auto repair & maintenance

Car wash & detailing

Motorcycle dealers

Other car dealers

Roadside assistance

ATM and bank

ATM

Bank

Check cashing

Currency exchange

Community

Business

City hall

Civic center

Convention center

Court house

Higher education

Library

Post office

School

Emergency room

Hospital

Police station

Veterinarian

Lodging

Bed & breakfast

Hotel

Resort

Recreation

Amusement park

Golf course

Historical monument

Marina

Movie theater

Museum

Park

Performing arts
Sports complex
Tourist attraction
Restaurant
American restaurant
Californian restaurant
Chinese restaurant
Coffee shop
Continental restaurant
Fast food
French restaurant
German restaurant
Greek restaurant
Indian restaurant
Italian restaurant
Japanese restaurant
Korean restaurant
Mexican restaurant
Pizza
Seafood restaurant
Thai restaurant
Vegetarian restaurant
Vietnamese restaurant
Other restaurant
Shopping
Accessory store
Book store
Clothing store

Grocery store
Home improvement store
Mall
Office supply store
Pharmacy
Pet food store
Sewing store
Shoe store
Sporting goods store
Toy store
Travel center
Airport
Automobile club
Bus station
Camping
Commuter rail station
Ferry terminal
Named place
Park & ride
Parking garage
Parking lot
Rental car agency
Rest area
Ski area
Tourist information
Train station
Travel agency
Truck stop

Useful Commands

The system accepts these commands on the voice portal top screen.

Call <Your Contact Name>

Call <Phone Number>

What time is it?

What is today's date?

Phone Commands

The system accepts these commands on the dedicated screen for the voice recognition of the phone.

Call <Your Contact Name>

Call <Phone Number>

Call by number

Call by name

NOTE:

Contacts that are imported from your phone to the vehicle are all made available by voice.

Audio Commands

The system accepts these commands on the dedicated screen for the voice recognition of the audio.

Radio FM Commands

Radio tune to <87.7-107.9> FM
Radio FM preset <1-12>

Radio AM Commands

Radio tune to <530-1710> AM
Radio AM preset <1-6>

Radio SXM Commands

SXM channel <1-999>
Radio SXM preset <1-12>

Disc Commands

Disc play
Disc play track <1-30>

HDD Commands

HDD play
HDD play track <1-30>

iPod Commands

iPod play
iPod play track <1-30>

USB Commands

USB play
USB play track <1-30>

Bluetooth® Audio Commands

Bluetooth® audio play

NOTE:

Bluetooth® Audio commands may not work on some phones or Bluetooth® Audio devices.

Pandora Commands*

Pandora play

Aha Commands

Aha radio play

AUX Commands

AUX play

On Screen Commands

The system accepts the voice command operation of the voice recognition screen.

Music Search Commands

The system accepts these commands on the Music Search screen.

Using Song By Voice

Song By Voice™ is a feature that allows you to select music from your HDD or iPod device using your voice. To activate this mode, you must push the talk switch and say: "Music search".

Song By Voice Commands

Music search
What am I listening to?
Who am I listening to?
Who is this?
What's playing?
Who's playing?
What album is this?

* Not available on all models

■ Play Commands

Play artist <Name>
Play album <Name>
Play song <Name>
Play composer <Name>
Play genre <Name>
Play playlist <Name>

■ List Commands

List artist <Name>
List album <Name>
List composer <Name>
List genre <Name>
List playlist <Name>

General Commands

What time is it?
What is today's date?

Climate Control Commands

The system accepts these commands on the **Climate control** screen.

Climate Control Automatic
*Climate Control On*¹*
*Climate Control Off*¹*
*Air conditioner On*¹*
*Air conditioner Off*¹*
*Defrost On*¹*
*Defrost Off*¹*
Vent
Dash and Floor
Floor Vents
Floor and Defrost
Fan Speed Up
Fan Speed Down
Fan Speed <1-7>
Temperature Up
Temperature Down
Temperature Max Heat
Temperature Max Cool
Temperature <57-87> Degrees (U.S.)
Temperature <18-32> Degrees (Canada)


 

 
*1: These commands toggle the function on and off, so the command may not match your intended action.

List of Categories

The system accepts these commands (POI category name) on the dedicated screen.

Fuel/Auto
ATM/Bank
Community
Emergency
Lodging
Recreation
Restaurant
Shopping
Travel

Symbols

 (Display Mode) Button	76
 (Hang-Up/Back) Button	6, 24, 266
 (Pick-Up) Button	266
 (Talk) Button	6, 24, 266

Numbers

3D Angle Adjustment	79
---------------------------	----

A

Acura Client Relations	404
AcuraLink Message	319
AcuraLink Subscription Status	324
AcuraLink®	314
Address	128
Address Book	41
Avoided Area	62
Address Book	
Editing Address Book	41
Setting Destination	135
Address Book PIN	49
Aha™ Radio	398
Aha™ Radio Menu	254
Audio	
On Demand Multi-Use Display™	5
Remote Control	188
Settings	190
Voice Commands List	417
Audio Menu	
Bluetooth® Audio	262

Disc	220
FM/AM Radio	194
HDD	227
Internet Radio	251
iPod	239
SiriusXM® Radio	200
USB Flash drive	256

Audio System

Theft Protection	185
USB Port	183

Auto Door Locking/Unlocking

Customize	109
-----------------	-----

AUX

Auxiliary Input Jack	185
----------------------------	-----

Avoid Streets

.....	176
-------	-----

Avoided Area

.....	62
-------	----

B

Black Level

.....	28
-------	----

Bluetooth® Audio

Playing	262
---------------	-----

Bluetooth® HandsFreeLink®

Importing Phonebook Data	275
Making a Call	292
Pairing a Phone	269
Phone Settings	287
Receiving a Call	298
Setting Up Speed Dialing	276

Brightness

.....	28
-------	----

C

Calculating the Route

.....	151
-------	-----

Calendar

.....	350
-------	-----

Call History

.....	296
-------	-----

Cancel Route

.....	169
-------	-----

Category

Address Book	41
--------------------	----

Setting Destination	137
---------------------------	-----

Category History

.....	51
-------	----

Change Province

.....	129
-------	-----

Change State

.....	129
-------	-----

Changing Your Destination

.....	177
-------	-----

Changing Your Route

.....	168
-------	-----

City

.....	131
-------	-----

Client Assistance

.....	404
-------	-----

Clock Adjustment

.....	30
-------	----

Color

.....	75
-------	----

Continue Trip

.....	180
-------	-----

Contrast

.....	28
-------	----

Coordinate

.....	150
-------	-----

Correct Vehicle Position

.....	88
-------	----

Current Location

.....	81
-------	----

Current Position

Address Book	41
--------------------	----

Map Input	148
-----------------	-----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Customized Features

.....	90
-------	----

Data Reset

.....	123
-------	-----

Data Reset

.....	123
-------	-----

Data Reset

.....	123
-------	-----

Data Reset

.....	123
-------	-----

Day Mode	
Color	75
Switching Display Mode	76
Delete Tracking	87
Destination List	
Adding Waypoint	170
Editing	174
Detour	176
Dial	294
Directions	163
Disc	
Playing	220
Display Settings	28
Display Tracking	86
Driving	158
Download POI	
Editing Category	53
Importing Category	52
Setting Destination	145
Driving to Your Destination	154
E	
Edit Go Home	48
Edit POI Search Radius Along Route	61
ENTER Button	7
Entering a Destination	126
Error Messages	391
Aha™ Radio	398
CD Player	392
Hard Disc Drive (HDD) Audio	393
iPod/USB Flash Drive	394
Navigation System	391

Pandora®	395
Estimated Time	70
Exit Info	164

F

Find Nearest Place	177
FM/AM Radio	
Playing	194
Preset Memory	197
Folder List	
Disc	224
USB Flash Drive	261

G

Go Home	12
Go Home PIN	49
Gracenote Info. Update	237
Guidance (Navi Settings)	64
Guidance Mode	65
Guidance Point	69

H

HDD	
Playing	227
Hide Traffic Flow	163
Home Address	12, 48
HomeLink® Universal Transceiver	380
House Number	134

I

Import Phonebook Data	275
Interface Dial	7
Interface Settings	28
Intersection	147
iPod	
Connecting, Disconnecting	239
Playing	239

L

Language Settings	36
Legal Information	407
Lodging (Place Category)	137

M

Map (Navi Settings)	71
Map Data Update	
Checking Version	351
Obtaining Update Data	405
Map Input	
Avoided Area	62
Setting Destination	148
Map Legend	9, 82
Map Menu	161
Map Screen	154
Changing View	78
Icon	9, 84
Scale	83
MENU Button	
Changing Route	168

Entering a Destination.....	126
Microphone	266
Multi-View Rear Camera	353
Music Search	
HDD.....	232
How to Select a File from the Music Search List (MP3/WMA/AAC).....	224
iPod.....	245
Song By Voice.....	247
USB.....	261

N

NAV Button	11, 65
Navigation Menu (Destination)	126
Navigation Menu (Route Option)	168
Night Mode	
Color.....	75
Switching Display Mode.....	76
Non-map Screens	68

O

On Demand Multi-Use Display™	
Basic Operation.....	5
Customizing Audio Source.....	187
Screen Settings.....	89
Shortcuts.....	46, 186, 279
Sound.....	193

P

Pairing a Phone	269
------------------------------	-----

Pandora®	252
Personal Information	40
PHONE Button	266
Phone Settings	287
Phonebook	
Importing.....	275
Making a Call.....	293
PIN Numbers	49
Place Category	
Address Book.....	41
Setting Destination.....	137
Place Name	
Address Book.....	41
Setting Destination.....	141
Place Phone Number	
Address Book.....	41
Setting Destination.....	144
Postal Code	130
Power Distribution Monitor	347
Previous Destinations	
Address Book.....	41
Deleting.....	50
Setting Destination.....	136

R

Radio	
FM/AM.....	194
SiriusXM®.....	200
Random	
Disc.....	222
HDD.....	230
USB Flash Drive.....	259

Rear Entertainment System	16, 325
Auxiliary Console Panel.....	326
Front Control Panel Operation.....	338
HDMI® Input Jack.....	327
Playable Discs.....	328
Rear Control Panel Operation.....	329
Wireless Headphones.....	342
Rearview Camera	353
Repeat	
Disc.....	222
HDD.....	230
iPod.....	243
USB Flash Drive.....	259
Resuming Your Trip	180
Roadside Assistance	307
Route Preference	56
Routing	55

S

Scan	
Disc.....	222
FM/AM Radio.....	198, 199
HDD.....	230
SiriusXM® Radio.....	215
USB Flash Drive.....	259
Scenic Route	146
Schedule	
Calendar.....	350
Search Along	171
Search Around	171
Search by Name	138

- Search by name
 - Place Category..... 137
 - Search Nearby..... 177
 - Security PIN Code..... 400
 - SETTINGS Button..... 4
 - Show Icon on Map..... 73
 - Shuffle
 - iPod..... 243
 - Siri Eyes Free..... 27
 - SiriusXM® Radio
 - Playing..... 200
 - Preset Memory..... 203
 - Replay Function..... 205
 - Settings..... 190
 - SportsFlash™ Alert..... 209
 - Song By Voice™
 - Searching Music..... 247
 - Setting..... 246
 - Sort by Distance to Travel..... 137
 - Sound and Beep Settings..... 29
 - Sound Setup..... 193
 - Speed Dial
 - Making a Call..... 297
 - Registering..... 277
 - Start-up..... 22
 - Steering Wheel Controls..... 188
 - Straight Line Guide..... 80
 - Street..... 132
 - Street Name Guidance..... 67
 - Surround View Camera..... 355
 - System Device Information..... 351
 - System Initialization..... 400
 - System Limitations..... 402
- T**
- Text/E-mail Message..... 300
 - Traffic Incidents..... 166
 - Traffic List..... 166
 - Traffic Rerouting..... 165
 - Auto Reroute..... 165
 - Navi Settings..... 60
 - Trip Computer..... 346
 - Troubleshooting..... 18, 377, 384
- U**
- Unit Settings..... 35
 - Unverified Routing..... 58
 - Update System Software
 - Obtaining Update Data..... 405
 - USB Flash Drive
 - Connecting, Disconnecting..... 256
 - Playing..... 256
 - Voice Commands List..... 417, 418
 - USB Port..... 183
- V**
- View (Navi Settings)..... 78
 - View Routes..... 153
 - Viewing the Routes..... 153
 - Voice
 - Map Menu..... 159
 - Voice Commands
 - Help..... 17
 - Voice Commands List..... 414
 - Voice Control System..... 24
 - Voice Control Operation
 - Basic Operation..... 6
 - Voice Portal..... 6
 - Voice Recognition Settings..... 26
 - Voice Tag
 - Phonebook Phonetic Modification..... 282
 - Registering a Voice Tag to a Speed Dial Entry..... 277
 - Volume
 - HFL Buttons..... 266
 - Map Menu..... 161
 - Sound and Beep Settings..... 29
 - Voice Recognition Settings..... 26
- W**
- Wallpaper Settings..... 32
 - Waypoint
 - Adding..... 170
 - Editing..... 174
- Z**
- Zip Code..... 130

