

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

#### Accessories Precautions

The GPS antenna is located in the roof. Trees, tall buildings, freeway/highway overpasses, tunnels, or overhead electrical power wires can easily interrupt or interfere GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

#### Important Safety Information

### WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Enter information before you begin driving or when stopped. As you drive, listen to the audible instructions and use voice commands when possible. Pull to the side of the road if you need more time to look at the screen or operate the controls.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.

 **System Limitations** P. 336

#### NOTICE

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste. Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on navigation screens.

# Contents

## ➤ System Setup P. 19

Start-up 20	Voice Control System 22	Interface Settings 26	Personal Information 38
Routing 53	Guidance 62	Map 69	
On Demand Multi-Use Display™ 87	Customized Features 88	Data Reset 113	

## ➤ Navigation P. 115

Entering a Destination 116	Calculating the Route 141	Driving to Your Destination 144	Map Menu 151
Changing Your Route 159	Changing Your Destination 168	Resuming Your Trip 171	

## ➤ Audio P. 173

Audio System 174	Audio Remote Controls 179	Audio Settings 181	Playing FM/AM Radio 184
Playing SiriusXM® Radio 190	Playing a Disc 205	Playing Hard Disc Drive (HDD) Audio 212	
Playing an iPod 224	Playing Internet Radio 236	Playing a USB Flash Drive 241	Playing <i>Bluetooth</i> ® Audio 247

## ➤ *Bluetooth*® HandsFreeLink® P. 251

<i>Bluetooth</i> ® HandsFreeLink® 252	Text/E-mail Message 285	Roadside Assistance 293	HFL Menus 294
---------------------------------------	-------------------------	-------------------------	---------------

## ➤ AcuraLink® Messages P. 299

AcuraLink® 300
----------------

## ➤ Other Features P. 311

Trip Computer 312	Calendar 313	Information Functions 314	Multi-View Rear Camera 316
-------------------	--------------	---------------------------	----------------------------

## ➤ Troubleshooting P. 317

Troubleshooting 318	Error Messages 325
---------------------	--------------------

## ➤ Reference Information P. 333

System Initialization 334	System Limitations 336	Client Assistance 338	Legal Information 341
---------------------------	------------------------	-----------------------	-----------------------

## ➤ Voice Commands P. 347

Voice Commands 348	List of Categories 358
--------------------	------------------------

Quick Reference Guide	P. 2
-----------------------	------

System Setup	P. 19
--------------	-------

Navigation	P. 115
------------	--------

Audio	P. 173
-------	--------

<i>Bluetooth</i> ® HandsFreeLink®	P. 251
-----------------------------------	--------

AcuraLink® Messages	P. 299
---------------------	--------

Other Features	P. 311
----------------	--------

Troubleshooting	P. 317
-----------------	--------

Reference Information	P. 333
-----------------------	--------

Voice Commands	P. 347
----------------	--------

Index	P. 359
-------	--------

# Overview—Functions at a Glance

## Navigation

You can select any place/landmark as a destination by using voice control or the Interface Dial. The navigation system gives you turn-by-turn driving directions to your destination.



### Store home address P. 46

Register **1** home address.

### Store contacts P. 39

Store up to **200** contacts in **2** address books.

### Enter destination P. 116

Select your destination using **13** methods.

### Select route P. 143

Set route preferences and select one of **3** routes.



### Track route P. 144

Follow your route in real-time with voice guidance.

**Subscription service**

### AcuraLink Real-Time Traffic™ P. 156

Bypass congestion and traffic incidents.

### Avoid certain areas P. 60

Set streets and areas to detour around.

### Add waypoints P. 161

Add up to **4** “pit stops” along your route.



## Audio

The advanced audio system provides clear, well-defined sound and makes the most of your music. Enjoy listening to a variety of audio sources, such as:



**FM/AM Radio** ➔ P. 184

**SiriusXM® Radio** ➔ P. 190

**Compact Disc** ➔ P. 205

**Hard Disc Drive (HDD)** ➔ P. 212

**iPod** ➔ P. 224

**Internet Radio** ➔ P. 236


**USB Flash Drive** ➔ P. 241

**Bluetooth® Audio** ➔ P. 247



**AcuraLink®** ➔ P. 300

AcuraLink® provides you with important information and messages between your vehicle and Acura.

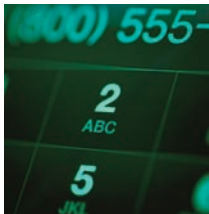


**Voice Control** ➔ P. 22

Use voice commands for safer system control while driving. You can operate all key functions of the navigation, audio, *Bluetooth*® HandsFreeLink®, and climate control systems.

**Bluetooth® HandsFreeLink®** ➔ P. 252

Pair a compatible mobile phone to receive incoming and make outgoing calls. You can operate the phone features without ever taking your hands off the wheel.

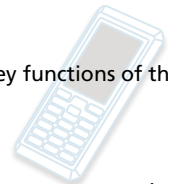

## Other Features

**Multi-View Rear Camera** ➔ P. 316

Helps you check for obstacles around the rear of your vehicle on the audio/information screen when reversing.

# System Controls

On Demand Multi-Use Display™

Navigation Screen

1 PHONE Button ➔ P.252

2 (Power) Button/  
Volume Knob

3 NAV Button

4 BACK Button

5 (Display Mode)  
Button ➔ P.74


6 Interface Dial/ENTER  
Button ➔ P.7

7 INFO Button

8 MENU Button

9 SETTINGS Button


	Audio		Navigation
	Voice Control	Bluetooth® HandsFreeLink®	

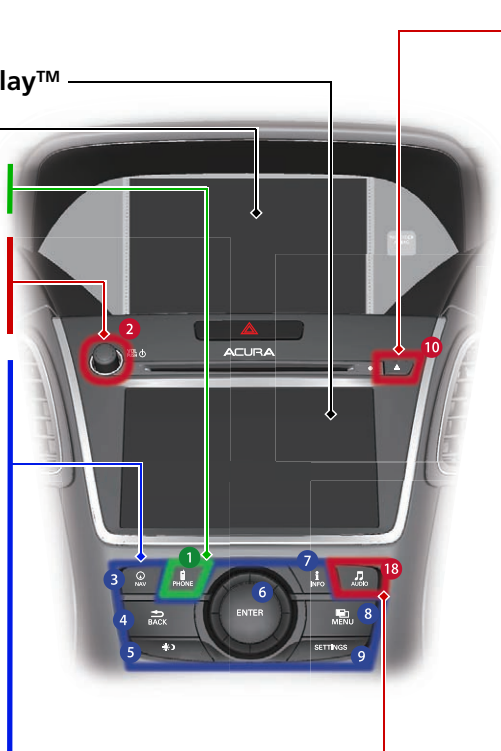

10 (Eject) Button



11 Microphone  
➔ P.252

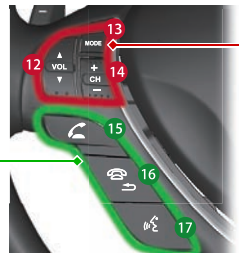

12 VOL Button  
➔ P.179

13 MODE Button  
➔ P.179

14 CH Button  
➔ P.180

15 (Pick-Up) Button ➔ P.252

16 (Hang-Up/Back) Button  
➔ P.252

17 (Talk) Button ➔ P.6

18 AUDIO Button ➔ P.174

# On Demand Multi-Use Display™ Basic Operation

## Audio Source

Select to change an audio source.



You can change the position of icons.

## Shortcuts

Select to display the shortcut menu.



**Places** → P. 44

**Phone** → P. 265

 
**Audio** → P. 177

## More

Select to display the menu items.



Select **Tune**.



Select **Presets**.



Select and hold a desired number where you want to store the station/channel. Select to listen to a preset station/channel.

### FM/AM/SiriusXM®/Pandora®/Aha™

- ◀ ▶: Select the preset station (FM/AM/Pandora®/Aha™).  
Select to search that category/channel on the tune screen (SiriusXM).  
Select and hold to search that station/channel on the preset screen (AM/FM/SiriusXM).  
Select and hold to search up or down 10 channels on the tune screen (SiriusXM).
- ◀◀ ▶▶: Select to search the selected band for a station with a strong signal. (AM/FM)  
Select the channel. In channel mode, select and hold to change the channel rapidly. (SiriusXM)  
Select to skip to the next/previous channel on the tune screen.  
Select and hold to fast-forward/fast-rewind the current selection on tune screen (SiriusXM).  
Select a song (Pandora®) or contents (Aha™).



### CD/HDD/USB flash drive/Bluetooth® Audio

- ◀ ▶: Select ▶ to skip to the next folder, and ◀ to skip to the beginning of the previous folder.
- ◀◀ ▶▶: Select to change tracks. Select and hold to move rapidly within a track.
- iPod**  
Album bar: Select an album.
- ◀◀ ▶▶: Select to change tracks. Select and hold to move rapidly within a track.


\*: Pandora® is available on U.S. models only.

 
# Voice Control Operation



## Voice Portal Screen

- 1 Press and release the  (Talk) button on the top screen of any mode. The system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt.





 - The system beeps when ready for a command. Press the  (Hang-Up/Back) button to cancel.
- Available voice commands are highlighted on the screen.

- 2 Say a voice command (e.g.,  Address). After that, follow the voice prompt and say a voice command.

- The audio system is muted during voice control mode.
- You can use other voice commands on the Voice Portal screen.  
**Voice Commands** ➔ P. 348
- Say  "Voice Help" to enter supported commands for the current screen. A voice help tutorial is also available.  
**Voice Help** ➔ P. 15
- During the voice control mode, press and hold the  (Hang-Up/Back) button to return to the Voice Portal screen.
- Set **Voice Prompt to Off** to bypass the voice prompt.  
**Voice Recognition Settings** ➔ P. 24
- Carefully read the usage note for the voice control.  
**Voice Control System** ➔ P. 22



## On the Menu Screen

- 1 Press and release the  (Talk) button on the menu or setting screen. The system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt.




Available voice commands are highlighted on the screen.


- 2 Say a voice command.

- Say  "Voice portal" to display the Voice Portal on any screen.
- Say  "Voice Help" to enter supported commands for the current screen. A voice help tutorial is also available.  
**Voice Help** ➔ P. 15


# Interface Dial/ENTER Button Operation

**Rotate dial** 


**Changes scale**  
Map screens







**Highlights menu options**  
Menu screens

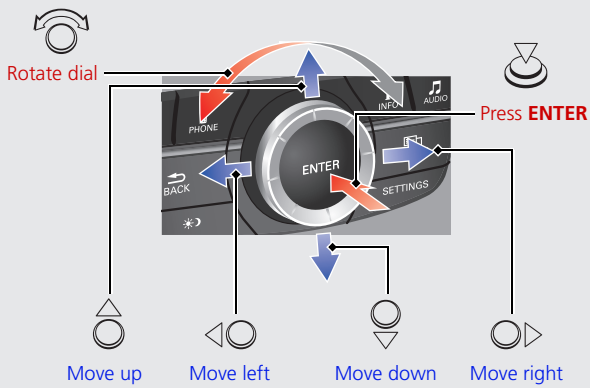


You will see these icons in each chapter.  
They represent how you can operate the Interface Dial.




**Move**


 up  down  left  right

**Scrolls map (8 directions)**  
Map screens

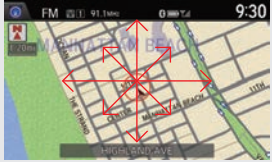
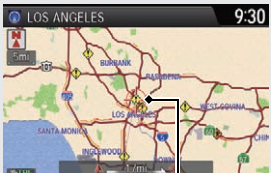


**Selects labeled function**  
Menu screens




**Press ENTER** 

**Selects function**  
**Selects map icon**  
Map screens

Selecting Icon

**Selects highlighted option**  
Menu screens










# How to Enter Information

You can enter information (e.g., city names, street names, personal names, and business names comprising letters, numbers, and symbols) when prompted on input screens by two different methods.

 
 
 
 
 
## Using Voice Control

When you see  in this manual, voice commands are available for that feature.


- Say the letter, number, or symbol (e.g., say  "A").
- Use spelling assist (e.g., say  "Alpha" to enter the letter "A" or  "Hyphen" to enter a hyphen).
- The system beeps if you say an unavailable (grayed out) letter or number.
- If a voice command is not recognized, a list is displayed with possible options.

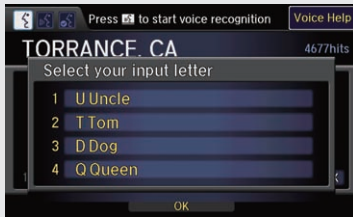
 





## On list screens:

 

- Say the number of the list item (e.g., say  "Five" to select item 5).
- Say  "Up" or  "Previous" to scroll up one page.
- Say  "Down" or  "Next" to scroll down one page.


## Using the Interface Dial

Rotate  to highlight a character.

- Select  to display upper/lower case characters.
- Select  to display symbols and accented characters.
- Select  (or move ) to edit the entered characters.

Press  to enter the highlighted character.

- Move  to select **Space** to enter a space character.
- Move  to select **Delete** to remove the last entered character.

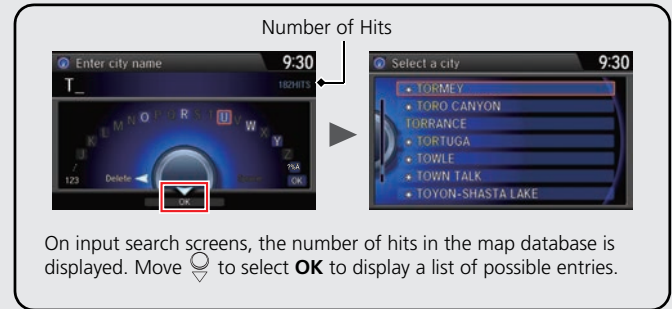

- You can also use the touchscreen to enter information.

Scrolling through lists or tabs is limited while the vehicle is moving. **Certain screen functions are limited or inoperable while the vehicle is moving. For these functions, use available voice commands or pull over to proceed.**

# Map Screen Legend

**Map orientation** → P. 76

- North up
- Heading up
- 3D map

**Streets**

- Freeways/highways
- State routes
- Verified streets
- Unverified streets
- One-way streets

**GPS signal strength**

- Best reception
- Good reception
- No icon: Poor/No reception

**Current map scale**

**Map scale** → P. 81

**Feature areas**

- Park
- Hospital
- Shopping Mall
- Golf Course
- Airport/Business
- Water Area
- Cemetery
- University

**Current vehicle position** → P. 79

**Current street name**

**AcuraLink® Message icon** → P. 14

**AcuraLink® signal indicator** → P. 309

**Landmark icons** → P. 71

- Acura dealer
- Honda dealer (U.S.)
- Honda dealer (Canada)
- ATM
- School
- Parking lot
- Parking garage
- Grocery store
- Hotel/Lodging
- Gas station
- Hospital
- Post office
- Restaurant
- Freeway exit information (U.S.) / Highway exit information (Canada)

# During Route Guidance

During route guidance, route information is displayed on the map screen and guidance screen. Press the NAV button to toggle between the map and guidance screen.

## Map Screen

Tracking dots **P. 148**

Calculated route **P. 144**

Guide to destination or waypoint

Estimated time to destination (waypoint)

Distance to destination (waypoint)  
Distance of the actual route.

Waypoint **P. 161**

Next guidance indicator  
Distance to the next guidance point.

Calculated route (unverified roads) **P. 146**

Destination icon

## Guidance Screen

Guidance point

Guide to destination or waypoint

Estimated time to destination (waypoint)

Distance to destination (waypoint)  
Distance of the actual route.

Guidance indicator  
Street name of guidance point and distance to the guidance point.


Lane guidance

Guidance point

No entry icon

## Day or Night Mode

Press the (Display Mode) button to manually switch between day and night mode.

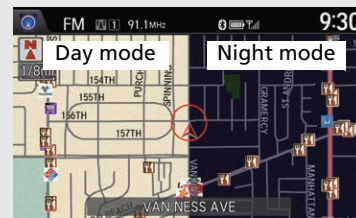

## Multi-information Display

### Turn-by-Turn Directions


The next guidance point appears on the multi-information display.

Remaining distance










Street name of next guidance point

Next driving maneuver is approaching

# Navigation—Home Addresses and Going Home


The “Home” feature automatically routes you to your home address from any location simply by selecting Go Home, or saying  “Go Home.”

## Storing Your Home Address

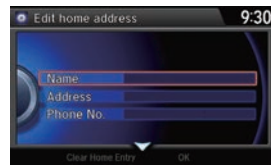




- 1 Press the **SETTINGS** button. 
- 2 Rotate  to select **Navi Settings**. Press .  

- 3 Rotate  to select **Edit Go Home**. Press .
- 4 Rotate  to select **Name**. Press .  


- 5 Enter a name.  


- 6 Rotate  to select **Address**. Press .
- 7 Enter an address.
- 8 Rotate  to select **Phone No.** Press .
- 9 Enter a phone number.  

- 10 Move  and rotate  to select **OK**. Press .

## Going Home



- 1 From the map screen, press the **MENU** button. 
  - 2 Rotate  to select **Go Home**. Press .  

- Alternatively, you can say  “Go Home” from any screen. Your home address is displayed on the Calculate Route screen.
- 3 Rotate  to select **Set as Destination**. Press .

# Navigation—Entering a Destination


Enter your destination using one of several methods, then follow route guidance on the map or guidance screen to your destination. You can also perform these steps using  voice commands.

- 1** From the map screen, press the **MENU** button.



- 2** Rotate  to select **Address**. Press .





- 3** Rotate  to select **Street**. Press .




- 4** Enter the name of your destination street.






- 5** Rotate  to select your destination street from the list. Press .



- 6** Enter the street number. Move  to select **OK** when finished.




- 7** If there is more than one city with the specified street, a list of cities is displayed. Rotate  to select the desired city from the list. Press .

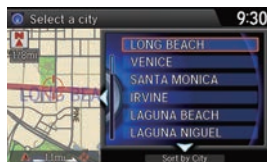

- 8** Rotate  to select **Set as Destination**. Press .

Route guidance to the destination begins.

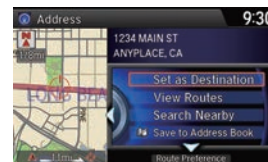

- **View Routes:** Choose one of three routes.



- **Route Preference:** Choose **Max** or **Min** for the five settings.



# Navigation—Changing Route or Destination

You can alter your route by adding waypoints to visit, adding streets to avoid, or changing your destination during route guidance.

## Adding a Waypoint (“Pit Stop”)

You can add up to four waypoints along your route. ➔ P. 161

- 1 From the map screen, press the **MENU** button.
- 2 Rotate to select **Destination List**. Press .
- 3 Rotate to select **Add New Destination**. Press .
- 4 Rotate to select **Find Along Route**. Press .
- 5 Rotate to select location and search method. Press .



- **Search Around:** Search around a location.
- **Search Along:** Search between two locations.

- 6 Select the icon category and location to add to the Destination List when prompted. Edit the order of destinations if necessary.
- 7 Move and rotate to select **Start Route**. Press .

## Changing Your Destination

There are four methods you can use to specify a new destination during route guidance.

- Say **“Find Nearest...”** ➔ P. 168  
Searches for the nearest place/landmark on the map screen (e.g., **“Find nearest gas station”**).
- Say **“Go Home”** ➔ P. 11  
Routes to your home address.
- Selecting an icon on the map ➔ P. 169  
Scroll the map to position the cursor over a place/landmark icon or a new area on the map. Press twice.
- Entering a new destination ➔ P. 170  
Press the **MENU** button. Move to select **Destination** and enter a new destination.

## Canceling Your Route


- 1 Press the **MENU** button.
- 2 Rotate to select **Cancel Route**. Press .



# AcuraLink®

## AcuraLink® Messages

AcuraLink® provides a direct communication link between you and Acura. It sends and receives several kinds of messages through the Acura server.

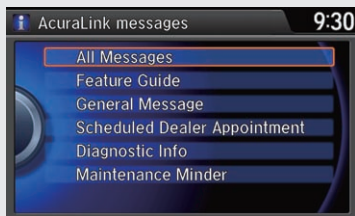

The following features are available:

- Vehicle feature guide
- Operating quick tips
- Safety and maintenance information
- Diagnostic information
- Dealer appointment and maintenance reminders

## AcuraLink Real-Time Traffic™

Displays continuously updated traffic information and recalculates your route in response to traffic flow, incidents, or road closures.

➔ P. 156


Traffic incident icons

- 🚧 Congestion
- 🚚 Incident
- ☁️ Weather
- 🚧 Construction
- 🚫 Road Closed

Traffic status indicator

➔ P. 156

- 📶 TRF Traffic information available
- 📶 TRF Traffic information off or map scale too large
- No icon: Out of coverage area

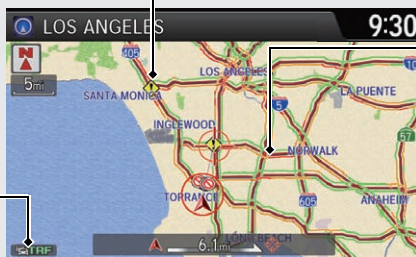

Traffic flow indicator


- 🔴 Heavy
- 🟡 Moderate
- 🟢 Free-flow


**NOTE:** AcuraLink Real-Time Traffic™ is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).

# Voice Help


This navigation system comes with voice help, which shows you what command to say when using the voice command functions.


## Command Help


- 1 Press and release the  (Talk) button.

- 2 Say  "Voice Help."





The voice help screen is displayed. The  "Voice Help" command is available on most screens.

- 3 Press and release the  (Talk) button.


- 4 Say one of the options for a list of available commands by category (e.g.,  "Navi commands").



- 5 Press and release the  (Talk) button.




- 6 Say one of the options for a list of available commands by category (e.g.,  "Find Place Commands").




- 7 The system displays a list of all available commands for the category. Press  to hear the list read aloud.




## Getting Started Tutorial



 
- 1 Move  and rotate  to select **Getting Started** on the voice help screen. Press .



For "Voice Settings" and "All Commands."  **P. 348**

- 2 Press  to have the system read the tips for the voice control.



- Rotate  to read the tips.
- Move  or  to display the previous/next page.



---

**Q** Why does the vehicle position icon on the map “lag” a short distance behind my actual position, especially at intersections?

**A** This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal.

---

**Q** Why does the “time to destination” display sometimes increase even though I am getting closer to my destination?

**A** The “time to destination” is based on your actual road speed and traffic conditions to give you a better estimate of arrival time.

---

**Q** How do I specify a destination when an entered city or street could not be found?

**A** Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.

 
---


**Q** How do I turn on the navigation system voice guidance?

**A** On the map screen, press  to display the Map Menu. Rotate  to select **Guidance Volume**. Adjust the preferred volume level.

---

**Q** My battery was disconnected or went dead, and the navigation system is asking for a code. Where do I find it?

**A** In most cases, you do not need to enter a code. Simply press and hold the  (Power) button for two seconds; the system should reactivate.

 **System Initialization** P. 334

# How to Use This Manual


This section explains different methods on how you can easily find information in this manual.



## Searching the Table of Contents

➔ P.1

Two types of Tables of Contents help you find your desired information.

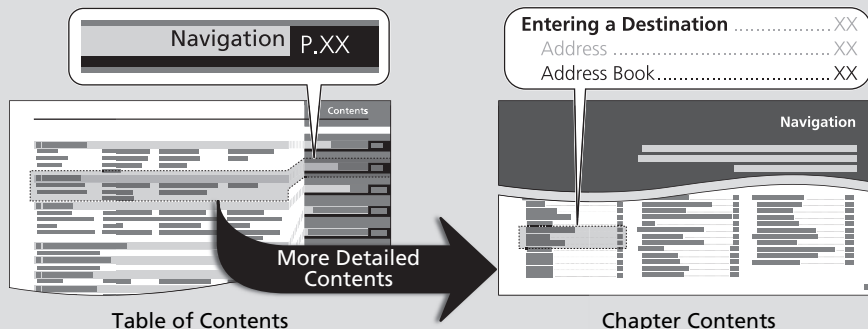

First, find the general chapter related to what you are looking for (e.g., entering a destination from the Address Book). Then, go to that chapter to view a more specific table of contents.


This more detailed table of contents shows you exactly what information is listed by section and title.



## Searching the Index

➔ P.359

Menu items displayed on the navigation screen (e.g., Address Book) can be found individually in the Index.

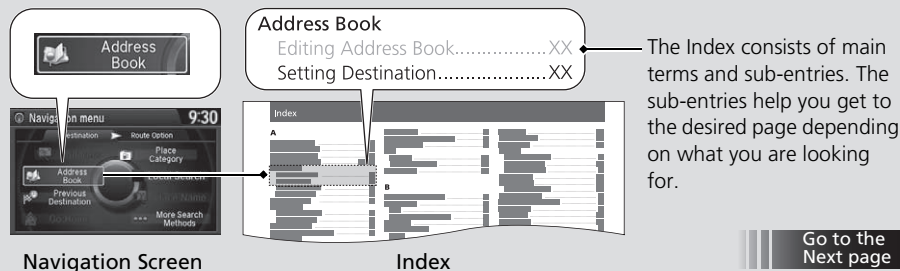


Go to the Next page


 


▶▶ Entering a Destination ▶ Address Book

### Address Book

 
**MENU button ▶ Address Book**

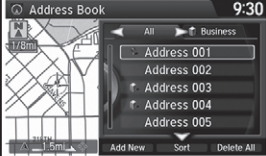Select an address stored in your address book to use as the destination.





1. Rotate  to select your destination from the list. Press .
2. Set the route to your destination.
  - ▶ **Calculating the Route P. 92**
  - ▶ Move  or  to display only the entries in the categories you have created.
  - ▶ **Selecting an Address Book Category P. 26**

**Address Book**

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select OK. PINs are optional.

**PIN Numbers P. 28**

  Move  and rotate  to select the following items:

- **Add New Address.** Adds an entry to the address book.
  - ▶ **Adding an Address Book Entry P. 23**
- **Sort:** Selects Sort by Name or Sort by Distance.
- **Delete All:** Deletes all entries in the address book.


After following the menu tree, step-by-step instructions explain how to achieve the desired result.

## Menu Tree

The menu tree helps guide you through the system's menu options. To get to your desired function, follow the menu tree in order of the steps shown.

All menu options can also be activated with voice commands.

### **MENU button** ▶ **Address Book**

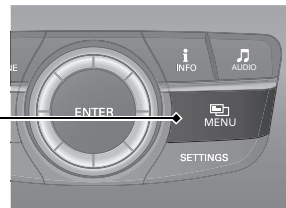



Press the hard button on the system control panel.

Press the **MENU** button.



Select the menu option with the Interface Dial.

Rotate  to select **Address Book**. Press .

Sample pages and images in this section may differ from the actual ones.



# System Setup


This section describes the start-up procedure and the navigation and setup functions.




<b>Start-up</b> .....	20	<b>Routing</b> .....	53	Color .....	73
<b>Voice Control System</b> .....	22	Route Preference .....	54	View (Map Orientation).....	76
Command Input .....	22	Unverified Routing .....	56	3D Angle Adjustment.....	77
Voice Recognition .....	23	Traffic Rerouting .....	58	Straight Line Guide .....	78
Voice Recognition Settings .....	24	Edit POI Search Radius Along Route .....	59	Current Location .....	79
Siri Eyes Free .....	25	Avoided Area .....	60	Map Legend.....	80
<b>Interface Settings</b> .....	26	<b>Guidance</b> .....	62	Display Tracking .....	84
<b>Personal Information</b> .....	38	Guidance Mode .....	63	Correct Vehicle Position .....	86
Address Book.....	39	Street Name Guidance .....	65	<b>On Demand Multi-Use Display™</b> .....	87
Home Address .....	46	Non-map Screens.....	66	Changing the Screen Settings .....	87
PIN Numbers .....	47	Guidance Point .....	67	<b>Customized Features</b> .....	88
Previous Destination .....	48	Estimated Time .....	68	<b>Data Reset</b> .....	113
Category History .....	49	<b>Map</b> .....	69	Defaulting All the Settings.....	113
Download POI.....	50	Showing Icons on Map .....	71		

The navigation system starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following Confirmation screen is displayed.

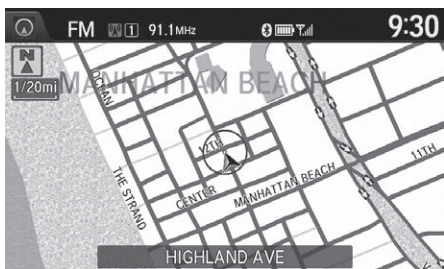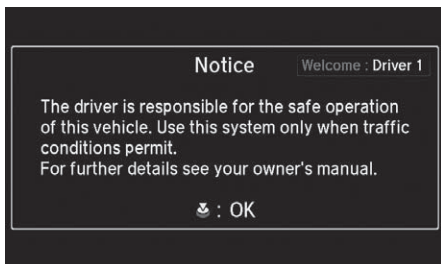

1. Press  to select OK.
  - ▶ If you do not select OK, the map screen is displayed after a certain period of time.
  - ▶ Your current position is displayed on the map screen.
2. Press the NAV button if a different mode is selected.
  - ▶ Your current position is displayed on the map screen.

## » Start-up

If the navigation system loses power at any time, you may need to press and hold the  (Power) button for more than two seconds, or you may be prompted for the five-digit security code.


### » System Initialization P. 334

At start-up, the driver's keyless access remote is automatically detected and the address book settings, setup preferences, wallpapers, and audio settings for that driver (e.g., Driver 1) are loaded.

"OK" on the Confirmation screen cannot be selected by using a voice command.

The first time the NAV or any other mode button is pressed after you set the power mode to ACCESSORY or ON, a message guiding you to its menu screen is displayed.

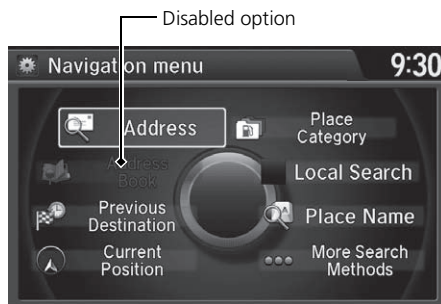

## ■ Limitations for Manual Operation



Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option using the Interface Dial until the vehicle is stopped.

Voice commands are still operable while the vehicle is in motion.

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions.

The voice control system uses the  (Talk) and  (Hang-Up/Back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

A "Getting Started" feature provides a tutorial that explains how to use the voice control system.

 **Getting Started Tutorial** P. 15

 
## Command Input

If the system does not understand a command or you wait too long to give a command, the system asks you to repeat the command.

When you give a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, listening to the feedback will help familiarize you with the way the system expects commands to be phrased.



If the system cannot perform a command or the command is not appropriate for the screen you are on, the system beeps.

On character input screens, a list of possible characters is displayed if the system does not recognize your command.

You can find out which voice commands are available for a particular screen using the  "Voice Help" command. The system will display and read the list of available commands to you.

 **Voice Help** P. 15

### Voice Control System

When you press the  (Talk) button, the system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt and give a command.

### Command Input

The audio system is muted while using the voice control system.

## Voice Recognition

To achieve optimum voice recognition when using the navigation voice control system:

- Make sure the correct screen is displayed for the voice command that you are using.
  - **Voice Commands** P. 348
- Close the windows and moonroof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a clear, natural speaking voice without pausing between words.
- Reduce any background noise and the climate controls fan speed if possible. The system may misinterpret your command if more than one person is speaking at the same time.
- Refer to the Voice Help feature.
  - **Voice Help** P. 15

### ☒ Voice Recognition



The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.



## Voice Recognition Settings

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Voice Reco**



Rotate  to select an item. Press .

The following items are available:



 
- **Guidance Volume:** Adjusts the voice prompt volume level.
  - ▶ **Sound and Beep Settings** P. 27
- **Voice Prompt:** Turns the voice prompt on or off.
  - On** (factory default): Provides the voice prompts.
  - Off:** Disable the feature.
- **Song By Voice:** Turns the Song By Voice™ on or off.
  - ▶ **Settings Song By Voice™ (SBV)** P. 231
- **Song By Voice Phonetic Modification:** Modifies a voice command of music stored in the HDD or an iPod.
  - ▶ **Phonetic Modification** P. 233
- **Phonebook Phonetic Modification:** Modifies a voice command for the phonebook.
  - ▶ **Phonebook Phonetic Modification** P. 268

## Siri Eyes Free

When your compatible iPhone is paired and linked to the system via *Bluetooth*®, you can say Siri-related commands. Make sure Siri on your iPhone is turned on.

📱 **Pairing a Phone** P. 255



1. Press and hold the  (Talk) button for more than two seconds until you hear the Siri tone.
2. Talk to Siri.
  - ▶ When you hear the Siri tone, you can continue to respond without pressing any button. If the Siri tone times out, you have to press and hold the  (Talk) button again to reactivate Siri Eyes Free.
  - ▶ Press the  (Hang-Up/Back) button to turn off Siri Eyes Free.

### 📱 Siri Eyes Free

iPhone and Siri are trademarks of Apple, Inc.

Siri Eyes Free is available only on iPhone with iOS 6.0 and above.

Some commands work only on specific phone features or apps.

Some features may not be available for all countries or all areas. For details about Siri, refer to <http://www.apple.com>.

We recommend against using Siri other than in Eyes Free mode while operating a vehicle.


On Siri Eyes Free, the display remains the same and no feedback or commands appear.





While using Siri, you cannot operate the system with the built-in voice recognition.

## Display Settings

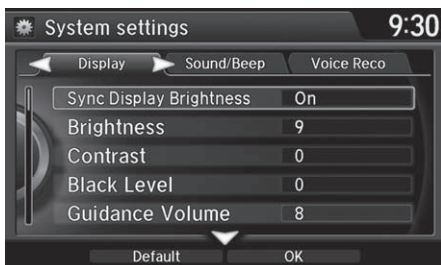 **SETTINGS** button ► **System Settings** ► **Display**

Adjusts the screen's preferences.



1. Rotate  to select an item. Press .
2. Rotate  to make the adjustment. Press .

The following items are available:

- **Sync Display Brightness:** Selects whether the display brightness synchronizes with the instrument panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.

### Display Settings



You can set separate daytime and nighttime settings for **Brightness**, **Contrast**, and **Black Level**. Adjust each setting when the display is in either daytime or nighttime mode.

## Sound and Beep Settings

 **SETTINGS** button ▶ **System Settings** ▶ **Sound/Beep**

Changes the system sound and beep settings.



Rotate  to select an item. Press .

The following items are available:

- **Guidance Volume:** Adjusts the navigation system volume level.
- **Interface Dial Feedback:** Sets if and when the system reads aloud a selection made using the Interface Dial.  
**On:** Always reads the selection.  
**Off:** Disables the feature.  
**Auto (factory default):** Reads the selection only when the vehicle is moving.
- **Message Auto Reading:** Selects whether the system automatically reads out messages, and, if selected, whether only when driving.  
**On:** Always reads the message.  
**Off:** Disables the feature.  
**Auto (factory default):** Reads the message only when the vehicle is moving.
- **Verbal Reminder:** Turns the verbal reminders on and off.  
**On:** Sets the verbal reminders.  
**Off:** Disables the feature.

### Sound and Beep Settings

#### Guidance Volume

If you set **Guidance Volume** to **0**, you will not hear route guidance or voice command confirmations. You can also adjust **Guidance Volume** by rotating the volume knob while the route guidance or voice command confirmations is announced.

If you then select **Voice** in the Map Menu, you will hear route guidance at the default volume.


#### Interface Dial Feedback

You can use this feature to minimize the need to look at the screen while operating the Interface Dial.

## Clock Adjustment

🔍 **SETTINGS** button ▶ **System Settings** ▶ **Clock**

Set the automatic adjustment of the system clock for daylight saving and international time zones.

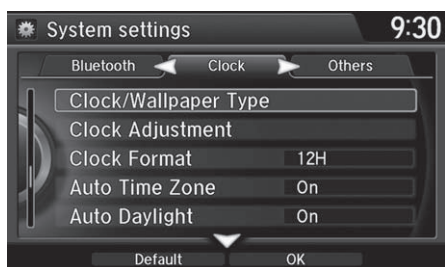

Rotate 🔄 to select an item. Press 🔄.

The following items are available:

- **Clock/Wallpaper Type:** Changes the clock display type and the wallpaper type.
  - ▶ **Setting the Clock Type** P. 29
- **Clock Adjustment:** Adjust the current time manually.
  - ▶ **Setting the Clock** P. 29
- **Clock Format:** Sets the time notation to either 12-hour clock (**12H**, factory default) or 24-hour clock (**24H**).
- **Auto Time Zone:** The navigation system automatically adjusts the clock when driving through different time zones.
  - On** (factory default): Adjusts the clock automatically.
  - Off:** Disables the feature.
- **Auto Daylight:** The navigation system automatically adjusts the clock (“spring ahead” or “fall back” by one hour) when a daylight saving time change occurs.
  - On** (factory default): Adjusts the clock automatically.
  - Off:** Disables the feature.
- **Clock Reset:** Resets the settings of all items in the **Clock** group.

### 🔍 Clock Adjustment

#### **Auto Time Zone**

If you live and work in two different time zones, you may want to turn **Auto Time Zone** to **OFF**. When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

#### **Auto Daylight**

This function is not activated in areas that have not adopted daylight saving time, even if you have set **Auto Daylight** to **ON**.

You can turn the clock display in the navigation screen on and off.

▶ **Header Clock Display** P. 37

## Setting the Clock Type


SETTINGS button ▶ System Settings ▶ Clock ▶ Clock/Wallpaper Type  
▶ Clock



1. Rotate to select an option to change the design. Press .
2. Move to select OK. Press .

## Setting the Clock

SETTINGS button ▶ System Settings ▶ Clock ▶ Clock Adjustment

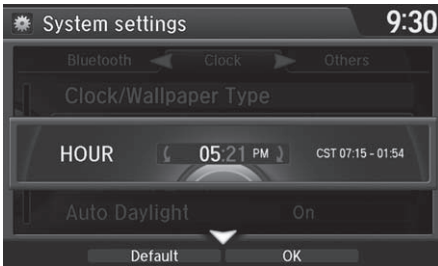

1. Rotate to select an item. Press .
2. Rotate to select a minute. Press .

## Wallpaper Settings

Select, delete, and import wallpaper pictures for display on the screen.

### Import Wallpaper

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type**



1. Connect the USB flash drive to the USB port.
2. Move to select **Wallpaper**.  
▶ The screen will change to the wallpaper list.
3. Move and rotate to select **Add New Wallpaper**. Press .
4. Rotate to select a desired picture. Press .  
▶ The preview is displayed on the left side on the screen.
5. Move and rotate to select **Start Import**. Press .  
▶ The confirmation message will appear. Then the display will return to the wallpaper list.

### Wallpaper Settings

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 255 characters.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is 10 MB.
- The maximum image size is 5,800 × 5,800 pixels.
- Up to 10 files can be saved for each driver (Driver 1 and Driver 2).
- If the USB flash drive does not have any pictures, the No files detected message appears.

## Select Wallpaper

SETTINGS button ▶ System Settings ▶ Clock ▶ Clock/Wallpaper Type  
▶ Wallpaper



1. Rotate to select a desired wallpaper. Press .
  - ▶ The preview is displayed on the left side on the screen.
  - ▶ The pop-up menu appears on the screen.



2. Rotate to select **Set**. Press .
  - ▶ The display will return to the wallpaper list.

## Select Wallpaper

From the pop-up menu, rotate to select **Preview** and press to see a preview at full-size screen.

To go back to the previous screen, press to select **OK**, or press the **BACK** button.

When the file size is large, it takes a while to be previewed.




## Delete Wallpaper

📍 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type**  
▶ **Wallpaper**



1. Rotate 🔄 to select a wallpaper that you want to delete. Press 🗑️.
  - ▶ The preview is displayed on the left side on the screen.
  - ▶ The pop-up menu appears on the screen.

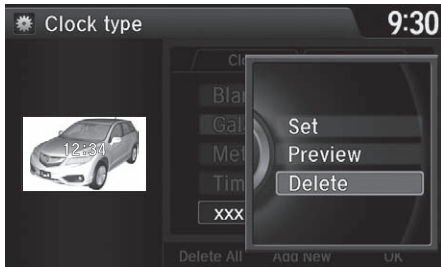



2. Rotate 🔄 to select **Delete**. Press 🗑️.
  - ▶ The confirmation message will appear.
3. Rotate 🔄 to select **Yes**. Press 🗑️.
  - ▶ The display will return to the wallpaper list.

# Unit Settings

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Units**

Sets the map units to either mile or km.



Rotate  to select the map unit.  
Press .

## Language Settings

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Language**

Set the system language used on all screens. You can choose from three languages: **English**, **Français** (French), **Español** (Spanish).



Rotate 🔄 to select the system language. Press ⏸.

### 🔗 Language Settings

Voice confirmation of cities and streets only occurs when **English** is the system language.



When **Français** or **Español** is selected, some messages continue to be displayed in English.

## Voice Command Tips

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Voice Command Tips**

Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.



Rotate  to select the map unit.  
Press .


The following items are available:



- **On** (factory default): Displays a message.
- **Off**: Disables the message.

## Background Color

🔗 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Background Color**

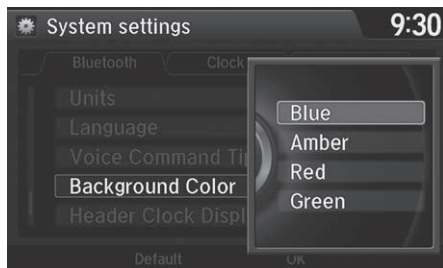Changes the background color of the navigation screen and the On Demand Multi-Use Display™.






Rotate  to select a desired color.  
Press .

## Header Clock Display

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Header Clock Display**

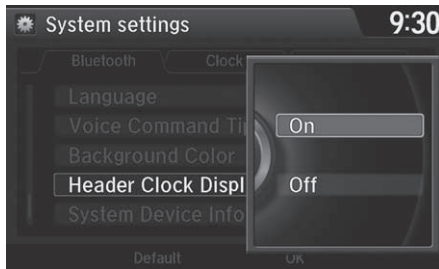Selects whether the clock display comes on.




Rotate  to select an option. Press .



The following options are available:

- **On** (factory default): The system displays the clock in the navigation screen.
- **Off**: Disables the feature.

## 📍 SETTINGS button ► Navi Settings ► Personal Info

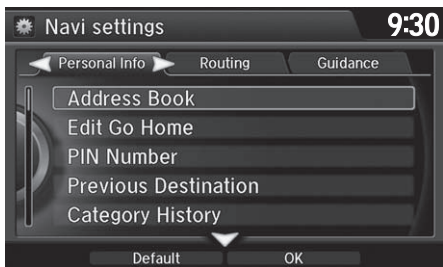Use the personal information menu to select and set your address books, home address, and PINs. You can also delete unwanted destinations from the list of previously routed destinations.



Rotate  to select an item. Press .

The following items are available:

- **Address Book:** Stores new addresses or edits your address book.  
    ➤ **Address Book** P. 39
- **Edit Go Home:** Sets or edits your home address.  
    ➤ **Home Address** P. 46
- **PIN Number:** Sets or changes your PIN.  
    ➤ **PIN Numbers** P. 47
- **Previous Destination:** Deletes the destination history.  
    ➤ **Previous Destination** P. 48
- **Category History:** Deletes the place categories you recently used.  
    ➤ **Category History** P. 49
- **Download POI:** Edits and deletes the Imported POI categories.  
    ➤ **Download POI** P. 50


## ⌘ Personal Information

Personal information cannot be backed up or moved to another navigation system.

# Address Book

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**


Store up to 200 address entries in two address books (Driver 1 and Driver 2). You can add, edit, and delete information in the address books.

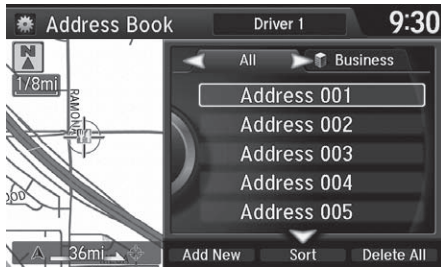


Move ◀○ or ○▶ to display only the addresses in the selected category. Move 📍 to change the user address book (**Driver 1** or **Driver 2**).

## Address Book

Up to 200 addresses can be stored to each address book of Driver 1 and Driver 2 separately.

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

 **PIN Numbers** P. 47

Any address book categories you create are also displayed.

 **Selecting an Address Book Category** P. 42




## ■ Adding an Address Book Entry

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

This section explains how to enter the name and address.



1. Move 📍 and rotate 🔄 to select **Add New Address**. Press 📁.

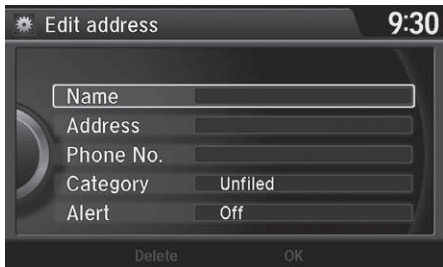

2. Rotate 🔄 to select an item. Press 📁.

The following items are available:

- **Name:** Edits the name of the entry.
- **Address:** Edits the address of the entry.
- **Phone No.:** Edits the phone number of the entry.
- **Category:** Specifies the category of the entry.

## ▣ Adding an Address Book Entry

If you do not give the address a name, one is automatically assigned (e.g., Address 001). You can re-enter, edit, or make changes to any entry. "Address" is the only required field.

- **Alert:** Alerts you when you approach the address entry.  
**On:** Beeps and displays a message when your vehicle gets near the entry.  
**Off (factory default):** Disables the feature.



3. Rotate to select **Name**. Press .
4. Enter a name or title. Move to select **OK**.
5. Rotate to select **Address**. Press .
6. Rotate to select an item for specifying the address. Press .

The following items are available:

- **Address:** Enter an address on the character input screen when prompted.  
**Address** P. 118
- **Previous Destinations:** Select a previous destination.  
**Previous Destination** P. 126
- **Current Position:** Select your current location.
- **Place Category:** Select a category to search for a place/landmark (e.g., Banking, Lodging).  
**Place Category** P. 127
- **Local Search:** Sets a destination by using Local Search.  
**Local Search** P. 129
- **Place Name:** Enter the name of a place/landmark.  
**Place Name** P. 131
- **More Search Methods:** Displays additional search method entries.  
**Entering a Destination** P. 116

Adding an Address Book Entry

When you use **Place Name** or **Place Category**, the phone number is automatically entered.

You can also add a phone number and category.

Continued

## ■ Editing an Address Book Entry

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**




1. Rotate to select the address to edit. Press .
2. Enter the name, address, phone number, and category fields.  
 ▶ **Adding an Address Book Entry** P. 40
3. Move and rotate to select OK. Press .

## ▶▶ Editing an Address Book Entry

The entered contents are displayed on the Edit address screen.

## ■ Selecting an Address Book Category

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

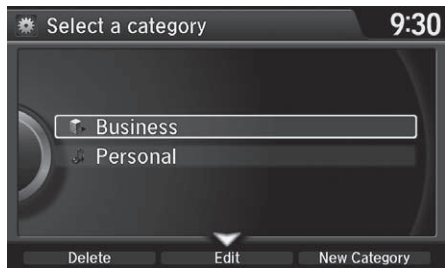




1. Rotate to select an address. Press .
  2. Rotate to select **Category**. Press .
  3. Rotate to select a category. Press .
- ▶ Create a category in advance.  
 ▶ **Creating a new category** P. 43

## ▶▶ Selecting an Address Book Category





 
Up to 100 categories (including "Unfiled") can be stored to each address book of Driver 1 and Driver 2 separately.

If you delete a category that is used by other addresses, the category type for those addresses changes to "Unfiled."

### ■ Creating a new category


1. Move  and rotate  to select **New Category**. Press .
2. Enter a name and select an icon when prompted.
  - ▶ The created category is displayed in the list of categories.








### ■ Deleting or editing a category

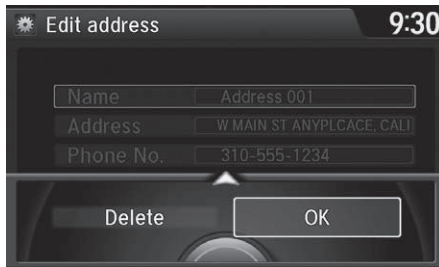1. Move  and rotate  to select **Delete** or **Edit**. Press .
2. Delete an existing category, or change the name and icon.
  - ▶ The selected category to delete is indicated with a trash icon. Move  and rotate  to select **OK**.

### ■ Deleting an Address Book Entry

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**



1. Rotate  to select the address to delete. Press .
2. Move  and rotate  to select **Delete**. Press .
3. Rotate  to select **Yes**. Press  to delete the address.

### ■ Deleting an Address Book Entry

When you transfer the vehicle to a third party, delete all address book entries.


## ■ Setting Place Shortcuts

You can store up to six addresses previously stored in your Address Book, and a home address for your preset destinations.


### ■ Storing an address on the shortcut



1. Select **Shortcuts**.
2. Select **Places**.
3. Select **Edit** or **No Entry**.
  - ▶ If you select **No Entry**, go to step 6.
4. Select **Add**.
  - ▶ All six preset icons appear.

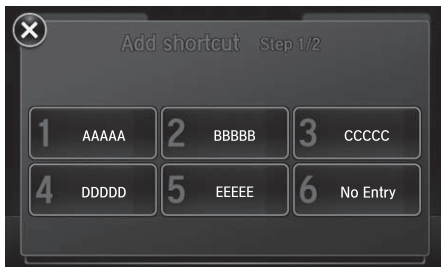

5. Select the preset number to which you want to store an address.
  - ▶ The screen changes to a list of addresses stored in your address book.

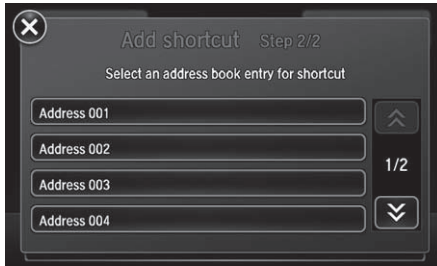

6. Select an address you want to store as a preset.


#### ■ Deleting a preset address

1. Select **Shortcuts**.
2. Select **Places**.
3. Select **Edit**.
4. Select **Delete**.
5. Select the preset number with the destination you want to delete.


## Home Address




 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Edit Go Home**

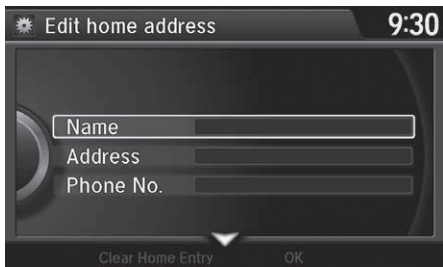Set a home address that you frequently use.




1. Edit the name, address, and phone number the same way as an address in the address book.



 **Adding an Address Book Entry** P. 40




 

2. Move  and rotate  to select **OK**. Press .

### Home Address

If you have PIN-protected your home addresses, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

 **PIN Numbers** P. 47

If your home street is not in the system database, park on the nearest verified street to your home. When entering the "Address" field, rotate  to select **Current Position** to use your current location as the home address and press .

You can delete a home address if necessary. Move  and rotate  to select **Clear Home Entry**. Press . Rotate  to select **Yes**. Press .

When you transfer the vehicle to a third party, delete all home addresses.



The home icon is shown on the map screen on the 1/20 and 1/8 mile (80 and 200 m) scales.

# PIN Numbers



 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **PIN Number**


Set a four-digit PIN for protecting personal addresses and your home address. Once you set a PIN, you are prompted to enter it whenever you access a personal address or a home address.



1. Rotate  to select the PIN to create. Press .



2. Rotate  to select a digit to enter. Press  to select **OK**. Repeat to enter a new four-digit PIN.

3. Re-enter the new PIN, when prompted, to confirm the number you just entered. Press  to select **OK**.



▶ If you have not entered the same number both times, an "INCORRECT PIN" message is displayed. Enter your PIN again.

## PIN Numbers

### **PIN**

Personal Identification Number (PIN) is a password used to access personal data.

PINs are optional. If you choose to use a PIN, keep a note of the number in a secure location. If you forget your PIN, a dealer will have to reset the navigation system and all of your stored information will be erased. The factory default is no PIN.

If you want to stop using a PIN, move  to select **Turn Off PIN Entry**. Press .





## Previous Destination

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Previous Destination**



The navigation system maintains a list of your previously routed destinations as a shortcut for entering the same destination in the future. You can delete some or all of your previous destinations from the list.



1. Rotate  to select the destination to delete. Press .
  - ▶ Repeat the procedure as necessary.
  - ▶ Items to be deleted are indicated with a trash icon.





Trash icon

2. Move  and rotate  to select **OK** to delete the selected destinations.

### Previous Destination


Up to 50 destinations can be stored.

To cancel the selection of a previous destination, rotate  to highlight the destination again. Press  to de-select it.


# Category History

**SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Category History**

The navigation system maintains a list of your recently used place categories as a shortcut for selecting the same categories in the future. You can delete some or all of your recently used categories from the list.

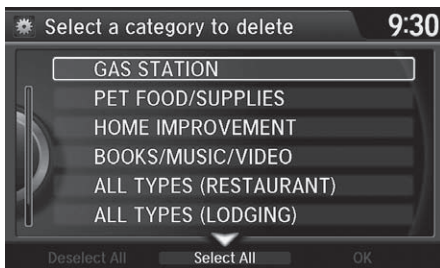

1. Rotate to select the category to delete. Press .
  - ▶ Repeat the procedure as necessary.
  - ▶ Items to be deleted are indicated with a trash icon.

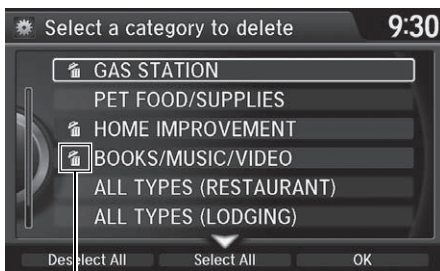

Trash icon

2. Move and rotate to select **OK** to delete the selected categories.


## Category History

Up to 50 categories can be stored.

To cancel the selection of a category, rotate to highlight the category again. Press to de-select it.


## Download POI

Import custom Points of Interest (POI) into the navigation system and set the POI as a destination. You can also add, edit, and delete POIs.

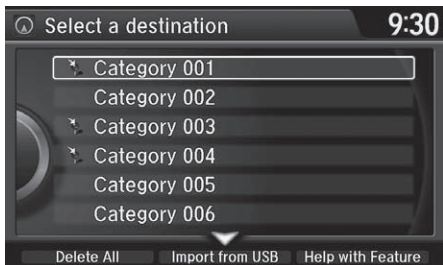

### Importing POI Categories

**MENU** button (on map) ► **More Search Methods** ► **Download POI**

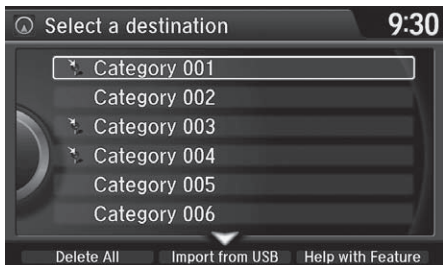

1. Connect a USB flash drive with stored POI data to the USB connector.
2. Move and rotate to select **Import from USB**. Press .

### Importing POI Categories

For more information about connecting a USB flash drive.


**Connecting a USB Flash Drive** P. 241

POI data in csv and kml formats can be imported.

You can download POI data from various POI websites.

If you select **From AcuraLink**, you can download POI data from the AcuraLink® server.


**AcuraLink®** P. 300

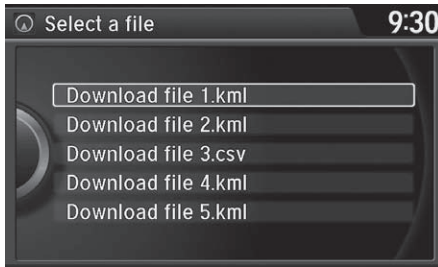

3. Rotate to select a category to import. Press .

## Editing POI Categories

**SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Download POI**

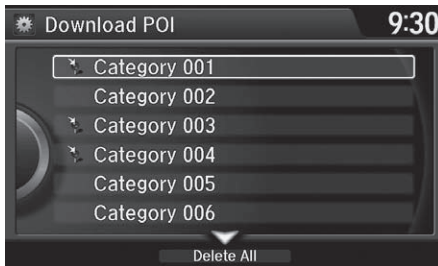




1. Rotate to select the downloaded POI category to edit. Press .

### Editing POI Categories

If you select **From AcuraLink**, you can edit **Alert** only.

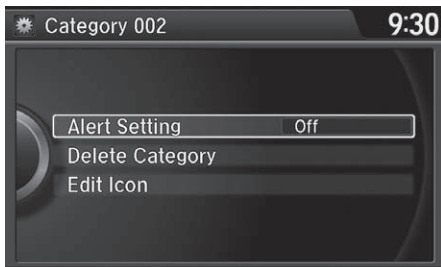Continued




2. Rotate  to select an item. Press .



The following items are available:

- **Alert Setting:** Alerts you when you approach the places/landmarks in the category.  
On: Beeps and displays a message when your vehicle gets near the places/landmarks in the category.  
Off (factory default): Disables the feature.
- **Delete Category:** Deletes all places/landmarks and icon in the selected category.
- **Edit Icon:** Changes the category icon.

 **SETTINGS** button ► **Navi Settings** ► **Routing**

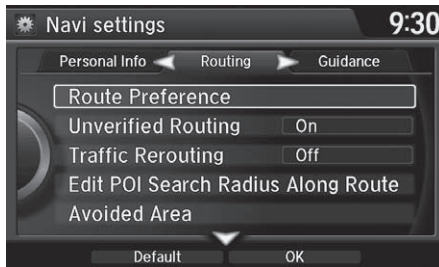Choose various settings that determine the navigation system functionality during route calculation.



Rotate  to select an item. Press .


The following items are available:

- **Route Preference:** Changes the route preferences (calculating method).  
    ➤ **Route Preference** P. 54
- **Unverified Routing:** Sets whether you use the route guidance in unverified areas.  
    ➤ **Unverified Routing** P. 56
- **Traffic Rerouting:** Sets whether you use automatic recalculation based on traffic information.  
    ➤ **Traffic Rerouting** P. 58
- **Edit POI Search Radius Along Route:** Sets the distance from the route to find waypoints.  
    ➤ **Edit POI Search Radius Along Route** P. 59
- **Avoided Area:** Specifies areas to avoid when calculating a route.  
    ➤ **Avoided Area** P. 60

## Route Preference

🔧 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Route Preference**

Change the route preference by selecting minimum or maximum driving methods.

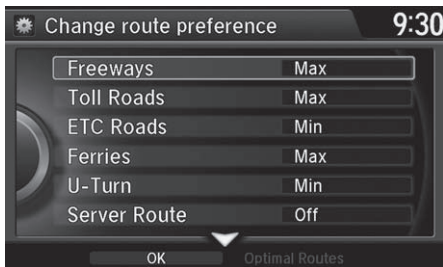

1. Rotate to select an item. Press .
2. Rotate to select **Min** or **Max**. Press .
  - ▶ Repeat step 1 and 2 as necessary.
3. Move to select **OK**. Press .

### Route Preference

The calculated route may be the shortest route or the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
- Right turns are favored over left turns or U-turns.
- Time-restricted turns (turns prohibited at certain times of the day) are not used.


Check the ferry schedule when the calculated route includes ferry route.

ETC is short for the Electronic Toll Collection system.

#### Server Route



- You can view three routes distributed from AcuraLink®.
  - ▶ **Viewing the Routes** P. 143
- Set to **On** and select **Optimal route** to select your desired route.
  - ▶ **Optimal Routes** P. 55




## Optimal Routes



 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Route Preference**

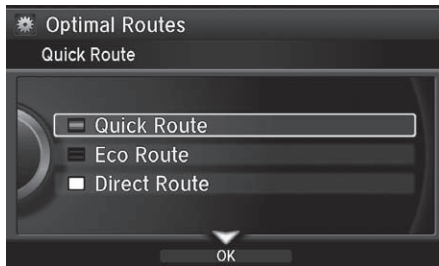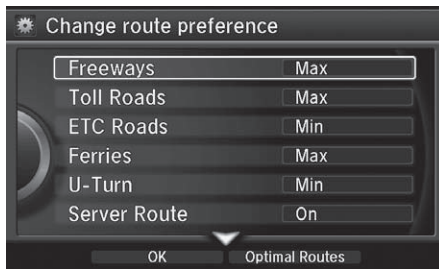


You can select desired routes by sorting the route list. The three top routes can be displayed on the **Select a route** screen.

 **Viewing the Routes** P. 143



1. Move  and rotate  to select **Optimal Routes**. Press .

2. Rotate  to select a route type. Press .

3. Move  and rotate  to select **OK**. Press .

## Optimal Routes


**Optimal Routes** is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).



# Unverified Routing

🔗 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Unverified Routing**

Receive turn-by-turn map and voice guidance in unverified areas.

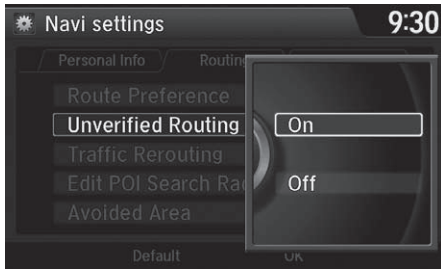



Rotate 🔄 to select **On** or **Off**. Press 🔄.

Differences	Off	On (factory default)
On or Off?	The driver wishes to manually navigate using the navigation map and choose the streets that lead to the destination.	The driver chooses to let the navigation system suggest possible routing, knowing that the guidance may not be accurate.
Route calculation	Route is usually longer, using verified roads whenever possible.	Route is shorter, but uses unverified (purple) streets that may not be accurate.

## Unverified Routing

Unverified roads are found in rural areas, and typically include residential streets away from the center of a town. They may not be accurate, and can contain errors in location, naming, and address range.

Unverified roads are shown only when viewing the map in the 1/20, 1/8, 1/4, 1/2, 1 and 2 (mile) / 80, 200, 400, 800 (m), 1.6 and 3.2 (km) map scales.

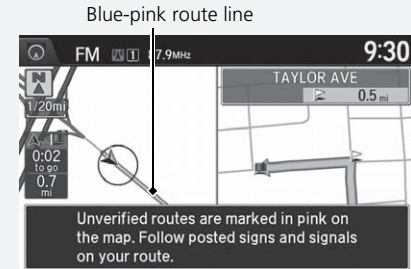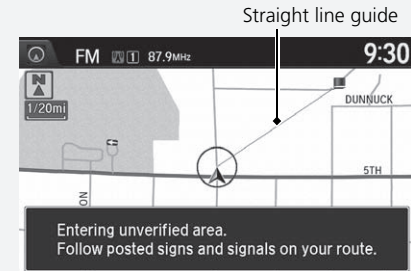

Differences	Off	On (factory default)
Route line	<p>The route line uses verified streets only (when possible). If <b>Straight Line Guide</b> is set to <b>On</b>, a pink vector line is displayed on the map that continually points to your destination.</p> <p>➤ <b>Straight Line Guide</b> P. 78</p>	<p>A blue-pink route line highlights suggested unverified streets on the map while traveling to your destination.</p>
Cautionary messages	<p>Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when starting route guidance, approaching an unverified area, and entering an unverified street.</p>	<p>Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when entering an unverified street.</p>
Guidance (map/voice)	<p>There is no turn-by-turn map or voice guidance.</p>	<p>Voice guidance commands end with the phrase “if possible” to remind you to verify all traffic restrictions.</p>
Directions list	<p>A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.</p>	<p>A direction list is provided showing street names and turn symbols in pink.</p>



## Traffic Rerouting

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Traffic Rerouting**

A faster route can be calculated based on continuously updated traffic information.

➤ **Traffic Rerouting™** P. 156



Rotate  to select an option. Press .

The following options are available:

- **On:** The system reroutes automatically based on traffic information.
- **Off** (factory default): Disables the feature.

### ☒ Traffic Rerouting

**Traffic Rerouting** requires an AcuraLink Real-Time Traffic™ subscription.

➤ **AcuraLink®** P. 300

Automatic traffic rerouting may not provide a detour route depending on circumstances.


## Edit POI Search Radius Along Route





📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Edit POI Search Radius Along Route**

Select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

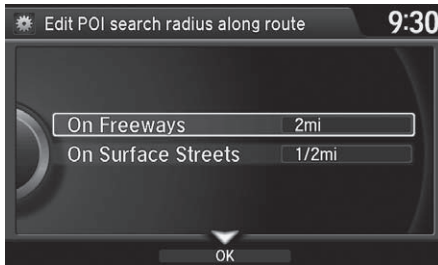📖 **Adding Waypoints** P. 161

You can specify a different search distance for freeways/highways and surface streets.




1. Rotate  to select an item. Press .
2. Rotate  to select a search distance. Press .

The following items are available:

- **On Freeways (U.S.)/On highways (Canada):** 1, 2, 5, or 10 miles (1.6, 3, 8, or 16 km) can be set. Factory default is 2 miles (3 km).
- **On Surface Streets:** 1/2, 1, 2, or 5 miles (0.8, 1.6, 3, or 8 km) can be set. Factory default is 1/2 mile (0.8 km).

### ✎ Edit POI Search Radius Along Route

The search distance does not affect the search range used for the Find Nearest voice commands (e.g., say  "Find nearest gas station").

## Avoided Area

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Avoided Area**

Specify up to five areas to avoid (e.g., road construction, closures), if possible, when the system calculates routes to your destination.



1. Move 📍 and rotate 🔄 to select **New Area**, or rotate 🔄 to select an existing area to edit.



2. Rotate 🔄 to select **Name** to label the area to avoid. Press 📍.
3. Enter a name or title. Move 📍 to select **OK**.
4. Rotate 🔄 to select **Area** to define the area to avoid. Press 📍.

The following options are available (after an area is set):

- **View Area:** Displays the selected avoided area on the map.
- **Delete:** Deletes the selected avoided area.

### 📍 Avoided Area



The maximum size of one side of an “avoid area” is approximately 1/2 mile (800 m).

If your selected area contains a freeway/highway, you are asked “Do you want to avoid freeways (highways)?” Answering “No” allows you to use a route through an avoid area on a freeway/highway without any pop-up messages.

You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.


You can enter up to 25 characters for the name.






5. Rotate  to select a method for specifying the area. Press .

The following options are available:

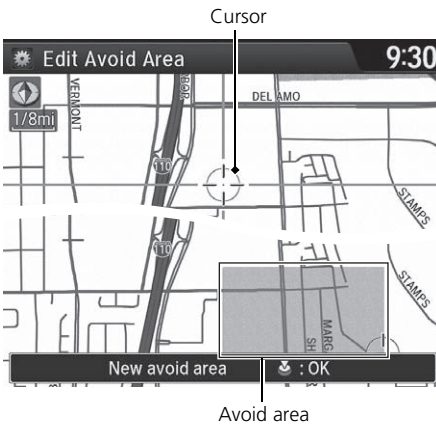- **Address:** Specify the general area by entering an address.
  - **Address** P. 118
- **Map Input:** Specify the general area by map input.
  - **Map Input** P. 138



6. If you select **Map Input**, scroll the map to position the cursor over your desired start point, adjusting the map scale as necessary. Press  to mark the start point.
  - ▶ To redo the area selection, press the **BACK** button.
7. Scroll the map to “draw” the area. Press  to mark the end point.
8. Press  to select **OK**.
  - ▶ The area you specify is displayed in the list of areas to avoid.



**✕ Avoided Area**

Avoid area can be set in the 1/20, 1/8, or 1/4 mile (80, 200, or 400 m) map scales.

## 📍 SETTINGS button ► Navi Settings ► Guidance

Choose various settings that determine the navigation system functionality during route guidance.



Rotate  to select an item. Press .

The following items are available:

- **Guidance Mode:** Sets whether to display only the map screen or a split map-guidance screen.  
    ➤ **Guidance Mode** P. 63
- **Street Name Guidance** (U.S. models): Sets whether to read out the street names during voice guidance.  
    ➤ **Street Name Guidance** P. 65
- **Non-map Screens:** Sets whether the guidance screen interrupts the screen display.  
    ➤ **Non-map Screens** P. 66
- **Guidance Point:** Sets whether to display the guidance information to the destination or the next waypoint.  
    ➤ **Guidance Point** P. 67
- **Estimated Time:** Sets whether to display the remaining time or arrival time to the guidance point.  
    ➤ **Estimated Time** P. 68

# Guidance Mode

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Guidance mode**


Select the display mode for the map and guidance screens.



Rotate to select an option. Press .

The following options are available:

- **Map** (factory default): Displays only the map screen. When you approach a guidance point, the next guidance point appears.

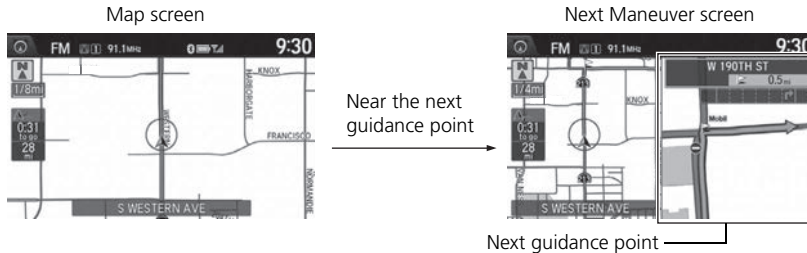

## Guidance Mode

The guidance mode can also be selected from the map menu.


➤ **Map Menu** P. 151

Press the **NAV** button to switch between the map, next guidance direction, and a list of guidance directions.

### Turn-by-Turn Directions

The next guidance point appears on the multi-information display.


➤ **Turn-by-Turn Directions** P. 10

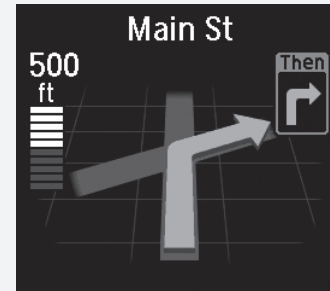


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.



- **Direction List:** Displays the map and direction list simultaneously on the map screen. When you approach a guidance point, the next guidance point appears.

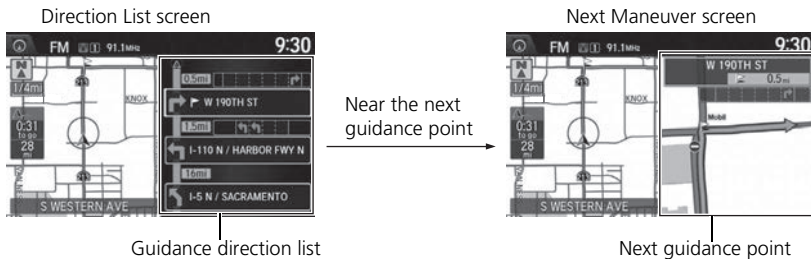

- **Next Maneuver:** Displays the map and next guidance point simultaneously on the map screen.

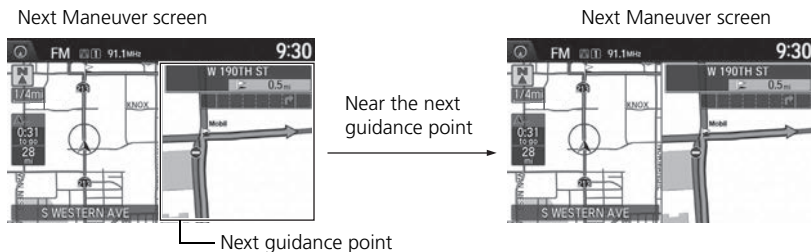



# Street Name Guidance

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Street Name Guidance**

The navigation system includes the street names during voice guidance (e.g., “Turn right on Main Street”).



Rotate  to select an option. Press .

The following options are available:

- **On** (factory default): Voice guidance includes the street names.
- **Off**: Disables the feature.

## Street Name Guidance

This feature is only available when the system language is set to **English**.

This feature may not be available in non-English speaking areas.



This function is available on U.S. models only.

## Non-map Screens

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Non-map Screens**

The navigation system temporarily interrupts the screen display to view the guidance screen as you approach a guidance point.



Rotate  to select an option. Press .


The following options are available:



- **On:** The guidance screen interrupts other mode screens (e.g., audio, phone, etc, except the rear view camera mode).
- **Off** (factory default): Disables the feature.

## Guidance Point

 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Guidance Point**

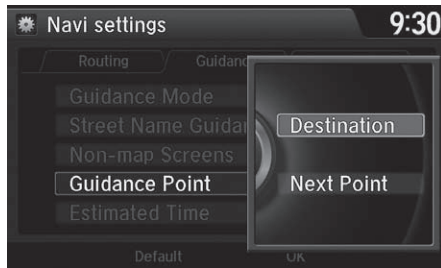Set the guidance point to display on the map screen.



Rotate  to select an option. Press .

The following options are available:



- **Destination** (factory default): Displays the remaining/arrival time and distance to the destination.
- **Next Point**: Displays the remaining/arrival time and distance to the next waypoint.

## Estimated Time

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Guidance** ▶ **Estimated Time**

Select the estimated time to display on the screen.




Rotate  to select an option. Press .



The following options are available:

- **Arrival**: Displays the arrival time to the destination or the next waypoint.
- **Remaining** (factory default): Displays the remaining time to the destination or the next waypoint.

## **SETTINGS** button ► **Navi Settings** ► **Map**

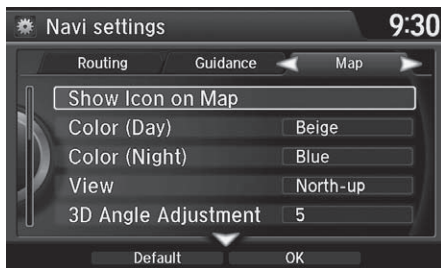Select the landmark icons to display on the map, change the orientation of the map, display your current location, and learn the meaning of the icons, colors, and symbols displayed on the map.



Rotate  to select an item. Press .

The following items are available:

- **Show Icon on Map:** Selects the icons to display on the map.  
    ➤ **Showing Icons on Map** P. 71
- **Color (Day):** Selects the color of the map for the Day mode.  
    ➤ **Color** P. 73
- **Color (Night):** Selects the color of the map for the Night mode.  
    ➤ **Color** P. 73
- **View:** Selects the map orientation (**North-up**, **Heading-up**, or **3D map**).  
    ➤ **View (Map Orientation)** P. 76
- **3D Angle Adjustment:** Adjusts the viewing angle for the 3D map.  
    ➤ **3D Angle Adjustment** P. 77
- **Straight Line Guide:** Sets whether to display a straight guideline to the destination or waypoint.  
    ➤ **Straight Line Guide** P. 78

- **Current Location:** Displays and saves your current location.
  - ▶ **Current Location** P. 79
- **Map Legend:** Displays an overview of the map features.
  - ▶ **Map Legend** P. 80
- **Display Tracking:** Sets whether to display the tracking dots on the map.
  - ▶ **Display Tracking** P. 84
- **Delete Tracking:** Deletes the tracking dots on the map.
  - ▶ **Deleting Tracking Dots** P. 85
- **Correct Vehicle Position:** Adjusts the position of the vehicle on the map.
  - ▶ **Correct Vehicle Position** P. 86
- **System Device Information:** Views database, software, device, and vehicle identification information.
  - ▶ **System Device Information** P. 314
- **Map Data Update:** Checks the map data update status when updating the map database.
  - ▶ **Map Data Update** P. 314

## Showing Icons on Map

**SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Show Icon on Map**

Select the icons that are displayed on the map.



1. Rotate to select an item. Press .



2. Rotate to select an option. Press .

▶ Repeat step 1 and 2 as necessary.

3. Move to select OK. Press .

The following options are available:

- **All On:** Displays the landmark icons.  
**Map Screen Legend** P. 9
- **Customize:** Fine-tunes the icon display.  
**Fine-tuning the Icons** P. 72
- **Off:** Hides the landmark icons.

### Showing Icons on Map

You can display or hide the icons using voice commands on the Voice Portal screen (e.g., say "Display hospital").

**Map Display Commands** P. 348

If you have PIN-protected your address book, enter your PIN when prompted. Move to select OK. PINs are optional.




**PIN Numbers** P. 47







## ■ Fine-tuning the Icons

Icons in some categories can be fine-tuned to display or hide.

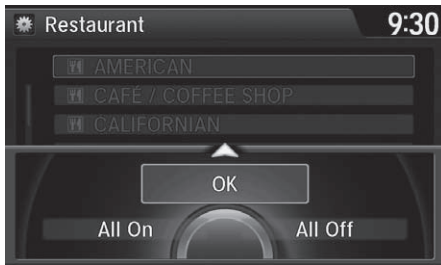

1. Rotate  to select the icons to display on the map. Press .
  - ▶ Pressing  toggles the icon display on or off.
  - ▶ Repeat the procedure as necessary.




2. Move  and rotate  to select OK. Press .



# Color

Set separate map colors for Day and Night modes.

## Color (Day)

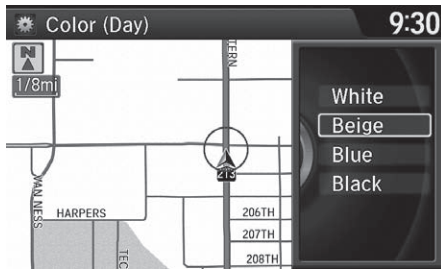
SETTINGS button ▶ Navi Settings ▶ Map ▶ Color (Day)



Rotate  to select a color for the Day mode. Press .

## Color (Night)

SETTINGS button ▶ Navi Settings ▶ Map ▶ Color (Night)

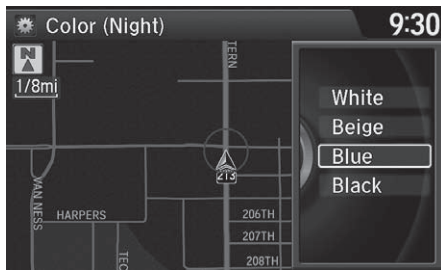

Rotate  to select a color for the Night mode. Press .


### Color (Day)

The factory default is set to Beige.





### Color (Night)

The factory default is set to Blue.

## ■ Switching Display Mode Manually

Set the screen brightness separately for Day and Night modes. Press the  (Display Mode) button to cycle through the display modes (Day to Night to Off).






1. Press the  (Display Mode) button.
  - ▶ The Brightness bar is displayed for a few seconds.
  - ▶ Rotate  to adjust the brightness. Press .
2. Press the  (Display Mode) button again.
  - ▶ Repeat the procedure to switch the display modes.

## ▣ Switching Display Mode Manually

A visual guide helps you see the difference between Day and Night modes.

▶ **Day or Night Mode** P. 10

■ Illumination	■ Priority	■ Operation
 button	1	Selects Day, Night, or Off display mode. This button has the highest priority and overrides all other display control adjustments listed below. <b>Remember:</b> Once you press this button, you assume full manual control of the display mode until the power mode is set to VEHICLE OFF (LOCK).
Sunlight sensor (see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides the Night display and displays the Day display mode. <b>Remember:</b> If desired, use the  (Display Mode) button to override this automatic choice.

Illumination	Priority	Operation
Dash illumination adjustment knob (see your Owner's Manual for location)	3	When headlights are turned on, and you wish to have the Day display mode, adjust the illumination to the full brightness setting (beeps). <b>Remember:</b> Adjust the dash brightness back to mid-range to allow auto switching by sensing the headlights are on or off.
Headlights (Auto/ On/Off)	4	When turned on, the display changes to Night display mode. The previous three controls listed above can "cancel" this function. <b>Remember:</b> Use the  (Display Mode) button, or adjust the dash illumination to full brightness, to set the display to your desired choice.
Screen color choice	N/A	The user can select the color of the screen that will be displayed for the Day and Night display modes described above.

## View (Map Orientation)

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **View**

Select the map orientation.



Rotate 📶 to select an option. Press 📶.

The following options are available:

- **North-up:** Displays the map with North always pointing up.
- **Heading-up:** Displays the map so that the direction you are traveling is always pointing up.
- **3D Map:** Displays the bird's eye view map.

### 📶 View (Map Orientation)

- 📶 "Display Heading up" (on Voice Portal screen),
- 📶 "Display North up" (on Voice Portal screen), 📶
- "Display 3D map" (on Voice Portal screen)

The red arrow in the symbol always points North.

Heading-up and 3D map view switch to the North-up view on 2 miles (3.2 km) or wider map scale.

The bird's eye view map switches to the Heading-up map while scrolling the map.


The viewing angle for the bird's eye view can be adjusted.



📶 **3D Angle Adjustment** P. 77

## 3D Angle Adjustment

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **3D Angle Adjustment**

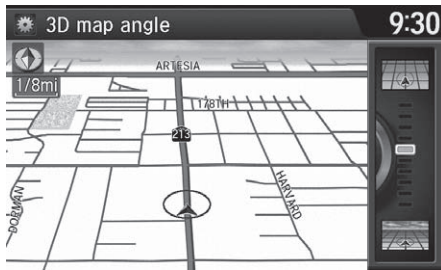Adjust the viewing angle.





Rotate  to adjust the angle. Press .

## Straight Line Guide

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Straight Line Guide**

Set whether to display a straight guideline to the destination or waypoint.



Rotate  to select an option. Press .

The following options are available:



- **On** (factory default): Displays the straight guideline on the map.
- **Off**: Disables the feature.

# Current Location

📍 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Current Location**

Display and save your current location for future use as a destination. The address, latitude, longitude, and elevation of your current location are displayed.

■ **To save your current location in the address book:**

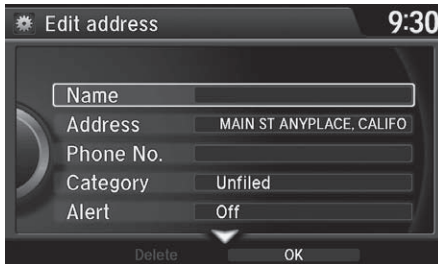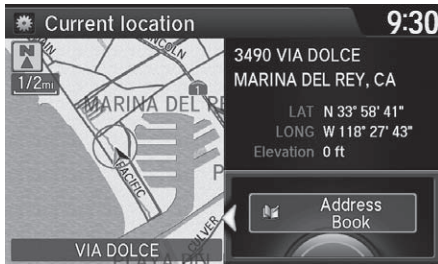

1. Press 📍 to select **Address Book**.  
 ► Move ⏪ to scroll the map as necessary.
2. Edit the name, phone number, and category.  
 ➡ **Address Book** P. 39
3. Move 📍 and rotate 🔄 to select **OK**. Press 📍.

📍 **Current Location**

📍 "Display Current Location" (on Voice Portal screen)

You can also save the current location by saying 📍 "Register the Current Location".

If you have PIN-protected your address book, enter your PIN when prompted. Press 📍 to select **OK**. PINs are optional.

➡ **PIN Numbers** P. 47

The elevation is not displayed if the system is receiving insufficient GPS information. When elevation is displayed, it may differ with roadside elevation signs by ±100 ft (±30 m) or more.

Saving your current location does not change or cancel your current route.



## Map Legend

🔗 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Map Legend**

See an overview of the map lines, areas, routes, traffic information, and navigation icons.



Move ◀○ or ○▶ to select an item.

▶ The system displays the map legend.

### Map Legend

A visual guide helps you see the map legend.

➤ **Map Screen Legend** P. 9

➤ **AcuraLink Real-Time Traffic™** P. 14


## Map Scale and Functions

The functions that are available from the map screen depend on the map scale.

Function	page	Map Scale (top: mile, bottom: metric)											
		1/20	1/8	1/4	1/2	1	2	5	15	50	150	350	1000
		80	200	400	800	1.6	3.2	8	24	80	240	560	1600
<b>Icon display</b>													
Landmark icon	9	✓	✓										
Exit info.	9			✓	✓	✓							
One-way traffic	9	✓											
Waypoint "flag"	10	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Traffic incident	14	✓	✓	✓	✓	✓	✓	✓					
<b>Map orientation</b>													
Heading-up	76	✓	✓	✓	✓	✓							
North-up	76	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3D map	76	✓	✓	✓	✓	✓							
<b>Others</b>													
Tracking dots	148	✓	✓	✓	✓								
Unverified road	9	✓	✓	✓	✓	✓	✓						
Map features	9	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Avoid areas	60	✓	✓	✓									
Traffic speed	14	✓	✓	✓	✓	✓	✓	✓					


Continued

## Map Scale and Functions

You can change the map scale using voice commands on the Voice Portal screen (e.g., say  "Display 2 mile (3 km) scale").

 **Map Scale Commands** P. 348

You can change between mile or km.

 **Unit Settings** P. 33


## ■ Map Icons and Functions

Display or hide all icons on the map screen, with the exception of Honda/Acura Dealer icons which are always shown.


### ■ Landmark icon

Type	Icon display control	Icon selectable	Icon searchable
Honda/Acura dealer	Always on	Yes	Yes
Hospital	Yes	Yes	Yes
School	Yes	Yes	Yes
ATM	Yes	Yes	Yes
Gas station	Yes	Yes	Yes
Restaurants	Yes	Yes	Yes
Post office	Yes	Yes	Yes
Grocery store	Yes	Yes	Yes
Hotel/Lodging	Yes	Yes	Yes
Police station	No icon	No	Yes
Shopping, Tourist attraction, Bank	No icon	No	Yes
Parking garage	Yes	Yes	Yes
Parking lot	Yes	Yes	Yes
Freeway/Highway exit info.	Yes	Yes	No

## ☒ Map Icons and Functions

You can display or hide the icons using voice commands on the map screen (e.g., say  "Display hospital").

 **Map Display Commands** P. 348

Some icons, like police stations, are not shown, but you can still locate the nearest one with the Find Nearest voice command (e.g., say  "Find nearest police station").

 **Find Place Commands** P. 349


### Icon display control

Icons that can be displayed or hidden using the Interface Dial or voice command.

### Icon selectable

Icons that can be selected as a destination using the Interface Dial.
 
### Icon searchable


Icons that can be searched using the  Find Nearest voice command.

■ Traffic icon

Type	Icon display control	Icon selectable	Icon searchable
Traffic incident	Yes	No	Yes

☒ Traffic icon

When you use the Interface Dial to position the cursor (round red circle) over the traffic incident icon, you can view the summary of the incident.



Press  on the traffic incident icon to view a pop-up message describing the incident in detail.

## Display Tracking

🔧 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Display Tracking**

The navigation system can be set to display white tracking dots (“breadcrumbs”) on the map screen.




Rotate  to select an option. Press .

The following options are available:

- **On:** The system displays the white tracking dots.  
    ➡ **Tracking Dots** P. 148
- **Off** (factory default): Disables the feature.

## ■ Deleting Tracking Dots

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Delete Tracking**

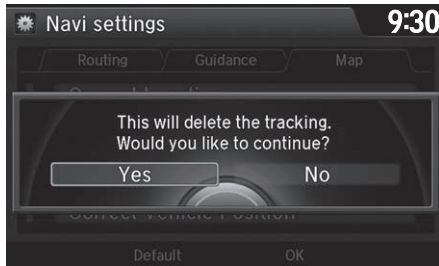

Rotate 🔄 to select **Yes**. Press 📍.


## ☒ Deleting Tracking Dots






When you transfer the vehicle to a third party, delete the tracking dots.

## Correct Vehicle Position

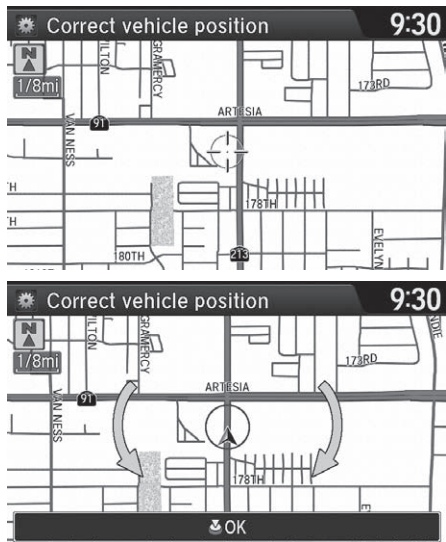📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **Correct Vehicle Position**

Manually adjust the current position of the vehicle as displayed on the map screen if the position appears to be incorrect.



1. Put the vehicle in Park.
2. Rotate  to select **Correct Vehicle Position**. Press .
3. Scroll the map to position the cursor over at your correct position. Press .
4. Rotate  to position the arrowhead in the correct direction the vehicle is facing.
5. Press  to select **OK**.

### 🔍 Correct Vehicle Position

An apparent position error can occur where buildings, tunnels, and other objects block or reflect the GPS signals, forcing the system to use “dead reckoning” to determine your location and direction.


Using this function to adjust vehicle position is not recommended. When the system reacquires a GPS signal, it will automatically place the vehicle in the correct location.

If you continually have to adjust the vehicle position, you may have problems with the GPS reception or there may be database errors.

➡ **System Limitations** P. 336

## Changing the Screen Settings

Adjusts the screen settings of the On Demand Multi-Use Display™.

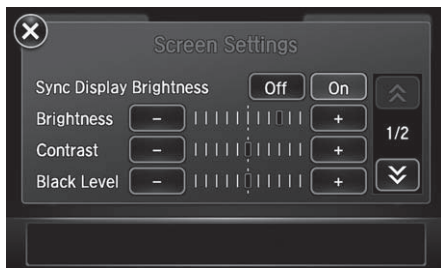

1. Select **More**.
2. Select **Screen Settings**.
3. Use **+**, **-** or other icons to adjust the setting.
  - ▶ Use the **▲/▼** icons to turn the page.
  - ▶ Select **X** to go back to the previous screen.



The followings are adjustable screen settings:


- **Sync Display Brightness:** Selects whether the screen brightness synchronizes with the instrument panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.
- **Display:** Changes between the daytime or nighttime modes.
- **Beep:** Turns on or off the beep that sounds every time you touch the screen.
- **Keyboard:** Changes the on-screen keyboard from the alphabetical order to the qwerty type.
- **Fade Timer:** Sets the screen black out timing.



Use the audio/information screen to customize certain features.


 
 
 
 

## ■ How to customize

Select your desired setting item by pressing the **SETTINGS** button, then rotating  while the power mode is ON and the vehicle is at a complete stop. Press .

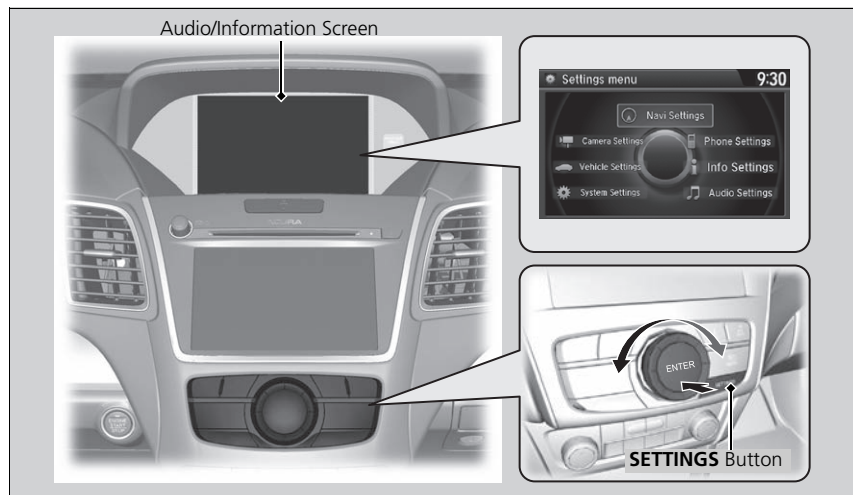

## » Customized Features


When you customize settings, make sure that the vehicle is at a complete stop and shift to **P**.


To customize other features, rotate , move , , , or , and press .


» **List of customizable options** P. 95


## ■ Customization flow

Press the **SETTINGS** button.

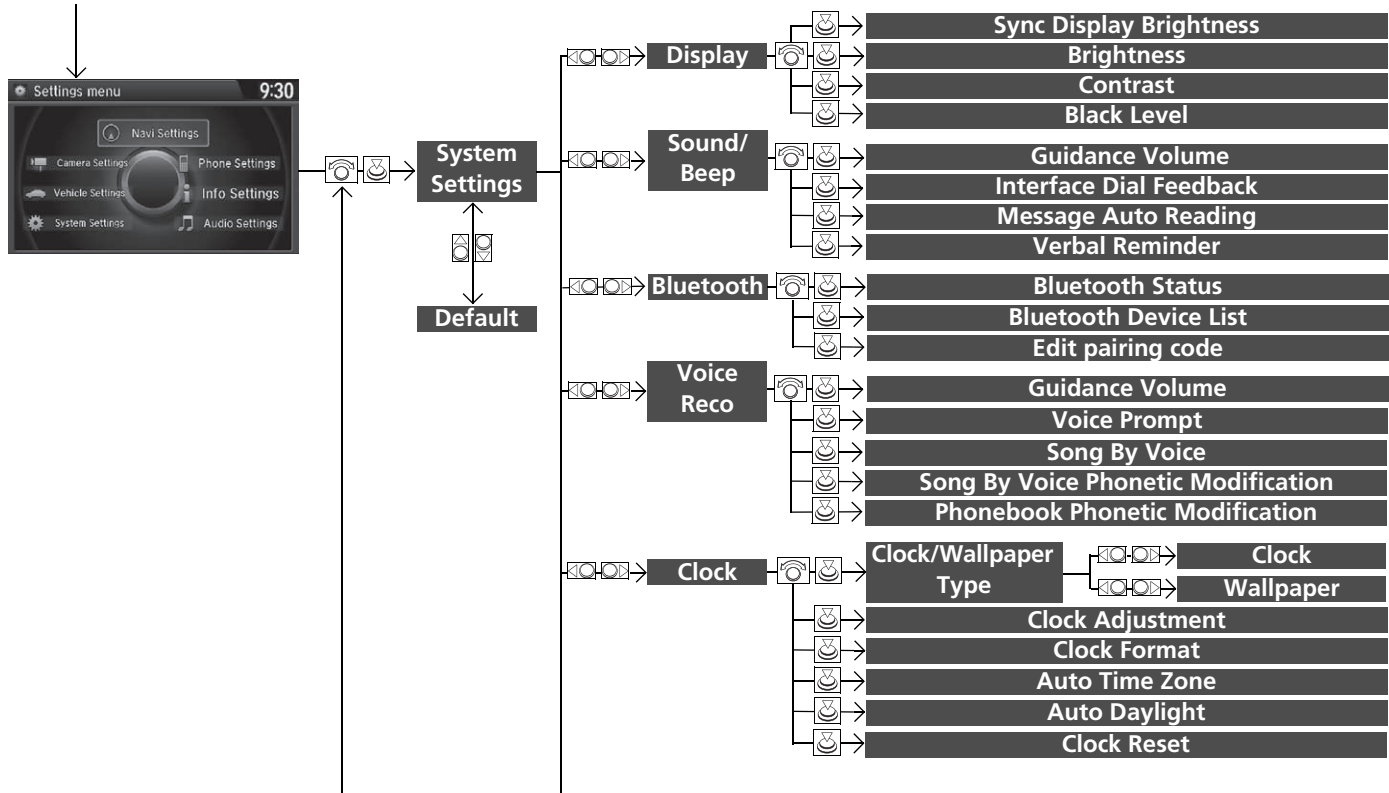


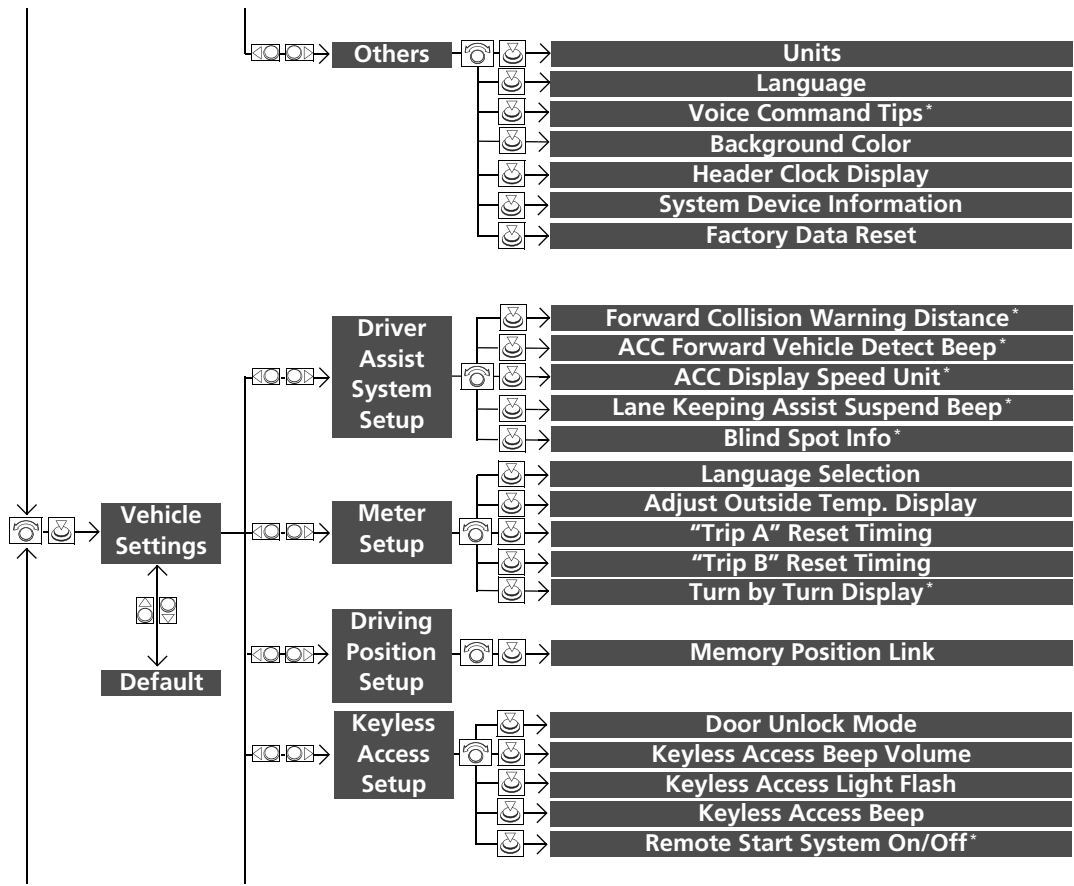

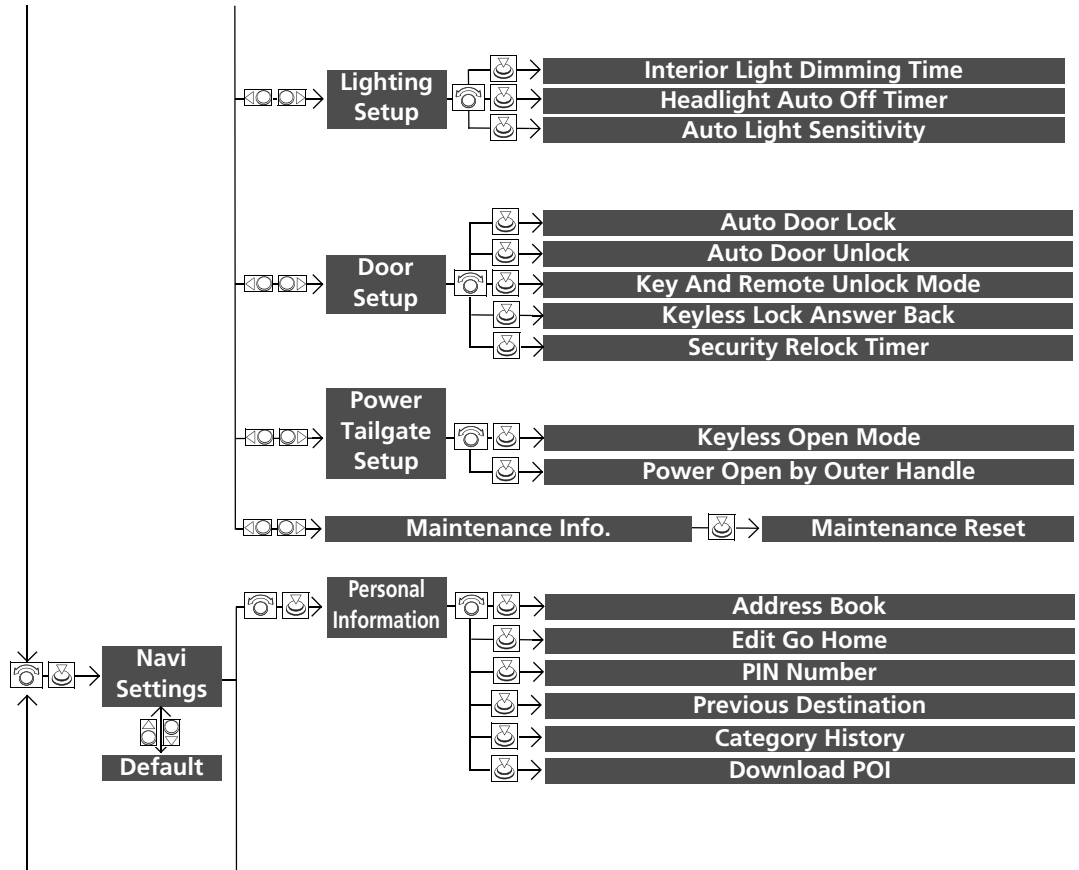


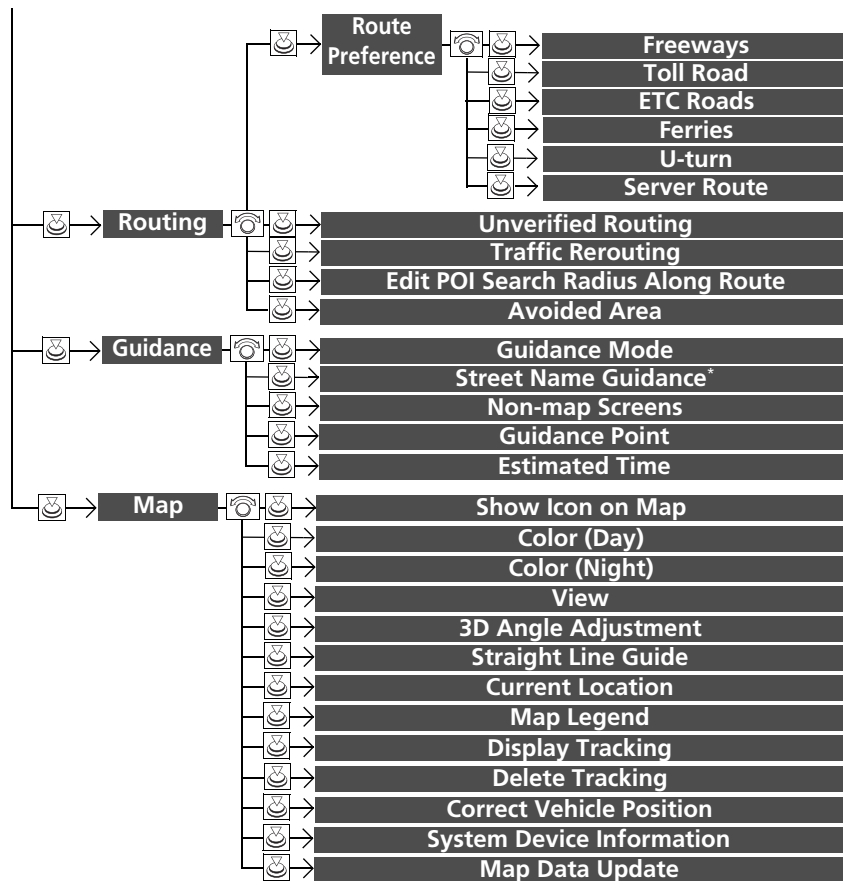

\*: This function is available on U.S. models only.

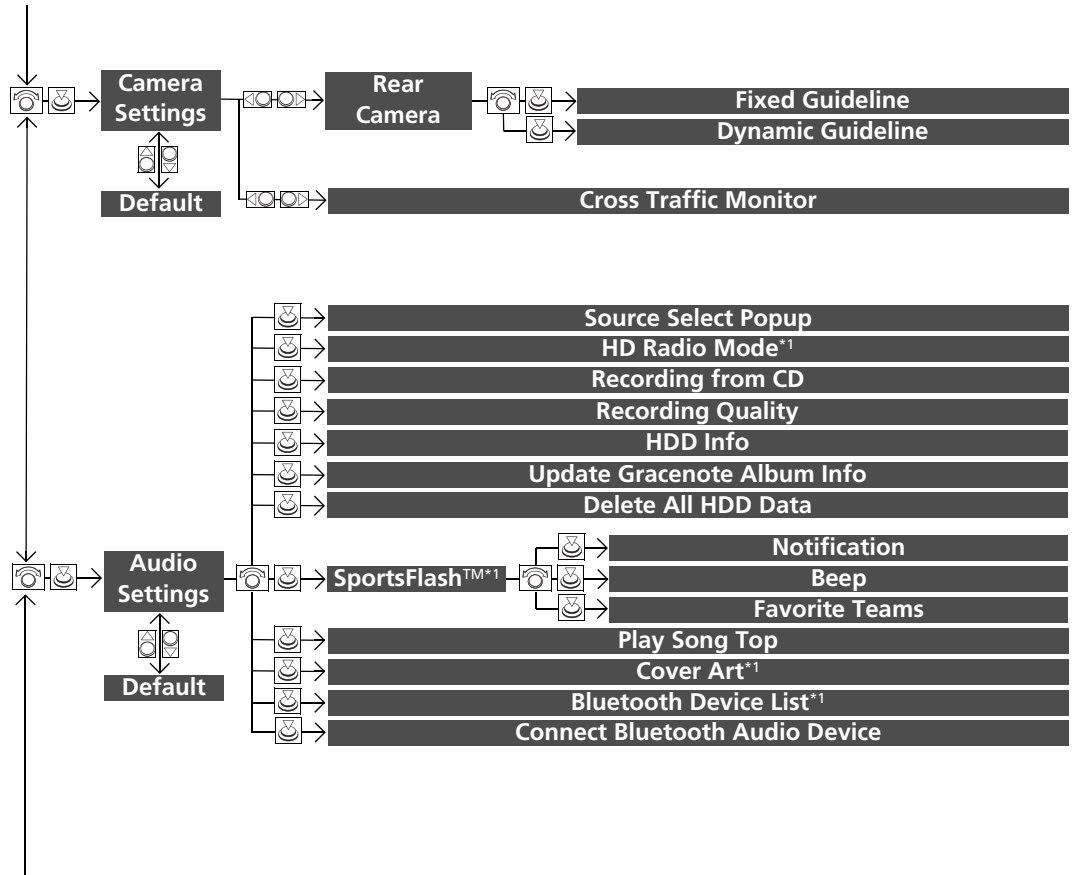

\*1: May change depending on your currently selected source.

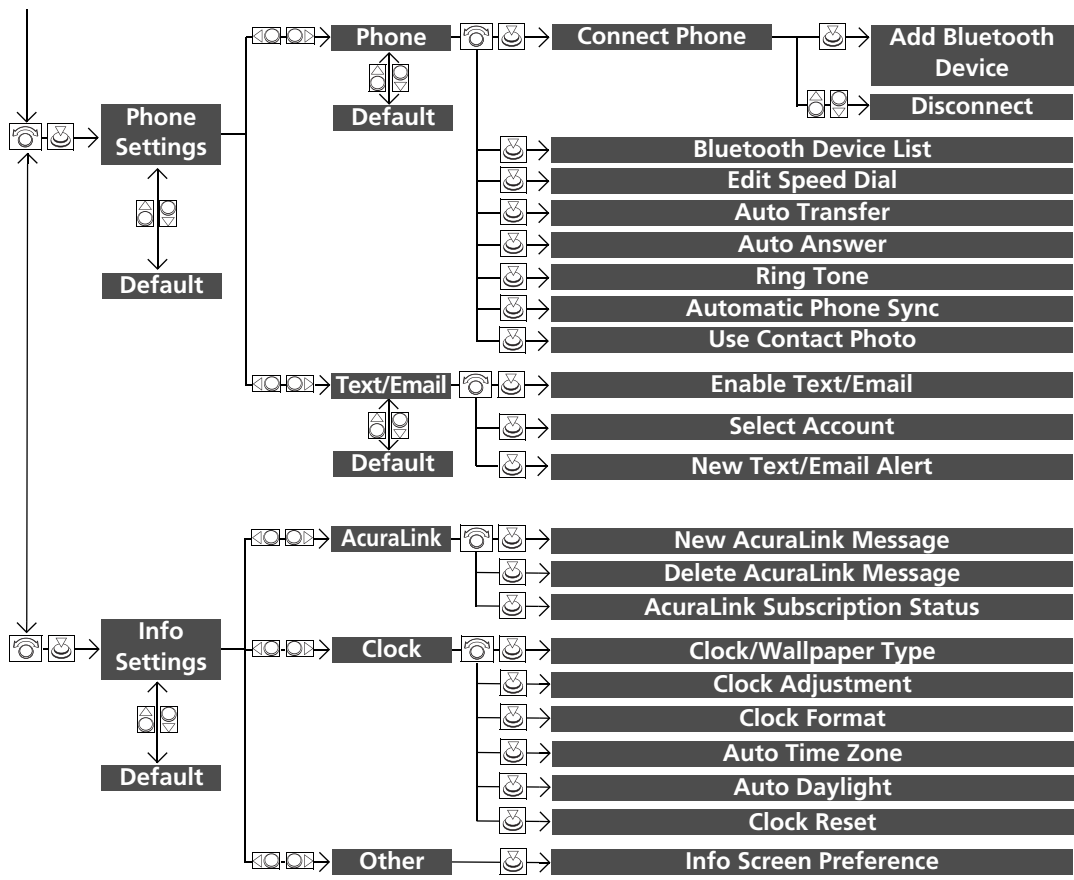






## ■ List of customizable options

Setup Group	Customizable Features	Description	Selectable Settings	
System Settings	Display	Sync Display Brightness	Selects whether the display brightness synchronizes with the instrument panel brightness.	On <sup>*1</sup> /Off
		Brightness	Changes the brightness of the audio/information screen.	—
		Contrast	Changes the contrast of the audio/information screen.	—
		Black Level	Changes the black level of the audio/information screen.	—
	Sound/Beep	Guidance Volume	Changes the volume of the audio speakers.	—
		Interface Dial Feedback	Sets if and when the system reads aloud a selection made using the Interface Dial.	On/Off/Auto <sup>*1</sup>
		Message Auto Reading	Selects whether the system automatically reads out messages, and, if selected, whether only when driving.	On/Off/Auto <sup>*1</sup>
		Verbal Reminder	Turns the verbal reminders on and off.	On <sup>*1</sup> /Off

\*1: Default Setting




Setup Group	Customizable Features	Description	Selectable Settings	
System Settings	Bluetooth Status	Turns the <i>Bluetooth</i> ® on and off.	On <sup>*1</sup> /Off	
	Bluetooth	Bluetooth Device List	Pairs a new phone to HFL, edits and deletes a paired phone, and creates a security PIN.  <b>Pairing a Phone</b> P. 255	—
		Edit pairing code	Changes a pairing code.  <b>Changing the Pairing Code</b> P. 258	Random/Fixed <sup>*1</sup>
	Voice Reco	Guidance Volume	Changes the volume of the voice prompt.	—
		Voice Prompt	Turns the voice prompt on and off.	On <sup>*1</sup> /Off
		Song By Voice	Turns the Song By Voice™ on and off.  <b>Song By Voice™ (SBV)</b> P. 231	On <sup>*1</sup> /Off
		Song By Voice Phonetic Modification	Modifies a voice command for music stored in the HDD or an iPod.  <b>Phonetic Modification</b> P. 233	—
		Phonebook Phonetic Modification	Modifies a voice command for the phonebook.  <b>Phonebook Phonetic Modification</b> P. 268	—

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
System Settings	Clock	Clock	Changes the clock display type.	Analog/Digital <sup>*1</sup> /Small Digital/Off
		Clock/Wallpaper Type	Wallpaper <ul style="list-style-type: none"> <li>Changes the wallpaper type.</li> <li>Imports an image file for a new wallpaper.</li> <li>Deletes an image file for a wallpaper.</li> </ul> ▶ <b>Wallpaper Settings</b> P. 30	Blank/Galaxy <sup>*1</sup> /Metallic/Add New
	Clock Adjustment	Adjusts Clock. ▶ <b>Clock Adjustment</b> P. 28	—	
	Clock Format	Selects the digital clock display from 12H to 24H.	12H <sup>*1</sup> /24H	
	Auto Time Zone	Sets the navigation system to automatically adjust the clock when driving through different time zones.	On <sup>*1</sup> /Off	
	Auto Daylight	Sets the navigation system to automatically adjust the clock (“spring ahead” or “fall back” by one hour) when a daylight saving time change occurs.	On <sup>*1</sup> /Off	
	Clock Reset	Resets the settings of all items in the <b>Clock</b> group.	—	

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
System Settings	Others	Units	Changes the distance unit on the navigation map screen. mile*/km (U.S.) mile/km* <sup>1</sup> (Canada)
		Language	Changes the display language. English* <sup>1</sup> /Français/ Español
		Voice Command Tips*	Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available. On* <sup>1</sup> /Off
		Background Color	Changes the background color of the audio/information screen and the On Demand Multi-Use Display™. Blue* <sup>1</sup> /Amber/Red/ Green
		Header Clock Display	Selects whether the clock display comes on. On* <sup>1</sup> /Off
		System Device Information	Displays the system/device information. —
		Factory Data Reset	Resets all the settings to their factory default.  <b>Defaulting All the Settings</b> P. 113 —
	Default	Cancels/Resets all customized items in the System Settings group as default. Default/OK	

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Driver Assist System Setup	Forward Collision Warning Distance*	Changes at which distance CMBS™ alerts. See the owner's manual.	Long/Normal* <sup>1</sup> /Short
		ACC Forward Vehicle Detect Beep*	Causes the system to beep when the system detects a vehicle, or when the vehicle goes out of the ACC range. See the owner's manual.	On/Off* <sup>1</sup>
		ACC Display Speed Unit*	Changes the speed unit for ACC on the multi-information display. See the owner's manual.	mph* <sup>1</sup> /km/h (U.S.) mph/km/h* <sup>1</sup> (Canada)
		Lane Keeping Assist Suspend Beep*	Causes the system to beep when the LKAS is suspended. See the owner's manual.	On/Off* <sup>1</sup>
		Blind Spot Info*	Changes the setting for the blind spot information. See the owner's manual.	Audible And Visual Alert* <sup>1</sup> /Visual Alert/Off

\* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Vehicle Settings	Language Selection	Changes the displayed language on the multi-information display. See the owner's manual.	English <sup>*1</sup> /Français/ Español
	Adjust Outside Temp. Display	Adjusts the temperature reading by a few degrees. See the owner's manual.	-5°F ~ ±0°F <sup>*1</sup> ~ +5°F (U.S.) -3°C ~ ±0°C <sup>*1</sup> ~ +3°C (Canada)
	Meter Setup "Trip A" Reset Timing	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A. See the owner's manual.	When Refueled/IGN Off/Manually Reset <sup>*1</sup>
	"Trip B" Reset Timing	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B. See the owner's manual.	When Refueled/IGN Off/Manually Reset <sup>*1</sup>
	Turn by Turn Display*	Selects whether the turn-by-turn display comes on during the route guidance. See the owner's manual.	On <sup>*1</sup> /Off
	Driving Position Setup Memory Position Link	Turns the driving position memory system on and off. See the owner's manual.	On <sup>*1</sup> /Off

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Vehicle Settings	Door Unlock Mode	Changes which doors unlock when you grab the driver's door handle. See the owner's manual.	Driver Door Only* <sup>1</sup> /All Doors
	Keyless Access Beep Volume	Changes the volume of the keyless access beep.	—
	Keyless Access Light Flash	Causes some exterior lights to flash when you unlock/lock the doors. See the owner's manual.	On* <sup>1</sup> /Off
	Keyless Access Beep	Causes the beeper to sound when you unlock/lock the doors. See the owner's manual.	On* <sup>1</sup> /Off
	Remote Start System On/Off*	Turns the remote engine start feature on and off. See the owner's manual.	On* <sup>1</sup> /Off
	Interior Light Dimming Time	Changes the length of time the interior lights stay on after you close the doors. See the owner's manual.	60seconds/ 30seconds* <sup>1</sup> / 15seconds
	Headlight Auto Off Timer	Changes the length of time the exterior lights stay on after you close the driver's door. See the owner's manual.	60seconds/30seconds/ 15seconds* <sup>1</sup> /0seconds
Lighting Setup	Auto Light Sensitivity	Changes the timing for the headlights to come on. See the owner's manual.	Max/High/Mid* <sup>1</sup> /Low/Min

\* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Door Setup	Auto Door Lock	Changes the setting for the automatic locking feature. See the owner's manual.	With Vehicle Speed <sup>*1</sup> / Shift from P/Off
		Auto Door Unlock	Changes the setting for when the doors unlock automatically. See the owner's manual.	All Doors When Driver's Door Opens <sup>*1</sup> / All Doors When Shifted to Park/ All Doors When Ignition Switched Off/Off
		Key And Remote Unlock Mode	Sets up either the driver's door or all doors to unlock on the first push of the remote or built-in key. See the owner's manual.	Driver Door <sup>*1</sup> /All Doors
		Keyless Lock Answer Back	LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds. See the owner's manual.	On <sup>*1</sup> /Off
		Security Relock Timer	Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door. See the owner's manual.	90seconds/60seconds/ 30seconds <sup>*1</sup>

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Vehicle Settings	Power Tailgate Setup	Keyless Open Mode	Anytime* <sup>1</sup> /When Unlocked	
		Power Open by Outer Handle	Off (Manual Only)/On (Power/Manual)* <sup>1</sup>	
	Maintenance Info.	Maintenance Reset	Resets the engine oil life display when you have performed the maintenance service. See the owner's manual.	—
	Default	Default	Cancels/Resets all customized items in the <b>Vehicle Settings</b> group as default.	Default/OK
Navi Settings	Personal Information	Address Book	Stores new addresses or edits your address book.	—
		Edit Go Home	Sets or edits your home address.	—
		PIN Number	Sets or changes your PIN.	—
		Previous Destination	Deletes the destination history.	—
		Category History	Deletes the place categories you recently used.	—
		Download POI	Edits and deletes the Imported POI categories.	—

\* 1: Default Setting



Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Route Preference	Freeways	Max <sup>*1</sup> /Min	
		Toll Road	Max <sup>*1</sup> /Min	
		ETC Roads	Change the route preference by selecting minimum or maximum driving methods.	Max/Min <sup>*1</sup>
		Ferries		Max <sup>*1</sup> /Min
		U-turn	Max/Min <sup>*1</sup>	
	Server Route	View three routes distributed from AcuraLink®.	On/Off <sup>*1</sup>	
	Unverified Routing	Sets whether you use the route guidance in unverified areas.	On <sup>*1</sup> /Off	
	Traffic Rerouting	Sets whether you use automatic recalculation based on traffic information.	On/Off <sup>*1</sup>	
Edit POI Search Radius Along Route	Sets the distance from the route to find waypoints.	mile: 1, 2 <sup>*1</sup> , 5, 10mi km: 1.6, 3 <sup>*1</sup> , 8, 16km		
Avoided Area	Specifies areas to avoid when calculating a route.	—		

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Guidance	Guidance Mode	Sets whether to display only the map screen or a split map guidance screen.	Map <sup>*1</sup> /Direction List/Next Maneuver
		Street Name Guidance	Sets whether to read out the street names during voice guidance (U.S. models).	On <sup>*1</sup> /Off
		Non-map Screens	Sets whether the guidance screen interrupts the screen display.	On/Off <sup>*1</sup>
		Guidance Point	Sets whether to display the guidance information to the destination or the next waypoint.	Destination <sup>*1</sup> /Next Point
		Estimated Time	Sets whether to display the remaining time or arrival time to the guidance point.	All On <sup>*1</sup> /Off/Customize


\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Navi Settings	Map	Show Icon on Map	Selects the icons to display on the map.	—
		Color (Day)	Selects the color of the map for the Day mode.	White/Beige* <sup>1</sup> /Blue/Black
		Color (Night)	Selects the color of the map for the Night mode.	White/Beige/Blue* <sup>1</sup> /Black
		View	Selects the map orientation.	North-up* <sup>1</sup> /Heading-up/3D Map
		3D Angle Adjustment	Adjusts the viewing angle for the 3D map.	—
		Straight Line Guide	Sets whether to display a straight guideline to the destination or waypoint.	On* <sup>1</sup> /Off
		Current Location	Displays and saves your current location.	—
		Map Legend	Displays an overview of the map features.	—
		Display Tracking	Sets whether to display the tracking dots on the map.	On/Off* <sup>1</sup>
		Delete Tracking	Deletes the tracking dots on the map.	—
		Correct Vehicle Position	Adjusts the position of the vehicle on the map.	—
		System Device Information	Views database, software, device, and vehicle identification information.	—
Map Data Update	Checks the map data update status when updating the map database.	—		

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Camera Settings	Rear Camera	Fixed Guideline	Selects whether the fixed guidelines come on the rear camera monitor.	On <sup>*1</sup> /Off
		Dynamic Guideline	Selects whether the dynamic guidelines come on the rear camera monitor.	On <sup>*1</sup> /Off
		Default	Cancels/Resets all customized items in the <b>Rear Camera</b> group as default.	Default/OK
	Cross Traffic Monitor	Turns the cross traffic monitor feature on and off. See the owner's manual.	On <sup>*1</sup> /Off	

\* 1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Audio Settings	Source Select Popup	Selects whether the list of selectable audio sources comes on when the <b>AUDIO</b> button is pressed.	On/Off*1
	<b>FM/AM mode</b> HD Radio Mode*	Selects whether the audio system automatically switches to the digital radio waves or receives the analogue waves only.	Auto*1/Analog
	<b>CD mode</b> Recording from CD	Selects whether the songs on music CDs are automatically recorded to the HDD.	Auto*1/Manual
	<b>CD mode</b> Recording Quality	Selects the quality of the music files recorded to the HDD.	Standard*1/High
	<b>HDD mode</b> HDD Info	Displays the HDD capacity.	—
	<b>CD or HDD mode</b> Update Gracenote Album Info	Updates the Gracenote® Album Info (Gracenote® Media Database) from CD or from USB.	Update by CD*1/ Update by USB
	<b>HDD mode</b> Delete all HDD Data	 <b>Deleting All HDD Data</b> P. 223	—

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Audio Settings	Notification	Turns on and off the sports alert function.	Disable <sup>*1</sup> /Enable/Enable(one time)	
	<b>SiriusXM® mode</b> SportsFlash™*	Beep	Causes the system to beep when the sports alert is notified.	On <sup>*1</sup> /Off
		Favorite Teams	Selects your favorite sport teams.	On <sup>*1</sup> /Off
	<b>SiriusXM® mode</b> Play Song Top		Turns on and off the Tune Start function.	On <sup>*1</sup> /Off
	<b>iPod, USB, Pandora®* or Aha™ mode</b> Cover Art		Turns on and off the cover art display.	On <sup>*1</sup> /Off
	<b>Bluetooth® Audio, Pandora®* or Aha™ mode</b> Bluetooth Device List		Edits or deletes a <i>Bluetooth®</i> Audio device paired to HFL.	—
	<b>Bluetooth® Audio, Pandora®* or Aha™ mode</b> Connect Bluetooth Audio Device		Connects, disconnects or pairs a <i>Bluetooth®</i> Audio device to HFL.	—
	Default		Cancels/Resets all customized items in the <b>Audio Settings</b> group as default.	Default/OK

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings	
Phone Settings	Phone	Connect Phone	Pairs a new phone to HFL, or connects or disconnects a paired phone. <input checked="" type="checkbox"/> <b>Pairing a Phone</b> P. 255	—
		Bluetooth Device List	Pairs a new phone to HFL, edits or deletes a paired phone, or creates a security PIN. <input checked="" type="checkbox"/> <b>Phone Settings</b> P. 273	—
		Edit Speed Dial	Edits, adds or deletes a speed dial entry. <input checked="" type="checkbox"/> <b>Setting Up Speed Dialing</b> P. 262	—
		Auto Transfer	Sets calls to automatically transfer from your phone to HFL when you enter the vehicle.	On <sup>*1</sup> /Off
		Auto Answer	Sets whether to automatically answer an incoming call after about four seconds.	On/Off <sup>*1</sup>
		Ring Tone	Selects the ring tone.	Fixed/Mobile Phone <sup>*1</sup> /Off
		Automatic Phone Sync	Sets a phonebook data to be automatically imported when a phone is paired to HFL.	On <sup>*1</sup> /Off
		Use Contact Photo	Displays a caller's picture on an incoming call screen.	On <sup>*1</sup> /Off

\*1: Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Phone Settings	Enable Text/Email	Turns the text/e-mail message function on and off.	On <sup>*1</sup> /Off
	Select Account	Selects a text or e-mail message account.	—
	New Text/Email Alert	Selects whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message.	—
	Default	Cancels/Resets all customized items in the Phone Settings group as default.	Default/OK

\*1: Default Setting




Setup Group	Customizable Features	Description	Selectable Settings
Acura Link	New AcuraLink Message	Selects whether newly received AcuraLink messages to be displayed.	On**/Off
	Delete AcuraLink Message	Deletes AcuraLink messages.	—
	AcuraLink Subscription Status	Displays your current AcuraLink subscription status.	—
Info Settings	Clock/ Wallpaper Type	Clock Wallpaper	See <b>System Settings</b> on P. 95 to P. 98.
	Clock	Clock Adjustment	
		Clock Format	
		Auto Time Zone	
		Auto Daylight	
		Clock Reset	
	Other	Info Screen Preference	
Default		Cancels/Resets all customized items in the <b>Info Settings</b> group as default.	Default/OK





\*1: Default Setting

## Defaulting All the Settings

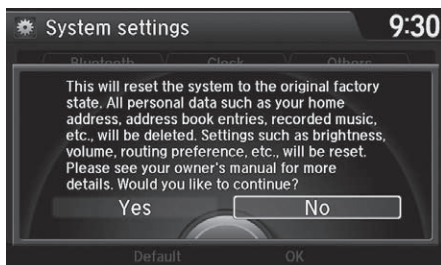 **SETTINGS** button ► **System Settings** ► **Others** ► **Factory Data Reset**

Reset all the menu and customized settings as the factory defaults.



1. Rotate  to select **Yes**. Press .  
► The confirmation message will appear.
2. Rotate  to select **Yes**. Press again to reset the settings.  
► The confirmation message will appear. Press  to select **OK**.

### Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

The following settings will be reset:

- Audio preset settings
- Phonebook entries
- Other display and each item settings.




# Navigation



This section describes how to enter a destination, select a route to take, and follow the route to your destination. It also describes how to change your route or destination along the way.



<b>Entering a Destination</b> .....	116	<b>Calculating the Route</b> .....	141	Adding Waypoints .....	161
Address .....	118	Viewing the Routes .....	143	Editing the Destination List .....	165
Address Book .....	125	<b>Driving to Your Destination</b> .....	144	Taking a Detour .....	167
Previous Destination .....	126	Viewing the Route .....	144	Avoiding Streets .....	167
Place Category .....	127	Listening to Voice Guidance .....	149	<b>Changing Your Destination</b> .....	168
Local Search .....	129	Reaching a Waypoint .....	150	Find Nearest Place .....	168
Place Name .....	131	<b>Map Menu</b> .....	151	Selecting a Destination on the Map .....	169
Place Phone Number .....	134	Displaying the Map Menu .....	151	Entering a New Destination .....	170
Download POI .....	135	Hide Traffic Flow .....	153	<b>Resuming Your Trip</b> .....	171
Scenic Route .....	136	Directions .....	154		
Intersection .....	137	Traffic Rerouting™ .....	156		
Map Input .....	138	<b>Changing Your Route</b> .....	159		
Coordinate .....	140	Pausing the Route .....	160		
		Canceling the Route .....	160		

# Entering a Destination

 **MENU** button (on map)

This section describes how to enter a destination for route guidance.



Rotate  to select an item. Press .


▶ Select **More Search Methods** to display additional menu entries.



The following items are available:

- **Address**: Sets a destination by entering an address.  
▶ **Address** P. 118
- **Address Book**: Sets a destination by selecting an address stored in your Address Book.  
▶ **Address Book** P. 125
- **Previous Destination**: Sets a destination by selecting a previous destination.  
▶ **Previous Destination** P. 126

## ▶▶ Entering a Destination

 "Display Navigation"

If you press the **MENU** button when en route, the Route Option screen is displayed.

▶ **Changing Your Route** P. 159

Prior to departure, you can set areas along your route to avoid.

▶ **Avoided Area** P. 60



- **Go Home:** Sets your home address as a destination.
  - **Going Home** P. 11
- **Place Category:** Sets a destination by selecting a place/landmark.
  - **Place Category** P. 127
- **Local Search:** Sets a destination by using Local Search.
  - **Local Search** P. 129
- **Place Name:** Sets a destination by entering a place name.
  - **Place Name** P. 131
- **Place Phone Number:** Sets a destination by entering the phone number of a place/landmark.
  - **Place Phone Number** P. 134
- **Download POI:** Sets a destination by using a list of the imported POI (category and places) data you created.
  - **Download POI** P. 135
- **Scenic Route:** Sets a destination by using a list of scenic roads for each state or province (U.S. and Canada only).
  - **Scenic Route** P. 136
- **Intersection:** Sets a destination (intersection) by entering two streets.
  - **Intersection** P. 137
- **Map Input:** Sets a destination by scrolling through the map.
  - **Map Input** P. 138
- **Coordinate:** Sets a destination by entering latitude and longitude.
  - **Coordinate** P. 140

## Address

 **MENU** button ▶ **Address**

Enter an address to use as the destination. The state or province you are currently in is displayed (e.g., California).



Rotate  to select an item. Press .

 

The following items are available:

- **City:** Selects your destination city.
  - ▶ **Selecting a City** P. 121
- **Street:** Selects your destination street.
  - ▶ **Selecting a Street** P. 122
- **House Number:** Enters the house number to select the street.
  - ▶ **Selecting a Street by House Number** P. 124
- **ZIP Code (U.S.)/Postal Code (Canada):** Enters the zip code or postal code to select the city.
  - ▶ **Selecting a City by Zip Code or Postal Code** P. 120
- **Change State (U.S.)/Change Province (Canada):** Selects the state or province.
  - ▶ **Selecting the State or Province** P. 119

### ▶▶ Address

#### U.S. models


#### Using Voice Command (English only)



You can say the entire address at once using voice commands. Say  "Address" on the Voice Portal screen, then say the entire address. For example, "1-2-3-4 Main Street, Los Angeles, California." The system interprets the address. Say  "Set as destination" to begin the route.

The system language needs to be set in English.

## ■ Selecting the State or Province

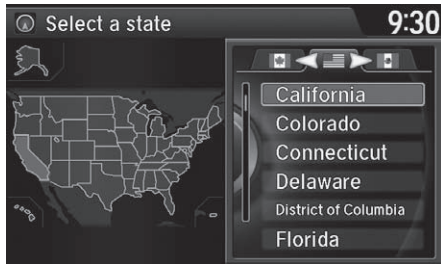 **MENU** button ▶ **Address** ▶ **Change State/Change Province**



Rotate  to select a state or province from the list. Press .

## ▣ Selecting the State or Province

- Move ◀○ or ○▶ to select the following areas:
- **USA** for the U.S. mainland, Alaska, Hawaii, and Puerto Rico
  - **Canada**
  - **Mexico**



## ■ Selecting a City by Zip Code or Postal Code

MENU button ▶ Address ▶ ZIP Code/Postal Code



1. Enter the zip code or postal code of your destination.

2. Move to select OK. Press .



3. Rotate to select the destination city from the list. Press .

▶ Next, you are prompted to enter a street name.

**Selecting a Street** P. 122

## ▣ Selecting a City by Zip Code or Postal Code

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.


## Selecting a City

MENU button ▶ Address ▶ City

The name of the city where you are currently located is displayed.



1. Enter the name of a different city, or move to select **OK** for the current city. Press .

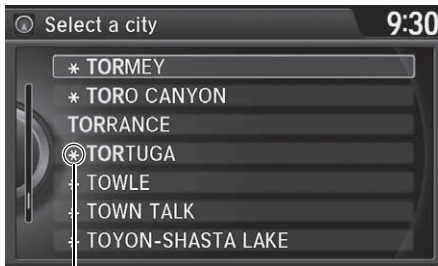

Non-detailed area mark: Try entering the street first and then select the city.

2. Rotate to select your destination city from the list. Press .
  - ▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.
  - ▶ Next, you are prompted to enter a street name.
    - ▶ **Selecting a Street** P. 122

## Selecting a City

Vehicle position may not be displayed when:

- The automobile is traveling off-road.
  - The vehicle position data cannot be updated.
- You do not need to enter spaces or symbols (e.g., &, -, %). Partial matches are supported (e.g., "ANGELES" to find "LOS ANGELES").

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

### U.S. models

#### Using Voice Command (English only)

Say "City" on the Find address by screen, and the following screen is displayed:



- Say "Current City" to select your current location, or say the name of a different city.
- The Say city name screen is not displayed when your vehicle is in Puerto Rico or Mexico.

## ■ Selecting a Street

MENU button ▶ Address ▶ Street



1. Enter the name of your destination street.

▶ Do not enter the street type (e.g., street, road, avenue) or direction (e.g., north, south, east, west).

▶ Move to select OK to display a list of streets. Press .

2. Rotate to select your destination street from the list. Press .

▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.

## ■ Selecting a Street



When entering the names of major freeways/highways, you can use the following abbreviations. For interstates, use an "I" (e.g., I-10). For U.S. freeways, use "US" (e.g., US-18). For state freeways, use the two-character state designation (e.g., CA-101). For county roads, use the appropriate designation (e.g., G-2). For Trans-Canada and Provincial highways, use "Hwy" (HWY-7). For County roads, use "CR" (CR-32). For Regional Roads, use "RR" (RR-5).

If you did not select a city first and there is more than one city with the specified street, a list of cities is displayed.



Rotate to select the desired city from the list. Press .

 



3. Enter the street number.
  - ▶ Only valid street numbers can be entered.
4. Move  to select OK. Press .
5. Set the route to your destination.
  - **Calculating the Route** P. 141

#### ▶▶ Selecting a Street

U.S. models

#### Using Voice Command (English only)

Say  "Street" on the Find address by screen, and the following screen is displayed:

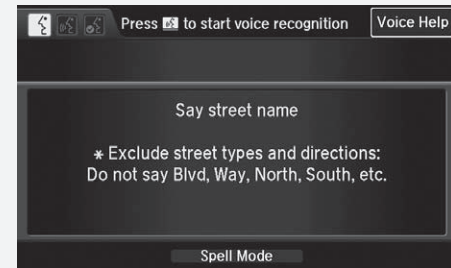

- Say the name of your destination street, and say the street number as a string of individual numbers.
- Set the route to your destination.
  - **Calculating the Route** P. 141
- The Say street name screen is not displayed when your vehicle is in Puerto Rico or Mexico.

## ■ Selecting a Street by House Number

📍 MENU button ▶ Address ▶ House Number



1. Enter the house number.
  - ▶ Only a valid house number can be entered.
2. Move 📍 to select **OK**. Press 📍.
  - ▶ If you did not yet select a street name, enter a street name when you are prompted.




3. Rotate 📍 to select your destination street from the list. Press 📍.
  - ▶ Select a city when you are prompted.
4. Set the route to your destination.
  - ▶ **Calculating the Route** P. 141

# Address Book

MENU button ▶ **Address Book**

Select an address stored in your address book to use as the destination.

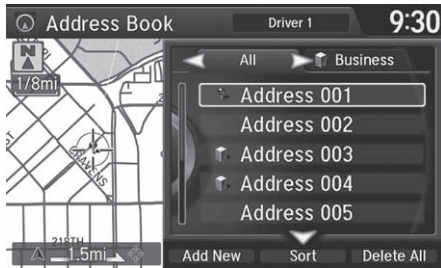

1. Rotate to select your destination from the list. Press .
2. Set the route to your destination.
  - ▶ **Calculating the Route** P. 141
  - ▶ Move or to display only the entries in the categories you have created.
    - ▶ **Selecting an Address Book Category** P. 42

## Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Press to select **OK**. PINs are optional.

▶ **PIN Numbers** P. 47

Move and rotate to select the following items:




- **Add New Address:** Adds an entry to the address book.
  - ▶ **Adding an Address Book Entry** P. 40
- **Sort:** Selects **Sort by Name** or **Sort by Distance**.
- **Delete All:** Deletes all entries in the address book.
- **Driver 1 or Driver 2:** Displays the address book for the selected user.

## Previous Destination

### MENU button ▶ Previous Destination

Select an address from a list of your 50 most recent destinations to use as the destination. The list is displayed with the most recent destination at the top.



1. Rotate  to select a destination from the list. Press .
2. Set the route to your destination.  
 **Calculating the Route** P. 141

### Previous Destination

If **Previous Destination** is grayed out, there are no previous destinations entered.

Your home address and addresses stored in your address book are not added to the list of previous destinations.

Move  and rotate  to select **Delete All** to delete all previous destinations.

You can delete unwanted previous destinations from the list.



 **Previous Destination** P. 48


# Place Category

 **MENU** button ▶ **Place Category**

Select the category of a place (e.g., Banking, Lodging, Restaurant) stored in the map database to search for the destination.




1. Rotate  to select a category. Press .

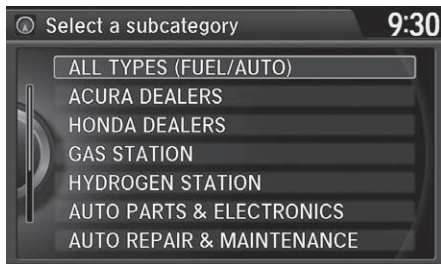

2. Rotate  to select a subcategory. Press .  
 ▶ **List of Categories** P. 358

## Place Category

This option is convenient if you do not know the exact name of a place or if you want to narrow down the number of matches returned for places with a common name.

Move  to select **Category History** to access your recently used place categories. Up to 30 categories can be stored.



You can also delete your recently used place categories.

▶ **Category History** P. 49

**Search POI Categories** helps you to search the subcategory. When you enter a keyword and select **OK**, the list of appropriate subcategories is displayed.






3. Rotate  to select an item. Press .



» Place Category

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown for the highlighted place.

The following items are available:

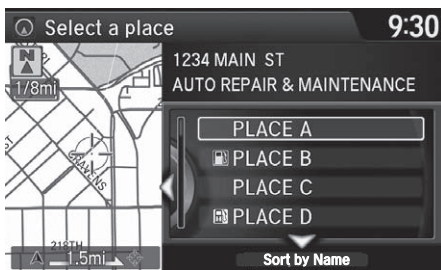- **Search by Name:** Searches for a place in the subcategory by name. Enter a place name when prompted.
- **Sort by Distance to Travel:** Displays all the places in the subcategory sorted by distance from your current location. The closest place is displayed at the top.
- **City Vicinity:** Searches for a place in the subcategory within a 20 mile (32 km) radius of a specific city. Enter a city name when prompted and then select a city. Only the first 1000 matching places/landmarks are displayed.



4. Rotate  to select a destination from the list. Press .


5. Set the route to your destination.



» **Calculating the Route** P. 141


# Local Search

 **MENU** button ▶ **Local Search**

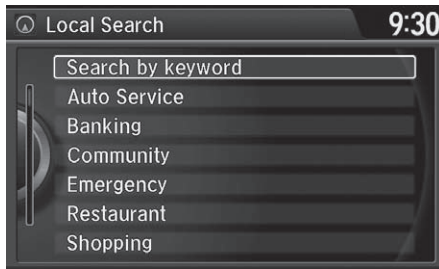Select a place via Local Search database as the destination.



1. Rotate  to select a category (e.g., **Community**). Press .

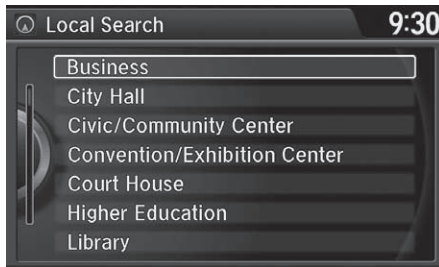


2. Rotate  to select a subcategory. Press .




## Local Search

When you select **Search by keyword**, the list of appropriate categories is displayed.

The screen in this section may differ from the actual ones.

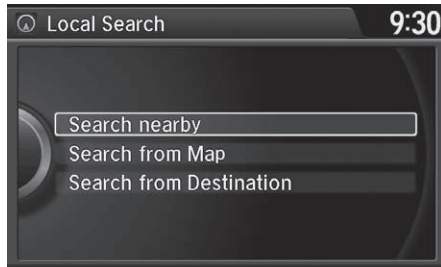Local Search is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).



3. Rotate  to select an item. Press .
4. Set the route to your destination.  
 **Calculating the Route** P. 141

The following items are available:

- **Search Nearby:** Finds the nearest POI around your vehicle.
- **Search from Map:** Selects a POI by scrolling the Interface Dial on the map screen.
- **Search from Destination:** Selects a POI around the destination. Search the category by scrolling the Interface Dial.

## Place Name

**MENU** button ▶ **Place Name**

Enter the name of a place (e.g., business, hotel, restaurant) stored in the map database to use as the destination.



1. Enter a place name.
2. Move to select OK to display a list of matching hits. Press .



3. Rotate to select a place name from the list. Press .
  - ▶ If the place name is in multiple categories, the categories are displayed when you select it.
    - **Place Name in Multiple Categories** P. 132
4. Set the route to your destination.
  - **Calculating the Route** P. 141

### Place Name

#### U.S. models


You can find a place by name using voice commands. Say "Place Name" on the Voice Portal screen. Say a category, for example "ATM/Bank." Say the name of the place, for example "ABC Bank." The system interprets the name. Say "Set as destination" to set the route.



This option is convenient if you know the exact name of a place.


Once a name is entered and selected, move to select **Sort by Name** or **Sort by Distance**. Matching letters are highlighted.

## ■ Place Name in Multiple Categories

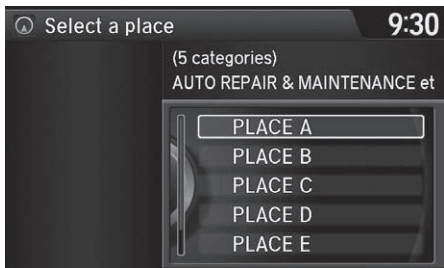If the place name is in multiple categories in the map database, the following screen is displayed.




1. Rotate  to select a place name. Press .

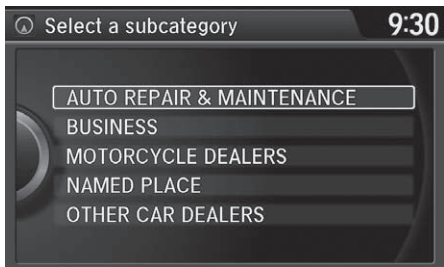




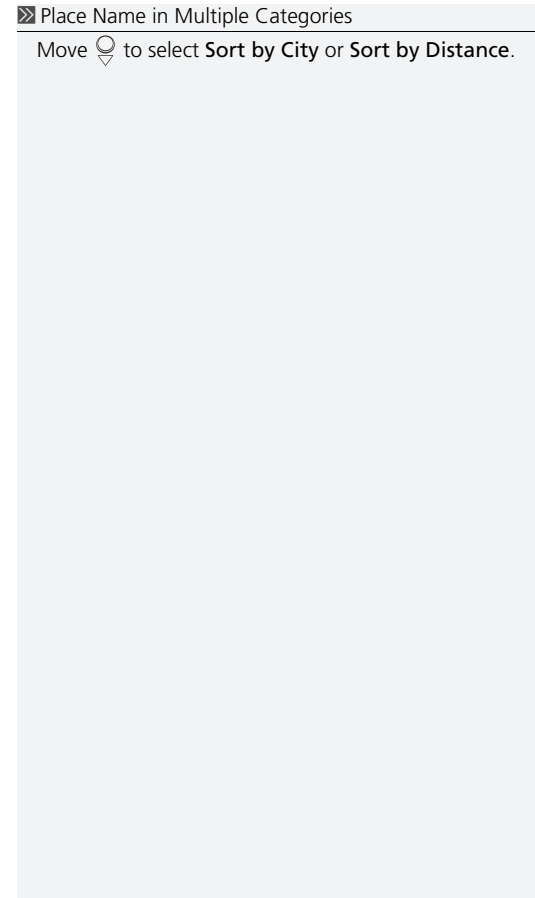
2. Rotate  to select a subcategory. Press .

## ▶▶ Place Name in Multiple Categories

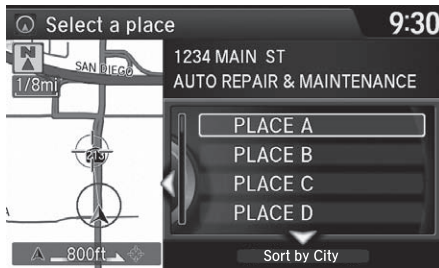Matching letters are in highlighted.



3. Rotate  to select a place. Select  and press .
4. Set the route to your destination.
  - **Calculating the Route** P. 141






## Place Phone Number

 **MENU** button ▶ **More Search Methods** ▶ **Place Phone Number**

Select a destination by phone number. Only phone numbers in the database are recognized.





1. Enter the area code and phone number.
2. Rotate  to select **OK**. Press .
3. Set the route to your destination.  
 **Calculating the Route** P. 141

### Place Phone Number

All 10 digits must be entered.

Phone numbers of private residences entered in your address book are not stored in the database and thus cannot be used to search for a destination.

A list is displayed if there are multiple locations in the database with the same phone number. Rotate  to select a place from the list. Press .

## Download POI

MENU button ▶ More Search Methods ▶ Download POI

Select a place imported into the navigation system as the destination.



1. Rotate to select a category from the list. Press .



2. Rotate to select a place. Press .

3. Set the route to your destination.

**Calculating the Route** P. 141

### Download POI

Move and rotate to select the following items:

- **Import from USB:** Imports POI data into the navigation system.  
 **Importing POI Categories** P. 50
- **Delete All:** Deletes all POI entries.
- **Help with Feature:** Views tips for the Download POI feature.


If you select **From AcuraLink**, you can download POI data stored on the AcuraLink® server.



## Scenic Route

MENU button ▶ More Search Methods ▶ Scenic Route

Select a scenic road as a destination (U.S. and Canada only).

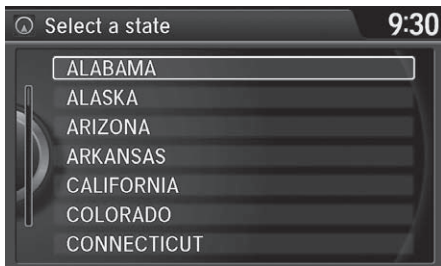

1. Rotate to select a state/ province. Press .



2. Rotate to select a scenic road. Press .

3. Set the route to your destination.  
 **Calculating the Route** P. 141

### Scenic Route



If you select a scenic road that runs through multiple states or provinces, only the portion of the road in the selected state or province is displayed.

# Intersection

 **MENU** button ▶ **More Search Methods** ▶ **Intersection**

Select the intersection of two streets as the destination. The state or province for your current location is displayed at the top of the screen (e.g., California).




1. Rotate  to select the intersection search method. Press .
2. Set the route to your destination.
  - ▶ **Calculating the Route** P. 141

The following options are available:

- **City:** Selects the city where the intersection is located. You are prompted to enter the name of the two intersecting streets.
  - ▶ **Selecting a City** P. 121
- **Street:** Selects the two intersecting streets. The city or cities that the streets are located in are displayed.
  - ▶ **Selecting a Street** P. 122
- **Change State (U.S.)/Change Province (Canada):** Selects the state or province.
  - ▶ **Selecting the State or Province** P. 119

## Intersection

It is usually easier to select **Street** to find the streets first. The city or cities that the streets are in will be displayed. If you select **City** and your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

If the intersection is outside the state or province you are currently in, rotate  to select **Change State/Change Province**.

▶ **Selecting the State or Province** P. 119

If there is more than one intersection, you are prompted to select the intersection. If the two streets that you have selected do not intersect, no intersection is entered.



## Map Input

 **MENU** button ▶ **More Search Methods** ▶ **Map Input**

Use the Interface Dial to manually select an icon or a location on the map screen as the destination.

You are prompted to define the map area to display.






1. Rotate  to select an item. Press .

The following items are available:

- **Current Position:** Your current location is centered on the map.
- **State (U.S.)/Province (Canada):** You are prompted to select the state or province.
  - ▶ **Selecting the State or Province** P. 119
- **City:** You are prompted to select the city.
  - ▶ **Selecting a City** P. 121
- **USA, Canada and Mexico:** Your current location is displayed on a map of the country.




2. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.
  - ▶ If the address is not the desired location, scroll the map to another location and try again.

3. Press  to display the route calculation menu.
  - ▶ **Calculating the Route** P. 141
4. Rotate  to select **Set as Destination**. Press .

### Map Input

#### Auto Zoom

Press  repeatedly on the map to zoom in (to the scale 1/4 mile (400 m)) while scrolling the map.

Information icons are displayed at scales from 1 mile to 1/4 mile (1.6 km to 400 m). Place/landmark icons are displayed at 1/8 mile (200 m) or less. Roads are displayed at 1/4 mile (400 m) or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

▶ **Selecting a Destination on the Map** P. 169

## Coordinate

**MENU** button ▶ **More Search Methods** ▶ **Coordinate**

Specify a location using latitude and longitude map coordinates.



1. Enter the latitude and select **OK**.
2. Enter the longitude and select **OK**.






3. Move to scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.
  - ▶ If the address is not the desired location, scroll to another location and try again.
4. Press to display the route calculation menu.
  - ▶ **Calculating the Route** P. 141
5. Rotate to select **Set as Destination**. Press .

### Coordinate


Latitude and longitude must be entered up to the seconds' value.

This section describes how to calculate your route.



1. Rotate  to select **Set as Destination**. Press .
  - ▶ The system calculates and displays the route line on the map screen.
    - **Route Line** P. 146
  - ▶ Move  to scroll the map around the destination.

The following options are available:

- **View Routes:** Displays three different routes.
  - **Viewing the Routes** P. 143
- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).
  - **Route Preference** P. 54

## Calculating the Route

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown.

You cannot use voice commands while the system is calculating the route.

### Search Nearby

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

➤ **Find Nearest Place** P. 168

### Call

You can place a telephone call to the destination phone number.

➤ **Bluetooth® HandsFreeLink®** P. 252

### Save to Address Book

You can add the destination address to the address book.

➤ **Adding an Address Book Entry** P. 40

### Edit/Delete Entry

You can edit or delete the address book entry.

➤ **Editing an Address Book Entry** P. 42

➤ **Deleting an Address Book Entry** P. 43



2. Follow the route guidance to your destination.

➤ **Driving to Your Destination**  
P. 144

- ▶ The system provides you with pop-up messages if your route passes through unverified areas, avoid areas, or areas with traffic restrictions.

▶▶ Calculating the Route

**Edit Home Entry**

You can edit your home address entry.

➤ **Home Address** P. 46



**More Info**

You can view detailed information about the destination.

## Viewing the Routes

View three different routes to your destination.



Rotate  to select a route. Press .

- ▶ The travel distance and estimated travel time is displayed for each route.
- ▶ The system calculates and displays the route line on the map screen.
  - **Route Line** P. 146

### ■ Using the server route



The following items are available:

- **Quick:** Displays the route with the shortest travel time.
- **Direct:** Displays the route with the shortest travel distance.
- **Eco:** Displays the route with the best fuel efficiency.

### ▶▶ Viewing the Routes

It is not unusual for some calculated route options to be identical.


Server Routes is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).



This section describes how to follow the route guidance to your destination, receive traffic information and choose the icons displayed on the map screen.

## Viewing the Route

### Map Screen

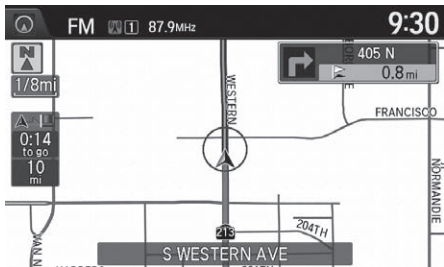

After calculating the route to your destination, the route is displayed on the map screen.

➔ **Map Screen Legend** P. 9

As you drive, the system tracks your position on the map in real time and provides guidance as you approach each guidance point on the route.


➔ **During Route Guidance** P. 10

### Viewing the Route

➔ **"Display Map"**

You can change the map scale using voice commands (e.g., say **"Display 2 mile (3 km) scale"**).

➔ **Map Scale Commands** P. 348

You can also change the map scale by rotating .

You can control the icons displayed on the map screen using voice commands (e.g., say **"Display post office"**).

➔ **Map Display Commands** P. 348

You can obtain information about the route using voice commands (e.g., say **"How long to the destination?"**).

➔ **Route Commands** P. 350

You can display the next guidance point on the map screen by saying **"Display Map Guide"** (when en route).


If you scroll the map while en route, the time and distance to destination indicators are replaced with an indicator showing distance from the current vehicle position.

You can display only the map screen or a split map-guidance screen.

➔ **Guidance Mode** P. 63

## Guidance Screen

The guidance screen offers an alternative way to view your route.

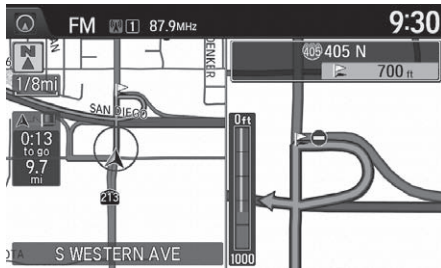

- ▶ The next guidance point is displayed as you approach each guidance point on the route.
- ▶ You can also view a list of guidance directions.

## Guidance Screen


A visual guide helps you check the guidance screen.

➤ **Guidance Screen** P. 10

## Turn-by-Turn Directions

The next guidance point appears on the multi-information display.


➤ **Turn-by-Turn Directions** P. 10

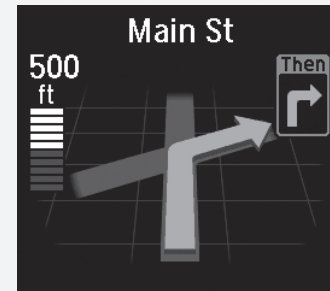


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.

## Route Line

When driving on verified streets, the route line is light blue. The route line display changes when driving on unverified streets:

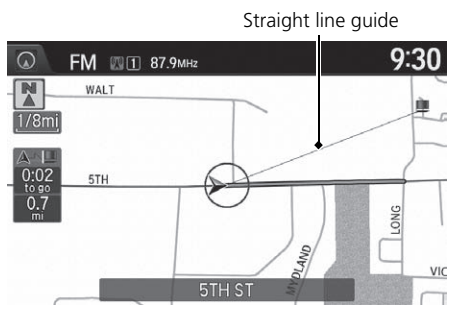

- If **Unverified Routing** is **Off**, the route line uses verified streets only (when possible). If **Straight Line Guide** is set to **On**, a pink “vector line” pointing directly towards your destination is displayed.
  - ▶ **Straight Line Guide** P. 78

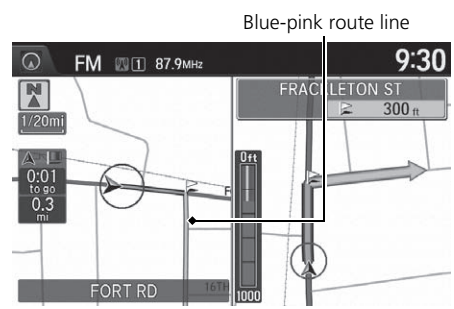


- If **Unverified Routing** is **On**, the route line changes to a blue-pink line to indicate that the route line uses unverified streets.

## Route Line

You can set **Unverified Routing** to **Off** to follow your own route to the destination. If **Unverified Routing** is **On**, be aware that unverified streets may not be displayed accurately.

▶ **Unverified Routing** P. 56

You can always view the entire route by simply saying  “Display entire route.”

The route line may also consist of red, orange, or green segments when traffic information is displayed.


▶ **AcuraLink Real-Time Traffic™** P. 14

▶ **Traffic Rerouting™** P. 156

## ■ Deviating From the Planned Route

If you leave the calculated route, the system automatically recalculates a route to the desired destination based on your current location and direction.


➔ **Route Preference** P. 54

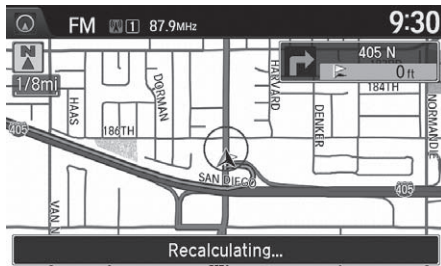

## ■ Tracking Dots

You can display a series of dots (breadcrumbs) to track the path you are taking. If needed, you can follow the dots back to the mapped road you originally left.

➔ **Display Tracking** P. 84

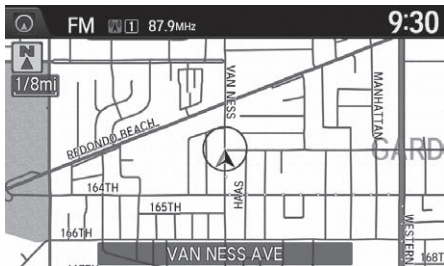

## ▣ Tracking Dots


A message “Not on a digitized road” may appear when you drive 1/2 mile (800 m) away from a mapped road.

Breadcrumbs may occasionally be displayed in urban areas, such as large parking lots in shopping malls, in new subdivisions where the roads are not yet in the database, or in areas where a GPS signal is unavailable, such as in a parking garage.

Breadcrumbs are limited to approximately 150 miles (240 km). Breadcrumbs at the beginning of the trail are deleted if you exceed that distance.

Breadcrumbs are displayed only at 1/20, 1/8, 1/4, and 1/2 mile (80, 200, 400, and 800 m) map scales.

## Listening to Voice Guidance

 **ENTER** button (on map) ▶ **Voice**

As you approach each guidance point, a pop-up window is displayed on the map screen with instructions for you to follow. Voice guidance for each guidance point is also provided.


Typically, you hear three prompts:


- 1/2 mile (800 m) from the guidance point (2 miles (3 km) on freeway/highway)
- 1/4 mile (400 m) from the guidance point (1 mile (1.5 km) on freeway/highway)
- Just before the guidance point

To replay voice guidance, rotate  to select **Voice** in the Map Menu.

If you select **Voice** between guidance points, voice guidance for the next guidance point is provided.

### Listening to Voice Guidance

 "Voice" (on the map screen)

You can turn voice guidance OFF if you prefer. On the map screen, press  to display the Map Menu. Select **Guidance Volume** and adjust the volume level to **0**.

You can also adjust **Guidance Volume** by rotating the volume knob or using the **VOL** buttons on the steering wheel during route guidance or voice command confirmations.

When driving in unverified areas, the phrase "if possible" is inserted before each voice guidance prompt.

**Voice** in the Map Menu may be grayed out if:



- The system is in process of gathering the route guidance information.
- The vehicle is out of the road (e.g., pulling in a parking lot).

The timing of voice guidance varies depending on the type of road you are on and the distance to the next guidance point.

## Reaching a Waypoint

When you reach a waypoint, a pop-up message is displayed. You can continue or pause the route guidance.



Rotate  to select **No** to pause the route guidance. Press .

▶ Select **Yes** to continue the guidance.


### Resuming the Route Guidance


You can resume the route guidance in the following ways:



- Restart the engine when you stop your car (e.g., to rest, stop for gas, etc.).
  - ▶ **Resuming Your Trip** P. 171
- Select **Resume Guidance** from the navigation menu or the map menu.
  - ▶ **Map Menu** P. 151
  - ▶ **Changing Your Route** P. 159

## Displaying the Map Menu

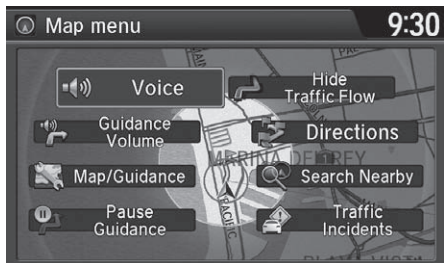
Use the Map Menu to control the icons displayed on the screen and to display traffic information and messages. You can also use the Map Menu to find locations or to cancel the route.



1. On the map screen, press .  
▶ The Map Menu is displayed on the map screen.

2. Rotate  to select an item. Press .

### Map Menu

If you scroll the map while en route, press the NAV (or BACK) button to return to the current position map screen, then press .

#### Traffic Incidents

You must have an AcuraLink Real-Time Traffic™ subscription to receive traffic information.

➤ **AcuraLink®** P. 300

The incident icons are displayed on the 5 mile (8 km) or less map scale.

➤ **Map Scale and Functions** P. 81



The following items are available:

- **Voice:** Select to hear the voice guidance when en route.
  - **Listening to Voice Guidance** P. 149
- **Guidance Volume:** Adjusts the navigation system volume level.
  - **Sound and Beep Settings** P. 27
- **Map/Guidance:** Allows you to select the map and guidance settings (display mode, icons to display on the map, map orientation, map color, and 3D view angle), display your current location and an overview of the map features.
  - **Guidance Mode** P. 63
  - **Showing Icons on Map** P. 71
  - **Color** P. 73
  - **View (Map Orientation)** P. 76
  - **3D Angle Adjustment** P. 77
  - **Current Location** P. 79
  - **Map Legend** P. 80
- **Pause Guidance:** Pauses your current route.
  - **Pausing the Route** P. 160
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Hide Traffic Flow:** Hides the current traffic flow indicator on the map screen.
  - **Hide Traffic Flow** P. 153
- **Display Traffic Flow:** Displays the current traffic flow indicator on the map screen. This item is displayed while the current traffic flow indicator is hidden.
- **Directions:** Displays a list of the guidance points.
  - **Directions** P. 154
- **Search Nearby:** Allows you to find the nearest place/landmark (e.g., nearest gas station) by specifying a category. You can then add the location to the list of destinations, set as a waypoint, or set as your destination.
  - **Find Nearest Place** P. 168

## Map Menu


### Directions

The system provides freeway/highway exit information only in the U.S.

- **Traffic Incidents:** Displays a list of the traffic incidents around your current location or on your current route.
  - ▶ **Traffic Rerouting™** P. 156

## Hide Traffic Flow

---


 **ENTER** button (on map) ▶ **Hide Traffic Flow**

Hide the traffic flow indicator on the map screen. Press the **ENTER** button and select **Display Traffic Flow** to display the traffic flow indicator on the map screen.


## Directions

### 📍 ENTER button (on map) ▶ Directions

Display a list of the guidance points on your route for your confirmation.

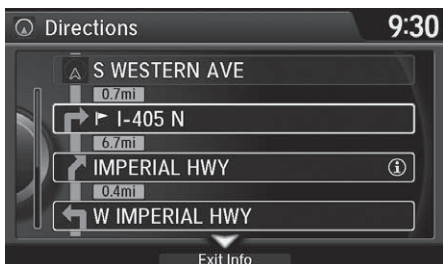

1. Rotate 🔄 to select a guidance point from the list. Press 📍.  
▶ The system displays a map of the guidance point.

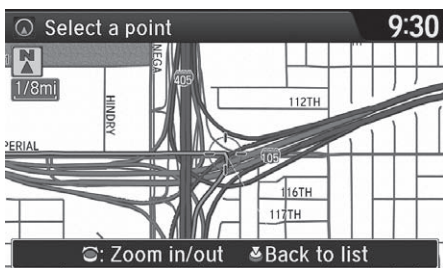

2. Press 📍 to select **Back to list** or press the **BACK** button to return to the previous screen.

### 📄 Directions

Guidance points with exit information are indicated by a **i** (freeway/highway exit information) icon. Move 📍 to select **Exit Info** to display the exit information.

➡ **Freeway/highway Exit Information** P. 155

The system provides freeway/highway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

## Freeway/highway Exit Information

📍 **ENTER** button (on map) ▶ **Directions** ▶ **Exit Info**

Display a list of the Freeway/highway exits for the route. You can view freeway/highway exit information (whether the exit is near gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route.



1. Rotate 🔄 to select an exit from the list. Press 📍.



2. Rotate 🔄 to select a list item. Press 📍.

- ▶ Move ◀○ or ○▶ to display information for different exits.
- ▶ You can set the route to your destination.

➡ **Calculating the Route** P. 141

## Freeway/highway Exit Information

📍 "Display Freeway (highway) Exit Information"

You can scroll the map and select a ⓘ (Freeway/highway exit information) icon on the map screen to display the Freeway/highway exit information. The ⓘ icon is only displayed if there is exit information available.

Icons are displayed only at 1/4, 1/2, or 1 mile (400 m, 800 m, or 1.6 km) scale.

➡ **Map Scale and Functions** P. 81

The system provides freeway/highway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

## Traffic Rerouting™

When driving to your destination, the system automatically searches for a faster route based on traffic flow information and traffic incidents.

➤ **AcuraLink Real-Time Traffic™** P. 14

➤ **Traffic Rerouting** P. 58



### ➤ Traffic Rerouting™

This feature requires an AcuraLink Real-Time Traffic™ subscription.

AcuraLink Real-Time Traffic™ is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).

Automatic traffic rerouting may not provide a detour route depending on circumstances.


## Traffic Rerouting™ Manually

**ENTER** button (on map) ▶ **Traffic Incidents**

Manually avoid specific incidents and/or congestion on your route:



1. Rotate to select an incident from the list. Press .  
▶ The system displays the map screen and the incident location.

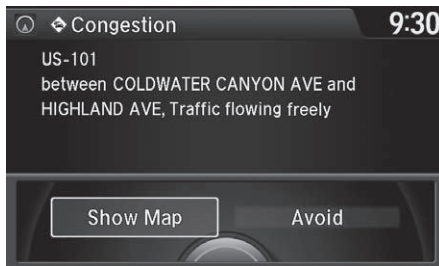

2. Rotate to select **Avoid**. Press .  
▶ Repeat step 1 to 2 as necessary.

## Traffic Rerouting™ Manually

"Display traffic", "Display traffic incidents"

You can display traffic incidents using voice commands.

▶ **Map Display Commands P. 348**


You can choose to avoid up to 10 traffic incidents. It is not always possible for the system to calculate a route that avoids all traffic incidents or specific traffic incidents you select.



The "On Route" tab on the Traffic List screen is only available during route guidance.

You cannot select an incident to avoid from the "All" tab.


You can also manually detour around a traffic incident or unexpected delay even if you do not have an AcuraLink Real-Time Traffic™ subscription or the delay does not yet appear on your display.

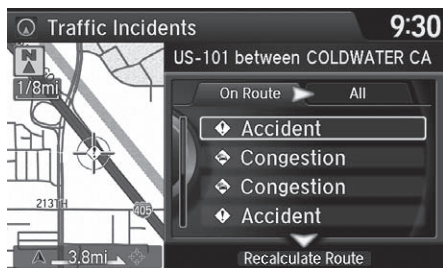▶ **Taking a Detour P. 167**





3. Move  to select **Recalculate Route**. Press .
- The system recalculates a detour route that avoids the traffic incidents.

# Changing Your Route

 **MENU** button (when en route)

This section describes how to alter your route, add an interim “waypoint” (pit stop), choose a different destination, cancel your current destination, and continue your trip after stopping.



Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.
  - **Listening to Voice Guidance** P. 149
- **Destination List:** Shows a list of waypoints. You can delete waypoints or edit the order of them.
  - **Editing the Destination List** P. 165
- **Pause Guidance:** Pauses your current route.
  - **Pausing the Route** P. 160
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Cancel Route:** Cancels the route guidance.
  - **Canceling the Route** P. 160
- **View Routes:** Displays three different routes.
  - **Viewing the Routes** P. 143

## Changing Your Route

 “Display Navigation” (when en route)

If you press the **MENU** button when not en route, the Destination Menu screen is displayed.


➤ **Entering a Destination** P. 116



- **Change Route Preference:** Changes the route preferences (calculating method).
  - ▣ **Route Preference** P. 54
- **Detour:** Calculates a detour route.
  - ▣ **Taking a Detour** P. 167
- **Avoid Streets:** Avoids streets along your route.
  - ▣ **Avoiding Streets** P. 167

---


## Pausing the Route

 **MENU** button (when en route) ► **Pause Guidance**

Pause the route guidance and return to the map screen. The destination icons and all waypoint flags remain displayed on the map. Press the **MENU** button when en route and select **Resume Guidance** to resume the route guidance.

---

## Canceling the Route

 **MENU** button (when en route) ► **Cancel Route**

Cancel the route guidance and remove the destination and all waypoints from the destination list. The system then returns to the map screen.

---


### Pausing the Route

You can also pause your route from the Map Menu.

▣ **Map Menu** P. 151

## Adding Waypoints

Add up to four waypoints (pit stops) along the route to your destination.

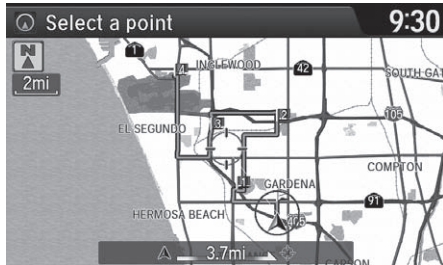

Waypoints are displayed on the map screen as small, numbered red flags. The route follows the waypoints in the order they are listed in the Destination List.

### ✕ Adding Waypoints

Waypoints allow you to stop for gas or food, for example, and then continue on to your destination.

Press the **NAV** button to return to the map screen without adding a waypoint at any time.

The search corridor used for adding waypoints can be adjusted.


✕ **Edit POI Search Radius Along Route** P. 59

You can delete waypoints or edit the order of waypoints in the destination list.

✕ **Editing the Destination List** P. 165


## ■ Adding Waypoints from the Route Menu

📍 **MENU** button (when en route) ► **Destination List** ► **Add New Destination**  
 ► **Find Along Route**

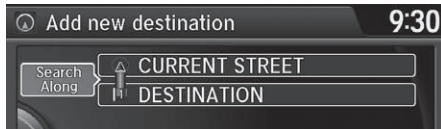

The following items are available:

- **Search Around:** Searches in a spiral pattern around the location you select.
- **Search Along:** Searches within a "corridor" on either side of the locations you select.

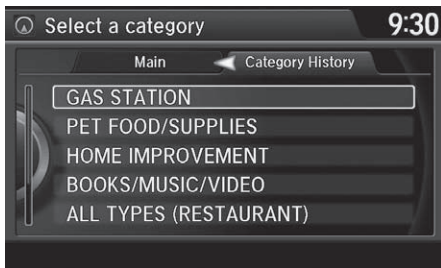



1. Rotate 🔄 to select a search method to add a waypoint. Press 📍.



2. Rotate 🔄 to select a waypoint category (e.g., **GAS STATION**). Press 📍.


## ►► Adding Waypoints from the Route Menu

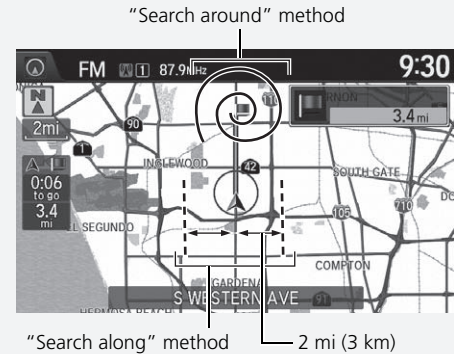
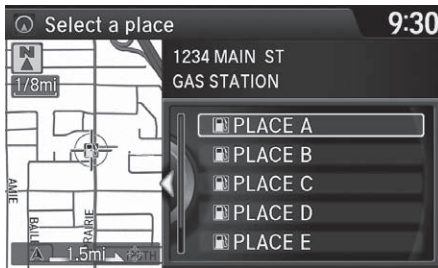
### Search method






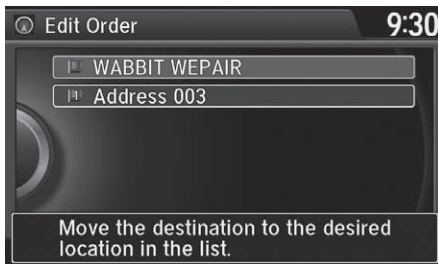


3. Rotate  to select a place. Press .
  - ▶ The waypoint is added to the Destination List.

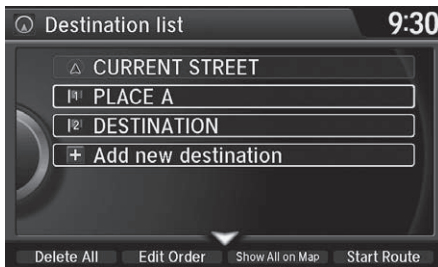

4. Rotate  to select a location and move the order of destinations. Press .



5. Move  and rotate  to select **Start Route**. Press .
  - ▶ The route is automatically recalculated and displayed on the map screen.

## ■ Adding Waypoints from the Navigation Menu


📍 MENU button (when en route) ► Destination List ► Add New Destination



1. Rotate 🔄 to select a method to enter a waypoint.

➡ **Entering a Destination** P. 116

► A new destination is added to the end of the Destination list.

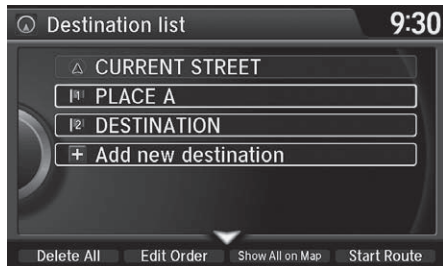

2. Move 📍 and rotate 🔄 to select **Start Route**. Press 🔄.

► The route is automatically recalculated and displayed on the map screen.

## ▣ Adding Waypoints from the Navigation Menu


You can edit the order of waypoints and destination.

➡ **Editing the Destination List** P. 165

## Editing the Destination List

### Editing the Order of Waypoints

**MENU** button (when en route) ► **Destination List**

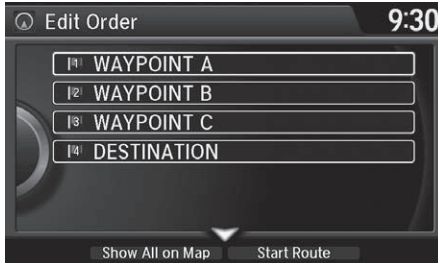

1. Move and rotate to select **Edit Order**. Press .

2. Rotate to select a list item to move. Press .

3. Rotate to select a new location. Press .

4. Move and rotate to select **Start Route**. Press .


► The route is automatically recalculated and displayed on the map screen.

### Editing the Order of Waypoints


Move to rotate to select **Show All on Map** to display the destination and waypoints on the map screen.

## ■ Deleting Waypoints

**MENU** button (when en route) ► **Destination List**

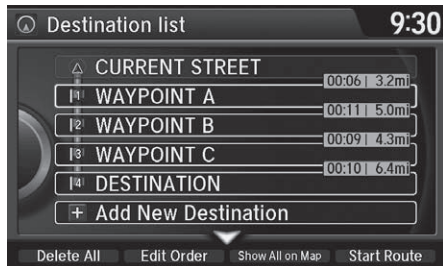

1. Rotate to select a list item to delete. Press .

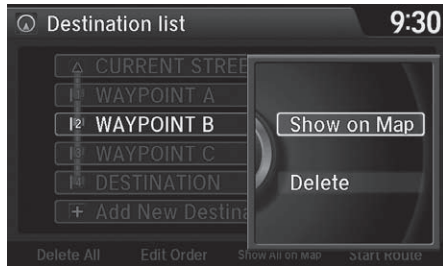

2. Rotate to select **Delete**. Press .

3. Rotate to select **Yes**. Press .

## ►► Deleting Waypoints

Move and rotate to select **Delete All** to delete the destination and all the waypoints.

Select **Show on Map** to display the waypoint on the map screen.

## Taking a Detour



**MENU** button (when en route) ► **Detour**

Calculate a detour route manually. The system attempts to calculate a new route by avoiding the next 5 miles (8 km) (while on a freeway/highway) or 1 mile (1.6 km) (while on a surface street).

## Avoiding Streets

**MENU** button (when en route) ► **Avoid Streets**

Select a street or streets along your route to avoid.

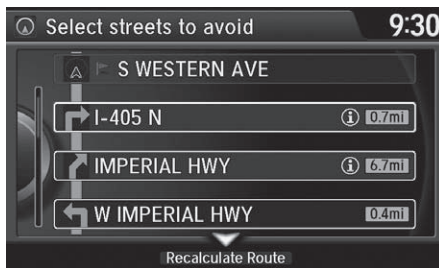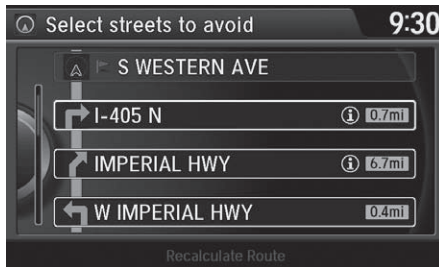

1. Rotate to select the street you want to avoid. Press .  
► Repeat the procedure to avoid other streets.

2. Move to select **Recalculate Route**. Press .  
► The system calculates a new route.

### Taking a Detour

The detour option is convenient if you encounter an unexpected obstacle such as a road closure or extremely heavy traffic congestion.

### Avoiding Streets

Avoiding certain streets is convenient if you know of road construction, road closures, or excessive traffic along the route.

You cannot choose specific streets you want to use, only those to avoid. However, you can select intersections or waypoints (places/landmarks) that the system will use in your route.


**Adding Waypoints** P. 161

You can store up to 10 streets to avoid. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).














 
There are several methods you can use to change the route destination.

## Find Nearest Place

 **ENTER** button (on map) ► **Search Nearby**

Search for the nearest place/landmark on the map screen and set it as your destination.



1. Rotate  to select **Search Nearby**. Press .
2. Rotate  to select a category type. Press .
3. Rotate  to select a place. Press .
4. Rotate  to select **Set as Destination**. Press .
5. Move  to select **Clear Current Route**. Press 
  - The route is automatically recalculated and displayed on the map screen.
  - Rotate  to edit the order to set the location as a new waypoint. Press .

## Find Nearest Place


 "Find Nearest..."

The Find Nearest voice command is the fastest method of specifying a place/landmark as your destination. Many kinds of places can be found.

► **Find Place Commands** P. 349

## Selecting a Destination on the Map

Select a new destination when en route by selecting a location on the map.

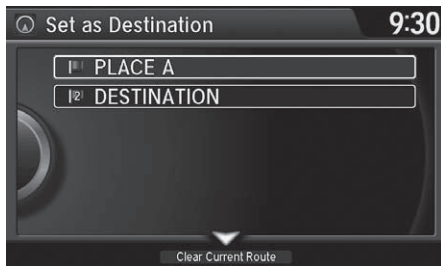


1. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .
  - ▶ If the address displayed is not the desired location, press the **BACK** button and repeat the procedure.
2. Rotate to select **Set as Destination**. Press .
  - ▶ **Calculating the Route** P. 141

3. Move to select **Clear Current Route**. Press .
  - ▶ The route is automatically recalculated and displayed on the map screen.
  - ▶ Rotate to edit the order to set the location as a new waypoint. Press .


### Selecting a Destination on the Map

If there is more than one icon or street under the map cursor, you are prompted to select the item from a list.

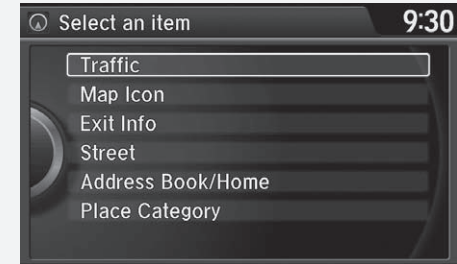



Rotate to select an item. Press .

## Entering a New Destination

 **MENU** button (when en route) ► **Destination**

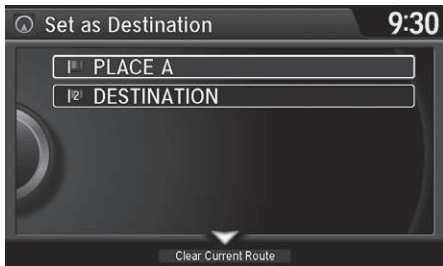

Enter a new destination using the Destination Menu screen even when you are en route.



1. Rotate  to select a method to enter a new destination.



►  **Entering a Destination** P. 116

► After entering a new destination, the address is displayed on the Calculate Route screen.



2. Rotate  to select **Set as Destination**. Press .

3. Move  to select **Clear Current Route**. Press .

► The route is automatically recalculated and displayed on the map screen.

► Rotate  to edit the order to set the location as a new waypoint. Press .



► Entering a New Destination


 "Display Destination",  "Display Navigation"


Stop your vehicle en route (e.g., to rest, stop for gas, etc.), and then continue on your route.

If you did not complete your route, the Continue Trip screen is displayed when you restart your vehicle.



Rotate  to select **Set as Destination**. Press .


- ▶ You can continue on the same route.
- ▶ Move  to scroll the map around the destination.
- ▶ Press the **BACK** button to cancel your destination.

- **View Routes:** Displays three different routes.
  - **Viewing the Routes** P. 143
- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).
  - **Route Preference** P. 54

## Resuming Your Trip

The Continue Trip screen has the same options as when you calculate a route.

➤ **Calculating the Route** P. 141

You can also cancel your destination by pressing any hard button except the  button.

### Search Nearby

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

➤ **Find Nearest Place** P. 168

### Call

You can place a telephone call to the destination phone number.

➤ **Bluetooth® HandsFreeLink®** P. 252

### Save to Address Book

You can add the destination address to the address book.

➤ **Adding an Address Book Entry** P. 40

### Edit/Delete Entry

You can edit or delete the address book entry.

➤ **Editing an Address Book Entry** P. 42

➤ **Deleting an Address Book Entry** P. 43

### Edit Home Entry

You can edit your home address entry.

➤ **Home Address** P. 46

### More Info

You can view detailed information about the destination.



# Audio

This section describes how to operate the audio system. You can play music from a wide array of media sources, and control the audio system using the audio buttons, the Interface Dial, or voice control.




<b>Audio System</b> .....	174	Audio Menu .....	200	<b>Playing Internet Radio</b> .....	236
About Your Audio System .....	174	SiriusXM® Radio Service .....	203	Selecting Internet Radio Mode .....	236
USB Port .....	175	<b>Playing a Disc</b> .....	205	Pandora® Menu* .....	237
Auxiliary Input Jack .....	176	Selecting Disc Mode .....	205	Aha™ Radio Menu .....	239
Audio System Theft Protection .....	176	Audio Screen Control .....	206	<b>Playing a USB Flash Drive</b> .....	241
Setting Audio Shortcuts .....	177	Audio Menu .....	207	Selecting USB Mode .....	242
Customizing Audio Source .....	178	Recommended CDs .....	210	Audio Screen Control .....	243
<b>Audio Remote Controls</b> .....	179	<b>Playing Hard Disc Drive (HDD) Audio</b> .....	212	Audio Menu .....	244
Steering Wheel Controls .....	179	Selecting HDD Mode .....	212	<b>Playing Bluetooth® Audio</b> .....	247
<b>Audio Settings</b> .....	181	Recording a Music CD to HDD .....	213	Selecting Bluetooth® Audio Mode .....	247
Adjusting the Sound .....	183	Audio Screen Control .....	214	Audio Screen Control .....	248
<b>Playing FM/AM Radio</b> .....	184	Audio Menu .....	215		
Selecting FM/AM Mode .....	184	<b>Playing an iPod</b> .....	224		
Audio Screen Control .....	185	Selecting iPod Mode .....	225		
Audio Menu .....	188	Audio Screen Control .....	226		
<b>Playing SiriusXM® Radio</b> .....	190	Audio Menu .....	228		
Selecting SiriusXM® Mode .....	190	Song By Voice™ (SBV) .....	231		
Audio Screen Control .....	191				

## About Your Audio System

The audio system features AM/FM radio and the SiriusXM® Radio service. It can also play audio CDs, WMA/MP3/AAC files, Hard Disc Drive (HDD) audio, USB flash drives, iPod, iPhone and *Bluetooth*® devices.

You can operate the audio system from the buttons and switches on the panel, the icons on the touchscreen interface.

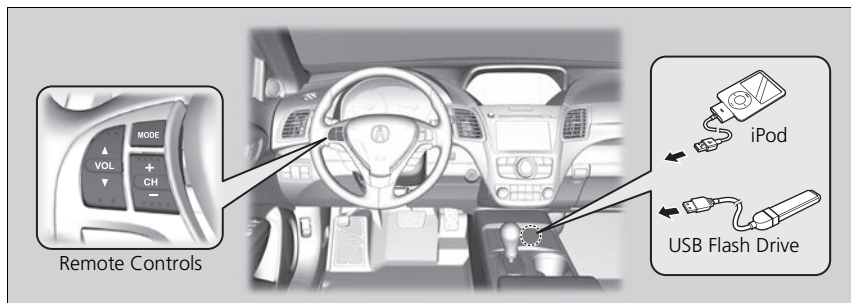

### ▶ About Your Audio System

SiriusXM® Radio is available on a subscription basis only. For more information on SiriusXM® Radio, contact a dealer.

▶ **SiriusXM® Radio Service** P. 203

SiriusXM® Radio is available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.

SiriusXM® is a registered trademark of SiriusXM® Radio, Inc.


Video CDs, DVDs, and 3 in (80 mm) mini CDs are not supported.

iPod, iPhone and iTunes are trademarks of Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

## USB Port

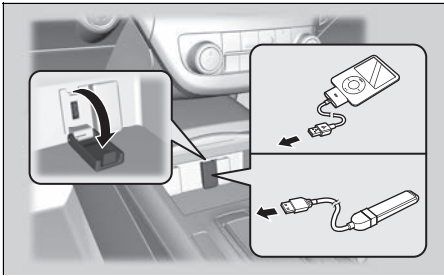

Open the center console. Install the iPod or iPhone dock connector or the USB flash drive to the USB port.


### ⓘ USB Port

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit [www.apple.com/ipod](http://www.apple.com/ipod).



## Auxiliary Input Jack

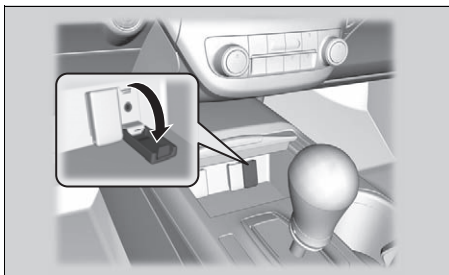

Use the jack to connect standard audio devices.

1. Open the center console.
2. Open the AUX cover.
3. Connect a standard audio device to the input jack using a 1/8 in (3.5 mm) stereo miniplug.
  - ▶ The audio system automatically switches to the AUX mode.


### ▶ Auxiliary Input Jack

You can return to the AUX mode by selecting **Change Source** on the Audio menu screen or **Audio Source** on the On Demand Multi-Use Display™.

## Audio System Theft Protection

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display Enter code. If this occurs, reactivate the audio system.

### ■ Reactivate the Audio System

1. Set the power mode to ON.
2. Turn on the audio system.
3. Press and hold the  (Power) button for more than two seconds.
  - ▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to a dealer and have the audio unit checked.

## Setting Audio Shortcuts

You can store up to six radio stations, and HDD audio album/play lists when playing AM, FM, SiriusXM® radio, or HDD audio.

### ▶▶ Setting Audio Shortcuts

You can also preset a station or song by pressing and holding the preset icon you want to store that station or song after step 3.

### ■ Storing a Station or Song



1. Select **Shortcuts**.
2. Tune to a radio station or select a song.
  - ▶▶ **Playing FM/AM Radio** P. 184
  - ▶▶ **Playing SiriusXM® Radio** P. 190
  - ▶▶ **Playing Hard Disc Drive (HDD) Audio** P. 212
3. Select **Audio**.
4. Select **Edit** or **No Entry**.
  - ▶ If you select **No Entry**, go to step 6.
5. Select **Add**.
6. Select the preset icon you want to store the station or song to.

## ■ Deleting a Preset Station or Song

1. Select **Shortcuts**.
2. Select **Audio**.
3. Select **Edit**.
4. Select **Delete**.
5. Select the preset icon with the radio station or a song you want to delete.

## Customizing Audio Source

You can customize order of the source list icons.




1. Select **Audio Source**.
2. Select **Edit Order** from the second screen.
3. Select two icons you want to swap.
4. Select **Done**.
  - ▶ Select **Default** to reset the customized order.

### ⌘ Customizing Audio Source

This operation is not allowed while the vehicle is in motion.


## Steering Wheel Controls

Control basic audio system functions using the controls mounted on the steering wheel.

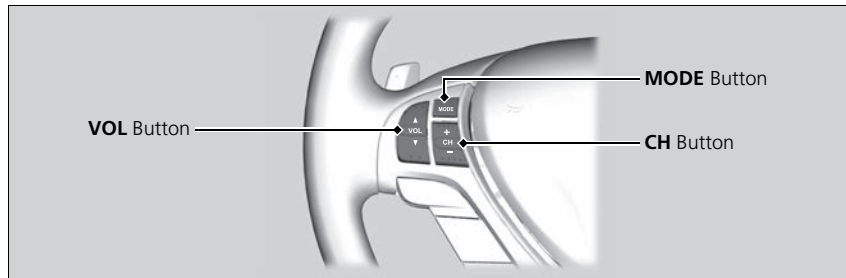

### MODE Button

Cycles through the audio modes as follows:

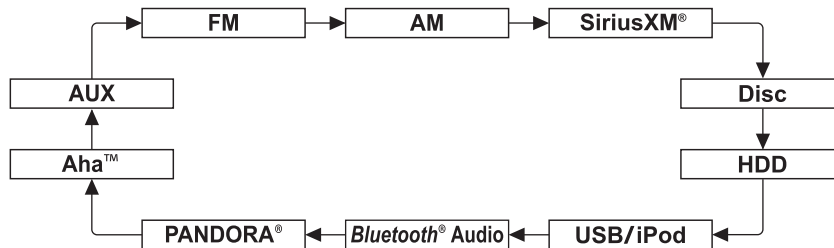

### VOL Button

- Press ▲ to increase the volume.
- Press ▼ to decrease the volume.
- Press and hold ▲ to increase the volume rapidly.

### Audio Remote Controls

The CD mode appears only when a CD is loaded.



 

The USB mode, iPod mode, *Bluetooth*® Audio mode, Pandora® mode, and Aha™ mode appear when a connection (*Bluetooth*® or USB) is established with a device.

To select audio mode, press the **MODE** button.





\*: Pandora® is available on U.S. models only.

## ■ CH Button



FM/AM, SiriusXM®

- Press  to select the next preset radio station.
- Press  to select the previous preset radio station.
- Press and hold  to scan to the next strong station.
- Press and hold  to scan to the previous strong station.





CD, HDD, iPod, USB flash drive, or *Bluetooth*® Audio

- Press  to skip to the next song.
- Press  to go back to the beginning of the current or previous song.
- Press and hold  to go to the group up. (*Bluetooth*® Audio only)
- Press and hold  to go to the group down. (*Bluetooth*® Audio only)

CD (MP3/WMA/AAC), HDD or USB flash drive

- Press and hold  to skip to the next folder.
- Press and hold  to go back to the previous folder.

Pandora®\* or Aha™



- Press  to skip to the next song.
- Press  to go back the previous song. (Aha™ only)
- Press and hold  to select the next station.
- Press and hold  to select the previous station.

## ▶▶ CH Button

\*: Pandora® is available on U.S. models only.

## SETTINGS button ► Audio Settings



1. Move ◀ or ▶ to select an audio mode you want to set.
2. Rotate  to select an item. Press .

The following items are available:

### SXM tab

- **SportsFlash** (SiriusXM® mode):

**Notification:** Sets whether a notification comes on the screen when the system receives a sports alert. If you select **Enable (one time)**, the system enables the notification until turning the vehicle off.

**Beep:** Turns on or off the beep that sounds every time the pop-up message interrupts other audio mode screen.

**Favorite Teams:** Stores up to five favorite teams. Select **Change Priority** to change the priority of favorite teams. Certain sports may require additional station subscriptions.

- **Play Song from Beginning** (SiriusXM® mode): Turns on or off the Tune Start function that begins playing the current song from the beginning when you tune to a music channel.

### Audio Settings

\*: This function is available on U.S. models only.

The “Play Song from Beginning” function is based on TuneStart™ technology of SiriusXM®.

TuneStart™ is a registered trademark of SiriusXM® Radio, Inc.

**CD/HDD tab**

- **Recording from CD** (CD mode): Selects whether the songs on music CDs are automatically recorded to the HDD.
- **Recording Quality** (CD mode): Selects the quality of the music files recorded to the HDD.
- **HDD Info** (HDD mode): Displays the HDD capacity.
- **Update Gracenote Album Info** (CD or HDD mode): Updates the Gracenote® Album Info (Gracenote® Media Database) from CD or from USB.
  - ▣ **Updating Gracenote® Album Info** P. 222
- **Delete All HDD Data** (HDD mode): Resets all the menu and customized settings, and delete all music data on the HDD.

**Bluetooth tab**

- **Bluetooth Device List** (*Bluetooth*® Audio mode): Edits or deletes *Bluetooth* Audio device paired.
- **Connect Bluetooth Audio Device** (*Bluetooth*® Audio, Pandora®\* or Aha™ mode): Connects, disconnects or pairs a *Bluetooth*® Audio device to HFL.


**Other tab**

- **Source Select Popup**: Selects whether the list of selectable audio sources comes on when the **AUDIO** button is pressed.
- **HD Radio Mode\*** (AM/FM mode): Selects whether the audio system automatically switches to the digital radio waves or receives the analogue waves only.
- **Cover Art** (CD (MP3/WMA/AAC), iPod, USB, Pandora®\* or Aha™ mode): Turns on and off the cover art display.
- **Default**: Cancels/Resets all customized items in the Audio Settings group as default.

## ▶▶ Audio Settings


\*: This function is available on U.S. models only.





## Adjusting the Sound

 **MENU** button ▶ **Sound**

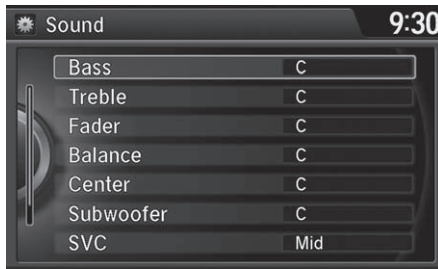
### Interface Dial


 



Adjust the sound bass, treble, fader, and balance. You can also adjust the strength of the sound coming from the center and subwoofer speakers. In addition, you can set Speed-sensitive Volume Compensation (SVC) and DTS Neural Surround.



1. Rotate  to select the sound mode to adjust. Press .
2. Rotate  to adjust the desired level. Press .
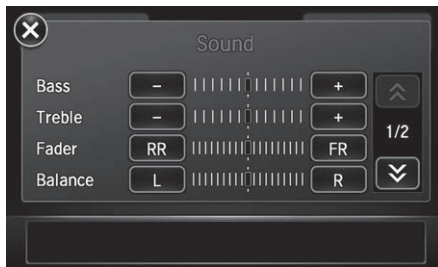
### On Demand Multi-Use Display™



1. Select **More**.
2. Select **Sound**.
3. Use ,  or other icon to adjust the setting.
  - ▶ Use the / icons to turn the page.
  - ▶ Select  to go back to the previous screen.

### Adjusting the Sound

The SVC has four modes: **Off**, **Low**, **Mid**, and **High**.


SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

DTS Neural Surround is a trademark of DTS, Inc.

When available, DTS Neural Surround converts stereo sound into surround sound.

### On Demand Multi-Use Display™





Select **Off**, **Low**, **Mid** or **High** for the SVC setting.

You can also adjust the sound to select  on the On Demand Multi-Use Display™.



## Selecting FM/AM Mode

### Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select the frequency band (FM, AM). Press .
  - ▶ The band and frequency are displayed on the navigation screen.

### On Demand Multi-Use Display™

1. Select **Audio Source**.
2. Select the frequency band (FM, AM) icon.
  - ▶ The band and frequency are displayed on the On Demand Multi-Use Display™.

### ▶ Selecting FM/AM Mode

 "Display audio"

You can control the AM/FM radio using voice commands.

▶ **Radio Commands** P. 352

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.

The radio can receive the complete AM and FM bands:

AM band: 530 to 1710 kHz


FM band: 87.7 to 107.9 MHz

You can store 6 AM stations and 12 FM stations into the preset memory.


## Audio Screen Control

Control the audio system through the navigation screen and On Demand Multi-Use Display™.

### Interface Dial

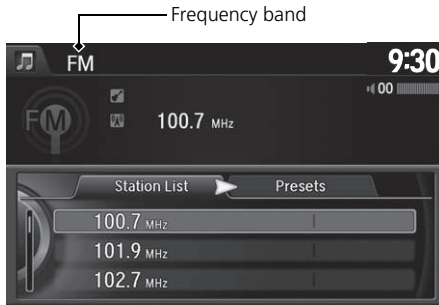


Rotate  to select a station from the list. Press .

- ▶ Rotate  and select **Refresh** to update the station list at any time.
- ▶ Press the **MENU** button to display the menu items.

➤ **Audio Menu P. 188**

**On Demand Multi-Use Display™**

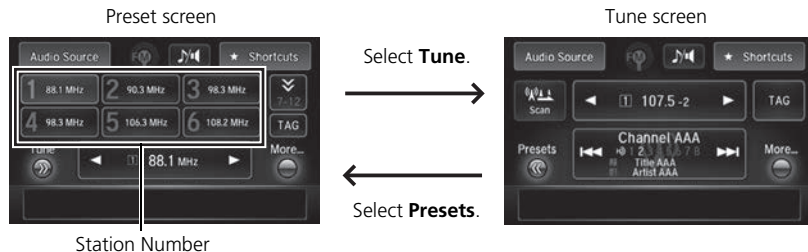

The following items are available:

- ◀ ▶: Tune the radio frequency. On the preset screen, select and hold to search up and down the selected band for a station with a strong signal.
- ◀▶ ▶▶: Search up and down the selected band for a station with a strong signal.
- **Station Number**: Select and hold a desired number where you want to store the station. Select to listen a preset station.
- **More**: Display the menu items.
  - ▶ **Audio Menu** P. 188
- **Scan**: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.

▶▶▶ Audio Screen Control




**U.S. models**

Select **TAG** to tag the song if it is played on an HD Radio™ station. The iPod/iPhone should be connected to the audio system to store the tagged song information on your device.

## Preset Memory

### Interface Dial

To store a station:

1. Tune to the desired station.
2. Move  to select **Presets**.
3. Rotate  to select a desired number on the preset station list.
4. Press and hold  a few seconds to store the current station.

To listen to a stored station, rotate  to select the preset number. Press .


### On Demand Multi-Use Display™

To store a station:

1. Tune to the selected station on preset screen.
2. Select and hold a desired number.



To listen to a stored station, select the preset number.

## Audio Menu



 **MENU** button (in FM/AM mode)

### Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Refresh Station List:** Displays the stored station list.
- **Radio Text:** Displays the text information broadcast by the current RDS station.
- **Save Preset:** Stores the station into the preset memory.
- **Change Source:** Changes the audio source mode.
- **Scan:** Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **Tag Song\*:** You can store the TAG information if your a iPhone/iPod is connected to the USB port. If the iPod/iPhone is not connected to the audio system, the information is stored in the audio unit temporarily, then once the device is connected to the system, data is transferred to the iPod/iPhone.
- **Tagged Song List\*:** Displays the TAG information saved to the audio system when an HD Radio™ station is selected.
- **Tune/Seek:** Tunes the radio to the frequency you select. Rotate  to select a frequency, then press .

- **HD Subchannel\***: Displays the subchannel list when an HD Radio™ station is selected.

#### On Demand Multi-Use Display™

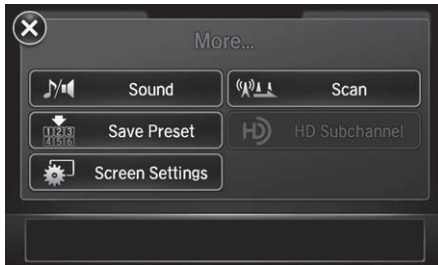

1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound**: Displays the sound preferences screen.
  - **Adjusting the Sound** P. 183
- **Save Preset**: Stores the station into the preset memory.
- **Screen Settings**: Adjusts the screen's preferences.
  - **Changing the Screen Settings** P. 87
- **Scan**: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **HD Subchannel\***: Displays the subchannel list when an HD Radio™ station is selected.

#### Audio Menu

##### U.S. models

##### iTunes Tagging\*

"iTunes" in "iTunes Tagging" is a trademark of Apple Inc.

When an HD Radio™ station is selected, the **HD** indicator appears on the Navigation screen and On Demand Multi-Use Display™.

If you want to have the current song information saved for future reference, select **TAG** in On Demand Multi-Use Display™ or select **Tag Song** in the menu with Interface dial.

If iPod/iPhone is connected, the tag is transferred to the connected device immediately, otherwise the tag will be transferred when the device is connected.





\*: This function is available on U.S. models only.



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio and "Arc" logos are proprietary trademarks of iBiquity digital Corp.

## Selecting SiriusXM® Mode

### Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select **SXM**. Press .
  - ▶ The category, channel list, and presets are displayed on the navigation screen.

### On Demand Multi-Use Display™

1. Select **Audio Source**.
2. Select the SiriusXM icon.
  - ▶ The category and channel are displayed on the On Demand Multi-Use display™.

### ▶▶ Playing SiriusXM® Radio

You can control the SiriusXM® radio using voice commands.

▶ **Radio Commands** P. 352


In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.






SiriusXM® Radio channels load in ascending order, which can take about a minute. Once they have loaded, you can scroll up or down to make your selections.
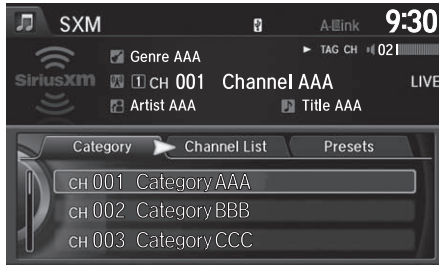
## Audio Screen Control

Control the audio system through the navigation screen and On Demand Multi-Use Display™.




### Interface Dial

1. Rotate  to select a category.  
Press .  
▶ Move  if you want to select from the current channel list or presets.
2. Rotate  to select a channel.  
Press .  
▶ Press the **MENU** button to display the menu items.  
▶ **Audio Menu** P. 200



On Demand Multi-Use Display™

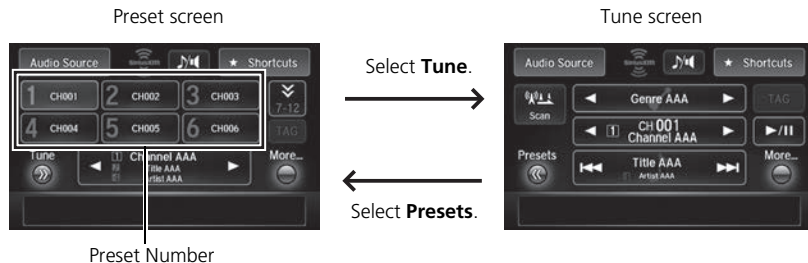

Audio

The following items are available:

- **Category bar** (Tune screen): Select ◀ or ▶ to search a category.
- **Channel bar** (Tune screen): Select ◀ or ▶ to search a channel. Select and hold ◀ or ▶ to search up or down 10 channels.
- **◀▶▶▶** (Tune screen): Select ▶▶▶ to skip to the next song. Select ◀◀◀ to skip to the previous song. Select and hold ▶▶▶ to fast-forward the current selection. Select and hold ◀◀◀ to fast-rewind the current selection.
- **◀▶** (Preset screen): Select a preset channel. Select and hold to search a channel.
- **▶▶||**: Select to play or pause the current selection. Select and hold to return to a live broadcast on the current channel.
- **More**: Display the menu items.
  - ▶ **Audio Menu** P. 200
- **Scan**: Scans for channels in the selected mode or Presets and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.

▶▶▶ Audio Screen Control




U.S. models

Select **TAG** to tag the song if it is played on an SiriusXM® Radio channel. To store the tagged song information to an iPod or iPhone, the device must be connected to the audio system.

## Preset Memory

### Interface Dial

To store a channel:

1. Tune to the desired channel.
2. Move  to select **Presets**.
3. Rotate  to select a desired number.
4. Press and hold  a few seconds to store the current channel.

To listen to a stored channel, rotate  to select the preset number. Press .

### On Demand Multi-Use Display™

To store a channel:

1. Tune to the desired channel.
2. Select and hold a desired number.

To listen to a stored channel, select the preset number.

## Multi-channel preset (for music channels only)

### On Demand Multi-Use Display™

You can store up to four of your preferred music channels per preset. When multiple channels exist, the music randomly skips between channels.

1. Select a channel you want to store.
2. Select **More**.
3. Select **Save Preset**.
  - ▶ You can add the current channel to multi-channel mixed preset if the **Mixed Preset** icon is highlighted.
4. Select a highlighted preset number where you want to add a music channel.
  - ▶ A message appears if there are no available presets.
5. Select **Add** from the **Add/Replace** screen.

### ▶▶▶ Preset Memory

You can store 12 SiriusXM® channels into the preset memory.



### ▶▶▶ Multi-channel preset (for music channels only)

Not all SiriusXM® channels are available to add to multi-channel preset.

## ■ Replay Function

 **MENU** button (in SiriusXM® mode) ▶ **Playback**

The system can record up to the last 60 minutes broadcast of your currently tuned channel as well as the last 30 minutes broadcast of preset channels, starting from the moment you turn the vehicle on. If you tuned to preset channel, the system records up to 60 minutes of a broadcast instead of up to 30 minutes. You can rewind and replay the last 30 or 60 minutes of a broadcast.

Select **OK** and rotate  to select a channel. Press .  
To play or pause in playback mode:

### Interface Dial



1. Press the **MENU** button.
2. Rotate  to select **Play/Pause**, press .

### On Demand Multi-Use Display™


Select the  icon.

## ■ Returning to real-time broadcast

### Interface Dial

1. Press the **MENU** button.
2. Rotate  to select **Go to Live**, then press .

### On Demand Multi-Use Display™

Select and hold the  icon or select **More** then, select **Go to Live**.

## ▶▶ Replay Function

The system starts storing broadcast in memory when the vehicle is turned on. You can go back to the program from that point.

You can no longer replay any program once the vehicle is turned off or if the non-preset channel has been changed.


The audio/information screen displays how long the station has been recording in the replay status bar.

## ■ Replay status display

### Interface Dial

Display the replay status on the navigation screen when you listen to the playback.

Shows how much time the replayed segment is behind the real-time broadcast

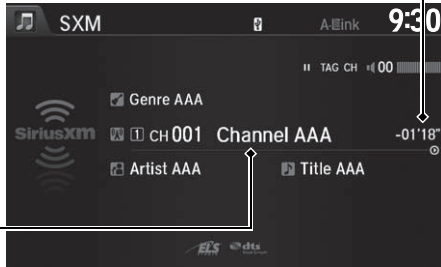

Stored length in the memory

Replayed segment

## ■ SportsFlash™ Alert

While listening to other channels, you can receive sports alerts such as scores from up to five of your favorite teams. The notification message appears on the navigation screen and On Demand Multi-Use Display™ when receiving sports alerts.

### Interface Dial



1. A pop-up appears and notifies you of a sports alert.
2. Select **Listen Now**.
  - ▶ Press the **BACK** button to return the previous screen.
  - ▶ If no operations are performed for 10 seconds, the system returns to the previous audio mode automatically.

The following items are available:

- **Check Later:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message appears again.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.

## ☒ SportsFlash™ Alert

The notification message does not appear on the navigation screen under the following circumstances:

- When you select other than the SiriusXM® Mode.
- When the start-up screen and Multi-view Rear Camera screen are displayed.

When a sports alert is received, the SportsFlash™ Listen indicator appears on the navigation screen.

You can change the SportsFlash™ setting.

➡ **Audio Settings** P. 181

SportsFlash™ is a registered trademark of SiriusXM® Radio, Inc.




3. Select an option.

The following options are available:

- **BACK:** Returns to the previous screen.
- **Skip Up:** Skips to the next stored sports alert.
- **Skip Down:** Skips to the previously stored sports alert.
- **15sec Back:** Select to skip back 15 seconds to the current sports alert. Select and hold to fast-rewind the current sports alert.
- **30sec Skip:** Select to skip forward 30 seconds to the current sports alert. Select and hold to fast-forward the current sports alert.

On Demand Multi-Use Display™

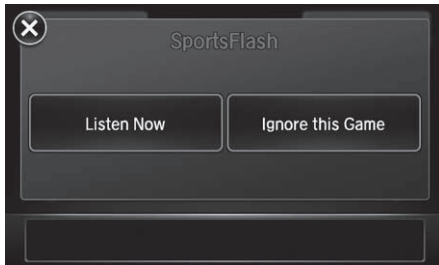

1. Select an item.
  - ▶ Select **X** to return the previous screen.
  - ▶ If no operations are performed for 10 seconds, the system returns to the previous screen automatically.

The following items are available:

- **Listen Now:** Plays the received sports alert in the current game.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.







2. Select an option.

The following options are available:


- **BACK:** Returns to the previous screen.
- **◀▶:** Select to skip to the previous or next sports alert. Select and hold to fast-rewind or fast-forward the current sports alert.

**■ If you have missed a sports alert:****Interface Dial**

1. From the audio screen, press the **MENU** button.
2. Rotate  to select **SportsFlash**, then press .
3. Rotate  to select an alert, then press .





## Audio Menu

 **MENU** button (in SiriusXM® mode)

### Interface Dial



Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Featured Channels:** Display the list of suggested channels from SiriusXM®. Up to three channel groups can be displayed.
- **Save Preset:** Stores the current channel into the preset memory.
- **SportsFlash:** Displays the list of available sports alerts. Up to two sports alerts can be displayed.
- **Tune Mode:** Sets the tune mode.
  - Channel Mode:** Tune to select all available channels.
  - Category Mode:** Tune to select a channel within a category (Jazz, Rock, Classic, etc.).
- **Change Source:** Changes the audio source mode.

### ▶▶ Audio Menu

#### U.S. models

#### iTunes Tagging\*

"iTunes" in "iTunes Tagging" is a trademark of Apple Inc.

If you want to have the information on the song played from the SiriusXM® Radio station, select **TAG** in On Demand Multi-Use Display™ or select **Tag Song** in the menu with Interface dial.

If iPod/iPhone is connected, the tag is transferred to the connected device immediately, otherwise the tag will be transferred when the device is connected.

\* This function is available on U.S. models only.

The "Scan Songs in Presets" function is based on TuneScan™ technology of SiriusXM®.

The "Featured Channels" function is based on Featured Favorites™ technology of SiriusXM®.

TuneScan™ and Featured Favorites™ are registered trademarks of SiriusXM® Radio, Inc.


To find out more about these features, visit [www.siriusxm.com](http://www.siriusxm.com).

- **Scan**: Select the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.  
**Scan Channels**: Scans for channels with a strong signal in the selected mode.  
**Scan Songs in Presets**: Scans for desired preset channel by songs. Select **Skip Up** or **Skip Down** to skip to the next/previous stored selection.
- **Tag Song\***: You can store the TAG information in the connected iPod/iPhone. If the iPod/iPhone is not connected to the audio system via USB, the information is stored in the audio unit temporarily. Once the device is connected to the system, data is transferred to the iPod/iPhone.
- **Tagged Song List\***: Displays the TAG information saved to the audio device.
- **Playback**: Play back selected presets from the beginning up to 30 minutes.  
**Skip Up**: Skips to the next stored song.  
**Skip Down**: Skips to the previous stored song.  
**15sec Back**: Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.  
**30sec Skip**: Select to skip forward 30 seconds in the current selection. Select and hold to fast-forward the current selection.
- **Play/Pause**: Plays and pauses the current channel.
- **Go to Live**: If previously paused, skips ahead to the live broadcast on the current channel.

#### ▶▶ Audio Menu



\* This function is available on U.S. models only.

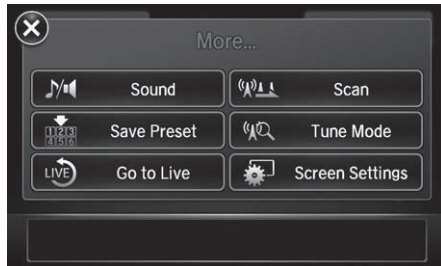On Demand Multi-Use Display™



1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 183
- **Save Preset:** Stores the channel into the preset memory. Set to store up to five of your preferred music channels per preset if the **Preset** icon is highlighted.
  - ▶ **Multi-channel preset (for music channels only)** P. 193
- **Go to Live:** If previously paused, skips ahead to the live broadcast on the current channel.
- **Scan:** Select the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.
  - Scan Channels:** Scans for channels with a strong signal in the selected mode.
  - Scan Songs in Presets:** Scans for desired preset channel by songs. Select  or  to skips to the next/previous stored selection.
- **Tune Mode:** Sets the tune mode.
  - Channel:** Tune to select all available channels.
  - Category:** Tune to select a channel within a category (Jazz, Rock, Classic, etc.).
- **Screen Settings:** Adjusts the screen's preferences.
  - ▶ **Changing the Screen Settings** P. 87

## SiriusXM® Radio Service

### ■ Subscribing to SiriusXM® Radio

1. You need your radio ID ready before registering for subscription. To see the ID in the display: Operate the On Demand Multi-Use Display™ until channel 0 appears.
2. Have your radio ID and credit card number ready, and either call or visit the SiriusXM® website to subscribe.

### ■ Receiving SiriusXM® Radio

Switch to the SiriusXM® mode by pressing the **MODE** button repeatedly or operating the On Demand Multi-Use Display™, and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

#### ☒ Subscribing to SiriusXM® Radio

Contact Information for SiriusXM® Radio:  
 U.S.: SiriusXM® Radio at [www.siriusxm.com](http://www.siriusxm.com) or (800) 852-9696  
 Canada: SiriusXM® Canada at [www.xmradio.ca](http://www.xmradio.ca), or (877) 209-0079

#### ☒ Receiving SiriusXM® Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack

## ■ SiriusXM® Radio Display Messages

### **Loading:**

SiriusXM® is loading the audio or program information.

### **Channel off air:**

The channel is not currently broadcasting.

### **Channel unauthorized:**

SiriusXM® radio is receiving information update from the network.

### **No signal:**

The signal is too weak in the current location.

### **Channel unavailable:**

No such channel exists, the channel is not part of your subscription, or the artist or title information is unavailable.





### **Check antenna:**

There is a problem with the SiriusXM® antenna. Contact a dealer.

Your audio system supports audio CDs, CD-Rs and CD-RWs in either MP3, WMA, or AAC format. With the CD loaded, select the CD mode.

## Selecting Disc Mode

### Interface Dial

1. Insert a disc into the disc slot.
  - ▶ The disc automatically being playing.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **CD**. Press .

### On Demand Multi-Use Display™

1. Insert a disc into the disc slot.
  - ▶ The disc automatically being playing.
2. Select **Audio Source**.
3. Select the CD icon.

### ▶▶ Playing a Disc

#### NOTICE

Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

WMA and ACC files protected by digital rights management (DRM) cannot be played. The audio system displays Unplayable File, then skips to the next file.

Text data appears on the display under the following circumstances:

- When you select a new folder, file, or track.
- When you change the audio mode to CD.
- When you insert a CD.

If you eject the CD but do not remove it from the slot, the system reloads the CD automatically after several seconds.

You can control a CD audio using voice commands.

▶▶ **Disc Commands** P. 353

## Audio Screen Control

Control the audio system through the navigation screen and On Demand Multi-Use Display™.



Track list



### Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a file from the list (files in MP3, WMA, or AAC). Press .
  - ▶ Press the **MENU** button to display the menu items.
  - ▶ **Audio Menu P. 207**

### On Demand Multi-Use Display™

1. Select to skip to the next folder, and to skip to the beginning of the previous folder in MP3, WMA, or AAC.
2. Select or to change tracks (files in MP3, WMA, or AAC). Select and hold to move rapidly within a track/file.
  - ▶ Select **More** to display the menu item.
  - ▶ **Audio Menu P. 207**

### ▶▶ Audio Screen Control


#### On Demand Multi-Use Display™



- **Random:** Plays all tracks/files in random order.
- **Repeat:** Repeats the current track/file.
- **Scan:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC). Select **Stop Scan** to stop scanning and play the current selection.

## Audio Menu

 **MENU** button (in CD mode)
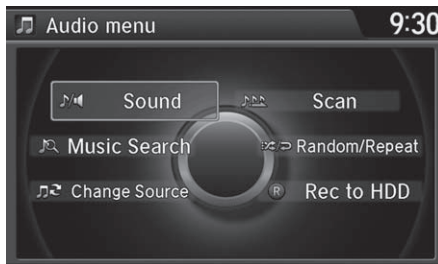
### Interface Dial



Rotate  to select an item. Press .

The following items are available, depending on the type of disc:


- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Music Search:** Selects a file from the Music Search list.
  - ▶ **How to Select a File from the Music Search List (MP3/WMA/AAC)** P. 209
- **Change Source:** Changes the audio source mode.
- **Scan:**
  - Scan Folders (MP3/WMA/AAC):** Provides 10-second sampling of the first file in each of the main folders.
  - Scan Tracks:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC).
- **Random/Repeat:**
  - Repeat Folder (MP3/WMA/AAC):** Repeats all files in the current folder.
  - Repeat Track:** Repeats the current track/file.
  - Random in Folder (MP3/WMA/AAC):** Plays all files in the current folder in random order.
  - Random All Tracks:** Plays all tracks/files in random order.

*Continued*



- **Rec to HDD:** Records a music CD onto the HDD for playback using HDD Audio.
  - ▶ **Recording a Music CD to HDD** P. 213

On Demand Multi-Use Display™

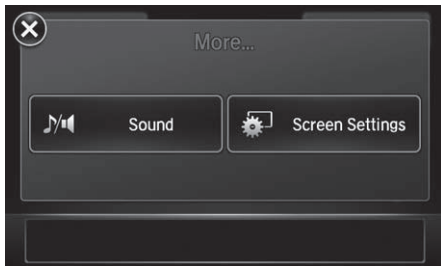


1. Select **More**.
2. Select a setting item.





The following items are available, depending on the type of disc:

- **Sound:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 183
- **Screen Settings:** Displays the screen preferences screen.
  - ▶ **Changing the Screen Settings** P. 87

## How to Select a File from the Music Search List (MP3/WMA/AAC)

 **MENU** button (in CD mode) ▶ **Music Search**



Rotate , move  or  to select a file from the Music Search list. Press .

## Recommended CDs


- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped CDs.

### ▶▶ Recommended CDs


A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Neural Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

The CD packages or jackets should have one of these marks.



Also includes:



### ■ CDs with MP3, WMA or AAC Files

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA or AAC formats may be unsupported.

## ■ Protecting CDs

Follow these precautions when handling or storing CDs:

- Store a CD in its case when it is not being played.
- When wiping a CD, use a soft clean cloth from the center to the outside edge.
- Handle a CD by its edge. Never touch either surface.
- Never insert foreign objects into the CD player.
- Keep CDs out of direct sunlight and extreme heat.
- Do not place stabilizer rings or labels on the CD.
- Avoid fingerprints, liquids, and felt-tip pens on the CD.

 
## ▶▶ Protecting CDs

### NOTICE


Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

### Examples:

**Bubbled, wrinkled, labeled, and excessively thick CDs**



Bubbled/  
Wrinkled

 


With Label/  
Sticker




Using Printer  
Label Kit

### Damaged CDs

 


Sealed

 


With Plastic Ring


### Poor quality CDs

 

Chipped/  
Cracked

 

Warped

 

Burrs

### Small CDs







3 in (80 mm) CD

The Hard Disc Drive (HDD) Audio function plays tracks from music CDs that have been recorded onto the built-in HDD. You can arrange the tracks in playlists or play the tracks using various search methods.

## Selecting HDD Mode

### Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate  to select **HDD**. Press  to play tracks stored on the HDD.
  - ▶ Title information is displayed if found in the Gracenote® Album Info (Gracenote® Media Database) stored on the HDD.
  - ▶ The HDD has two types of playlists: original playlists and user playlists. An original playlist is automatically created for each album when a music CD is recorded. You can customize up to six user playlists provided on the HDD by adding tracks from your original playlists.

### On Demand Multi-Use Display™

1. Select **Audio Source**.
2. Select the HDD icon to play tracks stored on the HDD.

### ▶▶ Playing Hard Disc Drive (HDD) Audio

You can control the HDD audio using voice commands.

▶ **HDD Commands** P. 351

▶ **Song By Voice™ (SBV)** P. 231

Music tracks recorded on HDD cannot be recorded onto CDs or other devices.

Tracks are recorded at four times the playback speed using ultra-efficient compression technology; therefore, sound quality may vary slightly from the original.


If the HDD is ever replaced, all music data is lost and cannot be recovered.

If there is a problem, you may see an error message on the display.

▶ **Hard Disc Drive (HDD) Audio** P. 327

## Recording a Music CD to HDD

The songs on music CDs are automatically recorded by factory default to the HDD the first time you play each disc. You can then play the songs directly from the HDD.

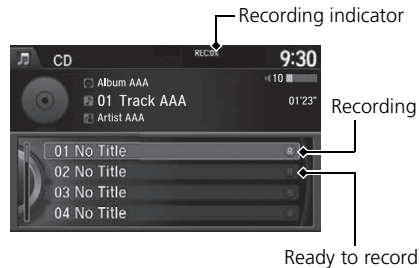

### ▶▶ Recording a Music CD to HDD

You can add tracks to user playlists, where you can mix and match tracks from other CDs recorded on the HDD.

▶▶ **Editing an Album or Playlist** P. 218

▶▶ **Editing Track Information** P. 220

If you stop the engine or the power system is turned off while recording a CD, there may be pauses between songs when you play back from the HDD.

Repeat, random, and scan functions are not available during recording.



You can play music from other sources (e.g., SiriusXM®, HDD, etc.) while recording.

Please note that there is no compensation offered in the case of unsuccessful recording of audio data or the loss of audio data due to any cause whatsoever.

### Clearing the HDD

Any music tracks stored on the HDD can be deleted.

### Stopping Recording


1. Press the **MENU** button. (in CD mode)
2. Rotate  to select **Cancel Record to HDD**. Press .

### Recording a CD Manually

1. Press the **MENU** button. (in CD mode)
2. Rotate  to select **Rec to HDD**. Press .

## Audio Screen Control

Control the audio system through the navigation screen and On Demand Multi-Use Display™.

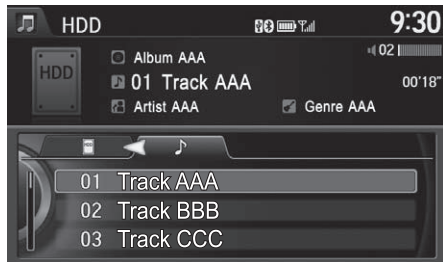

### Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a track from the list. Press .
  - ▶ Press the **MENU** button to display the menu items.

▶ **Audio Menu** P. 215

### On Demand Multi-Use Display™

1. Select skip to the next playlist/album, and to skip to the beginning of the previous playlist/album.
2. Select or to change tracks.
  - Select and hold to move rapidly within a track.
  - ▶ Select **More** to display the menu item.


▶ **Audio Menu** P. 215

### ▶▶ Audio Screen Control


#### ▶ On Demand Multi-Use Display™



- **Repeat:**
  - Repeat Artist:** Repeats all tracks in the current artist.
  - Repeat Album:** Repeats all tracks in the current album.
  - Repeat Track:** Repeats the current track.
- **Random:**
  - Random in Artist:** Plays all tracks in the current artist in random order.
  - Random in Album:** Plays all tracks in the current album in random order.
  - Random All Tracks:** Plays all tracks in random order.
- **Scan:**
  - Albums:** Provides 10-second sampling of the first track in each album.
  - Tracks:** Provides 10-second sampling of all tracks on HDD.

## Audio Menu

 **MENU** button (in HDD mode)
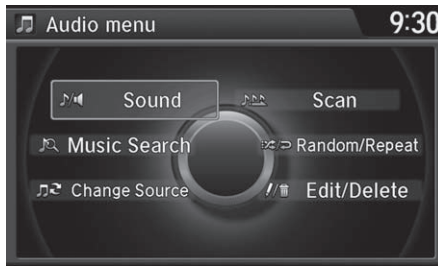
### Interface Dial



Rotate  to select an item. Press .

The following items are available:


- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Music Search:** Selects a file from the Music Search list.
  - ▶ **How to Select a Track from the Music Search List** P. 217
- **Change Source:** Changes the audio source mode.
- **Scan:**
  - Scan Albums:** Provides 10-second sampling of the first track in each album.
  - Scan Tracks:** Provides 10-second sampling of all tracks on HDD.
- **Random/Repeat:** The following menu items vary depending on the category you selected by the Music Search list.
  - Repeat Artist:** Repeats all tracks in the current artist.
  - Repeat Album:** Repeats all tracks in the current album.
  - Repeat Track:** Repeats the current track.
  - Random in Artist:** Plays all tracks in the current artist in random order.
  - Random in Album:** Plays all tracks in the current album in random order.
  - Random All Tracks:** Plays all tracks in random order.

*Continued*



- **Edit/Delete:** Change the playlist name, album name, genre, and track order of the current playlist. You can also delete tracks, playlists, and albums.

On Demand Multi-Use Display™

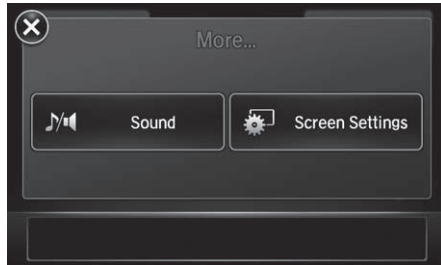


1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 183
- **Screen Settings:** Displays the screen preferences screen.
  - ▶ **Changing the Screen Settings** P. 87



## ■ How to Select a Track from the Music Search List

 **MENU** button (in HDD mode) ▶ **Music Search**




1. Move  or  to select a search category. Press .




 




2. Rotate  to select a track from the Music Search list. Press .
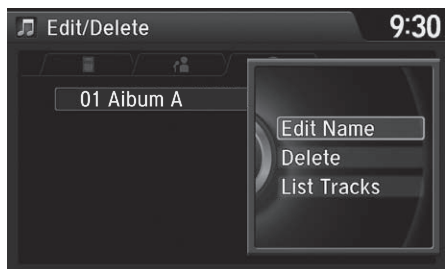
## ■ Editing an Album or Playlist

 **MENU** button (in HDD mode) ▶ **Edit/Delete**



1. Rotate  to select **Albums** or **Playlist**. Press .
2. Rotate  to select an album or playlist that you want edit or delete. Press .
  - ▶ The pop-up menu appears on the screen.
3. Rotate  to select an item. Press .

The following items are available:

- **Edit Name:** Enter a new name using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes the selected album or playlist.
- **List Tracks:** Change the track title, artist name, genre and composer. You can also delete tracks.

## ▣ Editing an Album or Playlist

The maximum number of original playlists is 50 with a maximum of 99 songs in each playlist.

Each album CD counts as an original playlist. Adding a track from a user playlist into the same user playlist will cause the track to appear twice in the playlist.

Deleting an album (original playlist) also deletes the album tracks you have stored in any user playlists.

Deleting a user playlist or deleting all tracks from a user playlist does not remove the playlist folder. The folder retains the playlist name and artist information.

## ■ Creating a New Playlist

🔑 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Playlists** ▶ **Create New Playlist**




1. Enter the playlist name using the interface dial or the On Demand Multi-Use Display™.
2. Select tracks from the music search list.

## ■ Editing Track Information

🔗 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Tracks**

Change the track title, artist name, genre and composer. You can also delete tracks.

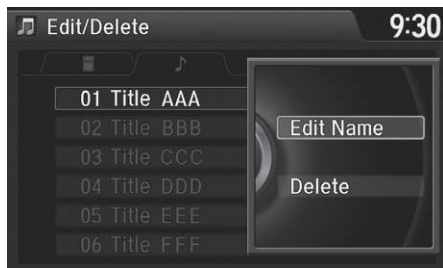

Rotate 🌀 select a track you want to edit or delete. Press 🌀.

▶ The pop-up menu appears on the screen.



The following items are available:







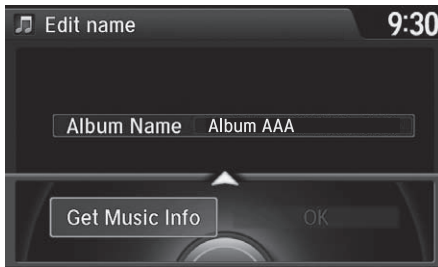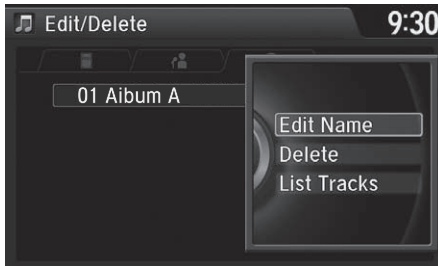

- **Edit Name:** Enter the track information (track name, track artist, etc.) using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes a track.

## ■ Displaying Music Information

 **MENU** button (in HDD mode) ▶ **Edit/Delete**

Music information (album name, artist name, genre) can be acquired by accessing the Gracenote® Album Info.









1. Rotate  to select **Albums**.  
Press .
2. Rotate  to select an album that you want edit or delete. Press .  
▶ The pop-up menu appears on the screen.
3. Rotate  to select **Edit Name**.  
Press .
4. Move  to select **Get Music Info**.  
Press .  
▶ The system starts to access the Gracenote® Album Info.

## ■ Updating Gracenote® Album Info

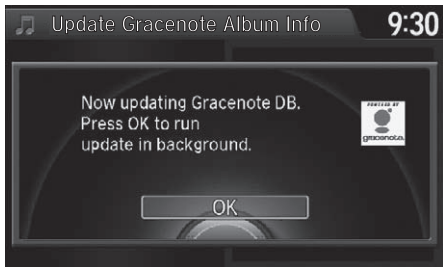 **SETTINGS** button (in HDD mode) ▶ **Audio Settings** ▶ **CD/HDD**

Update the Gracenote® Album Info (Gracenote® Media Database) that is included with the navigation system.



1. Insert the update disc into the disc slot or connect the USB flash drive that includes the update.
2. Rotate  to select **Update Gracenote Album Info**. Press .
3. Rotate  to select **Update by CD** or **Update by USB**. Press .
  - ▶ The system starts updating and the confirmation message appears on the screen. Press  to finish.

## ▣ Updating Gracenote® Album Info

To acquire updated files:

- Consult a dealer.
- Visit <http://www.navteq.com/gracenote/acura>.

Once you perform an update, any information you edited before will be overwritten or erased.

## ■ Deleting All HDD Data

 **SETTINGS** button ▶ **Audio Settings** ▶ **CD/HDD** ▶ **Delete All HDD Data**


Delete all music data on the HDD.



Rotate  to select Yes. Press .



## ■ Connecting an iPod

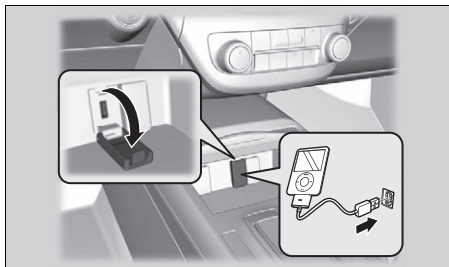

1. Open the center console.
2. Open the USB cover.
3. Install the iPod dock connector to the USB connector.

## ■ Model Compatibility

### Model

iPod (5th generation)

iPod classic 80GB/160GB (launch in 2007)

iPod classic 120GB (launch in 2008)

iPod classic 160GB (launch in 2009)

iPod nano (1st to 7th generation) launch in 2012

iPod touch (1st to 5th generation) launch in 2012

iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4s/iPhone 5/iPhone 5s/iPhone 5c

## ☒ Connecting an iPod

- Do not connect your iPod using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.





Your audio system may not work with all software versions of these devices.

If the audio system does not recognize your iPod, try reconnecting it a few times or reboot the device.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

## Selecting iPod Mode

### Interface Dial

1. Connect the iPod to the USB adapter cable in the center console.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate , select **Change Source**. Press .
4. Rotate , select **iPod**. Press .

### On Demand Multi-Use Display™

1. Connect the iPod to the USB adapter cable in the center console.
2. Select **Audio Source**.
3. Select the iPod icon.

### ▶ Selecting iPod Mode

You can control an iPod using voice commands.

- ▶ **iPod Commands** P. 353
- ▶ **Song By Voice™ (SBV)** P. 231


Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the navigation screen.

- ▶ **iPod/USB Flash Drive** P. 328





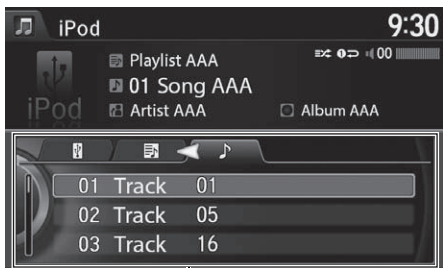

## Audio Screen Control

Control the audio system through the navigation screen and On Demand Multi-Use Display™.



Track list

### Interface Dial


1. Rotate  or press  to display the song list.
2. Rotate  or move  or  to select a song from the list. Press .
  - ▶ Press the **MENU** button to display the menu items.
  - ▶ **Audio Menu P. 228**

### ▶▶ Audio Screen Control

Some functions may not be available depending on your phone's model or software version.

Select **BACK** to go back to the previous screen.

## On Demand Multi-Use Display™

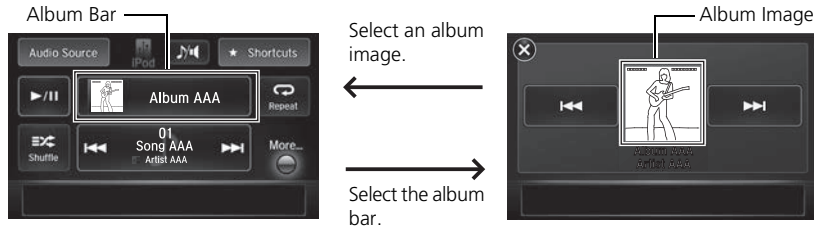


The following items are available:



- (play/pause): Plays or pauses a song file.
- : Select the previous or next track. Select and hold to move rapidly within a track.
- **Album bar:** Select to display the album search screen.  
Select or to search for an album.
- **Repeat:** Repeats the current track.
- **Shuffle:**  
**Shuffle Albums:** Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.  
**Shuffle All Songs:** Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
- **More:** Select to display the menu item.  
**Audio Menu** P. 228

## Audio Menu

 **MENU** button (in iPod mode)
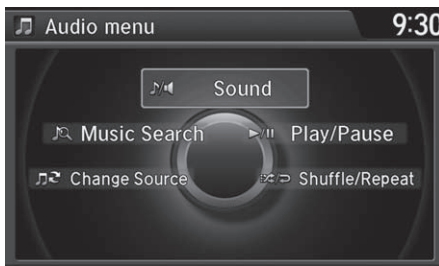
### Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Music Search:** Selects a song from the Music Search list.
  - ▶ **How to Select a Song from the Music Search List** P. 230
- **Change Source:** Changes the audio source mode.
- **Play/Pause:** Pauses or plays a song file.
- **Shuffle/Repeat:**
  - Repeat Song:** Repeats the current track.
  - Shuffle Albums:** Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
  - Shuffle All Songs:** Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

## On Demand Multi-Use Display™

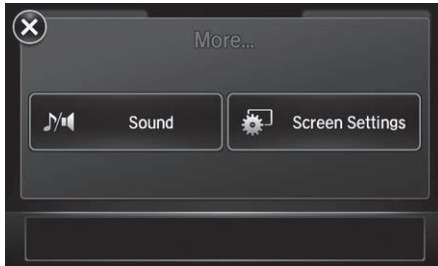


1. Select **More**.
2. Select a setting item.


The following items are available:


- **Sound**: Displays the sound preferences screen.
  - **Adjusting the Sound** P. 183
- **Screen Settings**: Displays the screen preferences screen.
  - **Changing the Screen Settings** P. 87



## ■ How to Select a Song from the Music Search List

 **MENU** button (in iPod mode) ▶ **Music Search**

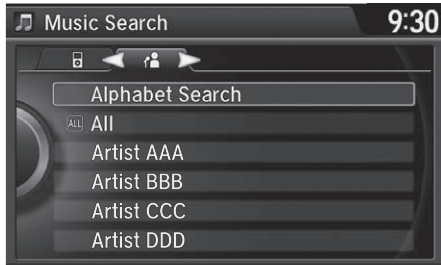

1. Rotate  to select a search category. Press .



2. Rotate  to select a file from the Music Search list. Press .


## Song By Voice™ (SBV)

Use SBV to search for and play music from your HDD or iPod using voice commands.

### Settings Song By Voice™ (SBV)

 **SETTINGS** button ▶ **System Settings** ▶ **Song By Voice**





Rotate  to select **On** or **Off**. Press .




The following items are available:

- **On** (factory default): Song By Voice commands are available.
- **Off**: Disable the feature.

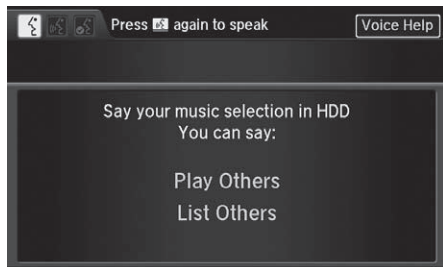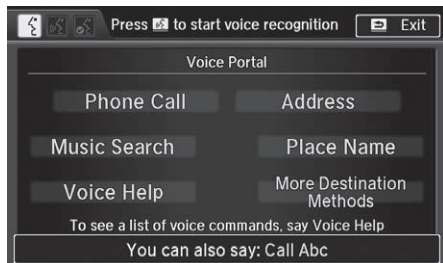

## ■ Searching for Music Using Song By Voice™ (SBV)

 

1. Set the **Song By Voice** setting to **On**.
2. Press the  (Talk) button and say *"Music Search"* to activate the SBV feature for the HDD and iPod.
3. Press the  (Talk) button and say a command.
  - ▶ Example 1: Say *"(List) 'Artist A'"* to view a list of songs by that artist. Select the desired song to start playing.
  - ▶ Example 2: Say *"Play 'Artist A'"* to start playing songs by that artist.
4. To cancel SBV, press the  (Hang-Up/Back) button on the steering wheel. The selected song continues playing.

## ▣ Searching for Music Using Song By Voice™ (SBV)

Song By Voice™ Commands List

▶ **Song By Voice™ Commands** P. 351


### NOTE:

Song By Voice™ commands are available for tracks stored on the HDD or iPod.

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

▶ **Phonetic Modification** P. 233

SBV may not be able to recognize languages other than English for the artist name, song title, album title, and composers.




Once you have canceled this mode, you need to press the  (Talk) button and say *"Music Search"* again to re-activate this mode.


## Phonetic Modification



 **SETTINGS** button ▶ **System Settings** ▶ **Song By Voice Phonetic Modification**

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the HDD or iPod.

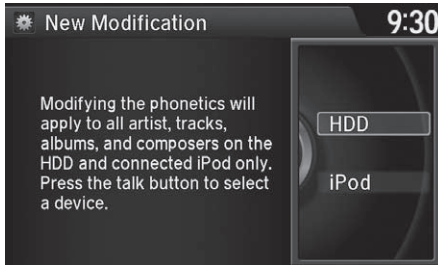

1. Move  and rotate  to select **New Modification**. Press .












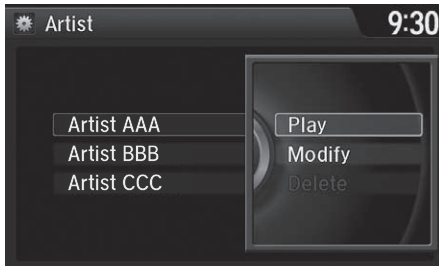

2. Rotate  to select **HDD** or **iPod**. Press .

## Phonetic Modification


 
Phonetic Modification is grayed out when **Song By Voice** is set to **Off**.

You can store up to 2,000 phonetic modification items.







3. Rotate  to select the item to modify (e.g., **Artist**). Press .
  - ▶ The list of the selected item appears on the screen.
  
4. Rotate  to select an entry (e.g., **No Name**). Press .
  - ▶ The pop-up menu appears on the screen.
5. Rotate  to select **Modify**. Press .
  - ▶ The listen to the current phonetic modification, rotate  to select **Play**. Press .
  - ▶ To delete the current phonetic modification, rotate  to select **Delete**. Press .



6. Enter the phonetic spelling you wish to use (e.g., "Artist A") when prompted.
7. Move  to select **OK** to exit. The artist "No Name" is phonetically modified to "Artist A." When in the SBV mode, you can press the  (Talk) button and use the voice command "Play 'Artist A'" to play songs by the artist "No Name."

## Selecting Internet Radio Mode

### Interface Dial

1. Connect a compatible phone through *Bluetooth*®.
2. Press the **MENU** button.(in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **Pandora**\* or **Aha**. Press .

### On Demand Multi-Use Display™

1. Connect a compatible phone through *Bluetooth*®.
2. Select **Audio Source**.
3. Select the Pandora\* or Aha icon.

### iPhone


You can also connect the phone using your dock connector to the USB port.

### » Selecting Internet Radio Mode



To find out if your phone is compatible with this feature, call 1-888-528-7876 or visit [acura.com/handsfreelink](http://acura.com/handsfreelink) (U.S.) or [handsfreelink.ca](http://handsfreelink.ca) (Canada).

\*: Pandora® is available on U.S. models only.
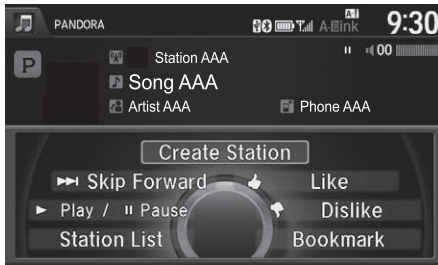
## Pandora® Menu\*



### Interface Dial

Rotate  to select an item. Press .

▶ Press the **MENU** button to display the menu items.

The following items are available:

- **Create Station:** Create a new station from genre, current track, or artist.
- **Skip Forward:** Skip the current song.
- **Play/Pause:** Pauses or plays a song.
- **Station List:** Displays the list of all your stored stations. Select a station from the list to play.
- **Like:** Likes the current song. Pandora® will play songs similar to the one liked.
- **Dislike:** Dislikes the current song and skips to the next song. Pandora® will avoid playing songs similar to the one disliked.
- **Bookmark Track:** Bookmarks the current song.
- **Bookmark Artist:** Bookmarks the current artist.

### ▶▶ Pandora® Menu\*

\*: Pandora® is available on U.S. models only.

Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.

Pandora® is a personalized Internet radio service that selects music based on an artist, song, or genre a user enters, and streams what is likely to be of interest.

You can control Pandora® using voice commands.

▶ **Pandora® Commands** P. 354

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the navigation screen.

▶ **Pandora® P.** 329

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit [www.pandora.com](http://www.pandora.com) for more information.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio.

Make sure Pandora® mode on your audio system is selected.

Continued





**On Demand Multi-Use Display™**

- Select ◀ or ▶ to change a station.
- Select ⏭ to skip a song.
  - ▶ Select ▶|| to pause or play a song.
  - ▶ Select 👍 or 👎 to evaluate a song.
  - ▶ Select **More** to display the menu item.
    - **Adjusting the Sound** P. 183
    - **Changing the Screen Settings** P. 87



▶▶ Pandora® Menu\*

There are restrictions on the number of songs you can skip or dislike in a given hour.
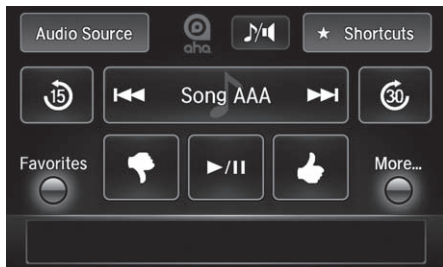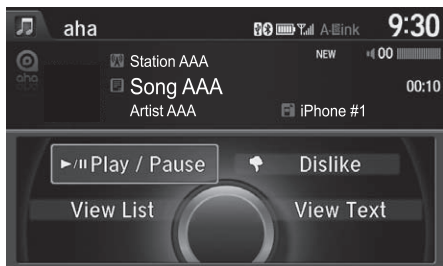
## Aha™ Radio Menu




### Interface Dial

Rotate  to select an item. Press .

▶ Press the **MENU** button to display the menu items.

### On Demand Multi-Use Display™

Select  or  to skip contents.

- Select  to pause or play a song.
- Select an icon to evaluate a song.
- Select **More** to display the menu item.

▶ **Adjusting the Sound** P. 183

▶ **Changing the Screen Settings**  
P. 87

### ▶ Aha™ Radio Menu

Aha™ by Harman is a cloud-based service that organizes your favorite web content into live radio stations. You can access podcasts, internet radio, location-based services, and audio updates from social media sites.

You can control Aha™ Radio using voice commands.

▶ **Aha™ Radio Commands** P. 354

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the navigation screen.

▶ **Aha™ Radio** P. 332

The menu items vary depending on the station you selected.

To use this service in your vehicle, the AcuraLink® app must be installed on your phone. Visit [owners.acura.com/apps](http://owners.acura.com/apps) (U.S.) or [www.myacura.ca/apps](http://www.myacura.ca/apps) (Canada).



You must have a previously set up Aha™ account prior to using the service in your vehicle. Visit [www.aharadio.com](http://www.aharadio.com) for more information.




## ■ How to Select a Station from the Station List

 **MENU** button (in Aha™ mode) ▶ **Station List**



Rotate  to select a station from the Station list. Press .

## ■ Connecting a USB Flash Drive

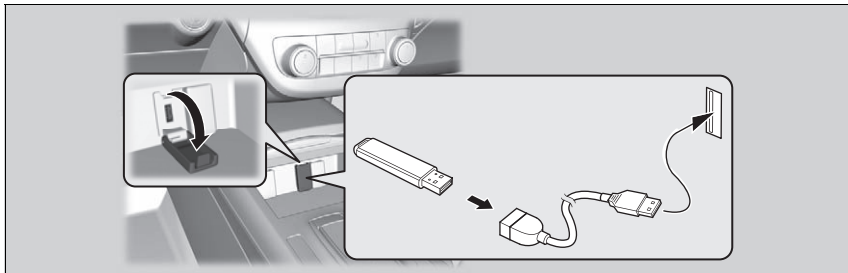

1. Open the center console.
2. Open the USB cover.
3. Install the USB flash drive to the USB connector.

## ■ USB Flash Drives

Use a recommended USB flash drive of 256 MB or higher.  
Some digital audio players may not be compatible.  
Some USB flash drives (e.g., a device with security lockout) may not work.  
Some software files may not allow for audio play or text data display.  
Some versions of MP3, WMA, or AAC formats may be unsupported.

## ⊗ Connecting a USB Flash Drive

- We recommend connecting the USB flash drive with the USB adapter cable.
- Do not connect your USB flash drive using a hub.
- Do not use a device such as a card reader or hard disc drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.





## ⊗ USB Flash Drives

Digital music tracks, such as MP3, WMA, AAC, etc., in USB flash drives cannot be copied to HDD. Likewise, digital music tracks recorded to HDD cannot be copied to USB flash drives.

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

## Selecting USB Mode

### Interface Dial

1. Connect the USB flash drive to the USB port in the center console.
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **USB**. Press .

### On Demand Multi-Use Display™

1. Connect the USB flash drive to the USB port in the center console.
2. Select **Audio Source**.
3. Select the USB icon.

### ▶▶ Selecting USB Mode

You can control a USB flash drive using voice commands.

▶ **USB Commands** P. 353

Files in WMA/ACC format protected by digital rights management (DRM) cannot be played.


The audio system displays Unplayable File, and then skips to the next file.

If there is a problem, you may see an error message on the navigation screen.







▶ **iPod/USB Flash Drive** P. 328
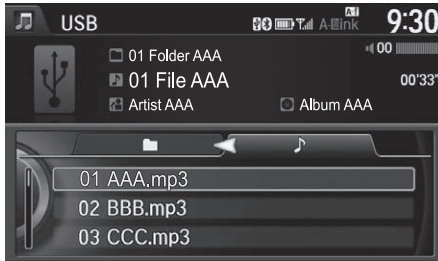
## Audio Screen Control

 
 

 
Control the audio system through the navigation screen and On Demand Multi-Use Display™.



### Interface Dial

1. Rotate  or press  to display the song list.
2. Rotate  or move  or  to select a song from the list. Press .
  - ▶ Press the **MENU** button to display the menu items.
    - ▶ **Audio Menu** P. 244

### On Demand Multi-Use Display™

1. Select  to skip to the next folder, and  to skip to the beginning of the previous folder.
2. Select  or  to change files. Select and hold to move rapidly within a file.
  - ▶ Select **More** to display the menu item.
    - ▶ **Audio Menu** P. 244

### ▶▶ Audio Screen Control


#### On Demand Multi-Use Display™



- **Random:**
  - Random in Folder:** Plays all files in the current folder in random order.
  - Random All Tracks:** Plays all files in random order.
- **Repeat:**
  - Repeat Folder:** Repeats all files in the current folder.
  - Repeat Track:** Repeats the current file.
- **Scan:**
  - Folders:** Provides 10-second sampling of the first file in each of the main folders.
  - Tracks:** Provides 10-second sampling of all files in the current folder.

## Audio Menu

 **MENU** button (in USB mode)
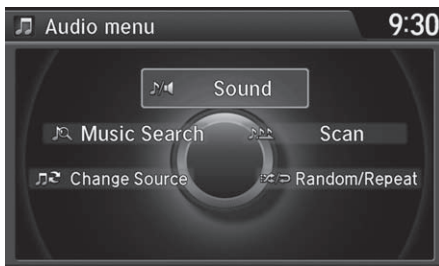
### Interface Dial




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Music Search:** Selects a file from the Music Search list.
  - ▶ **How to Select a File from the Music Search List** P. 246
- **Change Source:** Changes the audio source mode.
- **Scan:**
  - Scan Folders:** Provides 10-second sampling of the first file in each of the main folders.
  - Scan Tracks:** Provides 10-second sampling of all files in the current folder.
- **Random/Repeat:**
  - Repeat Folder:** Repeats all files in the current folder.
  - Repeat Track:** Repeats the current file.
  - Random in Folder:** Plays all files in the current folder in random order.
  - Random All Tracks:** Plays all files in random order.

## On Demand Multi-Use Display™

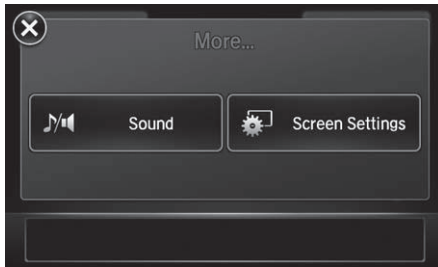


1. Select **More**.
2. Select a setting item.

The following items are available:


- **Sound**: Displays the sound preferences screen.
  - **Adjusting the Sound** P. 183
- **Screen Settings**: Displays the screen preferences screen.
  - **Changing the Screen Settings** P. 87



## ■ How to Select a File from the Music Search List

 **MENU** button (in USB mode) ▶ **Music Search**

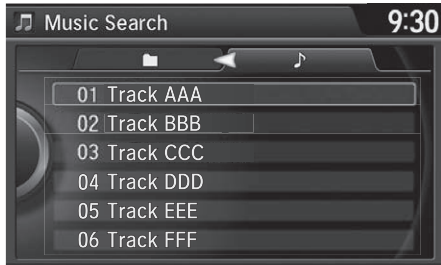

1. Move  or  to select a search category. Press .



2. Rotate  to select a file from the Music Search list. Press .





Your audio system allows you to listen to music from your *Bluetooth*<sup>®</sup>-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*<sup>®</sup> HandsFreeLink<sup>®</sup> (HFL) system.

➤ *Bluetooth*<sup>®</sup> HandsFreeLink<sup>®</sup> P. 252

## Selecting *Bluetooth*<sup>®</sup> Audio Mode

### Interface Dial

1. Make sure that your phone is on, paired, and linked to HFL.  
➤ **Pairing a Phone** P. 255
2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **Bluetooth Audio**. Press .

### On Demand Multi-Use Display™

1. Make sure that your phone is on, paired, and linked to HFL.  
➤ **Pairing a Phone** P. 255
2. Select **Audio Source**.
3. Select the *Bluetooth* icon.

### ⊠ Playing *Bluetooth*<sup>®</sup> Audio

Not all *Bluetooth*<sup>®</sup>-enabled phones with streaming audio capabilities are compatible with the system.

For a list of compatible phones, call 1-888-528-7876 or visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada).

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

If more than one phone is paired to the HFL system, there will be a delay before the system begins to play.


You can control *Bluetooth*<sup>®</sup> Audio using voice commands.

➤ ***Bluetooth*<sup>®</sup> Audio Commands** P. 354





## Audio Screen Control

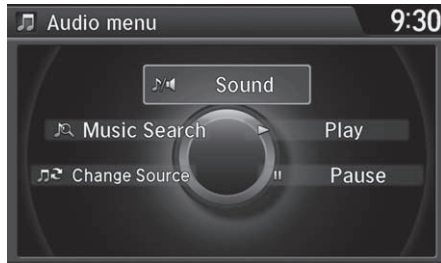Control the audio system through the navigation screen and On Demand Multi-Use Display™.



### Interface Dial

1. Press the **MENU** button. (in BT mode).
2. Rotate  select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.
  - ▶ **Adjusting the Sound** P. 183
- **Music Search:** Selects a song from the Music Search list.
- **Change Source:** Changes the audio source mode.
- **Play:** Plays a song.
- **Pause:** Pauses a song.

### ▶▶ Audio Screen Control

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

The pause function and Music Search may not be available on some phones.

Switching to another mode pauses the music playing from your phone. This function may not be available on some phones.



#### On Demand Multi-Use Display™

1. Select ◀ or ▶ to change folders.
2. Select ◀◀ or ▶▶ to change files.
  - ▶ Select **More** to display the menu items, then select a setting item.
  - ▶ Select ▶ or ⏸ to play or pause a song file.

The following items are available:

- **Sound:** Displays the sound preferences screen.
  - **Adjusting the Sound** P. 183
- **Screen Settings:** Displays the screen preferences screen.
  - **Changing the Screen Settings** P. 87




# Bluetooth® HandsFreeLink®

This section describes how to operate *Bluetooth*® HandsFreeLink®. You can place and receive phone calls using your vehicle's audio system without handling your mobile phone.

<b>Bluetooth® HandsFreeLink®</b> .....	252	<b>Text/E-mail Message</b> .....	285
Using HFL .....	252	Setting a Text/E-mail Message .....	285
Pairing a Phone .....	255	Selecting a Mail Account .....	287
Importing Phonebook Data .....	261	Receiving a Text/E-mail Message .....	288
Setting Up Speed Dialing .....	262	Displaying Messages .....	289
Phonebook Phonetic Modification .....	268	<b>Roadside Assistance</b> .....	293
Phone Settings .....	273	<b>HFL Menus</b> .....	294
Making a Call .....	278		
Receiving a Call .....	283		
Options During a Call .....	284		

## Using HFL

### HFL Buttons

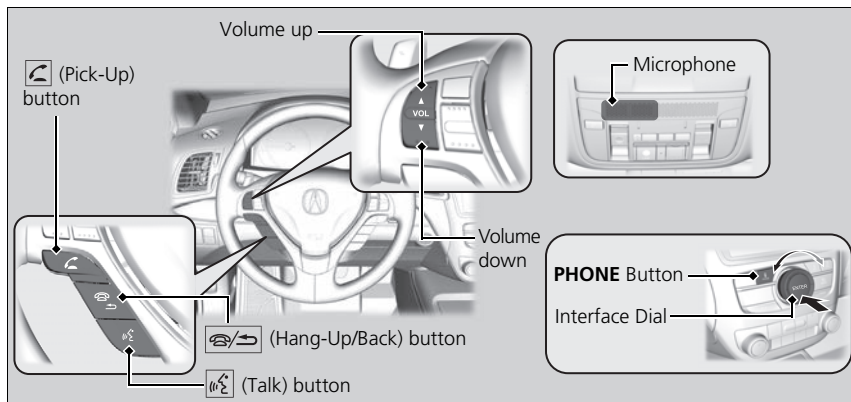

(Pick-Up) button: Press to go to a phone-specific voice command screen or to answer an incoming call.

(Hang-Up/Back) button: Press to end a call, or to cancel a command.

(Talk) button: Press to give HFL voice commands.

**PHONE** button: Press to go directly to the Phone screen.

Interface dial: Rotate to select an item on the screen, then press . Move , , or to select secondary menu.

### Bluetooth® HandsFreeLink®

To use HFL, you need a *Bluetooth*®-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities: Call 1-888-528-7876 or visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada).

#### Voice control tips:

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the (Talk) button when you want to call a number using a stored voice tag, a phonebook name, or a number. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls on the steering wheel.


State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

If you receive a call while using the audio system, the system resumes its operation after ending the call.

If you press (Talk) button, the climate control fan speed is reduced automatically. When voice recognition ends, the fan speed returns to the previous level.

## HFL Status Display

The navigation screen notifies you when there is an incoming call.

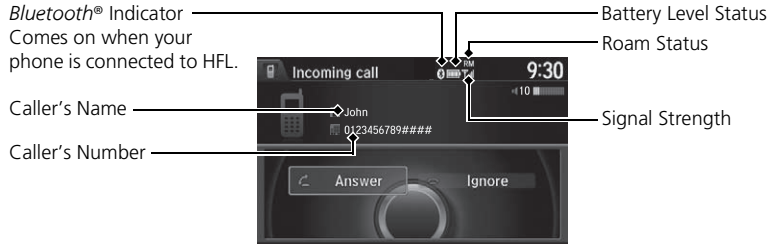

## Bluetooth® HandsFreeLink®

### Bluetooth® Wireless Technology


The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

### HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

*Bluetooth*® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's navigation system, without handling your mobile phone.

## ■ Limitations for Manual Operation

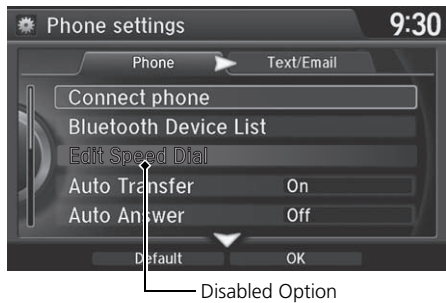

Certain manual functions are disabled or inoperable while the vehicle is in motion.

You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

➤ **Setting Up Speed Dialing** P. 262

## ➤ HFL Status Display

The information that appears on the navigation screen varies between phone models.


You can change the system language to English, French, or Spanish.






➤ **Language Settings** P. 34

## Pairing a Phone
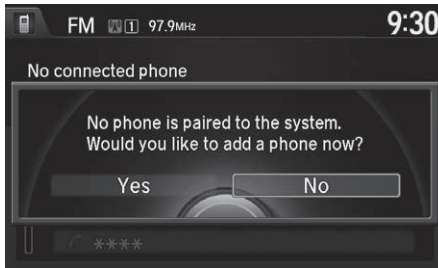
### PHONE button

When no *Bluetooth*®-compatible phone is paired, the following screen appears:



1. Rotate  to select **Yes**. Press .
2. Make sure your phone is in search or discoverable mode. Press .
  - ▶ HFL automatically searches for a *Bluetooth*® device.
3. When your phone appears on the list, select it by pressing .
  - ▶ If your phone does not appear, you can select **Refresh** to search again.
  - ▶ If your phone still does not appear, move  to select **Device Not Found?** and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.

### Pairing a Phone



Your *Bluetooth*®-compatible phone must be paired to HFL before you can make and receive hands-free calls.

#### Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is connected to HFL.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and returns to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

- : The phone can be used with HFL.
- : The phone is compatible with *Bluetooth*® Audio.





4. HFL gives you a pairing code on the navigation screen.
  - ▶ Confirm if the pairing code on the screen and your phone match. This may vary by phone.
5. You will receive a notification on the screen if pairing is successful.

#### ▶▶ Pairing a Phone

When pairing is completed, an **Automatic Phone Sync** prompt appears. Select **On** if you want your call history and phonebook automatically imported to HFL.

▶ **Automatic Phone Sync Setting** P. 277


Some phones may have an additional setting to allow the phone to auto connect each time you turn on your vehicle.



### ■ Pairing from Phone Setup

PHONE button ▶ Phone Settings ▶ Connect Phone

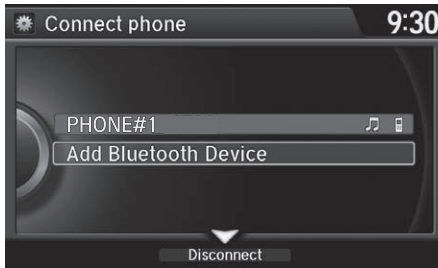

1. Rotate  to select **Add Bluetooth Device**.
2. Make sure your phone is in search or discoverable mode. Press .
  - ▶ HFL automatically searches for a *Bluetooth®* device.



3. When your phone appears on the list, select it by pressing .
  - ▶ If your phone does not appear, you can select **Refresh** to search again.
  - ▶ If your phone still does not appear, move  to select **Device Not Found?** and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.
4. HFL gives you a pairing code on the navigation screen.
  - ▶ Confirm if the pairing code on the screen and your phone match. This may vary by phone.
5. You will receive a notification on the screen if pairing is successful.

## ■ Changing the Pairing Code

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Edit Pairing Code**



Rotate  to select **Fixed** or **Random**. Press .

## ▶▶ Changing the Pairing Code

The pairing code may be six or four digits depending on your phone.

The default pairing code is **0000** until you change the setting.

To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

## ■ Changing the Currently Paired Phone

🔗 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**



1. Rotate to select a paired phone you want to replace. Press .
2. Rotate to select **Replace This Device**. Press .
3. HFL enters the pairing process and searches a new phone.
  - ▶ Follow the prompts to pair a new phone.
4. You will receive a notification on the screen if pairing is successful.





## ☒ Changing the Currently Paired Phone

The replaced phone will keep the same speed dial entries, and security PIN information from the previously paired phone.



## ■ Deleting a Paired Phone

📶 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**



1. Rotate  to select a paired phone you want to replace. Press .
2. Rotate  to select **Delete This Device**. Press .



3. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .
4. You will receive a notification on the screen if deletion is successful.


## Importing Phonebook Data



When your phone is paired, the contents of its phonebook and call history are automatically imported to HFL.

### Importing Phonebook Data

When you select a person from the list in the mobile phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

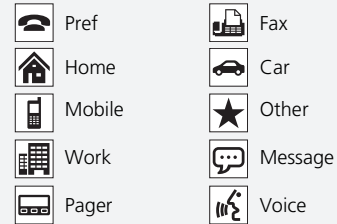


On some phones, it may not be possible to import the category icons to HFL.



The phonebook is updated after every connection. Call history is updated after every connection or call.

## Setting Up Speed Dialing

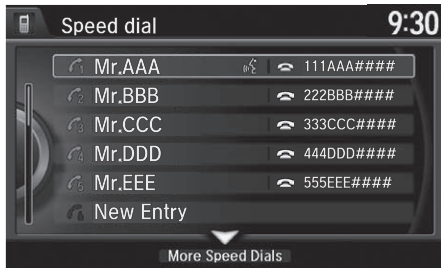

### MENU button (on Phone screen) ▶ Speed Dial

Up to 20 speed dial numbers can be stored per phone.



1. Rotate  to select **New Entry**.  
Press .




2. Rotate  to select a number entry method. Press .

The following options are available:


- **Import from Call History:** Select a number from the call history.
- **Manual Input:** Input the number manually.
- **Import from Phonebook:** Select a number from the linked mobile phone's imported phonebook.







### Setting Up Speed Dialing

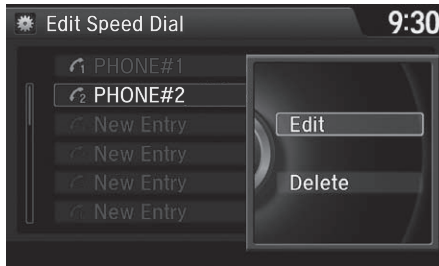
When a voice tag is stored, press the  (Talk) button to call the number using the voice tag. Say "Call" and the voice tag name.



## Registering a Voice Tag to a Speed Dial Entry

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Edit Speed Dial**

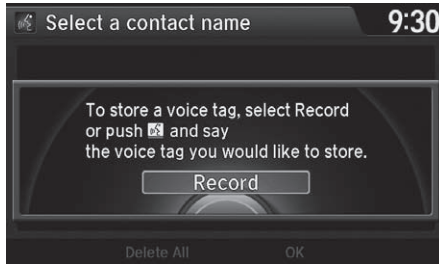

1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select **Voice Tag**. Press .
4. From the pop-up menu, rotate  to select **Record**. Press .



5. Press .
  - ▶ Using the  (Talk) button, follow the prompt to enter a voice tag.

## Registering a Voice Tag to a Speed Dial Entry

Avoid using duplicate voice tags.









Avoid using "home" as a voice tag.

It is easier for HFL to recognize a longer name. For example, use "John Smith" instead of "John."





 
 
■ To delete a voice tag



1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select **Voice Tag**. Press .
4. From the pop-up menu, rotate  to select **Clear**. Press .
5. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .

■ To delete a speed dial



1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Delete**. Press .
3. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .

## Setting Phone Shortcuts

You can preset five previously stored speed dial entries, and make a call from one of the preset numbers, or call history when the phone is paired and connected to the vehicle's Bluetooth® HandsFreeLink® (HFL) system.

➤ **Setting Up Speed Dialing** P. 262

### ■ To preset a speed dial



1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select **Edit** or **No Entry**.
  - ▶ If you select **No Entry**, go to step 6.



5. Select **Add** and select a preset number you want to store as a shortcut.
  - ▶ Five presets appear. Select a **No Entry** preset or an existing preset.
  - ▶ The screen changes to a list of previously stored speed dial entries.


## Setting Phone Shortcuts

### Dial icon

You can make a call using the keyboard on the On Demand Multi-Use Display™ to input numbers.

➤ **Entering a Phone Number** P. 280



6. Select a phone number you want to store as a shortcut. Select **OK** and press .

■ To make a call from a speed dial entry




1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select a preset number.
  - ▶ Dialing starts automatically.

■ To delete a speed dial



1. Select Shortcuts.
2. Select Phone.
3. Select Speed Dial.
4. Select Edit.
5. Select Delete.
6. Select the preset number with the phone number you want to delete.

■ To make a call from call history

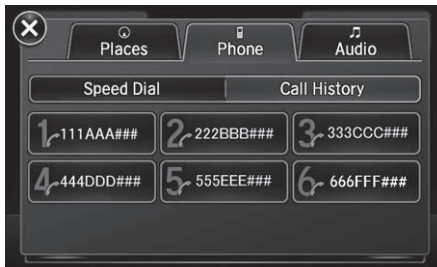

1. Select Shortcuts.
2. Select Phone.
3. Select Call History.
4. Select a phone number.
  - ▶ Dialing starts automatically.

☒ To make a call from call history


The call history displays the last six dialed, received, or missed calls.

## Phonebook Phonetic Modification


📞 **SETTINGS** button ▶ **System Settings** ▶ **Phonebook Phonetic Modification**

Add phonetic modifications or a new voice tag to the phone's contact name so that it is easier for HFL to recognize voice commands.

### ■ To add a new voice tag

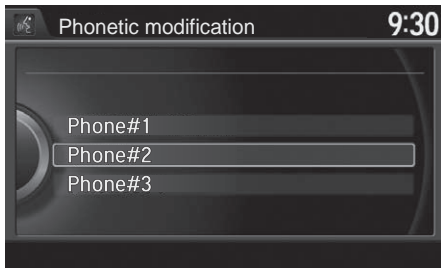



1. Rotate 📶 to select the phone you want to add phonetic modification to. Press 📞.

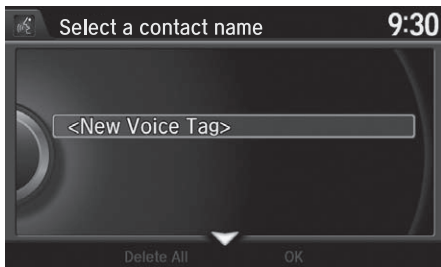







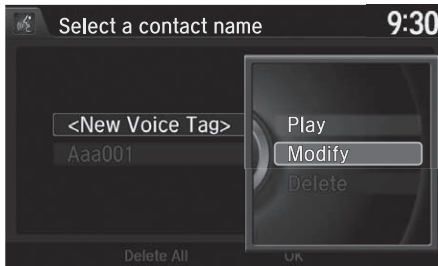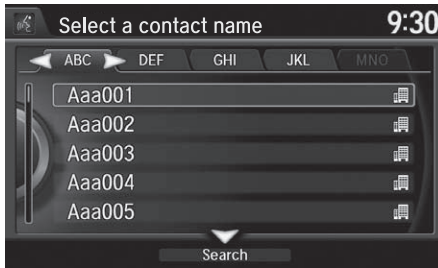



2. Rotate 📶 to select New Voice Tag. Press 📞.



### ☑ Phonebook Phonetic Modification







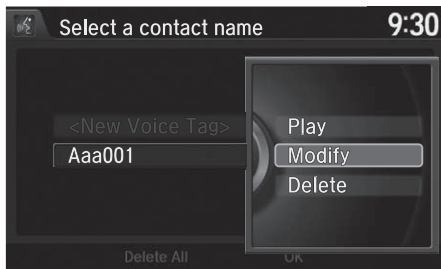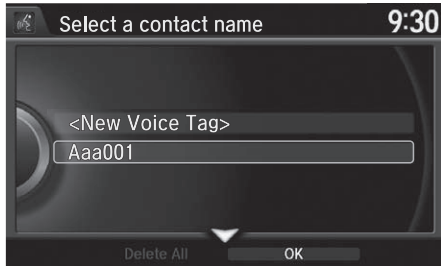


You can store up to 20 phonetic modification items.



3. Move ◀○ or ○▶ and Rotate  to select a contact name. Press .
  - ▶ The pop-up menu appears on the screen.
4. Rotate  to select **Modify**. Press .
5. Using the  (Talk) button, follow the prompts to complete the voice tag.
6. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .
7. The screen returns to the New Voice Tag screen. Move  and rotate  to select **OK**. Press .

■ To modify a voice tag





1. Rotate  to select the phone you want to add phonetic modification to. Press .
2. Rotate  to select a contact name you want to modify. Press .
  - ▶ The pop-up menu appears on the screen.
3. Rotate  to select **Modify**. Press .
4. Using the  (Talk) button, follow the prompts to complete the voice tag.
5. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .

▶▶ Phonebook Phonetic Modification

You can only modify or delete contact names for the currently connected phone.

■ To delete a modified voice tag

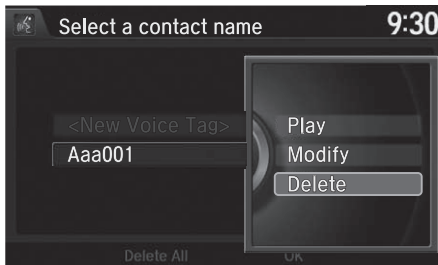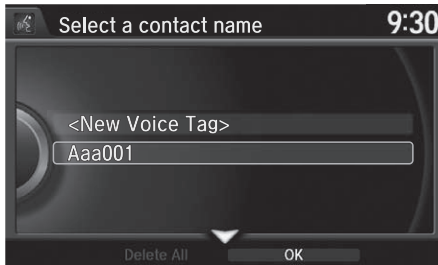


Trash icon


1. Rotate to select the phone you want to delete phonetic modification. Press .
2. Rotate to select a contact name you want to delete. Press .
  - ▶ The pop-up menu appears on the screen.
3. Rotate to select **Delete**, then press .
  - ▶ Items to be deleted are indicated with a trash icon.
4. Move and Rotate to select **OK**. Press .



■ To delete all modified voice tags

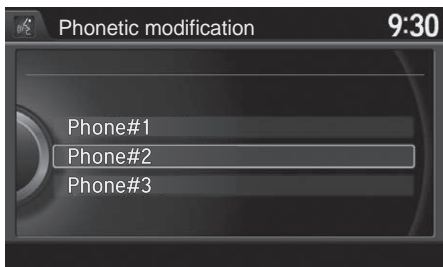

1. Rotate to select the phone you want to delete phonetic modification. Press .  
▶ The contact name list appears.

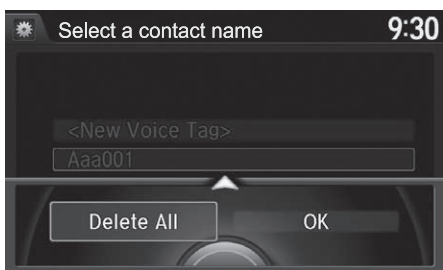

2. Move and Rotate to select **Delete All**. Press .
3. You will receive a confirmation message on the screen. Rotate to select **OK**. Press .

## Phone Settings

Set HFL options and features.

### ■ Editing a Security PIN

🔑 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**

You can protect each of the six mobile phones with a security PIN.



1. Rotate 📶 to select the phone you want to add a security PIN to. Press 📶.
2. Rotate 📶 to select **Edit PIN**. Press 📶.
3. Enter a new four-digit number. Rotate 📶 to select **OK** to enter the security PIN.
  - ▶ Move ◀ to delete.
4. Re-enter the four-digit number.
  - ▶ The screen returns to the screen in step 4.

### ✎ Editing a Security PIN

If the phone is already security PIN protected, you need to enter the current security PIN before clearing the PIN or creating a new one.

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then **OK**.



Continued

## ■ Editing User Name

📍 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**

Edit the user name of a paired phone as follows:



1. Rotate 📶 to select a phone you want to edit. Press 📶.
2. Rotate 📶 to select **Edit Device Name**. Press 📶.




3. Enter a new name of the phone.
  - ▶ Rotate 📶 or move 📍 to select **OK** to enter the name. Press 📶.
  - ▶ Move ◀ to delete.

## ▶▶ Editing User Name

You can use the keyboard on the On Demand Multi-Use Display™ to input letters and numbers.





## Automatic Transferring

 **SETTINGS** button ▶ **Phone Settings** ▶ **Auto Transfer**

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFL.




Rotate  to select **On**. Press .

## Auto Answer

 **SETTINGS** button ▶ **Phone Settings** ▶ **Auto Answer**

You can set HFL to automatically answer an incoming call in four seconds.



Rotate  to select **On**. Press .

## ■ Ring Tone

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Ring Tone**

You can change the ring tone setting.



Rotate 📶 to select your desired setting item. Press 📞.


The following items are available:

- **Fixed:** The fixed ring tone sounds from the speaker.
- **Mobile Phone:** The ring tone stored in the connected mobile phone sounds from the speaker.
- **Off:** No ring tones sound from the speaker.

## Automatic Phone Sync Setting

 **SETTINGS** button ▶ **Phone Settings** ▶ **Automatic Phone Sync**



Rotate  to select On or Off. Press .

## Automatic Phone Sync Setting

Select **On** if you want your call history and phonebook automatically imported to HFL. If prompted by your phone, please accept the import request.

Not all phones require this additional step.

## Use Contact Photo

 **SETTINGS** button ▶ **Phone Settings** ▶ **Use Contact Photo**

You can display a caller's picture on an incoming call screen.




Rotate  to select On. Press .

## Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.




### ▶▶ Making a Call


Any voice-tagged speed dial entry, phonebook name, or number can be dialed by voice from most screens. Press the  (Talk) button and say "Call" and the voice tag name, "Call by name" and the phonebook name, or "Call" and the phone number.


The maximum range between your phone and vehicles is 30 ft (10 m).

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.



## Using the Phonebook

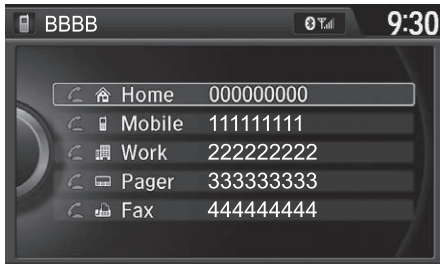 **MENU** button (on Phone screen) ▶ **Phonebook**



1. The phonebook is stored alphabetically. Move  to **Search**.

▶ You can use the keyboard on the touchscreen for an alphabetical search.

2. Rotate  to select a number. Press .

▶ Dialing starts automatically.

## Using the Phonebook

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

- ▶ **Limitations for Manual Operation** P. 254
- ▶ **Setting Up Speed Dialing** P. 262

You can use the keyboard on the On Demand Multi-Use Display™ for an alphabetical search.










## ■ Entering a Phone Number

 **MENU** button (on Phone screen) ▶ **Dial**




1. Rotate  to select a number. Press .
2. Rotate  to select . Press .

## » Entering a Phone Number

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

- ▶ **Limitations for Manual Operation** P. 254
- ▶ **Setting Up Speed Dialing** P. 262

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then  to start dialing.



## ■ Using Redial

📞 **MENU** button (on Phone screen) ▶ **Redial**

You can display a caller's picture on an incoming call screen.



Rotate 📞 to select **Dial**. Press 📞.  
▶ Dialing starts automatically.





## ■ Using Call History

 **MENU** button (on Phone screen) ▶ **Call History**

Call history is stored by All, Dialed, Received, and Missed.






### Navigation screen

1. Move  or  to select All, Dialed, Received, and Missed.
2. Rotate  to select a number. Press .
  - ▶ Dialing starts automatically.

## » Using Call History


The call history displays the last 20 dialed, received, or missed calls.  
(Appears only when a phone is connected to HFL.)

These icons next to the number indicate the following:



- : Dialed calls
- : Received calls
- : Missed calls

## ■ Using Speed Dial

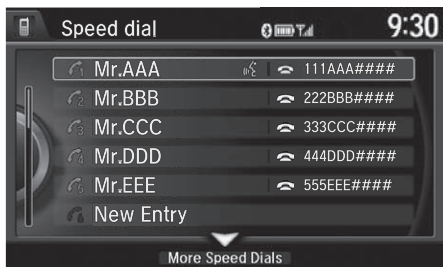
 **MENU** button (on Phone screen) ▶ **Speed Dial**




### Navigation screen


- Rotate  to select a number. Press .
- ▶ Dialing starts automatically.

## » Using Speed Dial

Move  to select **More Speed Dials** to view another paired phone's speed dial list. You can make a call from that list using the currently connected phone.


When a voice tag is stored, press the  (Talk) button to call the number using the voice tag.



 **Setting Up Speed Dialing** P. 262

Any voice-tagged speed dial entry, phonebook name or number can be dialed by voice from any screen. Press the  (Talk) button and follow the prompts.

## Receiving a Call

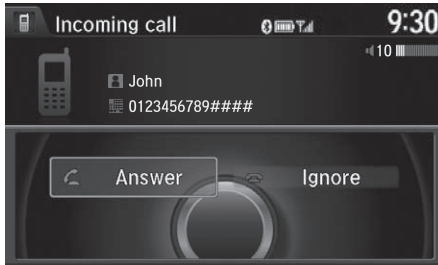
When there is an incoming call, an audible notification sounds (if activated) and the Incoming call screen appears.




1. Press the  (Pick-Up) button to answer the call.
2. Press the  (Hang-Up/Back) button to decline or end the call.


### Receiving a Call

 

#### Call Waiting

Press the  (Pick-Up) button to put the current call on hold to answer the incoming call.

 Press the  (Pick-Up) button again to return to the current call.

Ignore the incoming call if you do not want to answer it.

Press the  (Hang-Up/Back) button if you want to hang up the current call.



You can select the icons on the On Demand Multi-Use Display™ instead of the  (Pick-Up) and  (Hang-Up/Back) buttons.



## Options During a Call

The available options are shown on the Phone screen.



Rotate  to select the option. Press .

▶ The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.


The following options are available during a call:

- **Mute:** Mute your voice.
- **Transfer:** Transfer a call from HFL to your phone.
- **Touch Tones:** Send numbers during a call. This is useful when you call a menu-driven phone system.

### Options During a Call

- **Touch Tones:** Available on some phones.


You can select the icons on the On Demand Multi-Use Display™.

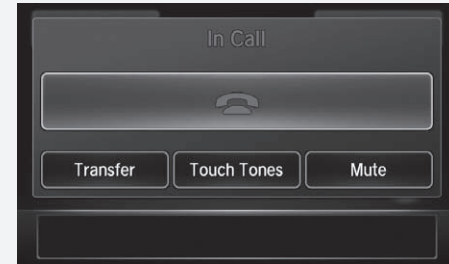

## Setting a Text/E-mail Message

### To Turn On or Off the Text/E-mail Function

 **SETTINGS** button ► **Phone Settings** ► **Enable Text/Email**

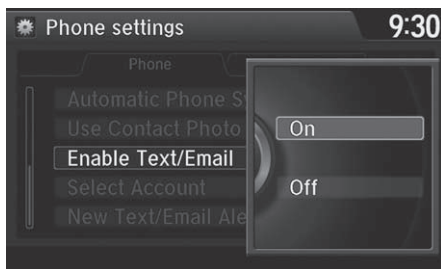

Rotate  to select On or Off. Press .

### Text/E-mail Message

Some text/E-mail features may not be available depending on a mobile phone.

### To Turn On or Off the Text/E-mail Notice

 **SETTINGS** button ► **Phone Settings** ► **New Text/Email Alert**



Rotate  to select On or Off. Press .

The following items are available:

- **On:** A pop-up notification comes on every time you receive a new text message.
- **Off:** The message you receive is stored in the system without notification.

*Continued*

## ■ To Set Up the Auto Reading Option

🔑 **SETTINGS** button ▶ **System Settings** ▶ **Message Auto Reading**



Rotate  to select **On**, **Off** or **Auto**. Press .


The following items are available:



- **On:** A text/E-mail message is always read aloud.
- **Off:** A text/E-mail message is not read aloud.
- **Auto:** A text/E-mail message is read aloud only when driving.

## Selecting a Mail Account

 **SETTINGS** button ▶ **Phone Settings** ▶ **Select Account**

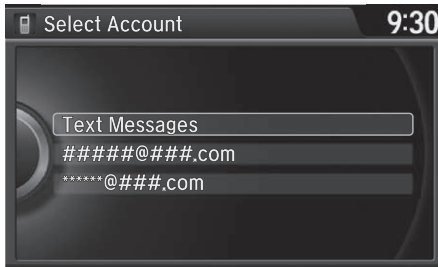If a paired phone has text message or mail accounts, you can select one of them to be active and receive notifications.




Rotate  to **Text Messages** or an E-mail account you want. Press .

### Selecting a Mail Account

You can also select a mail account from the folder list screen or the message list screen.

Move  to select **Select Account**, then press .

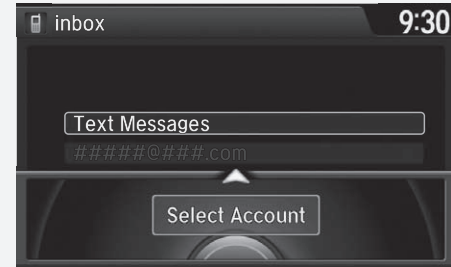




You can only receive notifications from one text message or mail account at a time.





## Receiving a Text/E-mail Message

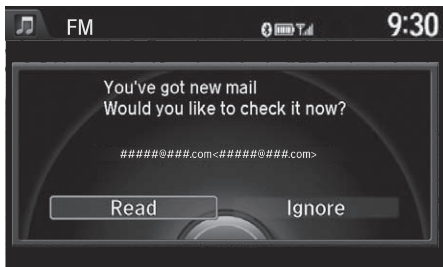HFL can display newly received text and E-mail messages as well as 20 of the most recently received messages on a linked mobile phone. Each received message can be read aloud and replied to using a fixed common phrase.



1. A pop-up appears and notifies you of a new text or E-mail message.
2. Rotate  to select **Read** to listen to the message. Press .
  - ▶ The text or E-mail message is displayed. The system automatically starts reading out the message.

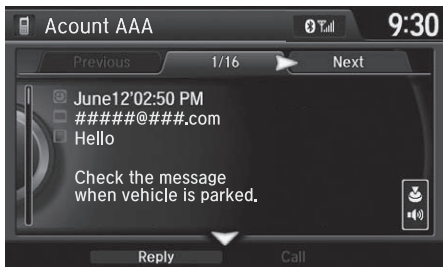

3. To discontinue the message read-out. Press .


### Receiving a Text/E-mail Message


The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text and E-mail messages.

State or local laws may limit your use of the HFL text/E-mail message feature. Only use the text/E-mail message feature when conditions allow you to do so safely.


When you receive a text or E-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Text/Email Alert** setting to On.

 **To Turn On or Off the Text/E-mail Notice**  
P. 285

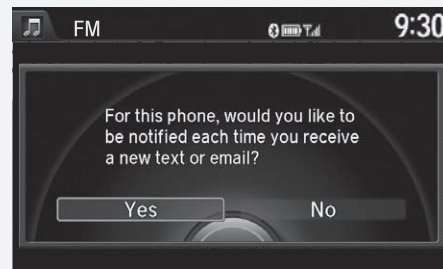




# Displaying Messages

## ■ Displaying Text Messages

 **MENU** button (on Phone screen) ▶ **Text/Email**





1. Select account if necessary.
2. Rotate  to select a message. Press .
  - ▶ The text message is displayed. The system automatically starts reading the message aloud.

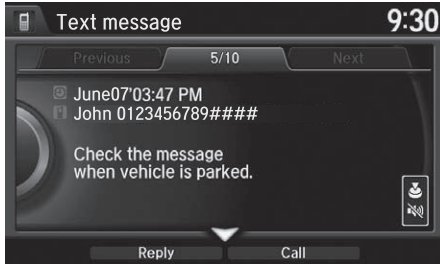

## ☒ Displaying Messages

The icon appears next to an unread message.

 
If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, move  or  on the text message screen.



Some phones may have an additional setting to enable this feature.


Bluetooth® HandsFreeLink®



## ■ Displaying E-mails

 **MENU** button (on Phone screen) ▶ **Text/Email**

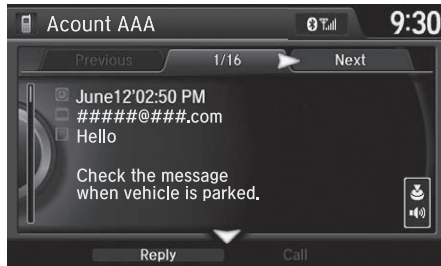

1. Rotate  to select a folder. Press .




2. Rotate  to select a message. Press .



- ▶ The text message is displayed.
- ▶ The system automatically starts reading the message aloud.

## ▣ Displaying E-mails


Received text and E-mail messages may appear in the message list screen at the same time. In this case, text messages are titled **No subject**.

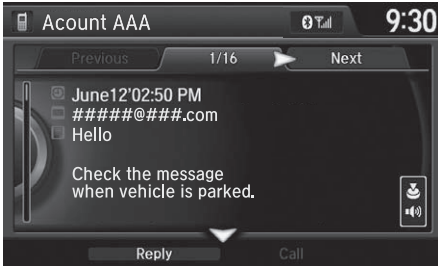


## Read or Stop Reading a Message



1. Go to the text or E-mail message screen.
  - ▶ The system automatically starts reading the message aloud.
    - **Displaying Messages** P. 289
2. Press  to stop reading. Press  again to start reading the message from the beginning.

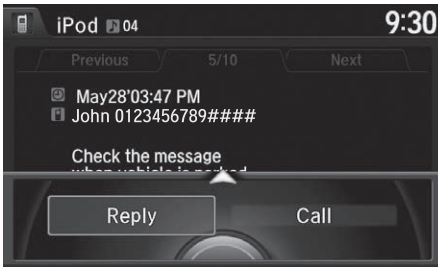

## Reply to a Message



1. Go to the text or E-mail message screen.
  - ▶ The system automatically starts reading the message aloud.
    - **Displaying Messages** P. 289
2. Move  and Rotate  to select Reply. Press .

Bluetooth® HandsFreeLink®



3. Rotate  to select the reply message. Press .
  - The pop-up menu appears on the screen.
4. Select **Send** to send the message.
  - **Message Sent** appears on the screen when the reply message was successfully sent.


#### ►► Reply to a Message




The available fixed reply messages are as follows:

- Talk to you later, I'm driving.
- I'm on my way.
- I'm running late.
- OK
- Yes
- No

You cannot add, edit, or delete reply messages.

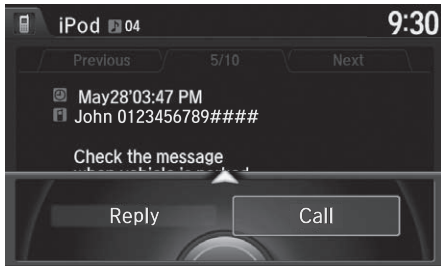
#### ■ Calling the Sender





1. Go to the text message screen. The system automatically starts reading the message aloud.
  - **Displaying Text Messages**  
P. 289
2. Move  and Rotate  to select **Call**. Press .

## MENU button (on Phone screen) ► Roadside Assistance

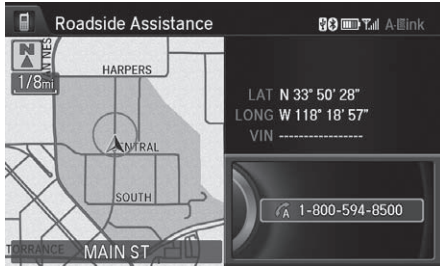Provides a nationwide service for unexpected incidents. You can call for assistance using a phone paired and connected to *Bluetooth*® HandsFreeLink®.



Rotate  to select a phone number. Press .

► Dialing starts automatically.

## Roadside Assistance

If you are subscribed to a paid AcuraLink® package, you can call the roadside assistance using the **LINK** button instead of your phone.

 **AcuraLink**® P. 300

This function is not available on all models.

The power mode must be in ACCESSORY or ON to use HFL.

## ■ Phone settings screen




1. Press the **SETTINGS** button.
2. Rotate to select **Phone Settings**, then press .

### ▶ HFL Menu

To use HFL, you must first pair your *Bluetooth*®-compatible mobile phone to the system while the vehicle is parked.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

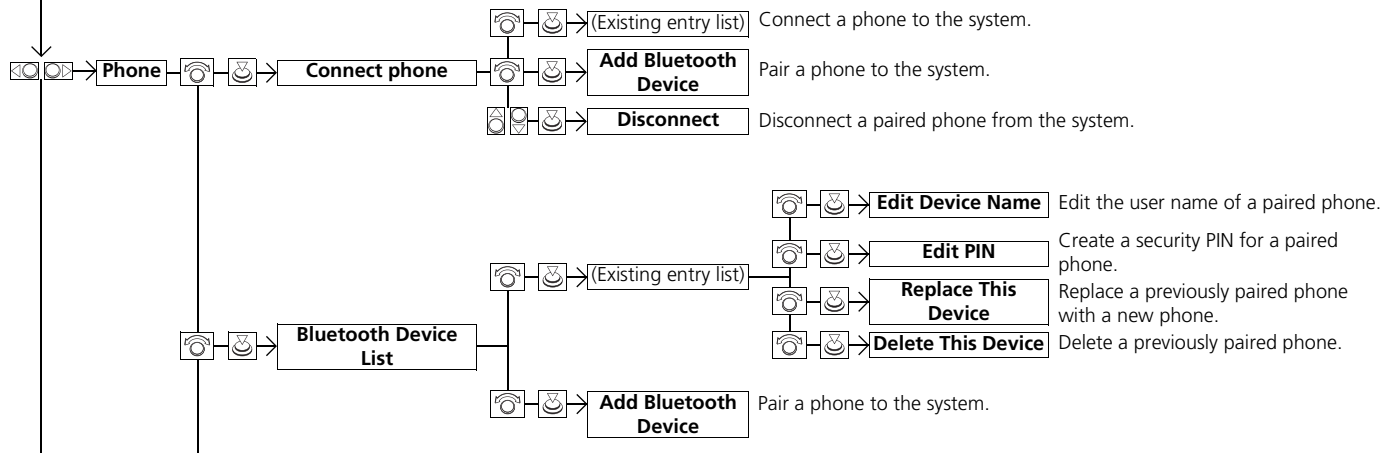






■ Phone screen




1. Press the **PHONE** button.
2. Press the **MENU** button to display the menu items.

Bluetooth® HandsFreeLink®

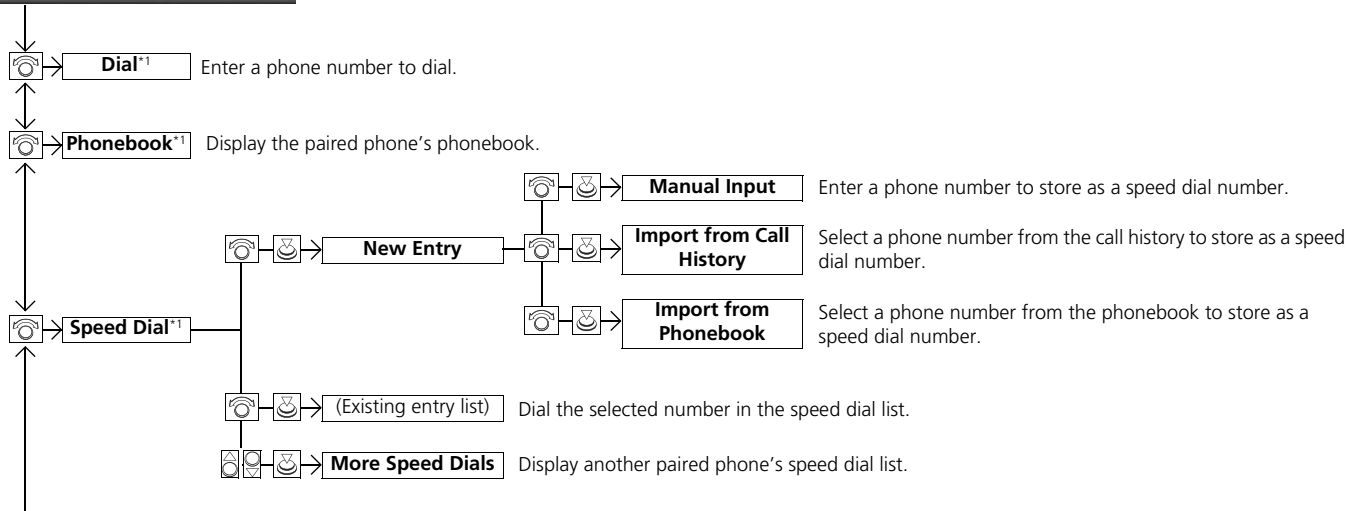

\*1: Appears only when a phone is connected to HFL.

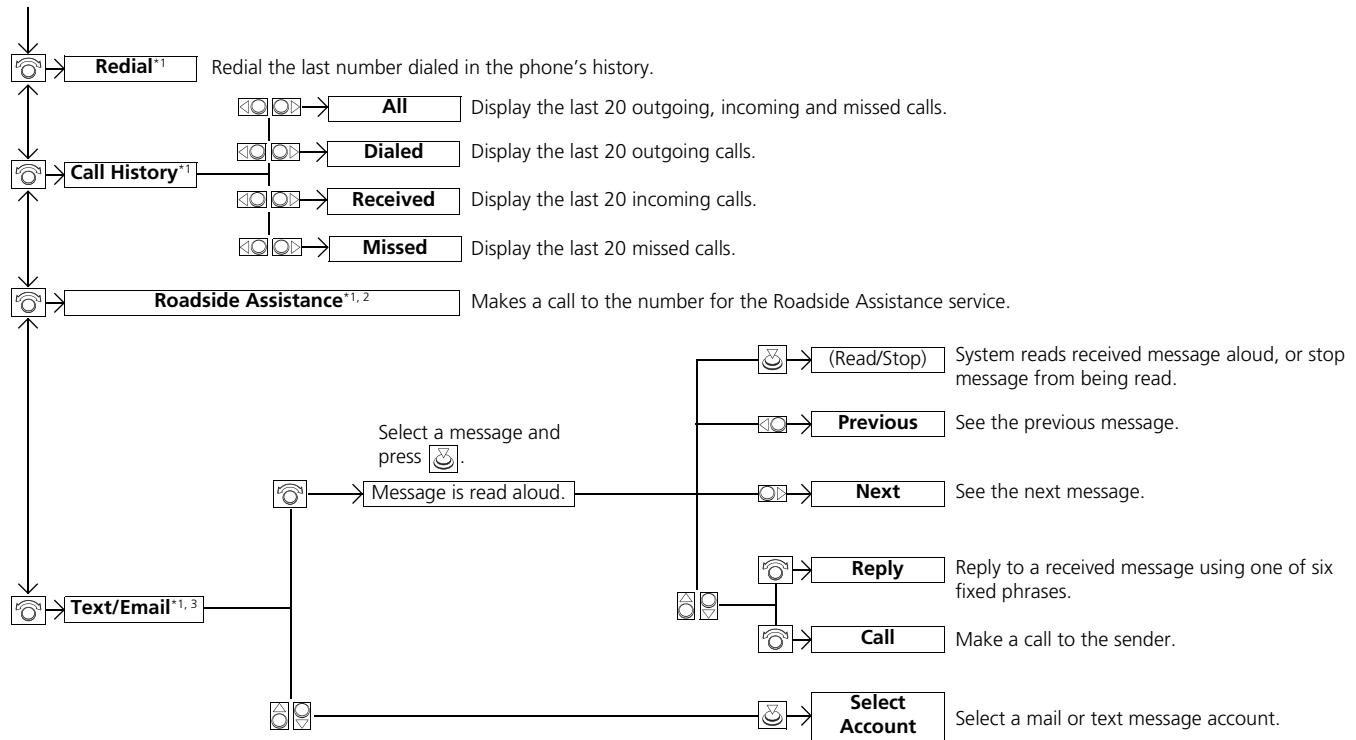

\*1: Appears only when a phone is connected to HFL.

\*2: Not available on all models

\*3: This function is not available if your phone is not supported.



# AcuraLink® Messages

This section describes how Acura directly communicates important information to you regarding your vehicle.

<b>AcuraLink®</b> .....	300
In Case of Emergency.....	300
Security Features .....	303
Operator Assistance .....	304
AcuraLink® Message .....	305
AcuraLink® Subscription Status.....	309

A subscription-based service that provides convenient features such as voice communication in case of emergency, online security, one-on-one operator assistance, and the transmission of important messages regarding your vehicle's status.

For information on traffic rerouting and traffic information updates, provided by the AcuraLink® server.

## In Case of Emergency

Your vehicle may not be able to connect to the operator if the battery level is low, the line is disconnected or you do not have adequate mobile coverage.

You cannot use emergency services when:

- You travel outside the AcuraLink® service coverage areas.
- There is a problem with the connecting devices, such as the **ASSIST** button, microphone, speakers, or the unit itself.
- You are not subscribed to the service or your subscription is no longer valid.

### » AcuraLink®

AcuraLink® also provides services you can operate from the Internet or your smartphone.

To subscribe to AcuraLink®, or to get more information about all of its features, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).


### » In Case of Emergency

You cannot operate other navigation- or phone-related functions using the screens while talking to the operator.

Only the operator can terminate the connection to your vehicle.

## Automatic Collision Notification

### Navigation screen

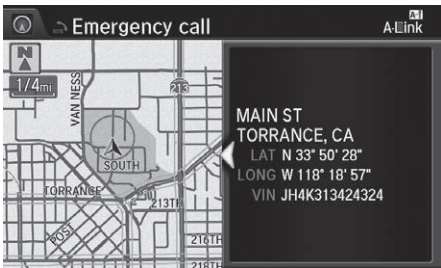

If your vehicle’s airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the AcuraLink® operator. Once connected, information about your vehicle, its positioning, and its condition will be sent to the operator; you also can speak to the operator when connected.


### On Demand Multi-Use Display™



## Automatic Collision Notification

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

## ■ Manual Operator Connection

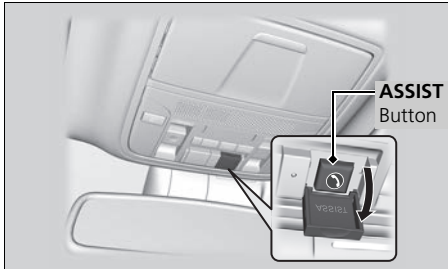

If you need to talk to the AcuraLink® operator in an emergency situation, you can manually connect to them by pressing the **ASSIST** button with the power mode in **ACCESSORY** or **ON**.

1. Open the cover attached to the ceiling console.
2. Press the **ASSIST** button.
  - ▶ You are connected to the AcuraLink® operator.

## ▣ Manual Operator Connection

Do not press the button while driving. When you need to contact the operator, park the vehicle in a safe place.

If the unit fails to connect to the operator, it automatically cancels the action after three minutes.

In an emergency, the cover can be broken through to press the **ASSIST** button.

## Security Features

Your subscribed telematics service provider can track your vehicle's location, remotely lock or unlock doors, and help you find your vehicle.

To use these features, you need your user ID and personal identification number (PIN).

### ■ Stolen vehicle tracking

This feature searches and tracks down your vehicle position even if it is on the move. If you believe that your vehicle has been stolen, contact the police as well as the provider.

### ■ Remote door lock/unlock

The provider can remotely lock or unlock doors upon your request.

### ■ Vehicle finder

This feature is convenient to use when trying to locate your vehicle in large areas, such as a crowded parking lot. If you cannot locate your vehicle after using the remote transmitter's answerback function, you can contact the provider which can then flash your vehicle's exterior lights and sound the horn.

### ■ Security alarm notification

If the security system in your vehicle detects an abnormal condition, such as someone tampering with the lock on your vehicle, the provider notifies you by your preferred method.

#### ☒ Security Features

The contact information of your provider, your user ID and PIN will be given when you subscribe to AcuraLink®. If you forget any of the above, contact a dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).

You can also activate the remote door lock/unlock and vehicle finder features from the Internet or using your smartphone app. Ask a dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).

#### ☒ Vehicle finder


The lights will stop flashing and horn will stop sounding under the following conditions:

- When 30 seconds have elapsed.
- You unlock the doors using the remote transmitter.
- You unlock the doors using the keyless access system.
- You unlock the doors using the built-in key.
- The power mode is set to ACCESSORY or ON.





 
## Operator Assistance

Connect to the AcuraLink® operator when trying to find a destination or for roadside assistance.

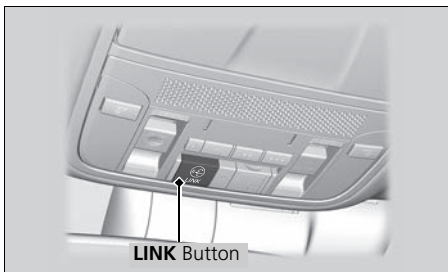

1. Press the **LINK** button.
  - ▶ Connection to the operator begins.

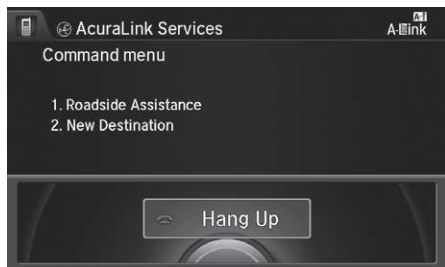


2. Talk to the operator.
  - ▶ To disconnect, rotate  to select **Hang Up**, select **End Call** on the On Demand Multi-Use Display™, or press the  (Hang-Up/Back) button on the steering wheel.

### Operator Assistance

Remain attentive to road conditions and driving during operator assistance.


## AcuraLink® Message

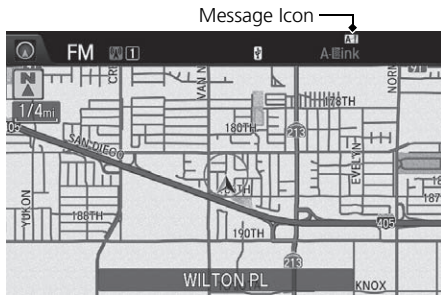

AcuraLink® sends you messages on vehicle features, safety and emissions recall campaigns, maintenance reminders, and diagnostic information. When you receive a new message, an icon appears on the upper right corner of the navigation screen.

### Message Category



There are six message categories.

- **Feature Guide:** Messages about your vehicle and its features are sent daily for the first 90 days.
- **Quick Tips:** Supplements your Owner's Manual with updated vehicle information.
- **Scheduled Dealer Appointment:** An appointment made through the Acura server or Acura Owners website can be rescheduled or canceled from this option.
  - ▶ **Dealer Appointments (U.S. only)** P. 308
- **Diagnostic Info:** Appears when a warning indicator or message comes on. Rotate  to select Check Later or Check Now.
  - ▶ Selecting Check Now lets you know if you should see a dealer immediately or later in accordance with the warning severity level.
- **Maintenance Minder:** Lets you know which maintenance item is due along with a reminder message.

### AcuraLink® Message

Messages may not appear immediately after your vehicle purchase. It can take several days for your dealer to register your vehicle's ID.

If an icon includes an exclamation point, it indicates that Acura gives high priority to this message compared to the one without.

- : An unread message with high priority
- : An unread message

### Message Category

The types of messages you receive can be modified. Ask a dealer or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada).







You can call your dealer, find the nearest dealer, or schedule appointments from the message options in Maintenance Minder, Recalls/Campaigns, and Diagnostic Info.

▶ **Message Options** P. 307

- **Recalls/Campaigns:** Reminds you of a recall or important safety information. You should also be notified by mail.

## Reading a Message




1. Press the **INFO** button, rotate  to select **AcuraLink/Messages**, then press .
  - ▶ If your display has changed from Info menu to **Current Drive**, press the **MENU** button.
  - ▶ Select **AcuraLink messages**.
2. Rotate  to select a category, then press .
  - ▶ If there are unread messages in a category, a message icon appears next to that category.
3. Rotate  to select a message you want to read, then press .

## Reading a Message

If there is no message listed on the menu, **AcuraLink/Messages** is grayed out and cannot be selected.

The message icon disappears once you read the message.

However, the exclamation mark that indicates that the message has a high priority remains.

- : A read message with high priority.

## Message Options



While a message is displayed, you can use options to take immediate action to the message.

Available options are:

- **Voice:** Reads the message aloud. Select Stop to cancel it.
- **Find Acura Dir.:** Searches for the nearest Acura dealer.
- **Delete:** Deletes the displayed message.
- **Call Your Dealer:** Calls your Acura dealer using HFL.
- **Schedule Dealer Appointment (U.S. only):** Automatically sets an appointment date at your dealer.
- **Phone number:** Dials a number displayed in the message via HFL.
- **Diagnostic Info:** Updates the current diagnostic message by connecting to the Acura server using HFL.

## Message Options

The available options vary by message category.






You can delete all messages in a category at once.

**Voice** is available only when the **Message Auto Reading** setting is in ON, and the language selected is English.

## ■ Dealer Appointments (U.S. only)

You can confirm the scheduled appointment date when you receive a **Maintenance Minder** or **Recalls/Campaigns** message, or reschedule any existing appointments.



1. Select a **Maintenance Minder**, **Recalls/Campaigns**, or **Scheduled Dealer Appointment** message.
2. Rotate  to select **Scheduled Dealer Appointment** or **Reschedule Appointment** (depending on the screen). Press .
  - ▶ A suggested time and date are displayed.
3. Rotate  to select **Confirm Appointment**. Press  to accept the time and date.
4. Press  to select **OK**.

## ▣ Dealer Appointments (U.S. only)


To set up an automated dealer appointment when a regular maintenance is due, visit the Acura Owners website at [owners.acura.com](http://owners.acura.com) (U.S.) or [www.myacura.ca](http://www.myacura.ca) (Canada) and set the required option. A reminder message will be sent as the date for the dealer appointment approaches. A reminder message will also be sent if you schedule an appointment online using the Schedule Service Appointment function.

If you are not satisfied with the proposed appointment date and time, call your dealer directly.

To cancel the scheduled appointment, select **Cancel Appointment** when a message is displayed.

# AcuraLink® Subscription Status

🔗 **SETTINGS** button ▶ **Info Settings** ▶ **AcuraLink Subscription Status**

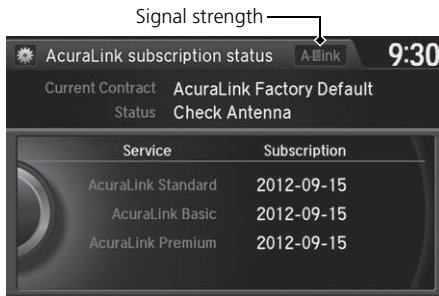

Confirm your AcuraLink® subscription status.

Item	Information
<b>A-link</b>	You can check the signal strength.
Current Contract	The AcuraLink® subscription number and subscription level is displayed.
Service	You can confirm the type of service.
Subscription	You can confirm the expiration date.
Status	The following message can be displayed: <ul style="list-style-type: none"> <li>• Check Antenna: There is a problem with the AcuraLink® antenna. Contact a dealer.</li> <li>• No data: The signal is received, but the system cannot receive traffic data.</li> <li>• OK: The system is receiving the signal or traffic data.</li> </ul>



# Other Features


This section describes the useful functions incorporated into the navigation system.

<b>Trip Computer</b> .....	312
<b>Calendar</b> .....	313
<b>Information Functions</b> .....	314
System Device Information .....	314
Map Data Update .....	314
Info Screen Preference .....	315
<b>Multi-View Rear Camera</b> .....	316



## INFO button ► Trip Computer

View the distance traveled and average fuel consumption.

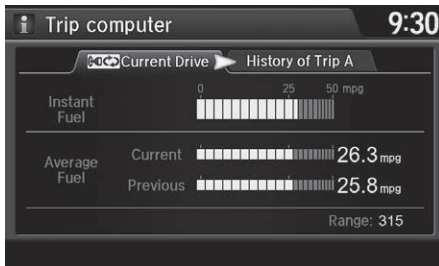


Move ◀ or ▶ to select the trip information.

## » Trip Computer

Displays the following trip information:

- **Instant Fuel:** The current estimated instant fuel economy.
- **Average Fuel:** The average fuel economy since the last key cycle.
- **1st, 2nd, 3rd Prev.:** The previous average fuel consumption.
- **RANGE:** The estimated distance you can travel on the fuel remaining in the tank.

These values are estimates only.

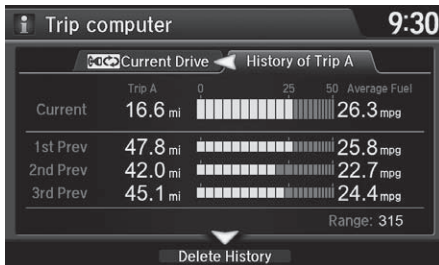

The following items are available:

- **Current Drive:** Displays the current trip information.
- **History of Trip A:** Displays information for three previous histories. The information is stored every time you reset Trip A.
- **Delete History:** Deletes the trip information. Move Ⓜ on the Trip A screen to select **Delete History**, then press Ⓜ. You will receive a confirmation message on the screen. Rotate Ⓜ to select **Yes**, then press Ⓜ.

 **INFO** button ► **Calendar**

View the calendar screen.



Move ◀○ or ○▶ to select the months of the year.

## System Device Information

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **System Device Information**


View database, software, device, and vehicle identification information.



## Map Data Update


 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Map Data Update**

Check the map data update status when updating the map database.

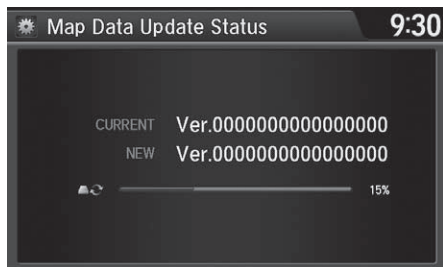

### System Device Information

You will need this information when ordering a map update.

 **Obtaining a Navigation Update** P. 339

### Map Data Update


This operation is only available during a database update.

 **Obtaining a Navigation Update** P. 339

## Info Screen Preference

🔧 **SETTINGS** button ▶ **Info Settings** ▶ **Other** ▶ **Info Screen Preference**

Select the top menu when the **INFO** button is pressed.

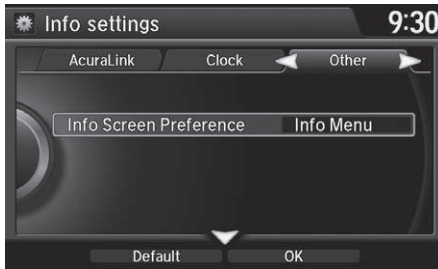


Rotate 🔄 to select your desired setting item. Press 🏠.


The following options are available:


- **Info Top**: A brief menu pops up.
- **Info Menu** (factory default): A full menu pops up.
- **Off**: A menu does not pop up.

## About Your Multi-View Rear Camera

Your vehicle is equipped with a multi-view rear camera. When you shift into Reverse, the rear view is displayed on the audio/information screen. The edge of the bumper and parking guide lines are also displayed.

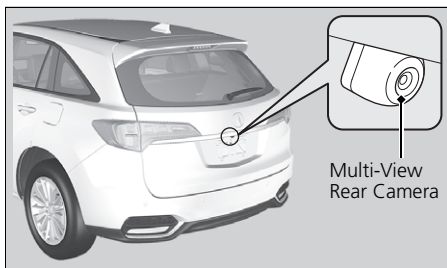

Rotate  to adjust the screen brightness.

While the rear view is displayed, press  to switch between WIDE, NORMAL, and TOP DOWN view modes.

### Multi-View Rear Camera

Always keep the camera lens clean and unobstructed. The multi-view rear camera has a lens that makes distances appear different than they actually are. Always take care when reversing, and look behind you for obstacles.


Navigation controls are disabled when in Reverse.

Adjusting the brightness for the multi-view rear camera display does not affect the brightness for the navigation screen.

If you turn the guide lines off, they remain off until you turn them back on.

The last used viewing mode is selected the next time you shift into Reverse. However, once the power mode is set to VEHICLE OFF (LOCK), WIDE mode is selected if TOP DOWN view was last used.

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

 **Customized Features** P. 88

#### Fixed Guideline


**On:** Guidelines appear when you shift into **[R]**.

**Off:** Guidelines do not appear.

#### Dynamic Guideline

**On:** Guidelines move according to the steering wheel direction.

**Off:** Guidelines do not move.

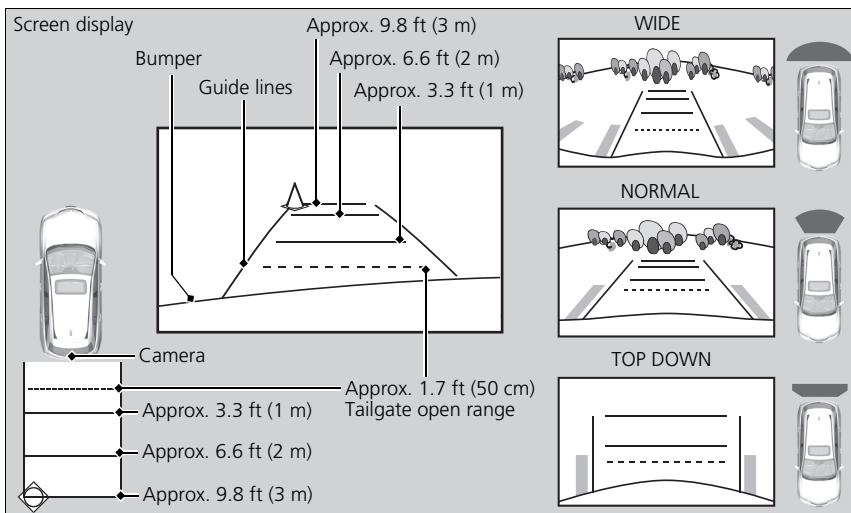


# Troubleshooting



<b>Troubleshooting</b> .....	318	Aha™ Radio .....	332
Map, Voice, Entering Destinations.....	318		
Traffic .....	320		
Guidance, Routing .....	321		
Update, Coverage, Map Errors .....	323		
Display, Accessories .....	323		
Multi-View Rear Camera .....	323		
Miscellaneous Questions .....	324		
<b>Error Messages</b> .....	325		
Navigation System .....	325		
CD Player.....	326		
Hard Disc Drive (HDD) Audio.....	327		
iPod/USB Flash Drive .....	328		
Pandora® .....	329		

## Map, Voice, Entering Destinations

Problem	Solution
The Startup Confirmation screen is displayed every time I start the car.	This is normal. The Startup Confirmation screen reminds you and your guest drivers to always operate the navigation system in a safe manner. The Startup Confirmation screen goes off after a certain period of time and the top screen of the last mode is displayed.
The navigation system reboots by itself (returns to the opening screen).	A reboot can be caused by extreme temperatures and does not necessarily indicate a problem. If this happens frequently, please see a dealer.
How do I specify a destination when an entered city or street could not be found?	<ul style="list-style-type: none"> <li>• Try entering the street first. Some cities are lumped in with a major metro area. In rural "unverified" areas or new subdivisions, streets may be missing or only partially numbered.</li> <li>• Try selecting the destination directly from the map.               <ul style="list-style-type: none"> <li>➤ <b>Map Input</b> P. 138</li> </ul> </li> </ul>
Why do some letters become grayed out when I enter an address?	As you enter each letter in an address or a place/landmark, the navigation system looks in the database to see what letters are possible and grays out letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	<ol style="list-style-type: none"> <li>1. Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Personal Info</b> to display the types of information.</li> <li>2. Select the type of address to delete.</li> <li>3. Select <b>Delete</b>.</li> </ol>
I cannot hear the navigation system voice.	<ol style="list-style-type: none"> <li>1. Press the <b>SETTINGS</b> button. Select <b>System Settings</b> and check that <b>Guidance Volume</b> is not set to <b>0</b>.</li> <li>2. Select <b>Voice Reco</b> and set <b>Voice Prompt</b> to <b>On</b>.</li> </ol>
Why is Call grayed out on the Calculate Route screen?	Your phone is not paired to <b>Bluetooth® HandsFreeLink®</b> or, if paired, your phone is in use. <ul style="list-style-type: none"> <li>➤ <b>Bluetooth® HandsFreeLink®</b> P. 252</li> </ul>

 
Problem	Solution
The voice control system is having difficulty recognizing my voice commands.	<ul style="list-style-type: none"> <li>• Check that the vents are not blowing air onto the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking.                             <ul style="list-style-type: none"> <li>▶ <b>Voice Recognition</b> P. 23</li> </ul> </li> <li>• Say  "Voice Help" on any screen to see a list of the applicable voice commands.</li> </ul>
I cannot give voice commands.	<p>Make sure you selected <b>OK</b> at the Startup Confirmation screen.</p> <ul style="list-style-type: none"> <li>▶ <b>Start-up</b> P. 20</li> </ul>
I cannot select an option using the Interface Dial.	<p>To reduce potential driver distraction, certain onscreen functions and features are limited or inoperable while the vehicle is moving. Use voice commands or pull over to proceed.</p>
The navigation system pronunciation of street names in the guidance command or destination address sounds strange.	<p>The basic guidance phrases use a studio-recorded voice, but street names are pronounced using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.</p>
The screen is bright when I drive at night.	<ol style="list-style-type: none"> <li>1. Check that the nighttime dashboard brightness control is not set to maximum.</li> <li>2. Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; Color (Night)</b>.                             <ul style="list-style-type: none"> <li>▶ <b>Color</b> P. 73</li> </ul> </li> </ol>
The screen is dark when I drive during the day.	<p>Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; Color (Day)</b>.</p> <ul style="list-style-type: none"> <li>▶ <b>Color</b> P. 73</li> </ul>
How do I change or remove my PIN?	<ol style="list-style-type: none"> <li>1. Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Personal Info &gt; PIN Number &gt; Address Book PIN</b> or <b>Go Home PIN</b>.</li> <li>2. Enter your existing PIN. You then have the choice to change or remove the PIN.                             <ul style="list-style-type: none"> <li>▶ <b>PIN Numbers</b> P. 47</li> </ul> </li> </ol>
I have forgotten my PIN. How do I reset the PIN for Home or the PIN for personal addresses?	<p>A dealer must reset the PIN for you.</p>






## Traffic

Problem	Solution
<p>AcuraLink Real-Time Traffic™ information could not be received or is not displayed properly.</p>	<ul style="list-style-type: none"> <li>• Check that the traffic status indicator is available on the map screen.                             <ul style="list-style-type: none"> <li>➤ <b>AcuraLink Real-Time Traffic™</b> P. 14</li> </ul> </li> <li>• Check that the traffic icons are turned on.                             <ul style="list-style-type: none"> <li>➤ <b>Showing Icons on Map</b> P. 71</li> </ul> </li> <li>• Check the AcuraLink® subscription status.                             <ul style="list-style-type: none"> <li>➤ <b>AcuraLink®</b> P. 300</li> </ul> </li> <li>• There may be a temporary technical problem in your metropolitan area. Call Acura Client Relations to see if there is an outage.                             <ul style="list-style-type: none"> <li>➤ <b>Acura Client Relations Contact Information</b> P. 338</li> </ul> </li> <li>• If the situation persists, see your Acura dealer for assistance.</li> <li>• AcuraLink® is not available in Alaska, Hawaii, Puerto Rico, and Mexico.</li> </ul>
<p>The navigation system sometimes provides a detour route when I am driving a route on the freeway/highway.</p>	<p>If <b>Traffic Rerouting</b> is set to <b>On</b>, the navigation system provides a detour route to your destination only if it can find a significantly faster route than the original one.</p> <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 58</li> </ul>
<p>The navigation system routes me to an exit and an alternate freeway/highway with unknown flow speeds or surface streets.</p>	<p>The navigation system predicts which route should be faster based on freeway/highway congestion along your route. Use your own experience to determine whether the alternate route would be faster.</p>
<p>How can I ignore the detour route and return to the original route?</p>	<p>Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Routing</b>, and set <b>Traffic Rerouting</b> to <b>Off</b>.</p> <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 58</li> </ul>

## Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go or the same way as other mapping systems.	The navigation system attempts to generate the optimal route. You can change the route preferences used when calculating a route. <b>➤ Route Preference</b> P. 54
The navigation system wants to route me around potential traffic problems. How do I stop these pop-up messages?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Routing</b> , and set <b>Traffic Rerouting to Off</b> . <b>➤ Traffic Rerouting</b> P. 58
The street I'm on is not shown on the map screen.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. <b>➤ Map Coverage</b> P. 339
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	This is normal. The signals received from the GPS satellites are extremely weak and can easily be interrupted or interfered as your vehicle travel near tall buildings or in tunnels. Check your vehicle surroundings for anything that may be blocking the reception. If this happens frequently and there is no obstruction that interfering the reception, please see a dealer. <b>➤ GPS System</b> P. 336
The blue highlighted route and voice guidance stopped or turned into a blue/pink line before I got to my destination.	Your route has entered an unverified area. <b>➤ Unverified Routing</b> P. 56
How do I stop the map from rotating as I drive along?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; View &gt; North-Up</b> , or say  <i>"Display north-up"</i> to change the map orientation.
The "time to destination" display sometimes increases even though I am getting closer to my destination.	If your speed reduces due to slower traffic, the navigation system updates the "time to destination" based on your actual road speed to give you a better estimate of arrival time.
The vehicle position icon on the map "lags" a short distance behind, especially when I arrive at an intersection.	This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal. <b>➤ GPS System</b> P. 336

Problem	Solution
The screen is showing white dots as I drive along.	These dots are called “breadcrumbs.” These are displayed if <b>Display Tracking</b> is set to <b>On</b> .
How do I remove the white dots (“breadcrumbs”) from my screen?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map</b> , set <b>Display Tracking</b> to <b>Off</b> or select <b>Delete Tracking</b> to remove the white dots from the map.  <b>Display Tracking</b> P. 84
A road that I selected to avoid is being used when routing.	When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection.  <b>Avoided Area</b> P. 60
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal. The elevation can vary $\pm 100$ ft ( $\pm 30$ m) due to GPS calculation errors.  <b>GPS System</b> P. 336
My elevation is missing on the “current position” screen.	The elevation is only displayed if the GPS antenna can receive signals from at least four satellites. Try moving the vehicle into an open area. The elevation is also not displayed if the calculated elevation is zero or below sea level.

## Update, Coverage, Map Errors

Problem	Solution
My city is not part of a fully verified detailed coverage area.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. <b>➤ Map Coverage P. 339</b>
Does the navigation system work outside North America?	The navigation system contains maps for the 50 U.S. states, Canada, Puerto Rico, and Mexico. The navigation system will not work in other countries. <b>➤ Map Coverage P. 339</b>
How do I report errors I find in the database?	Minor errors are bound to occur in a large database. If you encounter major errors, see your dealer. <b>➤ Visiting a Dealer P. 338</b>

## Display, Accessories


Problem	Solution
The display appears dim when starting the car in really cold weather.	This is normal. The display will become brighter after a few minutes.

## Multi-View Rear Camera

Problem	Solution
When I shift gears, the rear camera image display is delayed.	This is normal. When shifting into or out of Reverse, you may experience a delay while the screen image switches between the audio/information screen and the rear camera image.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, rotate the Interface Dial to adjust the brightness. This adjustment does not affect the navigation screen brightness settings.

## Miscellaneous Questions

---

 



Problem	Solution
My battery was disconnected or went dead, and the navigation system is asking for a code.	Set the power mode to ON, and press and hold the  (Power) button for two seconds. The system should reactivate. If you have installed an aftermarket system, contact a dealer.

## Navigation System

Error Message	Solution
The display temperature is too high. For protection, the system will shut off until the display cools down.	This message appears briefly when the display temperature is too high. The navigation system turns off until the display cools down. The system turns back on automatically when the display cools down.
The navigation system temperature is too low. For protection, the system will shut off until the it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
The navigation system atmospheric pressure is too low. For protection, the system will shut off until the pressure returns to safe levels.	The HDD is inoperable due to low atmospheric pressure. Move your vehicle to the place where the atmospheric pressure is high.
The navigation system temperature is too high. For protection, the system will shut off until it cools down.	The navigation system has difficulty reading the HDD when the temperature is high. The navigation system starts up automatically when the system cools down.
HDD access error. Please consult your dealer.	Writing of the data to the HDD failed with a cause other than low temperature, high temperature, and low atmospheric pressure. After a short wait, try to operate the system again. If this does not solve the problem, consult with the dealer.
HDD access error. The system will reset and attempt to correct the problem.	

## CD Player

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul style="list-style-type: none"> <li>Current track/file will be skipped. The next supported track/file plays automatically.</li> </ul>
Bad Disc Please Check Owner's Manual Push Eject	Mechanical error	<ul style="list-style-type: none"> <li>Press the  (eject) button and remove the disc, and check that the error message is cleared.</li> </ul>
Mecha Error		<ul style="list-style-type: none"> <li>Check that the disc is not damaged or deformed, and insert the disc again.   <b>Protecting CDs</b> P. 211</li> </ul>
Bad Disc Please Check Owner's Manual	Servo error	<ul style="list-style-type: none"> <li>If the error message reappears, press the  (eject) button, and pull out the disc.</li> <li>Insert a different disc. If the new disc plays, there is a problem with the first disc.</li> <li>If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.</li> </ul>
Check Disc	Disc error	<ul style="list-style-type: none"> <li>Check that the disc is not damaged or deformed.   <b>Protecting CDs</b> P. 211</li> </ul>
Heat Error	High temperature	<ul style="list-style-type: none"> <li>Turn the audio system off and allow the player to cool down until the error message is cleared.</li> </ul>

## Hard Disc Drive (HDD) Audio

If an error occurs while playing the Hard Disc Drive (HDD) Audio, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Cause
HDD access error. Please consult your dealer.	—
The navigation system temperature is too high. For protection, the system will shut off until it cools down.	Turn the audio system off and allow the player to cool down until the error message is cleared.
The navigation system temperature is too low. For protection, the system will shut off until it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
Unplayable File	Appears when a file format not supported. Current track will be skipped. The next supported track plays automatically.



## iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Cause
USB Error	Appears when there is a problem with the audio system. Check if the device is compatible with the audio system.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
Unsupported Version	Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version.
Connect Retry	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
Unplayable File	Appears when the files in the USB flash drive are DRM or an unsupported format. This error message appears for about 3 seconds, then plays the next song.
No Data	<p><b>iPod</b> Appears when the iPod is empty.</p> <p><b>USB flash drive</b> Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive.</p> <p><b>iPod and USB flash drive</b> Check that compatible files are stored on the device.</p>
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

U.S. models

**Pandora®**

If an error occurs while playing Pandora®, you may see the following error messages.  
If you cannot clear the error message, contact a dealer.

<b>Error Message</b>	<b>Cause</b>	<b>Solution</b>
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected.	Disconnect the device. Then turn the audio system off, and turn it again. Do not reconnect the device that caused the error.
<b>Navigation Screen</b> There is no station list in the device. Please add the station list to your device. <b>On Demand Multi-Use Display™</b> No stations have been created. Please create a station on the device.	Appears when there is no station list on the device.	Use the device to create a station.
Music licenses force us to limit the number of tracks you may skip each hour.	Appears when you try to skip a song or select Dislike over the predetermined number of times in an hour.	Try again later.
Unable to save rating. Unable to save bookmark.	Appears when the commanded operation is failed.	Try again later.
No data	Appears when no data is available with Pandora® activated.	Reboot the app and reconnect the device.
Unsupported PANDORA App version is not supported.	Appears when Pandora® version is not supported.	Update Pandora® to the latest version.
PANDORA system maintenance	Appears when the Pandora® server is in maintenance.	Try again later.

Error Message	Cause	Solution
Cannot connect to PANDORA. When stopped, check your mobile device.	The Pandora® app failed to start because of the following device errors: <ul style="list-style-type: none"> <li>• The display on your smartphone is turned off.</li> <li>• Your smartphone is locked.</li> <li>• The home screen or the app screen (music screen) is not displayed on your smartphone.</li> <li>• The track is not played on your smartphone even after 30 seconds have passed.</li> <li>• The Pandora® app is not installed in your device, or the Pandora® version is not supported.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn the phone screen on, and make sure it is unlocked.</li> <li>• The Pandora® version is not supported. Update to the latest version.</li> </ul>
When not driving, please see mobile device.	The Pandora® app in your smartphone is not compatible with the app launcher system.	Download the most recent version of the Pandora® app.
	The required app is not installed.	Download the HondaLink app from <a href="http://www.hondalink.com">www.hondalink.com</a> .
The maximum number of stations that can be created is 100. To create more, please delete one or more previously created stations.	Appears when the number of created stations reaches the limitation.	Delete the unneeded stations from the Station List.
Unable to create new station. Please try again.	Appears when you try to create a new station.	Try again later.

Error Message	Cause	Solution
Unable to play PANDORA. Please try again later.	Appears when you try to play PANDORA.	Try again later.
Unable to play PANDORA. Music licensing restricts play in this area.		Try again later.
Unable to play PANDORA. When stopped, log-in to PANDORA.		Log in to the PANDORA sever.
This PANDORA station is currently not available. Please select another station.	Appears when the station you selected is not currently available.	Select another station.

## Aha™ Radio

If an error occurs while playing Aha™ Radio, you may see the following error messages.

If you cannot clear the error message, contact a dealer.

Error Message	Cause
Cannot connect to AcuraLink. When stopped, check your mobile device.	Appears when the Aha™ app is not activated. Check your device.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.

# Reference Information

<b>System Initialization</b> .....	334	Obtaining a Navigation Update .....	339
Entering the Security Code .....	334	Traffic Information .....	340
Acquiring GPS Information .....	334	Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico .....	340
Startup Confirmation Screen .....	335	<b>Legal Information</b> .....	341
Map Matching .....	335	Copyrights .....	341
<b>System Limitations</b> .....	336	User Agreements .....	341
GPS System .....	336	As required by the FCC .....	346
Address Calculation .....	336		
Database .....	336		
<b>Client Assistance</b> .....	338		
Resolving Problems .....	338		
Acura Client Relations Contact Information ...	338		
Visiting a Dealer .....	338		
Map Coverage .....	339		


The navigation system must be initialized if power to the navigation system is interrupted for any reason (e.g., the battery was disconnected).

## Entering the Security Code

In most cases, you do not need to enter a security code. Follow the steps to reactivate the system.

### Enter code

To enter the security code automatically, push and hold the audio power button for 2 seconds. If this does not work, manually enter the security code using the touch panel below.

1. Set the power mode to ON, and turn on the audio system.
2. Press and hold the  (Power) button for more than two seconds.
  - ▶ The system is reactivated when the system's control unit recognizes that the system is in your vehicle. If the control unit fails to recognize, you must go to a dealer and have the system checked.

## Acquiring GPS Information

Depending on the length of time the power was interrupted, your system may require GPS initialization.

The navigation system lost power and is acquiring its location from the GPS satellites. This usually takes less than 10 minutes.

- \* Start the engine.
- \* Park the vehicle in an open area away from trees, power lines, and tall buildings.
- \* Remove loose articles, mobile phones, or electrical accessories located near the GPS antenna.
- \* If this screen is displayed repeatedly when starting the vehicle, see your dealer.

If initialization is not necessary, the system proceeds directly to the Startup Confirmation screen.

If the system fails to locate a sufficient number of satellites to locate your position within 10 minutes, the following screen is displayed.


Something is interfering with the system's ability to acquire its location. Check the following:


- \* The vehicle must be in an open area with a clear view of the sky.
- \* Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).
- \* Check GPS antenna cable connection.
- \* Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

If you are experiencing GPS reception problems:

 **GPS System P. 336**

## Startup Confirmation Screen

The Startup Confirmation screen is displayed when initialization has successfully completed. It is displayed every time you start your vehicle. Press  to select **OK** to continue.

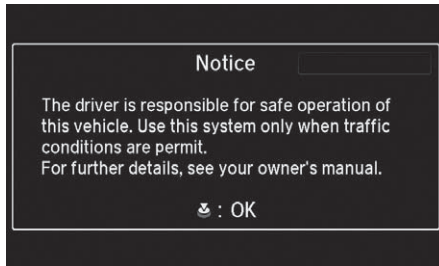

## Map Matching

Map matching is the process of using the acquired GPS information to locate your position on the map screen. If you are on a mapped road, the name of the road is displayed along the bottom of the map screen when map matching is completed. Do not enter a destination until the road name is displayed.

The system may initially show your location on a different street (e.g., in urban areas where streets are close together), may show an incorrect elevation, or may delay the display of the vehicle position icon at intersections. This is normal; the system will correct itself while you drive.



## GPS System

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of the sky. The GPS antenna is located in the roof. The signal reception can easily be interrupted or interfered with by trees, tall buildings, freeway/highway overpasses, tunnels, or overhead electrical power wires. The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS for which the navigation system must constantly compensate. This can cause occasional positioning errors of up to several hundred feet or tens of meters.

## Address Calculation

The destination icon shows only the approximate location of a destination address. This occurs if the number of possible addresses is different from the number of actual addresses on a block. For example, the address 1425 on a 1400 block with 100 possible addresses (because it is followed by the 1500 block) will be shown a quarter of the way down the block by the system. If there are only 25 actual addresses on the block, the actual location of address 1425 would be at the end of the block.

## Database

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes. For example, some places/landmarks may be missing when you search the database because the name was misspelled, the place was improperly categorized, or a place/landmark is not yet in the database. This is also true for police stations, hospitals, and other public institutions. Do not rely on the navigation system if you need law enforcement or hospital services. Always check with local information sources. In addition, the map database contains verified and unverified areas. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. A message will warn you if your route includes unverified streets. Exercise additional caution when driving in unverified areas.

The database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Special events
- Pavement characteristics or conditions

Every effort has been made to verify that the database is accurate. The number of inaccuracies you experience increases the longer you go without obtaining an updated map database.

**📄 Obtaining a Navigation Update** P. 339

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

## Resolving Problems

---

If you run into a specific issue that you cannot resolve, consult the following help resources:

- For navigation system issues:
  - **Troubleshooting** P. 318
- There are also FAQs available online at [www.acuranavi.com](http://www.acuranavi.com) (U.S.) or [www.acuranavi.ca](http://www.acuranavi.ca) (Canada).
- For traffic-related issues:
  - **Traffic** P. 320
- For reporting issues with the database or places/landmarks:
  - **Visiting a Dealer** P. 338
- Call Acura Client Relations.
  - **Acura Client Relations Contact Information** P. 338

## Acura Client Relations Contact Information

---

Acura Navi  
American Honda Motor Co., Inc.  
Acura Client Relations  
Mail Stop 500-2N-7E  
1919 Torrance Blvd.  
Torrance, CA 90501-2746  
Telephone: (800) 382-2238

Honda Canada Inc.  
Acura Client Relations  
180 Honda Boulevard  
Markham, L6C 0H9, ON  
E-Mail: [acura\\_cr@ch.honda.com](mailto:acura_cr@ch.honda.com)  
Telephone: (888) 9-ACURA-9  
Hours: 8:00 am to 7:30 pm  
Monday to Friday (Eastern time)

## Visiting a Dealer

---

If you have a question that you cannot resolve using the available help resources, you can consult a dealer. Please identify the specific issue (e.g., error occurs when you enter a specific address, when driving on a certain road, or just when it's cold) so that the service technician can refer the issue to the factory so that a solution can be found. Be patient, the service technician may be unfamiliar with your specific issue.

## Map Coverage

The navigation system provides map coverage for the United States, Canada, Puerto Rico, and Mexico. The map coverage consists of accurately mapped (verified) metropolitan areas and a less accurate (unverified) rural database. Note that unverified areas are constantly being reviewed and converted to verified areas each year.

This screen is an example.



Map coverage update information is available from Acura Client Relations or online at [www.acuranavi.com](http://www.acuranavi.com) (U.S.) or [www.acuranavi.ca](http://www.acuranavi.ca) (Canada).

To find navigation system update information:

1. Visit the website.
2. Enter your vehicle model and model year.
3. Click Map Coverage to display a list of verified coverage areas on the most recent update.
4. Click Map Coverage Details to display a PDF document with a full listing of all coverage areas.
  - ▶ Adobe® Reader® is required for viewing and printing the Portable Document Format (PDF) documents. To download the latest version of Adobe Reader, visit <http://get.adobe.com/reader/>.

## Obtaining a Navigation Update

Acura is continually expanding the scope of the navigation system. Navigation system software upgrades may be made available periodically, usually in the fall of each year. To purchase an update:

1. Obtain your vehicle's VIN number and the System/Device Information.
  - ▶ **System Device Information** P. 314
2. Call the Acura Navigation Disc Fulfillment Center at (888) 549-3798, or order online at [www.acuranavi.com](http://www.acuranavi.com) (U.S.) or [www.acuranavi.ca](http://www.acuranavi.ca) (Canada).

An update is not available from a dealer. However, the dealer may assist you in obtaining one for you out of courtesy. There is no program for free updates.

## Traffic Information

Continuously updated traffic information is available in major metropolitan areas across the 48 contiguous states and some cities in Canada. A list of coverage areas is available online.

To find traffic information:

1. Visit [www.acura.com/realtimetraffic](http://www.acura.com/realtimetraffic).
2. Select Real-Time Traffic on the ILX.
3. Click AcuraLink Real-Time Traffic.

## Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico

### Map Coverage

All roads displayed on the map screens are verified roads. Information in this manual relating to “unverified” roads or areas is not applicable.

### Address and Place Entry Screens

Entering a destination address or place/landmark on another island may result in a screen caution message. This is because there are no ferry routes between islands in the database.

### Puerto Rico and Mexico

If **Street Name Guidance** is set to **On**, the street names will not be read out by voice guidance. This may change in a future data update.

## Copyrights

- Infogroup-Data: Certain business data provided by Infogroup © 2011, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2011. All rights reserved.
- Building foot print: © ZENRIN CO., LTD. 2011. All rights reserved.
- Junction View Data: © ZENRIN USA, INC. 2011. All rights reserved.
- Brand icon: The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

## User Agreements

### Navigation System User Agreement

In using this HDD "Satellite Linked Navigation System" (the "HDD"), which includes HONDA MOTOR CO., LTD. software, ALPINE ELECTRONICS, INC. software, and Here database contents (hereinafter referred to as "Licensors"), you are bound by the terms and conditions set forth below. By using your copy of the HDD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the HDD to your dealer.

- The HDD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The HDD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.

- The HDD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The HDD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The HDD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The HDD is not to be used for commercial purposes.
- The Licensors do not guarantee to the client that the functions included in the HDD meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the HDD to the actual user or to any third party.
- The warranty on the HDD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the HDD.
- The right to use the HDD shall expire either when the user destroys the HDD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the HDD or software.

- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, convenience stores, and other businesses are displayed for your information and convenience, and in no way imply any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.
- The marks of companies displayed by this product to indicate business locations are the marks of their respective owners.
- The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the HDD or software.

Use, duplication, or disclosure of this HDD by or on behalf of the United States

government is subject to “Restricted Rights” as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable.

Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Alpine Electronics, Inc., 20-1 Yoshima Kogyodanchi, Iwaki, Fukushima 970-1192 JAPAN., Here Corporation, 425 W Randolph St. Chicago, IL 60606, USA.

### Navigation System END USER LICENSE AGREEMENT

You have acquired a device (“DEVICE”) that includes software licensed by Alpine Electronics, Inc. (collectively “ALPINE”) from an affiliate of Microsoft Corporation (collectively “MS”). Those installed software products of MS origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved. IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE INSTEAD, PROMPTLY CONTACT ALPINE

FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

- GRANT OF SOFTWARE LICENSE  
This EULA grants you the following license: You may use the SOFTWARE only on the DEVICE.
- NOT FAULT TOLERANT  
THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON ALPINE TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
- NO WARRANTIES FOR THE SOFTWARE  
THE SOFTWARE is provided “AS IS” and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT

- OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR SOFTWARE THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.
- NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS, MICROSOFT CORPORATION AND/OR THEIR AFFILIATES BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).
  - SPEECH RECOGNITION  
If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither ALPINE nor its suppliers

shall be liable for any damages arising out of errors in the speech recognition process.

- LIMITATIONS ON REVERSE ENGINEERING, DECOMPIATION, AND DISASSEMBLY  
You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- ADDITIONAL SOFTWARE/SERVICES  
The SOFTWARE may permit ALPINE, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-base service components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE (“Supplemental Components”).
  - ▶ If ALPINE provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

- ▶ If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be licensor of the Supplemental Component(s).
- ▶ ALPINE, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.
- RECOVERY MEDIA  
If SOFTWARE is provided by ALPINE on separate media and labeled “Recovery Media” you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.
- UPGRADES  
If the SOFTWARE is provided by ALPINE separate from the DEVICE on separate media or via web download or other means, and is labeled “For Upgrade Purposes Only” you may install one (1) copy of such SOFTWARE onto the



DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

- **TERMINATION**

Without prejudice to any other rights, ALPINE or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

- **INTELLECTUAL PROPERTY RIGHTS**

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or suppliers. The SOFTWARE is licensed, not sold. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the

property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

- **TRADEMARKS**

This EULA does not grant you any rights in connection with any trademarks or service marks of ALPINE MS, Microsoft Corporation, their affiliates or suppliers.

- **PRODUCT SUPPORT**

Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to ALPINE support number

provided in the documentation for the DEVICE.

Should you have any questions concerning this EULA, or if you desire to contact ALPINE for any other reason, please refer to the address provided in the documentation for the DEVICE.

- **SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS**

You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

- **EXPORT RESTRICTIONS**

You acknowledge that SOFTWARE is of US-origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>.

**Gracenote Music Recognition Service (CDDB)**



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery.

For more information, visit [www.gracenote.com](http://www.gracenote.com).

When music is recorded to the HDD from a CD, information such as the recording artist and track name are retrieved from the Gracenote Database and displayed (when available).

Gracenote may not contain information for all albums.

Gracenote is an internet-based music recognition service that allows artist, album, and track information from CDs to display on the HDD.

Gracenote users are allowed 4 free updates a year. More information about Gracenote, its features, and downloads are available at [www.honda.com](http://www.honda.com) (in U.S.) or [www.honda.ca](http://www.honda.ca) (in Canada).

CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

**Gracenote® END USER LICENSE AGREEMENT**

This application or device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers or embedded databases (collectively, “Gracenote Servers”) and to perform other

functions. You may use Gracenote Data only by means of the intended End-User functions or this application or device. You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only.

You agree not to assign, copy, transfer, or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN. You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers.

Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce

its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted.

Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in

the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

## As required by the FCC

1. This device complies with Part 15 of the FCC Rules and Canadian RSS-210/ RSSGen. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.
3. This product emits radio frequency energy, but the radiated output power of this device is far below the FCC and IC radio frequency exposure limits. This equipment complies with FCC and IC RF radiation exposure limits set forth for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.



# Voice Commands

<b>Voice Commands</b> .....	348
Navigation Commands .....	348
Voice Portal Commands .....	350
Phone Commands .....	350
Info Commands .....	351
Climate Control Commands .....	351
Audio Commands .....	351
On-Screen Commands .....	355
Spelling Assistance .....	355
<b>List of Categories</b> .....	358

## Navigation Commands

The system accepts these commands on a map/guidance screen.

### General Commands

*Display voice portal*  
*Display phone* (equivalent to **PHONE**)  
*Display audio* (equivalent to **AUDIO**)  
*Display navigation* (if en route, displays the Route screen)  
*Display information* (equivalent to **INFO**)  
*Display menu* (equivalent to **MENU**. if en route, displays Route Options)  
*Display setting* (equivalent to **SETTINGS** button)  
*Display map*  
*Display map guide* (when en route, shows the next guidance point)  
*Cancel*  
*What time is it?*  
*What is today's date?*  
*Voice help* (displays commands for current screen)  
*Messages*

### Map Display Commands

*Display current location* (shows current latitude, longitude, and elevation)  
*Display/Hide* (specify icon type):  
*ATM*  
*gas station*  
*restaurant*  
*post office*  
*grocery store*  
*lodging* (hotel, motel)  
*parking garage*  
*parking lot*  
*school*  
*hospital*  
*freeway exit information* (U.S.)  
*highway exit information* (Canada)  
*traffic*  
*traffic speeds*  
*traffic icons*  
*traffic incidents*  
*Go home*  
*Register the current location* (stores current location in the Address Book)

### Map Scale Commands

*Display north up*  
*Display heading up*  
*Display 3D map*  
*Display zoom in*  
*Display zoom out*  
*Display* (specify scale):  
*1/20 mile (80 m) scale*  
*1/8 mile (200 m) scale*  
*1/4 mile (400 m) scale*  
*1/2 mile (800 m) scale*  
*1 mile (1600 m) scale*  
*2 mile (3 km) scale*  
*5 mile (8 km) scale*  
*15 mile (24 km) scale*  
*50 mile (80 km) scale*  
*150 mile (240 km) scale*  
*350 mile (560 km) scale*  
*1000 mile (1600 km) scale*  
*Max zoom in*  
*Max zoom out*

**Find Place Commands**

*Find nearest (specify place):*

*Fuel and auto*

*Acura dealers*

*Honda dealers*

*Gas station*

*Hydrogen station*

*Auto parts & electronics*

*Auto repair & maintenance*

*Car wash & detailing*

*Motorcycle dealers*

*Other car dealers*

*Roadside assistance*

*ATM and bank*

*ATM*

*Bank*

*Check cashing*

*Currency exchange*

*Community*

*Business*

*City hall*

*Civic center*

*Convention center*

*Court house*

*Higher education*

*Library*

*Post office*

*School*

*Emergency room*

*Hospital*

*Police station*

*Veterinarian*

*Lodging*

*Bed & breakfast*

*Hotel*

*Resort*

*Recreation*

*Amusement park*

*Golf course*

*Historical monument*

*Marina*

*Movie theater*

*Museum*

*Park*

*Performing arts*

*Sports complex*

*Tourist attraction*

*Restaurant*

*American restaurant*

*Californian restaurant*

*Chinese restaurant*

*Coffee shop*

*Continental restaurant*

*Fast food*

*French restaurant*

*German restaurant*

*Greek restaurant*

*Indian restaurant*

*Italian restaurant*

*Japanese restaurant*

*Korean restaurant*

*Mexican restaurant*

*Pizza*

*Seafood restaurant*

*Thai restaurant*

*Vegetarian restaurant*

*Vietnamese restaurant*

*Other restaurant*

*Shopping*

*Shopping area*

*Accessory store*

*Book store*

*Clothing store*

*Grocery store*

*Home improvement store*

*Mall*

*Office supply store*

*Pharmacy*

*Pet food store*

*Sewing store*

*Shoe store*

*Sporting goods store*

*Toy store*

*Travel center*  
*Airport*  
*Automobile club*  
*Bus station*  
*Camping*  
*Commuter rail station*  
*Ferry terminal*  
*Named place*  
*Park & ride*  
*Parking garage*  
*Parking lot*  
*Rental car agency*  
*Rest area*  
*Ski area*  
*Tourist information*  
*Train station*  
*Travel agency*  
*Truck stop*

## ■ Route Commands

The system accepts these commands when a route is set.

*How long to the destination?\**  
*How far to the destination?\**  
*Display destination map*  
*Display entire route*  
*Cancel route*  
*Repeat guidance*

\* These commands are not available if you scroll through the map while en route to a destination.

## Voice Portal Commands

The system accepts these commands on the **Voice Portal** screen.

*Call Your contact name*  
*Call Phone Number*  
*Address (U.S.)*  
*Place Name (U.S.)*  
*Find nearest POI category name (Canada)*  
*Go home*  
*Cancel route*

## Phone Commands

The system accepts these commands on any screen.

*Call by number*  
*Call by name*  
*Call (phone number)*  
*Call (contact name)*

Contacts that are imported from your phone to the vehicle are all made available by voice. Voice Tags can also be recorded for each of your Speed Dial entries.

## Info Commands

The system accepts these commands on any screen.

*Trip computer*  
*Display traffic*  
*Display clock*  
*Display wallpaper*

## Climate Control Commands

The system accepts these commands on most screens.

*Climate control automatic*\*<sup>1</sup>  
*Climate control off*\*<sup>1</sup>  
*Air conditioner on*\*<sup>1</sup>  
*Air conditioner off*\*<sup>1</sup>  
*Climate control defrost on*\*<sup>1</sup>  
*Climate control defrost off*\*<sup>1</sup>  
*Rear defrost on*\*<sup>1</sup>  
*Rear defrost off*\*<sup>1</sup>  
*Climate control fresh air*  
*Climate control recirculate*  
*Climate control vent*  
*Climate control bi-level*  
*Climate control floor*  
*Climate control floor and defrost*  
*Climate control automatic*

*Fan speed up*  
*Fan speed down*  
*Fan speed #* (#: 1 to 7)  
*Fan automatic*  
*Temperature # degrees* (#: 57 to 87°F, 15 to 29°C)  
*Driver temperature # degrees* (#: 57 to 87°F, 15 to 29°C)  
*Passenger temperature # degrees* (#: 57 to 87°F, 15 to 29°C)  
*Temperature up*  
*Temperature down*  
*Driver temperature up*  
*Driver temperature down*  
*Passenger temperature up*  
*Passenger temperature down*  
*Temperature max heat*  
*Temperature max cool*  
*Driver temperature max heat*  
*Driver temperature max cool*  
*Passenger temperature max heat*  
*Passenger temperature max cool*  
*Climate control sync on*\*<sup>1</sup>  
*Climate control sync off*\*<sup>1</sup>


\*1: These commands toggle the function on and off, so the command may not match your intended action.

## Audio Commands

The system accepts these commands on most screens.

### Using Song By Voice™

Song By Voice™ is a feature that allows you to select music from your Hard Disc Drive or iPod device using your voice.

To activate this mode, you must press the  (Talk) button on the **Voice Portal** screen and say: "Music search."

### Song By Voice™ Commands

*Music search*  
*What am I listening to?*  
*Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

### HDD Commands

*Hard Disc Drive play*  
*Hard Disc Drive play track #* (#: 1 to 30)  
*Hard Disc Drive skip forward*  
*Hard Disc Drive skip back*



*Hard Disc Drive album up*<sup>\*2</sup>  
*Hard Disc Drive album down*<sup>\*2</sup>  
*Hard Disc Drive track up*  
*Hard Disc Drive track down*  
*Hard Disc Drive playlist up*<sup>\*2</sup>  
*Hard Disc Drive playlist down*<sup>\*2</sup>  
*Hard Disc Drive track random*<sup>\*1</sup>  
*Hard Disc Drive track repeat*<sup>\*1</sup>  
*Hard Disc Drive track scan*<sup>\*1</sup>  
*Hard Disc Drive normal play*  
*What am I listening to?*  
*Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

\*1: These commands toggle the function on and off, so the command may not match your intended action.

\*2: These commands are available only in the corresponding playback mode.

For example, "Artist" commands are available only in "Artist" mode.

## Radio Commands

*Audio on*<sup>\*1</sup>  
*Audio off*<sup>\*1</sup>  
*Radio on*<sup>\*1</sup>  
*Radio off*<sup>\*1</sup>  
*Radio select FM*  
*Radio select AM*  
*Radio tune to # FM*  
 (#: frequency from 87.7 to 107.9)  
*Radio tune to # AM*  
 (#: frequency from 530 [five thirty] to 1710 [seventeen ten])  
*Radio seek up*  
*Radio seek down*  
*Radio next station*  
*Radio preset #* (#: 1 to 12)  
*Radio FM preset #* (#: 1 to 12)  
*Radio AM preset #* (#: 1 to 6)  
*Radio FM tag song* (if available)  
*Radio AM tag song* (if available)  
*Radio scan*<sup>\*1</sup>  
*Radio select Sirius XM*  
*Sirius XM channel #*  
 (#: 0 to 999 [nine ninety nine])  
*Sirius XM channel up*  
*Sirius XM channel down*  
*Sirius XM category up*

*Sirius XM category down*  
*Sirius XM preset #* (#: 1 to 12)  
*Sirius XM scan*<sup>\*1</sup>  
*Sirius XM category mode*  
*Sirius XM channel mode*  
*Sirius XM skip forward*  
*Sirius XM skip back*  
*Sirius XM scan songs*  
*Sirius XM play*  
*Sirius XM pause*  
*Sirius XM go to live*  
*Sirius XM tag song* (if available)

\*1: These commands toggle the function on and off, so the command may not match your intended action.

### NOTE:

Radio volume levels cannot be controlled using voice control.

**Disc Commands**

*Disc play*  
*Disc play track # (#: 1 to 30)*  
*Disc skip forward*  
*Disc skip back*  
*Disc track random*<sup>\*1</sup>  
*Disc track repeat*<sup>\*1</sup>  
*Disc track scan*<sup>\*1</sup>  
*Disc folder up*  
*Disc folder down*  
*Disc folder random*<sup>\*1</sup>  
*Disc folder repeat*<sup>\*1</sup>  
*Disc folder scan*<sup>\*1</sup>  
*Disc normal play*

\*1: These commands toggle the function on and off, so the command may not match your intended action.

**iPod Commands**

*iPod play*  
*iPod pause*  
*iPod play track # (#: 1 to 30)*  
*iPod skip forward*  
*iPod skip back*  
*iPod track shuffle*<sup>\*1</sup>  
*iPod album shuffle*<sup>\*1</sup>  
*iPod track repeat*<sup>\*1</sup>  
*iPod normal play*  
*What am I listening to?*  
*Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

\*1: These commands toggle the function on and off, so the command may not match your intended action.

**USB Commands**

*USB play*  
*USB play track # (#: 1 to 30)*  
*USB skip forward*  
*USB skip back*  
*USB track random*<sup>\*1</sup>  
*USB track repeat*<sup>\*1</sup>  
*USB track scan*<sup>\*1</sup>  
*USB folder up*  
*USB folder down*  
*USB folder random*<sup>\*1</sup>  
*USB folder repeat*<sup>\*1</sup>  
*USB folder scan*<sup>\*1</sup>  
*USB normal play*

\*1: These commands toggle the function on and off, so the command may not match your intended action.

## Bluetooth® Audio Commands

*Bluetooth Audio play*  
*Bluetooth Audio skip forward*  
*Bluetooth Audio skip back*  
*Bluetooth Audio group up*  
*Bluetooth Audio group down*  
*Bluetooth Audio pause*  
*Bluetooth Audio resume*

### NOTE:

*Bluetooth*® Audio commands may not work on some phones or *Bluetooth*® Audio devices.

## AUX Commands

*Auxiliary play*

### U.S. models

## Pandora® Commands

The system accepts these commands while the Pandora® is playing.

*Pandora play*  
*Pandora skip forward*  
*Pandora station up*  
*Pandora station down*  
*Pandora pause*  
*Pandora resume*  
*Pandora thumbs up*  
*Pandora thumbs down*

## Aha™ Radio Commands

The system accepts these commands while the Aha™ is playing.

*Aha radio play*  
*Aha radio skip forward*  
*Aha radio skip back*  
*Aha radio station up*  
*Aha radio station down*  
*Aha radio resume*  
*Aha radio pause*  
*Aha radio like*  
*Aha radio dislike*

## Internet Service Commands

*Internet service play*  
*Internet service skip forward*\*<sup>1</sup>  
*Internet service skip back*\*<sup>1</sup>  
*Internet service station up*\*<sup>1</sup>  
*Internet service station down*\*<sup>1</sup>  
*Internet service resume*\*<sup>1</sup>  
*Internet service pause*\*<sup>1</sup>  
*Internet service like*\*<sup>1</sup>  
*Internet service dislike*\*<sup>1</sup>

\* 1: The system accepts these commands while the Internet service is playing.

## On-Screen Commands

The system accepts these commands on any screen. There are over 100 on-screen commands. Say what is written on the screen to activate that selection. For lists, you can say the list item number to select that item.

*Next (or Down)*

*Previous (or Up)*

*Return*

*OK (excluding Startup Confirmation screen)*


*Delete*

## Spelling Assistance

The voice control system can also recognize phonetic alphabet input for numbers, letters, accented letters, punctuation marks, and symbols.

### NOTE:

When selecting letters using the voice control system, a confirmation box may pop up to confirm the entry.

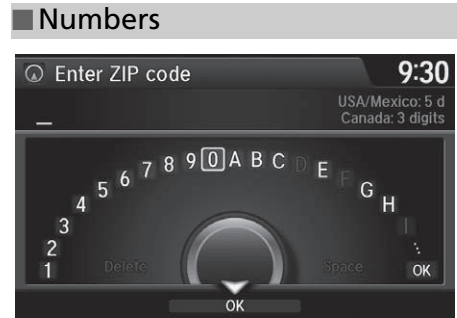

Say ...	Say ... or Number ...
1	One
2	Two
3	Three
4	Four
5	Five
6	Six
7	Seven
8	Eight
9	Nine
0	Zero

**Letters**



Say ...	Or say...
A	Apple/Alpha
B	Boy/Bravo
C	Charlie
D	Dog/Delta
E	Edward/Echo
F	Frank/Foxtrot
G	George/Golf
H	Henry/Hotel
I	Igloo/India
J	John/Juliet
K	King/Kilo
L	Larry/Lima
M	Mary/Mike

Say ...	Or say...
N	Nancy/November
O	Oscar
P	Paul/Papa
Q	Queen/Quebec
R	Robert/Romeo
S	Sam/Sierra
T	Tom/Tango
U	Uncle/Uniform
V	Victor
W	William/Whiskey
X	X-ray
Y	Yellow/Yankee
Z	Zebra/Zulu

**Accented Letters**



Say ...	Say ... or Symbol ...
Á	A acute
À	A grave
Â	A circumflex
Ä	A umlaut
Ç	C cedilla
È	E grave
É	E acute
Ë	E umlaut
Í	I acute
Î	I circumflex
Ï	I umlaut
Ó	O acute
Ö	O circumflex

Say ...	Say ... or Symbol ...
Ö	<i>O umlaut</i>
Û	<i>U grave</i>
Ú	<i>U acute</i>
Û	<i>U circumflex</i>
Ü	<i>U umlaut</i>




 

 
Say ...	Say ... or Symbol ...
?	<i>Question mark</i>
!	<i>Exclamation point</i>
\$	<i>Dollar</i>
#	<i>Pound</i>
*	<i>Asterisk</i>
+	<i>Plus</i>
-	<i>Hyphen</i>
:	<i>Colon</i>
;	<i>Semicolon</i>
/	<i>Slash</i>
@	<i>At sign</i>
&	<i>Ampersand</i>
~	<i>Tilde</i>

Say ...	Say ... or Symbol ...
.	<i>Dot</i>
“	<i>Double quote</i>
,	<i>Comma</i>
'	<i>Apostrophe</i>
¡	<i>Inverted exclamation point</i>
¿	<i>Inverted question mark</i>
«	<i>Left-pointing double angle quotation mark</i>
»	<i>Right-pointing double angle quotation mark</i>
%	<i>Percent</i>
_	<i>Underscore</i>
<	<i>Less than</i>
>	<i>Greater than</i>
{	<i>Open brace</i>
}	<i>Close brace</i>
^	<i>Caret</i>
`	<i>Back quote</i>

# List of Categories

Fuel/Auto		Lodging		Shopping	
All Types	Auto Repair & Maintenance	All Types	Hotel/Motel	All Types	Mall/Department Store
Acura Dealers	Car Wash & Detailing	Bed & Breakfast	Resort	Accessories/Jewelry	Office Supplies/ Electronics
Honda Dealers	Motorcycle Dealers	<b>Recreation</b>		Auto Parts & Electronics	Pharmacy/Drug Store
Gas Station	Other Car Dealers	All Types	Museum	Books/Music/Video	Pet Food/Supplies
Hydrogen Station	Roadside Assistance	Amusement Park	Park/Recreation Area	Clothing	Sewing/Linen
Auto Parts & Electronics		Golf Course	Performing Arts	Shoes/Bags	Sporting Goods
<b>ATM/Bank</b>		Historical Monument	Sports Complex	Groceries	Toys/Arts/Crafts
All Types	Check Cashing/Money Transfer	Marina	Tourist Attraction	Home Improvement	
ATM	Currency Exchange	Movie Theater		<b>Travel</b>	
Bank		<b>Restaurant</b>		All Types	Parking Garage/ House
<b>Community</b>		All Types	Italian	Airport	Parking Lot
All Types	Court House	American	Japanese	Automobile Club	Rental Car Agency
Business	Higher Education	Café/Coffee shop	Korean	Bed & Breakfast	Resort
City Hall	Library	Californian	Mexican	Bus Station	Rest Area
Civic/Community Center	Post Office	Chinese	Pizza	Camping	Ski Area
Convention/Exhibition Center	School	Continental	Seafood	Commuter Rail Station	Tourist Attraction
<b>Emergency</b>		Fast Food	Thai	Ferry Terminal	Tourist Information
All Types	Roadside Assistance	French	Vegetarian	Hotel/Motel	Train Station
Hospital	Veterinarian	German	Vietnamese	Named Place	Travel Agency
Police Station		Greek	Other	Park & Ride	Truck Stop/Plaza
		Indian			

## Symbols

 (Display Mode) Button .....	74
 (Hang-Up/Back) Button .....	6, 22, 252
 (Pick-Up) Button .....	252
 (Talk) Button .....	6, 22, 252

## Numbers

3D Angle Adjustment .....	77
---------------------------	----

## A

Acura Client Relations .....	338
AcuraLink Message .....	305
AcuraLink Subscription Status .....	309
AcuraLink® .....	300
Address .....	118
Address Book .....	39
Avoided Area .....	60
Address Book	
Editing Address Book .....	39
Setting Destination .....	125
Address Book PIN .....	47
Aha™ Radio .....	332
Aha™ Radio Menu .....	239
Audio	
On Demand Multi-Use Display™ .....	5
Remote Control .....	179
Settings .....	181
Voice Commands List .....	351
Audio Menu	
Bluetooth® Audio .....	247

Disc .....	205
FM/AM Radio .....	184
HDD .....	212
Internet Radio .....	236
iPod .....	224
SiriusXM® Radio .....	190
USB Flash drive .....	241

### Audio System

Theft Protection .....	176
USB Port .....	175

### Auto Door Locking/Unlocking

Customize .....	102
-----------------	-----

### AUX

AUX commands .....	354
Auxiliary Input Jack .....	176

### Avoid Streets

Avoided Area .....	60
--------------------	----

## B

Black Level .....	26
Bluetooth® Audio	
Playing .....	247
Voice Commands List .....	354
Bluetooth® HandsFreeLink® .....	252
Importing Phonebook Data .....	261
Making a Call .....	278
Pairing a Phone .....	255
Phone Settings .....	273
Receiving a Call .....	283
Setting Up Speed Dialing .....	262
Brightness .....	26

## C

Calculating the Route .....	141
Calendar .....	313
Call History .....	282
Cancel Route .....	160
Category	
Address Book .....	39
Place Category List .....	358
Setting Destination .....	127
Category History .....	49
Change Province .....	119
Change State .....	119
Changing Your Destination .....	168
Changing Your Route .....	159
City .....	121
Client Assistance .....	338
Clock Adjustment .....	28
Color .....	73
Continue Trip .....	171
Contrast .....	26
Coordinate .....	140
Correct Vehicle Position .....	86
Current Location .....	79
Current Position	
Address Book .....	39
Map Input .....	138
Customized Features .....	88

## D

Data Reset .....	113
------------------	-----



- Day Mode
    - Color ..... 73
    - Switching Display Mode ..... 74
  - Delete Tracking ..... 85
  - Destination List
    - Adding Waypoint ..... 161
    - Editing ..... 165
  - Detour ..... 167
  - Dial ..... 280
  - Directions ..... 154
  - Disc
    - Playing ..... 205
    - Voice Commands List ..... 353
  - Display Settings ..... 26
  - Display Tracking ..... 84
    - Driving ..... 148
  - Download POI
    - Editing Category ..... 51
    - Importing Category ..... 50
    - Setting Destination ..... 135
  - Driving to Your Destination ..... 144
- E**
- Edit Go Home ..... 46
  - Edit POI Search Radius Along Route ..... 59
  - ENTER Button ..... 7
  - Entering a Destination ..... 116
  - Error Messages ..... 325
    - Aha™ Radio ..... 332
    - CD Player ..... 326
    - Hard Disc Drive (HDD) Audio ..... 327
    - iPod/USB Flash Drive ..... 328
    - Navigation System ..... 325
    - Pandora® ..... 329
  - Estimated Time ..... 68
  - Exit Info ..... 155
- F**
- Find Nearest Place ..... 168
  - FM/AM Radio
    - Playing ..... 184
    - Preset Memory ..... 187
    - Voice Commands List ..... 352
  - Folder List
    - Disc ..... 209
    - USB Flash Drive ..... 246
- G**
- Go Home ..... 11
  - Go Home PIN ..... 47
  - Gracenote Info. Update ..... 222
  - Guidance (Navi Settings) ..... 62
  - Guidance Mode ..... 63
  - Guidance Point ..... 67
- H**
- HDD
    - Playing ..... 212
    - Voice Commands List ..... 351
  - Hide Traffic Flow ..... 153
  - Home Address ..... 11, 46
  - House Number ..... 124
- I**
- Import Phonebook Data ..... 261
  - Interface Dial ..... 7
  - Interface Settings ..... 26
  - Intersection ..... 137
  - iPod
    - Connecting, Disconnecting ..... 224
    - Playing ..... 224
    - Voice Commands List ..... 353
- L**
- Language Settings ..... 34
  - Legal Information ..... 341
  - List of Categories ..... 358
  - Lodging (Place Category) ..... 127
- M**
- Map (Navi Settings) ..... 69
  - Map Data Update
    - Checking Version ..... 314
    - Obtaining Update Data ..... 339
  - Map Input
    - Avoided Area ..... 60
    - Setting Destination ..... 138
  - Map Legend ..... 9, 80
  - Map Menu ..... 151
  - Map Screen ..... 144

Changing View .....	76
Icon .....	9, 82
Scale .....	81

## MENU Button

Changing Route .....	159
Entering a Destination .....	116

Microphone .....	252
------------------	-----

MODE Button .....	179
-------------------	-----

Multi-View Rear Camera .....	316
------------------------------	-----

## Music Search

HDD .....	217
How to Select a File from the Music Search List (MP3/WMA/AAC) .....	209
iPod .....	230
Song By Voice .....	232
USB .....	246

## N

NAV Button .....	10, 63
------------------	--------

Navigation Menu (Destination) .....	116
-------------------------------------	-----

Navigation Menu (Route Option) .....	159
--------------------------------------	-----

## Night Mode

Color .....	73
Switching Display Mode .....	74

Non-map Screens .....	66
-----------------------	----

## O

### On Demand Multi-Use Display™

Basic Operation .....	5
Customizing Audio Source .....	178
Screen Settings .....	87

Shortcuts .....	44, 177, 265
Sound .....	183

## P

Pairing a Phone .....	255
-----------------------	-----

Pandora® .....	237
----------------	-----

Personal Information .....	38
----------------------------	----

PHONE Button .....	252
--------------------	-----

Phone Settings .....	273
----------------------	-----

## Phonebook

Importing .....	261
Making a Call .....	279

PIN Numbers .....	47
-------------------	----

## Place Category

Address Book .....	39
Place Category List .....	358
Setting Destination .....	127

## Place Name

Address Book .....	39
Setting Destination .....	131

## Place Phone Number

Address Book .....	39
Setting Destination .....	134

Postal Code .....	120
-------------------	-----

## Previous Destinations

Address Book .....	39
Deleting .....	48
Setting Destination .....	126

## R

### Radio

FM/AM .....	184
SiriusXM® .....	190

### Random

Disc .....	207
HDD .....	215
USB Flash Drive .....	244

Rearview Camera .....	316
-----------------------	-----

### Repeat

Disc .....	207
HDD .....	215
iPod .....	228
USB Flash Drive .....	244

Resuming Your Trip .....	171
--------------------------	-----

Roadside Assistance .....	293
---------------------------	-----

Route Preference .....	54
------------------------	----

Routing .....	53
---------------	----

## S

### Scan

Disc .....	207
FM/AM Radio .....	188, 189
HDD .....	215
SiriusXM® Radio .....	200
USB Flash Drive .....	244

Scenic Route .....	136
--------------------	-----

### Schedule

Calendar .....	313
----------------	-----

Search Along .....	162
--------------------	-----

Search Around .....	162
---------------------	-----

Search by Name .....	128	System Limitations .....	336	<b>Voice Commands</b>	
Search by name				Basic Operation.....	8
Place Category.....	127			Help.....	15
Search Nearby.....	168	<b>T</b>		Voice Commands List.....	348
Security PIN Code.....	334	Text/E-mail Message.....	285	Voice Control System.....	22
SETTINGS Button.....	4	Traffic Incidents.....	157	<b>Voice Control Operation</b>	
Show Icon on Map.....	71	Traffic List.....	157	Basic Operation.....	6
Siri Eyes Free .....	25	Traffic Rerouting.....	156	Voice Portal .....	6
SiriusXM® Radio		Auto Reroute .....	156	<b>Voice Recognition Settings</b> .....	24
Playing.....	190	Navi Settings.....	58	<b>Voice Tag</b>	
Preset Memory .....	193	Trip Computer .....	312	Phonebook Phonetic Modification.....	268
Replay Function .....	194	Troubleshooting.....	16, 318	Registering a Voice Tag to a Speed Dial	
Settings .....	181			Entry .....	263
SportsFlash™ Alert.....	196	<b>U</b>		<b>Volume</b>	
Voice Commands List .....	352	Unit Settings.....	33	HFL Buttons .....	252
Song By Voice™		Unverified Routing.....	56	Map Menu.....	151
Searching Music .....	232	Update System Software		Sound and Beep Settings .....	27
Setting.....	231	Obtaining Update Data .....	339	Voice Recognition Settings.....	24
Voice Commands List .....	351	USB Flash Drive			
Sort by Distance to Travel .....	127	Connecting, Disconnecting.....	241	<b>W</b>	
Sound and Beep Settings .....	27	Playing .....	241	Wallpaper Settings .....	30
Sound Setup.....	183	Voice Commands List.....	353	<b>Waypoint</b>	
Speed Dial		USB Port .....	175	Adding .....	161
Making a Call .....	282			Editing.....	165
Registering .....	263	<b>V</b>			
Start-up .....	20	View (Navi Settings) .....	76		
Steering Wheel Controls .....	179	View Routes.....	143	<b>Z</b>	
Straight Line Guide.....	78	Viewing the Routes.....	143	Zip Code .....	120
Street.....	122	Voice			
Street Name Guidance .....	65	Map Menu.....	149		
System Device Information .....	314				
System Initialization .....	334				