

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

#### **Accessories Precautions**

The GPS antenna is located in the dashboard. Metallic front or side window tinting can seriously degrade or obstruct GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

#### **Important Safety Information**



### **WARNING**

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Enter information before you begin driving or when stopped. As you drive, listen to the audible instructions and use voice commands when possible. Pull to the side of the road if you need more time to look at the screen or operate the controls.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.

 **System Limitations** P. 230

#### **NOTICE**

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste.

Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on navigation screens.

# Contents

## ➤ System Setup P. 19

Start-up 20	Voice Control System 22	Interface Settings 24	Personal Information 36
Music Search Setup 44	Routing & Guidance 48	Clock Adjustment 57	Vehicle 59
AcuraLink® 62	Traffic and Weather Status 63	Data Reset 64	

## ➤ Navigation P. 67

Entering a Destination 68	Calculating the Route 89	Driving to Your Destination 92	Map Menu 97
Changing Your Route 120	Changing Your Destination 127	Resuming Your Trip 131	

## ➤ Audio P. 133

Audio System 134	Playing FM/AM Radio 136	Playing SiriusXM® Radio 140	Playing a Disc 145
Playing Hard Disc Drive (HDD) Audio 149	Playing an iPod® 159	Searching for Music Using Song By Voice™ (SBV) 163	Playing Pandora® 164
Playing a USB Flash Drive 168	Playing Bluetooth® Audio 172	Adjusting the Sound 174	Audio Remote Controls 175

## ➤ Bluetooth® HandsFreeLink® P. 177

Bluetooth® HandsFreeLink® 178	Pairing a Phone 180	Setting Up Speed Dialing 185	Editing User Name and PIN 187
Phone Setup 188	Making a Call 190	Receiving a Call 193	HFL Menus 194
Text Messages 197			

## ➤ AcuraLink® Messages P. 199

AcuraLink® Messages 200	Reading Messages 200	Message Categories 201	Message Options 202
Dealer Appointments 203			

## ➤ Other Features P. 205

Calendar 206	Calculator 208	Information Functions 210	Multi-View Rear Camera 213
--------------	----------------	---------------------------	----------------------------

## ➤ Troubleshooting P. 215

Troubleshooting 216	Error Messages 223
---------------------	--------------------

## ➤ Reference Information P. 227

System Initialization 228	System Limitations 230	Client Assistance 232	Legal Information 235
---------------------------	------------------------	-----------------------	-----------------------

## ➤ Voice Commands P. 241

Voice Commands 242
--------------------

Quick Reference Guide P.2

System Setup P.19

Navigation P.67

Audio P.133

Bluetooth® HandsFreeLink® P.177

AcuraLink® Messages P.199

Other Features P.205

Troubleshooting P.215

Reference Information P.227

Voice Commands P.241

Index P.253

# Overview—Functions at a Glance

## Navigation

You can select any place/landmark as a destination by using voice control or the Interface Dial. The navigation system gives you turn-by-turn driving directions to your destination.



### Store home addresses [↔ P. 41](#)

Register **2** home addresses.

### Store contacts [↔ P. 37](#)

Store up to **200** contacts in **2** address books.

### Enter destination [↔ P. 68](#)

Select your destination using **12** methods.

### Select route [↔ P. 90](#)

Set route preferences and select one of **3** routes.

### Track route [↔ P. 92](#)

Follow your route in real-time with voice guidance.

#### Subscription service

#### AcuraLink Real-Time Traffic™ [↔ P. 118](#)

Bypass congestion and traffic incidents.

#### AcuraLink Real-Time Weather™ [↔ P. 113](#)


Access weather information.

### Avoid certain areas [↔ P. 121](#)

Set streets and areas to detour around.


### Add waypoints [↔ P. 122](#)

Add up to **4** "pit stops" along your route.

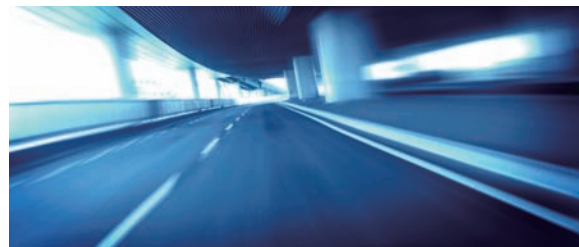

## Audio

The advanced audio system provides clear, well-defined sound and makes the most of your music. Enjoy listening to a variety of audio sources, such as:

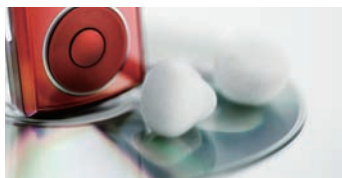

**FM/AM Radio** ➔ P. 136

**SiriusXM® Radio** ➔ P. 140

**Compact Disc** ➔ P. 145

**Hard Disk Drive (HDD)** ➔ P. 149

**iPod®** ➔ P. 159

**Pandora®** ➔ P. 164

**USB Flash Drive** ➔ P. 168

**Bluetooth® Audio** ➔ P. 172




### AcuraLink®

AcuraLink® provides you with important information and messages between your vehicle and Acura.

**AcuraLink Messages** ➔ P. 200

Display messages from Acura, tips, and other information.

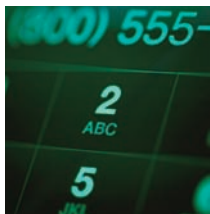

### Voice Control

 ➔ P. 22

Use voice commands to control the system while driving. You can operate all key functions of the navigation, audio, *Bluetooth*® HandsFreeLink® and climate control systems.

### Bluetooth® HandsFreeLink®

 ➔ P. 178

Pair a compatible cell phone to receive incoming and make outgoing calls. You can operate the phone features without ever taking your hands off the wheel.

### Text Messages

 ➔ P. 197

Receive text messages on the navigation screen from a compatible device and hear them read aloud. Reply to them using preloaded messages.












## Other Features

**Multi-View Rear Camera** ➔ P. 213


Helps you check for obstacles around the rear of your vehicle on the navigation screen when reversing.



# System Controls

- 1  (Eject) Button
- 2 Disc Slot  P. 6
- 3 FM/AM Button  P. 136
- 4 Preset Buttons  P. 6
- 5 CATEGORY Bar  P. 6
- 6 TUNE Bar  P. 6
- 7 SiriusXM® Button  P. 140
- 8 TITLE Button  P. 6
- 16 MAP/GUIDE Button  P. 102
- 17 CANCEL Button
- 18  (Display Mode) Button  P. 29

■ Audio    ■ Navigation  
■ Voice Control  
 Bluetooth® HandsFreeLink®

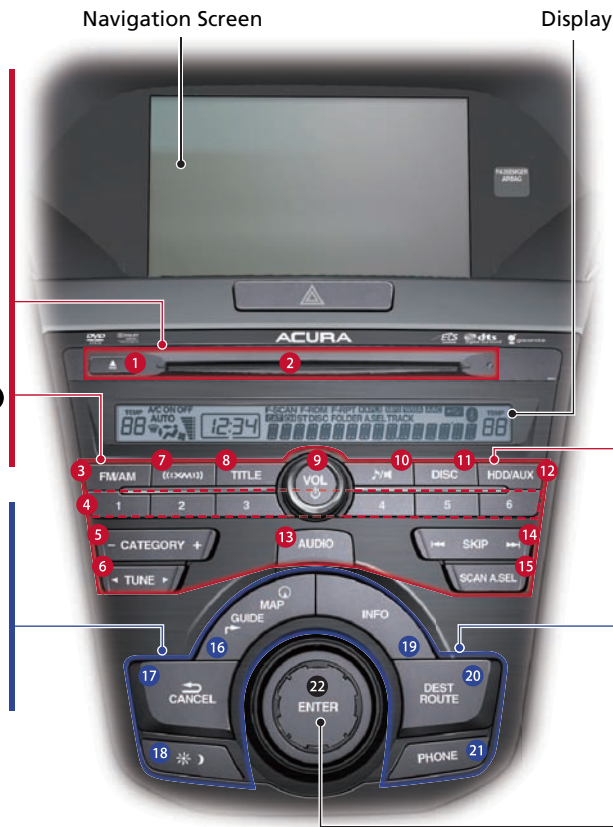

- 9 VOL  (Volume/Power) Knob  P. 6
- 10  (Sound) Button  P. 174
- 11 DISC Button  P. 145
- 12 HDD/AUX Button  P. 149
- 13 AUDIO Button  P. 7
- 14 SKIP Bar  P. 6
- 15 SCAN/A.SEL Bar  P. 6
- 19 INFO Button
- 20 DEST/ROUTE Button  P. 68
- 21 PHONE Button  P. 178
- 22 Interface Dial/ENTER Button  P. 8



23 Microphone

➔ P.22



24 MODE Button


➔ P.175

25 VOL (Volume) Button

➔ P.175

26 CH (Channel) Button

➔ P.176

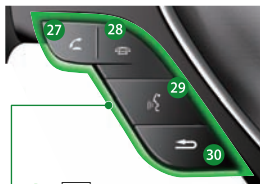


27 (Pick-Up) Button ➔ P.193

28 (Hang-Up) Button ➔ P.193

29 (Talk) Button ➔ P.5


30 (Back) Button


## Voice Control Operation



 1 Press and release the  (Talk) button.



 (Talk Button)

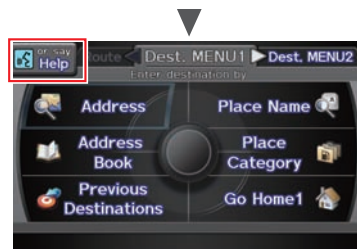A helpful prompt asks what you would like to do. Press and release the  (Talk) button again to bypass this prompt.



The  icon is displayed and the system beeps when ready for a command. Press the  (Back) button to cancel.

Available voice commands are highlighted on the screen.

2 Say a voice command.

Voice Command Index ➔ P.241

The audio system is muted during voice control mode.

Carefully read the usage note for the voice control. **Voice Control System** ➔ P.22



## Voice Help


This navigation system comes with voice help information, which tells you how to use the voice command functions.

Go to Voice Info for tips when using the voice command functions.

1 Press the INFO button.



2 Rotate  to select Voice Info. Press .

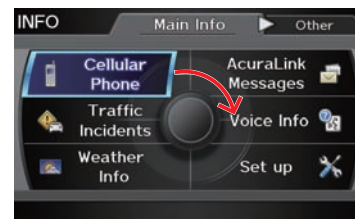


# Audio System

You can play music from a wide array of media sources. You can also control the audio system using voice commands.


 

## Basic Operation


- 1 Press the VOL  knob (Volume/Power) to turn the audio system on or off. 
- 2 Select the audio source. 
- 3 Rotate the VOL  knob (Volume/Power) to adjust the volume. 

## Audio Buttons

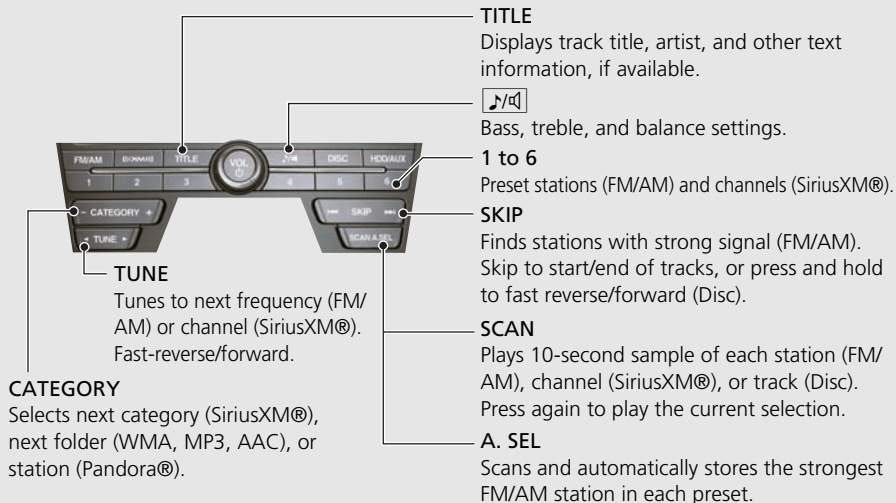


## Loading a Disc

- 1 Press the DISC button. 
- 2 Insert a disc into the disc slot. The disc automatically starts playing. 
- 3 Press the AUDIO button to display the audio screen. 

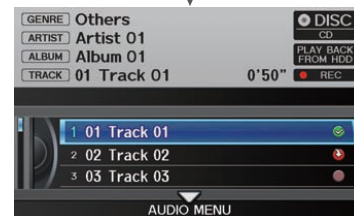


Select an audio source (e.g., FM/AM) to stop the disc.

Press the  (Eject) button to remove the disc. If you eject but do not remove the disc, the disc automatically reloads after a few seconds.

# Audio Control Display

Press the AUDIO button to display the audio system on the navigation screen.

## FM/AM Radio P.136, SiriusXM® Radio P.140

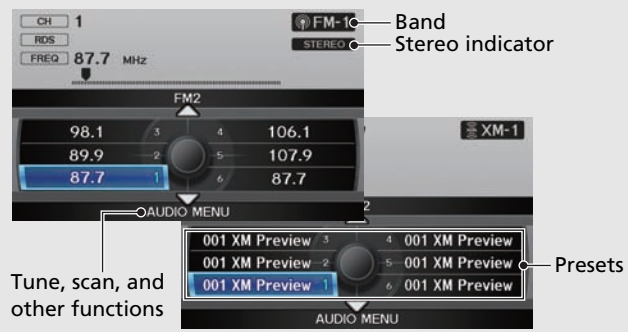

Tune, scan, and other functions

Presets


## Compact Disc P.145



Track list

Repeat, random, scan, and other functions


## Hard Disk Drive (HDD) P.149, iPod® P.159, Pandora® P.164, USB Flash Drive P.168

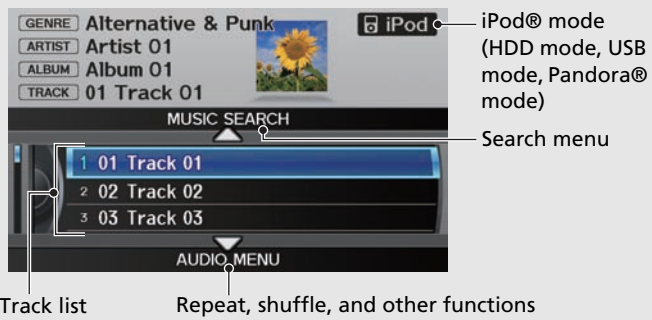

Track list

Repeat, shuffle, and other functions

## Bluetooth® Audio P.172

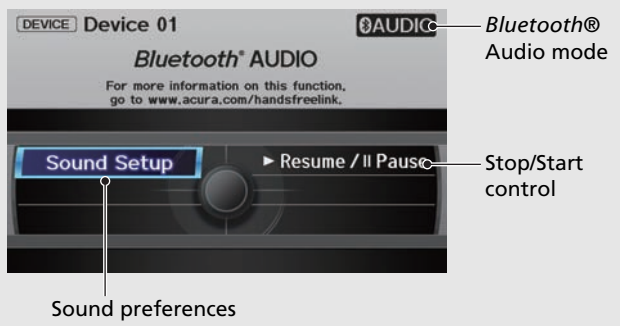

Sound preferences

Stop/Start control

# Interface Dial/ENTER Button Operation

## Rotate dial


**Changes scale**  
Map screens



**Highlights menu options**  
Menu screens



You will see these icons in each chapter.  
They represent how you can operate the Interface Dial.

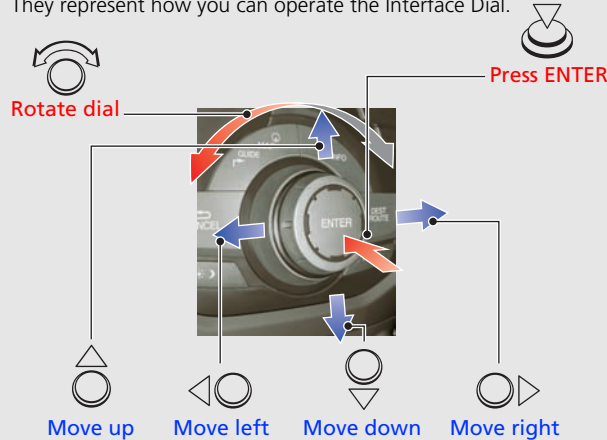

**Move**  
 **up**  **down**  **left**  **right**

**Scrolls map**  
**(8 directions)**  
Map screens




**Selects labeled function**  
Menu screens



## Press ENTER

**Selects function**  
**Selects map icon**  
Map screens

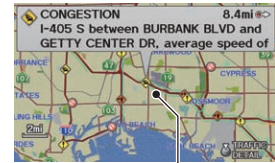

Selecting Icon

 
**Selects highlighted option**  
Menu screens


 
 



# How to Enter Information

You can enter information (e.g., city names, street names, personal names, and business names comprising letters, numbers, and symbols) when prompted on input screens by two different methods.


 

 

## Using Voice Control

When you see  in this manual, voice commands are available for that feature.


- Say the letter, number, or symbol (e.g., say  "A").
- Use spelling assist (e.g., say  "Alpha" to enter the letter "A" or  "Hyphen" to enter a hyphen).
- The system beeps if you say an unavailable (grayed out) letter or number.
- If a voice command is not recognized, a list is displayed with possible options.

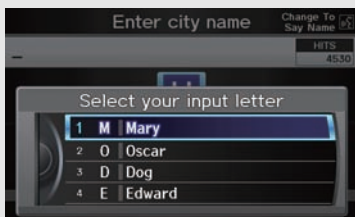


## On list screens:


- Say the number of the list item (e.g., say  "Five" to select item 5).
- Say  "Up" or  "Previous" to scroll up one page.
- Say  "Down" or  "Next" to scroll down one page.



## Using the Interface Dial


Rotate  to highlight a character.


The # (pound symbol) or @ (at symbol) displays symbols.

- Move  to select **OPTION** to display accented and upper/lower case characters.

Press  to enter the highlighted character.

- Move  to select **SPACE** to enter a space character.
- Move  to select **DELETE** to remove the last entered character.

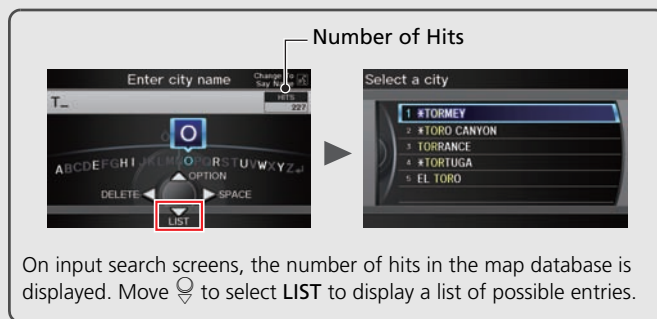

On input search screens, the number of hits in the map database is displayed. Move  to select **LIST** to display a list of possible entries.


## On list screens:

 Scrolling through lists or tabs is limited while the vehicle is moving. **Certain screen functions are limited or inoperable while the vehicle is moving. For these functions, use available voice commands or pull over to proceed.**




# Map Screen Legend


Map orientation **➔ P.107**



GPS signal strength

 

Traffic status indicator **➔ P.118**

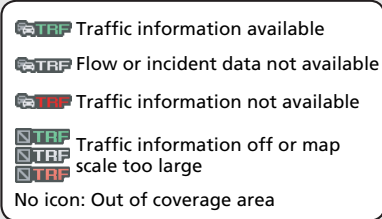


Current map scale

AcuraLink® Message icon **➔ P.200**


Weather warning icon **➔ P.115**

Current vehicle position **➔ P.108**



Feature areas

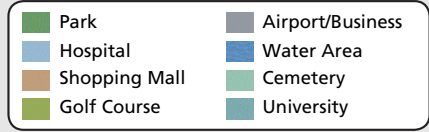

Streets

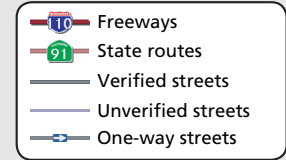


Landmark icons **➔ P.105**

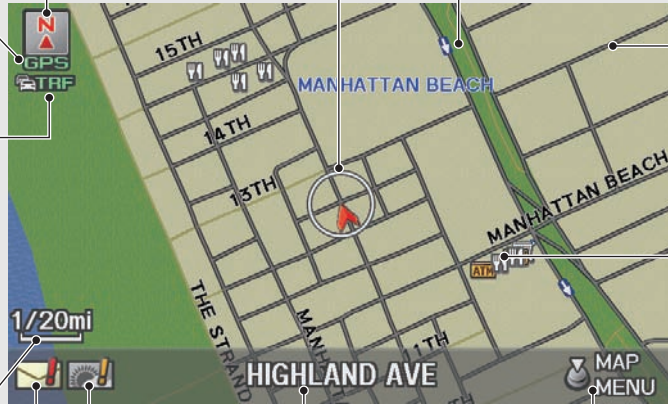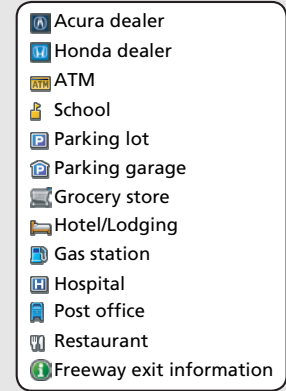

Current street name

 Map menu **➔ P.97**



Map scale **➔ P.110**

# During Route Guidance

During route guidance, route information is displayed on the map screen and guidance screen. Press the MAP/GUIDE button to toggle between the map and guidance screen.

## Map Screen

Off-road tracking  
 ➔ P.95

Destination direction indicator  
 Direction "as the crow flies"

Distance to destination  
 Distance of the actual route.

Estimated time to destination

Calculated route  
 ➔ P.92

Next guidance indicator  
 Distance to the next guidance point.

Calculated route (unverified roads)  
 ➔ P.93

Destination icon  
 ➔ P.91

Waypoint ➔ P.122

## Guidance Screen

Destination direction indicator

Distance to destination  
 9.6 mi  
 0:12 to go

Estimated time to destination

Route progress bar

Route guidance list scroll bar  
 Rotate to scroll the list of guidance points.


Street name of guidance point  
 405 N

Distance to guidance point  
 400ft  
 0ft  
 500  
 1000

No entry icon


## Map Menu

Contains map or routing options.

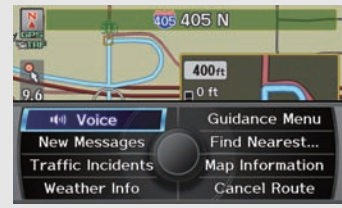

## Day or Night Mode

Press the (Display mode) button to manually switch between day and night mode.

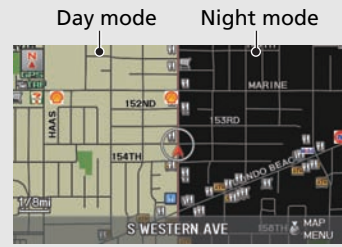



# Navigation—Home Addresses and Going Home


The “Home” feature automatically routes you to your home address from any location simply by selecting Go Home 1 or 2, or saying “Go Home.” You can store two home addresses as Home Address 1 and Home Address 2. P.41

## Storing Your Home Address

- 1 Press the INFO button.



- 2 Rotate to select Set up. Press .

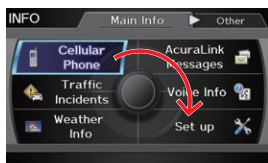


- 3 Rotate to select Personal Information. Press .

- 4 Rotate to select Home Address 1. Press .

- 5 Rotate to select Edit Name. Press .



- 6 Enter a name.

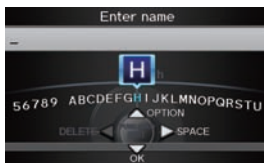

- 7 Rotate to select Edit Address. Press .

- 8 Rotate to select Address. Press .

- 9 Enter an address.

- 10 Rotate to select Edit Phone No. Press .

- 11 Enter a phone number.




- 12 Move to select OK.

## Going Home

- 1 Press the DEST/ROUTE button.



- 2 Rotate to select Go Home 1. Press .

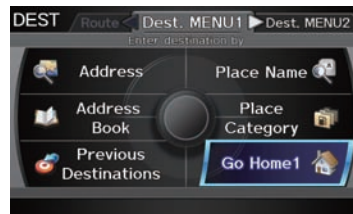


Alternatively, you can say “Go Home” from any screen. Your home address is displayed on the Calculate Route screen.

- 3 Rotate to select OK. Press .

- The following voice commands are available: say “Go Home,” “Go Home 1,” “Go Home 2.”
- If you have two home addresses stored, saying “Go Home” will select Home Address 1.

# Navigation—Entering a Destination



Enter your destination using one of several methods, then follow route guidance on the map or guidance screen to your destination. You can also perform these steps using  voice control.

- 1 Press the DEST/ROUTE button.




- 2 Rotate  to select Address. Press .





- 3 Rotate  to select Street. Press .

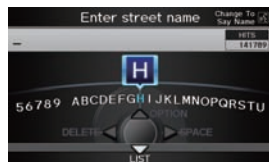


- 4 Enter the name of your destination street.






- 5 Rotate  to select your destination street from the list. Press .






- 6 Enter the street number. Move  to select OK when finished.

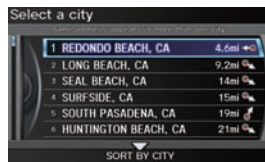


- 7 If there is more than one city with the specified street, a list of cities is displayed. Rotate  to select the desired city from the list. Press .



- 8 Rotate  to select OK. Press . Route guidance to the destination begins.

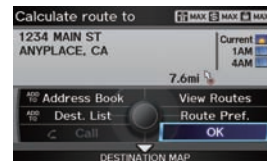

- **View Routes:** Choose one of three routes.

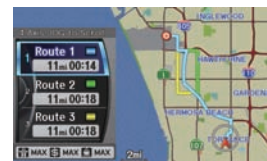

- **Route Pref.:** Choose MAX or MIN for the three settings.







# Navigation—Changing Route or Destination

You can alter your route by adding waypoints to visit, adding streets to avoid, or changing your destination during route guidance.

## Adding a Waypoint (“Pit Stop”)


You can add up to four waypoints along your route. ➔ P.122

- 1 Press the DEST/ROUTE button.
- 2 Rotate  to select **Waypoint**. Press .

- 3 Rotate  to select location and search method. Press .

 
 
 




- **SEARCH AROUND:** Search around a location.
- **SEARCH ALONG:** Search between two locations.

- 4 Select the icon category and location to add to the Destination List when prompted.
- 5 Move  to select **OK**.



## Changing Your Destination

There are four methods you can use to specify a new destination during route guidance.

- Say  “Find Nearest...” ➔ P.127  
Searches for the nearest place/landmark on the map screen (e.g.,  “Find nearest gas station”).
- Say  “Go Home” ➔ P.12  
Routes to your home address.
- Selecting an icon on the map ➔ P.128  
Scroll the map to position the cursor over a place/landmark icon or a new area on the map. Press  twice.
- Entering a new destination ➔ P.129  
Press the DEST/ROUTE button. Move  to select **Dest.MENU1/2** and enter a new destination.


## Canceling Your Route



- 1 Press the DEST/ROUTE button.


- 2 Rotate  to select **Cancel Route**. Press .



From the map screen:

- 1 Press  to select **MAP MENU**.

- 2 Rotate  to select **Cancel Route**. Press .

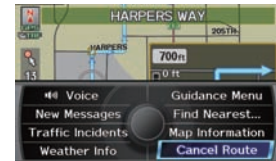


# AcuraLink®

## AcuraLink® Messages ➔ P.199


AcuraLink® provides a direct communication link between you and Acura. It sends and receives several kinds of messages through SiriusXM® Radio, including:

- Vehicle feature guide
- Operating quick tips
- Safety and maintenance information
- Diagnostic information
- Dealer appointment and maintenance reminders

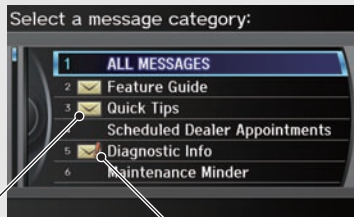

Unread message      Important message

### Example of an AcuraLink® Message

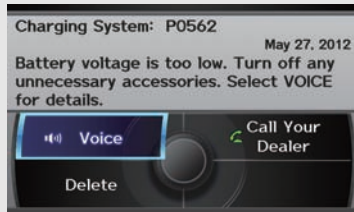

If you have linked your cell phone to Bluetooth® HandsFreeLink®, you can contact your Acura dealer from this screen.

## AcuraLink Real-Time Traffic™

Displays continuously updated traffic information and recalculates your route in response to traffic flow, incidents, or road closures. ➔ P.118

Traffic incident icons

- Congestion
- Incident
- Weather
- Construction
- Road Closed



Traffic flow indicator


- Heavy (approx.)  
surface: 0 to 20 mph  
freeway: 0 to 24 mph
- Moderate (approx.)  
surface: 21 to 30 mph  
freeway: 25 to 52 mph
- Free-flow (approx.)  
surface: 31+ mph  
freeway: 53+ mph

## AcuraLink Real-Time Weather™

Displays continuously updated weather information and weather forecasts, and provides weather warnings along your route. ➔ P.113

Color index

- Tornado
- Hurricane
- Storm
- Flood
- Snow/Freeze
- Wind
- Heat
- Other
- Rain
- Freezing rain
- Snow

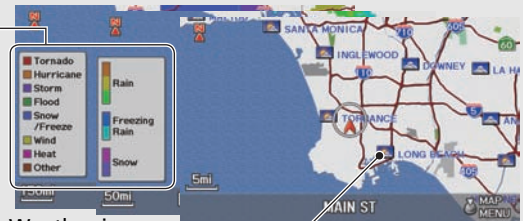

Weather icons

- or Clear
- or Partly cloudy
- Cloudy
- Fog
- Rain
- Freezing rain
- Snow
- Possibility of lightning (e.g., rain and lightning)
- Possibility of high winds (e.g., rain and wind)

**NOTE** AcuraLink Real-Time Traffic and Weather are fee-based subscription services, with a complimentary 90-day trial upon first retail purchase.

# Troubleshooting

For more Information  P. 215



Why does the vehicle position icon on the map “lag” a short distance behind my actual position, especially at intersections?



This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal.



Why does the “time to destination” display sometimes increase even though I am getting closer to my destination?




The “time to destination” is based on your actual road speed and traffic conditions to give you a better estimate of arrival time.



Why does my clock frequently change the time forward and backward by one hour?



The clock setting is automatically updated based on your GPS location. If you normally drive between two time zones, the clock may keep adjusting the time. You can turn this feature off.

 **Clock Adjustment** P. 57



How do I specify a destination when an entered city or street could not be found?



 

 


Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.



How do I turn on the navigation system voice guidance?





1. Press the INFO button. Rotate  to select **Set up** and press . Check that **Volume** is not set to **OFF**.
2. Move  to select **Other**, rotate  to select **Basic Settings**, and press . Set **Voice Recognition Tutor** to **ON** if you want the system to provide confirmations and system prompts.



My battery was disconnected or went dead, and the navigation system is asking for a code. Where do I find it?



In most cases, you do not need to enter a code. Simply press and hold the VOL  (Volume/Power) button for two seconds; the system should reactivate.

 **System Initialization** P. 228

# How to Use This Manual

This section explains different methods on how you can easily find information in this manual.



## Searching the Table of Contents

➔ P.1

Two types of Tables of Contents help you find your desired information.

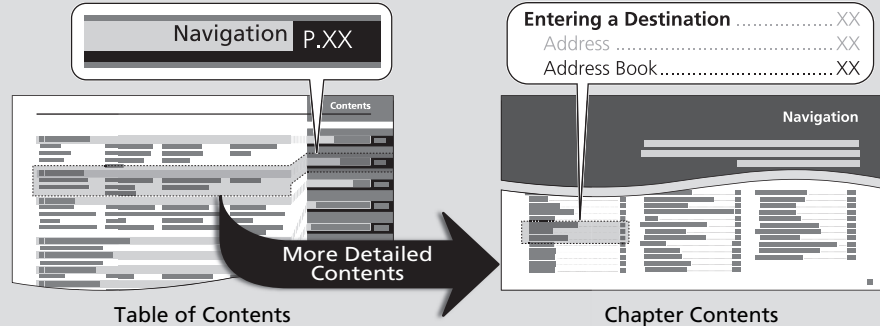


Table of Contents

First, find the general chapter related to what you are looking for (e.g., entering a destination from the Address Book). Then, go to that chapter to view a more specific table of contents.

Chapter Contents


This more detailed table of contents shows you exactly what information is listed by section and title.




## Searching the Index

➔ P.253

Menu items displayed on the navigation screen (e.g., Address Book) can be found individually in the Index.

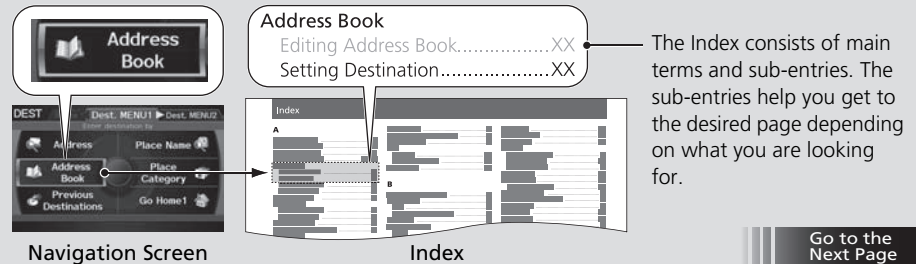

Go to the Next Page

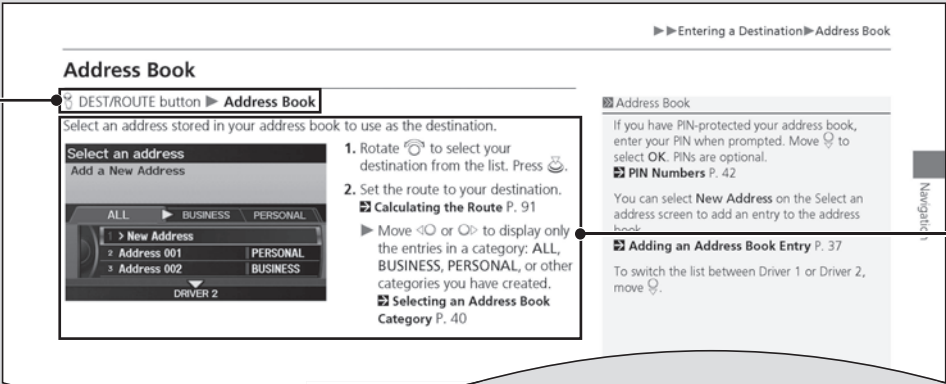

After following the menu tree, step-by-step instructions explain how to achieve the desired result.

## Menu Tree

The menu tree helps guide you through the system's menu options. To get to your desired function, follow the menu tree in order of the steps shown.

**NOTE:**  
All menu options can also be activated with voice commands.

### DEST/ROUTE button > Address Book





Press the hard button on the system control panel.

Press the DEST/ROUTE button.



Select the menu option with the Interface Dial.

Rotate  to select Address Book. Press .

Sample pages and images in this section may differ from the actual ones.

# System Setup


This section describes the start-up procedure and the navigation and setup functions.



<b>Start-up</b> .....	20	PIN Numbers .....	42	Resetting the Clock Settings .....	58
<b>Voice Control System</b> .....	22	Previous Destinations .....	43	<b>Vehicle</b> .....	59
Command Input .....	22	<b>Music Search Setup</b> .....	44	Off-road Tracking .....	60
Voice Recognition .....	23	Song By Voice™ (SBV) .....	45	Correct Vehicle Position .....	61
<b>Interface Settings</b> .....	24	Phonetic Modification .....	46	<b>AcuraLink®</b> .....	62
Display and Volume Settings .....	24	<b>Routing &amp; Guidance</b> .....	48	AcuraLink/Messages .....	62
Interface Dial Feedback .....	25	Rerouting .....	49	<b>Traffic and Weather Status</b> .....	63
Basic Settings .....	26	Unverified Area Routing .....	50	<b>Data Reset</b> .....	64
Color .....	27	Traffic Rerouting .....	52	Reset Factory Default Settings .....	64
Language .....	31	Edit Avoid Area .....	53	Clear Personal Data .....	65
Wallpapers Setting .....	32	Edit Waypoint Search Area .....	55		
<b>Personal Information</b> .....	36	Street Name Guidance .....	56		
Address Book .....	37	<b>Clock Adjustment</b> .....	57		
Home Addresses .....	41	Adjust Time .....	58		



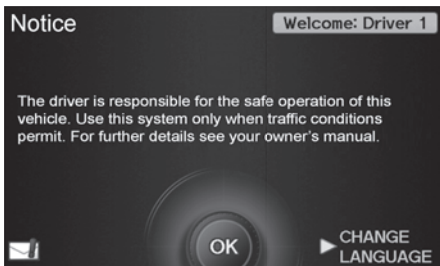


The navigation system starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following Confirmation screen is displayed.




The following options are available:

- **Remind Later:** Displays the reminder again next time you start the vehicle.
- **OK:** Turns the reminder off.

1. Press  to select **OK**.
  - ▶ Your current position is displayed on the map screen.
  - ▶ If you have set any calendar event reminders, they are displayed. Proceed to step 2.

2. Rotate  to select an option. Press .
  - ▶ Your current position is displayed on the map screen.


## Start-up

 If the navigation system loses power at any time, you may need to press and hold the VOL  (Volume/Power) button for more than two seconds, or you may be prompted for the five-digit security code.

▶ **System Initialization** P. 228

At start-up, the driver's fob key is automatically detected and the address book settings, setup preferences, wallpapers, and audio settings for that driver (e.g., Driver 1) are loaded.


### AcuraLink® Message Icon

If you have any unread messages, the  (AcuraLink® message) icon is displayed at the bottom left side of the screen.

▶ **AcuraLink® Messages** P. 200

You can change the system language at any time.

▶ **Language** P. 31

"OK" on the Confirmation screen cannot be selected by using a voice command. If you do not press  within 30 seconds, the screen goes blank (or displays your wallpaper screen and you cannot use voice commands). Press any navigation or voice control button to continue.

▶ **Wallpapers Setting** P. 32

You can set a calendar event reminder.


▶ **Calendar** P. 206

### Remind Later

You can skip the reminder by pressing the CANCEL button.

## ■ Limitations for Manual Operation



Disabled option

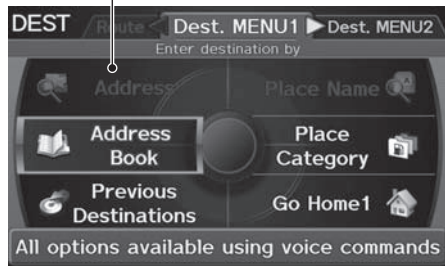

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Voice commands are still operable while the vehicle is in motion.

 Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions. You can also control the audio and climate control system, and make and receive phone calls using *Bluetooth*® HandsFreeLink®.

The voice control system uses the  (Talk) and  (Back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

A “Voice Info” feature provides a tutorial that explains how to use the voice control system.

 **Voice Help** P. 5

## Command Input


If the system does not understand a command or you wait too long to give a command, the system asks you to repeat the command.

When you give a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, listening to the feedback will help familiarize you with the way the system expects commands to be phrased.


 
 **Basic Settings** P. 26

If the system cannot perform a command or the command is not appropriate for the screen you are on, the system beeps.

On character input screens, a list of possible characters is displayed if the system does not recognize your command.

You can find out which voice commands are available for a particular screen using the  Help command. The system will display and read the list of available commands to you.

### (Talk) Button

When you press the  (Talk) button, a helpful prompt asks what you would like to do. Press and release the  (Talk) button again to bypass this prompt and give a command.

### Command Input

The audio system is muted while using the voice control system.

## Voice Recognition

---

To achieve optimum voice recognition when using either the navigation voice control system or *Bluetooth*® HandsFreeLink®:

- Make sure the correct screen is displayed for the voice command that you are using.  
    ▶ **Voice Commands** P. 242
- Close the windows and moonroof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a clear, natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.
- Refer to the Voice Info tutorial.  
    ▶ **Voice Help** P. 5

### ▶ Voice Recognition





The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

## Display and Volume Settings

INFO button ► **Set up**

Use the Main Setup screen to adjust the display and volume.



1. Rotate  to select an item. Press .
2. Rotate  to make the adjustment. Press .

The following items are available:

- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.
- **Volume:** Adjusts the navigation system volume level.

### Display and Volume Settings

You can set separate daytime and nighttime settings for **Brightness**, **Contrast**, and **Black Level**. Adjust each setting when the display is in either daytime or nighttime mode.

You can set the display and volume settings using voice commands.

► **Main Setup Screen Commands** P. 248

#### Volume



If you set **Volume** to **OFF**, you will not hear route guidance or voice command confirmations. If you then select **Voice** in the Map Menu, you will hear route guidance at the default volume.

## Interface Dial Feedback

🔔 INFO button ▶ **Set up** ▶ **Interface Dial Feedback**

Set if and when the system reads aloud a selection made using the Interface Dial.



Rotate  to select an option. Press .

The following options are available:

- **ON:** Always reads the selection.
- **AUTO** (factory default): Reads the selection only when the vehicle is moving.
- **OFF:** Disables the feature.

### ▶▶ Interface Dial Feedback

You can use this feature to minimize the need to look at the screen while operating the Interface Dial.

You can set the interface dial feedback settings using voice commands on the Setup screen.

▶ **Main Setup Screen Commands** P. 248

## Basic Settings

🔔 INFO button ▶ **Set up** ▶ **Other** ▶ **Basic Settings**

Set the map units to either miles or kilometers, and control the voice feedback from the navigation system.



Rotate  to select an item. Press .


The following items are available:

- **Units:** Sets the map units to either miles (factory default) or kilometers.
- **Voice Recognition Tutor:** Turns the voice feedback feature on or off.
  - ON (factory default): Provides voice control system confirmation or prompts.
  - OFF: Disables the feature.
- **Display Voice Command Tips:** Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.
  - ON (factory default): Displays a message reminding you to use voice commands.
  - OFF: Disables the message. Inoperable items are still grayed out on the screen.
- **Verbal Reminder:** Turns the verbal reminders on or off.
  - ON (factory default): Provides warning voice messages when:
    - Driving with the parking brake on.
    - Driving without wearing the driver and/or passenger seat belt.
  - OFF: Disables the feature.

## Color

INFO button ▶ **Set up** ▶ **Other** ▶ **Color**

Choose the color of the navigation map and system menus.

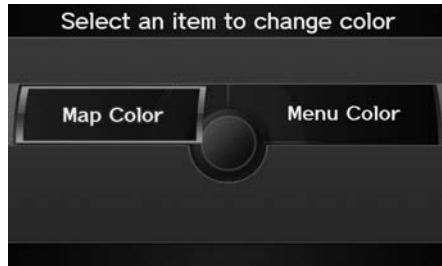

Rotate  to select an item. Press .

The following items are available:

- **Map Color:** Sets the color of the map screen.  
▶ **Map Color** P. 28
- **Menu Color:** Sets the color of the menu screens.  
▶ **Menu Color** P. 28







## ■ Map Color

INFO button ▶ **Set up** ▶ **Other** ▶ **Color** ▶ **Map Color**

Set separate map colors for Day and Night modes.




1. Rotate  to select **Day** or **Night**. Press .
2. Rotate  to select a color for the map screen. Press .

## ■ Menu Color

INFO button ▶ **Set up** ▶ **Other** ▶ **Color** ▶ **Menu Color**

Set separate menu colors for Day and Night modes.



1. Rotate  to select **Day** or **Night**. Press .
2. Rotate  to select a color for the menu screens. Press .

## ▣ Map Color

### For Day mode

The factory default is set to **BEIGE**.

### For Night mode

The factory default is set to **BLACK**.

## ▣ Menu Color


### For Day mode

The factory default is set to **WHITE**.





### For Night mode

The factory default is set to **BLACK**.

## ■ Switching Display Mode Manually

Set the screen brightness separately for Day and Night modes. Press the  (Display mode) button to cycle through the display modes (Day to Night to Off).



1. Press the  button.
  - ▶ The Brightness bar is displayed for a few seconds.
  - ▶ Rotate  to adjust the brightness. Press .
2. Press the  button again.
  - ▶ Repeat the procedure to switch the display modes.


 

## ☒ Switching Display Mode Manually

A visual guide helps you see the difference between Day and Night modes.

☒ **Day or Night Mode** P. 11

### Recommended Settings

- Select mid-range for the dash illumination.
- Select **WHITE** for the map Day display and **BLACK** for the map Night display.



Illumination control	Priority	Operation
 button	1	Selects Day, Night, or Off display mode. This button has the highest priority and overrides all other display control adjustments listed below. <b>Remember:</b> Once you press this button, you assume full manual control of the display mode until the power mode is set to VEHICLE OFF (LOCK).
Sunlight sensor (see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides the Night display and displays the Day display mode. <b>Remember:</b> If desired, use the  button to override this automatic choice.
Dash illumination adjustment buttons (see your Owner's Manual for location)	3	When headlights are turned on, and you wish to have the Day display mode, adjust the illumination to the full brightness setting (beeps). <b>Remember:</b> Adjust the dash brightness back to mid-range to allow auto switching by sensing the headlights are on or off.
Headlights (Auto/On/Off)	4	When turned on, the display changes to Night display mode. The previous three controls listed above can "cancel" this function. <b>Remember:</b> Use the  button, or adjust the dash illumination to full brightness, to set the display to your desired choice.
Screen color choice	N/A	The user can select the color of the screen that will be displayed for the Day and Night display modes described above. <b>Remember:</b> The factory default is set to beige for Day and black for Night.

## Language

INFO button ▶ **Set up** ▶ **Other** ▶ **Language**

Set the system language used on all screens. You can choose from three languages: **English**, **Français** (French), **Español** (Spanish).



Rotate  to select the system language. Press .

### Language

Voice confirmation of cities and streets only occurs when **English** is the system language.

When **Français** or **Español** is selected, some messages continue to be displayed in English.

## Wallpapers Setting

INFO button ▶ **Set up** ▶ **Other** ▶ **Wallpapers Setting**

Select, delete, and import wallpaper pictures for display on the screen.





Rotate  to select an item. Press .




The following items are available:

- **Select wallpaper picture:** Sets the desired picture for the wallpaper.  
    ▶ **Selecting a Wallpaper Picture** P. 33
- **Delete pictures on HDD:** Deletes pictures on the Hard Disc Drive.  
    ▶ **Deleting Pictures from HDD** P. 35
- **Import pictures from USB:** Stores pictures on the Hard Disc Drive.  
    ▶ **Importing Pictures from USB** P. 34

## ■ Selecting a Wallpaper Picture

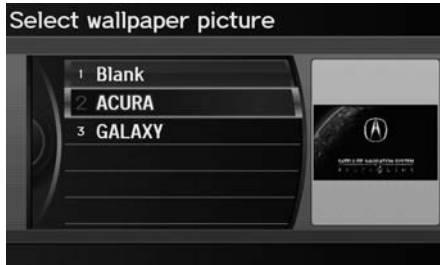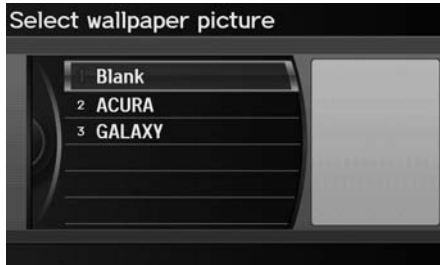INFO button ▶ **Set up** ▶ **Other** ▶ **Wallpapers Setting** ▶ **Select wallpaper picture**




1. Rotate  to select a picture.
  - ▶ The picture is displayed on the screen.
  - ▶ Alternatively, rotate  to select **Blank** to disable the wallpaper picture setting.
2. Press  to set the wallpaper image.

## ☒ Selecting a Wallpaper Picture

Two images are provided for the HDD as a factory default.

## ■ Importing Pictures from USB

INFO button ▶ **Set up** ▶ **Other** ▶ **Wallpapers Setting** ▶ **Import pictures from USB**

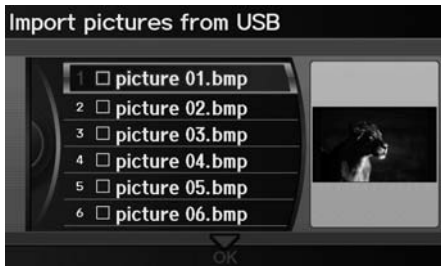

1. Connect a USB flash drive containing pictures.
2. Rotate  to select a picture to upload. Press .
  - ▶ Repeat the procedure to upload more pictures.
3. Move  to select OK.

## ▣ Importing Pictures from USB

You can only import pictures when the vehicle is in Park.

You can connect a USB flash drive using the USB adapter cable in the console compartment.

**▣ Connecting a USB Flash Drive** P. 168

You can only import pictures from the root directory. Pictures in folders cannot be imported.

The display size is a fixed 800 × 480 pixels. Smaller pictures are displayed against a black background. Larger pictures are scaled down without changing the aspect ratio.

Ten pictures (in BMP or JPEG format) can be saved to the HDD for Driver 1 and Driver 2 each.

Incompatible data formats or pictures greater than 6 MB cannot be uploaded.

Pictures with a file name longer than 221 characters cannot be uploaded.

If you attempt to upload a picture with the same name as an existing picture, a pop-up screen asks if you want to overwrite the existing picture file.

## ■ Deleting Pictures from HDD

🔍 INFO button ▶ **Set up** ▶ **Other** ▶ **Wallpapers Setting** ▶ **Delete pictures on HDD**



Trash icon

1. Rotate 🔄 to select a picture. Press 🗑️.  
 ▶ The picture is displayed on the screen.  
 ▶ Repeat the procedure to delete other pictures.  
 ▶ Items to be deleted are indicated with a trash icon.
2. Move 📁 to select OK.
3. Rotate 🔄 to select Yes. Press 🗑️ to delete the picture(s).

## ☒ Deleting Pictures from HDD

If there are no pictures on the HDD, “No Entries Exist” is displayed.


You can only delete pictures when the vehicle is in Park.

You can only delete pictures that have been fully uploaded from a USB flash drive.





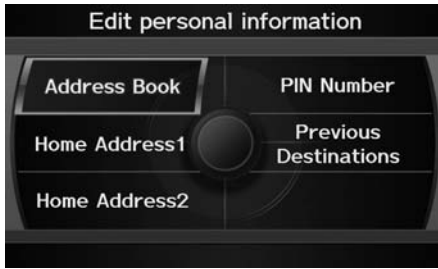


INFO button ► **Set up** ► **Personal Information**


Use the personal information menu to select and set your address books, home addresses, and PINs. You can also delete unwanted destinations from the list of previously routed destinations.



Rotate  to select an item. Press .

The following items are available:

- **Address Book:** Stores new addresses or edits your address book.  
     **Address Book** P. 37
- **Home Address 1:** Sets or edits your home address.  
     **Home Addresses** P. 41
- **Home Address 2:** Sets or edits another home address.  
     **Home Addresses** P. 41
- **PIN Number:** Sets or changes your PIN.  
     **PIN Numbers** P. 42
- **Previous Destinations:** Deletes the destination history.  
     **Previous Destinations** P. 43

 **Personal Information**

Personal information cannot be backed up or moved to another navigation system.

# Address Book

INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Address Book**

Store up to 200 address entries in two address books (Driver 1 and Driver 2). You can add, edit, and delete information in the address books.



Move to change the user address book (**DRIVER 1** or **DRIVER 2**).

Move or to display only the addresses in the selected category.

## Address Book

The number of addresses is shared by the two address books. For example, if Driver 1 has 150 addresses, Driver 2 can only have 50.

If you have PIN-protected your address book, enter your PIN when prompted. Move to select **OK**. PINs are optional.

**PIN Numbers** P. 42

Any address book categories you create are also displayed on the Select an Address screen.

**Selecting an Address Book Category** P. 40

## Adding an Address Book Entry

If you do not give the address a name, one is automatically assigned (e.g., Address 001). You can re-enter, edit, or make changes to any entry. "Address" is the only required field.

## Adding an Address Book Entry

INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Address Book**



This section explains how to enter the name and address.



1. Rotate to select **New Address**. Press .

Continued






2. Rotate  to select an item. Press .



The following items are available:



- **Edit Name:** Edits the name of the entry.
- **Edit Address:** Edits the address of the entry.
- **Edit Phone No.:** Edits the phone number of the entry.
- **Edit Category:** Specifies the category of the entry.
- **Delete:** Deletes the entry.



3. Rotate  to select **Edit Name**. Press .

4. Enter a name or title. Move  to select **OK**.

5. Rotate  to select **Edit Address**. Press .

6. Rotate  to select an item for specifying the address. Press .

The following items are available:

- **Current Position:** Select your current location.
- **Address:** Enter an address on the character input screen when prompted.  
➤ Address P. 70
- **Previous Destinations:** Select a previous destination.  
➤ Previous Destinations P. 76
- **Place Name:** Enter the name of a place/landmark.  
➤ Place Name P. 77
- **Place Category:** Select a category to search for a place/landmark (e.g., Banking, Lodging).  
➤ Place Category P. 80
- **Place Phone No.:** Enter the phone number of a place/landmark.  
➤ Place Phone Number P. 84

### ■ Editing an Address Book Entry

🔔 INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Address Book**



1. Rotate to select the address to edit. Press .
2. Enter the name, address, phone number, and category fields.  
➤ Adding an Address Book Entry P. 37
3. Move to select OK.

#### ➤ Adding an Address Book Entry

When you use **Place Name** or **Place Category**, the phone number is automatically entered.

You can also add a phone number and category.


#### ➤ Editing an Address Book Entry

The entered contents are displayed on the Edit address screen.

Continued

## ■ Selecting an Address Book Category

🔍 INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Address Book**

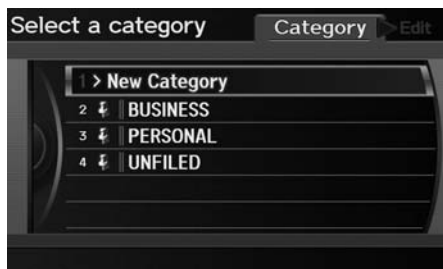

1. Rotate to select an address. Press .
2. Rotate to select **Edit Category**. Press .
3. Rotate to select **BUSINESS**, **PERSONAL**, or a category you created. Press .

## ■ Creating a New Category

1. Rotate to select **New Category**. Press .
2. Enter a name and select an icon when prompted.
  - ▶ The created category is displayed in the list of categories.

## ■ Deleting or Editing a Category

1. Move to select **Edit**.
2. Rotate to select **Delete** or **Edit Category**. Press .
3. Delete an existing category, or change the name and icon.
  - ▶ The selected category to delete is indicated with a trash icon. Move to select **OK**.


## ▣ Selecting an Address Book Category

You can have up to 100 categories (including "UNFILED"). These categories can be shared with Driver 1 and Driver 2. For example, if Driver 1 creates some categories, Driver 2 can also use them.

If you delete a category that is used by other addresses, the category type for those addresses changes to "UNFILED."

### Category Icons

The following icons can be selected for a category:

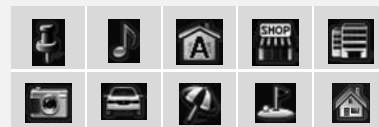

## ■ Deleting an Address Book Entry

INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Address Book**



1. Rotate to select the address to delete. Press .
2. Rotate to select **Delete**. Press .
3. Rotate to select **Yes**. Press to delete the address.

## ▣ Deleting an Address Book Entry

When you transfer the vehicle to a third party, delete all address book entries.

## Home Addresses

INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Home Address 1** or **Home Address 2**

Set two home addresses that you frequently use.



1. Edit the name, address, and phone number the same way as an address in the address book. **▣ Adding an Address Book Entry** P. 37
2. Move to select **OK**.

## ▣ Home Addresses

If you have PIN-protected your home addresses, enter your PIN when prompted. Move to select **OK**. PINs are optional.

**▣ PIN Numbers** P. 42

If your home street is not in the system database, park on the nearest verified street to your home. When entering the "Address" field, rotate to select **Current Position** to use your current location as the home address and press .

You can delete a home address if necessary. Rotate to select **Delete**. Press . Rotate to select **Yes**. Press .

When you transfer the vehicle to a third party, delete all home addresses.



The home icon is shown on the map screen on the 1/20 and 1/8 mile scales.

## PIN Numbers

📍 INFO button ▶ **Set up** ▶ **Personal Information** ▶ **PIN Number**

Set a four-digit PIN for protecting personal addresses and your home addresses. Once you set a PIN, you are prompted to enter it whenever you access a personal address or a home address.



1. Rotate  to select the PIN to create. Press .



2. Rotate  to select a digit to enter. Press . Repeat to enter a new four-digit PIN.

3. Re-enter the new PIN, when prompted, to confirm the number you just entered.

▶ If you have not entered the same number both times, an "INCORRECT PIN" message is displayed. Enter your PIN again.

### 📄 PIN Numbers

#### **PIN**

 
Personal Identification Number (PIN) is a password used to access personal data.

PINs are optional. If you choose to use a PIN, keep a note of the number in a secure location. If you forget your PIN, a dealer will have to reset the navigation system and all of your stored information will be erased. The factory default is no PIN.

#### **Go Home PIN**

Go Home PINs are shared with Driver 1 and Driver 2. If either Driver 1 or Driver 2 sets a Go Home PIN, both of them need to enter the PIN when:


- selecting **Go Home** for a destination
- selecting **Home Address** for editing

If you want to stop using a PIN, move  to select **DO NOT USE PIN**.

## Previous Destinations

📍 INFO button ▶ **Set up** ▶ **Personal Information** ▶ **Previous Destinations**

The navigation system maintains a list of your previously routed destinations as a shortcut for entering the same destination in the future. You can delete some or all of your previous destinations from the list.

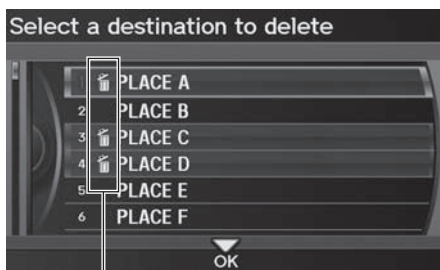

Trash icon

1. Rotate 🔄 to select the destination to delete. Press 📍.
  - ▶ Repeat the procedure as necessary.
  - ▶ Items to be deleted are indicated with a trash icon.
  
2. Move 📍 to select **OK** to delete the selected destinations.

### 📄 Previous Destinations

Up to 50 destinations can be stored.

The list of previous destinations is shared with Driver 1 and Driver 2. For example, if Driver 1 deletes some previous destinations, they are deleted for Driver 2 as well.

To cancel the selection of a previous destination, rotate 🔄 to highlight the destination again. Press 📍 to de-select it.



 AUDIO button (in iPod® mode) ► **AUDIO MENU** ► **Music Search Setup**

Use this feature to set up the music search abilities when using Song By Voice™ (SBV) commands.



Rotate  to select an item. Press .

The following items are available:


- **Song By Voice:** Turns the feature on or off.
  - **Song By Voice™ (SBV)** P. 45
- **Phonetic Modification:** Changes the phonetic (song name, artist name, etc.) so that they are more easily recognized through voice commands.
  - **Phonetic Modification** P. 46

## Music Search Setup

You can also display the Music Search Setup items in the DISC (music CD) or HDD mode. Select **HDD Setup** in **AUDIO MENU**.



This feature is only available when the system language is set to **English**.

## Song By Voice™ (SBV)

 AUDIO button (in iPod® mode) ▶ **AUDIO MENU** ▶ **Music Search Setup** ▶ **Song By Voice**

Use SBV to search for and play music from your HDD or iPod® using voice commands. Use this setting to enable SBV.



Rotate  to select an option. Press .

The following options are available:

- **ON** (factory default): Song By Voice commands are available.
  - ▶ **Searching for Music Using Song By Voice™ (SBV)** P. 163
- **OFF**: Disable the feature.

### ▶▶ Song By Voice™ (SBV)

You can also display the Music Search Setup items in the DISC (music CD) or HDD mode. Select **HDD Setup** in **AUDIO MENU**.

This feature is only available when the system language is set to **English**.

## Phonetic Modification



 AUDIO button (in iPod® mode) ▶ **AUDIO MENU** ▶ **Music Search Setup** ▶ **Phonetic Modification**

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the HDD or iPod®.



1. Rotate  to select **New Modification**. Press .



2. Rotate  to select the media source (**HDD** or **iPod**). Press .

### Phonetic Modification

You can also display the Music Search Setup items in the DISC (music CD) or HDD mode. Select **HDD Setup** in **AUDIO MENU**.

**Phonetic Modification** is grayed out when **Song By Voice** is set to **OFF**.





This feature is only available when the system language is set to **English**.

You can store up to 2000 phonetic modification items.







SBV may not be able to recognize languages other than English. The Phonetic Modification feature is helpful in the following situations:

- The music information cannot be identified using Gracenote®.
- The phonetics are in languages other than English.





3. Rotate  to select the item to modify (e.g., **Artist**). Press .
4. Rotate  to select an entry (e.g., "No Name"). Press .



5. Rotate  to select **Edit**. Press .
  - ▶ Rotate  to select **Play** to listen to the phonetic modification. Press .
  - ▶ Rotate  to select **OK** and press  when finished.

6. Enter the phonetic spelling you wish to use (e.g., "Artist A") when prompted.



7. Move  to select **OK** to exit.
  - ▶ The artist "No Name" is phonetically modified to "Artist A." When in SBV mode, you can use the voice command  "Play Artist 'Artist A'" to play songs by the artist "No Name."

INFO button ► **Set up** ► **Other** ► **Routing & Guidance**

Choose various settings that determine the navigation system functionality during route guidance.



Rotate  to select an item. Press .

The following items are available:

- **Rerouting:** Sets the route recalculation to automatic or manual mode.  
➤ **Rerouting** P. 49
- **Unverified Area Routing:** Sets whether you use the route guidance in unverified areas.  
➤ **Unverified Area Routing** P. 50
- **Traffic Rerouting:** Sets whether you use automatic recalculation based on traffic information.  
➤ **Traffic Rerouting** P. 52
- **Edit Avoid Area:** Specifies areas to avoid when calculating a route.  
➤ **Edit Avoid Area** P. 53
- **Edit Waypoint Search Area:** Sets the distance from the route to find waypoints.  
➤ **Edit Waypoint Search Area** P. 55
- **Guidance Mode:** Sets whether to display only the map screen or a split map-guidance screen.  
➤ **Guidance Mode** P. 102

- **Street Name Guidance:** Sets whether to read out the street names during voice guidance.  
 ◻ **Street Name Guidance** P. 56

## Rerouting

🗺️ INFO button ► **Set up** ► **Other** ► **Routing & Guidance** ► **Rerouting**

Set whether route recalculation occurs automatically or manually during route guidance.



Rotate 🔄 to select an option. Press 🗺️.

The following options are available:

- **AUTOMATIC** (factory default): The system calculates a new route automatically when you deviate from the route. It is strongly recommended that you leave the system set to Automatic.
- **MANUAL:** Disables route recalculation. The system beeps and “Off Route” is displayed when you deviate from the route.

### ◻ Rerouting

If you live in an area with poor mapping, you may wish to set **Rerouting** to **MANUAL** to avoid constant recalculation. You will need to select **Recalculation** manually to make the system recalculate your new route.

## Unverified Area Routing

INFO button ▶ Set up ▶ Other ▶ Routing & Guidance ▶ Unverified Area Routing

Receive turn-by-turn map and voice guidance in unverified areas.



Rotate to select ON or OFF. Press .

Differences	OFF	ON (factory default)
ON or OFF?	The driver wishes to manually navigate using the navigation map and choose the streets that lead to the destination.	The driver chooses to let the navigation system suggest possible routing, knowing that the guidance may not be accurate.
Route calculation	Route is usually longer, using verified roads whenever possible.	Route is shorter, but uses unverified (purple) streets that may not be accurate.
Route line	A blue dotted vector line is displayed on the map that continually points to your destination.	A blue-pink dashed route line highlights suggested unverified streets on the map while traveling to your destination.
Cautionary messages	Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions.	Cautionary pop-up screens and voice announcements remind you to exercise additional caution and obey all traffic restrictions.

### Unverified Area Routing


Unverified roads are found in rural areas, and typically include residential streets away from the center of a town. They may not be accurate, and can contain errors in location, naming, and address range.

Unverified roads are shown only when viewing the map in the 1/20, 1/8, or 1/4 mile map scales.

Vector line (dotted)



Blue-pink route line

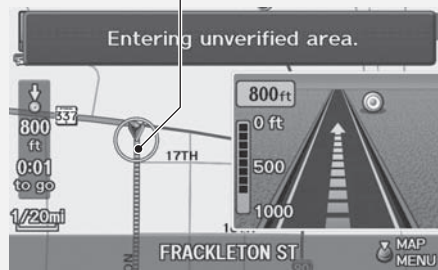

Differences	OFF	ON (factory default)
Guidance (map/voice)	There is no turn-by-turn map or voice guidance.	Voice guidance commands end with the phrase “if possible” to remind you to verify all traffic restrictions.
Directions list	A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.	A direction list is provided showing street names and turn symbols in pink.





## Traffic Rerouting

📍 INFO button ▶ **Set up** ▶ **Other** ▶ **Routing & Guidance** ▶ **Traffic Rerouting**

A faster route can be calculated based on continuously updated traffic information.

➤ **Traffic Rerouting™** P. 118



Rotate  to select an option. Press .

The following options are available:

- **ON**: The system reroutes automatically based on traffic information.
- **OFF** (factory default): Disables the feature.

### ☒ Traffic Rerouting

**Traffic Rerouting** requires an AcuraLink Real-Time Traffic™ subscription.

➤ **AcuraLink Real-Time Traffic™** P. 15


➤ **Subscribing to SiriusXM® Radio** P. 144



Automatic traffic rerouting may not provide a detour route depending on circumstances.



## Edit Avoid Area

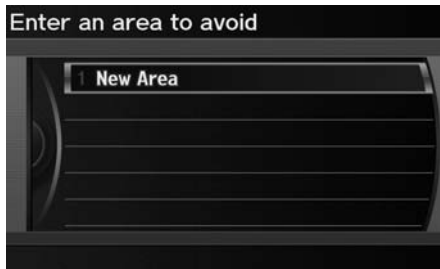
INFO button ► **Set up** ► **Other** ► **Routing & Guidance** ► **Edit Avoid Area**



Specify up to five areas to avoid (e.g., road construction, closures), if possible, when the system calculates routes to your destination.



1. Rotate  to select **New Area** or an existing area to edit. Press .

2. Rotate  to select **Edit Name** to label the area to avoid. Press .

3. Enter a name or title. Move  to select **OK**.

4. Rotate  to select **Edit Area** to define the area to avoid. Press .

The following options are available (after an area is set):

- **View Area Map:** Displays the selected avoid area on the map.
- **Delete:** Deletes the selected avoid area.

### Edit Avoid Area

The avoid areas are shared with Driver 1 and Driver 2. For example, if Driver 1 specifies some avoid areas, Driver 2 can also use them for setting a route.

The maximum size of an “avoid area” is 1/2 square mile.

If your selected area contains a freeway, you are asked “Do you want to avoid freeways?” Answering “No” allows you to use a route through an avoid area on a freeway without any pop-up messages.


You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.

You can enter up to 25 characters for the name.






The following options are available:

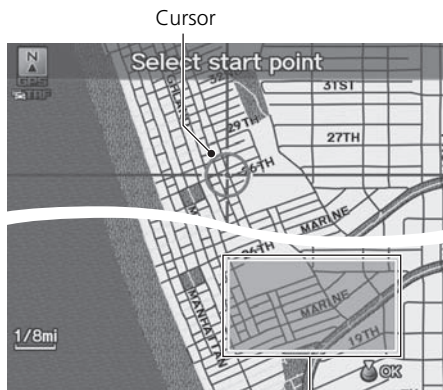- **Address:** Specify the general area by entering an address.  
 ▶ **Address** P. 70
- **Map Input:** Specify the general area by map input.  
 ▶ **Map Input** P. 87




Avoid area

5. Rotate  to select a method for specifying the area. Press .

6. If you select **Map Input**, scroll the map to position the cursor over your desired start point, adjusting the map scale as necessary. Press  to mark the start point.

▶ To redo the area selection, press the CANCEL button.

7. Scroll the map to “draw” the area. Press  to mark the end point.

8. Press  to select **OK**.

▶ The area you specify is displayed in the list of areas to avoid.

✕ Edit Avoid Area

You can change the map scale to 1/4, 1/8, or 1/20 mile.

## Edit Waypoint Search Area





INFO button ► **Set up** ► **Other** ► **Routing & Guidance** ► **Edit Waypoint Search Area**

Select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

► **Adding Waypoints** P. 122

You can specify a different search distance for freeways and surface streets.

 


1. Rotate  to select an item. Press .
2. Rotate  to select a search distance. Press .

The following items are available:

- **On Freeways:** 1, 2, 5, or 10 miles can be set. Factory default is 2 miles.
- **On Surface Street:** 1/2, 1, 2, or 5 miles can be set. Factory default is 1/2 mile.

### Edit Waypoint Search Area



The search distance does not affect the search range used for the Find Nearest voice commands (e.g., say  "Find nearest gas station").

## Street Name Guidance

INFO button ▶ **Set up** ▶ **Other** ▶ **Routing & Guidance** ▶ **Street Name Guidance**

The navigation system includes the street names during voice guidance (e.g., “Turn right on Main Street”).



Rotate  to select an option. Press .

The following options are available:

- **ON**: Voice guidance includes the street names.
- **OFF** (factory default): Disables the feature.

### Street Name Guidance

This feature is only available when the system language is set to **English**.

This feature is not available when your vehicle is in Puerto Rico or Mexico.

# Clock Adjustment

🔔 INFO button ► **Set up** ► **Other** ► **Clock Adjustment**

Set the automatic adjustment of the system clock for daylight saving and international time zones.



Rotate  to select an item. Press .

The following items are available:

- **Auto Daylight:** The navigation system automatically adjusts the clock (“spring ahead” or “fall back” by one hour) when a daylight saving time change occurs.  
**ON** (factory default): Adjusts the clock automatically.  
**OFF:** Disables the feature.
- **Auto Time Zone:** The navigation system automatically adjusts the clock when driving through different time zones.  
**ON** (factory default): Adjusts the clock automatically.  
**OFF:** Disables the feature.
- **ADJUST TIME:** Adjust the current time manually.  
➤ **Adjust Time** P. 58
- **Reset:** Reset the clock settings to the factory default.  
➤ **Resetting the Clock Settings** P. 58

## ☒ Clock Adjustment

You can check the time and date from any screen using voice commands.

➤ **Global Commands** P. 242

### **Auto Daylight**

This function is not activated in areas that have not adopted daylight saving time, even if you have set **Auto Daylight** to **ON**.

### **Auto Time Zone**

If you live and work in two different time zones, you may want to turn **Auto Time Zone** to **OFF**. When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

## Adjust Time

INFO button ▶ **Set up** ▶ **Other** ▶ **Clock Adjustment** ▶ **Adjust Time**

Adjust the current time (hours and minutes).



1. Move ◀○ or ○▶ to select HOUR or MINUTE.
2. Rotate ⤵ to adjust the value.
3. Move ⏴ to select OK.

## Resetting the Clock Settings

INFO button ▶ **Set up** ▶ **Other** ▶ **Clock Adjustment** ▶ **Reset**

Reset the Auto Daylight and Auto Time Zone settings to the factory defaults.



INFO button ► **Set up** ► **Other** ► **Vehicle**

Set the off-road tracking feature and correct the vehicle position displayed on the map.



Rotate  to select an item. Press .

The following items are available:

- **Off-road Tracking:** Set whether to display the tracking dots on the map.  
➤ **Off-road Tracking** P. 60
- **Correct Vehicle Position:** Adjust the position of the vehicle on the map.  
➤ **Correct Vehicle Position** P. 61





## Off-road Tracking

📍 INFO button ▶ **Set up** ▶ **Other** ▶ **Vehicle** ▶ **Off-road Tracking**

The navigation system can be set to display white off-road tracking dots (“breadcrumbs”) on the map screen whenever you drive into an area approximately 1/2 mile away from a mapped road.



Rotate  to select an option. Press .

The following options are available:

- **ON** (factory default): The system displays the white tracking dots.  
▶ **Driving Off-road** P. 95
- **OFF**: Disables the feature.


### Off-road Tracking






To clear existing breadcrumbs, set **Off-road Tracking** to **OFF**, exit the Setup screen, and then set **Off-road Tracking** to **ON** again.

## Correct Vehicle Position

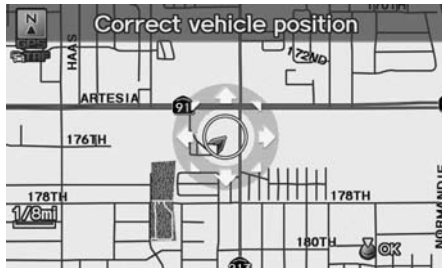INFO button ▶ **Set up** ▶ **Other** ▶ **Vehicle** ▶ **Correct Vehicle Position**

Manually adjust the current position of the vehicle as displayed on the map screen if the position appears to be incorrect.



1. Put the vehicle in Park.
2. Rotate  to select **Correct Vehicle Position**. Press .
3. Scroll the map to position the arrowhead at your correct position. Press .
4. Rotate  to position the arrowhead in the correct direction the vehicle is facing.
5. Press  to select OK.

### Correct Vehicle Position

An apparent position error can occur where buildings, tunnels, and other objects block or reflect the GPS signals, forcing the system to use “dead reckoning” to determine your location and direction.

Using this function to adjust vehicle position is not recommended. When the system reacquires a GPS signal, it will automatically place the vehicle in the correct location.

If you continually have to adjust the vehicle position, you may have problems with the GPS reception or there may be database errors.


**System Limitations** P. 230

## AcuraLink/Messages

INFO button ► **Set up** ► **Other** ► **AcuraLink/Messages**

Set the preferences for receiving AcuraLink® messages.

➤ **AcuraLink® Messages** P. 200

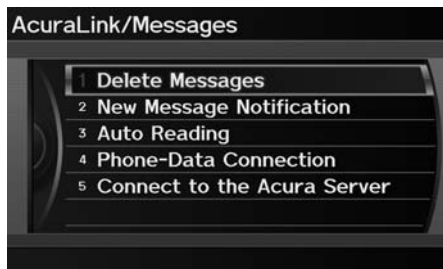

Rotate  to select an item. Press .

The following items are available:

- **Delete Messages:** Deletes all messages by category except **Diagnostic Info** and **Recalls/Campaigns**.
- **New Message Notification:**  
**ON** (factory default): An envelope icon appears on the navigation screen.  
**OFF:** You will receive no new message notifications.
- **Auto Reading:**  
**ON** (factory default): The system automatically reads aloud a selected message.  
**OFF:** You can activate the function with the **Voice** option.
- **Phone-Data Connection:** Begins the process to connect to the Acura server.
- **Connect to the Acura Server:** There are two settings to choose from when you receive a **Diagnostic Info** message and select **Check Now**.  
**Prompt** (factory default): The system prompts you and then connects to the Acura server.  
**Auto:** The system automatically connects to the Acura server.

### ➤ AcuraLink/Messages

For information on setting up the services available through AcuraLink®, visit [owners.acura.com](http://owners.acura.com)

AcuraLink® via SiriusXM® Radio is available only in U.S. mainland.


#### **Delete Messages**

Only dealer can delete Diagnostic Info and Recall/Campaign messages.

#### **Phone-Data Connection/Connect to the Acura Server**

These settings apply when you have a phone that comes with an active data plan and is paired to HFL.

#### **Connect to the Acura Server**

If you do not want to connect to the Acura server immediately, rotate  to select **No** at the prompt.

INFO button ► **Set up** ► **Other** ► **Traffic & Weather Status**

Confirm the reception status of SiriusXM® signal, traffic information data, or weather information data.



The meaning of the displayed messages is given in the following table:

Message	Status
Receiving	The system is receiving SiriusXM® signal, traffic data, or weather data.
No signal	<ul style="list-style-type: none"> <li>The system cannot receive SiriusXM® signal.</li> <li>SiriusXM® signal is received, but cannot receive traffic or weather data.</li> </ul>
Expired	Activation has expired. Call SiriusXM® at (800) 852-9696 to reactivate your traffic/weather subscription. ► <b>SiriusXM® Radio Service</b> P. 144
Loading	The system is searching for the signal or updating data.
Check Antenna	Antenna error
---	The system cannot receive traffic or weather data because SiriusXM® Signal Reception status is "No signal" or "Check Antenna."

► Traffic and Weather Status



This item may be grayed out when your vehicle is in Alaska, Hawaii, Canada, Puerto Rico, and Mexico because SiriusXM® Radio or traffic/ weather information is not available.

## Reset Factory Default Settings

INFO button ► **Set up** ► **Other** ► **Reset Factory Default**

Reset all the settings on the Setup screens and multi-view rear camera brightness settings to their factory default.



Rotate  to select **Yes**. Press  to reset the settings.

### Reset Factory Default Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

The following settings are reset:

- Brightness, Contrast, Black Level, Volume, Interface Dial Feedback, Brightness (multi-view rear camera)
- Basic Settings: Units, Voice Recognition Tutor, Display Voice Command Tips, Verbal Reminder
- Routing & Guidance: Rerouting, Unverified Area Routing, Traffic Rerouting, Edit Waypoint Search Area, Guidance Mode, Street Name Guidance
- Clock Adjustment: Auto Daylight, Auto Time Zone, Time
- Vehicle: Off-road Tracking
- Color: Map Color, Menu Color
- Route Preference



AcuraLink/Messages settings are not reset to their factory default settings.

 **AcuraLink® Messages** P. 200

## Clear Personal Data

🔑 INFO button ▶ **Set up** ▶ **Other** ▶ **Clear Personal Data**

Delete uploaded data, calendar entries, address books, or stored destinations, or reset other settings to their factory defaults.

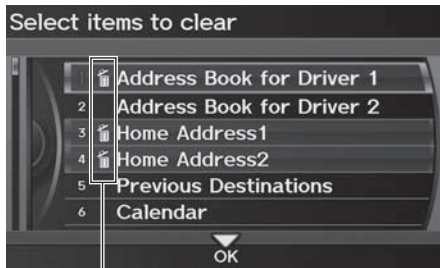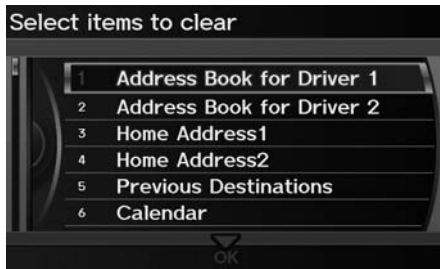

Trash icon

1. Rotate 🔄 to select an item. Press 🗑️.
  - ▶ Repeat the procedure to delete other items.
  - ▶ Items to be deleted are indicated with a trash icon.
2. Move 📁 to select OK.
3. Rotate 🔄 to select Yes. Press 🗑️ to delete the data.

### 🗑️ Clear Personal Data

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

The following items can be deleted:

- Address book for Driver 1 and 2
- Home address 1 and 2
- Previous destinations
- Calendar entries
- Avoid areas
- Music on HDD
- Music search phonetics
- Cellular phone information (speed dials, voice tags, and user PIN)
- Wallpapers setting

AcuraLink® messages are not deleted. You can delete these separately.

➔ **Message Options** P. 202

When the Address Book is deleted, all contents (except the Categories) are deleted.

To delete all stored personal phone information, select **Clear Cellular Phone Information** in the Phone Setup screen.

➔ **Phone Setup** P. 188

If you have PIN-protected your address books or home addresses, enter your PIN when prompted. Move 📁 to select OK. PINs are optional.

➔ **PIN Numbers** P. 42



# Navigation



This section describes how to enter a destination, select a route to take, and follow the route to your destination. It also describes how to change your route or destination along the way.

<b>Entering a Destination</b> .....	68	<b>Calculating the Route</b> .....	89	<b>Changing Your Route</b> .....	120
Address .....	70	Changing the Route Preference .....	90	Canceling the Route .....	121
Address Book .....	75	Viewing the Routes .....	90	Taking a Detour .....	121
Previous Destinations .....	76	Calculating the Route on the Destination		Avoiding Streets .....	121
Place Name .....	77	Map .....	91	Adding Waypoints .....	122
Place Category .....	80	<b>Driving to Your Destination</b> .....	92	Editing the Destination List .....	126
Place Phone Number .....	84	Viewing the Route .....	92	<b>Changing Your Destination</b> .....	127
Coordinate .....	85	Listening to Voice Guidance .....	96	Find Nearest Place .....	127
Intersection .....	86	<b>Map Menu</b> .....	97	Selecting a Destination on the Map .....	128
Map Input .....	87	Displaying the Map Menu .....	97	Entering a New Destination .....	129
		Guidance Menu .....	99	<b>Resuming Your Trip</b> .....	131
		Map Information .....	104		
		Weather Information .....	113		
		Traffic Rerouting™ .....	118		



# Entering a Destination

## 📍 DEST/ROUTE button

This section describes how to enter a destination for route guidance.



Rotate 🔄 to select an item. Press 📍.  
▶ Move ⏪ to select **Dest. MENU 2** to display additional menu entries.



The following items are available:

- **Address:** Sets a destination by entering an address.  
▶ **Address** P. 70
- **Address Book:** Sets a destination by selecting an address stored in your Address Book.  
▶ **Address Book** P. 75
- **Previous Destinations:** Sets a destination by selecting a previous destination.  
▶ **Previous Destinations** P. 76

## 📍 Entering a Destination

📍 "Display Destination", 📍 "Display Navigation"

If you press the DEST/ROUTE button when en route, the Route Menu screen is displayed.

▶ **Changing Your Route** P. 120

Prior to departure, you can set areas along your route to avoid.

▶ **Avoiding Streets** P. 121

- **Place Name:** Sets a destination by entering a place name.  
➤ **Place Name** P. 77
- **Place Category:** Sets a destination by selecting a place/landmark.  
➤ **Place Category** P. 80
- **Place Phone No.:** Sets a destination by entering the phone number of a place/  
landmark.  
➤ **Place Phone Number** P. 84
- **Coordinate:** Sets a destination by entering latitude and longitude.  
➤ **Coordinate** P. 85
- **Intersection:** Sets a destination (intersection) by entering two streets.  
➤ **Intersection** P. 86
- **Map Input:** Sets a destination by scrolling through the map.  
➤ **Map Input** P. 87
- **Go Home 1 or 2:** Sets your home address as a destination.  
➤ **Going Home** P. 12

## Address

📍 DEST/ROUTE button ▶ **Address**

Enter an address to use as the destination. The state or province you are currently in is displayed (e.g., California).



Rotate 📶 to select an item. Press 📶.

The following items are available:

- **City:** Selects your destination city.  
📖 **Selecting a City** P. 72
- **Street:** Selects your destination street.  
📖 **Selecting a Street** P. 73
- **Change State:** Selects the state or province.  
📖 **Selecting the State or Province** P. 71
- **ZIP Code:** Enters the zip code to select the city.  
📖 **Selecting a City by Zip Code** P. 71

## ■ Selecting the State or Province

📍 DEST/ROUTE button ▶ **Address** ▶ **Change State**



Rotate to select a state from the list. Press .

## ■ Selecting a City by Zip Code

📍 DEST/ROUTE button ▶ **Address** ▶ **ZIP Code**



1. Enter the zip code of your destination.
2. Move to select OK.

## ▣ Selecting the State or Province

Move or to select the following areas:

- **USA** for the U.S. mainland, Hawaii, and Puerto Rico
- **Canada/AK** for Canada and Alaska
- **Mexico**

## ▣ Selecting a City by Zip Code

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.



3. Rotate to select the destination city from the list. Press .

▶ Next, you are prompted to enter a street name.

➤ **Selecting a Street** P. 73

## Selecting a City

DEST/ROUTE button ▶ **Address** ▶ **City**

The name of the city where you are currently located is displayed.



1. Enter the name of a different city, or move to select OK for the current city.

▶ Move to select LIST to display a list of cities.

## Selecting a City

Vehicle position may not be displayed when:

- The automobile is traveling off-road.
- The vehicle position data cannot be updated.

You do not need to enter spaces or symbols (e.g., &, -, %). Partial matches are supported (e.g., "ANGELES" to find "LOS ANGELES").

### Using Voice Command (English only)


Say "City" on the Find address by screen, and the following screen is displayed:





• Say "Current City" to select your current location, or say the name of a different city.

➤ **Selecting a Street** P. 73

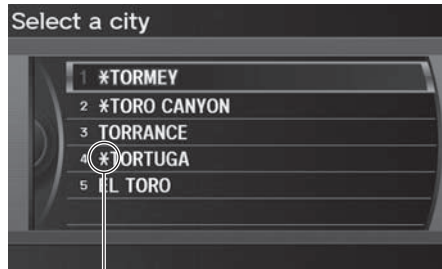- The Say city name screen is not displayed when your vehicle is in Puerto Rico or Mexico.



Non-detailed area mark: Try entering the street first and then select the city.

2. Rotate  to select your destination city from the list. Press .

- ▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are in yellow.
- ▶ Next, you are prompted to enter a street name.


**▶ Selecting a Street P. 73**

## Selecting a Street

 DEST/ROUTE button ▶ **Address** ▶ **Street**



1. Enter the name of your destination street.

- ▶ Do not enter the street type (e.g., street, road, avenue) or direction (e.g., north, south, east, west).
- ▶ Move  to select **LIST** to display a list of streets.

 
### ▶ Selecting a City


If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

### ▶ Selecting a Street

When entering the names of major freeways, you can use the following abbreviations. For interstates, use an "I" (e.g., I-10). For U.S. freeways, use "US" (e.g., US-18). For state freeways, use the two-character state designation (e.g., CA-101). For county roads, use the appropriate designation (e.g., G-2).

### Using Voice Command (English only)



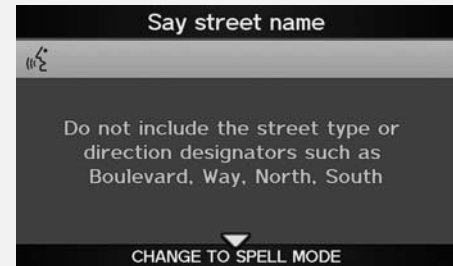Say  "Street" on the Find address by screen, and the following screen is displayed:




- Say the name of your destination street, and say the street number as a string of individual numbers.
- Set the route to your destination. **▶ Calculating the Route P. 89**
- The Say street name screen is not displayed when your vehicle is in Puerto Rico or Mexico.

Continued



2. Rotate  to select your destination street from the list. Press .

▶ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are in yellow.

3. Enter the street number. Move  to select OK.


▶ Only valid street numbers can be entered.



4. Set the route to your destination.

📌 **Calculating the Route** P. 89

📌 Selecting a Street

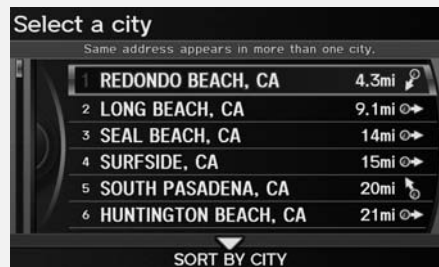If you did not select a city first and there is more than one city with the specified street, a list of cities is displayed.









Rotate  to select the desired city from the list. Press .

## Address Book


 DEST/ROUTE button ▶ **Address Book**


Select an address stored in your address book to use as the destination.



1. Rotate  to select your destination from the list. Press .
2. Set the route to your destination.
  - ▶  **Calculating the Route** P. 89
  - ▶ Move  or  to display only the entries in a category: **ALL**, **BUSINESS**, **PERSONAL**, or other categories you have created.
    - ▶  **Selecting an Address Book Category** P. 40


### ▶▶ Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Move  to select **OK**. PINs are optional.

▶  **PIN Numbers** P. 42

You can select **New Address** on the Select an address screen to add an entry to the address book.

▶  **Adding an Address Book Entry** P. 37

To switch the list between Driver 1 or Driver 2, move .





## Previous Destinations

 DEST/ROUTE button ▶ **Previous Destinations**

Select an address from a list of your 50 most recent destinations to use as the destination. The list is displayed with the most recent destination at the top.



1. Rotate  to select a destination from the list. Press .
2. Set the route to your destination.  
 **Calculating the Route** P. 89

### Previous Destinations

If **Previous Destinations** is grayed out, there are no previous destinations entered.

Your home addresses and addresses stored in your address book are not added to the list of previous destinations.

You can delete unwanted previous destinations from the list.

 **Previous Destinations** P. 43

## Place Name

DEST/ROUTE button ▶ **Place Name**

Enter the name of a place (e.g., business, hotel, restaurant) stored in the map database to use as the destination.



1. Enter a place name.
2. Move to select **LIST** to display a list of matching hits.

3. Rotate to select a place name from the list. Press .

▶ If the place name is in multiple categories, the categories are displayed when you select it.

**Place Name in Multiple Categories** P. 78

4. Set the route to your destination.  
 **Calculating the Route** P. 89

### Place Name

This option is convenient if you know the exact name of a place.



Move to select **OPTION** to enter symbols and accented letters, move to select **SPACE** to enter a space character, or move to select **DELETE** to remove the last character.

Once a name is entered and selected, move to select **SORT BY NAME** or **SORT BY DISTANCE**. Matching letters are in yellow.



## ■ Place Name in Multiple Categories

If the place name is in multiple categories in the map database, the following screen is displayed.




1. Rotate  to select a place name.  
Press .






2. Rotate  to select a subcategory.  
Press .

## ▣ Place Name in Multiple Categories

Move  to select **SORT BY CITY** or **SORT BY DISTANCE**. Matching letters are in yellow.



3. Rotate  to select a place. Press .
4. Set the route to your destination.  
 **Calculating the Route** P. 89

## Place Category

📍 DEST/ROUTE button ▶ **Place Category**

Select the category of a place (e.g., Banking, Lodging, Restaurant) stored in the map database to search for the destination.



1. Rotate to select a category.  
Press .



2. Rotate to select a subcategory.  
Press .

▶ Move or to change the main category.

▶ **List of Categories** P. 252

### Place Category



This option is convenient if you do not know the exact name of a place or if you want to narrow down the number of matches returned for places with a common name.

You can store up to 30 favorite subcategories. Move to select **My Favorites** to access your favorites.


▶ **My Favorites** P. 82


**Advanced** helps you to search the subcategory. When you enter a keyword and select **LIST**, the list of appropriate subcategories is displayed.






3. Rotate  to select an item. Press .

The following items are available:

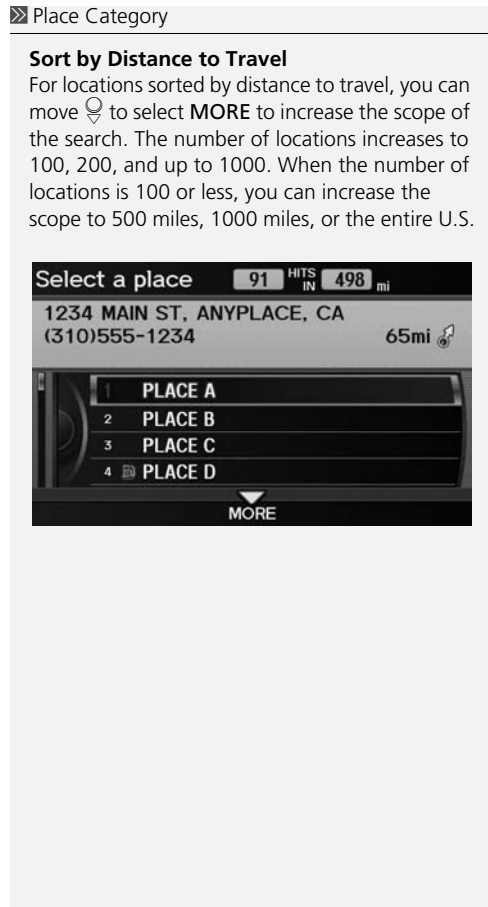- **Place Name:** Searches for a place in the subcategory by name. Enter a city name when prompted.
- **City Vicinity:** Searches for a place in the subcategory within a 20-mile radius of a specific city. Enter a city name and then a place name when prompted. Only the first 1000 matching places/landmarks are displayed.
- **Sort by Distance to Travel:** Displays all the places in the subcategory sorted by distance from your current location. The closest place is displayed at the top.
- **Search by Keyword:** Searches for a place by keyword when you do not know the exact category. Select **Sort by Distance to Travel** for locations near your current location, or select **City Vicinity** for locations in a specific city. Enter a keyword when prompted. Move  to select **LIST** to view a list of possible locations if one is not found automatically.





4. Rotate  to select a place name from the list. Press .
5. Set the route to your destination.  
 **Calculating the Route** P. 89

#### Place Category

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown for the highlighted place.


### My Favorites



 DEST/ROUTE button ▶ **Place Category** ▶ **My Favorites**

Store up to 30 favorite subcategories.




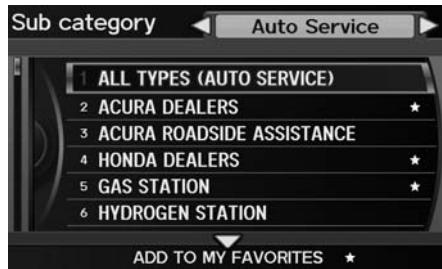

■ To store a subcategory in favorites:



1. Rotate  to select a subcategory on any subcategory screen.
2. Move  to select **ADD TO MY FAVORITES**.

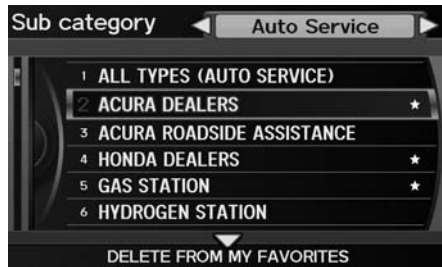■ To delete a subcategory from favorites:





1. Rotate  to select a favorite subcategory on the Favorite Subcategory screen.
2. Move  to select **DELETE FROM MY FAVORITES**.

☒ My Favorites

**Stored categories**

A subcategory stored in **My Favorites** has a star at the end of the line.

**Deleting categories**

You can also delete a favorite subcategory on any Subcategory screen. Rotate  to select a favorite subcategory (which has a star at the end of line) and move  to select **DELETE FROM MY FAVORITES**.



## Place Phone Number

📍 DEST/ROUTE button ▶ **Dest. MENU 2** ▶ **Place Phone No.**

Select a destination by phone number. Only phone numbers in the database are recognized.



1. Enter the area code and phone number. Move 📍 to select **OK**.
2. Set the route to your destination.  
➡ **Calculating the Route** P. 89

### ✉ Place Phone Number

All 10 digits must be entered.

Phone numbers of private residences entered in your address book are not stored in the database and thus cannot be used to search for a destination.

A list is displayed if there are multiple locations in the database with the same phone number. Rotate 📍 to select a place from the list. Press 📍.

## Coordinate

DEST/ROUTE button ▶ **Dest. MENU 2** ▶ **Coordinate**

Specify a location using latitude and longitude map coordinates.



1. Enter the latitude. Move to select OK.
2. Enter the longitude. Move to select OK.
3. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .
  - ▶ If the address is not the desired location, scroll to another location and try again.
4. Press again to display the route calculation menu.
  - ▶ **Calculating the Route** P. 89
5. Rotate to select **Set as Dest.** Press .

### Coordinate

Latitude and longitude must be entered up to the seconds' value.

A yellow box (shown at scales above 1/4 mile) denotes the area that can be viewed when you press on the current map.

Information icons are displayed at scales from 1 mile to 1/4 mile. Place/landmark icons are displayed at 1/8 mile or less. Roads are displayed at 1/4 mile or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

## Intersection

📍 DEST/ROUTE button ▶ **Dest. MENU 2** ▶ **Intersection**

Select the intersection of two streets as the destination. The state or province for your current location is displayed at the top of the screen (e.g., California).



1. Rotate 🔄 to select the intersection search method. Press 📍.

2. Set the route to your destination.

➤ **Calculating the Route** P. 89

The following options are available:

- **Street:** Selects the two intersecting streets. The city or cities that the streets are located in are displayed.  
➤ **Selecting a Street** P. 73
- **City:** Selects the city where the intersection is located. You are prompted to enter the name of the two intersecting streets.  
➤ **Selecting a City** P. 72
- **Change State:** Selects the state or province.  
➤ **Selecting the State or Province** P. 71

### Intersection

It is usually easier to select **Street** to find the streets first. The city or cities that the streets are in will be displayed. If you select **City** and your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

If the intersection is outside the state you are currently in, rotate 🔄 to select **Change State**.

➤ **Selecting the State or Province** P. 71

If there is more than one intersection, you are prompted to select the intersection. If the two streets that you have selected do not intersect, no intersection is entered.

## Map Input

📍 DEST/ROUTE button ▶ **Dest. MENU 2** ▶ **Map Input**

Use the Interface Dial to manually select an icon or a location on the map screen as the destination.


You are prompted to define the map area to display.




1. Rotate 📍 to select an item. Press 📍.


The following items are available:

- **Current Position:** Your current location is centered on the map.
- **City:** You are prompted to select the city.  
 ➤ **Selecting a City** P. 72
- **State:** You are prompted to select the state.  
 ➤ **Selecting the State or Province** P. 71
- **USA, Canada and Mexico:** Your current location is displayed on a map of the country.

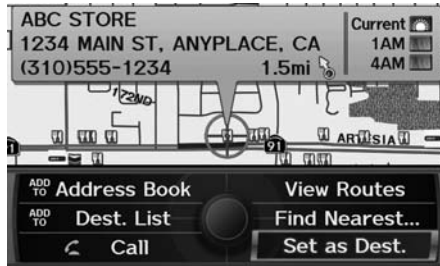



2. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .


▶ If the address is not the desired location, scroll the map to another location and try again.

3. Press  again to display the route calculation menu.

▶ **Calculating the Route** P. 89

4. Rotate  to select **Set as Dest.** Press .

### Map Input

A yellow box (shown at scales above 1/4 mile) denotes the area that can be viewed when you press  on the current map.

Information icons are displayed at scales from 1 mile to 1/4 mile. Place/landmark icons are displayed at 1/8 mile or less. Roads are displayed at 1/4 mile or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.


▶ **Selecting a Destination on the Map** P. 128

# Calculating the Route



This section describes how to calculate your route.



The following options are available:

- **Route Pref.:** Changes the route preferences (calculating method).
  - **Changing the Route Preference** P. 90
- **View Routes:** Displays three different routes.
  - **Viewing the Routes** P. 90
- **DESTINATION MAP:** Move  to select **DESTINATION MAP** to display a map of the destination.
  - **Calculating the Route on the Destination Map** P. 91



1. Rotate  to select **OK**. Press .

- ▶ The system calculates and displays the route line on the map screen.

➤ **Route Line** P. 93

2. Follow the route guidance to your destination.

➤ **Driving to Your Destination** P. 92

- ▶ The system provides you with pop-up messages if your route passes through unverified areas, avoid areas, areas with traffic restrictions, or weather warning areas.

## Calculating the Route

The current route preferences are displayed as icons on the top right of the Calculate Route screen. The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown together with weather information. You must have an AcuraLink Real-Time Weather™ subscription to receive weather information.

➤ **AcuraLink Real-Time Weather™** P. 15

➤ **Subscribing to SiriusXM® Radio** P. 144

You cannot use voice commands while the system is calculating the route.

### Add to Address Book

You can add the destination address to the address book.

➤ **Adding an Address Book Entry** P. 37

### Add to Dest. List

You can add the address to the Destination List.

➤ **Editing the Destination List** P. 126

### Call

You can place a telephone call to the destination phone number.

➤ **Bluetooth® HandsFreeLink®** P. 178

## Changing the Route Preference

Change the route preference by selecting minimum or maximum driving methods.



1. Rotate to select an item. Press .
2. Rotate to select MIN or MAX. Press .
- ▶ Repeat step 1 and 2 as necessary.
3. More to select OK.

## Viewing the Routes

View three different routes to your destination.



- Rotate to select a route. Press .
- ▶ The travel distance and estimated travel time is displayed for each route.
  - ▶ The system calculates and displays the route line on the map screen.
- **Route Line** P. 93

### Changing the Route Preference

The calculated route may be the shortest route or the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
  - Right turns are favored over left turns or U-turns.
  - Time-restricted turns (turns prohibited at certain times of the day) are not used.
- Check the ferry schedule when the calculated route includes ferry route.

### Viewing the Routes

It is not unusual for some calculated route options to be identical.

## Calculating the Route on the Destination Map

Calculate the route from the map of the destination address.



Rotate  to select **Calculate Route**.  
Press .

▶ The system calculates and displays the route line on the map screen.

➤ **Route Line** P. 93

### ▶▶ Calculating the Route on the Destination Map


 "Display Destination Map" (when en route)



This section describes how to follow the route guidance to your destination, receive traffic and weather information and choose the icons displayed on the map screen.

## Viewing the Route

### Map Screen

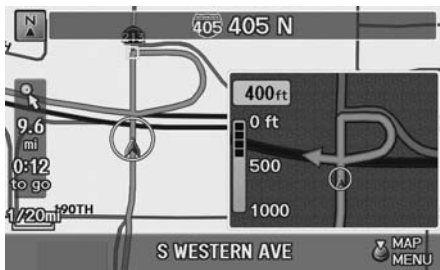

After calculating the route to your destination, the route is displayed on the map screen.

➤ **Map Screen Legend** P. 10


As you drive, the system tracks your position on the map in real time and provides guidance as you approach each guidance point on the route.

### Viewing the Route

⌘ "Display Map"

You can change the map scale using voice commands (e.g., say ⌘ "Display 2 mile scale").

➤ **Map Scale Commands** P. 243

You can also change the map scale by rotating .

You can control the icons displayed on the map screen using voice commands (e.g., say ⌘ "Display post office").

➤ **Map Display Commands** P. 242

You can obtain information about the route using voice commands (e.g., say ⌘ "How long to the destination?").

➤ **Route Commands** P. 244

You can display the next guidance point on the map screen by saying ⌘ "Display Map Guide" (when en route).

If you scroll the map while en route, the time and distance to destination indicators are replaced with an indicator showing distance from the current vehicle position.

The map screen can be viewed in single-screen or split-screen mode.

➤ **Guidance Mode** P. 102

## Guidance Screen

The guidance screen offers an alternative way to view your route.



- In single-screen mode, press the MAP/GUIDE button to switch between the map and guidance screens.
- In split-screen mode, press the MAP/GUIDE button to switch between the next guidance direction and a list of guidance directions.


### Guidance Screen

A visual guide helps you check the guidance screen.

▶ **Guidance Screen** P. 11

## Route Line

When driving on verified streets, the route line is light blue. The route line display changes when driving on unverified streets:

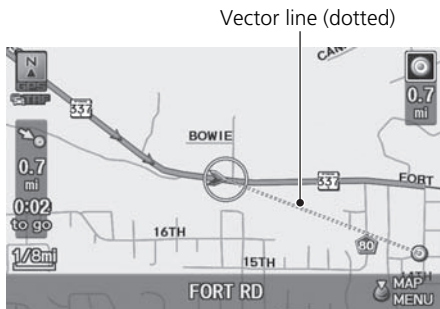

- If **Unverified Area Routing** is **OFF**, the route line uses verified streets only (when possible). A dotted "vector line" pointing directly towards your destination is also displayed.

### Route Line

You can set **Unverified Area Routing** to **OFF** to follow your own route to the destination. If **Unverified Area Routing** is **ON**, be aware that unverified streets may not be displayed accurately.


▶ **Unverified Area Routing** P. 50

You can always view the entire route by simply saying "Display entire route."

The route line may also consist of red, orange, or green segments when traffic information is displayed.

▶ **AcuraLink Real-Time Traffic™** P. 15

▶ **Traffic Rerouting™** P. 118

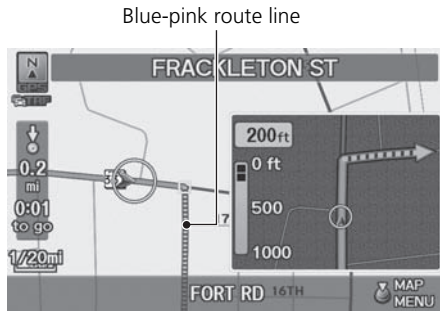

- If **Unverified Area Routing** is **ON**, the route line changes to a dashed blue-pink line to indicate that the route line uses unverified streets.



## Deviating From the Planned Route

If you leave the calculated route, the system automatically recalculates a route to the desired destination based on your current location and direction.

➤ **Rerouting** P. 49



## Deviating From the Planned Route

If **Rerouting** is set to **MANUAL** and you go off route, the system waits for you to manually initiate recalculation. Rotate  to select **Recalculation** and press .

➤ **Rerouting** P. 49

## ■ Driving Off-road

If you leave all mapped (digitized) roads, the system automatically starts displaying a series of dots (breadcrumbs) to track the path you are taking. If needed, you can follow the dots back to the mapped road you originally left.

### 🗒 Off-road Tracking P. 60



## 🗒 Driving Off-road


A message “Not on a digitized road” may appear when you drive half a mile away from a mapped road.

Breadcrumbs may occasionally be displayed in urban areas, such as large parking lots in shopping malls, in new subdivisions where the roads are not yet in the database, or in areas where a GPS signal is unavailable, such as in a parking garage.

Off-road tracking breadcrumbs are limited to approximately 150 miles. Breadcrumbs at the beginning of the trail are deleted if you exceed that distance.

Breadcrumbs are displayed only at 1/20, 1/8, 1/4, and 1/2 mile map scales.

## Listening to Voice Guidance

 ENTER button (on map) ▶ **Voice**

As you approach each guidance point, a pop-up window is displayed on the map screen with instructions for you to follow. Voice guidance for each guidance point is also provided.


Typically, you hear three prompts:

- 1/2 mile from the guidance point (2 miles on freeway)
- 1/4 mile from the guidance point (1 mile on freeway)
- Just before the guidance point

To replay voice guidance, rotate  to select **Voice** in the Map Menu.

If you select **Voice** between guidance points, voice guidance for the next guidance point is provided.

### Listening to Voice Guidance

 "Voice" (on the map screen)

You can turn voice guidance OFF if you prefer.

 **Display and Volume Settings** P. 24

When driving in unverified areas, the phrase "if possible" is inserted before each voice guidance prompt.

**Voice** in the Map Menu may be grayed out if:

- The vehicle is approaching the guidance point.
- The vehicle is in an unverified area and **Unverified Area Routing** is set to **OFF**.

The timing of voice guidance varies depending on the type of road you are on and the distance to the next guidance point.

## Displaying the Map Menu



Use the Map Menu to control the icons displayed on the screen and to display traffic information, weather information, and messages. You can also use the Map Menu to find locations or to cancel the route.



1. On the map screen, press  to select **MAP MENU** (if displayed).

▶ The Map Menu is displayed on the map screen.




2. Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.  
▶ **Listening to Voice Guidance** P. 96
- **New Messages:** Indicates, when available, that there are new AcuraLink® messages.  
▶ **AcuraLink® Messages** P. 200

### Map Menu

If you scroll the map while en route, press the MAP/GUIDE (or CANCEL) button to return to the current position map screen, then press  to select **MAP MENU**.

#### Traffic Incidents

You must have an AcuraLink Real-Time Traffic™ subscription to receive traffic information.

▶ **AcuraLink Real-Time Traffic™** P. 15

▶ **Subscribing to SiriusXM® Radio** P. 144

The incident icons are displayed on the 5 mile or less map scale.

▶ **Map Scale and Functions** P. 110

#### Weather Info

You must have an AcuraLink Real-Time Weather™ subscription to receive weather information.

▶ **AcuraLink Real-Time Weather™** P. 15


▶ **Subscribing to SiriusXM® Radio** P. 144

- **Traffic Incidents:** Displays a list of the traffic incidents around your current location or on your current route.  
    ✦ **Traffic Rerouting™** P. 118
- **Weather Info:** Allows you to view the weather forecast, warning list, warning map, and radar image map.  
    ✦ **Weather Information** P. 113
- **Guidance Menu:** Allows you to set or confirm the guidance points and freeway exits for your route.  
    ✦ **Guidance Menu** P. 99
- **Find Nearest...:** Allows you to find the nearest place/landmark (e.g., nearest gas station) by specifying a category. You can then add the location to the list of destinations, set as a waypoint, or set as your destination.  
    ✦ **Changing Your Destination** P. 127
- **Map Information:** Allows you to select the information icons to display on the map, change the orientation of the map, or display your current location.  
    ✦ **Map Information** P. 104
- **Cancel Route:** Cancels your current route.  
    ✦ **Canceling the Route** P. 121

## Guidance Menu

🗑 ENTER button (on map) ▶ **Guidance Menu**

Display the guidance points and freeway exits for your route, and set the display mode for the map and guidance screens.

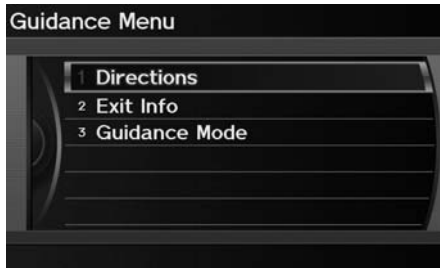

Rotate 🌀 to select an item. Press 🗑.

The following items are available:


- **Directions:** Displays a list of the guidance points.  
 ➤ **Directions** P. 100
- **Exit Info:** Displays a list of the freeway exits.  
 ➤ **Freeway Exit Information** P. 101
- **Guidance Mode:** Selects the guidance display mode.  
 ➤ **Guidance Mode** P. 102



## Directions

📍 ENTER button (on map) ▶ **Guidance Menu ▶ Directions**

Display a list of the guidance points on your route for your confirmation.

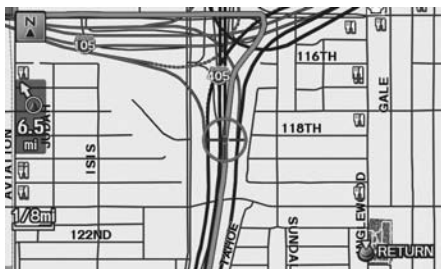

1. Rotate 🔄 to select a guidance point from the list. Press ⏸.

▶ The system displays a map of the guidance point.

2. Press ⏸ to select **RETURN** or press the **CANCEL** button to return to the previous screen.

## Directions

Guidance points with exit information are indicated by a **i** (freeway exit information) icon. Move 📍 to select **Exit Info** to display the exit information.

▶ **Freeway Exit Information** P. 101

The route guidance information is automatically deleted when you reach your destination.

## Freeway Exit Information

ENTER button (on map) ▶ **Guidance Menu** ▶ **Exit Info**

Display a list of the freeway exits for the route. You can view freeway exit information (whether the exit is near gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route.



1. Rotate to select an exit from the list. Press .

2. Rotate to select a list item. Press .

▶ Move or to display information for different exits.

▶ The location is displayed on the Calculate Route screen.

▶ **Calculating the Route** P. 89

## Freeway Exit Information

"Display Freeway Exit Information"

You can scroll the map and select a (freeway exit information) icon on the map screen to display the freeway exit information. The icon is only displayed if there is exit information available.

Icons are displayed only at 1/4, 1/2, or 1 mile scale.


▶ **Showing Icons on the Map** P. 105

The route guidance information is automatically deleted when you reach your destination.

## ■ Guidance Mode

📍 ENTER button (on map) ▶ **Guidance Menu** ▶ **Guidance Mode**

Select the display mode during route guidance: single-screen mode (default) or split-screen mode.

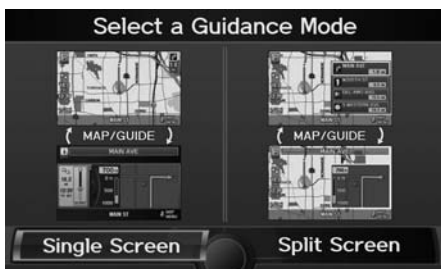

Rotate 🔄 to select an option. Press 📍.

The following options are available:

- **Single Screen:** Displays the map and guidance screens on separate screens.



Map screen

Press the  
MAP/GUIDE  
button




Guidance screen

## ▶ Guidance Mode

The guidance mode can also be selected from the System Setup menu.

▶ **Routing & Guidance** P. 48

- **Split Screen:** Displays the map and guidance information simultaneously on the map screen.

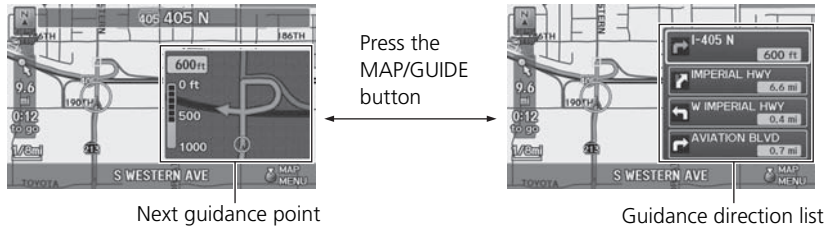

» Guidance Mode


**Next guidance point**

The next guidance point (the pop-up window) is displayed on the map screen as you approach a guidance point in the single-screen mode.

## Map Information

🗺️ ENTER button (on map) ► **Map Information**

Select the landmark icons to display on the map, change the orientation of the map, display your current location, and learn the meaning of the icons, colors, and symbols displayed on the map.

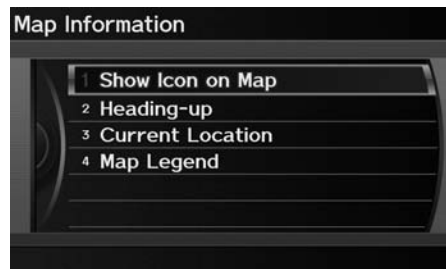

Rotate 🔄 to select an item. Press 🗺️.

The following items are available:

- **Show Icon on Map:** Selects the icons to display on the map.  
    🗺️ **Showing Icons on the Map** P. 105
- **North-up/Heading-up:** Selects the map orientation (**North-up** or **Heading-up**).  
    🗺️ **Map Orientation** P. 107
- **Current Location:** Displays and saves your current location.  
    🗺️ **Current Location** P. 108
- **Map Legend:** Displays an overview of the map features.  
    🗺️ **Map Legend** P. 109

## ■ Showing Icons on the Map

📍 ENTER button (on map) ▶ **Map Information** ▶ **Show Icon on Map**

The icon bar along the bottom of the screen allows you to select the icons that are displayed on the map.



The following options are available:

- **Icon check boxes:** Displays or hides the traffic, weather, and landmark icons.
  - ▶ **Map Screen Legend** P. 10
  - ▶ **AcuraLink Real-Time Traffic™** P. 15
  - ▶ **AcuraLink Real-Time Weather™** P. 15
- **ALL OFF:** Hides all icons.
- **ICON OPTION:** Fine-tunes the icon display. Move 📍.
  - ▶ **Fine-tuning the Icons** P. 106

Rotate 🔄 to select an icon in the icon bar. Press 📍.

- ▶ Pressing 📍 toggles the icon display on or off.
- ▶ Repeat the procedure as necessary.


## ☒ Showing Icons on the Map



You can display or hide the icons using voice commands on the map screen (e.g., say 🗣️ *"Display hospital"*).



▶ **Map Display Commands** P. 242

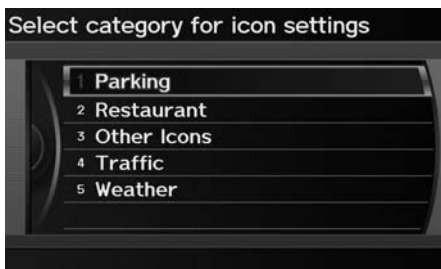
## ■ Fine-tuning the Icons

Icons in some categories can be fine-tuned to display or hide.



1. Rotate  to select an icon category from the list (e.g., **Other Icons**). Press .

2. Rotate  to select the icons to display on the map. Press .

► Pressing  toggles the icon display on or off.

► Repeat the procedure as necessary.

3. Move  to select **OK**.


## ☒ Fine-tuning the Icons

To display the "Other Icons," be sure to turn on **OTHER ICON** in the icon bar.

## ■ Map Orientation

🗨 ENTER button (on map) ▶ **Map Information**

Select the map orientation.

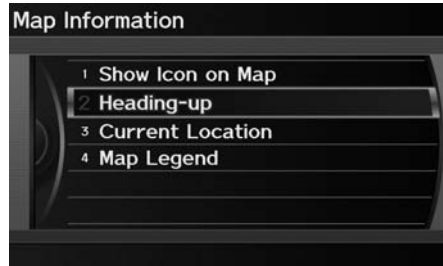

Rotate 🔄 to select **North-up** or **Heading-up**. Press 🗨.

▶ The system changes the map orientation and displays the map screen.

The following options are available:

- **North-up:** Displays the map with North always pointing up.
- **Heading-up:** Displays the map so that the direction you are traveling is always pointing up.

## ☒ Map Orientation

🗨 "Display Heading-up" (on map screen), 🗨 "Display North-up" (on map screen)

The red arrow in the symbol always points North. On scales greater than 1 mile, North-up mode is always used.



## ■ Current Location

📍 ENTER button (on map) ► **Map Information** ► **Current Location**

Display and save your current location for future use as a destination. The address, latitude, longitude, and elevation of your current location are displayed.

■ To save your current location in the address book:



1. Rotate 🔄 to select **Save**. Press 📍.



2. Edit the name, phone number, and category.

➡ **Address Book** P. 37

3. Move 📍 to select **OK**.

## ▣ Current Location

📍 "Display Current Location" (on map screen)

You can also save the current location by saying 📍 "Register the Current Location".

If you have PIN-protected your address book, enter your PIN when prompted. Move 📍 to select **OK**. PINs are optional.

➡ **PIN Numbers** P. 42


The elevation is not displayed if the system is receiving insufficient GPS information. When elevation is displayed, it may differ with roadside elevation signs by  $\pm 100$  feet or more.

Saving your current location does not change or cancel your current route.

## ■ Map Legend

🗨 ENTER button (on map) ▶ **Map Information** ▶ **Map Legend**

See an overview of the map lines, areas, routes, traffic information, navigation icons, and weather icons.

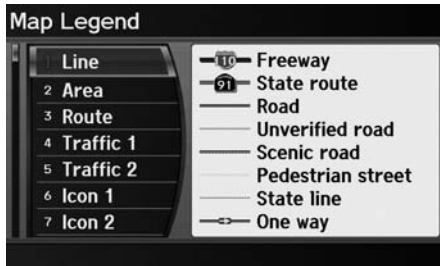

Rotate to 🗨 select an item.

▶ The system displays the map legend.

## ☒ Map Legend

A visual guide helps you see the map legend.

▶ **Map Screen Legend** P. 10

▶ **AcuraLink Real-Time Traffic™** P. 15

 
▶ **AcuraLink Real-Time Weather™** P. 15

## ■ Map Scale and Functions

The functions that are available from the map screen depend on the map scale.

Function	page	Map Scale (top: mile, bottom: metric)											
		1/20	1/8	1/4	1/2	1	2	5	15	50	150	350	1000
		80	200	400	800	1.6	3	8	24	80	240	560	1600
<b>Icon display</b>													
Landmark icon	10	✓	✓										
Exit info.	10			✓	✓	✓							
One-way traffic	10	✓											
Waypoint "flag"	11	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Traffic incident	15	✓	✓	✓	✓	✓	✓	✓					
Weather info.	15	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Map orientation</b>													
Heading-up	107	✓	✓	✓	✓	✓							
North-up	107	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Others</b>													
Off-road tracking dots	95	✓	✓	✓	✓								
Unverified road	10	✓	✓	✓	✓	✓	✓	✓	✓				
Map features	10	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Avoid areas	53	✓	✓	✓									
Traffic speed	15	✓	✓	✓	✓	✓	✓	✓					

## ▣ Map Scale and Functions

You can change the map scale using voice commands on the map screen (e.g., say  "Display 2 mile scale").

**▣ Map Scale Commands** P. 243

You can change between miles or kilometers.

**▣ Basic Settings** P. 26


## ■ Map Icons and Functions

Display or hide all icons on the map screen, with the exception of Honda/Acura Dealer icons which are always shown.


### ■ Landmark icon

Type	Icon display control	Icon selectable	Icon searchable
Honda/Acura dealer	Always on	Yes	Yes
Hospital	Yes	Yes	Yes
School	Yes	Yes	Yes
ATM	Yes	Yes	Yes
Gas station	Yes	Yes	Yes
Restaurants	Yes	Yes	Yes
Post office	Yes	Yes	Yes
Grocery store	Yes	Yes	Yes
Hotel/Lodging	Yes	Yes	Yes
Police station	No icon	No	Yes
Shopping, Tourist attraction, Bank	No icon	No	Yes
Parking garage	Yes	Yes	Yes
Parking lot	Yes	Yes	Yes
Freeway exit info.	Yes	Yes	No
 
## ▣ Map Icons and Functions

You can display or hide the icons using voice commands on the map screen (e.g., say  "Display hospital").

 **▣ Map Display Commands** P. 242

Some icons, like police stations, are not shown, but you can still locate the nearest one with the Find Nearest voice command (e.g., say  "Find nearest police station").

**▣ Find Place Commands** P. 243


### Icon display control

Icons that can be displayed or hidden using the Interface Dial or voice command.

### Icon selectable

Icons that can be selected as a destination using the Interface Dial.
 
### Icon searchable

Icons that can be searched using the  Find Nearest voice command.

■ Traffic icon


Type	Icon display control	Icon selectable	Icon searchable
Traffic speed	Yes	No	No
Traffic incident	Yes	No	Yes

■ Weather icon


Type	Icon display control	Icon selectable	Icon searchable
Weather info.	Yes	No	No

☒ Traffic Incident


When you use the Interface Dial to position the cursor (round red circle) over the traffic incident icon, you can view the summary of the incident.

Press  on the traffic incident icon to view a pop-up message describing the incident in detail.

## Weather Information



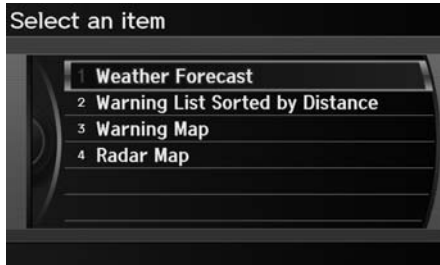

 ENTER button (on map) ▶ **Weather Info**

View the weather forecast, warning list, warning map, and radar image map.




Rotate  to select an item. Press .



The following items are available:

- **Weather Forecast:** Displays the weather forecast.  
 **Weather Forecast** P. 114
- **Warning List Sorted by Distance:** Displays a list of weather warnings.  
 **Warning List** P. 115
- **Warning Map:** Displays a color-coded weather warning map.  
 **Warning Map** P. 116
- **Radar Map:** Displays a color-coded weather radar image map.  
 **Radar Map** P. 117

### Weather Information

This feature requires an AcuraLink Real-Time Weather™ subscription.

 **Subscribing to SiriusXM® Radio** P. 144

You can also display the weather information menu from the INFO screen. Press the INFO button. Rotate  to select **Weather Info** and press .

You can display weather and related information on the map screen using voice commands.

 **Map Display Commands** P. 242

AcuraLink Real-Time Weather™ is a fee-based subscription service available after a complimentary 90-day trial period. You must purchase the subscription if you want to continue receiving weather information after the trial.

Weather information is updated automatically every one minute.



 **Traffic and Weather Status** P. 63

## Weather Forecast

📍 ENTER button (on map) ▶ **Weather Info** ▶ **Weather Forecast**


View the weather forecast for your current position or a city you select.





1. Rotate  to select an item. Press .

The following items are available:

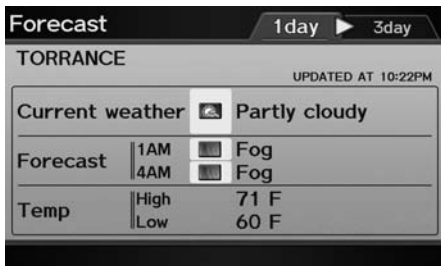- **City Vicinity:** Displays the weather forecast for the selected city. You are prompted to select the city.
  - ▶ **Selecting a City** P. 72
- **Current Position:** Displays the weather forecast for your current position.



2. Move  or  to select **1day** or **3day** to display the 1-day or 3-day forecast for the location.

## Weather Forecast

When the GPS signal or weather information cannot be received, "NA" or "No Data" is displayed.

You can access the same weather information by selecting the weather icon for a city on the map screen.

## Warning List

ENTER button (on map) ▶ **Weather Info** ▶ **Warning List Sorted by Distance**

View a list of all weather warnings for a given location or route (U.S. only).



1. Rotate to select a warning. Press .
  - ▶ Move or to select **All US**, **Within 500mi**, or **On Route** to specify the warnings to display.
  - ▶ The system displays the detailed information.
2. Press to listen to the weather warning.

## Warning List

A warning icon in the list indicates that your vehicle is in the warning area or that the calculated route runs through the area.

The “On Route” tab is available only when you are following route guidance.

You can also say “Read List” to listen to the weather warning information.



## Warning Map

📍 ENTER button (on map) ▶ **Weather Info** ▶ **Warning Map**

View a color-coded weather warning map. Each color corresponds to a different type of warning.



### Weather Warning

SAN DIEGO CA

Severe Thunderstorm Warning

Expires 1:00 AM CDT, AT 1208 AM  
CDT, MOVING SOUTHEAST AT 25  
MPH

RETURN

1. Scroll the map to position the cursor over a colored area, adjusting the map scale as necessary. Press to select **WEATHER DETAIL**.

▶ The system displays the detailed information.

2. Press to listen to the weather warning.

## Warning Map

You can change the map scale to 15, 50, or 150 miles.

You can also say "Read List" to listen to the weather warning information.

A visual guide helps you see a weather warning map.

**AcuraLink Real-Time Weather™** P. 15

## ■ Radar Map

📍 ENTER button (on map) ▶ **Weather Info** ▶ **Radar Map**

View a weather radar image map displaying rain and snow systems.



Scroll the map to view weather information, adjusting the map scale as necessary.

## ☒ Radar Map

You can change the map scale to 50, 150, or 350 miles.

A visual guide helps you see a weather radar image map.

☒ **AcuraLink Real-Time Weather™** P. 15

## Traffic Rerouting™

When driving to your destination, the system automatically searches for a faster route based on traffic flow information and traffic incidents.

▶ **AcuraLink Real-Time Traffic™** P. 15

▶ **Traffic Rerouting** P. 52



### Traffic Rerouting™ Manually

🗨 ENTER button (on map) ▶ **Traffic Incidents**

Manually avoid specific incidents and/or congestion on your route:



1. Rotate 🗨 to select an incident from the list. Press 🗨.

▶ The system displays the map screen and the incident location.

### ▶ Traffic Rerouting

This feature requires an AcuraLink Real-Time Traffic™ subscription.

▶ **Subscribing to SiriusXM® Radio** P. 144

AcuraLink Real-Time Traffic™ is a fee-based subscription service available after a complimentary 90-day trial period. You must purchase the subscription if you want to continue receiving the traffic information after the trial.

Automatic traffic rerouting may not provide a detour route depending on circumstances.

Traffic information is updated automatically.

▶ **Traffic and Weather Status** P. 63



### ▶ Traffic Rerouting™ Manually


🗨 "Display traffic incidents", 🗨 "Display traffic list"



You can also display the traffic incidents from the INFO screen.


You can display traffic incidents and related information on the map screen using voice commands.

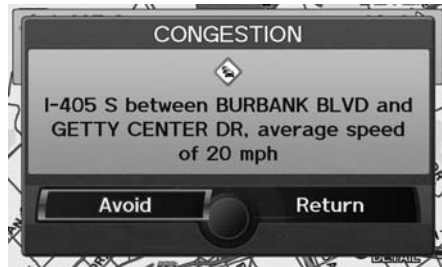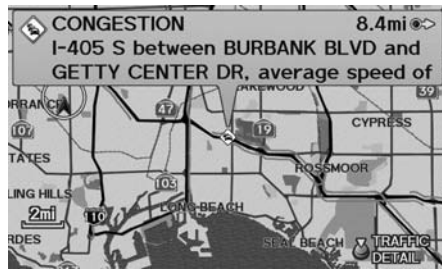▶ **Map Display Commands** P. 242



2. Press  to select **TRAFFIC DETAIL**.

3. Rotate  to select **Avoid**. Press .  
▶ Repeat step 1 to 3 as necessary.

4. Move  to select **REROUTE**.  
▶ The system recalculates a detour route that avoids the traffic incidents.

#### » Traffic Rerouting™ Manually

You can choose to avoid up to 10 traffic incidents. It is not always possible for the system to calculate a route that avoids all traffic incidents or specific traffic incidents you select.

The “On Route” tab on the Traffic List screen is only available during route guidance.

You cannot select an incident to avoid from the “All” tab.

You can also detour around a traffic incident manually if you encounter an unexpected obstacle or do not have an AcuraLink Real-Time Traffic™ subscription.

» **Taking a Detour** P. 121

# Changing Your Route







 DEST/ROUTE button (when en route)

This section describes how to alter your route, add an interim “waypoint” (pit stop), choose a different destination, cancel your current destination, and continue your trip after stopping.


 


Rotate  to select an item. Press .

The following items are available:

- **Cancel Route:** Cancels the route guidance.  
 **Canceling the Route** P. 121
- **Detour:** Calculates a detour route.  
 **Taking a Detour** P. 121
- **Avoid Streets:** Avoids streets along your route.  
 **Avoiding Streets** P. 121
- **Change Route Preference:** Changes the route preferences (calculating method).  
 **Changing the Route Preference** P. 90
- **Waypoint:** Sets waypoints along your route.  
 **Adding Waypoints from the Route Menu** P. 123
- **Destination Lists:** Shows a list of waypoints. You can delete waypoints or edit the order of them.  
 **Editing the Destination List** P. 126


## Changing Your Route

 “Display Destination”,  “Display Navigation” (when en route)

If you press the DEST/ROUTE button when not en route, the Destination Menu screen is displayed.


 **Entering a Destination** P. 68

## Canceling the Route

 DEST/ROUTE button (when en route) ▶ **Cancel Route**


Cancel the route guidance and remove the destination and all waypoints from the destination list. The system then returns to the map screen.

## Taking a Detour

 DEST/ROUTE button (when en route) ▶ **Detour**



Calculate a detour route manually. The system attempts to calculate a new route by avoiding the next 5 miles (while on a freeway) or 1 mile (while on a surface street).

## Avoiding Streets

 DEST/ROUTE button (when en route) ▶ **Avoid Streets**

Select a street or streets along your route to avoid.



1. Rotate  to select the street you want to avoid. Press .
- ▶ Repeat the procedure to avoid other streets.
- ▶ Streets to be avoided are indicated with a trash icon.

### Canceling the Route

You can also cancel your route from the Map Menu.

▶ **Map Menu** P. 97

### Taking a Detour

The detour option is convenient if you encounter an unexpected obstacle such as a road closure or extremely heavy traffic congestion.

### Avoiding Streets

Avoiding certain streets is convenient if you know of road construction, road closures, or excessive traffic along the route.

You cannot choose specific streets you want to use, only those to avoid. However, you can select intersections or waypoints (places/landmarks) that the system will use in your route.

▶ **Adding Waypoints** P. 122

You can store up to 10 streets to avoid. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).



2. Move  to select OK.

► The system calculates a new route.

## Adding Waypoints

Add up to four waypoints (pit stops) along the route to your destination.



Waypoints are displayed on the map screen as small, numbered red flags. The route follows the waypoints in the order they are listed in the Destination List.

### ► Adding Waypoints

Waypoints allow you to stop for gas or food, for example, and then continue on to your destination.

Press the MAP/GUIDE button to return to the map screen without adding a waypoint at any time.

The search corridor used for adding waypoints can be adjusted.

► **Edit Waypoint Search Area** P. 55

You can delete waypoints or edit the order of waypoints in the destination list.

► **Editing the Destination List** P. 126

## ■ Adding Waypoints from the Route Menu


📍 DEST/ROUTE button (when en route) ▶ **Waypoint**



1. Rotate 🔄 to select a search method to add a waypoint. Press 📍.

The following options are available:

- **SEARCH AROUND:** Searches in a spiral pattern around the location you select.
- **SEARCH ALONG:** Searches within a "corridor" on either side of the locations you select.

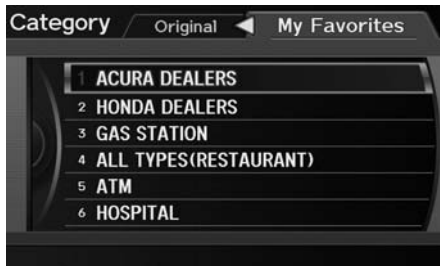

2. Rotate 🔄 to select a waypoint category (e.g., **GAS STATION**). Press 📍.



## ▣ Adding Waypoints

### Search method







3. Rotate  to select a place. Press .

► The waypoint is added to the Destination List.





4. Move  to select OK.



► The route is automatically recalculated and displayed on the map screen.

## ■ Adding Waypoints from the Calculate Route Screen



1. Rotate  to select ADD TO Dest. List. Press .



2. Rotate  to select a location in the Destination List. Press .




3. Move  to select OK.


▶ The route is automatically recalculated and displayed on the map screen.


## Editing the Destination List



📍 DEST/ROUTE button (when en route) ► **Destination Lists**

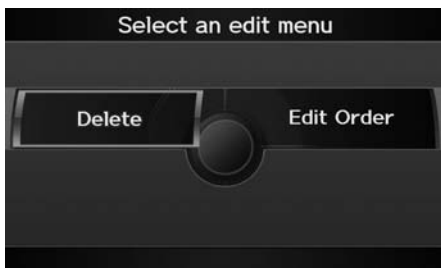Delete or edit the order of waypoints.



1. Move  to select **Edit**.





 

► Move  to select **Map** to display the destination and waypoints on the map screen.

2. Rotate  to select an item. Press .

3. Move  to select **OK**.

► The route is automatically recalculated and displayed on the map screen.

The following options are available:

- **Delete:** Rotate  to select a list item to delete. Press .
- **Edit Order:** Rotate  to select a list item to move, press , rotate  to select a new location, and press  again.

# Changing Your Destination

There are several methods you can use to change the route destination.

## Find Nearest Place

🗨 ENTER button (on map) ► **Find Nearest...**

Search for the nearest place/landmark on the map screen and set it as your destination.



1. Rotate 🔄 to select **Find Nearest...** Press 🗨.
2. Rotate 🔄 to select a category type. Press 🗨.
3. Rotate 🔄 to select a place. Press 🗨.
4. Rotate 🔄 to set the place as a destination or add to the destination list. Press 🗨.  
► The system calculates the route.  
➡ **Calculating the Route** P. 89

### Find Nearest Place


🗨 "Find Nearest..." (on map screen)





The Find Nearest voice command is the fastest method of specifying a place/landmark as your destination. Many kinds of places can be found.

➡ **Find Place Commands** P. 243
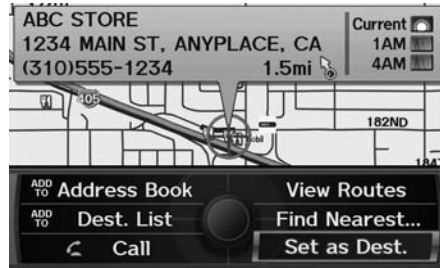
## Selecting a Destination on the Map


Select a new destination when en route by selecting a location on the map.







1. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .  
▶ If the address displayed is not the desired location, press the CANCEL button and repeat the procedure.
  2. Rotate  to select OK or Set as Dest. (depending on the screen displayed). Press .
-  **Calculating the Route P. 89**

### Selecting a Destination on the Map

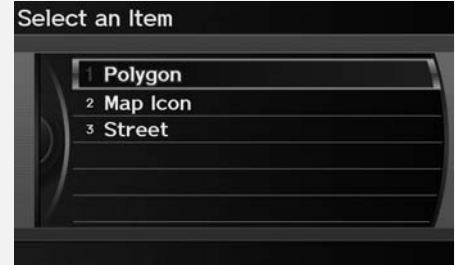 If there is more than one icon or street under the map cursor, you are prompted to select the item from a list.



- Rotate  to select an item. Press .
- If you select **Map Icon**, rotate  to select a place and press .



3. Rotate to select an option. Press .

► The route is automatically recalculated and displayed on the map screen.

The following options are available:

- **New Dest.:** Sets the location as your new destination.
- **Waypoint:** Sets the location as a new waypoint.

## Entering a New Destination

DEST/ROUTE button (when en route) ► **Dest. MENU 1** or **Dest. MENU 2**

Enter a new destination using the Destination Menu screen even when you are en route.



1. Rotate to select a method to enter a new destination.

► **Entering a Destination P. 68**



► After entering a new destination, the address is displayed on the Calculate Route screen.

2. Rotate to select **OK**. Press .

### ▣ Entering a New Destination

"Display Destination", "Display Navigation"



3. Rotate  to select an option.  
Press .

► The route is automatically recalculated and displayed on the map screen.

The following options are available:



- **New Dest.:** Sets the location as your new destination.
- **Waypoint:** Sets the location as a new waypoint.


# Resuming Your Trip

Stop your vehicle en route (e.g., to rest, stop for gas, etc.), and then continue on your route.

If you did not complete your route, the Continue Trip screen is displayed when you restart your vehicle.



Rotate  to select **OK**. Press .  
▶ You can continue on the same route.

- **Route Pref.:** Changes the route preferences (calculating method).  
▶ **Changing the Route Preference** P. 90
- **View Routes:** Displays three different routes.  
▶ **Viewing the Routes** P. 90
- **DESTINATION MAP:** Move  to select **DESTINATION MAP** to display a map of the destination.  
▶ **Calculating the Route on the Destination Map** P. 91

## ▶ Resuming Your Trip

The Continue Trip screen has the same options as when you calculate a route.

▶ **Calculating the Route** P. 89

To cancel your destination, press the CANCEL button.

### **Add to Address Book**

You can add the destination address to the address book.

▶ **Adding an Address Book Entry** P. 37

### **Add to Dest. List**

You can add the address to the Destination List.

▶ **Editing the Destination List** P. 126

### **Call**

You can place a phone call to the destination phone number.


▶ **Bluetooth® HandsFreeLink®** P. 178





# Audio

This section describes how to operate the audio system. You can play music from a wide array of media sources, and control the audio system using the audio buttons, the Interface Dial, or voice control.

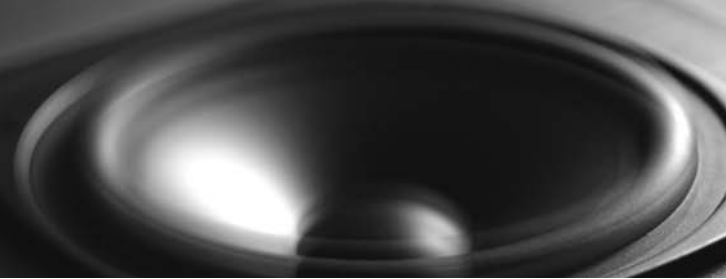

<b>Audio System</b> .....	134	Playing MP3/WMA/AAC Discs .....	147	<b>Playing Pandora®</b> .....	164
About Your Audio System .....	134	Recommended Discs .....	148	Selecting Pandora® Mode .....	164
Auxiliary Input Jack .....	134	<b>Playing Hard Disc Drive (HDD) Audio</b> .....	149	Audio Screen Control .....	165
System Theft Protection .....	135	Selecting HDD Mode .....	149	Audio Menu .....	166
<b>Playing FM/AM Radio</b> .....	136	Audio Screen Control .....	150	QuickMix .....	167
Selecting FM/AM Mode .....	136	Audio Menu .....	150	<b>Playing a USB Flash Drive</b> .....	168
Audio Screen Control .....	136	Recording a Music CD to HDD .....	152	Selecting USB Mode .....	169
Audio Menu .....	137	Searching for Music .....	154	Audio Screen Control .....	169
Radio Data System (RDS) .....	138	Editing a Playlist or Album .....	155	Audio Menu .....	170
<b>Playing SiriusXM® Radio</b> .....	140	Editing Track Information .....	156	Playing Tracks in Folders .....	171
Selecting SiriusXM® Mode .....	140	Displaying Music Information .....	157	<b>Playing Bluetooth® Audio</b> .....	172
Audio Screen Control .....	140	Updating Gracenote® Album Info .....	158	Selecting Bluetooth® Audio Mode .....	172
Audio Menu .....	141	<b>Playing an iPod®</b> .....	159	Switching to HFL Mode .....	173
Note Function .....	142	Selecting iPod® Mode .....	160	Audio Screen Control .....	173
SiriusXM® Radio Service .....	144	Audio Screen Control .....	160	<b>Adjusting the Sound</b> .....	174
<b>Playing a Disc</b> .....	145	Audio Menu .....	161	<b>Audio Remote Controls</b> .....	175
Selecting Disc Mode .....	145	Searching for Music .....	162	Steering Wheel Controls .....	175
Audio Screen Control .....	145	<b>Searching for Music Using Song By Voice™ (SBV)</b> .....	163		
Audio Menu .....	146				


## About Your Audio System

The audio system features FM/AM radio and SiriusXM® Radio. It can also play audio discs, WMA/MP3/AAC tracks, iPod®, USB flash drives, and Bluetooth® devices.

The audio system is operable from the buttons and switches on the panel, or the remote controls on the steering wheel.


➤ **Audio Remote Controls** P. 175

➤ **Audio System** P. 6

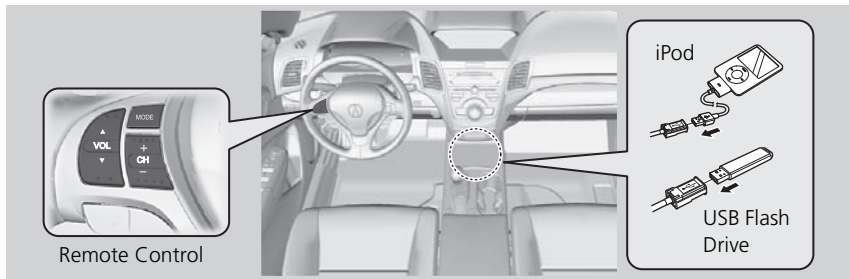

## Auxiliary Input Jack

Use the jack in the front console compartment to connect standard audio devices.

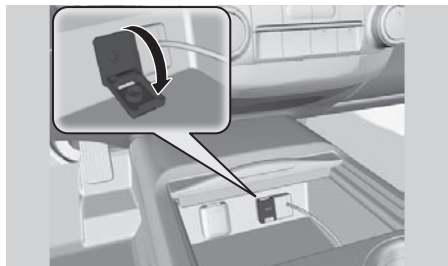

1. Open the AUX cover.
2. Connect a standard audio device to the input jack using a 1/8 inch stereo miniplug.
  - ▶ The audio system automatically switches to the AUX mode.

### ➤ About Your Audio System

You can operate the audio system by voice commands.

➤ **Audio Commands** P. 245

In some cases, the name of the artist, album, or track may not appear correctly.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

SiriusXM® Radio is available on a subscription basis only.

➤ **SiriusXM® Radio Service** P. 144

SiriusXM® Radio is available in the United States and Canada, except Hawaii, Alaska, Puerto Rico, and Mexico.

SiriusXM® is a registered trademark of Sirius XM® Radio, Inc.

Video CDs, DVD-Videos, and 3-inch mini discs are not supported.

iPod® and iPhone® are registered trademarks owned by Apple Inc.

### ➤ Auxiliary Input Jack


To switch the mode, press any of the other audio mode buttons. You can return to the AUX mode by pressing the HDD/AUX button.

You cannot use the auxiliary input jack if you replace the audio system.

## System Theft Protection

The system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead.

### ■ Reactivating the System

1. Set the power mode to ON, and turn on the system.
  - ▶ If you set the power mode to ACCESSORY, you will be requested to enter the security code. See step 3.
2. Press and hold the VOL  (Volume/Power) button again for more than two seconds.
  - ▶ The system is reactivated when the system's control unit recognizes that the system is in your vehicle.
  - ▶ If the control unit fails to recognize, "ENTER CODE" appears on the navigation screen.
3. Enter the security code.
  - ▶ If you do not enter the code correctly after 10 tries, leave the system for one hour before trying again, or visit a dealer to have the system reset.

### ▶▶ Audio System Theft Protection

Find the audio system's security code and serial number label in your Owner's Manual kit.

Do not store the label in your vehicle. If you lose the label, you must first retrieve the serial number, and then obtain the code from a dealer.

#### U.S. Only


You can register the security code at Acura Owners ([owners.acura.com](http://owners.acura.com)), and find information on how to retrieve the serial number and obtain the code at [radio-navicode.acura.com](http://radio-navicode.acura.com).

▶▶ **Entering the Security Code** P. 228


## Selecting FM/AM Mode






1. Press the FM/AM button.
  - ▶ Press the FM/AM button again, if necessary, to select the frequency band (AM, FM1, FM2).
2. Select a station using the Preset buttons and the bars (SKIP, TUNE, SCAN/A.SEL)
  - ▶ On the FM bands, you can also use the CATEGORY bar and TITLE button to select a station provided by the Radio Data System (RDS).
  - ▶ The band and frequency are displayed on the display.

## Audio Screen Control

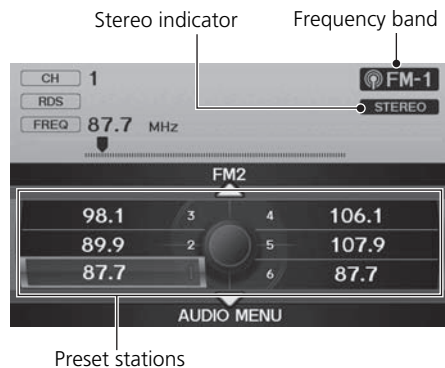
 AUDIO button (in FM/AM mode)

Control the audio system through the navigation screen.



1. Move  to select a frequency band (AM, FM1, or FM2).
2. Rotate  to select a preset station. Press .
- ▶ Press and hold  until a beep sounds to store the current station in a preset button.
- ▶ Move  to select **AUDIO MENU**.
  - ▶ **Audio Menu P. 137**

### ▶ Playing FM/AM Radio

 "Display audio screen"

You can control the radio using voice commands.

▶ **Radio Commands P. 245**

A visual guide helps you operate the audio system.

▶ **System Controls P. 4**

▶ **Basic Operation P. 6**

The ST indicator comes on the display for stereo FM broadcasts. Stereo reproduction in AM is not available.


The radio can receive the complete AM and FM bands:

AM band: 530 to 1710 kHz

FM band: 87.7 to 107.9 MHz

You can store six AM stations and 12 FM stations in the preset buttons. FM1 and FM2 let you store six stations each.

## Audio Menu

 AUDIO button (in FM/AM mode) ▶ **AUDIO MENU**




Rotate  to select an item. Press .

### ▶▶ Audio Menu

The A.SEL indicator comes on the display when **A.Sel** is **ON**. If you do not like the stations Auto Select has stored, you can change the frequencies stored in the preset buttons manually. Set **A.Sel** to **OFF** to restore the previous preset button settings.

The following items are available:

- **Sound Setup:** Displays the sound preferences screen.  
▶ **Adjusting the Sound** P. 174
- **Read Radio Text:** Displays the text information broadcast by the current RDS station.  
▶ **Radio Text Display** P. 139
- **RDS Search:** Searches for programs by RDS category.  
▶ **Searching for Programs by RDS Category** P. 138
- **Scan:** Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Scan** again to stop scanning and play the current selection.
- **A.Sel (Auto Select):** When set to **ON**, scans and automatically stores up to six AM stations and 12 FM stations with a strong signal in the preset buttons.
- **Tune:** Tunes the radio to the frequency you select. Rotate  to select a frequency.

## Radio Data System (RDS)

Provides text data information related to your selected RDS capable FM station.

### RDS Info Display



Press the TITLE button to turn RDS information on or off. When set to ON, the name of the FM station is displayed on the display. When set to OFF, the frequency of the station is displayed.



### Searching for Programs by RDS Category

 AUDIO button (in FM/AM mode) ▶ **AUDIO MENU** ▶ **RDS Search**

Search for FM stations with a strong signal that are broadcast the selected RDS category information.



1. Move  or  to select a search method (Seek up, Seek down, Scan).

2. Rotate  to select a category. Press .

- ▶ Scanning for stations in that category begins. When an RDS station is found, it begins to play.
- ▶ If there are no RDS-capable stations in the area, "NOTHING" briefly appears on the display.

## ■ Radio Text Display

🔊 AUDIO button (in FM/AM mode) ▶ **AUDIO MENU** ▶ **Read Radio Text**

Display the radio text information of the selected RDS station.



## ☒ Radio Text Display


The RDS indicator comes on the display when the selected RDS station is broadcasting text data.



## Selecting SiriusXM® Mode



 


1. Press the SiriusXM® button.
  - ▶ Press the SiriusXM® button again, if necessary, to select the channel band (XM1, XM2).
2. Select a channel using the Preset buttons and the bars (SKIP, TUNE, CATEGORY, SCAN/A.SEL)
  - ▶ The band and channel are displayed.

## Audio Screen Control


 AUDIO button (in SiriusXM® mode)

Control the audio system through the navigation screen.



1. Move  to select the channel band (XM1, XM2).
2. Rotate  to select a preset channel. Press .
  - ▶ Press and hold  until a beep sounds to store the current channel in a preset button.
  - ▶ Move  to select **AUDIO MENU**.
    - ▶ **Audio Menu P. 141**

### ▶ Playing SiriusXM® Radio

 "Display audio screen"

You can control the radio using voice commands.

▶ **Radio Commands P. 245**

A visual guide helps you operate the audio system.

▶ **System Controls P. 4**

▶ **Basic Operation P. 6**

In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.

You can store 12 SiriusXM® stations in the preset buttons. XM1 and XM2 let you store six stations each.

SiriusXM® Radio display messages will be displayed on the audio screen.

▶ **SiriusXM® Radio Display Messages P. 144**




## Audio Menu

 AUDIO button (in SiriusXM® mode) ▶ **AUDIO MENU**



Rotate  to select an item. Press .

The following items are available:

- **Sound Setup:** Displays the sound preferences screen.  
 **Adjusting the Sound** P. 174
- **Mode:** Sets **CH** (channel mode) or **CAT** (category mode) scan mode.
- **Note:** Displays a list of stored audio samples.  
 **Note Function** P. 142
- **Channel List:** Displays the list of available channels. Scroll the list to select a channel.
- **Channel Scan:** Scans for channels with a strong signal in the current band and plays a 10-second sample. Select **Channel Scan** again to stop scanning and play the current selection.
- **Category Scan:** Scans for channels with a strong signal in the selected category in the current band and plays a 10-second sample. Select **Category Scan** again to stop scanning and play the current selection.
- **Tune:** Tunes to the channel you select. Rotate  to select a channel.

## Note Function


Record a 10-second sound file from the current channel that contains the channel, category, name, and title information.

### Recording a Sound File



1. When tuned to the channel you want to record, press and hold the SiriusXM® button for a few seconds to start recording.
2. Press the SiriusXM® button again to stop the recording if less than 10 seconds have elapsed.

### Replaying a Sound File

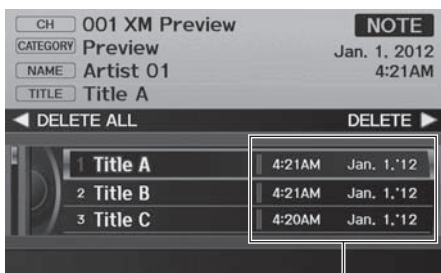 AUDIO button (in SiriusXM® mode) ▶ **AUDIO MENU** ▶ **Note**



Recorded date


Rotate  to select a sound file. Press .

### Recording a Note

The system can store up to 30 sound files. When this limit is reached, the oldest file is deleted each time you add a new recording.

## ■ Deleting a Sound File


📻 AUDIO button (in SiriusXM® mode) ▶ **AUDIO MENU** ▶ **Note**

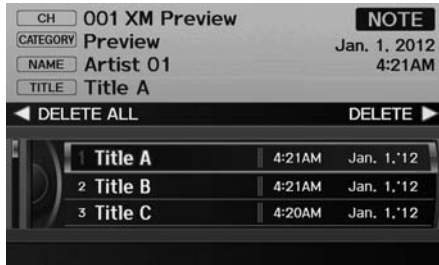

1. Rotate 📻 to select a sound file.  
▶ To delete all files, proceed to step 2.
2. Move ◀○ or ○▶ to select **DELETE ALL** or **DELETE**.
3. Rotate 📻 to select **Yes**. Press 📻.

## SiriusXM® Radio Service

### ■ Subscribing to SiriusXM® Radio

1. You need your radio ID ready before registering for subscription.
  - ▶ To see the ID in the display, press the  (TUNE) bar while in SiriusXM® mode until "0" appears in the center display.
2. Have your radio ID and credit card number ready, and either call SiriusXM® or visit the SiriusXM® website to subscribe.

### ■ Receiving SiriusXM® Radio

Press the SiriusXM® button and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

### ■ SiriusXM® Radio Display Messages

**LOADING:** SiriusXM® is loading the audio or program information.

**OFF AIR:** The channel is not currently broadcasting.

**UPDATING:** The encryption code is being updated. Channels 0 and 1 still work normally.

**NO SIGNAL:** The signal is too weak in the current location.

-----: No such channel exists, the channel is not part of your subscription, or the artist or title information is not available.

**CHECK ANTENNA:** There is a problem with the SiriusXM® antenna. Contact a dealer.

### ☒ Subscribing to SiriusXM® Radio

Contact Information for SiriusXM® Radio:

**U.S.:** SiriusXM® Radio at [www.siriusxm.com](http://www.siriusxm.com), or (800) 852-9696

**Canada:** SiriusXM® Canada at [www.xmradio.ca](http://www.xmradio.ca), or (877) 209-0079

### ☒ Receiving SiriusXM® Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.


You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle
- In tunnels
- On the lower level of a multi-tiered road
- Large items are carried on the roof rack


## Selecting Disc Mode

1. Press the DISC button to play a CD or other disc.
2. Insert a disc into the disc slot.
  - ▶ The disc automatically begins playing.
3. Select a track using the bars (SKIP, TUNE, CATEGORY, SCAN/A.SEL).
  - ▶ The track number and elapsed time are displayed on the display. Title information for audio CDs is displayed if found in the Gracenote® Album Info (Gracenote® Media Database) stored on the built-in hard disc drive (HDD). Text information stored on MP3/WMA/AAC discs is also displayed.

## Audio Screen Control

 AUDIO button (in DISC mode)


Control the audio system through the navigation screen.

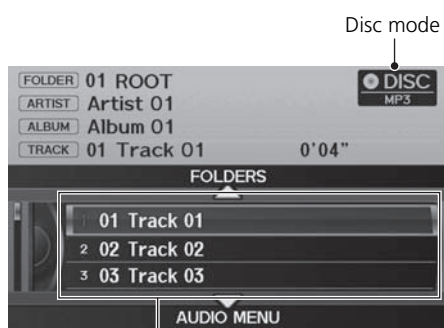



Track list

Disc mode

Rotate  to select a track. Press .


▶ Move  to select **FOLDERS** to display the list of folders on MP3/WMA/AAC discs having a folder structure.

 **Playing MP3/WMA/AAC Discs**  
P. 147

▶ Move  to select **AUDIO MENU** to display the Audio Menu.

 **Audio Menu** P. 146

### ▶▶ Playing a Disc

 "Display audio screen"

You can control the disc using voice commands.

 **Disc Commands** P. 246

A visual guide helps you operate the audio system.

 **System Controls** P. 4

 **Basic Operation** P. 6

Do not use discs with adhesive labels. The label can cause the disc to jam in the unit.

**WMA and AAC tracks protected by digital rights management (DRM) cannot be played.**

The audio system displays "Unplayable File," then skips to the next track.

If there is a problem, you may see an error message on the display.

 **Error Messages** P. 223

If you eject the disc but do not remove it from the slot, the system reloads the disc automatically after several seconds.

### ▶▶ Pausing a Disc

Press the preset 1 button. To resume playing the disc, press the button again.





## Audio Menu

🔑 AUDIO button (in DISC mode) ▶ **AUDIO MENU**





Rotate  to select an item. Press .

The following items are available, depending on the type of disc:

- **Record CD:** Records a music CD onto the HDD for playback using HDD Audio.
  - ▶ **Recording a Music CD to HDD** P. 152
- **Sound Setup:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 174
- **HDD Setup:** Displays menu for setting HDD preferences for recording music CDs and for updating Gracenote® information.
  - ▶ **Recording a Music CD to HDD** P. 152
  - ▶ **Music Search Setup** P. 44
  - ▶ **Updating Gracenote® Album Info** P. 158
- **Repeat:**
  - : Repeats the current track.
  - : Repeats all tracks in the current folder.
- **Random:**
  - : Plays all tracks on the current disc in random order.
  - : Plays all tracks in the current folder in random order.

- **Scan:**

: Scans all tracks on the disc (or in the selected folder) in the order they were recorded (stored) and plays a 10-second sample. Select **OFF** to stop scanning and play the current selection.





: Scans the first track in each folder on the disc and plays a 10-second sample. Select **OFF** to stop scanning and play the current selection.

## Playing MP3/WMA/AAC Discs

 AUDIO button (in DISC mode) ▶ **FOLDERS**

Change the folder on MP3/WMA/AAC discs that have tracks stored in a folder structure.



1. Rotate  to select a folder. Press .
  - ▶ The system displays the track list.
2. Rotate  to select a track. Press .
  - ▶ The system begins playing the selected track.

### ▶▶ Playing MP3/WMA/AAC Discs

#### Folder List

- Any tracks not in a folder are automatically added to a "ROOT" folder, which is displayed at the top of the Folder List.
- If the root folder has additional folders in a lower layer, they are listed on the screen.



## Recommended Discs

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped discs.
- Use DVD-R/RW discs that meet DVD verification standards.

The disc packages or jackets should have one of these symbols.



Also includes:



### ■ Recording to HDD

- Only standard CD-DA (44.1 kHz, 16 bit stereo PCM digital sound data) discs can be recorded to HDD.
- Digital music tracks, such as MP3, WMA, AAC, etc., in CD-R or DVD-R cannot be copied to HDD. Likewise, digital music tracks recorded to HDD cannot be copied to CD-R and DVD-R.

### ■ Discs with MP3, WMA, or AAC Tracks

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported. If an unsupported track is found, the audio unit displays "Unplayable File," and then skips to the next track.

### ☒ Recommended Discs

A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.


Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

The Hard Disc Drive (HDD) Audio function plays tracks from music CDs that have been recorded onto the built-in HDD. You can arrange the tracks in playlists or play the tracks using various search methods.

## Selecting HDD Mode

1. Press the HDD/AUX button to play tracks stored on the HDD.
2. Select a track by genre, artist, album, recording date, playlist, or track list.
  - ▶ The track number and elapsed time are displayed on the display. Title information is displayed if found in the Gracenote® Album Info (Gracenote® Media Database) stored on the HDD.
  - ▶ The HDD has two types of playlists: original playlists and user playlists. An original playlist is automatically created for each album when a music CD is recorded. You can customize up to six user playlists provided on the HDD by adding tracks from your original playlists.

### ▶▶ Playing Hard Disc Drive (HDD) Audio


 "Display audio screen"

You can control the HDD audio using voice commands.

 **HDD Commands** P. 246

A visual guide helps you operate the audio system.

 **System Controls** P. 4

 **Basic Operation** P. 6

Music tracks recorded on HDD cannot be recorded onto CDs or other devices.

Tracks are recorded at four times the playback speed using ultra-efficient compression technology; therefore, sound quality may vary slightly from the original.

If the HDD is ever replaced, all music data is lost and cannot be recovered.


If there is a problem, you may see an error message on the display.

 **Error Messages** P. 223

## Audio Screen Control

🔊 AUDIO button (in HDD mode)

Control the audio screen through the navigation system.

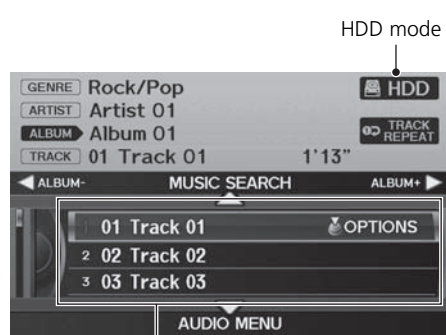

Track list

Rotate 🔄 to select a track. Press 🔊.

▶ Move ◀ or ▶ to select **ALBUM-** or **ALBUM+** to change albums.

▶ Move 🔍 to select **MUSIC SEARCH** to display the Music Search Menu.  
➡ **Searching for Music P. 154**

▶ Move 🗨 to select **AUDIO MENU**.  
➡ **Audio Menu P. 150**

### Audio Screen Control

#### Track Options

When you press 🔊 to select **OPTIONS**, the following track options are displayed:

- **Add to Playlist:** Adds the current track to a user playlist.
- **Edit Track Info:** Edits artist name and track name.
- **Delete:** Deletes the current track.

 

 
## Audio Menu

🔊 AUDIO button (in HDD mode) ▶ **AUDIO MENU**



Rotate 🔄 to select an item. Press 🔊.

The following items are available, depending on the type of playlist:

- **Sound Setup:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 174
- **Repeat**
  - : Repeats the current track.
- **Random**
  - : Plays all tracks on the HDD in random order.
- **Scan**
  - : Scans all tracks on the HDD in the order they were recorded and plays a 10-second sample. Select **OFF** to stop scanning and play the current selection.
- **Get Album Info:** Gets the original title information for a track in a user playlist from an original playlist.
  - ▶ **Displaying Music Information** P. 157
- **Edit Album (original playlists):** Edits album name, artist name, and genre. You can also delete albums.
  - ▶ **Editing a Playlist or Album** P. 155
- **Edit Playlist (user playlists):** Edits playlist name, artist name, genre, and track order in playlists. You can also delete playlists.
  - ▶ **Editing a Playlist or Album** P. 155
- **Edit Track:** Edits artist name and track name. You can also delete tracks.
  - ▶ **Editing Track Information** P. 156
- **HDD Setup:** Displays menu for setting preferences for recording music CDs and updating Gracenote® information.
  - ▶ **Recording a Music CD to HDD** P. 152
  - ▶ **Music Search Setup** P. 44
  - ▶ **Updating Gracenote® Album Info** P. 158

## Recording a Music CD to HDD

The songs on music CDs are automatically recorded by factory default to the HDD the first time you play each disc. You can then play the songs directly from the HDD.



Audio

### Stopping Recording

1. Move to select AUDIO MENU.
2. Rotate to select Cancel CD Recording. Press .

### Recording a Music CD to HDD

You can add tracks to user playlists, where you can mix and match tracks from other CDs recorded on the HDD.

- ▶ **Editing a Playlist or Album** P. 155
- ▶ **Editing Track Information** P. 156

If you stop the engine or the power system is turned off while recording a CD, there may be pauses between songs when you play back from the HDD.

Repeat, random, and scan functions are not available during recording.

You can play music from other sources (e.g., SiriusXM®, HDD, etc.) while recording.


Please note that there is no compensation offered in the case of unsuccessful recording of audio data or the loss of audio data due to any cause whatsoever.

### Clearing the HDD






 


Any music tracks stored on the HDD can be deleted. Select **Music on HDD** in the Clear Personal Data menu.



- ▶ **Clear Personal Data** P. 65

## Recording a CD Manually

 AUDIO button (in DISC or HDD mode) ▶ **AUDIO MENU** ▶ **HDD Setup**



1. Rotate  to select **CD Recording**. Press .
2. Rotate  to select **MANUAL**. Press .
3. Move  to select **RETURN**.
4. Move  to select **AUDIO MENU**.
5. Rotate  to select **Record CD**. Press .

▶ During recording, rotate  to select **Cancel CD Recording**. Press  to cancel.

## Recording a CD Manually

### Music Search Setup

Use this feature to set up the music search abilities when using Song By Voice™ (SBV) commands.

▶ **Music Search Setup** P. 44


## Searching for Music

AUDIO button (in HDD mode) ▶ **MUSIC SEARCH**

Search for music recorded to HDD using six different methods.



1. Rotate to select a search category. Press .

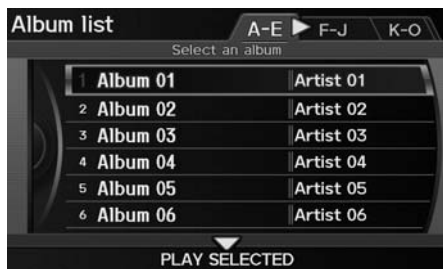

2. Rotate to select an item. Press .

- ▶ Move or to select alphabetical tabs on some screens.
- ▶ The first track begins playing.

### Searching for Music

**Albums**, **Artists**, and **Tracks** display lists in alphabetical order. **Record Date** displays albums in chronological order.

You can also search for music on the HDD through voice commands using SBV.

**Searching for Music Using Song By Voice™ (SBV)** P. 163

#### **SHUFFLE ALL TRACKS**

Move to select **SHUFFLE ALL TRACKS** to shuffle the playback of all tracks that have been recorded to HDD.


#### **PLAY SELECTED**

Move to select **PLAY SELECTED** to play all the items listed below.

## Editing a Playlist or Album





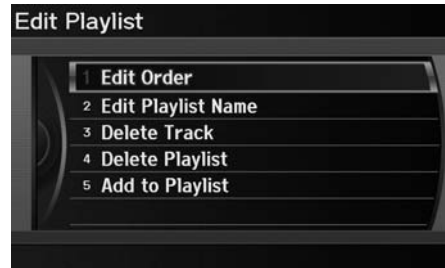



 AUDIO button (in HDD mode) ▶ **AUDIO MENU** ▶ **Edit Album** or **Edit Playlist**

Change the playlist name, album name, genre, and track order of the current playlist. You can also delete tracks, playlists, and albums.



Rotate  to select an item. Press .

The following items are available, depending on the type of playlist:

- **Edit Order (user playlists):** Select the track to move, and then select the new location. Repeat to move more than one track. Move  to select **OK** when finished.
- **Edit Playlist Name (user playlists):** Edits playlist name, artist name, and genre. Rotate  to select an option. Press .
- **Edit Album Name (original playlists):** Edits album name, artist name, and genre. Rotate  to select an option. Press .
- **Delete Track:** Deletes the current track. Rotate  to select **Yes** at the confirmation prompt to delete the current track.
- **Delete Playlist (user playlists):** Deletes the user playlist. Rotate  to select **Yes** at the confirmation prompt to delete the playlist.
- **Delete Album (original playlists):** Deletes the original playlist. Rotate  to select **Yes** at the confirmation prompt to delete the album.
- **Add to Playlist:** Adds the current track to a user playlist.

### ▶▶▶ Editing a Playlist or Album

The maximum number of songs in each of the six user playlists is 999. Adding new songs overwrites the oldest songs.

The maximum number of original playlists is 999 with a maximum of 99 songs in each playlist. Each album CD counts as an original playlist.

Adding a track from a user playlist into the same user playlist will cause the track to appear twice in the playlist.

Deleting an album (original playlist) also deletes the album tracks you have stored in any user playlists.


Deleting a user playlist or deleting all tracks from a user playlist does not remove the playlist folder. The folder retains the playlist name and artist information.



## Editing Track Information

🔑 AUDIO button (in HDD mode) ▶ **AUDIO MENU** ▶ **Edit Track**

Change the album name, track title, artist name, and genre. You can also delete tracks.

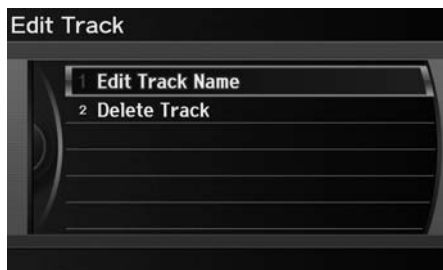

Rotate 🔄 to select an item. Press 🗑️.


The following items are available:

- **Edit Track Name:** Edits track name and artist name. Rotate 🔄 to select an option. Press 🗑️.
- **Delete Track:** Deletes the current track. Rotate 🔄 to select **Yes** at the confirmation prompt to delete the current track.

## Displaying Music Information



 AUDIO button (in HDD mode) ▶ **AUDIO MENU** ▶ **Get Album Info**

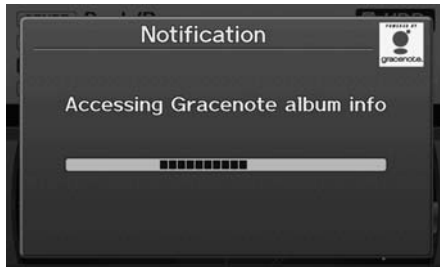Display the music information (album name, artist name, genre) for an album (original playlist).



▶ Gracenote® searches for the information of the currently selected album (original playlist).



Rotate  to select an album. Press .

▶ The information is displayed.

## Updating Gracenote® Album Info


AUDIO button (in HDD or DISC mode) ▶ **AUDIO MENU** ▶ **HDD Setup**

Update the Gracenote® Album Info (Gracenote® Media Database) that is included with the navigation system.



Remaining capacity    Maximum capacity

Gracenote version number

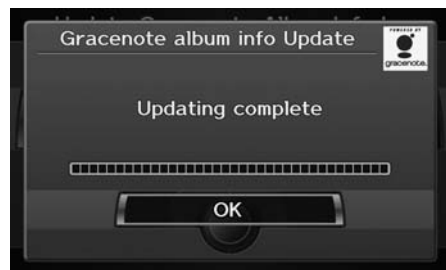

1. Insert the update disc into the disc slot or connect the USB flash drive that includes the update.
2. Rotate to select **Update Gracenote Info**. Press .
3. Rotate to select **USB** or **Disc** update source media. Press .
4. Rotate to select **Yes** on the confirmation screen. Press .  
▶ The system updates the Gracenote information.
5. Rotate to select **OK** on the confirmation screen. Press .


### Updating Gracenote® Album Info

To acquire updated files:

- Consult a dealer.
- U.S.: Visit [www.acura.com](http://www.acura.com).
- Canada: Visit [www.acura.ca](http://www.acura.ca).

Once you perform an update, any information you edited before will be overwritten or erased.

## ■ Connecting an iPod®

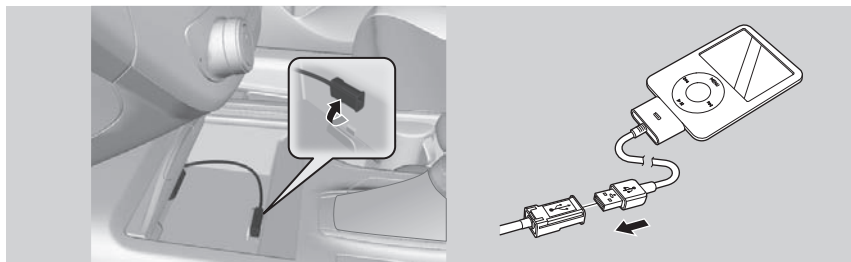

1. Unclip the USB connector in the front console and loosen the adapter cable.
2. Install the iPod® dock connector to the USB connector.

## ■ Model Compatibility

Model
iPod (5th generation)
iPod classic 80/160G (launched in 2007)
iPod classic 120GB (launched in 2008)
iPod classic 160GB (launched in 2009)
iPod nano (1st to 6th generation*) *launched in 2010
iPod touch (1st to 3rd generation*) *launched in 2009
iPhone/iPhone 3G/iPhone 4s

## ⌘ Connecting an iPod®

- Do not use an extension cable with the USB adapter cable.
- Do not connect your iPod® using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.


Your audio system may not work with all software versions of these devices.

If the audio system does not recognize your iPod®, try reconnecting it a few times or reboot the device.


## Selecting iPod® Mode

1. Connect the iPod® to the USB adapter cable in the console compartment.
2. Press the HDD/AUX button until you get to iPod® mode.
3. Select a track using the iPod® menu on the screen.
  - ▶ The current track number and total number of tracks are displayed.



## Audio Screen Control

 AUDIO button (in iPod® mode)

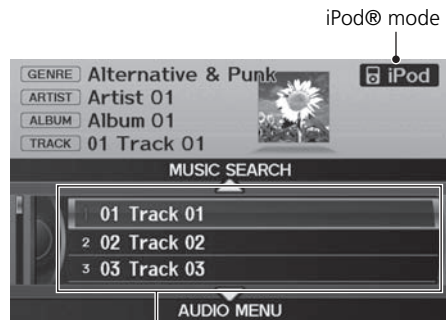
Control the audio screen through the navigation system.



Rotate  to select a track. Press .

- ▶ Move  to select **MUSIC SEARCH** to change songs in the track list.
  - ▶ **Searching for Music** P. 162
- ▶ Move  to select **AUDIO MENU**.
  - ▶ **Audio Menu** P. 161

### ▶▶ Playing an iPod®

 "Display audio screen"

You can control the iPod® using voice commands.

▶ **iPod® Commands** P. 247

A visual guide helps you operate the audio system.

▶ **System Controls** P. 4

▶ **Basic Operation** P. 6

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the display.

▶ **Error Messages** P. 223

## Audio Menu

🔗 AUDIO button (in iPod® mode) ▶ **AUDIO MENU**




Rotate 🔄 to select an item. Press 🏠.


The following items are available:



- **Sound Setup:** Displays the sound preferences screen.  
 📖 **Adjusting the Sound** P. 174
- **Music Search Setup:** Use this feature to set up the music search abilities when using Song By Voice™ (SBV) commands.  
 📖 **Music Search Setup** P. 44
- **Repeat**  
 🔄: Repeats the current track.
- **Shuffle:**  
 🎲: Plays all tracks in the track list in random order.  
 🎲: Plays all tracks in the track list in random order by albums. Each song in an album is played in the right order and only the order of albums is randomized.
- **Album Art:** Sets whether to display the album artwork on the screen.  
 ON (factory default): Displays the album artwork.  
 OFF: Disable the feature.

## Searching for Music

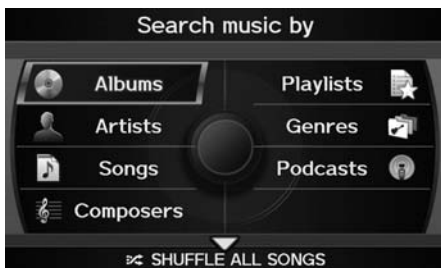

 AUDIO button (in iPod® mode) ▶ **MUSIC SEARCH**

Search for music using the iPod® menu.



1. Rotate  to select a search category. Press .




2. Rotate  to select an item. Press .

▶ The selection begins playing.


### Searching for Music

The order of the track list displayed if you select “All” on the iPod® menu varies depending on the iPod® model and software.


You can also search for music on the iPod® through voice commands using SBV.

 **Searching for Music Using Song By Voice™ (SBV)** P. 163

#### **SHUFFLE ALL SONGS**


Move  to select **SHUFFLE ALL SONGS** to shuffle the playback of all tracks on the iPod®.






#### **PLAY SELECTED**

Move  to select **PLAY SELECTED** to play all the items listed below.

# Searching for Music Using Song By Voice™ (SBV)

  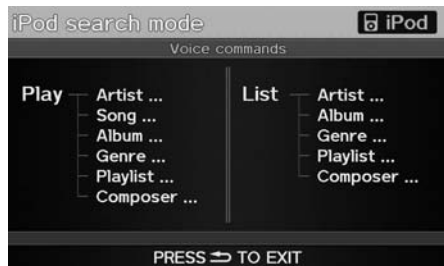Use Song By Voice™ (SBV) to search for and play music from your HDD or iPod® device using voice commands.



1. Set **Song By Voice** to **ON** in the system setup.  
➤ **Song By Voice™ (SBV)** P. 45
2. Say  "Hard Disc Drive Search" or  "iPod Search" to activate the SBV feature for the HDD or iPod®.  
▶ The SBV commands that you can use are displayed on the screen.
3. Say a command.  
▶ Example 1: Say  "List Artist 'Artist A'" to view a list of songs by that artist. Select the desired song to start playing.  
▶ Example 2: Say  "Play Artist 'Artist A'" to start playing songs by that artist.
4. To cancel SBV mode, press the  (Back) button on the steering wheel or any button on the navigation system interface. The selected song continues playing.

## ➤ Searching for Music Using Song By Voice™ (SBV)


 
The SBV voice commands give you more control over the music than the regular iPod® and HDD voice commands.

➤ **Song By Voice™ Commands** P. 248

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

➤ **Phonetic Modification** P. 46

SBV may not be able to recognize languages other than English for the artist name, song title, album title, and composers.

Once you have canceled this mode, you need to say  "Hard Disc Drive Search" or  "iPod Search" again to re-activate this mode.




Pandora® is a personalized Internet radio service that selects music based on an artist, song, or genre a user enters, and streams what is likely to be of interest.

## Selecting Pandora® Mode

1. Activate Pandora® on your iPhone®.
2. Connect the iPhone® to the USB adapter cable in the console compartment.
  - **Connecting an iPod®** P. 159
3. Press the HDD/AUX button until you get to Pandora® mode.
4. Select a station using the CATEGORY bar.
  - ▶ The current station name, artist name, album name, track name, and rating are displayed.

### ▶ Playing Pandora®

 "Display audio screen" (when in Pandora® mode)

You can control Pandora® using voice commands.

➤ **Pandora® Commands** P. 247

A visual guide helps you operate the audio system.

➤ **System Controls** P. 4

➤ **Basic Operation** P. 6

To use this service in your vehicle, the Pandora® app must first be installed on your iPhone®. Visit [www.pandora.com](http://www.pandora.com) for more information.

Pandora® mode and Audio Screen Control is only available for iPhone®. For other phones, Pandora® can be played through *Bluetooth®* Audio.


➤ **Playing Bluetooth® Audio** P. 172

If there is a problem, you may see an error message on the display.

➤ **Error Messages** P. 223

If Pandora® is not selected from your phone, iPod® music is played.

## Audio Screen Control




 AUDIO button (in Pandora® mode)

Control the audio screen through the navigation system.

Pandora® mode Rotate  to select an item. Press .



The following items are available:

- **Resume/Pause:** Resumes or pauses the current song.
  -  **Like:** Likes the current song. Pandora® will play songs similar to the one liked.
  -  **Dislike:** Dislikes the current song and skips to the next song. Pandora® will avoid playing songs similar to the one disliked.
  - **Skip Forward:** Skips the current song.
  - **Station List:** Displays the list of all your stored stations. Select a station from the list to play. You can also select **QuickMix** to play all stations randomly.
-  **QuickMix** P. 167

### ▶▶▶ Audio Screen Control

The following functions are not available on this navigation system:

- Buy from iTunes
- Email the Current Station
- Check Song Detail
- Create Station

You can skip the song only a predetermined number of times in an hour. If exceeded, an error message is displayed and the operation is not performed.

For details, please visit [www.pandora.com](http://www.pandora.com).

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio. Make sure Pandora® mode on your audio system is selected.

## Audio Menu

🔊 AUDIO button (in Pandora® mode) ▶ **AUDIO MENU**



Rotate 🔄 to select an item. Press 🔄.

The following items are available:

- **Sound Setup**: Displays the sound preferences screen.  
▶ **Adjusting the Sound** P. 174
- **Album Art**: Sets whether to display the album artwork on the screen.  
ON (factory default): Displays the album artwork.  
OFF: Disable the feature.
- **BOOKMARK This Song**: Bookmarks the current song.
- **BOOKMARK This Artist**: Bookmarks the current artist.

### ▶ Audio Menu

You can only check bookmark information from your iPhone®.

## QuickMix


 AUDIO button (in Pandora® mode) ▶ **Station List**



Rotate  to select **QuickMix**. Press .

- ▶ Starts to randomly play tracks from all your stored stations in the list.
- ▶ To cancel the QuickMix mode, select another station.

## ■ Connecting a USB Flash Drive

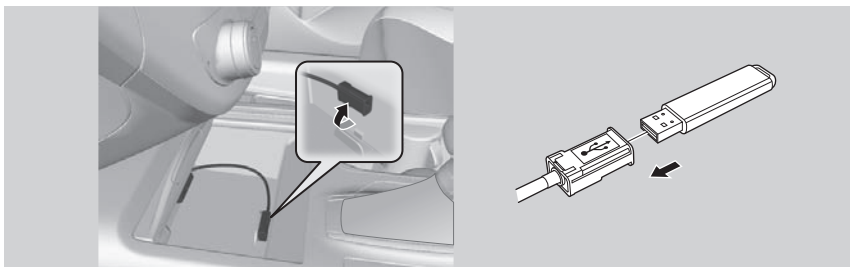

1. Unclip the USB connector in the front console and loosen the adapter cable.
2. Install the USB flash drive to the USB connector.

## ■ USB Flash Drives

Use a recommended USB flash drive of 256 MB or higher.

Some digital audio players may not be compatible.

Some USB flash drives (e.g., a device with security lockout) may not work.

Some software files may not allow for audio play or text data display.

Some versions of MP3, WMA, or AAC formats may be unsupported.

## ⊠ Connecting a USB Flash Drive

- Do not use an extension cable with the USB adapter cable.
- Do not connect your USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.

## ⊠ USB Flash Drives

Digital music tracks, such as MP3, WMA, AAC, etc., in USB flash drives cannot be copied to HDD. Likewise, digital music tracks recorded to HDD cannot be copied to USB flash drives.


## Selecting USB Mode

1. Connect the USB flash drive to the USB adapter cable in the console compartment.
2. Press the HDD/AUX button until you get to USB mode.
3. Select a track using skip, scan, folder list, or track list.
  - ▶ The current track number and folder number are displayed on the display.


## Audio Screen Control

 AUDIO button (in USB mode)


Control the audio screen through the navigation system.

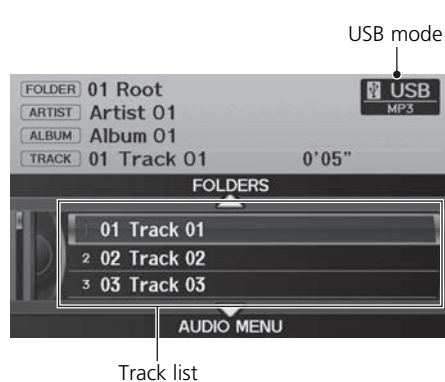

Rotate  to select a track. Press .

- ▶ Move  to select **FOLDERS** to display the folder list.
  - ▶ **Playing Tracks in Folders** P. 171
- ▶ Move  to select **AUDIO MENU**.
  - ▶ **Audio Menu** P. 170

### ▶▶ Playing a USB Flash Drive

 "Display audio screen"

You can control the USB flash drive using voice commands.

▶ **USB Commands** P. 246

A visual guide helps you operate the audio system.

▶ **System Controls** P. 4

▶ **Basic Operation** P. 6

Tracks on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

The audio system displays "Unplayable File," and then skips to the next track when the following tracks are played:

- Tracks in WMA or AAC format protected by digital rights management (DRM)
- Tracks in unsupported format

If there is a problem, you may see an error message on the display.

▶ **Error Messages** P. 223

## Audio Menu

🔑 AUDIO button (in USB mode) ▶ **AUDIO MENU**



Rotate 🔄 to select an item. Press 🏠.

The following items are available:





- **Sound Setup:** Displays the sound preferences screen.  
🔧 **Adjusting the Sound** P. 174
- **Repeat:**
  - 🔁: Repeats the current track.
  - 🔄: Repeats all tracks in the current folder.
- **Random:**
  - 🎲: Plays all tracks on the USB flash drive in random order.
  - 🎲: Plays all tracks in the current folder in random order.
- **Scan:**
  - 📁: Scans all tracks in the current folder in the order they were stored and plays a 10-second sample. Select **OFF** to stop scanning and play the current selection.
  - 📁: Scans the first track in each folder on the USB flash drive and plays a 10-second sample. Select **OFF** to stop scanning and play the current selection.

## Playing Tracks in Folders

 AUDIO button (in USB mode) ▶ **FOLDERS**

Change the folder if the tracks are stored in a folder structure.



1. Rotate  to select a folder. Press .
  - ▶ The system displays the track list.
2. Rotate  to select a track. Press .
  - ▶ The system begins playing the selected track.

### ▶▶ Playing Tracks in Folders

#### Folder List

- Any music tracks not in a folder are automatically added to a “ROOT” folder, which is displayed at the top of the Folder List.
- If the root folder has additional folders in a lower layer, they are listed on the screen.



Your audio system allows you to listen to music tracks stored on your *Bluetooth*-compatible phone.

This function is available when the phone is linked to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

➤ *Bluetooth*® HandsFreeLink® P. 177

## Selecting *Bluetooth*® Audio Mode

1. Make sure that your phone is on, paired, and linked to HFL.

➤ **Pairing a Phone** P. 180

2. Press the HDD/AUX button to select *Bluetooth*® Audio mode.

 
▶ A *Bluetooth*® message and icon are displayed on the display and screen.

3. If necessary, follow the cell phone operating instructions for playing audio tracks.

Check the following if the phone is not recognized:

- Another HFL-compatible phone, which is not compatible for *Bluetooth*® Audio, is already connected.

### ➤ Playing *Bluetooth*® Audio

 "Display audio screen"

You can control the *Bluetooth*® Audio using voice commands.

➤ ***Bluetooth*® Audio Commands** P. 247

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible. To check if your phone is compatible:


- U.S.: Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink).
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca).
- Call HandsFreeLink customer support at (888) 528-7876.




In some states, it may be illegal to perform some data device functions while driving.

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the first paired phone the system finds will be automatically linked.

Pressing the TITLE button switches the center display between the *Bluetooth*® Audio message and the device name.
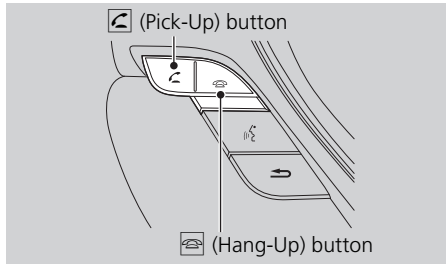
## Switching to HFL Mode



1. If you receive a call when *Bluetooth*® Audio is playing, press the  (Pick-Up) button on the steering wheel to answer the call.  
 **Bluetooth® HandsFreeLink®**  
 P. 178
2. Press the  (Hang-Up) button to end the call, and *Bluetooth*® Audio is resumed.

## Audio Screen Control

 AUDIO button (in BT mode)


Control the audio through the navigation system.

*Bluetooth*® Audio mode

Rotate  to select an item. Press .



The following items are available:

- **Sound Setup:** Displays the sound preferences screen.  
 **Adjusting the Sound** P. 174
- **Resume/Pause:** Resumes/pauses play.

### ▶▶ Playing *Bluetooth*® Audio

If more than one phone is paired to the HFL system, there may be a delay before the system begins to play.

A “NO CONNECT” message may be displayed if:

- The phone is not linked to HFL.
- The phone is not turned on.
- The phone is not in the vehicle.
- An incompatible phone is connected.

### ▶▶ Audio Screen Control


The display items may vary depending on the connected device.

The pause function may not be available on some devices.

# Adjusting the Sound

AUDIO button ► **AUDIO MENU** ► **Sound Setup**

Adjust the sound bass, treble, fader, and balance. You can also adjust the strength of the sound coming from the center and subwoofer speakers. In addition, you can set Dolby PL (ProLogic) II and Speed-sensitive Volume Compensation (SVC).

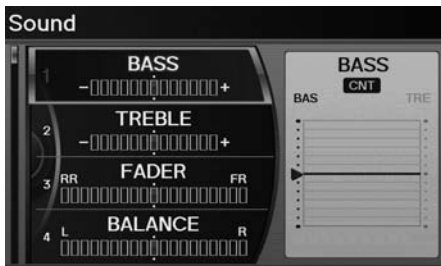

1. Rotate to select the sound mode to adjust. Press .

2. Rotate to adjust the desired level. Press .

► The display returns to the audio screen after a few seconds.

You can also use the (Sound) button to adjust the sound. Press the button repeatedly to cycle through the edit modes, displayed on the display. Rotate the VOL knob to adjust the setting.

## Adjusting the Sound

You can check the level on the navigation screen or on the display. When the level reaches the center, you will see "C" in the display.

Fader adjusts the front-to-back strength, while balance adjusts the side-to-side strength. If the fader adjustment is set to the maximum front level, the subwoofer is turned off. If the fader is set to the maximum rear level, the center speaker is off.


Dolby PL II signal processing creates multi-channel surround sound from 2-channel stereo audio sources. Dolby ProLogic II is available only in DISC (CD-DA, MP3, WMA, AAC), SiriusXM® Radio, AUX (USB, iPod®, AUX, Bluetooth® Audio), and HDD modes.

Manufactured under license from Dolby Laboratories. Dolby, ProLogic, MLP Lossless, and the double-D symbol are trademarks of Dolby Laboratories.

The SVC has four modes: **OFF**, **LOW**, **MID**, and **HIGH**. SVC adjusts the volume level based on the vehicle speed. The faster you go, the audio volume increases. As you slow down, the audio volume decreases. If you feel the sound is too loud, choose **LOW**, and vice versa.

## Steering Wheel Controls

Control basic audio system functions using the controls mounted on the steering wheel.

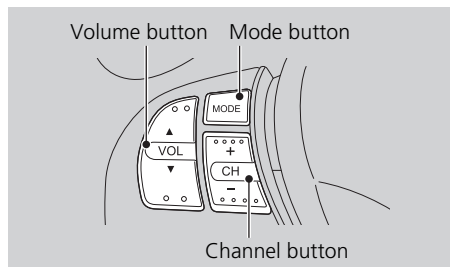

### ■ VOL (Volume) Button

Adjusts the volume.

- Press the ▲ (Volume) button to increase the volume.
- Press the ▼ (Volume) button to decrease the volume.

### ■ MODE Button

Changes the audio source mode.

### ☒ MODE Button

 

Press to cycle through: FM1 > FM2 > AM > XM1 > XM2 > DISC > HDD > USB or iPod®/Pandora® > Bluetooth® Audio > AUX > FM1...

When in AUX mode, the following are operable from the remote audio controls:




- iPod®/USB flash drive connected to the USB adapter cable
- Audio unit plugged into the auxiliary input jack
- Bluetooth® Audio (not all phones support this function)

## ■ CH (Channel) Button




FM/AM, SiriusXM®

 - Press the  (Channel) button to select the next preset station (channel).
- Press the  (Channel) button to select the previous preset station (channel).
- FM/AM: Press and hold for one second to scan for a station with a strong signal.
- SiriusXM®: Press and hold for one second to skip to the next or previous station (channel) in the current category.

DISC, HDD, iPod®, USB, *Bluetooth*® Audio (on some phones)

 - Press the  button to skip to the end of the current track.
- Press the  button to skip to the beginning of the current track. Press the  button again to go to the beginning of the previous track.
- Press and hold to skip forward or backward to the first track of the next folder.

Pandora®

- Press the  button to skip to the next song.
- Press and hold  or  button to select the upper or lower station.

# *Bluetooth® HandsFreeLink®*

This section describes how to operate *Bluetooth® HandsFreeLink®*. You can place and receive phone calls using your vehicle's audio system without handling your cell phone.



<b><i>Bluetooth® HandsFreeLink®</i></b> .....	178
Pairing a Phone .....	180
Setting Up Speed Dialing .....	185
Editing User Name and PIN .....	187
Phone Setup .....	188
Making a Call .....	190
Receiving a Call .....	193
HFL Menus .....	194
<b>Text Messages</b> .....	197

PHONE button



Rotate  to select an item. Press .

The following items are available:

- **PHONE SETUP:** Move  to set up the HFL features.
  - **Pairing a Phone** P. 180
  - **Setting Up Speed Dialing** P. 185
- **Call History:** Displays the call history.
  - **Using Call History** P. 192
- **Phone Book:** Displays the cell phone's imported phonebook.
  - **Using the Phonebook** P. 191
- **Dial:** Makes a call by entering the phone number.
  - **Entering a Phone Number** P. 191
- **Text Message:** Displays received text messages list.  is displayed if there is an unread message.
  - **Text Messages** P. 197
- **Speed Dial 1-3:** Makes a call to stored speed dial entries.
  - **Using Speed Dial** P. 192
- **More Speed Dial:** Displays more speed dial entries stored in the system.
  - **Using Speed Dial** P. 192

## Bluetooth® HandsFreeLink®

 
You can control the HFL system using voice commands.

➤ **HFL Menus** P. 194

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:


- U.S.: Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink).
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca).
- Call HandsFreeLink customer support at (888) 528-7876.

### Voice Control Tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the  (Talk) button before giving a command. Speak clearly and naturally after a beep.
  - **Voice Control Operation** P. 5
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

## ■ Help Features

 Say  "Help" any time to get help or hear a list of commands.

➤ **Voice Help** P. 5

## ➤ Bluetooth® HandsFreeLink®

### **Bluetooth® Wireless Technology**

*Bluetooth®* name and logos are registered trademarks owned by *Bluetooth SIG, Inc.*, and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

### **HFL Limitations**

An incoming call on HFL will interrupt *Bluetooth®* Audio when it is playing. Audio will resume when the call is ended.

Certain functions are disabled while the vehicle is moving.

➤ **Limitations for Manual Operation** P. 21



## Pairing a Phone

📞 PHONE button

When no *Bluetooth*-compatible phone has ever been paired to the system, the following screen appears:



1. Rotate 📞 to select **Yes**. Press 📞.
2. Put your cell phone in "Discovery" or "Search" mode.
3. Press 📞 to select **OK**.

▶ The system begins to search for your phone.

4. Rotate 📞 to select your phone in the list. Press 📞.

▶ Select **PHONE NOT FOUND?** if your phone is not found.

▶ Refer to your phone manual for instructions on searching for a *Bluetooth*® device.

5. Enter the four-digit pass-key on your phone when prompted to complete the pairing process.



### ☒ Pairing a Phone

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

You can control the HFL system using voice commands.

☒ **HFL Menus** P. 194

The maximum range between your phone and vehicle is about 30 feet (10 meters).

#### Phone Pairing Tips

- You cannot pair your phone while the vehicle is moving.
- Your phone must be in discovery or search mode when pairing the phone. Refer to your phone's manual.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to HFL.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and returns to idle.
- The default pass-key "0000" is used until you change the setting.

#### Pass-Key


You can change the pass-key setting.

☒ **Changing the Pass-key** P. 182

## ■ Pairing from Phone Setup

📞 PHONE button ▶ **PHONE SETUP** ▶ **Connection**

Use the Phone Setup screen to pair an additional *Bluetooth*-compatible phone if a phone has been previously paired to the system.

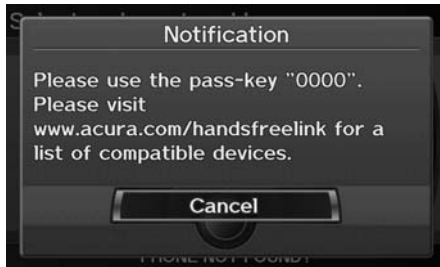

1. Rotate 📞 to select **Add New Phone**. Press ⏹.
2. Put your cell phone in “Discovery” or “Search” mode.
3. Press ⏹ to select **OK**.
  - ▶ The system begins to search for your phone.
4. Rotate 📞 to select your phone in the list.
  - ▶ Select **PHONE NOT FOUND?** if your phone is not found.
  - ▶ Refer to your phone manual for instructions on searching for a *Bluetooth*® device.
5. Enter the four-digit pass-key on your phone when prompted to complete the pairing process.

## ▣ Pairing from Phone Setup

If a prompt appears asking to connect to a phone, select **No** and proceed with step 1.

### Delete a Phone



You can delete the paired phone.

▶ **Deleting a Paired Phone** P. 183



## ■ Changing the Pass-key

PHONE button ▶ **PHONE SETUP** ▶ **Connection**



1. Rotate  to select **Pass-key**. Press .



2. Rotate  to select an item. Press .

The following items are available:

- **Random:** Uses a randomly generated pass-key.
- **Fixed:** Create your own pass-key (factory default is 0000).



3. If you select **Fixed**, move to select **DELETE** to remove the current pass-key.
4. Enter a new pass-key. Move to select **OK**.

## Deleting a Paired Phone

PHONE button ▶ **PHONE SETUP** ▶ **Connection**








1. Rotate to select **Delete**. Press .

### Deleting a Paired Phone

When you transfer the vehicle to a third party, delete all paired phones.

*Continued*








2. Rotate  to select a phone to delete. Press .
  - ▶ The *Bluetooth*® icon indicates the currently linked phone.
  - ▶ Items to be deleted are indicated with a trash icon.
3. Move  to select **OK**.
4. Rotate  to select **Yes**. Press  to delete the device(s).

## Changing the Currently Paired Phone

 PHONE button ▶ **PHONE SETUP** ▶ **Connection**



1. Rotate  to select **Connect**. Press .
2. Rotate  to select a phone. Press .
  - ▶ HFL disconnects the linked phone and starts connecting to another paired phone.
3. Press  to select **OK**.



## Changing the Currently Paired Phone

If no other phones are found or paired when trying to switch to another phone, HFL will inform you that the original phone is linked again.

## Setting Up Speed Dialing



PHONE button ▶ PHONE SETUP ▶ Edit Speed Dial ▶ Store Speed Dial

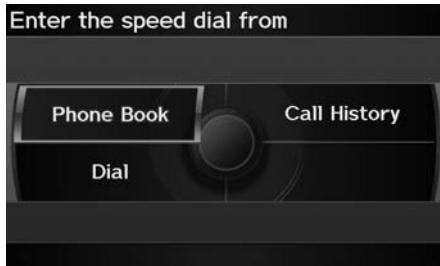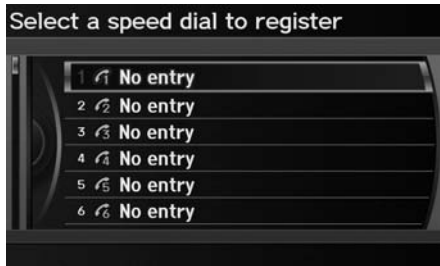

Create speed dial entries with voice tags for easy calling.



The following options are available:

- **Phone Book:** Adds a number from the imported phonebook.
- **Call History:** Adds a number from the last 30 numbers.
- **Dial:** Enters a number manually.

1. Rotate  to select a location in the speed dial list. Press .

2. Rotate  to select a number entry method. Press .

3. Follow the prompt to enter a voice tag.

### Setting Up Speed Dialing

You can control the HFL system using voice commands.

▶ **HFL Menus P. 194**

Up to 20 speed dial entries can be stored per user. The first three entries are displayed on the Cellular Phone screen.




Speed dial

You can select a “No Entry” field directly from the Cellular Phone screen to store a speed dial number.

## ■ Registering a Voice Tag to a Speed Dial Entry

📞 PHONE button ▶ **PHONE SETUP** ▶ **Edit Speed Dial**

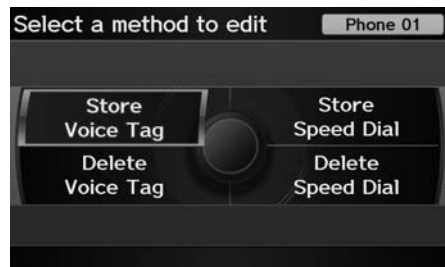

1. Rotate to select **Store Voice Tag**. Press .
2. Rotate to select a speed dial entry. Press .



3. Follow the prompt to enter a voice tag.

## ▣ Registering a Voice Tag to a Speed Dial Entry

Voice tags allow you to call speed dial entries from any screen by saying "Dial by voice tag" and the voice tag, followed by "Dial."

- Avoid using duplicate voice tags.
- Avoid using "Home" as a voice tag.
- It is easier for HFL to recognize a longer name (e.g., "John Smith" instead of "John").

## ▣ Deleting a Voice Tag

1. Rotate to select **Delete Voice Tag**. Press .
2. Rotate to select the number you want to delete the voice tag for. Move to select **OK**.

## ▣ Deleting a Speed Dial Entry

1. Rotate to select **Delete Speed Dial**. Press .
2. Rotate to select the entry you want to delete. Move to select **OK**.

## Editing User Name and PIN

PHONE button ▶ PHONE SETUP ▶ Edit Phone Name/PIN

Edit the user name of a paired phone, and protect the phonebook and speed dial entries with a PIN.



Rotate  to select an item. Press .

The following items are available:

- **Name:** Enter a name.
- **PIN:** Enter a four-digit PIN. Re-enter to confirm. You can select **DO NOT USE PIN** to remove a PIN.

### Editing User Name and PIN

You can control the HFL system using voice commands.

▶ **HFL Menus** P. 194

You can name up to six HFL users. Each can be PIN protected, and have their own phonebook, speed dial entries, and call history.




PIN-protected speed dial







## Phone Setup

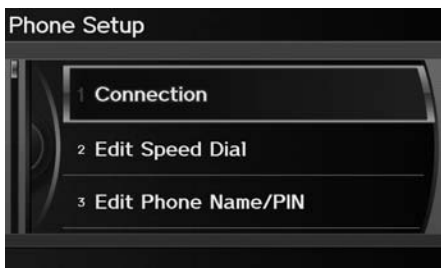📞 PHONE button ▶ **PHONE SETUP**

Set HFL options and features.



1. Rotate  to select an item. Press .
2. Rotate  to select an option. Press .

The following items are available:

- **Connection:** Pairs your phone to the system, connect/disconnect your phone, or changes the pass-key.  
▶ **Pairing a Phone** P. 180
- **Edit Speed Dial:** Stores/deletes the speed dials or edits the voice tag.  
▶ **Setting Up Speed Dialing** P. 185
- **Edit Phone Name/PIN:** Change your phone name or protects the phonebook/speed dials with a PIN.  
▶ **Editing User Name and PIN** P. 187
- **Auto Transfer:** Sets whether to automatically transfer a call from your phone to HFL when you enter and turn on the vehicle.  
ON (factory default): Automatically transfers your call to HFL.  
OFF: Disables the feature.
- **Auto Answer:** Sets whether to automatically answer an incoming call after about 2, 5, or 10 seconds. To disable the feature, select OFF (factory default).

### ▶ Phone Setup

You can control the HFL system using voice commands.

▶ **HFL Menus** P. 194

- **Clear Cellular Phone Information:** Clear all paired phones, phonebook entries, speed dials, and pass-keys.
- **Text Message Notice:** Sets whether to give an incoming message notification.  
**ON** (factory default): Gives an incoming message notification.  
**OFF:** Messages are still received, but without notification.

## ☒ Phone Setup

**Text Message Notice** can be set separately for each paired phone.

## Making a Call



Make calls by entering a number or using the imported phonebook, call history, or speed dial entries.


- **Using the Phonebook** P. 191
- **Entering a Phone Number** P. 191
- **Using Call History** P. 192
- **Using Speed Dial** P. 192

 

### ☒ Making a Call

You can control the HFL system using voice commands.

#### ➤ **HFL Menus** P. 194

When you say  "Dial by number" or  "Dial by voice tag" on most screens, the following screen appears:

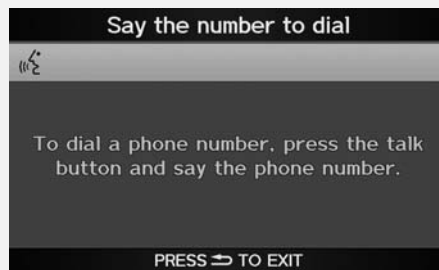

Say the phone number or the voice tag (e.g.,  "John Smith"), followed by  "Dial."







#### ➤ **Registering a Voice Tag to a Speed Dial Entry** P. 186

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, a first paired phone the system finds will be automatically linked.

## ■ Using the Phonebook

PHONE button ▶ **Phone Book**




1. Rotate  to select a name. Press .  
▶ Move  or  to select alphabetical tabs to display the entries in the group.
2. Rotate  to select a number. Press  to begin dialing.

## ■ Entering a Phone Number

PHONE button ▶ **Dial**



1. Enter a phone number.
2. Move  to select DIAL to begin dialing.

## ☒ Using the Phonebook


Your phonebook is automatically imported when the phone is paired.

Up to three icons are displayed for each phonebook entry. If there are more than three numbers for an entry, "... " is displayed.

	Preference		Fax
	Home		Car
	Mobile		Voice
	Work		Other
	Pager		

This feature is not available on all phones.

## ☒ Entering a Phone Number

A command that consists of several words can be spoken together. For example, say  "123-456-7890" at once.

## ■ Using Call History

PHONE button ▶ **Call History**



Rotate to select a call. Press to begin dialing.

▶ Move ◀○ or ○▶ to select **All, Dial, Receive, Missed** to view the call history by category.

## ■ Using Speed Dial

From the Cellular Phone screen: Rotate to select one of the three speed dial numbers. Press to begin dialing.

From the Cellular Phone screen: Rotate to select **More Speed Dial**. Press . Rotate to select a number. Press to begin dialing.

## ▣ Using Call History

The call history only shows the last 20 calls from your phone.

## ▣ Using Speed Dial


To make a call using speed dial, you need to create speed dial entries.


▣ **Setting Up Speed Dialing** P. 185

If the phone is PIN-protected, enter the PIN when prompted. Select **OK**. PINs are optional.


▣ **Editing User Name and PIN** P. 187

## Receiving a Call

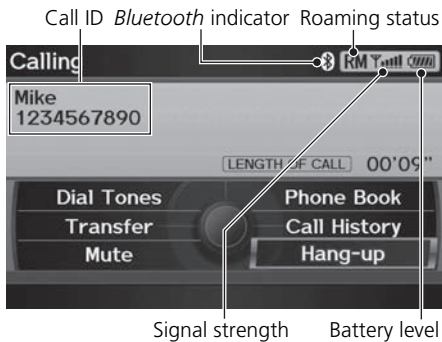


 
 
1. Press the  (Pick-Up) button to answer a call and display the Calling screen.

▶ “HANDSFREELINK” is also displayed on the display.

2. Press the  (Hang-Up) button to terminate the call.

### Receiving a Call

An incoming call notification appears on the screen, and you hear an audible ring tone.

If your phone has Call Waiting, press the  button to put the original call on hold and answer the incoming call. To return to the original call, press the  button again. If you want to hang up the original call and answer the new call, press the  button.

To change the volume level of HFL, use the audio system volume knob or the steering wheel volume controls.

Some phones may send battery, signal strength, and roaming status information to the screen.

#### Phone Book

Displays the cell phone's imported phonebook.

▶ **Using the Phonebook** P. 191

The following options are available during a call:

- **Dial Tones** (available on some phones): Allows you to send numbers or names during a call. This is useful when you call an automated phone system.
- **Transfer**: Allows you to transfer a call from HFL to your phone, or from your phone to HFL.
- **Mute**: Allows you to mute your voice.




 
## HFL Menu

The power mode must be in ACCESSORY or ON to use HFL.

You can operate HFL by voice when on the Cellular Phone screen. Below is the flow chart showing available voice commands.


 
**HFL Menu**

To use HFL, you must first pair your *Bluetooth*-compatible cell phone to the system while the vehicle is parked.

-  Press the  (Pick-Up) button to display the Cellular Phone screen.
-  Press the  (Talk) button each time you give a voice command.

"Phone Setup"

 "Connection"

 
 "Edit Speed Dial"  
 **Setting Up Speed Dialing** P. 185

 "Add New Phone"

 "Connect"

 "Disconnect"


 "Delete"


 
 

 

 "Pass-key"

 "Store Voice Tag"

 "Delete Voice Tag"

 "Store Speed Dial"


 "Delete Speed Dial"

- Pair your phone to the system.  
 **Pairing a Phone** P. 180
- Switch from a currently linked phone to another paired phone.  
 **Changing the Currently Paired Phone** P. 184
- Disconnect your paired phone from the system.  
 **Changing the Currently Paired Phone** P. 184
- Delete a previously paired phone.  
 **Deleting a Paired Phone** P. 183
- Set a "fixed" or "random" pass-key code for phone pairing.  
 **Changing the Pass-key** P. 182
- Create a voice tag for a speed dial number.  
 **Registering a Voice Tag to a Speed Dial Entry** P. 186
- Delete a voice tag for a speed dial number.
- Select a number from Call History or Phonebook to store as a speed dial number.
- Delete a previously stored speed dial number.

Continued





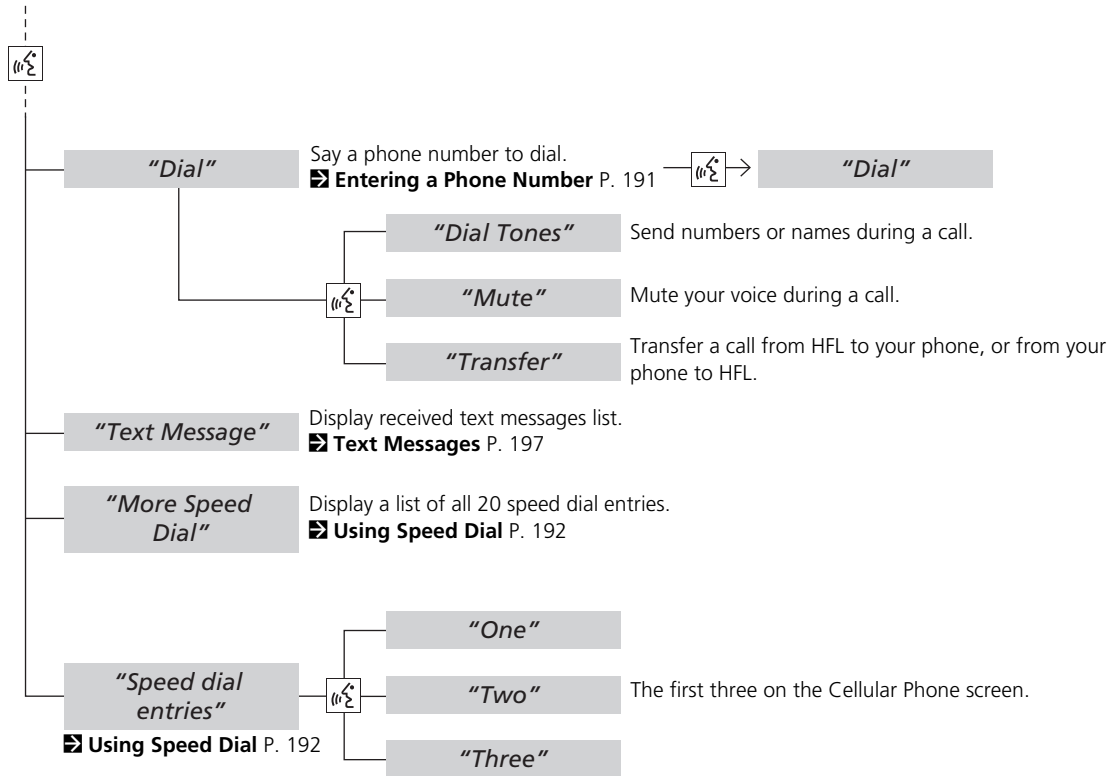

# Text Messages


If your paired phone is compatible, you can receive and hear text messages and reply to them using fixed reply messages.


## ➤ Pairing a Phone P. 180

If a text message is received, the following screen is displayed.



The following items are available:

- **Read:** Reads the text message aloud. Select **Stop** to stop reading. Adjust the volume using the VOL  (Volume/Power) knob.

1. Rotate  to select **Read**. Press



- ▶ The text message is read aloud.
- ▶ Select **Cancel** to check the text message later.
- ▶ If the phone number of the sender is stored to the Phonebook, the name is displayed.

2. Rotate  to select an item. Press



## ➤ Text Messages

You can control the text messages feature using voice commands.

### ➤ Text Message Commands P. 248

To use this function, you need a Bluetooth- and MAP (Message Access Profile)-compatible cell phone. For a list of compatible phones and special feature capabilities:

- U.S.: Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink).
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca).
- Call HandsFreeLink customer support at (888) 528-7876.

If your phone is not capable of this function, a notification appears when you select the text message option.


Select **Text Message** from the Cellular Phone screen to view a list of the 20 most recently received text messages. You can select each one to read, reply, or call back.





Certain functions are disabled while the vehicle is moving.

### ➤ Limitations for Manual Operation P. 21

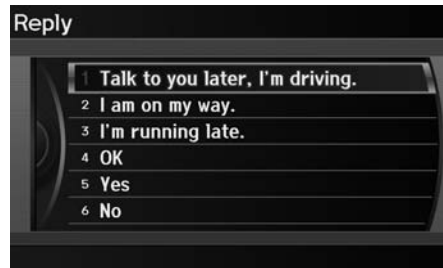- **Reply:** Replies to the message using a fixed reply message. You cannot create your own messages.
  - ▶ **Replying to the Message** P. 198
- **Call:** Calls the sender.
- **Full Message:** Displays the entire message body.
- **PREVIOUS:** Displays the previous message.
- **NEXT:** Displays the next message.

## Replying to the Message



1. Rotate  to select the message you want to use. Press .
2. Rotate  to select **Send**. Press .

## Text Messages

You can set up text message notification when the first message for the paired phone is received. You can change the setting from the Phone Setup screen.

▶ **Phone Setup** P. 188

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.


# AcuraLink® Messages

This section describes how Acura directly communicates important information to you regarding your vehicle.

<b>AcuraLink® Messages</b> .....	200
Reading Messages .....	200
Message Categories .....	201
Message Options .....	202
Dealer Appointments .....	203


AcuraLink® provides a direct communication link between your vehicle and Acura. Working through SiriusXM® Radio, AcuraLink works in conjunction with your vehicle's navigation system, *Bluetooth*® HandsFreeLink® (HFL), and audio system to send and receive messages.



## Reading Messages

An envelope icon  appears at the bottom left of the navigation screen when there is a new message.

### New Messages

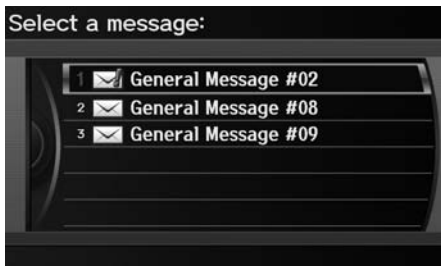 ENTER button (on map) ► **New Messages**



Rotate  to select a message. Press .

### » AcuraLink® Messages

To use some AcuraLink functions:

- Registration at the Acura Owners website ([owners.acura.com](http://owners.acura.com)) is required for some settings. If you do not have internet access, call Acura Client Relations at (800) 382-2238. You can also set your AcuraLink preference for what types of messages you want to receive.
- A *Bluetooth*-compatible cell phone needs to be paired to *Bluetooth*® HandsFreeLink®.  
► **Bluetooth® HandsFreeLink®** P. 178
- Setting up the Phone-Data Connection is required for access to the AcuraLink server.  
► **AcuraLink/Messages** P. 62

### » Reading Messages


Messages may not appear immediately after your vehicle purchase. It can take several days for a dealer to register your vehicle's ID.

New messages are at the top of the list.

Important messages are identified by an exclamation mark on the envelope icon.

## All Messages

INFO button ▶ Messages

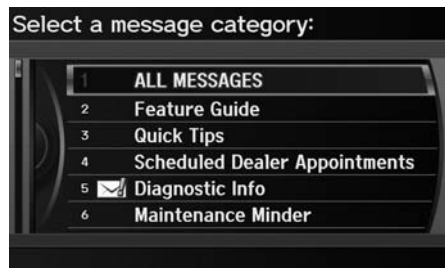

1. Rotate to select a message category. Press .
2. Rotate to select a message. Press .

## Message Categories

There are six message categories in AcuraLink.

- **Feature Guide:** Appears each day to help you understand the vehicle features for the first 90 days of ownership.
- **Quick Tips:** Supplements your Owner's Manual with updated vehicle information.
- **Scheduled Dealer Appointments:** An appointment made through the Acura server or Acura Owners website can be rescheduled or canceled.
  - ▶ **Dealer Appointments** P. 203

### ▶ All Messages

An unread message has a closed envelope icon next to it. The icon disappears once you read the message.

### ▶ Message Categories


Message categories can be added, revised, or deleted through broadcast messages from Acura.

You can call a dealer, find the nearest dealer, or schedule appointments from the message options in **Maintenance Minder**, **Recalls/Campaigns**, and **Diagnostic Info**.

▶ **Message Options** P. 202

Retaining your current phone number makes it possible for Acura to inform you about recalls and campaigns. Please keep your information updated through Acura Owners, or by calling a dealer.

Continued



- **Diagnostic Info:** Provides information about the cause for a warning indicator or multi-information display message. Rotate  to select **Check Later** or **Check Now**. If you choose to check the information now, AcuraLink lets you know whether you should see a dealer immediately or later in accordance with the level of severity. Call a dealer or find the nearest dealer. (If your navigation system is still at the start-up disclaimer screen, select **OK** before checking the information.)
- **Maintenance Minder:** Tells you exactly which maintenance item is due along with the multi-information display message.
- **Recalls/Campaigns:** Reminds you of a recall or important safety information. You should also be notified by mail.

## Message Options

When a message is displayed, you may select some of the following options:



The following options are available:

- **Voice:** Reads the message aloud. Select **Stop Reading** to stop.
- **Delete:** Display the message you want to delete before rotating  to select this option. Press  to complete the deletion.
- **Call:** Dials a number displayed in the message via HFL.

### Message Options

The options available vary depending on the category of the message.

You can delete all messages in a category simultaneously.

▶ **AcuraLink/Messages** P. 62


Only dealer can delete Diagnostic Info and Recall/Campaign messages.






- **Find Acura Dlr:** Searches for the nearest Acura dealer.
- **Call Your Dealer:** Calls Acura dealer using HFL.
- **Diagnostic Info:** Updates, if any, the current diagnostic message by connecting to the Acura server using HFL.
- **Schedule Dealer Appt.:** Automatically sets an appointment date at a dealer.

## Dealer Appointments

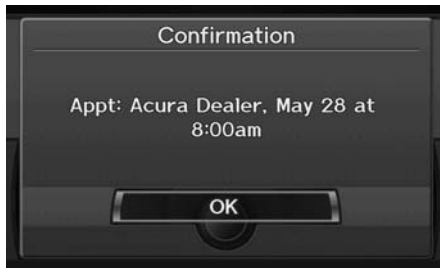Schedule a dealer appointment for Maintenance Minder and Recalls/Campaigns messages. You can reschedule or cancel a dealer appointment from the Scheduled Dealer Appointments option.

### Scheduling an Appointment



1. Open a Maintenance Minder, Recalls/Campaigns, or Scheduled Dealer Appointments message.
2. Rotate  to select **Schedule Dealer Appt.** or **Reschedule Appointment** (depending on the screen). Press .
  - ▶ A proposed date and time are displayed.
3. Rotate  to select **Confirm Appointment**. Press  to accept the proposed appointment.
4. Press  to select **OK** when the appointment is confirmed.

### ▶ Dealer Appointments

You can automatically schedule dealer appointments when regular maintenance is due. To use the Automated Appointment function, visit the Acura Owners website at [owners.acura.com](http://owners.acura.com) and set the required option. A reminder message will be sent as the date for the dealer appointment approaches. A reminder message will also be sent if you schedule an appointment online using the Schedule Service Appointment function.

If you are not satisfied with the proposed appointment date and time, call a dealer directly.





# Other Features



This section describes the useful functions incorporated into the navigation system.

<b>Calendar</b> .....	206
<b>Calculator</b> .....	208
Unit Conversion .....	208
<b>Information Functions</b> .....	210
Scenic Road Information .....	210
System/Device Information .....	210
Map Update Status .....	211
Roadside Assistance .....	211
Show Wallpaper.....	212
<b>Multi-View Rear Camera</b> .....	213



## INFO button ► Other ► Calendar

Enter events and display reminders each time you start your vehicle.






1. Rotate  to select the day. Press .





 
2. Rotate  to select an item. Press .

The following items are available:

- **Edit Date:** Moves the calendar entry to a new date. The display automatically returns to the Schedule screen.
- **Edit Title:** Enter the name of your event. Move  to select **OK** to return to the Schedule screen.
- **Edit Message:** Enter a message for your event. You can enter a message on two lines using  to change between lines. Move  to select **OK** to return to the Schedule screen.

## Calendar

You can select the day of the month on the calendar using voice commands (e.g., say  "Five" to select the 5th).

Move  or  to scroll through the months of the year.

Only one event entry can be stored for each date. Dates with an icon indicate there is a scheduled entry for that date.


A maximum of 50 entries can be stored in the calendar.

Entries may be stored in the calendar for 10 years.

Active calendar entries are displayed when you start your vehicle after you select **OK** on the Start Confirmation screen.


► **Start-up** P. 20

- **Message Icon:** Select an icon from the list to help identify the type of message. The message icon you choose will be displayed alongside the specified date on the Calendar screen.
- **Reminder:** Sets whether event reminders are displayed each time you start your vehicle.  
 ▶ **Start-up** P. 20
- **Delete:** Deletes the event. Select **Yes** on the confirmation screen to remove the event from the calendar.

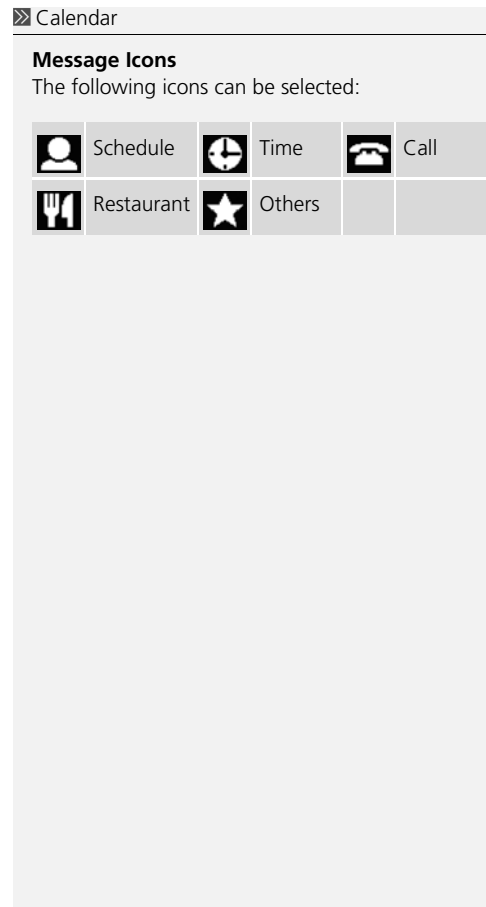





## INFO button ► Other ► Calculator

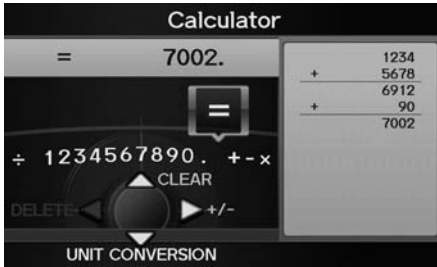Use the calculator to make basic calculations and to convert measurement units.

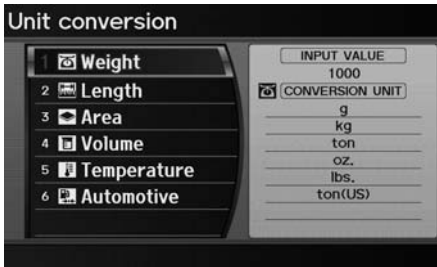

## Unit Conversion






1. Enter a numeric value to convert (e.g., 1000).
2. Move  to select **UNIT CONVERSION**.
3. Rotate  to select the type of unit to convert (e.g., **Length**). Press .

### Unit Conversion

If you do not enter a value to convert, only “Temperature” units are selectable.

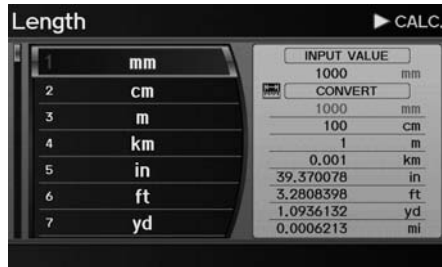Conversions using negative values may produce meaningless or physically impossible values.



4. Rotate  to select the base unit to convert from (e.g., mm).
  - ▶ The conversion into other units is displayed on the right (e.g., 1000 mm is 39.37 inches).
5. Move  to select **CALC.** to return to the Calculator screen.

## Scenic Road Information

INFO button ► **Other** ► **Scenic Road Information**

View a list of scenic roads for each state (U.S. only).



1. Rotate to select a state. Press .
2. Rotate to select a scenic road. Press .
3. Rotate to set the place as a destination or add to the destination list. Press .

### Scenic Road Information

If you select a scenic road that runs through multiple states, only the portion of the road in the selected state is displayed. You can also set the scenic road as a destination or waypoint.

## System/Device Information

INFO button ► **Other** ► **System/Device Information**

View database, software, device, and vehicle identification information.



### System/Device Information

You will need this information when ordering a map update.

► **Obtaining a Navigation Update** P. 233

## Map Update Status

INFO button ▶ **Other** ▶ **Map Update Status**

Check the map data update status when updating the map database.



## Roadside Assistance

INFO button ▶ **Other** ▶ **Roadside Assistance**

Acura Roadside Assistance is provided as a service to Acura clients. Use this feature to call for assistance when a *Bluetooth*-compatible phone is paired to *Bluetooth*® HandsFreeLink®.



1. Rotate to select the country.  
Press .

- ▶ The phone number for Roadside Assistance and your vehicle position information are displayed.

### Map Update Status

This operation is only available during a database update.


▶ **Obtaining a Navigation Update** P. 233



### Roadside Assistance

Your *Bluetooth*-compatible phone must be paired to use this feature.


▶ **Pairing a Phone** P. 180

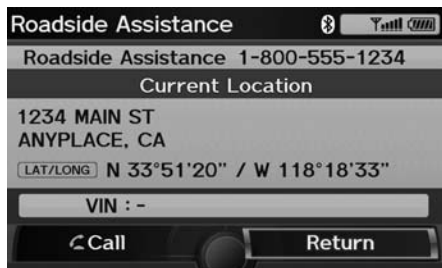



2. Rotate  to select Call. Press  to begin dialing.


## Show Wallpaper

 INFO button ▶ **Other** ▶ **Show Wallpaper**


View the picture currently set as the wallpaper.



Press the CANCEL button to return to the previous screen.


 Show Wallpaper

You can change the wallpaper picture.


 **Wallpapers Setting** P. 32


# Multi-View Rear Camera


Your vehicle is equipped with a multi-view rear camera. When you shift into Reverse, the rear view is displayed on the navigation system screen. The edge of the bumper and parking guide lines are also displayed.

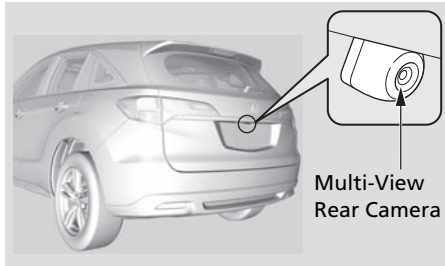

To turn the guide lines on or off, press and hold the CANCEL button for about three seconds.

Rotate  to adjust the screen brightness.

While the rear view is displayed, press  to switch between WIDE, NORMAL, and TOP DOWN view modes.

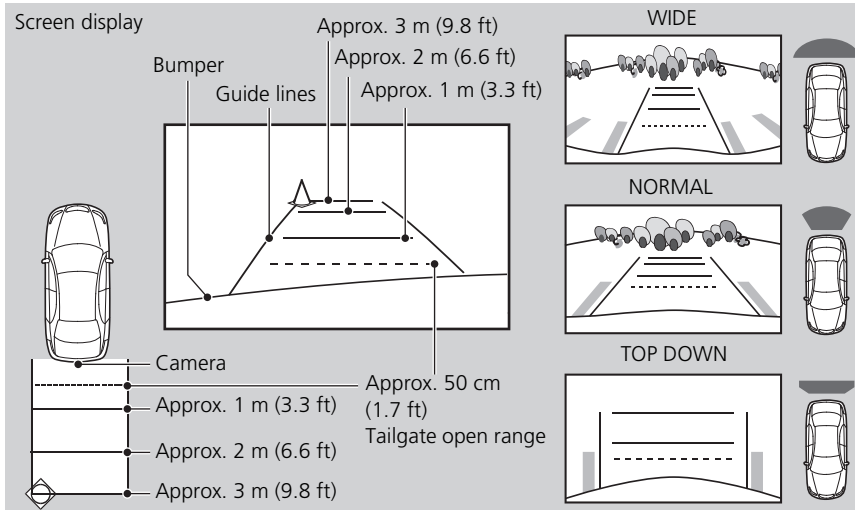

## Multi-View Rear Camera

Always keep the camera lens clean and unobstructed. The multi-view rear camera has a lens that makes distances appear different than they actually are. Always take care when reversing, and look behind you for obstacles.

Navigation controls are disabled when in Reverse.

Adjusting the brightness for the multi-view rear camera display does not affect the brightness for the navigation screen.

If you turn the guide lines off, they remain off until you turn them back on.

The last used viewing mode is selected the next time you shift into Reverse. However, once the power mode is set to VEHICLE OFF (LOCK), WIDE mode is selected if TOP DOWN view was last used.

 


# Troubleshooting



<b>Troubleshooting</b> .....	216
Map, Voice, Entering Destinations .....	216
Traffic .....	218
Guidance, Routing .....	219
Update, Coverage, Map Errors .....	221
Display, Accessories .....	221
Multi-View Rear Camera .....	221
Miscellaneous Questions .....	222
<b>Error Messages</b> .....	223
Navigation System .....	223
Disc Player .....	224
iPod®/Pandora® .....	225
USB Flash Drive .....	226

## Map, Voice, Entering Destinations


Problem	Solution
The Startup Confirmation screen is displayed every time I start the car.	This is normal. The Startup Confirmation screen reminds you and your guest drivers to always operate the navigation system in a safe manner. If you do not select <b>OK</b> at startup, voice commands will not work.
The navigation system reboots by itself (returns to the opening screen).	A reboot can be caused by extreme temperatures or shock from bumpy roads, and does not necessarily indicate a problem. If this happens frequently, please see a dealer.
How do I specify a destination when an entered city or street could not be found?	<ul style="list-style-type: none"> <li>• Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.</li> <li>• Try selecting the destination directly from the map.</li> </ul> <p>➤ <b>Map Input</b> P. 87</p>
Why do some letters become grayed out when I enter an address?	As you enter each letter in an address or a place/landmark, the navigation system looks in the database to see what letters are possible and grays out letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	<ol style="list-style-type: none"> <li>1. Press the INFO button. Select <b>Set up &gt; Personal Information</b> to display the types of information.</li> <li>2. Select the type of address to delete.</li> <li>3. Select <b>Delete</b>.</li> </ol>
I cannot hear the navigation system voice.	<ol style="list-style-type: none"> <li>1. Press the INFO button. Select <b>Set up</b> and check that <b>Volume</b> is not set to <b>OFF</b>. ➤ <b>Display and Volume Settings</b> P. 24</li> <li>2. Select <b>Other &gt; Basic Settings</b> and set <b>Voice Recognition Tutor</b> to <b>ON</b>. ➤ <b>Basic Settings</b> P. 26</li> </ol>
The voice control system is having difficulty recognizing my voice commands.	<ul style="list-style-type: none"> <li>• Check that the vents are not blowing air onto the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking. ➤ <b>Voice Recognition</b> P. 23</li> <li>• Say  “Help” on any screen to see a list of the applicable voice commands.</li> </ul>
I cannot give voice commands.	<p>Make sure you selected <b>OK</b> at the Startup Confirmation screen.</p> <p>➤ <b>Start-up</b> P. 20</p>

Problem	Solution
I cannot select an option using the Interface Dial.	To prevent driver distraction, certain onscreen functions and features are limited or inoperable while the vehicle is moving. Use voice commands or pull over to proceed.
The navigation system pronunciation of street names in the guidance command or destination address sounds strange.	The basic guidance phrases use a studio-recorded voice, but street names are pronounced using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.
The screen is bright when I drive at night.	<ol style="list-style-type: none"> <li>1. Check that the nighttime dashboard brightness control is not set to maximum.</li> <li>2. Press the INFO button. Select <b>Set up &gt; Other &gt; Color &gt; Map Color</b>. Set the Night color to Black for the best contrast.                      ➤ <b>Switching Display Mode Manually</b> P. 29</li> </ol>
The screen is dark when I drive during the day.	<p>Press the INFO button. Select <b>Set up &gt; Other &gt; Color &gt; Map Color</b>. Set the Day color to White for the best contrast.</p> <p>➤ <b>Switching Display Mode Manually</b> P. 29</p>
How do I change or remove my PIN?	<ol style="list-style-type: none"> <li>1. Press the INFO button. Select <b>Set up &gt; Personal Information &gt; PIN Numer &gt; GO Home 1 PIN or GO Home 2 PIN or Address Book PIN</b>.</li> <li>2. Enter your existing PIN. You then have the choice to change or remove the PIN.                      ➤ <b>PIN Numbers</b> P. 42</li> </ol>
I have forgotten my PIN. How do I reset the PIN for Home or the PIN for personal addresses (DRIVER 1 or DRIVER 2)?	A dealer must reset the PIN for you.
Why is Call grayed out on the Calculate Route screen?	Your phone is not paired to <i>Bluetooth</i> ® HandsFreeLink® or, if paired, your phone is in use.

## Traffic

Problem	Solution
<p>AcuraLink Real-Time Traffic™ information could not be received or is not displayed properly.</p>	<ul style="list-style-type: none"> <li>• Check the traffic icon is displayed and enabled on the icon bar.</li> <li>• Your SiriusXM® traffic subscription may have expired. Check your subscription. Call SiriusXM® at (800) 852-9696 and verify your account status. If your subscription has lapsed, you may need to request a “rapid refresh.” After SiriusXM® refreshes your account status, leave the vehicle running outside for 30 minutes to receive the refresh.                     <ul style="list-style-type: none"> <li>➤ <b>Traffic and Weather Status</b> P. 63</li> </ul> </li> <li>• There may be a temporary technical problem in your metropolitan area. Call Acura Client Relations to see if there is an outage.                     <ul style="list-style-type: none"> <li>➤ <b>Acura Client Relations Contact Information</b> P. 232</li> </ul> </li> <li>• If the situation persists, see your Acura dealer for assistance.</li> <li>• AcuraLink relies on a satellite signal and is not available in Alaska, Hawaii, Canada, Puerto Rico, and Mexico.</li> </ul>
<p>The navigation system sometimes provides a detour route when I am driving a route on the freeway.</p>	<p>If <b>Traffic Rerouting</b> is set to <b>ON</b>, the navigation system provides a detour route to your destination only if it can find a significantly faster route than the original one.</p> <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 52</li> </ul>
<p>The navigation system routes me to an exit and an alternate freeway with unknown flow speeds or surface streets.</p>	<p>The navigation system predicts which route should be faster based on freeway congestion along your route. Use your own experience to determine whether the alternate route would be faster.</p>
<p>How can I ignore the detour route and return to the original route?</p>	<p>Press the INFO button. Select <b>Setup &gt; Other &gt; Routing &amp; Guidance</b>, and set <b>Traffic Rerouting</b> to <b>OFF</b>.</p> <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 52</li> </ul>




## Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go or the same way as other mapping systems.	The navigation system attempts to generate the optimal route. You can change the route preferences used when calculating a route. <b>➤ Changing the Route Preference P. 90</b>
The navigation system wants to route me around potential traffic problems. How do I stop these pop-up messages?	Press the INFO button. Select <b>Set up &gt; Other &gt; Routing &amp; Guidance</b> , and set <b>Traffic Rerouting</b> to OFF. <b>➤ Traffic Rerouting P. 52</b>
The street I'm on is not shown on the map screen.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. <b>➤ Map Coverage P. 233</b>
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	<ul style="list-style-type: none"> <li>• Check that the GPS antenna (located in the dashboard) is not blocked. For best reception, remove items from the dashboard, such as radar detectors, cell phones, or loose articles.</li> <li>• Metallic tinting or other aftermarket devices can interfere with the GPS reception. Please consult a dealer.</li> </ul> <b>➤ GPS System P. 230</b>
The blue highlighted route and voice guidance stopped or turned into a blue/pink dashed line before I got to my destination.	Your route has entered an unverified area. <b>➤ Unverified Area Routing P. 50</b>
How do I stop the map from rotating as I drive along?	Press the ENTER button to display the Map Menu. Select <b>Map Information &gt; North-up</b> , or say  "Display north-up" to change the map orientation.
Sometimes, I cannot select between the North-up and Heading-up map orientations.	The Heading-up map orientation can only be shown in the lower scales (1/20 - 1 mile scales). <b>➤ Map Scale and Functions P. 110</b>
The "time to destination" display sometimes increases even though I am getting closer to my destination.	If your speed reduces due to slower traffic, the navigation system updates the "time to destination" based on your actual road speed to give you a better estimate of arrival time.



Problem	Solution
The vehicle position icon on the map “lags” a short distance behind, especially when I arrive at an intersection.	This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal. 📌 <b>GPS System</b> P. 230
The screen is showing white dots as I drive along.	These dots are called “breadcrumbs.” These are displayed if <b>Off-road Tracking</b> is set to <b>ON</b> and you drive more than 1/2 mile off mapped roads. 📌 <b>Off-road Tracking</b> P. 60
How do I remove the white dots (“breadcrumbs”) from my screen?	Press the INFO button. Select <b>Set up &gt; Other &gt; Vehicle</b> , and set <b>Off-road Tracking</b> to <b>OFF</b> , then return to the map. 📌 <b>Off-road Tracking</b> P. 60
A road that I selected to avoid is being used when routing.	When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection. 📌 <b>Avoiding Streets</b> P. 121
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal. The elevation can vary ±100 feet due to GPS calculation errors. 📌 <b>GPS System</b> P. 230
My elevation is missing on the “current position” screen.	The elevation is only displayed if the GPS antenna can receive signals from at least four satellites. Try moving the vehicle into an open area. The elevation is also not displayed if the calculated elevation is zero or below sea level.

## Update, Coverage, Map Errors

Problem	Solution
My city is not part of a fully verified detailed coverage area.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet.  <b>Map Coverage</b> P. 233
Does the navigation system work outside North America?	The navigation system contains maps for the 50 U.S. states, Canada, Puerto Rico, and Mexico. The navigation system will not work in other countries.  <b>Map Coverage</b> P. 233
How do I report errors I find in the database?	Minor errors are bound to occur in a large database. If you encounter major errors, see  <b>Reporting Errors</b> P. 232


## Display, Accessories

Problem	Solution
The display appears dim when starting the car in really cold weather.	This is normal. The display will become brighter after a few minutes.

## Multi-View Rear Camera

Problem	Solution
When I shift gears, the rear camera image display is delayed.	This is normal. When shifting into or out of Reverse, you may experience a delay while the screen image switches between the navigation screen and the rear camera image.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, rotate the Interface Dial to adjust the brightness. This adjustment does not affect the navigation screen brightness settings.




## Miscellaneous Questions

Problem	Solution
My clock frequently changes forward and backward by one hour.	The clock setting is automatically updated based on your GPS location. If you live and work on the boundary between two time zones, you can turn off this feature. <b>➤ Clock Adjustment P. 57</b>
The clock changes even when I am not driving near a time zone boundary.	The time zone boundaries are only approximated in the navigation system. Depending on the geography of the time zone boundary, the switch to a different zone can be erratic. <b>➤ Clock Adjustment P. 57</b>
My state does not observe daylight saving time. How do I turn off this feature?	Press the INFO button. Select <b>Set up &gt; Other &gt; Clock Adjustment</b> , and set <b>Auto Daylight</b> to <b>OFF</b> . <b>➤ Clock Adjustment P. 57</b>
Daylight saving time has started, but the navigation system did not change time even though Auto Daylight is set to ON.	The automatic daylight feature does not work in regions where the daylight saving time system has not been adopted.
The navigation system automatic daylight feature is not switching the navigation system clock on the correct dates.	Press the INFO button. Select <b>Set up &gt; Other &gt; Clock Adjustment</b> , and set <b>Auto Daylight</b> to <b>ON</b> . Note that the automatic daylight feature does not work in regions where the daylight saving time system has not been adopted. <b>➤ Clock Adjustment P. 57</b>
The navigation system clock switched by one hour for no apparent reason.	You may be driving near a time zone boundary. <b>➤ Clock Adjustment P. 57</b>
My battery was disconnected or went dead, and the navigation system is asking for a code.	Press and hold the VOL  (Volume/Power) button for two seconds. The system should reactivate. If you have installed an aftermarket system, contact a dealer.
How do I change the interface language?	Press the INFO button. Select <b>Set up &gt; Other &gt; Language</b> , and set the language to <b>English, Français, or Español</b> .

## Navigation System

Error Message	Solution
The display temperature is too high! For protection, the display will shut down.	This message appears briefly when the display temperature is too high. The navigation system turns off until the display cools down. The system turns back on automatically when the display cools down.
Cannot write to the HDD due to the low temperature. Please wait until the system warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F. The navigation system starts up automatically when the display warms up.
Cannot access the HDD due to low atmospheric pressure. Navigation and HDD audio functions are disabled. The system will restart when atmospheric pressure is OK.	The HDD is inoperable due to low atmospheric pressure. Move your vehicle to the place where the atmospheric pressure is high.
No alternate route found.	No alternative route method was found. The original route method will be used. Ensure that a road name is displayed at the bottom of the map. If the error persists, or is shown for a wide area, see a dealer.

## Disc Player

Error Message	Cause	Solution
BAD DISC PLEASE CHECK OWNERS MANUAL	Servo error	<ul style="list-style-type: none"> <li>• Press the  (Eject) button and remove the disc, and check that the error message is cleared.</li> <li>• Check that the disc is not damaged or deformed, and insert the disc again.</li> <li>•  <b>Recommended Discs</b> P. 148</li> <li>• If the error message reappears, press the  button, and pull out the disc.</li> <li>• Insert a different disc. If the new disc plays, there is a problem with the first disc.</li> <li>• If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.</li> </ul>
BAD DISC PLEASE CHECK OWNERS MANUAL PUSH EJECT	Mechanical error	
Mech Error	Mechanical error	
Check Disc	Focus error Disc violates copyright Disc not supported	
CHECK DISC LOAD	Load error	
Unplayable File	Track format not supported	<ul style="list-style-type: none"> <li>• Current track will be skipped. The next supported track plays automatically.</li> </ul>
Heat Error	High temperature	<ul style="list-style-type: none"> <li>• Turn the audio system off and allow the player to cool down until the error message is cleared.</li> </ul>

## iPod®/Pandora®

Error Message	Cause	Solution
UNSUPPORTED Ver.	Appears when an unsupported iPod® is connected.	Update the iPod® software to the latest version.
CONNECT RETRY	Appears when the iPod® cannot be authenticated.	Reconnect the iPod®.
No Song	Appears when there are no tracks in the iPod®.	Store tracks in the iPod®.
No station list on device. Use device to create station.	Appears when there are no stations in Pandora®.	Check the iPhone®.
PANDORA version not supported. Please update the device application.	Appears when the Pandora® version is not supported.	Update Pandora® to the latest version.
No active station. Select from the station list.	Appears when the station is deleted from the iPhone®.	Select another station.
Data connection was lost	Appears when the iPhone® has an error, including out of service.	Check the iPhone®.
Unable to save rating. Try again later.	Appears when the like/dislike operation is failed.	Try again later.
Unable to save bookmark. Try again later.	Appears when the bookmark operation is failed.	Try again later.
Skip limit reached.	Appears when the number of skips exceeds the skip limit.	You can skip after the skip limit is removed. Try again later.
Unable to skip.	Appears when advertisements are broadcasted.	You can skip after the advertisements are finished.
PANDORA system maintenance. Try again later.	Appears when the Pandora® server is in maintenance.	Try again later.

## USB Flash Drive

Error Message	Cause	Solution
File Error	The system cannot read the track(s).	Check the tracks in the USB flash drive. There is a possibility that the tracks have been damaged.
Unsupported	Appears when an unsupported device is connected.	If it appears when a supported device is connected, reconnect the device.
Unplayable File	Appears when the tracks in the USB flash drive are DRM or an unsupported format.	This error message appears for about 3 seconds, then plays the next song.
No Song	Appears when the USB flash drive is empty or there are no tracks in MP3, WMA, or AAC format in the drive.	Save tracks in MP3, WMA, or AAC format in the USB flash drive.

# Reference Information


<b>System Initialization</b> .....	228	Map Coverage .....	233
Entering the Security Code .....	228	Obtaining a Navigation Update .....	233
Acquiring GPS Information .....	228	Traffic Information .....	234
Startup Confirmation Screen .....	229	Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico .....	234
Map Matching .....	229	Shipping a Vehicle to the U.S. Mainland ..	234
<b>System Limitations</b> .....	230	<b>Legal Information</b> .....	235
GPS System .....	230	Copyrights .....	235
Address Calculation .....	230	User Agreements .....	235
Database .....	230	As required by the FCC .....	239
<b>Client Assistance</b> .....	232		
Resolving Problems .....	232		
Reporting Errors .....	232		
Acura Client Relations Contact Information ...	232		
Visiting a Dealer .....	232		

 


The navigation system must be initialized if power to the navigation system is interrupted for any reason (e.g., the battery was disconnected).

## Entering the Security Code

Find the navigation system's security code and serial number label in your Owner's Manual kit. Do not store the label in your vehicle. If you lose the label, you must first retrieve the serial number, and then obtain the code. You can find out about your serial number and security code from a dealer.

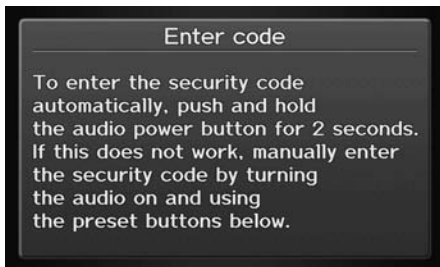


1. Set the power mode to ON, and turn on the audio system.
  - ▶ If you set the power mode to ACCESSORY, you will be requested to enter the security code. See step 3.
2. Press and hold the VOL  (Volume/Power) button for more than two seconds.
  - ▶ The system is reactivated when the system's control unit recognizes that the system is in your vehicle. If the control unit fails to recognize, "ENTER CODE" appears on the navigation screen.
3. Enter the security code.
  - ▶ If you do not enter the security code correctly after 10 tries, leave the system for one hour before trying again, or visit a dealer to have the system reset.

### NOTE:

*In the U.S. you can register the security code at [Acura Owners \(owners.acura.com\)](http://owners.acura.com), and find information on how to retrieve the serial number and obtain the code at [radio-navicode.acura.com](http://radio-navicode.acura.com).*

## Acquiring GPS Information

Depending on the length of time the power was interrupted, your system may require GPS initialization.

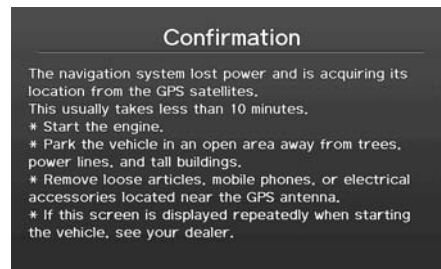

If initialization is not necessary, the system proceeds directly to the Startup Confirmation screen.

If the system fails to locate a sufficient number of satellites to locate your position within 10 minutes, the following screen is displayed.

### Confirmation

Something is interfering with the system's ability to acquire its location. Check the following:


- \* The vehicle must be in an open area with a clear view of the sky.
- \* Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).
- \* Check GPS antenna cable connection.
- \* Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

OK

If you are experiencing GPS reception problems:

➤ **GPS System P. 230**

## Startup Confirmation Screen

The Startup Confirmation screen is displayed when initialization has successfully completed. It is displayed every time you start your vehicle. Press  to select **OK** to continue.

### Notice

Welcome: Driver 1

The driver is responsible for the safe operation of this vehicle. Use this system only when traffic conditions permit. For further details see your owner's manual.

OK

▶ CHANGE LANGUAGE

## Map Matching

Map matching is the process of using the acquired GPS information to locate your position on the map screen. If you are on a mapped road, the name of the road is displayed along the bottom of the map screen when map matching is completed. Do not enter a destination until the road name is displayed.

The system may initially show your location on a different street (e.g., in urban areas where streets are close together), may show an incorrect elevation, or may delay the display of the vehicle position icon at intersections. This is normal; the system will correct itself while you drive.

## GPS System

---

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of the sky. The GPS antenna is located in the dashboard. The signal reception can easily be interrupted or interfered with by the following:

- Metallic window tint on the front or side windows
- Cell phones, PDAs, or other electronic devices docked in a cradle or lying loose on the dashboard
- Remote starters or “hidden” vehicle tracking systems mounted near the navigation unit
- Audio electronic devices mounted near the navigation unit
- Trees, tall buildings, freeway overpasses, tunnels, or overhead electrical power wires

The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS for which the navigation system must constantly compensate. This

can cause occasional positioning errors of up to several hundred feet.

## Address Calculation

---

The destination icon shows only the approximate location of a destination address. This occurs if the number of possible addresses is different from the number of actual addresses on a block. For example, the address 1425 on a 1400 block with 100 possible addresses (because it is followed by the 1500 block) will be shown a quarter of the way down the block by the system. If there are only 25 actual addresses on the block, the actual location of address 1425 would be at the end of the block.

## Database

---

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

For example, some places/landmarks may be missing when you search the database because the name was misspelled, the place was improperly categorized, or a place/landmark is not yet in the database. This is also true for police stations, hospitals, and other public institutions. Do not rely on the navigation system if you need law enforcement or hospital services. Always check with local information sources.

In addition, the map database contains verified and unverified areas. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. A message will warn you if your route includes unverified streets. Exercise additional caution when driving in unverified areas.

The database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Special events

- Pavement characteristics or conditions

Every effort has been made to verify that the database is accurate. The number of inaccuracies you experience increases the longer you go without obtaining an updated map database.

**🗲 Obtaining a Navigation Update P. 233**

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

## Resolving Problems

---

If you run into a specific issue that you cannot resolve, consult the following help resources:

- For navigation system issues:  
➤ **Troubleshooting** P. 216  
There are also FAQs available online at [www.acuranavi.com](http://www.acuranavi.com).
- For questions regarding *Bluetooth*® HandsFreeLink®:  
➤ **Bluetooth® HandsFreeLink®** P. 178
- For traffic-related issues:  
➤ **Traffic** P. 218
- For reporting issues with the database or places/landmarks:  
➤ **Reporting Errors** P. 232
- Call Acura Client Relations.  
➤ **Acura Client Relations Contact Information** P. 232

## Reporting Errors

---

You can help to improve database accuracy by reporting any errors you encounter.

- Report errors in freeways and main “verified” roads shown in black on the map at <http://mapreporter.navteq.com/dur-web-external/>.
- Please do not report errors in purple “unverified” roads. Maps for these areas are provided for reference only.  
➤ **Unverified Area Routing** P. 50
- Please do not report errors in places/landmarks, such as changes in business names. Information about points of interest are constantly being updated. An updated database is available for purchase, usually in the fall of each year.  
➤ **Obtaining a Navigation Update** P. 233
- For vehicle position icon errors, screen error messages, or other GPS-related errors:  
➤ **Troubleshooting** P. 216  
➤ **System Limitations** P. 230

## Acura Client Relations Contact Information

---

Acura Navi

American Honda Motor Co., Inc.

Acura Client Relations  
Mail Stop 500-2N-7E  
1919 Torrance Blvd.

Torrance, CA 90501-2746  
Tel: (800) 382-2238

## Visiting a Dealer

---

If you have a question that you cannot resolve using the available help resources, you can consult a dealer. Please identify the specific issue (e.g., error occurs when you enter a specific address, when driving on a certain road, or just when it’s cold) so that the service technician can refer the issue to the factory so that a solution can be found. Be patient, the service technician may be unfamiliar with your specific issue.

## Map Coverage

The navigation system provides map coverage for the United States, Canada, Puerto Rico, and Mexico. The map coverage consists of accurately mapped (verified) metropolitan areas and a less accurate (unverified) rural database. Note that unverified areas are constantly being reviewed and converted to verified areas each year.



Map coverage update information is available from Acura Client Relations or online at [www.acuranavi.com](http://www.acuranavi.com).

To find navigation system update information:

1. Visit [www.acuranavi.com](http://www.acuranavi.com).
2. Enter your vehicle model and model year.
3. Click Map Coverage to display a list of verified coverage areas on the most recent update.
4. Click Map Coverage Details to display a PDF document with a full listing of all coverage areas.

▶ Adobe® Reader® is required for viewing and printing the Portable Document Format (PDF) documents. To download the latest version of Adobe Reader, visit <http://get.adobe.com/reader/>.

## Obtaining a Navigation Update

Acura is continually expanding the scope of the navigation system. Navigation system software upgrades may be made available periodically, usually in the fall of each year.

To purchase an updated data file:

1. Obtain your vehicle's VIN number and the System/Device Information.  
 ▶ **System/Device Information** P. 210
2. Call the Acura Navigation Disc Fulfillment Center at (888) 549-3798, or order online at [www.acuranavi.com](http://www.acuranavi.com).

Updated data is not available from a dealer. However, the dealer may assist you in obtaining an update for you out of courtesy. There is no program for free updates.

## Traffic Information

---

Continuously updated traffic information is available in major metropolitan areas across the 48 contiguous states and some cities in Canada. A list of coverage areas is available online.

To find traffic information:

1. Visit [www.acura.com/realtimetraffic](http://www.acura.com/realtimetraffic).
2. Select Real-Time Traffic on the RDX.
3. Click AcuraLink Real-Time Traffic.

## Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico

---

### ■ SiriusXM® Radio

Navigation-equipped vehicles delivered to Alaska, Hawaii, Puerto Rico, and Mexico are equipped with SiriusXM® hardware, but SiriusXM® broadcasting is not available. There are certain functions that rely on SiriusXM® satellite signal coverage which are not available, including but not limited to AcuraLink and traffic/weather-related services. Unavailable menu options will appear gray on the LCD display.

### ■ Map Coverage

All roads displayed on the map screens are verified roads. Information in this manual relating to “unverified” roads or areas is not applicable.

### ■ Address and Place Entry Screens

Entering a destination address or place/landmark on another island may result in a screen caution message. This is because there are no ferry routes between islands in the database.

### ■ Puerto Rico and Mexico

If Street Name Guidance is set to ON, the street names will not be read out by voice guidance. This may change in a future data update.

## Shipping a Vehicle to the U.S. Mainland

---

To receive SiriusXM® audio, traffic, or weather information, you must call SiriusXM® and set up an account at (800) 852-9696.

To receive AcuraLink quick tips, contact Acura Client Relations at (800) 382-2238, and ask them to activate your AcuraLink unit.

## Copyrights

- Infogroup-Data: Certain business data provided by Infogroup © 2011, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2011. All rights reserved.
- Building foot print: © ZENRIN CO., LTD. 2011. All rights reserved.
- Junction View Data: © ZENRIN USA, INC. 2011. All rights reserved.
- Brand icon: The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

## User Agreements

### Navigation System User Agreement

In using this HDD “Satellite Linked Navigation System” (the “HDD”), which includes HONDA MOTOR CO., LTD. software, PIONEER CORPORATION software, and NAVTEQ database contents (hereinafter referred to as “Licensors”), you are bound by the terms and conditions set forth below. By using your copy of the HDD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the HDD to your dealer.

- The HDD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The HDD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.
- The HDD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The HDD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The HDD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The HDD is not to be used for commercial purposes.
- The Licensors do not guarantee to the client that the functions included in the HDD meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the HDD to the actual user or to any third party.
- The warranty on the HDD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the HDD.
- The right to use the HDD shall expire either when the user destroys the HDD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the HDD or software.



- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, convenience stores, and other businesses are displayed for your information and convenience, and in no way imply any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.
- The marks of companies displayed by this product to indicate business locations are the marks of their respective owners.
- The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the HDD or software.

Use, duplication, or disclosure of this HDD by or on behalf of the United States government is subject to “Restricted Rights” as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., PIONEER CORPORATION, 1-1 Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan., NAVTEQ Corporation, 425 W Randolph St. Chicago, IL 60606, USA.

## Gracenote Music Recognition Service (CDDB)



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, visit [www.gracenote.com](http://www.gracenote.com).

When music is recorded to the HDD from a CD, information such as the recording artist and track name are retrieved from the Gracenote Database and displayed (when available). Gracenote may not contain information for all albums.

Gracenote is an internet-based music recognition service that allows artist, album, and track information from CDs to display on the HDD.

Gracenote users are allowed 4 free updates a year. More information about Gracenote, its features, and downloads are available at [www.acuranavi.com](http://www.acuranavi.com) (in U.S.) or [www.acuranavi.ca](http://www.acuranavi.ca) (in Canada).

CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

**Gracenote® END USER LICENSE AGREEMENT**

This application or device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers or embedded databases (collectively, “Gracenote Servers”) and to perform other functions. You may use

Gracenote Data only by means of the intended End-User functions or this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only.

You agree not to assign, copy, transfer, or transmit the Gracenote Software or any Gracenote Data to any third party.

**YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers.

Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.”

Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote

deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted.

Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

### ■ Disclaimer of Pandora®

Requirements to access Pandora® internet radio using this system:

- Apple iPhone (first generation), iPhone 3G, iPhone 3GS, iPhone 4 or iPhone 4S with firmware version 3.0
- Latest version of the Pandora application for the iPhone, downloaded to your device. (Search Apple iTunes App Store for “Pandora”).
- Current Pandora account (Free accounts and paid accounts available from Pandora; create a free account online at <http://www.pandora.com/register> or through the Pandora application for the iPhone).
- iPhone Data Plan. Note: if the Data Plan for your iPhone does not provide for unlimited data usage, additional charges from the cellular phone carrier may apply for accessing the Pandora service via its 3G, GSM/EDGE and/or CDMA networks.
- Connection to the Internet via 3G, GSM/EDGE, CDMA or WiFi network.

Limitations:

- Access to Pandora® internet radio will depend on the availability of a cellular and/or WiFi network for purposes of allowing your iPhone to connect to the Internet.
- Ability of this system to access Pandora® is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of iPhones; compatibility issues with future firmware versions of the Pandora application for the iPhone; changes to the internet radio service by Pandora; discontinuation of the internet radio service by Pandora.
- Certain functionality of Pandora® is not available when accessing the service through this system, including, but not limited to, creating new stations, deleting stations, emailing current stations, buying songs from iTunes, viewing additional text information, logging in to Pandora®, and adjusting Cell Network Audio Quality.

Pandora® internet radio is a internet radio service not affiliated with HONDA. More information is available at <http://www.pandora.com>. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.

## As required by the FCC

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.





# Voice Commands

- Voice Commands** ..... 242
- Global Commands ..... 242
- Navigation Commands ..... 242
- Climate Control Commands ..... 244
- Audio Commands ..... 245
- Cellular Phone Commands ..... 248
- Main Setup Screen Commands ..... 248
- On-Screen Commands ..... 249
- Spelling Assistance ..... 249

## Global Commands

The system accepts these commands on any screen.

*Help* (displays commands for current screen)

*Display map* (equivalent to MAP)

*Display destination* (equivalent to DEST/ROUTE)

*Display information* (equivalent to INFO)

*Display audio* (equivalent to AUDIO)

*Display phone* (equivalent to PHONE)

*Back* (returns to previous screen)

*Cancel* (equivalent to CANCEL)

*What is today's date?*

*What time is it?*

## Navigation Commands

The system accepts these commands on a map/guidance screen.

### General Commands

*Display destination* (if en route, displays the Route screen)

*Display navigation* (if en route, displays the Route screen)

*Display map*

*Display map guide* (when en route, shows the next guidance point)

*Display information* (or Information)

*Display audio*

*Display phone*

*Cancel*

*Backward* (or Back)

*What time is it?*

*What is today's date?*

*Help* (reads list of General and Map Display Commands)

### Map Display Commands

*Display current location* (shows current latitude, longitude, and elevation)

*Display/Hide* (specify icon type):

*ATM*

*gas station*

*restaurant*

*post office*

*grocery store*

*lodging* (hotel, motel)

*parking garage*

*parking lot*

*school*

*hospital*

*freeway exit information*

*traffic*

*traffic speeds*

*traffic icons*

*traffic incidents*

*weather*

*weather icons*

*weather warning icon*

*Go home 1*

*Go home 2*

*Messages*

## Map Scale Commands

*Register the current location* (stores current location in the Address Book)

*Display north up*

*Display heading up*

*Display zoom in*

*Display zoom out*

*Display* (specify scale):

*1/20 mile (80 m) scale*

*1/8 mile (200 m) scale*

*1/4 mile (400 m) scale*

*1/2 mile (800 m) scale*

*1 mile (1600 m) scale*

*2 mile (3 km) scale*

*5 mile (8 km) scale*

*15 mile (24 km) scale*

*50 mile (80 km) scale*

*150 mile (240 km) scale*

*350 mile (560 km) scale*

*1000 mile (1600 km) scale*

*Max zoom in*

*Max zoom out*

## Find Place Commands

*Find nearest* (specify place):

*Auto service center*

*Acura dealer*

*Honda dealer*

*Gas station*

*Hydrogen station*

*Auto parts & electronics shop*

*Auto repair & maintenance shop*

*Car wash & detailing shop*

*Motorcycle dealer*

*Other car dealer*

*Parking garage*

*Parking lot*

*Rental car agency*

*Roadside assistance*

*Banking center*

*ATM*

*Bank*

*Check cashing place*

*Community*

*Business place*

*City hall*

*Civic center*

*Convention center*

*Court house*

*University*

*Library*

*Post office*

*School*

*Emergency room*

*Hospital*

*Police station*

*Veterinarian*

*Lodging*

*Bed & breakfast*

*Hotel*

*Leisure center*

*Amusement park*

*Golf course*

*Historical monument*

*Marina*

*Movie theater*

*Museum*

*Park*

*Performing arts center*

*Sports complex*

*Restaurant*

*American restaurant*

*Chain restaurant*

*Café shop*

*Californian restaurant*

*Chinese restaurant*

*Continental restaurant*

*Fast food restaurant*



French restaurant  
German restaurant  
Greek restaurant  
Indian restaurant  
Italian restaurant  
Japanese restaurant  
Korean restaurant  
Mexican restaurant  
Seafood restaurant  
Thai restaurant  
Vegetarian restaurant  
Vietnamese restaurant  
Other restaurant  
Pizza restaurant  
Ice cream shop  
Shopping area  
Accessory store  
Book store  
Clothing store  
Shoe store  
Furniture store  
Grocery store  
Home improvement store  
Mall  
Office supply store  
Pharmacy  
Pet food store  
Sewing store

Sporting goods store  
Toy store  
Travel center  
Airport  
Automobile club  
Bus station  
Camping  
Commuter rail station  
Ferry terminal  
Named place  
Park & ride  
Rest area  
Ski area  
Tourist attraction  
Tourist information center  
Train station  
Travel agency  
Truck stop

## Route Commands

The system accepts these commands when a route is set.

*How long to the destination?\**

*How far to the destination?\**

*Display destination map*

*Display entire route*

\* These commands are not available if you scroll through the map while en route to a destination.

## Climate Control Commands

The system accepts these commands on most screens.

*Climate control automatic* (maintains selected temperature)

*Climate control on\**

*Climate control off\**

*Air conditioner on\**

*Air conditioner off\**

*Climate control defrost on\**

*Climate control defrost off\**

*Rear defrost on\**

*Rear defrost off\**

*Climate control fresh air*

*Climate control recirculate*  
*Climate control sync on\**  
*Climate control sync off\**  
*Climate control vent*  
*Climate control bi-level (vent and floor)*  
*Climate control floor*  
*Climate control floor and defrost*  
*Fan speed up*  
*Fan speed down*  
*Fan speed # (#: 1 to 7)*  
*Driver temperature # degrees (#: 57 to 87 °F)*  
*Passenger temperature # degrees (#: 57 to 87 °F)*  
*Driver temperature up*  
*Driver temperature down*  
*Passenger temperature up*  
*Passenger temperature down*  
*Driver temperature max hot*  
*Driver temperature max cold*  
*Passenger temperature max hot*  
*Passenger temperature max cold*

\* These commands toggle the function on and off, so the command may not match your intended action.

## Audio Commands

The system accepts these commands on most screens.

### Radio Commands

*Audio on\**  
*Audio off\**  
*Radio on\**  
*Radio off\**  
*Radio select FM1*  
*Radio select FM2*  
*Radio select AM*  
*Radio tune to # FM (#: frequency, e.g., 95.5)*  
*Radio tune to # AM (#: frequency, e.g., 1020)*  
*Radio seek up*  
*Radio seek down*  
*Radio next station*  
*Radio preset # (#: 1 to 6)*  
*Radio FM preset # (#: 1 to 6)*  
*Radio FM1 preset # (#: 1 to 6)*  
*Radio FM2 preset # (#: 1 to 6)*  
*Radio AM preset # (#: 1 to 6)*  
*Radio auto select\**  
*Radio scan\**  
*Radio select XM1*

*Radio select XM2*  
*XM channel # (#: 0 to 255)*  
*XM channel up*  
*XM channel down*  
*XM category up*  
*XM category down*  
*XM preset # (#: 1 to 6)*  
*XM1 preset # (#: 1 to 6)*  
*XM2 preset # (#: 1 to 6)*  
*XM scan\**  
*XM category scan\**  
*XM channel scan\**  
*XM category mode*  
*XM channel mode*

\* These commands toggle the function on and off, so the command may not match your intended action.

### NOTE:

*Radio volume levels cannot be controlled using voice control.*

**Disc Commands**

*DISC play*

*DISC play track # (#: 1 to 30)*

*DISC skip forward*

*DISC skip back*

*DISC track random\**

*DISC track repeat\**

*DISC track scan\**

*DISC folder up*

*DISC folder down*

*DISC folder random\**

*DISC folder repeat\**

*DISC folder scan\**

*DISC normal play* (cancels random, repeat, or scan play mode, resumes normal play mode)

- \* These commands toggle the function on and off, so the command may not match your intended action.

**HDD Commands**

*HDD play*

*HDD search* (activates Song By Voice™)

*HDD play track # (#: 1-30)*

*HDD skip forward*

*HDD skip back*

*HDD album up\*1*

*HDD album down\*1*

*HDD genre up\*1*

*HDD genre down\*1*

*HDD artist up\*1*

*HDD artist down\*1*

*HDD track up*

*HDD track down*

*HDD playlist up\*1*

*HDD playlist down\*1*

*HDD track repeat\*2*

*HDD track scan\*1*

*HDD track random\*2*

*HDD normal play* (cancels random, repeat, or scan play mode, resumes normal play mode)

*What/Who am I listening to?*

*Who is this?*

*What's playing?*

*Who's playing?*

*What album is this?*

- \*1. These commands are available only in the corresponding playback mode. For example, "Artist" commands are available only in "Artist" mode.
- \*2. These commands toggle the function on and off, so the command may not match your intended action.

**USB Commands**

*USB play*

*USB play track # (#: 1 to 30)*

*USB skip forward*

*USB skip back*

*USB track random\**

*USB track repeat\**

*USB track scan\**

*USB folder up*

*USB folder down*

*USB folder random\**

*USB folder repeat\**

*USB folder scan\**

*USB normal play* (cancels random, repeat, or scan play mode, resumes normal play mode)

- \* These commands toggle the function on and off, so the command may not match your intended action.

**iPod® Commands**

*iPod play*  
*iPod search* (activates Song By Voice™)  
*iPod play track #* (#: 1-30)  
*iPod skip forward*  
*iPod skip back*  
*iPod track shuffle\**  
*iPod album shuffle\**  
*iPod track repeat\**  
*iPod normal play* (cancels repeat or shuffle play mode, resumes normal play mode)  
*What/Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

- \* These commands toggle the function on and off, so the command may not match your intended action.

**Pandora® Commands**

*Pandora play\*1*  
*Pandora on\*1*  
*Pandora off\*1*  
*Pandora quick mix on*  
*Pandora skip forward* (or next song)  
*Pandora station up*  
*Pandora station down*  
*Pandora pause\*1*  
*Pandora resume\*1*  
*Pandora like song*  
*Pandora dislike song*  
*Pandora bookmark song*  
*Pandora bookmark artist*  
*Station list\*2*

- \*1. These commands toggle the function on and off, so the command may not match your intended action.  
 \*2. These commands are accepted on the Audio screen only.

**Bluetooth® Audio Commands**

*Bluetooth audio play*  
*Bluetooth audio skip forward*  
*Bluetooth audio skip back*  
*Bluetooth audio pause*  
*Bluetooth audio resume*  
*Bluetooth audio group up*  
*Bluetooth audio group down*

**NOTE:**

*Bluetooth® Audio commands may not work on some phones or Bluetooth® audio devices.*

**AUX Commands**

*AUX play* (or Auxiliary play)

## Song By Voice™ Commands

*iPod search* (activates Song By Voice™)  
*HDD search* (activates Song By Voice™)  
*List album* (specify album)  
*List artist* (specify artist)  
*List composer* (specify composer)  
*List genre* (specify genre)  
*List playlist* (specify playlist)  
*Play album* (specify album)  
*Play artist* (specify artist)  
*Play composer* (specify composer)  
*Play genre* (specify genre)  
*Play playlist* (specify playlist)  
*Play song* (specify song)  
*What/Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

### NOTE:

*Song By Voice™ commands are available for tracks stored on the HDD or iPod®.*

## Cellular Phone Commands

The system accepts these commands only on the Cellular Phone screen.

*Redial*  
*Call history*  
*Phone book*  
*Dial*  
*Text message*  
*More speed dial*  
*Phone setup*

These commands can be made from any screen.

*Dial/call by number*  
*Dial/call by voice tag*

## Text Message Commands

The system accepts these commands on the Inbox Message screen.

*Reply*  
*Call*  
*Send*  
*Full message*  
*Next message*  
*Previous message*  
*Read\**  
*Cancel\**

\* These commands are accepted when a text message is received.

## Main Setup Screen Commands

The system accepts these commands on the Main Setup screen.

*Brightness up*  
*Brightness down*  
*Brightness minimum/min.*  
*Brightness maximum/max.*  
*Contrast up*  
*Contrast down*  
*Contrast minimum/min.*  
*Contrast maximum/max.*  
*Black level up*  
*Black level down*  
*Black level minimum/min.*  
*Black level maximum/max.*  
*Volume up*  
*Volume down*  
*Volume minimum/min.*  
*Volume maximum/max.*  
*Volume off*  
*Interface dial feedback off*  
*Interface dial feedback auto*  
*Interface dial feedback on*

## On-Screen Commands

The system accepts these commands on any screen. There are over 100 on-screen commands. Say what is written on the screen to activate that selection. For lists, you can say the list item number to select that item.

*Next (or Down)*

*Previous (or Up)*

*Return*

*OK (excluding Startup Confirmation screen)*

*Delete*

## Spelling Assistance

The voice control system can also recognize phonetic alphabet input for numbers, letters, accented letters, punctuation marks, and symbols.

**NOTE:**

*When selecting letters using the voice control system, a confirmation box may pop up to confirm the entry.*

### Numbers



Say ...	Say ... or Number ...
1	One
2	Two
3	Three
4	Four
5	Five
6	Six
7	Seven
8	Eight
9	Nine
0	Zero

### Letters



Say ...	Or say...
A	Apple/Alpha
B	Boy/Bravo
C	Charlie
D	Dog/Delta
E	Edward/Echo
F	Frank/Foxtrot
G	George/Golf
H	Henry/Hotel
I	Igloo/India
J	John/Juliet
K	King/Kilo
L	Larry/Lima
M	Mary/Mike

Say ...	Or say...
N	Nancy/November
O	Oscar
P	Paul/Papa
Q	Queen/Quebec
R	Robert/Romeo
S	Sam/Sierra
T	Tom/Tango
U	Uncle/Uniform
V	Victor
W	William/Whiskey
X	X-ray
Y	Yellow/Yankee
Z	Zebra/Zulu

### ■ Accented Letters



Say ...	Say ... or Symbol ...
À	A grave
Â	A circumflex
Ä	A umlaut
Ç	C cedilla
È	E grave
É	E acute
Ê	E circumflex
Ë	E umlaut
Ì	I grave
Î	I circumflex
Ï	I umlaut
Ô	O circumflex
Ù	U grave

Say ...	Say ... or Symbol ...
Û	U circumflex
Ü	U umlaut

## Punctuation Marks



Say ...	Say ... or Symbol ...
@	At sign
^	Caret
*	Asterisk
_	Underscore
`	Back quote
,	Comma
.	Dot
?	Question mark
:	Colon
;	Semicolon
+	Plus

## Symbols



Say ...	Say ... or Symbol ...
-	Hyphen
!	Exclamation point
"	Double quote
#	Pound
\$	Dollar
%	Percent
&	Ampersand
'	Apostrophe
(	Open parenthesis
)	Close parenthesis
~	Tilde
/	Slash
<	Less than

Say ...	Say ... or Symbol ...
>	Greater than
{	Open brace
}	Close brace
↵	Enter

 







# List of Categories

<b>Auto Service</b>		<b>Lodging</b>		<b>Shopping</b>	
All Types	Car Wash & Detailing	All Types	Hotel/Motel	All Types	Mall/Department Store
Acura Dealers*	Motorcycle Dealers	Bed & Breakfast		Accessories/Jewelry	Office Supplies/Electronics
Acura Roadside Assistance	Other Car Dealers	<b>Leisure</b>		Auto Parts & Electronics	Pharmacy/Drug Store
Honda Dealers*	Parking Garage/House	All Types	Museum	Books/Music/Video	Pet Food/Supplies
Gas Station*	Parking Lot	Amusement Park	Park/Recreation Area	Clothing/Shoes/Bags	Sewing/Linen
Hydrogen Station	Rental Car Agency	Golf Course	Performing Arts	Furniture/Home Furnishing	Sporting Goods
Auto Parts & Electronics	Roadside Assistance	Historical Monument	Sports Complex	Groceries/Supermarket	Toys/Arts/Crafts
Auto Repair & Maintenance		Marina	Tourist Attraction	Home Improvement	
<b>Banking</b>		Movie Theater		<b>Travel</b>	
All Types	Bank	<b>Restaurant</b>		All Types	Parking Garage/House
ATM*	Check Cashing/Money Transfer	All Types*	Indian	Airport	Parking Lot
<b>Community</b>		American	Italian	Automobile Club	Rental Car Agency
All Types	Court House	Chain	Japanese	Bed & Breakfast	Rest Area
Business	Higher Education	Café/Coffee shop	Korean	Bus Station	Ski Area
City Hall	Library	Californian	Mexican	Camping	Tourist Attraction
Civic/Community Center	Post Office	Chinese	Pizza	Commuter Rail Station	Tourist Information
Convention/Exhibition Center	School	Continental	Seafood	Ferry Terminal	Train Station
<b>Emergency</b>		Fast Food	Thai	Hotel/Motel	Travel Agency
All Types	Police Station	French	Vegetarian	Named Place	Truck Stop/Plaza
Acura Roadside Assistance	Roadside Assistance	German	Vietnamese	Park & Ride	
Hospital*	Veterinarian	Greek	Other Food		
		Ice Cream/Dessert			

\* Stored in "My Favorites" by factory default.

## Symbols

  (Back) Button	5, 22
 (Display Mode) Button	29
 (Hang-Up) Button	193
 (Pick-Up) Button	193, 194
 (Sound) Button	6, 174
 (Talk) Button	5, 22

## A

A.SEL (Auto Select)	137
Acura Client Relations	232
AcuraLink/Messages	62
Add to Address Book	89, 131
Add to Dest. List	89, 125, 129, 130, 131
Address	
Editing Address Book	39
Editing Avoid Area	54
Setting Destination	70
Address Book	
Editing Address Book	37
Setting Destination	75
Address Book PIN	42
Adjust Time	58
Advanced (Place Category)	80
Audio	133
Basic Operation	6
Control Display	7
Remote Control	175
Sound Setup	174
Voice Commands List	245
AUDIO Button	7

## Audio Menu

Bluetooth® Audio	173
Disc	146
FM/AM Radio	137
HDD	150
iPod®	161
SiriusXM® Radio	141
USB Flash drive	170
Auto Answer	188
Auto Daylight	57
Auto Reading	62
Auto Service (Place Category)	80
Auto Time Zone	57
Auto Transfer	188
AUX	
Input Jack	134
Voice Commands List	247
Avoid Streets	121

## B

Banking (Place Category)	80
Basic Settings	26
Black Level	24
Bluetooth® Audio	
Playing	172
Voice Commands List	247
Bluetooth® HandsFreeLink®	177
Editing User Name/PIN	187
Making a Call	190
Pairing a Phone	180
Receiving a Call	193
Setting Speed Dials	185
Brightness	24, 29

## C

Calculator	208
Calendar	206
Call	
AcuraLink/Messages	202
Calculate Route Screen	89, 131
Making	190
Receiving	193
Call History	192
Call Your Dealer	203
Cancel Route	121
Category	
Editing Address Book	39
Place Category List	252
Setting Destination	80
CATEGORY Bar	6
Category Scan	141
Cellular Phone	
Voice Commands List	248
CH (Channel) Button	176
Change Language	20
Change Route Preference	90
Change State	71
Channel List	141
Channel Scan	141
City	72
City Vicinity	
Setting Destination	81
Viewing Weather	114
Clear Cellular Phone Information	189
Clear Personal Data	65

**Clock Adjustment** ..... 57  
 Adjust Time ..... 58  
 Auto Daylight ..... 57  
 Auto Time Zone ..... 57  
 Resetting ..... 58  
**Color** ..... 27  
 Map Color ..... 28  
 Menu Color ..... 28  
**Community (Place Category)** ..... 80  
**Connect to the Acura Server** ..... 62  
**Continue Trip** ..... 131  
**Contrast** ..... 24  
**Coordinate** ..... 85  
**Correct Vehicle Position** ..... 61  
**Current Location** ..... 108  
**Current Position**  
 Editing Address Book ..... 39  
 Setting Destination ..... 87  
 Viewing Weather ..... 114

**D**

**Day Mode**  
 Map Color ..... 28  
 Menu Color ..... 28  
 Switching Display Mode ..... 29  
**Delete a Phone** ..... 183  
**Delete Messages** ..... 62  
**Dest. Menu 1** ..... 68  
**Dest. Menu 2** ..... 68  
**DEST/ROUTE Button**  
 Changing Route ..... 120  
 Entering a Destination ..... 68

**Destination List**  
 Adding Waypoint ..... 122  
 Editing ..... 126  
**Destination Map** ..... 91  
**Detour** ..... 121  
**Diagnostic Info** ..... 202  
**Dial** ..... 191  
**Dial Tones** ..... 193  
**Direct Dial** ..... 193  
**Directions** ..... 100  
**Disc**  
 Playing ..... 145  
 Voice Commands List ..... 246  
**DISC Button** ..... 6, 145  
**Display Voice Command Tips** ..... 26

**E**

**Edit Album** ..... 155  
**Edit Avoid Area** ..... 53  
**Edit Phone Name/PIN** ..... 187  
**Edit Speed Dial** ..... 185  
**Edit Track** ..... 156  
**Edit Waypoint Search Area** ..... 55  
**Emergency (Place Category)** ..... 80  
**ENT Button** ..... 8  
**Error Messages** ..... 223  
 Disc Player ..... 224  
 iPod® ..... 225  
 Navigation System ..... 223  
 USB Flash Drive ..... 226  
**Exit Info** ..... 101

**F**

**Favorite Subcategory** ..... 82  
**Feature Guide** ..... 201  
**Find Acura Dlr** ..... 203  
**Find Nearest...** ..... 127  
**FM/AM Button** ..... 6, 136  
**FM/AM Radio**  
 Playing ..... 136  
 Voice Commands List ..... 245  
**Folder List**  
 Disc ..... 147  
 USB Flash Drive ..... 171

**G**

**Get Album Info** ..... 157  
**Go Home 1** ..... 12  
**Go Home 1 PIN** ..... 42  
**Go Home 2** ..... 12  
**Go Home 2 PIN** ..... 42  
**Guidance Menu** ..... 99  
 Directions ..... 100  
 Exit Info ..... 101  
 Guidance Mode ..... 102  
**Guidance Mode** ..... 102

**H**

**HDD**  
 Playing ..... 149  
 Voice Commands List ..... 246  
**HDD Setup**  
 Disc ..... 146  
 HDD ..... 151

HDD/AUX Button	6, 149, 160, 169, 172
Heading-up	107
Home Address 1	12, 41
Home Address 2	12, 41

**I**

Icon Option	106
Interface Dial	8
Interface Dial Feedback	25
Intersection	86
iPod®	
Connecting, Disconnecting	159, 168
Playing	159
Voice Commands List	247

**L**

Language	31
Leisure (Place Category)	80
Lodging (Place Category)	80

**M**

Maintenance Minder	202
Map Color	28
Map Information	104
Map Input	
Editing Avoid Area	54
Setting Destination	87
Map Legend	10, 109
Map Menu	97

Map Screen	92
Icon	10, 105, 111
Orientation	107
Scale	110

**Map Update Status**

Checking Version	210
Obtaining Update Data	233
Viewing Update Status	211

**MAP/GUIDE Button**

11, 102	
---------	--

**Menu (Dest. Menu 1)**

68	
----	--

**Menu (Dest. Menu 2)**

68	
----	--

**Menu (Route)**

120	
-----	--

**Menu Color**

28	
----	--

**Message**

AcuraLink® Messages	200
Text Messages	197

**Messages (AcuraLink®)**

201	
-----	--

**Mode**

141	
-----	--

**MODE Button**

175	
-----	--

**More Speed Dial**

178	
-----	--

**Music Search**

HDD	154
iPod®	162
Phonetic Modification	46
Song By Voice	45, 163

**Music Search Setup**

44	
----	--

**Mute**

193	
-----	--

**N**

New Message Notification	62
New Messages (AcuraLink®)	200

**Night Mode**

Map Color	28
Menu Color	28
Switching Display Mode	29

**North-up**

107	
-----	--

**Note**

142	
-----	--

**O****Off-road Tracking**

Driving	95
Setting	60

**P****Pair Phone**

180	
-----	--

**Pandora®**

Playing	164
Voice Commands List	247

**Pass-Key**

182	
-----	--

**Personal Information**

36	
----	--

**Phone Setup**

178	
-----	--

**Phonebook**

Making a Call	191
Phone-Data Connection	62

**PIN Numbers**

42	
----	--

**Place Category**

Editing Address Book	39
Place Category List	252
Setting Destination	80

**Place Name**

Editing Address Book	39
Setting Destination	77, 81

**Place Phone No.**  
 Editing Address Book .....39  
 Setting Destination .....84  
**Preset Buttons** .....6  
**Previous Destinations**  
 Deleting .....43  
 Editing Address Book .....39  
 Setting Destination .....76

**Q**

Quick Tips .....201  
 QuickMix .....167

**R**

**Radar Map** .....117  
**Radio**  
 FM/AM .....136  
 SiriusXM® .....140  
**Random**  
 Disc .....146  
 HDD .....151  
 Pass-Key .....182  
 USB Flash Drive .....170  
**RDS Search** .....138  
**Read Radio Text** .....139  
**Rearview Camera** .....213  
**Recalculation** .....49, 94  
**Recalls/Campaigns** .....202  
**Record CD** .....153  
**Reminder** .....20, 207

**Repeat**  
 Disc .....146  
 HDD .....151  
 iPod® .....161  
 USB Flash Drive .....170  
**Rerouting** .....49  
**Reset Clock Settings** .....58  
**Reset Factory Default** .....64  
**Restaurant (Place Category)** .....80  
**Roadside Assistance** .....211  
**Route (Menu)** .....120  
**Route Pref.** .....90  
**Routing & Guidance** .....48

 
**S**

**Scan**  
 Disc .....147  
 FM/AM Radio .....137  
 HDD .....151  
 USB Flash Drive .....170  
**SCAN/A.SEL Bar** .....6  
**Scenic Road Information** .....210  
**Schedule**  
 Calendar .....206  
 Dealer Appointments .....203  
**Search a Next Connected Phone** .....184  
**Search Along** .....123  
**Search Around** .....123  
**Search by Keyword** .....81  
**Search Phonebook** .....191  
**Security PIN Code** .....228  
**Shopping (Place Category)** .....80  
**Show Icon on Map** .....105  
**Show Wallpaper** .....212

**Shuffle** .....161  
**Single Screen** .....102  
**SiriusXM® Button** .....6, 140  
**SiriusXM® Radio**  
 Playing .....140  
 Voice Commands List .....245  
**SKIP Bar** .....6  
**Song By Voice**  
 Searching Music .....163  
 Setting .....45  
 Voice Commands List .....248  
**Sort by Distance to Travel** .....81  
**Sound Setup** .....174  
**Speed Dial**  
 Making a Call .....192  
 Registering .....185  
**Split Screen** .....103  
**Street** .....73  
**Street Name Guidance** .....56  
**System/Device Information** .....210

**T**

**Text Message**  
 Receiving .....197  
 Replying .....198  
 Voice Commands List .....248  
**Text Message Notice** .....189  
**TITLE Button** .....6  
**Traffic & Weather Status** .....63  
**Traffic Detail** .....119  
**Traffic Incidents** .....118  
**Traffic List** .....118  
**Traffic Rerouting** .....118  
**Transfer** .....193

Travel (Place Category) .....	80	<b>Voice Commands</b>	
<b>Tune</b>		Basic Operation .....	9
FM/AM Radio .....	137	Help Info .....	5
SiriusXM® Radio .....	141	Voice Commands List .....	242
<b>TUNE Bar</b> .....	6	Voice Control System .....	22
 		<b>Voice Control Operation</b>	
<b>U</b>		Basic Operation .....	5
Unit Conversion .....	208	<b>Voice Recognition Tutor</b> .....	26
Units (mile or km) .....	26	<b>Voice Tag</b> .....	186
Unverified Area Routing .....	50	<b>VOL (Volume) Button</b> .....	175
Update Gracenote Info .....	158	<b>VOL  (Volume/Power) Knob</b> .....	6
<b>Update System Software</b>		<b>Volume</b> .....	24
Finding Update Information .....	233		
Obtaining Update Data .....	233	 	
<b>USB Flash Drive</b>		<b>W</b>	
Connecting, Disconnecting .....	159, 168	<b>Wallpapers Setting</b>	
Playing .....	168	Deleting, Importing, Setting .....	32
Voice Commands List .....	246	Viewing .....	212
		<b>Warning List Sorted by Distance</b> .....	115
 		<b>Warning Map</b> .....	116
<b>V</b>		<b>Waypoint</b>	
Vehicle .....	59	Adding .....	122
Correct Vehicle Position .....	61	Deleting, Ordering .....	126
Off-road Tracking .....	60	<b>Weather Forecast</b> .....	114
<b>Verbal Reminder</b> .....	26	<b>Weather Info</b> .....	113
<b>View Area Map</b> .....	53		
<b>View Routes</b> .....	90	<b>Z</b>	
<b>Voice</b>		Zip Code .....	71
AcuraLink/Messages .....	202		
Map Menu .....	96		