

| | | | | | |
|--|-----------|---|-----------|---|-----------|
| Introduction | 4 | System Function Diagram | 22 | By Today's Destinations..... | 43 |
| Manual Overview | 4 | Entering a Destination | 23 | <i>Editing Today's Destination List</i> | 43 |
| System Overview | 4 | By Address | 24 | <i>Adding Destinations to the List.....</i> | 44 |
| Accessories Precautions | 5 | <i>Selecting the State or Province.....</i> | 24 | By Address Book..... | 45 |
| Important Safety Information..... | 5 | <i>Selecting the City.....</i> | 24 | <i>Adding Addresses to the Personal</i> | |
| Map Overview | 6 | <i>Selecting the Street</i> | 26 | <i>Address Book.....</i> | 45 |
| <i>Current Street</i> | 6 | <i>Entering the Street Number</i> | 28 | By Go Home..... | 46 |
| <i>Verified/Unverified Street.....</i> | 6 | By Intersection..... | 28 | | |
| User Agreement | 8 | <i>Selecting the State or Province.....</i> | 29 | Driving to Your Destination | 47 |
| Getting Started | 10 | <i>Selecting the City.....</i> | 29 | Driving to Your Destination | 47 |
| System Controls | 10 | <i>Selecting the Street</i> | 31 | Calculate Route to Screen..... | 47 |
| Voice Control Basics..... | 12 | By Places | 33 | <i>Changing the Routing Method.....</i> | 48 |
| <i>Using the Voice Control System.....</i> | 13 | <i>Finding the Place by Category.....</i> | 33 | <i>Viewing the Routes.....</i> | 49 |
| <i>Improving Voice Recognition.....</i> | 14 | <i>Finding the Place by Name.....</i> | 37 | <i>Viewing the Destination Map</i> | 50 |
| Selecting an Item (Button) on the | | <i>Finding the Place by Phone</i> | | Map Screen | 50 |
| Screen | 15 | <i>Number.....</i> | 38 | Route Line..... | 50 |
| Selecting an Item in a List..... | 15 | <i>Finding the Place by Zagat 2007.....</i> | 38 | Guidance Prompts | 51 |
| Using the On-screen Keyboard | 16 | By Map Input..... | 39 | Map Screen Legend | 52 |
| Bluetooth® HandsFreeLink® | | <i>Showing the Map of Current</i> | | Guidance Screen | 53 |
| (Touring Model Only)..... | 17 | <i>Position.....</i> | 39 | Guidance Screen Legend | 53 |
| System Start-up | 18 | <i>Showing the Map of City.....</i> | 40 | Distance and Time to | |
| Map Screen Legend..... | 20 | <i>Showing the Map of State</i> | 40 | Destination..... | 54 |
| Map Screen Description | 21 | <i>Showing the Map of Continental</i> | | Direction List..... | 54 |
| <i>Zoom In/Out.....</i> | 21 | <i>USA.....</i> | 41 | Exit Info | |
| <i>Map Scrolling</i> | 21 | By Previous Destinations..... | 42 | <i>(Freeway Exit Information).....</i> | 55 |
| Displaying Current Location | 21 | | | Split Screen Guidance..... | 55 |
| | | | | Map Scale | 56 |
| | | | | Map Orientation..... | 57 |

Table of Contents

| | | | | | |
|---|----|-------------------------------------|-----------|--|-----|
| Destination Icon | 58 | Information Features | 70 | Routing & Guidance | 86 |
| Landmark Icons | 58 | Information Screen | 70 | <i>Rerouting</i> | 86 |
| <i>Showing Icons on the Map</i> | 60 | Cellular Phonebook | | <i>Unverified Area Routing</i> | 87 |
| <i>Icon Options</i> | 60 | (Touring Model Only) | 70 | <i>Edit Avoid Area</i> | 91 |
| Going Off the Route | 62 | Voice Command Help | 71 | <i>Edit Waypoint Search Area</i> | 93 |
| Off-road Tracking..... | 62 | Map Legend..... | 72 | <i>Guidance Mode</i> | 94 |
| Viewing/Saving the Current | | Calendar..... | 72 | Vehicle..... | 94 |
| Location..... | 63 | <i>Entering Your Schedule</i> | 73 | <i>Off-road Tracking</i> | 94 |
| Pop-ups and Disclaimers | 64 | Calculator..... | 74 | <i>Correct Vehicle Position</i> | 95 |
| Changing the Route | 65 | <i>Unit Conversion</i> | 75 | System Information | 96 |
| <i>Change Route By Screen</i> | 65 | Key to Zagat Ratings | 75 | Basic Settings..... | 96 |
| <i>Waypoints</i> | 65 | System Set-up..... | 77 | <i>Keyboard Layout</i> | 96 |
| <i>Reroute: Avoid Streets</i> | 67 | Setup Mode..... | 77 | <i>Units (mile or km)</i> | 96 |
| <i>Reroute: Detour</i> | 67 | Setup Screen (first) | 77 | <i>Voice Recognition Feedback</i> | 96 |
| <i>Reroute: Change Routing</i> | | <i>Brightness</i> | 77 | Clock Adjustment | 97 |
| <i>Method</i> | 67 | <i>Volume</i> | 77 | <i>Auto Daylight Saving Time</i> | 97 |
| <i>Cancel Current Route</i> | 68 | <i>Display</i> | 78 | <i>Auto Time Zone by GPS</i> | 98 |
| <i>Back to Current Route</i> | 68 | <i>Guidance Prompts</i> | 79 | <i>Daylight Savings Time (DST) Selection</i> | |
| Changing Your Destination | 68 | <i>Contrast</i> | 79 | (<i>Change DST schedule</i>)..... | 98 |
| <i>Find Nearest (Voice command)</i> | 68 | Setup Screen (second) | 80 | <i>Time Adjustment</i> | 98 |
| <i>Go Home (Voice command)</i> | 68 | Personal Information | 80 | Color | 99 |
| <i>Using Joystick to Change</i> | | <i>Address Book</i> | 80 | <i>Map Color</i> | 99 |
| <i>Destination</i> | 68 | <i>Home Address</i> | 84 | <i>Menu Color</i> | 99 |
| <i>Entering a Destination from the Menu</i> | | <i>PIN Number</i> | 84 | Rear View Camera..... | 100 |
| <i>Screen (while on route)</i> | 69 | <i>User Name</i> | 85 | <i>Rear View Camera Brightness</i> | |
| Continue Trip Screen..... | 69 | <i>Previous Destinations</i> | 85 | <i>Adjustment</i> | 100 |

| | |
|--|---|
| System Initialization.....101 | Glossary 129 |
| System Initialization..... 101 | Glossary 129 |
| Entering the Security Code..... 101 | |
| GPS Initialization 102 | Voice Command Index..... 132 |
| Map Matching 102 | Global Commands 132 |
| System Limitations103 | Navigation General Commands... 132 |
| Database Limitations105 | Navigation Display Commands... 133 |
| Customer Assistance107 | Find Place Commands 134 |
| Reporting Errors 107 | Climate Control Commands 135 |
| Honda Automobile Customer | Temperature Voice Commands... 136 |
| Service 107 | Radio Voice Commands..... 136 |
| Visiting Your Dealer 108 | CD Voice Commands..... 137 |
| Obtaining a Navigation Update | DVD Voice Commands..... 137 |
| DVD 108 | AUX Voice Commands..... 138 |
| Changing the DVD..... 109 | Rear Radio Voice Commands 138 |
| PC Card 109 | Rear CD Voice Commands 139 |
| Coverage Areas.....110 | Rear DVD Voice Commands 139 |
| Map Coverage 110 | Rear AUX Voice Commands 140 |
| <i>Operation in Hawaii and Alaska... 110</i> | Information Screen Voice |
| <i>U.S. Detailed Coverage Areas..... 110</i> | Commands..... 140 |
| <i>Canada Detailed Coverage</i> | Setup Screen (first) Commands... 140 |
| <i>Areas 115</i> | On-Screen Commands..... 141 |
| | <i>On-Screen Commands Assist..... 141</i> |
| Frequently Asked Questions....121 | Index 143 |
| Troubleshooting.....128 | |

Introduction

Manual Overview

The manual is divided into the following sections:

- Getting started - A basic introduction that discusses the controls and how to communicate with the system.
- Entering a Destination - How to enter an address or locate a point of interest (POI).
- Driving to your Destination – An explanation of the map features, guidance, and cautions.
- Information Features - Cellular Phonebook*, Voice Command Help, Map Legend, Calendar, Calculator, and Key to Zagat Ratings.
* Available only for the Touring model.
- System Set-up - How to set up and tailor the system for your personal use and use the Address Book.

The back of this manual contains:

- Map Coverage (page 110)
- Frequently Asked Questions (FAQs) (page 121)
- Troubleshooting Guide (page 128)
- Glossary of Terms (page 129)
- Voice Command List (page 132)

System Overview

Your navigation system is a highly sophisticated location system with voice control that uses satellites and a map database to show you where you are and to help guide you to a desired destination.

The navigation system receives signals from the global positioning system (GPS), a network of 24 satellites in orbit around the earth. By receiving signals from several of these satellites, the navigation system can determine the latitude, longitude, and elevation of your vehicle. In addition, a gyroscopic yaw sensor and a vehicle speed sensor in your vehicle keep track of the direction and speed of travel at all times.

The navigation system applies this location, direction, and speed information to the maps and calculates a route to the destination you enter. As you drive to that destination, the system provides map and voice guidance.

The navigation system is easy to use. The locations of many places of business and entertainment are already entered in the system. You can select any of them as a destination by using the touch screen, joystick or voice control.

There are several ways to enter a destination, such as by point of interest (POI), by address, by phone number, and by selecting it from the map. The last 50 destinations are saved for reuse at a later date. The system also allows you to store a home address to simplify returning home from your destination.

Accessories Precautions

If you have front window tinting installed, be aware that if the tint has metallic properties, it can seriously degrade or prevent GPS reception. This is because the GPS antenna is located under the dashboard.

If you plan to install electronic components such as radar detectors, vehicle location devices, remote starters, additional amplifiers, or other audio components, ensure that they are not located near the navigation control unit under the driver's seat, near the navigation screen in the dash, or near the GPS antenna under the dashboard. Signal noise emanating from these devices can cause intermittent disruption of the navigation system.

Important Safety Information

The navigation system can distract your attention from the road if you focus on the screen or operate the system's controls while driving.

Enter as much information as possible into the system before you begin driving, or when the vehicle is stopped. Then, as you drive, listen to the audio instructions and use voice commands when possible.

WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Follow all operating instructions and safety information in this manual.

While driving, do not look at the screen or operate the system controls for more than a second or so at a time, and only after deciding you can do so safely. Pull to the side of the road if you need more time to look at the screen or operate the controls.

The navigation system is designed to provide route information to help you reach your destination. However, this route guidance may sometimes conflict with current road conditions such as street closures, road construction, detours, and out-of-date map data.

Additionally, the system itself has certain limitations (see page 103). Therefore, you must verify the audio and visual route information provided by the system by carefully observing the roadway, signs and signals, etc. If you are unsure, proceed with caution. Always use your own good judgment, and obey traffic laws while driving.

Map Overview

Current Street

The current street on which your vehicle is, appears at the bottom of the map screen (see page 20). A message saying “Not on a digitized road” may appear instead when you drive half a mile away from a mapped road. For more details, see *Off-road Tracking* on page 62.

Verified/Unverified Street

Your navigation system has two kinds of streets: verified (dark colored) and unverified (light colored). The differences between the two types of streets are contrasted in the chart on page 7.



| | Verified streets (dark colored) | Unverified streets (light colored) |
|----------------------------------|--|--|
| When displayed | These roads are found within metropolitan areas, and include interstate freeways and major roads connecting cities. | These roads are found in rural areas, and typically include residential streets away from the center of a town. |
| Street color | Shown on daytime map screen as black or red, such as interstate freeways. | Shown on the daytime map screen as light brown. |
| Map Quality | The database vendor has verified these streets. Information like turn restrictions, average speed, and whether it is a one way street have been gathered and used when creating your route to a destination. | These streets have not been verified by the database vendor. The system does not contain information on one-way streets, turn restrictions, or the road's average speed. They are shown on the map for reference and can have errors in map location, naming, and address range. |
| Routing differences | While driving to your destination, the displayed route line is solid blue. The system provides voice and map guidance to your destination. | Your route line is either a blue dotted "vector line," or a dashed pink/blue line. For information on selecting this option, and the routing differences, see <i>Unverified Area Routing</i> on page 87. |
| Cautions | There are no pop-up boxes urging extra caution during a route. However, because roads constantly change, you are urged to use common sense, and always obey posted traffic restrictions. | Regardless of whether the user chooses route guidance, there are cautionary screens before and during the route urging the user to be extra cautious, and obey all traffic restrictions. See <i>Unverified Area Routing</i> on page 87. |
| Guidance voice | Voice guidance issues maneuvers such as "In a half mile make a right turn." | The suffix "if possible" is added to each guidance maneuver. For example: "In a half mile make a right turn, if possible." |
| Time and distance "to go" | The time and distance "to go," displayed while on route to a destination, is based on the average speed and distance for the roads used for your route. | Because the average speed of these roads is not known, the time and distance "to go" is based on a fixed average speed of 25 mph for these roads. |

User Agreement

In using this DVD “Satellite Linked Navigation System” (the “DVD”), which includes HONDA MOTOR CO., LTD. software, ALPINE ELECTRONICS, INC. software, NAVTEQ database contents, INFO USA CORPORATION database, ZAGAT SURVEY database contents, and ZENRIN CO. database contents (hereinafter referred to as “Licensors”), you are bound by the terms and conditions set forth below.

By using your copy of the DVD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the DVD to your dealer.

- The DVD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The DVD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.
- The DVD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The DVD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The DVD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The DVD is not to be used for commercial purposes.
- The Licensors do not guarantee to the customer that the functions included in the DVD meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the DVD to the actual user or to any third party.
- The warranty on the DVD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the DVD.
- The right to use the DVD shall expire either when the user destroys the DVD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the DVD or software.


- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, and convenience stores are displayed for your information and convenience, and in no way implies any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the DVD or software.

Use, duplication, or disclosure of this DVD by or on behalf of the United States government is subject to “Restricted Rights” as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Alpine Electronics, Inc., 20-1 Yoshima Kogyodanchi, Iwaki, Fukushima 970-1192 JAPAN., NAVTEQ Corporation, 222 Merchandise Mart, Suite 900, Chicago, IL, 60654, INFO USA CORPORATION, 5711 South 86th Circle, Omaha, NE 68127., Zagat Survey, LLC, 4 Columbus Circle, New York, NY, 10019., and ZENRIN CO., LTD., 1-1-1 Muromachi, Kokurakita-ku, Kitakyushu, Fukuoka 803-8630, JAPAN.

Getting Started

System Controls

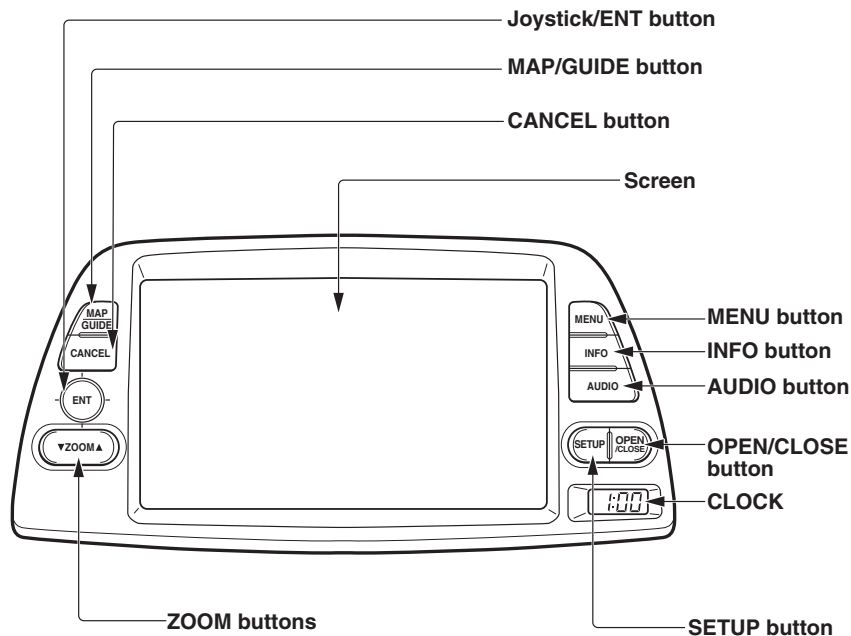

MAP/GUIDE button

Displays the map. When on a route, switches between the map and guidance screens. See page 20 or 52.

CANCEL button

Cancels the current screen and returns to the previous screen display.

NOTE:

the **NAVI BACK** button performs the same basic function.

Joystick/ENT button

Moves left, right, up and down, to move the highlighting around the display, to scroll through lists, or to look around a displayed map. After making a selection in a menu or list, push in on the joystick to enter the selection into the system. In almost all cases, you can enter a selection into the system by using the voice control system, highlighting the item and pushing in on the joystick, or by touching the appropriate item you wish to select.

ZOOM ▲ (IN)/▼ (OUT) buttons

Press ZOOM ▲ to zoom in (to show more detail), or ZOOM ▼ to zoom out (to show more area and less detail) while a map screen is displayed. ZOOM IN reduces the scale (showing less area with greater detail). ZOOM OUT increases the scale (showing more area with less detail). See page 56.

MENU button

Displays the Enter destination by screen. When on a route, displays the Change route by screen. See page 23.

INFO button

Displays the screen for selecting Cellular Phonebook*, Voice Command Help, Map Legend, Calendar, Calculator, and Key to Zagat Ratings. See page 70.

* Available only for the Touring model.

AUDIO button

Press to display the audio screen. For information on audio system features, see the *Audio* section of the Owner's manual.

SETUP button

Displays the Setup screens to change and update information in the system. See page 77.

OPEN/CLOSE button

Tilts the screen down to access the CD changer.

CLOCK

Both the screen clock* and this console clock are controlled by the Navigation system and automatically compensate for daylight savings and time zone changes during vehicle operation. They can be adjusted in Setup mode. See page 97.

* For the screen clock, see page 18.

Screen

All selections and instructions are displayed on the screen. In addition, the display is a “touch screen” – you can enter information into the system by touching the images (icons) on the screen with your finger.

For example, if you need to enter a street name, a keyboard will be displayed. You can type in the street name by saying or selecting the individual characters on the screen.

Clean the screen with a soft damp cloth. You may use a mild cleanser intended for use on liquid crystal displays (LCDs). Harsher chemicals may damage the screen.

NOTE:

Whenever you shift to R (reverse), the rear view is shown on the navigation system screen. See page 100.

Getting Started

Voice Control Basics

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions. You can also control the audio system and the climate control system. The voice control system uses the **NAVI TALK** and **NAVI BACK** buttons on the steering wheel and a microphone near the map light on the ceiling.

NOTE:

While using the voice control system, all of the speakers (except the RES headphones) are muted.

Touring model:

HFL
button

NAVI TALK
button


NAVI BACK
button

HFL BACK
button

.....
EX-L model:

NAVI TALK
button

NAVI BACK
button

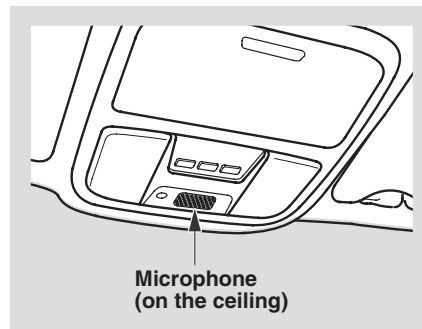

NAVI TALK button

This button activates the voice control system. Press and release it when you want to give a voice command. See *Voice Command Index* on page 132 for a list of voice commands.

NAVI BACK button

This button has the same function as the **CANCEL** button. When you press and release it, the display returns to the previous screen. When the previous screen appears, the system replays the last prompt. This button is enabled for the navigation system commands only. However, it can be used to cancel an audio or climate control voice command up to one second after the command confirmation.

NOTE:

*For the Touring model, the **NAVI TALK** and **NAVI BACK** buttons are deactivated while using the Bluetooth® HandsFreeLink® feature. See your vehicle Owner's manual and the official web site (handsfreelink.honda.com) for information on this system.*

Using the Voice Control System

You should use the voice control system as much as possible, and consider manual entry using the joystick as a “back-up” method of entry.

Most of the system's functions can be controlled by voice commands activated with the **NAVI TALK** button. To control your navigation system by voice:

- Press and release the **NAVI TALK** button.
- Wait for the beep.
- Give a voice command.

Once the microphone picks up your command, the system changes the display in response to the command and prompts you for the next command. Using the **NAVI TALK** button, answer the prompts as required.

If the system does not understand a command or you wait too long to give a command, it responds with “Pardon,” “Please repeat,” or “Would you say again.” If the system cannot perform a command or the command is not appropriate for the screen you are on, it sounds a beep.

Anytime you are not sure of what voice commands are available on a screen, you can always say “Help” at any screen. The system can then read the list of commands to you.

Getting Started

When you speak a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, hearing the feedback will familiarize you with the way the system expects commands to be phrased. See the **Voice Recognition Feedback** setting in Setup.

If you hear a prompt such as “Please use the touch screen to...” or “Please choose an area with the joystick,” the system is asking for input that cannot be performed using the voice control system.

Improving Voice Recognition

To achieve optimum voice recognition, when using either the Navigation or Bluetooth® HandsFreeLink® voice control system, the following guidelines should be followed:

NOTE:

Make sure the correct screen is displayed for the voice command that you are using. See Voice Command Index on page 132.

- Adjust the air flow from both the dashboard and side vents so they do not blow against the microphone on the ceiling. Place your hand over the microphone; if you feel any airflow, adjust the vents.
- Lower the A/C fan speed during voice recognition operation.
- Close the windows and the sunroof.
- After pressing and releasing the **NAVI TALK** button, wait for the beep, then give a voice command.
- Give a voice command in a clear, natural speaking voice without pausing between words.

- If the system cannot recognize your command because of background noise, speak louder.
- If more than one person is speaking at the same time, the system may misinterpret your command.
- If you are still having trouble with the voice control system, refer to **Voice Command Help** on the Information screen.

Selecting an Item (Button) on the Screen

On most screens, there are items that can be selected (like buttons with titles such as **OK** or **Return**). To select an item on any screen, do one of the following:

- Use the voice control system and say the name of the desired item. Almost all selectable items on the screen, including some listed items, are recognized by the voice control system.
- Touch the desired item on the screen.
- Move the highlighting to the desired item with the joystick, then push in on the joystick.

Tip:

If items are grayed out (very dark colored), this means that they cannot be selected.

Selecting an Item in a List

To scroll through a list, do one of the following:

- Use the joystick to scroll through the list item by item.
- Use the voice control system and say “*Next*” or “*Previous*” or use the “on screen” scroll up or down buttons, or the **ZOOM** buttons to scroll through the list page by page.

If you cannot find the desired name, or have made an error, return to the previous screen by pressing the **CANCEL** or the **NAVI BACK** button.

To select the desired item in the list, do one of the following:

- Use the voice control system, and say the item number of the desired item.
- Touch the item on the screen.
- Use the joystick to move the highlighting to the item, then push in on the joystick.

Getting Started

Using the On-screen Keyboard

When the system needs input from you, the display changes to a keyboard. Use the displayed letters to enter the information. Enter each letter by one of the following methods:


- Using the voice control system, say the desired letter on the screen.
- Move the highlighting to the desired letter using the joystick, then push in on the joystick.
- Touch the desired letter on the screen.

When speaking the letters or using “spell mode,” you can substitute the name that represents each letter or symbol. This improves recognition. The system will only respond to the names shown in the following graphic.

For example:

- To select the letter “A”: Say, “**A**”; “**Alpha**”; or “**Apple**.”
- To select the letter “M”: Say, “**M**”; “**Mike**”; or “**Mary**.”

The names that can be used for each letter are shown below. For additional keyboard symbols, see page 141.

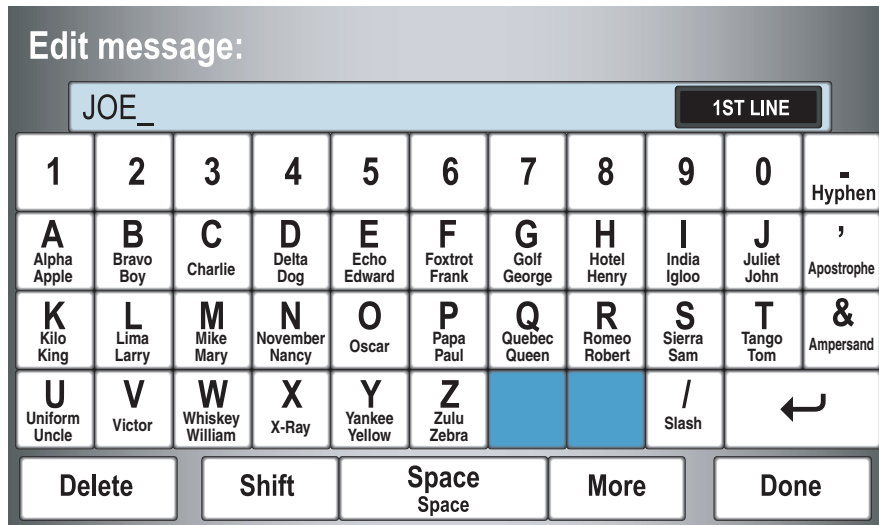

Each entered letter will appear at the top of the display. Say or select **Space** to enter a space between words. Say or select **Delete** to erase a letter entered incorrectly.

When entering an address, the system searches the database for words that match the letters you are entering. As a result, you will notice that some letters are no longer available.

When the system finds only one entry that matches, it completes the entry of the name for you. If the system finds more than one entry that matches your input, the system displays a list.

Tip:

*If you are unsure of the spelling of a name, enter the letters that you are sure of, and then select **List**. The system displays a list of names that most closely matches your input.*

You can choose to have your keyboard displayed in alphabetized format as shown below:




Or in a regular keyboard (QWERTY) format as shown below:



See **Keyboard Layout** in the Setup screen (second).

Bluetooth® HandsFreeLink® (Touring Model Only)

If you have a Bluetooth compatible cell phone that is “paired,” then **CALL** on the Calculate route to screen is enabled.

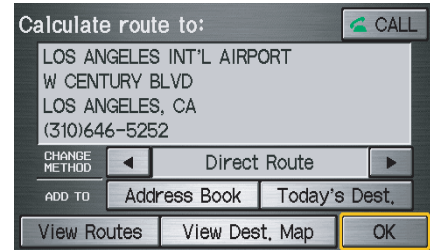

When you select **CALL**, the system dials the number shown on the screen. If **CALL** is not available (dark gray), and your phone is “paired,” then make sure the phone has service or that HFL is not in use; press the **HFL BACK** button.


For more information on Bluetooth® HandsFreeLink®, see the vehicle Owner’s manual and the official web site (handsfreelink.honda.com).

Getting Started

System Start-up

When you turn the ignition to ON (II), it takes several seconds for the navigation system to boot up.

The first screen to appear is the navigation system globe screen. The screen then changes to the Disclaimer screen:

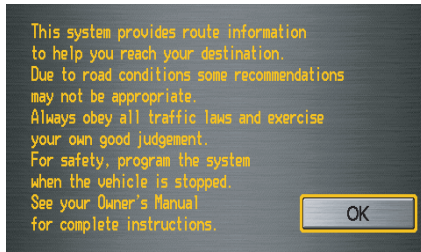

NOTE:

The **OK** button does not appear immediately. It appears after the software is loaded.

Read this disclaimer carefully so you understand it before continuing. Push in on the joystick, or touch **OK**, and the map screen will appear on the display. The “OK” cannot be activated by voice.

NOTE:

*If you do not select **OK**, and then enter the Setup or Information screens, some items are not available, and will show up as darkened buttons (grayed out). See System Function Diagram on page 22.*

If you do not press the joystick or touch **OK**, the screen will display the clock after 30 seconds.



If you are not planning to use the navigation system at this time, touch **DISPLAY OFF** to turn off the screen.

By touching **CLOCK TYPE**, you can change the design of the clock screen. For details of the clock type, see page 79.

Tip:

For information on the clock adjustment, see page 97.

To return to the Disclaimer screen, press the **MENU** or **MAP/GUIDE** button.

If you have entered any Calendar reminders, they are displayed after you select **OK**.



The Calendar reminder screen remains displayed until you select **OK**, **Remind Later** or press the **CANCEL** button.

If you select **OK**, the reminder will not show up again. If you wish to have the reminder show up again later in the day, touch the **Remind Later** button.

If you press the **CANCEL** button, the message will be displayed the next time you start the vehicle.

 
NOTE:

The system will display the current message and any older or previously unread messages, with the newest message listed first.

Getting Started

Map Screen Legend


Map Orientation (see page 57)



"Breadcrumbs" (see *Off-road Tracking* on page 62)



 GPS Signal Strength



Current Map Scale (see page 56)



ICON Button (see page 60)



Vehicle Position (see page 63) (Use voice command "Display the current location." or touch the icon to show current location.)


NOTE:

See **Map Legend** on the Information screen for further explanation.



Current Street (see page 6)

Landmark Icon - Generic (see page 58)

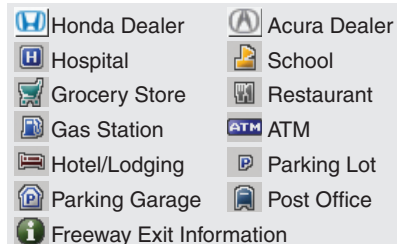

Streets (see *Map Overview* on page 6)

Red: Interstates or Freeways
Black: Verified Streets
Light Brown: Unverified Streets

One-way Traffic Icon (1/20 mile only) (see page 61)

Map Features

Dark Green: Park
Light Blue: Hospital
Brown: Shopping Mall
Light Brown: Indian Reservation
Green: Golf Course
Gray: Airport/Stadium/Business
Blue: Body of Water
Blue/Green: Cemetery
Matte Blue: University

NOTE:

If you move the joystick over an area (map features shown above), the name is displayed on the screen.

Map Screen Description

Zoom In/Out

Use the **ZOOM** buttons to change the scale of the map. Zooming in increases the detail, while zooming out gives you a wide area view. After changing the scale, give the system a few moments to update the display.

Map Scrolling

To view other areas on the map, move the joystick left, right, up, or down. The map will shift in that direction. To return the map to your current location, press either the **MAP/GUIDE**, the **CANCEL**, or the **NAVI BACK** button.

Displaying Current Location

You can say “Display current location.” or touch the vehicle position icon at any time to see the current address, latitude, longitude and elevation. The screen will change to:

The screenshot shows a dark-themed interface with the following elements:

- Current location:** A label above a text box containing "MAIN ST" and "TORRANCE, CA". A "Save" button is to the right.
- GPS information:** A label above a text box containing:
 - Latitude: N 33° 50' 31"
 - Longitude: W 118° 18' 57"
 - Elevation: 300 ft
- A "Return" button is located at the bottom right of the screen, highlighted with a yellow border.


NOTE:

The elevation will not appear when the system is temporarily lacking proper GPS information. The system elevation may not agree with elevations shown on roadside elevation signs, and may fluctuate plus or minus 100 feet or more.

You can say “Save current location.” or select **Save** on the screen to save the current location in your Address Book.

Select **Return** to return to the previous screen.

When you press the **MENU** button, the display changes to:

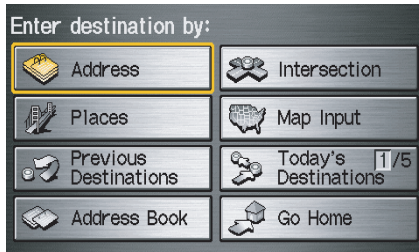

Address (see page 24)

This selection requires you to enter the city (and possibly the state), and the address that you want to go to.

Intersection (see page 28)

This selection allows you to enter the names of two intersecting streets in a city. This is useful if you know the general location of your destination, but not the exact address.

Places (see page 33)

The system has been programmed with the locations of many businesses, parks, hospitals, etc. This selection lets you search these by category, name, phone number, or Zagat 2007 (for restaurant).

Map Input (see page 39)

This selection allows you to point to a destination on the map using the joystick. This allows you to enter a destination or address that may not be listed in the database.

Previous Destinations (see page 42)

When you enter a destination with any of the available selections (except **Address Book** and **Go Home**), the last 50 destinations are saved by the system. Use this selection to choose a destination again.

NOTE:

*If **Previous Destinations** is grayed out, there is no Previous Destination entered.*

Today's Destinations (see page 43)

You can enter and sort up to five destinations and store them in the Today's Destination list. You can then use the Today's Destination selection.

NOTE:

*If **Today's Destinations** is grayed out, there is no Today's Destination entered.*

Address Book (see page 45)

This selection allows you to select a stored address. The system can store up to a combined total of 200 User 1 and User 2 addresses.

Go Home (see page 46)

This selection allows you to select your home or a common place as a destination.

NOTE:

If you have no home address entered, the system prompts you for one.

Entering a Destination

By Address

After you select **Address** from the Enter destination by screen, the display changes to:



Tip:

- When entering an address by voice, it is more efficient to say the city name first, then the street name.
- When entering an address by touch, it is usually easier to enter the street first. A city or cities that the street appears in will be displayed. For your convenience, you do not have to enter both city and street.

NOTE:

If you find that your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

Selecting the State or Province

The state you are in is displayed at the top of the screen. If your desired destination is in another state, select **Change State**.


The display then changes to the Enter state name screen. Use the voice control system and say the name of the state or use the on-screen keyboard to enter the name of the state.

Selecting the City

This is helpful if the street runs through several cities, and you know what city includes the street. The city you are in is displayed on the screen. If the city you want is displayed on the screen, say “Select current city.” If your desired destination is in another city, say or enter that city.

By Voice Control:

Say “City” on the Find address by screen, and the display changes to the Say city name screen. Say the city name and the searching will begin.

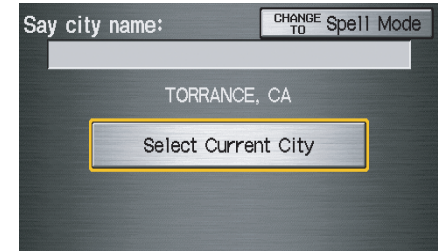

NOTE:


To improve voice recognition, when saying the city name, pronounce the syllables as clearly as possible.

To enter the city name by voice spelling, say or select **CHANGE TO Spell Mode** on the **Say city name** screen, and the display will change to the **Enter city name** screen.

Say the city name by saying individual letters, one at a time.



The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you “Please select the number of the input letter from the list” and the following pop-up box will appear:

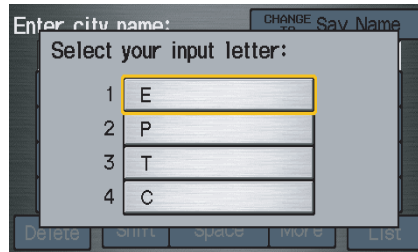

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.”

See page 16 for a list of available words for each letter.

By Touch Control:

Select **City**, and the display then changes to the **Enter city name** screen. Use the on-screen keyboard to enter the name of the city.

The system will display a list of city names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired city from the list.



Entering a Destination

If the system does not find an exact match, select **List** when you finish entering the name of the city. Most of the cities and towns for that state are listed.


Listings of cities and towns in the non-detailed coverage area may have an asterisk "*" next to their names. If you select one, a pop-up box is displayed saying; "No detailed street data...", and a street address cannot be entered (see *Map Coverage* on page 110). Try entering the street first, and then select the city if available.

Select **View Dest. Map** and use the joystick to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the city will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

Selecting the Street

By Voice Control:

After you have selected the city, or if you say "Street" on the Find address by screen, the display changes to the Say street name screen. Say the street name and the searching will begin.

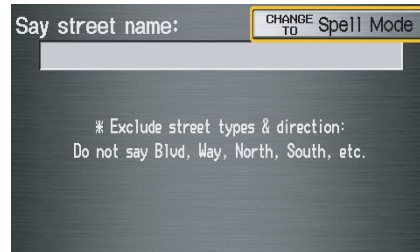


To enter the street name by voice spelling, say or select **CHANGE TO Spell Mode** on the Say street name screen, and the display will change to the Enter street name screen.

Say the street name by saying individual letters or numbers, one at a time.



The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you “Please select the number of the input letter from the list” and the following pop-up box will appear:

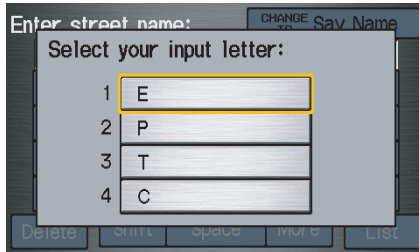

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.”

See page 16 for a list of available words for each letter.

By Touch Control:

After you have selected the city, or if you selected **Street** in the beginning, the display changes to the **Enter street name** screen. Use the on-screen keyboard to enter the name of the street (like ELM or 42ND) that is your destination.

To enter the name of a major highway, you must use the full name, including a hyphen. For interstates, use an “I” (I-10). For U.S. highways, use US (US-18). For state highways, use the two character state designation (CA-101). For county roads, use the appropriate designation (G-2, for example).

Tip:

When entering a street, you do not need to enter the direction (N, S, E, W) or the type (St, Ave, etc.). The system will automatically determine that for you, based on your entered city and street number.

The system will display a list of street names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired street from the list.



Entering a Destination

Entering the Street Number

After you have completed the street name, the display changes to the **Enter street number** screen. Use the voice control system and say the address number as a continuous string of numbers. For example, the address 1527 should be spoken as “One, five, two, seven.” You can also use the on-screen keyboard to enter the street number.

Some address numbers may not be available on the selected street. For example, let’s say the individual address ranges for a selected street name are 1 - 20, and 9,000 - 10,000 with an overall range shown on the display of 1 to 10,000. If you try to enter a number outside the individual address ranges such as 500, the system will show this number as un-available (grayed out).

- When using the on-screen keyboard, the system only allows you to choose available address numbers.
- When using voice control, the system beeps if you try to select an un-available (grayed out) address number.

If you did not select a city in the beginning, the street name you selected might appear in more than one city. The system will give you a list of cities that the street appears in. Select the desired city from the list. The system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Tip:

*If the particular address you want cannot be found, select **Map Input** and use the joystick to select the appropriate location on the map (see *By Map Input* on page 39).*

Select **View Dest. Map** and use the joystick to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the street will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

By Intersection

After you select **Intersection** from the **Enter destination by** screen, the display changes to:



Tip:

When entering an address, it is usually easier to enter the street first. A city or cities that the street appears in will be displayed. For your convenience, you do not have to enter both city and street.

NOTE:

- If you find that your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.
- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.

Selecting the State or Province

The state you are in is displayed at the top of the screen. If your desired destination is in another state, select **Change State**.

The display then changes to the **Enter state name** screen. Use the voice control system and say the name of the state or use the on-screen keyboard to enter the name of the state.

Selecting the City

This is helpful if the street runs through several cities, and you know what city includes the street. The city you are in is displayed on the screen. If the city you want is displayed on the screen, say “Select current city.” If your desired destination is in another city, say or select another city.

By Voice Control:

Say “City” on the Find intersection by screen, and the display changes to the **Say city name** screen. Say the city name and the searching will begin.




To enter the city name by voice spelling, say or select **CHANGE TO Spell Mode** on the **Say city name** screen, and the display will change to the **Enter city name** screen.

Say the city name by saying individual letters, one at a time.



Entering a Destination

The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you “Please select the number of the input letter from the list” and the following pop-up box will appear:

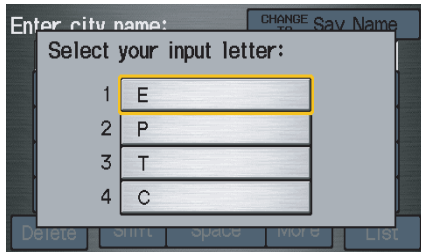

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.”

See page 16 for a list of available words for each letter.

By Touch Control:

Select **City**, and the display then changes to the **Enter city name** screen. Use the on-screen keyboard to enter the name of the city.

The system will display a list of city names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired city from the list.



If the system does not find an exact match, select **List** when you finish entering the name of the city. Most of the cities and towns for that state are listed.


Listings of cities and towns in the non-detailed coverage area may have an asterisk “*” next to their names. If you select one, a pop-up box is displayed saying; “No detailed street data...”, and a street address cannot be entered (see *Map Coverage* on page 110).

Select **View Dest. Map** and use the joystick to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the city will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

Selecting the Street

By Voice Control:

After you have selected the city, or if you say “Street” on the Find intersection by screen, the display changes to the Say street name screen. Say the street name and the searching will begin.

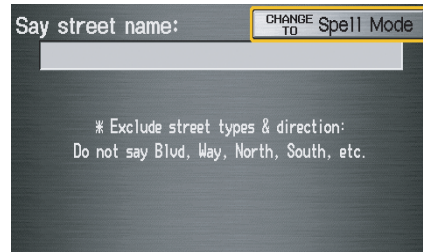


To enter the street name by voice spelling, say or select **CHANGE TO Spell Mode** on the Say street name screen, and the display will change to the Enter street name screen.

Say the street name by saying individual letters or numbers, one at a time.



After you have completed the first name, the display changes to the Say intersecting street screen. Say the name of the other intersecting street.

The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you “Please select the number of the input letter from the list” and the following pop-up box will appear:

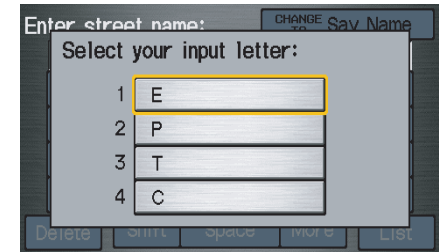

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.” See page 16 for a list of available words for each letter.

Entering a Destination

By Touch Control:

After you have selected the city, or if you select **Street** in the beginning, the display changes to the **Enter street name** screen. Use the on-screen keyboard to enter one of the names (like ELM or 42ND) of the intersecting streets.

To enter the name of a major highway, you must use the full name, including a hyphen. For interstates, use an “I” (I-10). For U.S. highways, use US (US-18). For state highways, use the two character state designation (CA-101). For county roads, use the appropriate designation (G-2, for example).

Tip:

When entering a street, you do not need to enter the direction (N, S, E, W) or the type (St, Ave, etc.). The system will automatically determine that for you.

The system will display a list of street names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired street from the list.



After you have completed the first street name, the display changes to the **Enter intersecting street** screen.

Enter the name of the other intersecting street using the on-screen keyboard.

If you did not select a city in the beginning, and the intersection appears in more than one city, you will see the **Select a city** screen. The system will give you a list of cities that the intersection appears in. Select the desired city from the list. If more than one intersection appears in the city, select the desired intersection from the **Select an intersection** screen. The system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Tip:

*If the particular intersection you want cannot be found, select **Map Input** and use the joystick to select the appropriate location on the map (see *By Map Input* on page 39).*

Select **View Dest. Map** and use the joystick to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the street will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

By Places

After you select **Places** from the Enter destination by screen, the display changes to:



There are four ways to find a place or point of interest (POI), by **Category**, **Name**, **Phone Number**, or **ZAGAT 2007**.

Let's assume you want to find a coffee shop (restaurant) called "Bucks."

- If you know the phone number of the coffee shop, select **Phone Number**, then enter the 10-digit number with area code. This is the quickest way to find it.

- The second best method is to select **Category**, then **Restaurant**, and enter the keyword "Bucks." The list will include all restaurants that have the letters "bucks" anywhere in the name.
- You can try to enter "Bucks" using **Name**, but you may have to search through a list that might include Bucks Welding, Bucks Surplus, etc.

NOTE:

- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.*
- *You can enter the desired destination using the voice control system. For information on the available voice commands, see Voice Command Index on page 132.*

Finding the Place by Category

The **Category** option gives you a list of categories or types of businesses to select from with the following screen:



Tip:

*If you are not sure of the spelling of a place, the best way to find it is to use the keyword search. Select **Category**, choose a category and subcategory from the menus, then select **Place Name by Keyword**, and enter the partial name.*

Entering a Destination

Auto Service

The subcategories are: Acura Dealers, Honda Dealers, Gas Stations, etc.

Banking

The subcategories are: ATM, Bank, etc.

Community

The subcategories are: City Hall, Civic/Community Center, Convention/Exhibition Center, Court House, Higher Education, Library, Post Office, School, etc.

Emergency

The subcategories are: Hospital, Police Station, Roadside Assistance, etc.

Lodging

The subcategories are: Bed & Breakfast, Hotel/Motel, etc.


Leisure

The subcategories are: Amusement Park, Golf Course, Historical Monument, Marina, Movie Theater, Museum, Park/Recreation Area, Performing Arts, Sports Complex, Tourist Attraction.

Restaurant


This category is broken down into types of food, giving you a selection by each type: All Types, American, French, Japanese, etc.

The ZAGAT SURVEY for some restaurants is available in the system. See the Information screen “Key to Zagat Ratings” for an explanation of these ratings (see page 75).

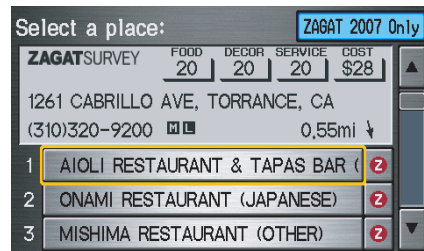

On the Select a place screen, restaurants with a Zagat Rating have a “Z” icon at the end of the line. To list only restaurants with Zagat Reviews, say or select **ZAGAT 2007 Only**. You can view the complete Zagat Review for a selected restaurant by selecting the “Z” icon.

By voice, select the “Z” icon by saying “Zagat list number X” (where X is the line number 1-3). Alternately, use the joystick or touch screen to select the “Z” icon.

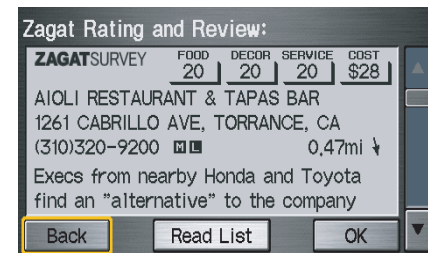

Say or select **Read List** and the review will be read out. Say or select **OK** to display the Calculate route to screen. See *Key to Zagat Ratings* on page 75 for details on the key to ratings.

NOTE:

- Scrolling through the Zagat Review by the **ZOOM** buttons is disabled when the vehicle is moving.
- For the information on the ratings and symbols for Zagat Review, you can also select **Key to Zagat Ratings** on the Information screen. See *Key to Zagat Ratings* on page 75.

Tip:

When trying to find a specific restaurant, select the category **All Types**. Some restaurants may be miscategorized.

Shopping

The subcategories are: All Shopping, Accessories/Jewelry, Auto Parts & Electronics, Books/Music/Video, Clothing, Groceries, Home Improvement, Mall/Department Store, Office Supplies/Electronics, Pharmacy/Drug Store, Pet Food/Supplies, Sewing/Linen, Shoes/Bags, Sporting Goods, and Toys/Arts/Crafts.

Tip:

When trying to find a specific shopping store, select the category **All Shopping**. Some stores may not be in the right category.

Travel


The subcategories are: Airport, Automobile Club, Bed & Breakfast, Bus Station, Camping, Commuter Rail Station, Ferry Terminal, Hotel/Motel, Named Place, Park & Ride, Parking Garage/House, Parking Lot, Rental Car Agency, Resort, Rest Area, Tourist Information, Train Station, etc.

Advanced

If you do not find the category or subcategory you need in the other options, you can find the categories with a keyword. When you select this option, the display changes to the **Enter keyword for category** screen. Enter the keyword using the on-screen keyboard.

When the system finds the categories with the keyword you entered, the display changes to the **Select a category** screen. Select the desired category.


After selecting a category, the system will give you the options of **Place Name by Keyword**, **Sort by Distance to Travel**, **City Vicinity**, or **Place Name** with the following screen:

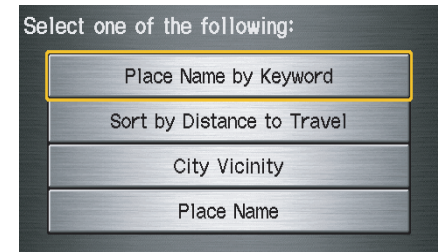

Entering a Destination

Place Name by Keyword

If you do not know the exact name of the destination, you can find the place with a keyword. When you select this option, the display changes to:

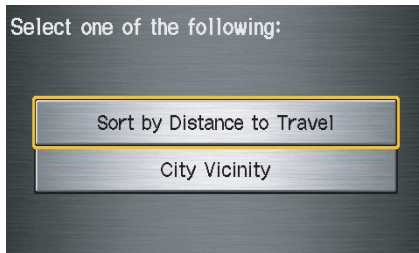

You can find your destination with keyword using the **Sort by Distance to Travel** option or **City Vicinity** option.

If you select the **Sort by Distance to Travel** option, the **Enter keyword for place** screen appears. Enter the keyword using the on-screen keyboard. If the system does not find an exact match, select **List** when you finish entering the keyword. The system starts searching for places that match the entered keyword. If you see your desired place, select it from the list. If not, scroll through the list to find the desired place.


If you select the **City Vicinity** option, the **Enter city name** screen appears. Enter the name of the city using the on-screen keyboard. The system will display a list of city names, with the closest match to the name you entered at the top of the list. Select your desired city name from the list.

Once you have selected your desired city name, the **Enter keyword for place** screen appears. Enter the keyword using the on-screen keyboard to specify the desired place.

Once you select a place, the system then displays the **Calculate route to screen** (see *Driving to Your Destination* on page 47).

Sort by Distance to Travel

When you select this option, the system gives you a list of all the places in the subcategory. This list is arranged by distance from your current location, with the closest at the top of the list.

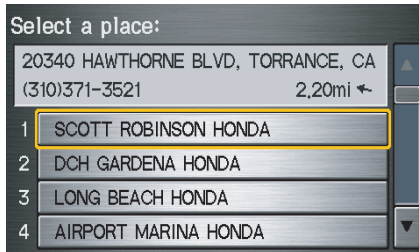

The distance and direction to the destination at the top of the list are shown in the screen. The distance shown is straight line distance (as the crow flies), not driving distance. Select the number (1-4) of the desired destination from the list.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

City Vicinity

The system allows you to find points of interest in the vicinity of the city you entered. When you select this option, the display changes to **Enter city name** screen. Enter the name of the city using the on-screen keyboard. If the system does not find an exact match, select **List** when you finish entering the name of the city. Select a desired city from the list.

Once you have selected the city, the display changes to **Enter a place name** screen. Enter the name of the place using the on-screen keyboard.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Place Name

When you select this option, the display changes to **Enter a place name** screen. Enter your selection, using the on-screen keyboard.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Finding the Place by Name

The **Name** option allows you to enter the name of a business, and then shows you a list of businesses with the same or similar names to select from. Use the name option only if you know the exact spelling of the place. If unsure, use the **Category** option.

Entering a Destination

Finding the Place by Phone Number

The **Phone Number** option allows you to select a destination by its telephone number. Only telephone numbers stored in the system under the **Places** (of business) option are recognized. The system does not contain residential telephone numbers, or numbers you may have entered in your personal Address Book.


Tip:

If you know the phone number of a point of interest (POI), its uniqueness makes it the fastest entry method. When using the voice control system, the entry should be spoken as a continuous string of numbers. For example, the telephone number (310) 555-4000 should be spoken as “Three, one, zero, five, five, five, four, zero, zero, zero.”

Finding the Place by Zagat 2007

The **ZAGAT 2007** option allows you to find a restaurant by the Zagat Rating information.

The system lets you select several items (such as metro area, region, and neighborhood) to search the restaurant you like. When you select a type of food, the following display appears:

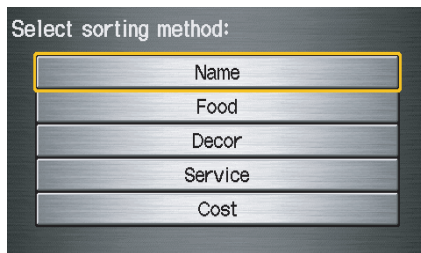

Name - When you select **Name**, the restaurants will be listed by alphabetical order.

Food, Decor, Service - When you select **Food**, **Decor**, or **Service**, the restaurant will be listed by rating value.

Cost - When you select **Cost**, the restaurant will be listed by the average cost of a meal (including drink and tip).

When you select a sorting method, the list of restaurants will appear.




Once you select a restaurant, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

NOTE:

See *Key to Zagat Ratings on page 75* for details on the key to ratings.

By Map Input

After you select **Map Input** from the Enter destination by screen, the display changes to:

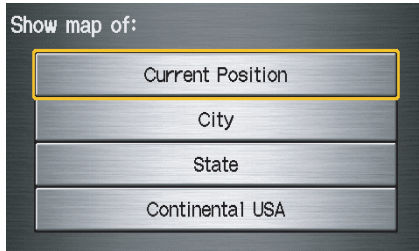


NOTE:

- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.
- For information on the available voice commands, see Voice Command Index on page 132.

Showing the Map of Current Position

The **Current Position** selection assumes that you are looking for a destination in the immediate area. The display changes to:

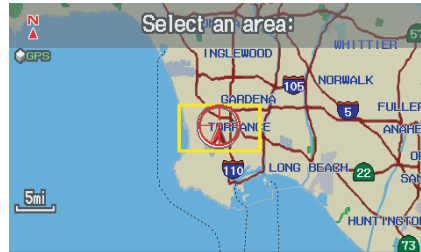

The red arrow indicates your vehicle position. Find your desired destination by pushing the joystick left, right, up, or down. The map and cross hairs will move in the same direction.

Use the joystick to position the cross hairs on the desired icon, map feature, or road. If desired, use the **ZOOM** buttons to change the map scale. Then push in on the joystick to select an area. The address of the road segment will appear at the top of the screen.

The yellow box indicates the area you will see when you click on the current map with the joystick.

NOTE:

The selected icon or road segment is displayed on the 1/2 mile (800 meter) or less map scale.

If this is the desired destination, push in on the joystick again. If not, use the joystick to reposition the cross hairs, then push in on the joystick again to display the new address.

If you selected a single icon or road segment, the following screen appears. Push in on the joystick again.



Entering a Destination

If you selected multiple icons within the cursor radius, the following screen appears. Select an item from the list.



Once you select an address, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Showing the Map of City

With the **City** selection, the display changes to the **Enter city name** screen.

When you have entered the desired city, the display changes to a map. The starting location will be the central position in the selected city.

See *Showing the Map of Current Position* on page 39 for instructions on finding and entering your desired destination.

Showing the Map of State

With the **State** selection, the display changes to the **Enter state name** screen.

After you select the desired state, the display changes to a map of the state, with the cross hairs located near the middle.



Use the joystick to move the cross hairs to the area of the state close to your intended destination. If desired, use the **ZOOM** buttons to change the map scale. When you have the cross hairs in the desired area, push in on the joystick. The map scale changes to a closer view.

Move the cross hairs to the desired destination, then push in on the joystick. The address of the location you have selected will appear at the top of the screen.

The yellow box indicates the area you will see when you click on the current map with the joystick.

NOTE:

The selected icon or road segment is displayed on the 1/2 mile (800 meter) or less map scale.

If this is the desired address, push in on the joystick again. If not, use the joystick to reposition the cross hairs, then push in on the joystick again to display the new address.

If you selected a single icon or road segment, push in on the joystick again to select the new address. If you selected multiple icons within the cursor radius, select an item from the list on the screen.

Once you select an address, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Showing the Map of Continental USA

With the **Continental USA** selection, the display changes to:



Use the joystick to move the cross hairs to the area of the country for your intended destination. Then push in on the joystick.

The map scale changes to display a closer view of the area you selected. Use the joystick to move the cross hairs on the desired icon, map feature, or road. If desired, use the **ZOOM** buttons to change the map scale. The address of the location you have selected will appear at the top of the screen.

The yellow box indicates the area you will see when you click on the current map with the joystick.

NOTE:

The selected icon or road segment is displayed on the 1/2 mile (800 meter) or less map scale.

Entering a Destination

If this is the desired address, push in on the joystick again. If not, use the joystick to reposition the cross hairs, then push in on the joystick again to display the new address.

If you selected a single icon or road segment, push in on the joystick again to select the new address. If you selected multiple icons within the cursor radius, select an item from the list on the screen.

Once you select an address, the system then displays the **Calculate route to** screen (see *Driving to Your Destination* on page 47).

By Previous Destinations

Every time you route to a destination, that destination is saved by the system. Up to 50 destinations can be stored. Select **Previous Destinations** from the **Enter destination by** screen to choose one of those destinations.

After you select **Previous Destinations**, the display lists the last 50 destinations entered, with the most recent appearing first.



NOTE:

- If **Previous Destinations** is grayed out, there is no *Previous Destination* entered.
- When finishing a “*Today’s Destinations*” trip, the *Today’s Destination* list entries are stored to this list, beginning with the date (e.g., *item 1* shown above).
- Because both the *Home* and *personal Address Book* list can be protected by a PIN, they do not show up in the *Previous Destination* list.

Scroll through the list and say the line number (1-6) of the destination, or touch the desired destination you want.

Once you select the desired destination, the system then displays the **Calculate route to screen** (see *Driving to Your Destination* on page 47).


NOTE:

- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.*
- *For information on the available voice commands, see Voice Command Index on page 132.*

By Today's Destinations

You can create a “trip” by combining multiple destinations previously selected on the **Calculate route to screen**.

Select **Today's Destinations** from the **Enter destination by screen** and the display changes to:

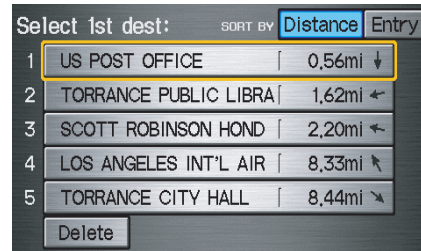

NOTE:

*If **Today's Destinations** is grayed out, there is no **Today's Destination** entered.*

Editing Today's Destination List

If you change your plans, you can modify the **Today's Destination list** order by distance, or by order of entry.

Say or select **Entry** to sort the list by the entry order, and say or select **Distance** to sort the list by the distance order. To delete a destination, say or select **Delete** and the display changes to **Select a destination to delete screen**. Select the destination to delete. Say or select **Done** to perform the deletion, and the display returns to the previous screen. To cancel the deletion, press the **CANCEL** button.


NOTE:

For information on the available voice commands, see Voice Command Index on page 132.

Entering a Destination

Adding Destinations to the List

After you have used any of the other selections from the Enter destination by screen to select a destination, the display changes to:

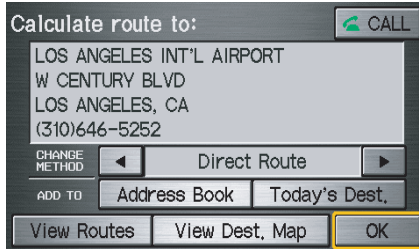


To add this to the Today's Destination list, select ADD TO **Today's Dest.**

NOTE:

If **ADD TO Today's Dest.** is grayed out, the Today's Destination list is already full (five destinations have been stored).

The display then changes to show you all the current entries on the Today's Destination list. Press **Done** to return to the Enter destination by screen.

The system automatically sorts the destinations stored in the Today's Destination list for the best path.

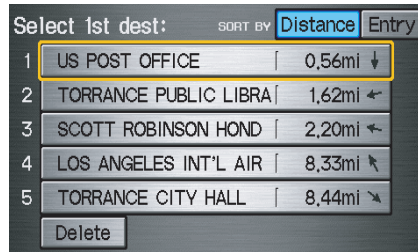

If the displayed list shows your plans, select the first destination. The system will guide you to the destination according to the order of the list. When you reach the destination, it will be automatically removed from the list.

NOTE:

When finishing a "Today's Destinations" trip, the Today's Destination list entries are stored to the Previous Destination list, beginning with the date (e.g., item 1 shown below). This entry contains all the destinations that were included in the Today's Destinations itinerary. This allows you to re-select the entire Today's Destinations content at a later date.



By Address Book

This selection allows you to choose a personal address entry for a destination. After you select **Address Book** from the Enter destination by screen, the display changes to:




If an **Address Book PIN** has been set in Setup, the system prompts you to enter your PIN after you select **User 1** or **User 2**. Say or enter your PIN, and say or select **Done**.

If the PIN has not been entered, the system displays the list after you select **User 1** or **User 2**.

NOTE:

PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you.

The system then displays a list of the places entered in your personal Address Book. You can sort the displayed addresses by **Category: ALL, BUSINESS, PERSONAL** or by other categories you may create.

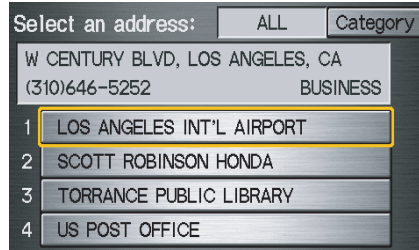

Scroll through the list to find your desired destination. After you select it, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

Adding Addresses to the Personal Address Book

There are two ways to enter addresses to the personal Address Book:

- Entering them in the personal Address Book feature in Setup (see page 80).
- Adding them in the Address Book directly from the Calculate route to screen (see page 47).

The personal Address Book can be edited (see *Address Book* on page 80).

NOTE:

- *Destinations chosen from the Address Book do not show up in Previous Destinations.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.*
- *For information on the available voice commands, see Voice Command Index on page 132.*

Entering a Destination

By Go Home

Selecting **Go Home** from the Enter destination by screen takes you home or to a frequently used address you have chosen.

If a **Go Home PIN** has been set in Setup, the system prompts you to enter your PIN. Say or enter your PIN, and say or select **Done**. The system will then display the **Calculate route** to screen (see *Driving to Your Destination* on page 47).

If a **Go Home PIN** has not been set, the system displays the **Calculate route** to screen after you select **Go Home** (see *Driving to Your Destination* on page 47).

NOTE:


- *To edit Home Address, see Home Address in System Set-up on page 84.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.*
- *PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you.*
- *If a PIN is desired, enter it using the Personal preference PIN number feature in Setup. See page 85 for information on entering your Go Home PIN.*

Driving to Your Destination

A route typically has three phases.

- Initial route calculation (Calculate route to screen) (see page 47)
- Change the route while en route (see page 65).
- Resume the route when restarting the engine (see *Continue Trip Screen* on page 69).

Calculate Route to Screen

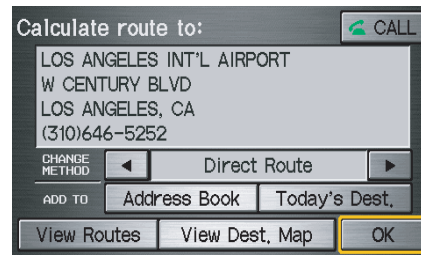

Say or select **OK**. The system calculates the route using the method shown on the screen (see *Map Screen* on page 50).

NOTE:

- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 91.*
- *For information on the available voice commands, see Voice Command Index on page 132.*

Further selections from the Calculate route to screen include:

ADD TO Address Book

Allows you to add the destination to your Address Book. See *By Address Book* on page 45.

NOTE:

If the button is grayed out, the destination is already in your Address Book.

ADD TO Today's Destinations

Allows you to add the destination to your Today's Destination list. See *By Today's Destinations* on page 43.

NOTE:

If the button is grayed out, the Today's Destination list is already full (five destinations have been stored).


CALL

This button is displayed only for the Touring model. Dials the number on the screen when available. See *Bluetooth® HandsFreeLink® (Touring Model Only)* on page 17.

Driving to Your Destination

Changing the Routing Method

The system lets you select the way you want to drive to your destination. Select the desired method using the **CHANGE METHOD** scroll bar back (◀) or forward (▶) buttons.

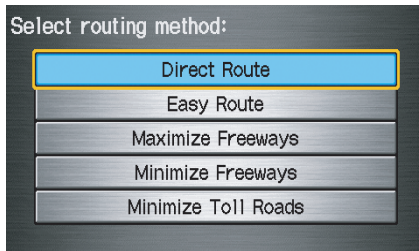

- “Direct Route” (the factory default) is the route that is the quickest (least time) and is usually the best choice. If you choose any other method, it becomes the new default for all future routing. Make sure to check the routing method if the displayed route is not what you expected to see.
- “Easy Route” produces a route with the least turns.
- “Maximize Freeways,” “Minimize Freeways,” and “Minimize Toll Roads” are also available.

NOTE:

If the trip is greater than 100 miles, then “Minimize Freeways” and “Minimize Toll Roads” may be grayed out. This is normal.

The generated route may not be the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- It tries to avoid “short cuts” through residential areas.
- Right turns are favored over left turns or U-turns.
- Restricted turns (turns that cannot be made during certain hours), are not used for routing during any time of the day.

Viewing the Routes

Touching **View Routes** allows you to scroll through and view the various routes (Direct, Easy, Maximize Freeways, etc.) to your destination. If you select **View Routes**, the display changes to:



You can change the method for calculating the route by using the voice control system and saying “Next” or “Previous” or by touching **Next** or **Prev.** The system will display another calculated route.

NOTE:


- *The selected route method and pertinent details are shown at the top of the screen.*
- *It may take several minutes (the system displays an hour glass while it is calculating) to show all route methods, and it is not unusual for the different methods to pick the same route. Voice commands cannot be used while the system is calculating.*
- *If the trip is greater than 100 miles, then “Minimize Freeways” and “Minimize Toll Roads” may be grayed out. This is normal.*
- *Zoom IN/OUT to view route details is not available on this screen. After you choose a “route method,” you can then zoom in or out on the map screen to view your route in details.*

Say or select **Summary** to display the distance and time to go for each route. Based on the summary data, you can change the routing by using the **Next** and **Prev.** buttons. Once you confirm your selection, say or select **OK** on the screen.

NOTE:

Distances and times show for each method in the Summary are approximate.


After calculating the route with the new method, the system displays a map of your current location. The calculated route will be highlighted as a blue line, and a voice prompt will tell you how to proceed along the highlighted route. Touch **Voice** to have the guidance repeated.

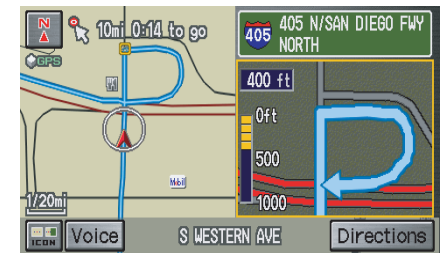

Driving to Your Destination

Viewing the Destination Map

Touching **View Dest. Map** displays a map of the destination vicinity. Press the **CANCEL** or **NAVI BACK** button to return. You can view the destination map anytime while on route saying “Display destination map.”

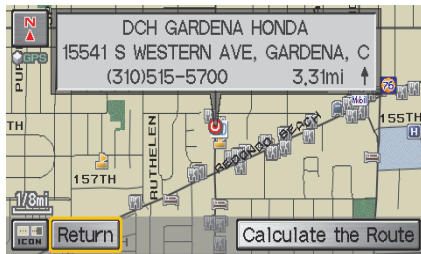

Map Screen

When you select **OK** on the Calculate route to screen, the map screen appears, showing your highlighted route in real time.

Route Line


When driving to a destination on verified roads in a metropolitan area, the route line is displayed as a blue line. When driving in rural areas on unverified streets (light brown color), the route line changes to either a blue dotted “vector line” pointing to your destination, or a blue-pink line. See *Unverified Area Routing* on page 87 for a detailed explanation of how to enable unverified routing, and the related cautions and disclaimers.

NOTE:

You can always view the entire route by simply saying, “Display entire route.”



“Vector line” (unverified routing off)

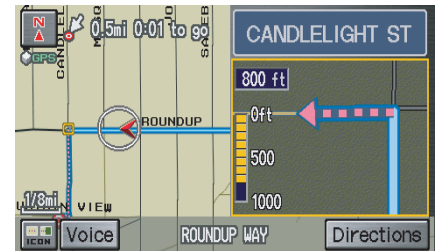

Blue-pink unverified route line (unverified routing on)

Guidance Prompts

As you get near the maneuver, you will hear a voice reminder, and see a pop-up window showing you the maneuver.

The number of reminders that you will hear before a maneuver is determined by **Guidance Prompts** in Setup on page 79.

With the factory default (Normal), typically you will hear two prompts:

- The first is about 1/4 mile from the maneuver.
- The final prompt is close to your actual turn.

If the distance between the next two driving maneuvers is very small, both maneuvers are displayed on the screen in a single window, and the voice will remind you of both of them at the same time.

NOTE:

- *You can say “Voice” or select **Voice** on the screen at any time to be reminded of the next maneuver. For information on the available voice commands, see Voice Command Index on page 132.*
- *Typically a pop-up guidance window shows your next turn, and a voice guidance prompt is heard. The timing of these prompts varies, depending on the type of road you are on, and the distance to your next maneuver.*

When given guidance in unverified areas, the words, “If Possible,” are inserted before each guidance prompt. See *Unverified Area Routing* on page 87 for more details about unverified routing.

 
Driving to Your Destination

Map Screen Legend

Distance to Destination
(see page 54)

Direction of Destination
(When on route)

Map Orientation
(see page 57)



Map Scale Adjustment
(Mile or km per half inch appears only when you ZOOM IN or OUT.)
(see page 56)

Current Map Scale
(see page 56)

ICON Button
(see page 60)

Voice (see page 51)
(Announces next driving instruction)

"Breadcrumbs"
(see *Off-road Tracking* on page 62)

NOTE:
See **Map Legend** from the Information screen for further explanation (see page 72).

Time to Destination
(see page 54)

Waypoint
(When on route)
(see page 65)

Map Features

Dark Green: Park
Brown: Shopping Mall
Green: Golf Course
Blue: Body of Water
Matte Blue: University

Light Blue: Hospital
Light Brown: Indian Reservation
Gray: Airport/Stadium/Business
Blue/Green: Cemetery

NOTE:

If you move the joystick over an area (map features shown above), the name is displayed on the screen.


One-way Traffic Icon (1/20 mile only)
(see page 59)

Destination Icon (see page 58)

Streets

(see *Map Overview* on page 6, or *Unverified Area Routing* on page 87)
Red: Interstates or Freeways
Black: Verified Street
Light Brown: Unverified Street

Landmark Icon - Generic (see page 58)

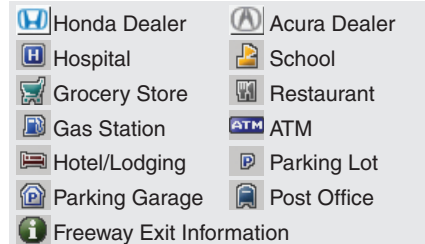

Direction List
(see page 54)

Blue Line
Calculated route
(see page 50)

Current Street
(see page 6)

Vehicle Position (see page 63)
(Use voice command, "Display current location," or touch the icon to show the current location.)



Guidance Screen

The guidance screen offers an alternative way to view your route information. Many of the icons and screen features are similar to those on the map screen. While driving to your destination, press the MAP/GUIDE button to switch between the map and guidance screens. The guidance screen shows you:


Milestone to Destination – the position of the small circular icon shows your trip progress. As you get closer to your destination, the indicator will approach “DEST.”

Vehicle Heading – the black portion of the compass symbol indicates north.

NOTE:

- The map and voice guidance in unverified areas differ from those in verified areas.
- Current maneuvers and those within 1000 feet will show on the Countdown bar, indicating the distance until the next maneuver.

Guidance Screen Legend

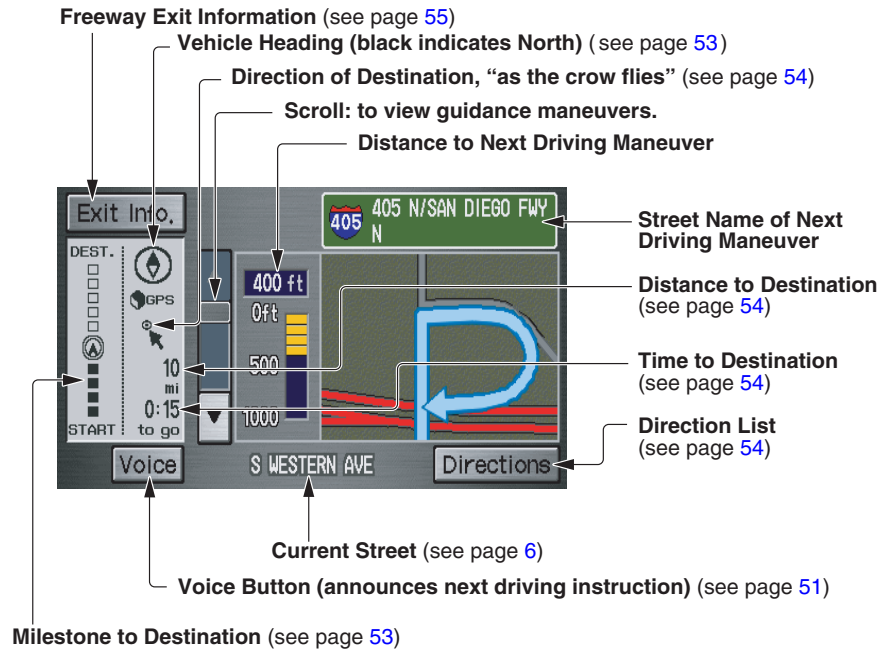

Driving to Your Destination

Distance and Time to Destination

When you select a destination, the distance to the destination is the actual road distance of the calculated route, and “not as the crow flies.” When viewing a list of destinations (points of interest), such as restaurants, the distance is “as the crow flies” (see *Sort by Distance to Travel* on page 37).

The displayed time to destination may differ from the actual travel time because the time is calculated based on the posted road speed data and your current speed. If part of your route includes unverified roads, the “distance” and “time to go” for that portion is estimated using 25 mph as an average speed.

Direction List

If you select **Directions** on the map or **guidance** screen, the display changes to:



NOTE:

- *The map and voice guidance in unverified areas differ from those in verified areas. See Unverified Area Routing on page 87.*
- *Only maneuvers that occur at freeway exits or contain freeway exit information will show the exit info icon (“i” icon) on the right end of the items in the Direction list. If no exit info icon is shown on the list, the **Exit Info.** is grayed out.*

You can see the Direction list and the distance to each maneuver. Touch the **Return** button to return to the previous screen.

You can scroll through the Direction list screen by screen using the scroll bar, or one instruction at a time using the joystick.

Exit Info (Freeway Exit Information)

You can search freeway exit information and add new destinations or waypoints to the calculated route as a new destination or waypoint. The exit info icon (“i” icon) on the right end of the items in the direction list indicates that there is freeway exit information available. Say or select **Exit Info.**, and choose the exit and place to set as a new destination or waypoint.

On the **map** screen, you can display freeway exit information using the joystick. The exit info icon will only be displayed on the **map** screen if there is any freeway exit information available. Choose the 1/4, 1/2, and 1 mile scale, then move the cross hairs to the desired exit info icon and click on it. Choose a place from the list and set as a new destination or waypoint.

NOTE:

To turn on “Freeway exit information” on the **map** screen, display the icon bar and select the “i” icon (see page 60).

Split Screen Guidance


When on route to a destination, you have two display options: single screen mode (the factory default) and the split screen mode.

Single screen mode – a map is displayed with occasional guidance pop-up windows as you approach a maneuver.

Split screen mode – the map is always displayed on the left of the screen, and the maneuver or direction list is displayed on the right hand side of the screen.

Guidance mode can be changed in either Setup (see *Guidance Mode* on page 94) or by accessing the icon bar (see *Guidance Mode* on page 60) .

When you get near the maneuver, the **map** screen changes to:

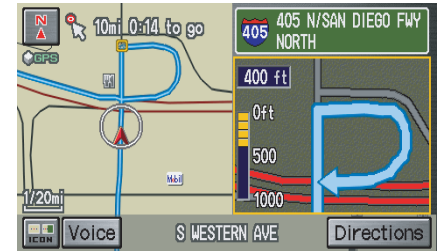

On the **map** screen, the location of the maneuver is marked with a small yellow square. The guidance window is simply an enlargement of the area indicated by the yellow square. After you complete the maneuver, the display returns to a full map screen when the single screen mode is set, or to a map and direction list screen when the split screen mode is set.

Driving to Your Destination

Map Scale

Use the **ZOOM** buttons or a voice command such as “Display 1/2 mile scale” (see page 133) to change the scale of the map. Zooming in increases the detail, while zooming out gives you a view of a wider area. After changing the scale, give the system a few moments to update the display.

Functions available at various map scales

| Map Scale (English and Metric) For selecting units, see page 96. | | 1/20 mi. | 1/8 mi. | 1/4 mi. | 1/2 mi. | 1 mi. | 2 mi. | 5 mi. | 15 mi. | 50 mi. | 150 mi. | 350 mi. |
|---|---------|----------|---------|---------|---------|--------|-------|-------|--------|--------|---------|---------|
| | | 80 m | 200 m | 400 m | 800 m | 1.6 km | 3 km | 8 km | 24 km | 80 km | 240 km | 560 km |
| POI icon symbols (like ATM) | page 58 | X | X | | | | | | | | | |
| Breadcrumbs (off-road tracking dots) | page 62 | X | X | X | X | | | | | | | |
| Freeway exit information icons | page 55 | | | X | X | X | | | | | | |
| One-way traffic icon | page 58 | X | | | | | | | | | | |
| Unverified road display (light brown) | page 87 | X | X | X | | | | | | | | |
| Map orientation “Heading up” | page 57 | X | X | X | X | X | | | | | | |
| Map orientation “North up” | page 57 | X | X | X | X | X | X | X | X | X | X | X |
| Map features (like park, golf course) | page 52 | X | X | X | X | X | X | X | X | X | X | |
| Avoid area shown on map | page 91 | X | X | X | | | | | | | | |
| Avoid area scales (when creating) | page 91 | X | X | X | | | | | | | | |
| Waypoint “flag” icons | page 65 | X | X | X | X | X | X | X | X | X | X | X |

NOTE:

- You can change between miles or kilometers in Setup (see Units on page 96).
- For information on the available voice commands, see Voice Command Index on page 132.

Map Orientation

The map can be orientated two ways:

- North-up: North pointing up as you would normally view a paper map.
- Heading-up: The map constantly rotates so the road you are driving on always points up (as you see the road through your front windshield).



“North Up”



“Heading Up”

NOTE:

The red arrow in both heading symbols always shows the direction north.

Touch the Map Orientation icon on the map screen to switch between the available orientation, or say “Display heading up” or “Display north up.”

In the larger map scales (above 1 mile or 1.6 kilometer), the map is always oriented with north facing upward. You cannot change the orientation.

To view other areas on the map, move the joystick left, right, up, or down. The map will shift in that direction. To return the map to your current location, press either the **MAP/GUIDE**, the **CANCEL**, or the **NAVI BACK** button on the steering wheel.

The display automatically changes to the map screen when you reach your destination. Press the **MENU** button to return to the Enter destination by screen.

NOTE:

- For information on the available voice commands, see Voice Command Index on page 132.
- If you are on a route and the joystick is moved, the “Time to Destination” and “Distance to Destination” indications are replaced with an indicator showing distance from the current vehicle location.

Driving to Your Destination

Destination Icon


The destination icon only shows the approximate location of the destination. This occurs because a city block can have as many as 100 possible addresses (for example, the 1400 block is followed by the 1500 block.) Since most cities use only a portion of the 100 possible addresses (for example, in the 1400 block, the addresses may only go up to 1425 before the 1500 block starts). Therefore, the address 1425 will be shown a quarter of the way down the block by the system instead of near the end of the block where the destination is actually located.

Tip:

When on a route, you can view a map showing your destination. Using voice control, say “Display destination map.”

Landmark Icons

Landmark icons are shown in the map screen on 1/20 and 1/8 mile scale, or 80 and 200 meter scale. The Freeway exit information is displayed on the 1/4, 1/2, and 1 mile scales. The icons are:

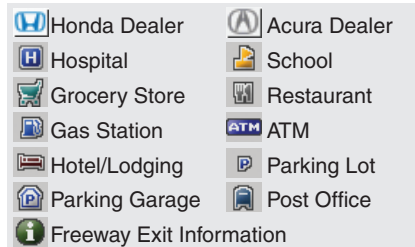

Some icons can be turned on or off; you can either display them or hide them from the **ICON** button on the lower left corner (see page 52) or using voice commands (see page 132).

You can select most landmark icons with the joystick to display the icon's information. See the table on the following page for exceptions.

NOTE:

- *The same list can be viewed on the screen by selecting **Map Legend** from the **Information** screen.*
- *When there are overlapping landmark icons, a list of the points of interest (POIs) is displayed.*
- *For information on the available voice commands, see **Voice Command Index** on page 132.*

One-Way Traffic Icon

The one-way traffic icons are only shown on the 1/20 mile scale and only when turned on in **Icon Options** (see page 60).

For some icons you can choose either to show or hide them on the map, while others like Honda Dealers, are always shown. The table below shows the features for each icon type. Some Points of Interest (POIs) like Police Stations are not shown as an icon, but you can still locate the nearest one with the voice command, “Find nearest Police station.”


| POI type | Icon can be manually displayed | Icon can be manually hidden | Icon selection by voice | Icon can be selected as a destination on the map screen with the joystick | POI can be found on the map screen using voice command “Find...” |
|------------------------------------|--------------------------------|-----------------------------|-------------------------|---|--|
| Honda/Acura dealer | Yes, always | No | No | Yes | Yes |
| Hospital | Yes | Yes | Yes | Yes | Yes |
| School | Yes | Yes | Yes | Yes | Yes |
| ATM | Yes | Yes | Yes | Yes | Yes |
| Gas station*1 | Yes | Yes | Yes | Yes | Yes |
| Restaurants*2 | Yes | Yes | Yes | Yes | Yes |
| Post office | Yes | Yes | Yes | Yes | Yes |
| Grocery store*1 | Yes | Yes | Yes | Yes | Yes |
| Hotel*1/Lodging | Yes | Yes | Yes | Yes | Yes |
| Police station | No icon | No icon | No | No | Yes |
| Shopping, Tourist attraction, Bank | No icon | No icon | No | No | Yes |
| Parking garage | Yes | Yes | Yes | Yes | Yes |
| Parking lot | Yes | Yes | Yes | Yes | Yes |
| Freeway exit information | Yes | Yes | Yes | Yes (choose POI) | No |
| One-way traffic icon | Yes | Yes | Yes | No | No |

- *1. When gas stations, hotels, and convenience stores are selected for view on the map, some icons are shown as “brand icons.”
- *2. The **Icon Options** feature found on the **Icon Bar** screen allows you to customize your choice of the displayed icons. See *Showing Icons on the Map* on page 60. Also see the *Voice Command Index* on page 133 for the “Display,” “Hide,” and “Find” commands.

Driving to Your Destination

Showing Icons on the Map

Touching the **ICON** button on the map screen displays the following screen:

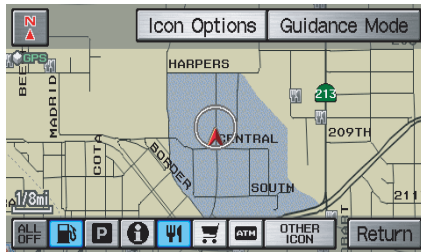

The screen consists of the following items:

Icon Bar (row of icon symbols)

The icon bar allows you to manually select the icons that are displayed on the map (see page 58 for a list of these icons).

In the screen above, both gas station and restaurants are selected. Touch the icons to select (goes blue) or remove them (symbol is gray). You can also display or hide the same icons by using the “Display” or “Hide” voice commands (see page 133).

Icon Options

This feature allows you to “fine tune” some of the icons on the **Icon bar** (See *Icon Options* below for more information).

Guidance Mode


When on route, this item allows you to select between a single screen (with occasional pop-up guidance windows), or a split screen (containing one half map, and one half guidance/directions list window). See page 55 for an explanation of this feature, and see page 94 for Setup.

Exit Screen

Select **Return** to return to the map screen.

Icon Options

Selecting **Icon Options** displays the following screen:

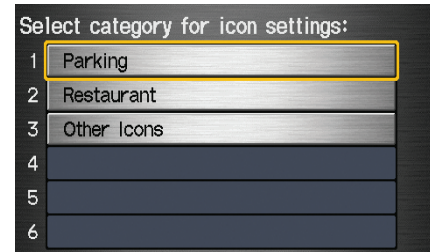


This feature allows you to “fine tune” some of the icons on the **Icon bar**. The three icon choices, “Parking” (lot or garage), “Restaurant” (specific type or types of food), and “Other icons” (hospitals, schools, etc.), can each be tailored to your needs.


For instance, let's assume that your hospital is not displayed on the map, and you want to make sure that your settings are correct. You would do the following:

- First you would ensure that the **OTHER ICON** button on the **Icon Bar** is blue (See *Icon Bar* above).
- Second, you select **Icon Options** and verify that hospital option is also on (blue). This procedure is explained below.

If you select **Other Icons** from the **Select category** for icon settings screen, the other icons options are displayed:

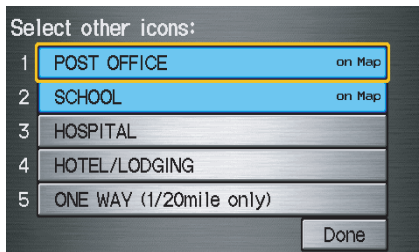

In the example above, **POST OFFICE** and **SCHOOL** are selected and will show up on the map. To also see **HOSPITAL** on the map, this would need to be turned on to select it so it appears as below.

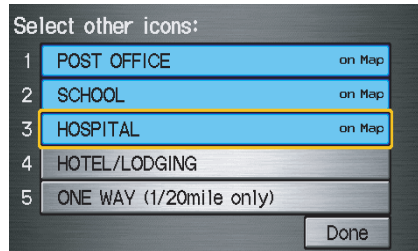

Exit, and save your settings by selecting **Done**.

NOTE:

- When viewing the **map** screen, you can turn some icons on using voice control.
- See *Voice Command Index* on page 133 for the available "Display" and "Hide" icon command.

Driving to Your Destination

Going Off the Route

If you leave the calculated route, “Recalculating...” is displayed at the top of the screen. The system will recalculate the route from your current location and direction to the desired destination then give you a new route instruction. This is done automatically if you have set **Rerouting to Automatic** on the **Setup** screen (second) (see page 86).

If the **Rerouting** option in **Setup** is set to **Manual**, “Off route” appears at the top of the screen when you leave the calculated route. Say “Recalculate,” or touch the **Recalc.** button whenever you want the system to perform a recalculation.



Off-road Tracking

If you drive more than half a mile from a mapped road, “Not on a digitized road.” appears at the bottom of the screen.



The map screen starts displaying a series of dots (breadcrumbs) to show the path you have taken if **Off-road Tracking** on the **Setup** screen (second) is set to **On** (see page 94).


By following the dots, you can backtrack to the mapped road you originally left. “Breadcrumbs” may occasionally be displayed in urban areas, such as large parking lots in shopping malls, or in new subdivisions where the roads are not yet in the database. In other cases you may see dots, if the system temporarily goes off route, like in a parking garage where the GPS signal is unavailable.

These dots appear only in the 1/20, 1/8, 1/4, and 1/2 mile (or 80, 200, 400, and 800 meter) map scales.

Use the **ZOOM** buttons to change scales if necessary.

Tracking continues for approximately 150 miles; dots at the beginning of the trail will start disappearing when you exceed that distance. When you reach a mapped road, the system stops displaying dots.

Viewing/Saving the Current Location

Whenever you are on a map screen, you can always obtain your current location either by touching the Vehicle Position icon  or by using the voice control system and saying “Display current location.” A screen pops up which shows the address of your current location, as well as the latitude, longitude, and elevation.



The screenshot shows a dark grey interface with the following elements:

- Current location:** A text field containing "MAIN ST" and "TORRANCE, CA". To the right is a "Save" button.
- GPS information:** A section with three rows: "Latitude" with value "N 33° 50' 31\"", "Longitude" with value "W 118° 18' 57\"", and "Elevation" with value "300 ft".
- A "Return" button is located at the bottom right of the screen.

NOTE:

The elevation will not appear when the system is temporarily lacking proper GPS information. The system elevation may not agree with elevations shown on roadside elevation signs, and may fluctuate plus or minus 100 feet or more.

You can store the current location for later use. It does not change or cancel your current route.

For example, you are following the system’s directions to get to a destination. While sitting at a stoplight you notice a curio shop on the corner, but do not have time to visit it right now. You can save the location to select as a destination at a later date.

To save the location, say “Save current location” or select **Save** on the screen. When you select “User 1” or “User 2,” the **Edit address book** screen with the current location data will appear. You can edit the name, phone number, or category name to be saved in your personal Address Book.

After the location is saved, select **Return** to return to the map screen. You can then use **Address Book** from the **Enter destination** by screen to select the saved location, and return to the same spot.


Driving to Your Destination

Pop-ups and Disclaimers


When you say “OK” in the Calculate Route to screen, or if you change your route, the system checks your route and provides you with “pop-up” messages for the following situation:

- Your route takes you into an area that you previously set as an “Avoid Area” (see *Edit Avoid Area* on page 91).


Calculate route to:

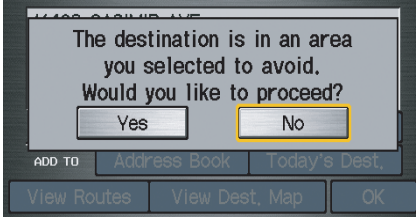

- Your route passes near an unverified area (see *Unverified Area Routing* on page 87).

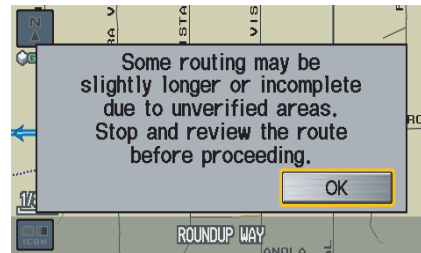

- Your route includes unverified areas (see *Unverified Area Routing* on page 87).

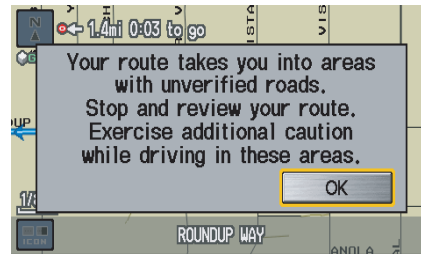

- You are about to enter an unverified area (see *Unverified Area Routing* on page 87).



- You actually entered an unverified area (see *Unverified Area Routing* on page 87).



Changing the Route

While on route, you may wish to alter your route, add an interim “Waypoint” (pit stop), choose a different destination, or cancel your current destination.

To change your present route, you can do any of the following:

Say “Menu,” or press the **MENU** button to view the **Change route by** screen:


- Add a waypoint or pit stop (page 66).
- Delete waypoints (page 67)
- Avoid a certain street or streets (page 67).
- Detour (page 67).
- Change routing method (page 67).
- Cancel the current route (page 68).
- Back to the current route (page 68).

Choose a different destination (other methods):

- Saying, “Find nearest...” to find a POI (page 68).
- Saying, “Go home” (page 68).
- Using the joystick to select a different POI or address on the map (page 68).
- Pressing the **MENU** button twice to get to the **Enter destination by** screen (page 69).

Change Route By Screen

Pressing the **MENU** button displays the **Change route by** screen:

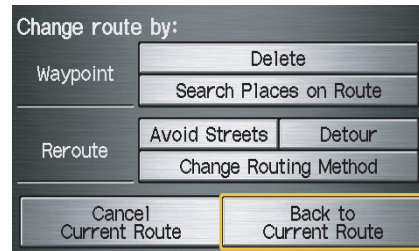


Waypoints

Waypoints allow you to add an interim “pit stop” while traveling to a destination. For instance, you may want to stop for gas or food, and then continue on to your destination. Although you can enter up to five waypoints at a time, typically you may never use more than one at a time. Waypoints are routed to in the order they were entered (number 1 first, etc.), with your final destination routed to last. If you wish to create a custom route of several destinations, and then control the order of routing, the function “Today’s Destinations” is probably a better choice (see *By Today’s Destinations* on page 43).


Driving to Your Destination

When you enter waypoints, they appear on the map screen as small red flags numbered 1-5.

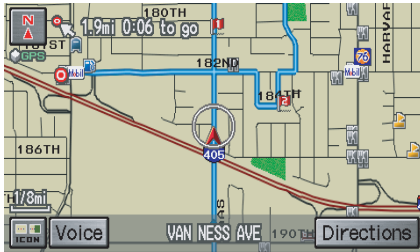

Adding Waypoints

From the **Change route** by screen, if you say or select **Search Places on Route**, then the **Select a search method** screen is displayed. Select either **Places Along the Route** or **Places Around the Destination**.

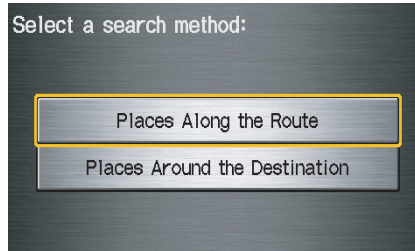

Next, select your “Waypoint Category,” then follow the menu prompts to select a destination. When the system performs a search from **Places Along the Route**, it displays matches that lie within a corridor on either side and in front of you, along your route.

From **Places Around the Destination**,

the system displays matches in a spiral pattern outward from the destination. The search “corridor” distance value can be changed in **Edit Waypoint Search Area** in Setup (see page 93).


To add another waypoint, press the **MENU** button and repeat the procedure. If **Search Places on Route** is grayed out, the maximum of five waypoints has been entered.

NOTE:

The system does not allow you to select the roads you want to use to get to a destination. However, after you enter a destination, you can select intersections or POI “waypoints” that the system will use to “tailor” your route.

Deleting Waypoints

From the **Change route by screen**, if you say “Delete” or select **Delete**, then the **Select a waypoint to delete** screen is displayed. Say the line number of the waypoint(s) you wish to delete, or select them by using the joystick. Say or select **Done** to return to the map screen.

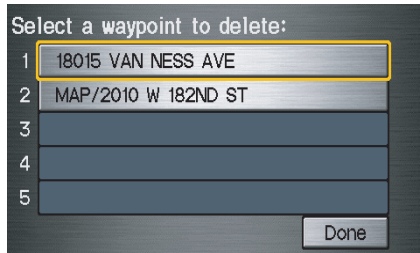

The route is re-calculated to reflect the changes you made to the waypoint(s).

Reroute: Avoid Streets

From the **Change route by screen**, if you say or select **Avoid Streets**, the system displays a list of streets that will get you to your destination. This feature allows you to avoid a street or streets along your route. This is helpful if you know of road construction, closures, or excessive traffic along the route. Simply select the street or streets you wish to avoid. You cannot avoid your current street, or the streets of your waypoint(s) or destination (system beeps if selected).

NOTE:


Although you can choose streets to avoid, you cannot choose specific streets you want to use.

Reroute: Detour

Calculates a detour route for you if you encounter an unexpected obstacle such as a closed road or extremely heavy traffic congestion. If detour is selected, the system will attempt to re-calculate a new route, avoiding the next 2 miles (while on a freeway) or 1/2 mile (while on a surface street).

Reroute: Change Routing Method

From the **Change route by screen**, if you say or select **Change Routing Method**, then the **Select routing method** screen is displayed. See *Changing the Routing Method* on page 48 for details.

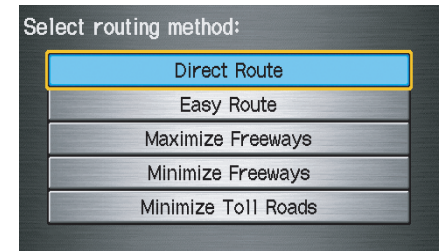

Driving to Your Destination

Cancel Current Route

Cancels the current route (and any waypoints) and returns you to the map screen.

Back to Current Route

Returns you to the original map screen.

Changing Your Destination

There are four methods by which you can change or add a waypoint to your route. These are:

Find Nearest (Voice command)

From the map screen, say one of the “Find Nearest...” voice commands to locate the nearest gas station, ATM, restaurant or other point of interest. See the “Find Nearest” voice commands listing on page 134.

Go Home (Voice command)

From the map screen, say, “Go home.” If you have entered a “Go home” address, then the system will display a confirmation screen.

Using Joystick to Change Destination

While following a calculated route, you can select a new destination with the map screen and the joystick.

With the map screen displayed, use the joystick to move the position icon. It will change to cross hairs. Use the joystick to position the cross hair on your desired new destination, street, or icon, then push in on the joystick. The address within the cross hairs will be displayed. If this is your desired new destination, push in on the joystick again. If not, reposition the cross hairs with the joystick, then push in on the joystick again to see the new address.



With the desired address displayed, push in on the joystick. The Calculate route to screen is displayed. Say or select **OK**. Say or select either **Set as New Destination** or **Set as Waypoint** on the pop-up screen.

The system will return to the map screen, and recalculate the route to your new destination or waypoint.

NOTE:

When you scroll the map screen while on route to a destination, some voice controls will not function. These include:

- Display “Heading up”
- Display “North up”

Entering a Destination from the Menu Screen (while on route)

If you say “Menu” or press the **MENU** button twice, the system displays the Enter destination by screen. Follow the procedure described in *Entering a Destination*, which begins on page 23.

With the desired address displayed, push in on the joystick. The Calculate route to screen is displayed. Say or select **OK**. Say or select either **Set as New Destination** or **Set as Waypoint** on the pop-up screen.

The system will return to the map screen, and recalculate the route to your new destination or waypoint.

Continue Trip Screen

If you restart the vehicle, without having completed your prior trip, you will see the following screen:




- To continue to your destination or other waypoints, say or select **OK**.
- To cancel your destination, press the **CANCEL** button or the **NAVI BACK** button on the steering wheel, or using the voice control system, say “Cancel” or “Back.”
- If you wish to change the route method, say or select **CHANGE METHOD**.
- For additional information on changing the routing method, see *Changing the Routing Method* on page 48.

Information Features


Information Screen

When you say “Information” or press the **INFO** button, the display changes to:

For Touring model:

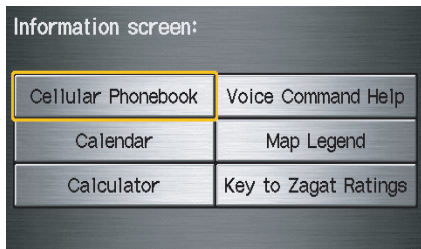

For EX-L model:

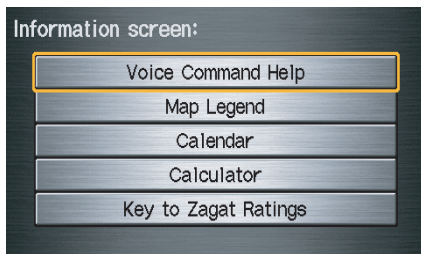

NOTE:


*If some items appear to be grayed out, and cannot be selected, it is because you did not select **OK** on the initial Disclaimer screen. See System Start-up on page 18.*

Cellular Phonebook (Touring Model Only)

This function is available only for the Touring model.

The **Cellular Phonebook** option allows you to store up to 1,000 names and 10,000 phone numbers in the phonebook of Bluetooth® HandsFreeLink® (HFL) from your cellular phonebook. With the HFL, you can then automatically dial any name or number in the phonebook.

Say or select **Cellular Phonebook** from the Information screen, and the display changes to:

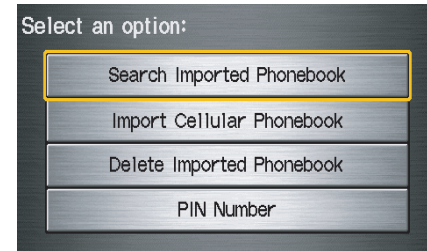


NOTE:

- For more information on this feature, see your vehicle's Owner's manual.
- For questions about the HFL Cellular Phonebook, call HandsFreeLink consumer support at 1-888-528-7876, In Canada call at 1-888-9-HONDA-9.
- Using a PIN is optional. If you forget your PIN, see your dealer for assistance.

Voice Command Help


When you say or select **Voice Command Help**, you will see the following screen:

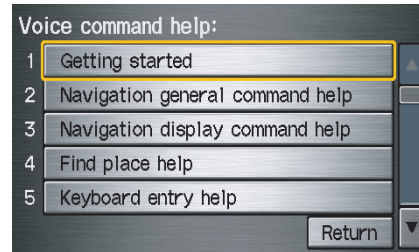

NOTE:

You can select an item by saying either the line number or the item name.


There is a tutorial available for the voice command help. Say or select **Getting started**, and the display changes to:

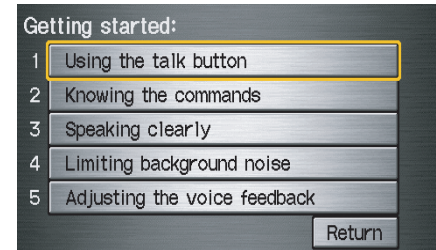

Select the line number of the desired tutorial you want to view, and the tutorial will automatically be read out. Press **Stop** to stop the reading.

Information Features


When you make a selection, you will see the help commands that can be used with the voice control. You can say or select **Read List**, and the system will read the list to you.

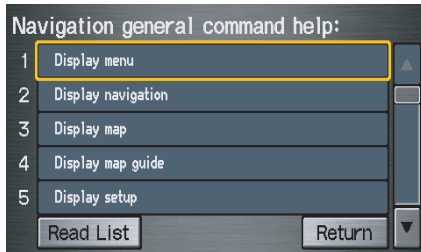

For a listing of all voice commands, see *Voice Command Index* on page [132](#).

Map Legend

You can use the Map legend screens to learn the meaning of map features, icons, colors, etc. used in this system. When you say or select **Map Legend**, the display changes to:

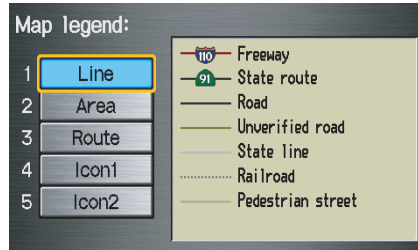

Say or select the desired item or item number to view each section of the map legend.

Calendar


The **Calendar** option allows you to enter events and be reminded of them in the future. When you say or select **Calendar**, the system shows the calendar with the current calendar day highlighted.



Dates with an icon indicate there is a schedule entry for that date.


You can scroll through the calendar day by day by pushing the joystick or select the day by voice. To change the month, say “Next” or “Previous,” use the **ZOOM** buttons, or touch the triangles at the top of the screen.

If you say or select **List**, your entries are listed. Press the **CANCEL** button to return to the **Calendar** screen.

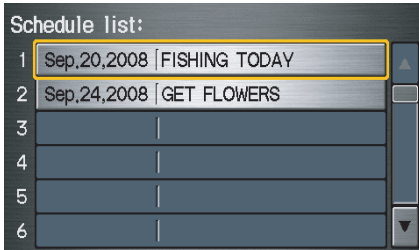

Entering Your Schedule

Set your schedule by selecting the day on the calendar, and the display changes to:

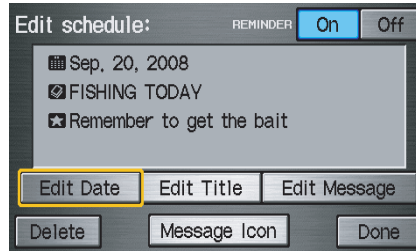

Reminder

The default for Reminder is **On**. This allows the system to remind you of the calendar item the next time you start the vehicle. See *System Start-up* on page 18.


Edit Date

This allows you to move your calendar entry to a different date. If you say or select **Edit Date**, the **Calendar** screen is displayed with existing entries grayed out. Select a new day and the display returns to the **Edit schedule** screen with a new date.

Edit Title

Say or select **Edit Title**, then enter the name of your title using the on-screen keyboard. Once you have entered the title, say or select **Done**.

Edit Message

Say or select **Edit Message**, and the system will show the **Edit Message** screen. You can enter a message on two lines. Use  to change the line. Once you have entered the message, say or select **Done**.

Information Features

Message Icon

Say or select **Message Icon**, and the system displays a list of icons you can select to help identify the type of message you entered. The message icon you choose will be displayed alongside the specified date on the **Calendar** screen.

Delete

From the **Calendar** screen, select the date of the schedule you wish to remove. To remove the schedule, say or select **Delete**.

Done


Once you have finished entering the schedule, say or select **Done**. The **Calendar** screen is re-displayed and a message icon appears.

NOTE:

- *You can only enter one message per day.*
- *A maximum of 50 entries can be stored in the schedule.*
- *To re-activate a previous message, turn the Reminder setting from **Off** to **On**. If it is not turned on, the reminder will not be displayed when you start vehicle.*
- *The system displays active calendar entries only after you answer **OK** on the Disclaimer screen.*
- *For more information, refer to System Start-up on page 18.*

Calculator

When you say or select **Calculator**, the display changes to:

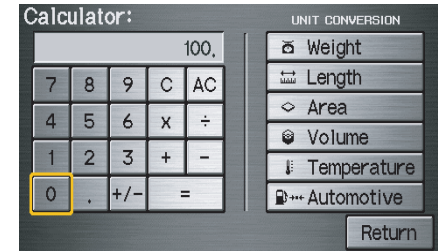

Use the touch screen to use the following features:

Calculator

The calculator function operates like a standard hand held calculator.

Unit Conversion

Values entered on the calculator can be converted from one unit to another (e.g., inches-to-millimeters).

Unit Conversion

To perform a conversion:

1. Enter a numeric value to be converted (for example, 100).
2. Select the type of unit you want to convert (for example, weight). The screen for that conversion type appears (see illustration in step 3).
3. Select the base unit (like pounds) that you wish to convert to some other unit. So, in the example below, 100 lbs converts to 1600 ounces 0.05 ton (US), etc.




NOTE:

- If you do not enter a value to be converted, only “Temperature” units are selectable.
- Conversions using negative value may produce meaningless or physically impossible values.

Key to Zagat Ratings

When you say or select **Key to Zagat Ratings**, you will see the description of ratings for surveyed restaurants.

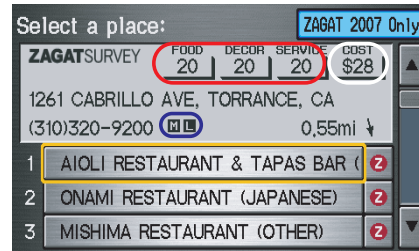




- “Food,” “Decor,” and “Service” categories (red circle) are rated using numbered values (e.g., 0-9, 10-15, etc.).
- “Cost” (white circle) is the average cost of a meal (including drink and tip).

- The symbols, if displayed (blue circle), indicate the following information:

- open on Sunday
- closed on Sunday
- open on Monday
- closed on Monday
- open for lunch
- lunch not served
- serving after 11 PM
- no credit card accepted

Information Features

Use the joystick or touch the scroll bar to scroll through the Key to Zagat Ratings screens.

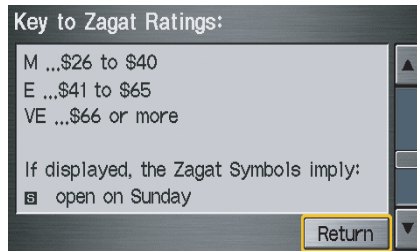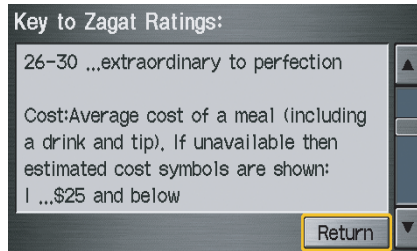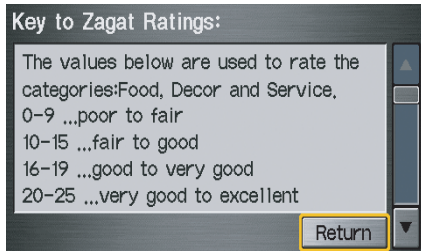

Setup Mode

The Setup function consists of two different screens that allow you to change and update information in the system. To display the Setup screens, use the voice control system and say “Setup,” or press the **SETUP** button. To change it to another Setup screen, say or select **More** in the upper right corner of the screen.


On any of the Setup screens, you can use the voice control system to select any item on the screen.

NOTE:

- If some items appear to be grayed out, and cannot be selected, it is because you did not select **OK** on the initial Disclaimer screen. See System Start-up on page 18.
- For information on the available voice commands, see Voice Command Index on page 132.

Setup Screen (first)

From any screen, say “Setup” or press the **SETUP** button, and the following screen appears:

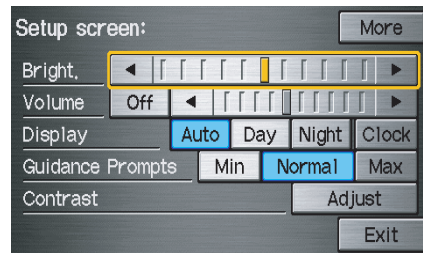

Brightness

The screen brightness has 11 settings. To change the brightness, use the voice control system and say “Brightness up” or “Brightness down.” You can also select the **Bright.** bar and move the cursor by pushing the joystick left or right, or by touching the arrowhead in the bar.

Tip:

If you are having trouble viewing the screen in bright lighting conditions, try increasing the brightness.

NOTE:

You can have a separate daytime and nighttime setting for brightness. Adjust each setting when the display is in either daytime or nighttime mode.

Volume

The navi voice volume is adjustable in 10 steps, and also can be turned off. To adjust the volume, use the voice control system and say “Volume up” or “Volume down.” You can also select the **Volume** bar and move the cursor by pushing the joystick left or right, or by touching the arrowheads in the bar. After adjusting the volume, you will hear beeps at the new volume level. You can also select volume off.


NOTE:

If you turn the volume off, you will not hear route guidance or voice command confirmations.

System Set-up

Display

There are two screen display modes:

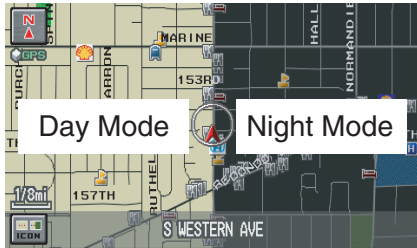

Day and **Night**. The recommended setting is **Auto**, which automatically switches the screen between **Day** and **Night** modes as you turn the headlights on or off.

You can select **Day** or **Night** mode to override the **Auto** mode. This is a useful feature for driver's that like to use headlights during the day, and want to temporarily override **Night** mode. However, the screen in **Day** mode will be extremely bright at night.

| Display Mode | How setting affects display mode: | To override setting while driving: | But remember: |
|-------------------------------|--|---|---|
| Auto (factory default) | Automatically switches between Day and Night mode by sensing if the headlights are on. | Override night display - Adjust dash brightness (with headlights on) to full bright. Override day display - Turn on headlights and ensure the dash brightness is not at full bright. | Remember to adjust the dash brightness (with headlights on) back to normal to allow auto switching by sensing headlights. |
| Day | Stays in Day mode. | Push and hold the joystick for 10 seconds (switches to Night mode). | There is no auto Night/Day mode change with the headlights on/off. You control the setting. |
| Night | Stays in Night mode. | Push and hold the joystick for 10 seconds (switches to Day mode). | There is no auto Night/Day mode change with the headlights on/off. You control the setting. |
| Clock | Displays the clock on the screen. | To return to the previous screen, press the NAVI BACK button. | Touch any button to return to your last screen. |


When you select **Clock** mode, the clock screen is displayed (see page 18). Voice guidance continues to work while in Clock mode or DISPLAY OFF mode.

DISPLAY OFF

When you touch the **DISPLAY OFF** button, the screen is turned off. To turn on the screen, press any navigation or voice control button.

Clock Type

Allows you to choose the design of the clock screen from one of three **Clock Types** and one of two **Background** images.

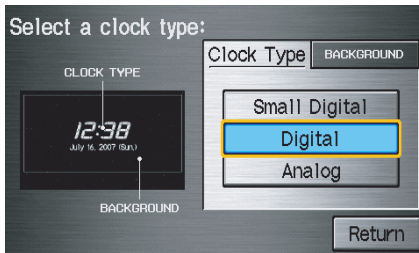

Say or select **Return** to return to the previous screen.

Guidance Prompts

While you drive to your destination, the system displays and announces guidance prompts for your next maneuver. This setting allows you to adjust the number of guidance prompts before each maneuver. The settings **Min**, **Normal**, and **Max** are described below. The factory default is **Normal**, so you can adequately prepare for the next maneuver. If you wish to change the number of guidance prompts, select your preferred setting, as shown in the following table.

| Setting | Distance before maneuver | | |
|------------------------------------|--------------------------|----------------|----------------------|
| | About 1/2 mile | About 1/4 mile | Just before maneuver |
| Min | | Yes | |
| Normal (factory default) | | Yes | Yes |
| Max | Yes* | Yes* | Yes |

*Uses street name in guidance phrase.

NOTE:

To temporarily turn off voice guidance prompts, select **Off** for the “Volume” setting in Setup.

Contrast

You can adjust the contrast and black level. Adjusting these settings can make the display easier to read.


NOTE:

You can have separate daytime and nighttime settings for Brightness, Contrast, and Black Level. Adjust each setting when the display is in either daytime or nighttime mode.

System Set-up


Setup Screen (second)

Say or select **More** to view additional Setup functions and the following screen appears:

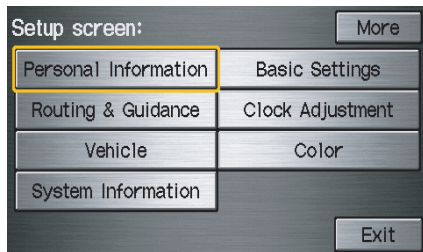


Personal Information

From the Setup screen (second), say or select **Personal Information** and the following screen appears:

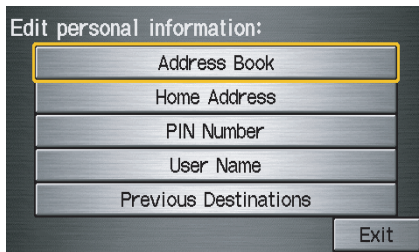

Address Book

The Address Book function allows for up to a total of 200 address entries. After 200 entries, the **ADD TO Address Book** button is grayed out. The 200 addresses are shared between User 1 and User 2. For example, if User 1 has 150 addresses, User 2 can only have 50. You can add, modify, and delete information in the personal Address Book list.

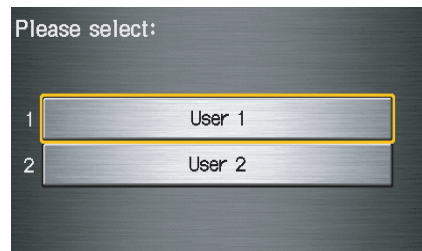

You may choose to use a Personal Identification Number (PIN) to protect your privacy. However, PINs are optional, and if you decide to use one, record it in case you forget the number (see page 84).

You can do the following functions in the address book:

- Entering an address (see page 80)
- Edit an existing address (see page 83)
- Delete an existing address (see page 83)

Accessing the Address Book List

After selecting **Address Book**, the system prompts you to select **User 1** or **User 2**.

If an Address Book PIN has been set, the system prompts you to enter your PIN. Verify that the right user is displayed, then enter your PIN. After entering your PIN, say or select **Done**, and the system displays your Address Book.


If no Address Book PIN has been set, the system displays your Address Book after selecting **User 1** or **User 2**.

NOTE:

Personal information cannot be backed up or moved to another Navigation system.

Entering an Address Book


After you select **User 1** or **User 2**, your Address Book list appears:

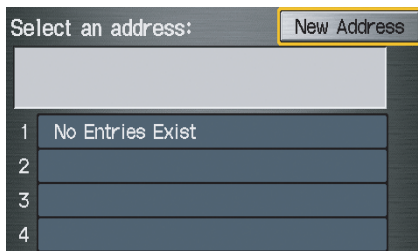

Select **New Address** in the upper right corner of the screen when beginning to build your Address Book list.

Edit Name

You may use the “Name” field to give the entry a name or title that you will recognize later, such as “Doctor Smith” or “Broadway Theatre.” If you do not give the address a name, the system will assign one (Address 001, etc.).

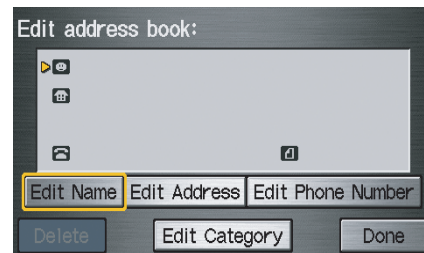

Say or select **Edit Name**. Then use the on-screen keyboard to enter the name. Touch **Done** when finished.

NOTE:

You can always re-enter, edit, or make changes to any entry. “Address” is the only required field.

System Set-up

Edit Address

When you say or select **Edit Address**, the display changes to:



Current Position - Allows you to use your current position as the address.

Address - Requires you to enter the city and address you wish to store. The operation is the same as selecting **Address** from the Enter destination by screen (see page 24).

Places - Allows you to select one of the Point of Interest (POI) locations already stored in the system as one of your personal addresses. This operation is the same as selecting **Places** from the Enter destination by screen (see page 33).

Previous Destinations - Allows you to choose one of the locations in the Previous Destinations list for your Address Book list. This operation is the same as selecting **Previous Destinations** from the Enter destination by screen (see page 42).

After you have used one of these four options to enter the address, the initial screen for entering the personal address is re-displayed, with the address shown in the "Address" field. If you have entered the address using **Places**, the phone number corresponding to the address also appears in the "Phone Number" field.


Edit Phone Number

You can enter the telephone number of the address. If the address was chosen with **Places**, and it has a telephone number, that number is entered automatically.

Say or select **Edit Phone Number** to display the Enter phone number screen. Enter the telephone number, including the area code, by using the voice control system (say the entire phone number one digit at a time), or by using the on-screen keyboard. Say or select **Done** when finished.

Edit Category

If desired, you can specify the category of the address. Say or select **Edit Category** to display the **Select a category** screen.

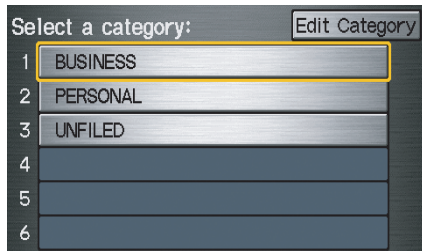

Scroll the screen and select a category by saying the number next to your choice, or by touching the item.

If you wish to set, add, or edit a new category, select **Edit Category** in the upper right corner on the screen. The system will show the **Select a category to edit** screen. Follow the on-screen prompts to add, change or delete a category. If you delete a category that was used to categorize addresses, the category for those addresses becomes "UNFILED."

NOTE:


You may have up to 100 categories. These are shared between User 1 and User 2.

The system will then display everything that you have entered. If all the information is correct, say or select **Done**. This will return you to the Address Book list.

If you want to enter another address, select **New Address** in the upper right corner on the screen, then repeat the procedures above. If not, press the **CANCEL** button.

Edit/Delete an Address


This feature allows you to select an address to edit or delete. Once an address is selected, choose the appropriate function.

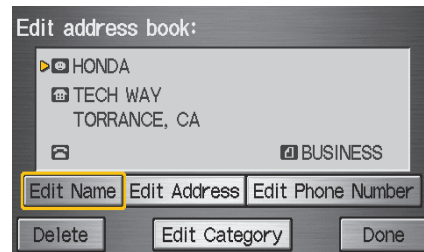

System Set-up

Home Address

This feature lets you return “Home” from any location simply by saying “Go home” at the map screen. Alternatively, you can select **Go Home** on the Enter destination by screen (see *By Go Home* on page 46).

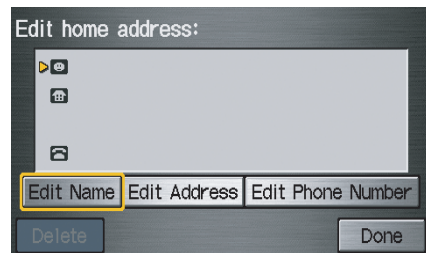

Enter the Name, address, and phone number in the same way as entering a personal address, then say or select **Done**. To leave the screen, press the **CANCEL** button.

NOTE:

If your Home address cannot be found in the system then, while located on the street close to your home, select “Current Position” when entering the “Edit Address” field.


PIN Number

You can set a four-digit PIN (Personal Identification Number) for accessing and changing personal addresses and your home address if desired. Once you set the PIN on this screen, the system asks you to enter the PIN when you access a personal address or your home address.

NOTE:

PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, the dealer will have to reset it for you.

When you select **PIN Number**, the display changes to:

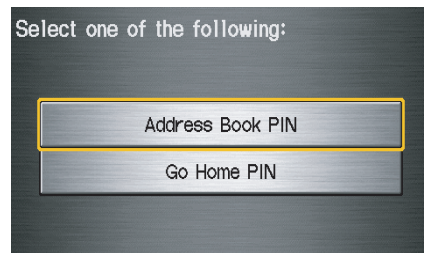

Address Book PIN

If you choose to enter a PIN for the personal Address Book, you will have to enter it anytime you edit your Address Book (see page 80), or select **Address Book** on the Enter destination by screen (see page 45).

1. Select **Address Book PIN**.
2. Select either **User 1** or **User 2**. The display changes to:



3. Enter your four-digit PIN and select **Done**. If you do not wish to use a PIN, select **Do not use PIN**.

NOTE:

The factory default is no PIN.

- If you have entered the PIN correctly, the display changes to the **Please re-enter new PIN** screen. Enter the same number, then touch **Done** to validate the number you have selected.
- If you have entered the same number both times, the display returns to the **Edit personal information** screen. If not, incorrect PIN appears in the upper right corner of the screen. Enter your PIN again.

NOTE:

If you wish to remove your PIN, return to the same screen and, after entering your PIN, touch the **Do not use PIN** button.

Go Home PIN

- Select **Go Home PIN**, and the system displays the **Enter your new PIN** screen.
- Enter your PIN in the same way as entering the Address Book PIN.

NOTE:

The factory default is no PIN. If you choose to use a PIN, you will have to enter it whenever you say "Go Home" at the map screen, or select **Go Home** on the **Enter destination by screen**.


User Name

You can change **User 1** and **User 2** to a desired name. Choose either User 1 or User 2 on the **Select the user name to edit** screen. Enter the name, and say or select **Done** to leave the screen.

Previous Destinations

Allows you to delete some or all of your previous destinations.

- Select this option, and the display changes to:

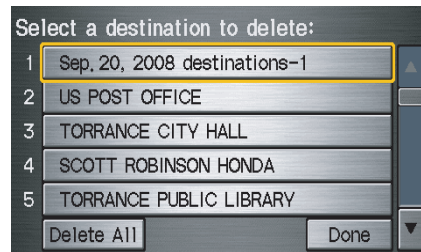

- Scroll through the list and find the address you want to delete.
- Select the address to delete by saying the line number, using the joystick, or touching it on the screen.

NOTE:

To cancel the deletion of **Previous Destinations**, press the **CANCEL** button before performing step 4.

System Set-up


4. Say or select **Done** to perform the deletion, and the display returns to the previous screen.

Tip:

You can delete all addresses by selecting **Delete All**.

Routing & Guidance

From the **Setup** screen (second), say or select **Routing & Guidance** and the following screen appears:

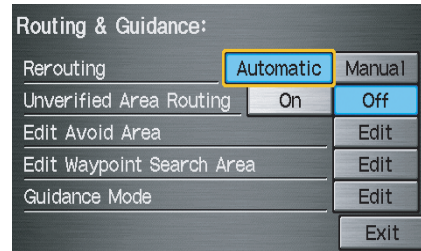

Rerouting

If **Rerouting** is set to **Automatic** and you deviate from the route, you will see “Recalculating...” at the top of the screen for several seconds as the system calculates a new route. This is followed by new routing instructions.

If **Rerouting** is set to **Manual**, you will hear a tone when the “Off route” message is displayed. Say “Recalculate” or touch the **Recalc.** button on the screen to make the system recalculate your new route.

NOTE:

- If you live in an area with poor mapping, you may wish to set **Rerouting to Manual** to avoid constant recalculation. However, you will have to manually touch the **Recalc.** button on the screen to have the system plot a new route.
- It is strongly recommended that you leave the system set to the factory default (**Automatic**).

Unverified Area Routing

Allows you to receive turn-by-turn map and voice guidance in unverified areas when on route to a destination (see *Map Overview* on page 6). The chart below illustrates the routing differences with this setting On or Off.

| | Unverified Area Routing: Off (factory default) | Unverified Area Routing: On |
|--|--|---|
| Decision: Why choose On or Off? | The driver wishes to navigate manually by using the navigation map and choosing the streets that lead to the destination. The driver understands that unverified roads may not be accurate, and can contain errors in location, naming, and address range. | The driver chooses to let the navigation system suggest possible routing. The driver understands that in some cases guidance may not be appropriate. Unverified roads may not be accurate, and can contain errors in location, naming, and address range. |
| What you will see... | A blue dotted vector line is displayed on the map that continually points to your destination. The driver should stop and then use the map to select streets that lead to the destination. | A blue-pink dashed route line highlights suggested unverified streets on the map while traveling to your destination. This is in sharp contrast to the normal blue route line displayed in verified areas. |
| Cautionary messages | There are cautionary pop-up screens and voice announcements, before and during the route. These serve as reminders that you should obey all traffic restrictions. | There are cautionary pop-up screens and voice announcements, before and during the route. These serve as reminders that you should exercise additional caution, and obey all traffic restrictions. |
| Guidance (map/voice) | There is no turn-by-turn map or voice guidance. | Voice guidance commands end with the words "If possible." This is to remind the driver to verify all traffic restrictions before making a maneuver. |
| Directions list | A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road. | A direction list is provided showing street names and turn symbols in pink. |

System Set-up

Unverified Area Routing



When driving to your destination, you have the choice of using or not using “unverified” roads. You make this choice in **Setup** screen (second). The next few pages contain an example of a route to a destination in an unverified area explaining the routing differences found in unverified areas.

With **Unverified Area Routing Off**, the system tries to use verified roads whenever possible. In this example, since only verified streets are used, it created a longer route than necessary.



With **Unverified Area Routing On**, the route is shorter, but consists of unverified (light colored) streets that may not be accurate. Because the streets are unverified, there may be errors in street location, name, or address range. Additional caution is recommended in these areas. Always obey posted traffic restrictions.

Because both routes bypass or use unverified streets, an initial Disclaimer screen is provided. It is recommended that you stop and review the map.

Unverified Area Routing “Off”

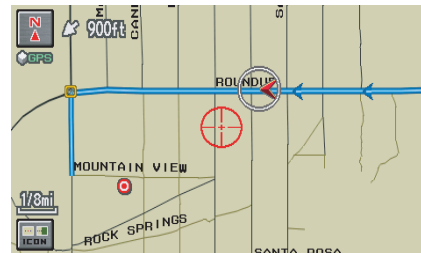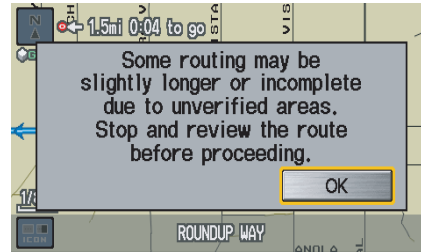

Unverified Area Routing “On”

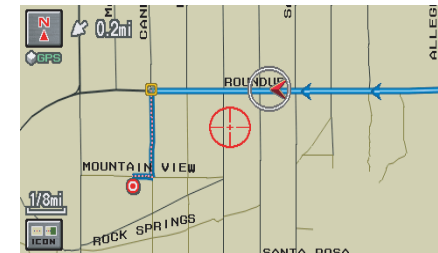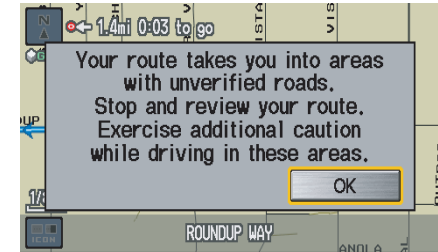

NOTE:


Unverified roads are shown only when viewing the map in the 1/20, 1/8, and 1/4 mile map scales, or the 80, 200, and 400 meter map scales.

With **Unverified Area Routing Off**, the driver chose to take a shortcut, and avoid the long route. The moment you enter an unverified street, a caution box appears on the screen, and is read by the voice. This lets you know that you are about to enter an unverified area and that you will be following a dotted “vector line” that points to your destination.

With **Unverified Area Routing On**, a caution box appears on the screen and is read by the voice. In this case you will be presented with a dashed blue/pink line instead of the regular blue route line. You cannot assume that all guidance is appropriate. This is your signal to pay attention to posted traffic restrictions.

In both cases, when you actually enter the unverified street, a short caution will remind you. You will see and hear this short caution message whenever you enter unverified areas.

Unverified Area Routing “Off”

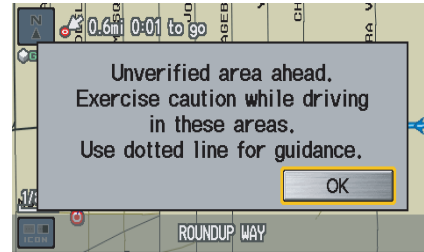

Unverified Area Routing “On”



System Set-up

With **Unverified Area Routing Off**, you are presented with a blue “vector line” that always points to the destination. You must manually choose streets from the map that will lead to your destination. No guidance is provided, and there are no directions to the destination.

With **Unverified Area Routing On**, a blue/pink route line is shown for unverified segments. Voice guidance commands in unverified areas always end with “if possible.” This is your signal that you should use additional caution, and obey all traffic restrictions. The maneuver window “arrow” shows any portions of unverified turns in blue/pink dashes.

These guidance maneuvers are only a suggestion. You should always confirm that the maneuver is possible. A directions list is also provided that shows any unverified roads in a blue color, with pink arrows pointing to the next maneuver.


Unverified Area Routing “Off”



NOTE:

There are no Voice and Directions buttons shown on the screen. With Unverified Area Routing “Off,” no Direction List is provided.


Unverified Area Routing “On”

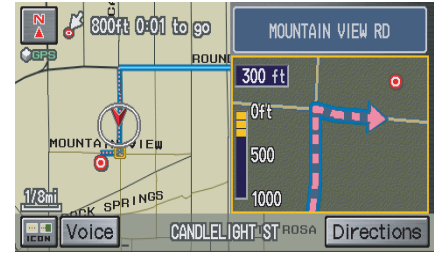


Edit Avoid Area

This function allows you to select areas you wish to avoid when calculating a route to your destination. You can select up to five areas to avoid. You may wish to set up an “avoid area” to route around long term road construction, closures, or any area you wish to avoid. If you enter a route that takes you through or into an “avoid area,” a pop-up box will warn you that your route takes you into one of these areas. However, you can still choose destinations in an avoided area.

When you select **Edit**, for the Setup item “Edit Avoid Area,” the following list screen is displayed:

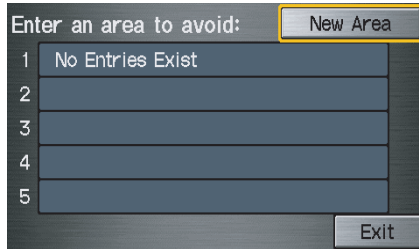

You can select **New Area**, or select (by touch) one of your existing areas to modify. If you choose **New Area**, the following screen is displayed:

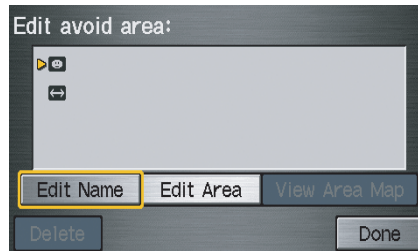

Say or select **Edit Name**, and use the keyboard to enter the name on the **Enter avoid area name** screen (19 characters max). Say or select **Done** to return to the previous screen. Say or select **Edit Area**, to create the area to be avoided. The following screen appears:




Either select **Address** or **Map Input** on the **Enter avoid area by** screen. Each choice provides a slightly different way to locate the approximate map display for drawing the area you wish to avoid. After selecting the choice, a map screen will be displayed.



Use the **ZOOM** buttons to select the map scale (available scales are 1/20, 1/8, and 1/4 mile scales). Use the joystick to move the crosshairs (red circle) to the desired start point and push in the joystick to “set” the start point. Then move the joystick in a straight or diagonal direction to encompass the area to be avoided.

System Set-up

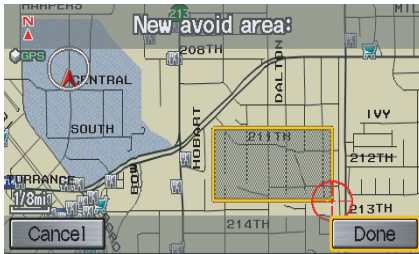

NOTE:

The maximum size of the “Avoid area” is 1/4 of the navigation display screen regardless of the map scale setting.


The selected area will be displayed as a shaded box with an orange border. Push in on the joystick to set the end point of the avoided area. To “re-draw” the area, touch **Cancel** and repeat the area selection process. If your selected area contains a freeway, the system will prompt you with a pop-up box saying, “Do you want to avoid freeways?”

Answering “No” allows you to enter a route through an avoided area on a freeway, and skip the “Avoid area caution box” (See *Pop-ups and Disclaimers* on page 64).

Say or select **Done** to return to the **Edit area** screen. When you return, the “Vicinity” field is automatically filled in by the system. Re-edit the area “Name” if desired. Select **Done** on the **Edit avoid area** screen to finish editing. Your new avoided area will now appear on the “Avoid area” list screen, and be viewable on the map screen.

NOTE:


- You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.
- If you are drawing a box around a road as an area to avoid, ensure the following: When you draw the box, make sure that the road or portion of a road that you encircled includes an intersection. For instance, in the example below, highway 213 will be avoided, but Van Ness will not be avoided because it lacks an intersection in the enclosed box.

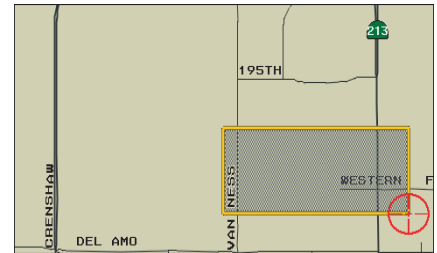

Edit Waypoint Search Area

When driving on route to your destination, you can select a temporary destination “waypoint” (marked with a small flag on the map) along your route for gas, a restaurant, or other POI. When you resume your trip from the “waypoint,” the system continues the trip to your original destination. To use this feature, see *Waypoints* on page 65.

This Setup item allows you to select the distance from your highlighted route line (on either side of your route), that the system will search for a “waypoint.” From the **Routing & Guidance** screen, select **Edit** for “Edit Waypoint Search Area,” and then choose the desired search distance for either “On Freeways” or “On Surface Street.”

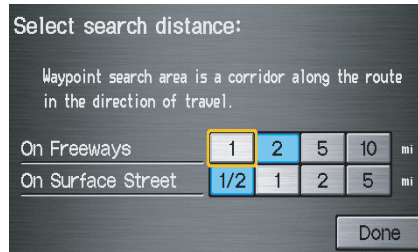

The diagram below shows how the system handles the search for “Places Along the Route” or “Places Around the Destination” (see *Waypoints* on page 65).



For “Places Along the Route,” the system looks in front of you within a corridor width specified by your values for “On Freeways” or “On Surface Street.” The system checks the upcoming area, based on your input.

For “Places Around the Destination,” the system searches outwards in a spiral from the destination. In this case, specific search values are not needed; the matches are displayed in order of distance from destination.

NOTE:


These settings do not affect the search range used for the voice commands like, “Find nearest gas station,” that are also available when viewing the map screen.

System Set-up

Guidance Mode

Allows you to select the guidance display mode: **Single Screen** or **Split Screen**.

To get to Guidance Mode from the Setup screen, select in sequence, “More,” “Routing & Guidance,” and “Guidance Mode.”

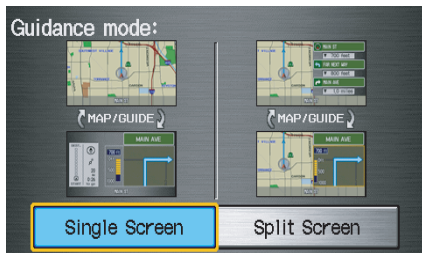


The factory default is **Single Screen**.

NOTE:

The Guidance Mode can also be selected on the Icon Selection screen. See Showing Icons on the Map on page 60.

Vehicle

From the Setup screen (second), say or select **Vehicle** and the following screen appears:

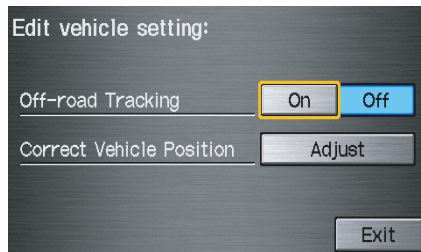

Off-road Tracking

With this **On**, the system will provide white off-road tracking dots (“breadcrumbs”) on the map screen whenever you drive into an area where the map does not show any roads. See *Map Screen Legend* on page 20.

After you have traveled approximately 1/2 mile away from a mapped road, the system will display a series of white dots on the map screen to show the path you have traveled. This is provided so you can follow the dots to backtrack to the mapped road you originally left. Tracking continues until you reach a mapped road. See *Off-road Tracking* on page 62.

Tracking is shown only in the 1/20, 1/8, 1/4, and 1/2 mile, or the 80, 200, 400, and 800 meter scales. Use the **ZOOM** buttons to change the scales if necessary.

NOTE:

To clear existing dots, turn this feature off and exit Setup. To re-enable this feature, return to Setup and turn it on again.

Correct Vehicle Position

The system relies on satellites for positioning information. Buildings, tunnels, and other objects can block or reflect these signals, requiring the system to use “dead reckoning” to determine your location and direction. This can sometimes lead to small errors in positioning, such as showing you on an adjacent street.

NOTE:

Using this function to adjust vehicle position is not recommended. When the system acquires a GPS signal, it will automatically place the vehicle in the correct location.

If you choose to do this, follow these steps:

1. Stop the vehicle.
2. Select **Adjust**, and the system will display a map adjustment screen.



3. Use the **ZOOM** buttons and the joystick to move the location arrowhead to the correct location. Touch the arrow buttons on the bottom of the screen to rotate the direction arrows so the vehicle position is pointing in the correct direction.

NOTE:


If you continually have to do this, there are either problems in the database or GPS reception problems. See Accessories Precautions on page 5.

4. When you have finished, press the joystick or select **Done** to return to the previous screen.
5. As you drive, the current road will be displayed at the bottom of the screen.

System Set-up

System Information

From the Setup screen (second), say or select **System Information** and the following screen appears:

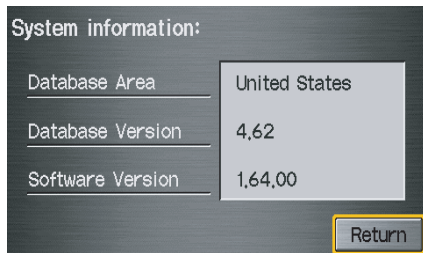


Displays the information on the navigation system software. This information is for dealer use only. For ordering updates, use the version number stamped on the label (as Ver. X.XX) of the navigation DVD. See *Obtaining a Navigation Update DVD* on page 108.

When finished, say or select **Return** to return to the previous screen.

Basic Settings

From the Setup screen (second), say or select **Basic Settings** and the following screen appears:

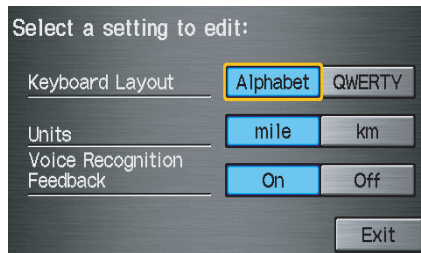

Keyboard Layout

Allows you to select the displayed keypad screen: **Alphabet** or **QWERTY**.

Units (mile or km)


Allows you to select the units for the entire system (**mile** or **km**).

Voice Recognition Feedback

Allows you to turn voice control system prompts **On** or **Off**. When **Off**, you will not hear the voice control system confirmations or prompts.

Clock Adjustment

From the Setup screen (second), say or select **Clock Adjustment** and the following screen appears:

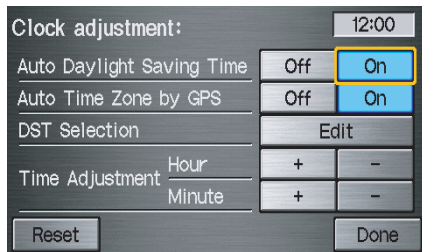

This screen allows you to set or adjust the following:

- Auto Daylight Savings Time (Default = On)
- Auto Time Zone by GPS (Default = On)
- DST (Daylight Savings Time) Selection (Change DST schedule)
- Time Adjustment (Adjust your clock)
- **Reset** button (resets this screen's settings to factory defaults)

Auto Daylight Saving Time

Sets automatic daylight saving time **On** or **Off**. If set to **On**, the navi clock will automatically “spring ahead” or “fall behind” by one hour when a daylight savings time change occurs. If you reside in a state or area where daylight saving time is not used, then you may want to turn this feature off.

NOTE:

*If you set Auto Daylight Saving Time to **On**, the Daylight Saving Time function is activated even in an area that does not adopt the Daylight Saving Time system.*

The federal government has mandated that, starting in 2007, daylight savings time will change in March & November instead of the old schedule in April & October. The new government daylight savings time schedule is subject to review and possible cancellation in 2008.

The dates that the navi switches between standard and daylight savings time are not triggered by GPS satellite signals. They are stored in the navi software and can be selected in the DST schedule selection screen. Therefore your navi clock will change based on the daylight savings time schedule.

System Set-up

Auto Time Zone by GPS


Sets automatic time zone selection by GPS to **On** or **Off**. If you are driving across the country and passing through time zones, then this feature will automatically set the time to the time zone you are traveling through. However, if you live and work in two different time zones, you may want to turn this feature off.

NOTE:

When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

Daylight Savings Time (DST) Selection (Change DST schedule)

This option lets you select the schedule (**April-October**, or **March-November**) when daylight savings time will automatically occur in your navi. The system default is the new 2007 “**March-November**” schedule as mandated by the US government. During 2008-2009, it is possible that this new change will be canceled by the government, and returned back to the previous “April-October” schedule. If so, simply change the schedule in this setting back to the “April-October” schedule.

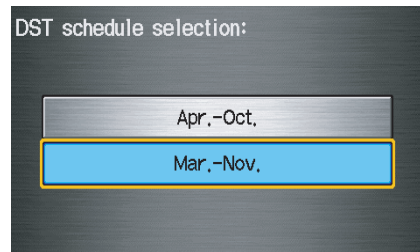

Time Adjustment

Adjusts the current time in hours and minutes. You can reset the adjustment by selecting **Reset**. Selecting **Done** returns you to the previous screen.

NOTE:

*Selecting **Reset** also clears any changes you made to “Auto Daylight Saving,” “Auto Time Zone,” or “DST Selection” settings. Depending on your location, you may need to adjust these settings.*


Color

From the Setup screen (second), say or select **Color** and the following screen appears:



Map Color

Allows you to choose the map color from one of four colors for the **Day** and **Night** mode.

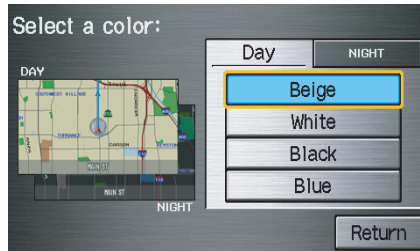


Say or select **Return** to return to the previous screen.

NOTE:

- Choose **White** (factory default is Beige) as the **Day** color to obtain the best daytime display contrast.
- Choose **Black** (factory default) as the **Night** color to obtain the best nighttime display contrast.

Menu Color

Allows you to choose the menu color from one of five colors for each **Base** and **Window**.

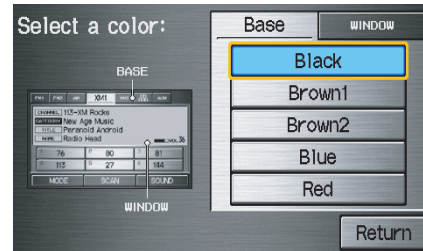

Say or select **Return** to return to the previous screen.


NOTE:

- Choose **Black** (factory default) as the **Base** color to obtain the best display contrast.
- Choose **White** (factory default) as the **Window** color to obtain the best display contrast.

System Set-up

Rear View Camera

Your vehicle is equipped with a rear view camera as shown in the illustration.

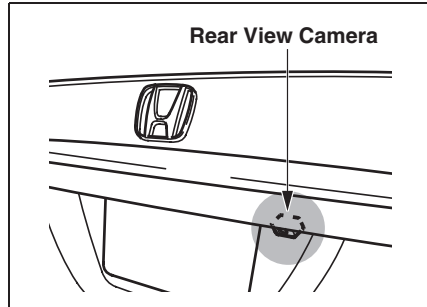

Whenever you shift to R (Reverse) with the ignition switch in the ON (II) position, the rear view is shown on the navigation system screen. For the best image, always keep the rear view camera lens clean, and be sure it is not covered.

Since the rear view camera display area is limited, you should always back up slowly and carefully, and look behind you for obstacles.

Rear View Camera Brightness Adjustment

When in reverse, the touch screen, and Navi “hard” buttons are locked out, except the **ZOOM** buttons. Touching the “▼” or “▲” button allows you to adjust the brightness of the rear view camera image. This brightness adjustment is independent of the screen brightness adjustment in Setup.

NOTE:

- *The camera brightness cannot be adjusted by voice control.*
- *Slight delays can occur when switching to the camera image, or switching back to the map/menu screen. This is normal.*

System Initialization

If for any reason, you lose power to the navigation system (like the battery was disconnected), the navigation system will require initialization. Once completed, your system will be ready to use.

This initialization requires the following:

- Entry of the 4-digit anti-theft security code to “unlock” the navigation system.
- GPS initialization (may not be needed depending on the length of time the system was without power).
- Map matching to align the GPS coordinates to a place on the map (displays current street at the bottom of the map).

Entering the Security Code

If the battery goes dead or is disconnected for any reason, you will have to enter a security code for both the audio system and the navigation system before you can use it again.

When you purchased the vehicle, you should have received two cards that have the audio and navigation system’s security codes and serial numbers. Keep these cards in a safe place in case you need the codes. If you lose the cards, you must obtain the security codes from your dealer.



Enter the four-digit security code, then select **Done**. If you have entered it correctly, the display changes to the **Disclaimer** screen. If you make a mistake, the system will display “incorrect PIN.” Re-enter your 4-digit security code. You have ten chances to enter the correct code. If all ten are incorrect, turn the ignition to OFF, then back to ON (II) to have ten more chances to enter the correct code.

Follow the instructions in the vehicle Owner’s manual to enter the 5-digit audio code. The navigation voice will not operate if the audio code is not entered.

NOTE:

The anti-theft security code is unrelated to your optional Navigation system PIN (for Personal or Home Address).

System Initialization

GPS Initialization

Depending on the length of time the battery was disconnected, your system may require GPS initialization. If it does, the following screen appears:

The navigation system lost power and is acquiring its location from the GPS satellites. This usually takes less than 10 minutes.

- * Start the engine.
- * Park the vehicle in an open area away from trees, power lines, and tall buildings.
- * Remove loose articles, cell phones, or electrical accessories located near the GPS antenna.
- * If this screen is displayed repeatedly when starting the vehicle, see your dealer.

If this procedure is not necessary, the system proceeds directly to the **Disclaimer** screen (see page 18). During initialization, the system searches for all available GPS satellites, and obtains their orbital information. During this procedure the vehicle should be out in the open with a clear view of the sky.

If the navigation system finds the satellites properly, this box clears, and changes to the **Disclaimer** screen. If within ten minutes the system fails to locate a sufficient number of satellites to locate your position, the following screen appears:

Something is interfering with the system's ability to acquire its location. Check the following:

- * The vehicle must be in an open area with a clear view of the sky.
- * Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).
- * Check GPS antenna cable connection.
- * Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

If the system is still unable to acquire a signal, follow the instructions on the screen, or contact your local dealer for assistance.

NOTE:

The average acquiring time is less than 10 minutes, but it can take as long as 45 minutes.

Map Matching

This part of the initialization matches the GPS coordinates found above with a road on the **map** screen. To perform this part of the procedure, ensure that the navigation system is displaying a map, and drive the vehicle on a mapped road (a road shown on the **map** screen). Do not enter a destination at this time.

When the name of the current road you are driving on appears at the bottom of the screen, the entire procedure is complete. Your system is now ready to use.

Although your navigation system is one of the most highly sophisticated pieces of equipment you will find in a modern automobile, you may find during its use, that it has certain limitations.

The system uses signals from the Global Positioning System (GPS) to aid in determining its current location. The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS that the navigation system must constantly compensate for. This can cause occasional positioning errors of up to several hundred feet.

For example, in urban areas where streets are close together, this could cause the system to show that you are traveling on a street that parallels the street you are actually on. The system will, under most circumstances, correct itself while you drive.

Also, depending on your current view of the sky and the position of the satellites, the elevation may be shown incorrectly. You may also notice some delay of the vehicle position icon at intersections; this is normal.

GPS Reception Issues

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station), and require an unobstructed view of sky. The signal can easily be interrupted or interfered with by the following:

- After-market metallic window tint above or to the sides of the GPS antenna (located under the dash)
- Cell phones, PDAs, or other electronic devices docked in a cradle or laying loose on the dash
- Radar detectors mounted on the dash
- Remote starters, or “hidden” vehicle location systems mounted near the navigation unit
- Other after-market audio electronic devices mounted near the navigation unit

- Trees, tall buildings, freeway overpasses, tunnels or overhead electrical power wires

Although the system will direct you to your desired destination, it may not always generate what you consider to be the most direct route. Try changing the method of routing. See *Changing the Routing Method* on page 48. You may also have Unverified Area Routing set to “OFF.” See *Unverified Area Routing* on page 87.

Additionally, the mapping database contains verified and unverified maps. See *Map Overview* on page 6. A Disclaimer screen will warn you if your route includes unverified streets. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. Exercise additional caution when driving in these unverified areas.

System Limitations

The destination icon shows the approximate location of the destination. This occurs because a city block can have as many as 100 possible addresses (for example, the 1400 block is followed by the 1500 block.) Since most cities use only a portion of the 100 possible addresses (for example, in the 1400 block, the addresses may only go up to 1425 before the 1500 block starts), the address 1425 will be shown a quarter of the way down the block by the system instead of at the end of the block where the destination is actually located.

You may find that the system occasionally “reboots.” This is indicated by the display returning to the globe screen. A reboot can be caused by a number of things, such as extreme temperatures or shock from bumpy roads. It does not necessarily indicate a problem that requires service. If this happens frequently, please see your dealer.

You will find that some points of interest (POI) may be missing when you search the database. This can be caused if at the time the database was gathered, the name was misspelled, the place was improperly categorized, or the POI change is not yet in the database. This means you may not find places listed that you know exist. This is also true for police agencies and hospitals. In outlying areas, facilities listed may not be the closest. Always check with local information sources if you need law enforcement or hospital services.

Every effort has been made to verify that the system's database was accurate at the time it was created. However, businesses do fail or move to new locations, and new businesses start in the old locations. For this reason, you may occasionally find "inaccurate" information when you select and drive to a point of interest (for example, a restaurant is now a jewelry store). The number of these inaccuracies increases the longer you go without an update.

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your DVD may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

Due to ongoing software and database improvements, navigation disc versions may change in the middle of a production year. The version shipped with your vehicle was the most recent available at the time of production, and is considered standard equipment for that vehicle. There is no free program to retrofit early production vehicles with the latest disc. For DVD ordering information, see page [108](#).

In addition, this database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Road, traffic or traffic facilities safety, or conditions

Database Limitations

- Weather conditions
- Special events
- Pavement characteristics or conditions
- Traffic congestion
- Travel time

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

Copyrights

- infoUSA-Data: Certain business data provided by infoUSA, Inc., Omaha, Nebraska, Copyright © 2006, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2006. All Rights Reserved.
- ZAGAT SURVEY: Copyright © [2006] Zagat Survey, LLC. All rights reserved.

Reporting Errors

Occasionally, you may encounter database errors.

- If the error pertains to freeways and main “verified” roads shown in black on the map, then report it either online at: <http://update.navteq.com/>, or to Honda Customer Services.
- If the error involves a light brown “unverified” road, then do not report it. These areas have not been verified, and are provided for reference only (see *Map Overview* on page 6).
- For errors in points of interest (POI), like a business that has changed their name, do not report them. Keep in mind that depending on when the data was collected, and when your DVD was purchased, the database can be out of date. The business may have not reported the change(s), or not be in the database at all. Update Navigation DVDs are available for purchase, usually in the fall of each year.

- If the error does not involve the database, such as if the vehicle position icon does not follow the road, screen error messages, or other GPS related errors, see *Frequently Asked Questions* on page 121, *System Limitations* on page 103, or *Troubleshooting* on page 128.

Honda Automobile Customer Service

Telephone: (800) 999-1009
Fax: (310) 783-3273

Mail:

Honda Navi

America Honda Motor Co., Inc.
Honda Customer Service
MS 500-2N-7A
1919 Torrance Blvd.
Torrance, CA 90501-2746

Visiting Your Dealer

We strive to make this manual as complete as possible and to answer all questions regarding operation of the system. Occasionally you may run into a specific issue that you cannot find in the book. You may save yourself a trip to the dealer by first consulting the following resources:

- The Troubleshooting section (see page 128)
- The Frequently Asked Questions (FAQs) section (see page 121)
- The navi FAQs found on the on-line DVD order site (see “Obtaining a Navigation Update DVD”)
- For detailed questions regarding Audio or other systems that interact with the navigation system, see the main vehicle Owner’s manual, or the Quick Start Guide

- Call Honda Customer Relations (see “Honda Automobile Customer Service”)
- For database or POI issues, follow the guidelines in the “Reporting Errors” section (see page 107)

If your question is still unanswered and you wish to visit the dealer, please be prepared to demonstrate the issue to the service advisor. This way, the service advisor can document the issue for the factory to allow more efficient troubleshooting. Some issues may at first seem random, but you may notice a pattern, like it only occurs when you enter some specific address, or when driving on a certain road, or just when it is cold. This information is very useful to the service advisor. Be patient, the tech may be unfamiliar with your specific issue.

Obtaining a Navigation Update DVD

Honda is continually expanding the scope of the navigation system. Upgraded software may be made available to navigation system owners periodically, usually in the fall of each year.

To purchase an updated DVD or a replacement DVD, call the Honda Navigation Disc Fulfillment Center at (888) 291-4675. You can also order on-line by going to www.honda.com and selecting “Honda Automobiles,” entering “navi” into the “Type a question” field, and following the links.

NOTE:


- *DVDs are not available at your dealer. However, the dealer may order a DVD for you as a courtesy. There is no program for free DVD updates.*
- *The DVD order line staff cannot answer technical questions regarding navigation operation, coverage, or POIs.*

Changing the DVD


NOTE:

The system's database is stored on a removable DVD. The system will not work without the DVD. Ensure the door remains closed at all times.

1. Remove the DVD while the ignition switch is in the Accessory (I) position or in the ON (II) position.
2. Locate the control unit. It is under the front of the driver's seat.
3. Push the **OPEN** button. An error message will display on the screen. This is normal.

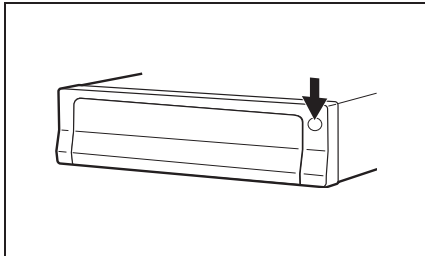

4. Push the Eject button. The DVD will automatically come out.

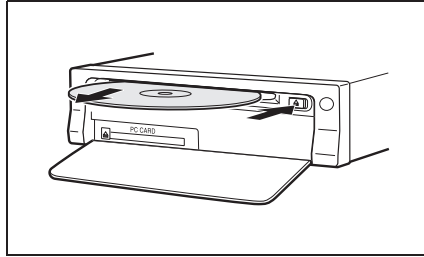

5. Pull the DVD straight out. Hold the DVD by the edges. Fingerprints, scratches, or other contamination on the playing surface can make the DVD unreadable.


To install the Navigation DVD, make sure the white label is facing up. Slide the DVD into the slot. The DVD is automatically pulled into the control unit. Make sure you close the door.

NOTE:

- The system will not play movies or other video/audio discs.
- Never "sneak preview" a newer white labeled DVD in the system unless you plan to keep it. The system cannot automatically "revert back" to a prior version DVD. If you must revert to a previous version DVD after loading a newer version see your dealer for assistance.
- If you see the error message "Navigation unit door is open..." close the door. The system will reboot. This is normal.

PC Card

A PC card is not supplied. The PC card slot is for factory use only. This slot cannot be used to play audio files.

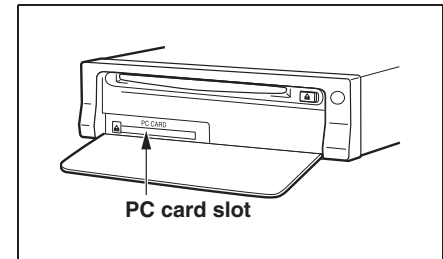

Coverage Areas

Map Coverage

The system provides map coverage for the following 48 US states, and southern Canada. The US map coverage consists of accurately mapped (verified) metropolitan areas (in the following list), and a less accurate (unverified) rural database. Canada coverage consists of major metropolitan areas, and major roads connecting the metropolitan areas within about 100 miles north of the U.S. border. If you need additional North Canada coverage, you may purchase the gray Canadian DVD (see *Obtaining a Navigation Update DVD* on page 108). See *Map Overview* on page 6 for a discussion of map coverage.

The cities and metropolitan areas in the following list are fully mapped. Only major streets, roads, and freeways have been verified outside these areas. If your route passes through these areas, routing may be limited in these areas, depending on your routing choices. See *Unverified Area Routing* on page 87.

If you desire additional map coverage information, contact Honda Customer Services or go to www.honda.com and select “Honda Automobiles,” enter “navi” into the “Type a question” field, and follow the links. Enter your vehicle model and model year, then select the state in which you want to check map coverage.

Operation in Hawaii and Alaska

Certain functions that rely on a satellite signal will not work correctly in Hawaii and Alaska. These functions include but are not limited to automatic clock updates and time zone adjustments.

U.S. Detailed Coverage Areas

Alabama

Birmingham/Tuscaloosa
Huntsville
Mobile
Montgomery

Arizona

Phoenix Metro
Sedona
Tucson

Arkansas

Fayetteville
Hot Springs
Little Rock

California

Bakersfield
Fresno
Los Angeles/San Diego Metro
Merced
Modesto
Sacramento Metro
Sacramento-Reno-Lake Tahoe-Yuba
San Francisco Bay (*approximately Monterey to Sonoma*) – including *Monterey County and Hollister*
San Luis Obispo
Stockton
Southern California Area

Colorado

Denver/Boulder/Colorado Springs/
Ski Resorts Metro area – *including*
Ft. Collins
Grand Junction

Connecticut

Bridgeport
Danbury
Hartford Metro
New Haven Metro
Norwalk
Stamford
The State of Connecticut: All roads
are verified in non-metro areas.

Delaware

Entire state – *including Dover,*
Wilmington Metro area, New Castle
County

Florida

Cape Canaveral/Cocoa Beach/
Titusville
Florida Keys
Fort Myers Metro area – *including*
Naples
Fort Pierce
Gainesville
Jacksonville Metro – *including St.*
Johns County
Miami/Fort Lauderdale/West Palm
Beach Metro
Orlando/Daytona Beach/Melbourne
area – *including Osceola County*
Pensacola
Tallahassee
Tampa Bay/St. Petersburg Metro –
including Pasco and Manatee
Counties
Vero Beach

Georgia

Athens
Atlanta Metro
Columbus
Augusta/Aiken Metro
Macon
Savannah

Idaho

Boise
Sun Valley Ski Resorts
Spokane-Coeur d'Alene

Illinois

Bloomington-Normal
Champaign
Charleston
Davenport-Rock Island-Moline
Chicago Metro (to Wisconsin border)
– *including Lake County, IN and*
Dekalb County, IL
East St. Louis Metro
Moline
Peoria
Quincy
Rock Island
Rockford
Springfield
St. Louis

Coverage Areas

Indiana

Evansville
Fort Wayne
Gary/Hammond Metro
Indianapolis Metro
Kokomo Metro
Northwest Indiana
South Bend/Elkhart/Goshen

Iowa

Cedar Rapids
Davenport – Rock Island-Moline
Des Moines
Iowa City
Omaha-Lincoln

Kansas

Topeka
Kansas City/Leavenworth Metro
Wichita

Kentucky

Lexington
Louisville
Cincinnati

Louisiana

Baton Rouge
New Orleans Metro
Shreveport

Maine

Bangor
Bar Harbor/Acadia National Park
Portland/Lewiston/Auburn

Maryland

Cumberland
Baltimore/Washington D.C. Metro –
*including Charles and Carroll
Counties*
Ocean City
The State of Maryland: Most roads
are verified in non-metro areas.

Massachusetts

Boston/Cape Cod Metro
Cape Cod
Springfield Metro area
*Complete coverage of all cities in
Barnstable, Berkshire, Bristol, Essex,
Hampshire, Hampden, Middlesex,
Norfolk, Plymouth, Suffolk, and
Worcester Counties*
The State of Massachusetts: All roads
are verified in non-metro areas.

Michigan

Detroit Metro area – *including Ann
Arbor, Pontiac, Flint, Clinton, Eaton,
and Monroe Counties*
Grand Rapids Metro
Kalamazoo
Lansing Metro
Northern Michigan Resort Area –
*including Traverse City, Elk Rapids,
Petoskey, Charlevoix, Boyne City,
and Harbor Springs*
Saginaw-Midland
Southeast Michigan

Minnesota

Minneapolis/St. Paul Metro –
*including cities in Anoka Scott and
Carver Counties*
Fargo-Moorhead
Rochester

Mississippi

Biloxi/Gulfport
Jackson

Missouri

Branson
Columbia
Kansas City (KS-MO) Metro –
including Platte County
Springfield
St Louis Metro (IL-MO) – *including
additional cities in Jefferson County*

Montana

Billings

Nebraska

Lincoln (Lancaster County)
Omaha

Nevada

Las Vegas Metro
Reno/Lake Tahoe
Sacramento-Reno-Lake Tahoe-Yuba

New Hampshire

Manchester
Nashua-Portsmouth

New Jersey

Northern New Jersey
Southern New Jersey – *including
Atlantic City/Cape May/Cumberland
Metro*
Camden Metro
Newark Metro
Trenton Metro – *including Ocean and
Hunterdon Counties*

New Mexico

Albuquerque
Santa Fe
Taos Ski Resorts

New York

The Adirondack
Binghamton
Buffalo – *including Erie and Niagara
Counties*
Cooperstown
Eastern New York – *including New
York City Metro, Albany, Glen Falls,
Schenectady, Troy*
Ithaca
Lake Placid
Oneonta
Rochester – *including cities in
Monroe County*
Syracuse
Utica

North Carolina

Asheville
Charlotte Metro
Fayetteville
Hickory
Morgantown
Jacksonville
North Carolina Metro
Raleigh-Durham Metro
Wilmington
Winston-Salem/Greensboro Metro

North Dakota

Fargo Metro
Fargo-Moorhead

Ohio

Akron
Columbus/Marysville Metro
Cincinnati Metro – *including Butler
County*
Cleveland Metro – *including Geauga
County*
Dayton
Toledo (*Lucas County*)
Youngstown

Oklahoma

Oklahoma City
Tulsa

Coverage Areas

Oregon

Bend
Eugene
Medford
Portland/Salem Metro

Pennsylvania

Allentown
Erie
Gettysburg
Harrisburg
Lancaster
Philadelphia Metro
Pittsburgh Metro – *including Washington County*
Reading
State College/University Park
Southern Pennsylvania
Wilkes-Barre/Scranton
Williamsport
York

Rhode Island

Newport
Providence Metro
The State of Rhode Island: All roads are verified in non-metro areas.

South Carolina

Augusta-Aiken
Beaufort
Charleston
Charlotte
Columbia
Greenville/Spartanburg – *including additional cities in Greenville and Spartanburg Counties*
Myrtle Beach Metro
Rock Hill Metro

South Dakota

Sioux Falls

Tennessee

Chattanooga
Johnson City/Kingsport/Bristol
Knoxville/Farragut Metro
Memphis Metro – *including Desoto and Tunica Counties*
Nashville

Texas

Austin Metro
Big Bend
Bryan/College Station
Corpus Christi
Dallas/Fort Worth Metro-Sherman – *including additional cities in Grayson County*
El Paso
Houston Metro – *including additional cities in Galveston County*
Longview
Lubbock
Midland/Odessa Metro
San Antonio Metro
South Padre Island

Utah

Moab
Ogden
Park City
Salt Lake City Metro
Salt Lake City -Provo

Vermont

Burlington
Montpelier
The State of Vermont: Most roads are verified in non-metro areas.

Virginia

Washington D.C. detailed area – including Alexandria, Arlington, Fairfax, Falls Church, Fauquier County, Fredericksburg City, Manassas, and additional cities in Charlottesville-U of VA
 Danville
 Loudoun and Prince William Counties
 Johnson City-Kingsport Bristol Lynchburg
 Richmond Metro
 Roanoke
 Shenandoah National Park
 Williamsburg/Norfolk/Virginia Beach Metro – including Charles City, Hopewell, Kent, and Prince George Counties
 Winchester

Washington

Bellingham
 Portland-Salem
 Seattle/Tacoma/Olympia Metro – including Island County
 Spokane-Coeur d’Alene
 Tri-Cities
 Whatcom
Point Roberts (community)
 Yakima

West Virginia

Charleston
 Harper’s Ferry Metro

Wisconsin

Appleton
 Beloit
 Green Bay
 Janesville
 Kenosha County
 Madison
 Lake Geneva
 Milwaukee Metro – including Milwaukee, Ozaukee, Washington, and Waukesha Counties
 Neenah
 Oshkosh
 Racine
 Sheboygan
 Wausau

Wyoming

Cheyenne
 Jackson Ski Resorts

Canada Detailed Coverage Areas

NOTE:

The blue colored city names are not included in the USA South DVD. To obtain coverage for cities listed in blue, you may purchase the gray Canada DVD (see page 98, Obtaining a Navigation DVD). DVDs are not available at your dealer.

ALBERTA

Alberta
 Airdrie
 Beaumont
 Banff
 Calmar
 Canmore
 Devon
 Calgary
 Cochrane
 Crossfield
 Chestermere
 Edmonton
 Fort Saskatchewan
 Leduc
 Lethbridge
 Medicine Hat
 Spruce Grove

Coverage Areas

St. Albert
Stony Plain
Strathcona County

BRITISH COLUMBIA

Greater Vancouver

Anmore
Belcarra
Bowen Island
Burnaby
Coquitlam
Delta
Langley
Langley Twp
Lions Bay
Maple Ridge
New Westminster
North Vancouver
North Vancouver District
Pitt Meadows
Port Coquitlam
Port Moody
Richmond
Surrey
Squamish
Vancouver
West Vancouver
White Rock

Whatcom, WA

Point Roberts (Community) *also listed in USA Washington St Cities*

Fraser Valley

Abbotsford
Chilliwack
Mission

Central Okanagan

Kelowna
Peachland

Okanagan-Similkamen

Penticton
Summerland

Victoria

Capital

Central Saanich
Colwood
Esquimalt
Highlands
Langford
Metchosin
North Saanich
Oak Bay
Saanich
Sidney
Sooke
Victoria
View Royal

Squamish-Lillooet

Whistler
Kamloops

MANITOBA

East St Paul
Headingley
West St Paul
Winnipeg

NOVA SCOTIA

Halifax (*partial*)

ONTARIO

Barrie
Kingston
London
Ottawa-Gatineau
Stratford

Dufferin

Orangeville

Durham

Ajax
Brock
Clarington
Oshawa
Pickering
Scugog
Uxbridge
Whitby

Halton

Burlington
Halton Mills
Milton
Oakville

Hamilton

Hamilton

Muskoka

Bracebridge
Georgian Bay
Gravenhurst
Huntsville
Lake of Bays
Muskoka Lakes

Niagara

Fort Erie
Grimsby
Lincoln
Niagara-on-the-Lake
Niagara Falls
Pelham
Port Colborne
St Catharines
Thorold
Wainfleet
Welland
West Lincoln

Peel

Brampton
Caledon
Mississauga

Simcoe

Adjala-Tosorontio
Barrie
Bradford West Gwillimbury
Clearview
Essa
Innisfil
Midland
New Tecumseth
Orillia
Oro-Medonte
Penetanguishene
Ramara
Severn
Springwater
Tay
Tiny
Wasaga Beach

Toronto

Toronto

Waterloo

Cambridge
Kitchener
North Dumfries
Waterloo

Wellington

Guelph
Puslinch

York

Aurora
Ease Gwillimbury
Georgina
King
Markham
Newmarket
Richmond Hill
Vaughan
Whitchurch-Stouffville

Windsor

Essex

Lasalle
Tecumseh
Windsor

Inter-Town (partial) Coverage

Counties/Districts/Regional

Municipalities

Brant
Bruce
Chatham-Kent
Dufferin
Elgin
Essex
Frontenac

Coverage Areas

Gray
Haldimand-Norfolk
Haliburton
Hastings
Huron
Kawartha Lakes
Lambton
Lanark
Leeds and Granville
Lennox and Addington
Middlesex
Muskoka
Northumberland
Oxford
Perth
Peterborough
Prescott and Russell
Prince Edward
Simcoe
Stormont, Dundas and Glengarry
Waterloo
Wellington

QUÉBEC

Municipalités Régionales de Comte

Beauharnois-Salaberry
Brome-Missisquoi
Coaticook
La Haute-Yamaska
La Vallée-du-Richelieu
Le Haut-Richelieu
Le Haut-St-Laurent
Les Jardins-de-Napierville
Memphremagog
Roussillon
Rouville
Vaudreuil-Soulanges

Montreal

Deux-Montagnes

Deux-Montagnes
Oka
Oka Paroisse
Pointe-Calumet
St-Eustache
St-Joseph-du-Lac
Ste-Marthe-sur-le-Lac

L'assomption

Charlemagne
Le Gardeur
Repentigny

La Rivière-du-Nord

Prévost
St-Colomban
St-Hippolyte
St-Jérôme
Ste-Sophie

La Vallée-du-Richelieu

Beloeil
Caringnan
Chambly
Longueuil
McMasterville
Mont-St-Hilaire
Otterburn Park
St-Basile-le-Grand
St-Mathieu-de-Beloeil

LaJemmerais

Longueuil
Ste-Julie

Laval

Laval

Les Laurentides

Amherst
Arundel
Barkmere
Brèbeuf
Huberdeau
La Conception
La Minerve
Labelle
Lac-Supérieur
Lantier
Mont-Tremblant
Montcalm
St-Faustin-Lac--Carrè
Ste-Agathe-des-Monts
Ste-Lucie-des-Laurentides
Val-David
Val-des-Lacs
Val-Morin

Les Moulins

Lachenaie
Mascouche
Terrebonne

Les Pays-D'en-Haut

Lac-des-Seize-Îles
Morin-Heights
Piedmont
Ste-Adolphe-d'Howard
St-Sauveur
Ste-Adèle
Ste-Anne-des-Lacs
Ste-Marguerite-Estèrel
Wentworth-Nord

Longueuil

Longueuil

Montreal

Montreal
Rousillon
Candiac
Chateauguay
Delson
La Prairie
Lery
Ste-Catherine
St-Constant

Therese-de-Blainville

Blainville
Boisbriand
Bois-des-Filion
Lorraine
Rosemere
Ste-Therese

Vaudreuil-Soulanges

Hudson
L'Ile-Cadieux
L'Ile-Perrot
Notre-Dame-de-l'Ile-Perrot
Pincourt
St-Lazare
Terrasse-Vaudreuil
Vaudreuil-Dorion
Vaudreuil-sur-le-Lac

Québec

Québec

SASKATCHEWAN

Regina
Saskatoon

Coverage Areas

CANADA CONNECTOR ROADS

The Cross-Canada Connector Road allows for travel between the provinces of British Columbia and Quebec in DCA 11. Major metropolitan city Points of interest are also included.

Road Inclusion

Roads in the province of British Columbia

Hwy-1/Trans Canada Hwy from Alberta/BC boundary to Vancouver detailed city.
Hwy-3/Crowsnest Hwy from Hwy-1/Trans Canada Hwy (Hope) to Hwy-5/Coquihalla Hwy (Hope)
Hwy-5/Coquihalla Hwy (in Hope) to Hwy-1/Trans Canada Hwy (in Kamloops)
Hwy-99 between Vancouver and Whistler

Roads in the province of Alberta

Hwy-1/Trans Canada Hwy across whole province
Hwy-1A from Cochrane to Canmore
Hwy-1X from Hwy-1A to Hwy-1/Trans Canada Hwy
Morley Road from Hwy-1/Trans Canada Hwy
Hwy-3/Crowsnest Hwy (at Medicine Hat) to Lethbridge
Hwy-4 (at Lethbridge) to 1-15 (US border)
Hwy-36 between Hwy-3 (in Taber) and Hwy-4 (in Warner)
Hwy-3/Crowsnest Hwy (in Lethbridge) to Hwy-2 (in Fort Macleod)
Hwy-2 (in Fort Macleod) to Hwy-1/Trans Canada Hwy (in Calgary)

Roads in the province of Saskatchewan

Hwy-1/Trans Canada Hwy across whole province

Roads in the province of Manitoba:

Hwy-1/Trans Canada Hwy across whole province
Hwy-100/Trans Canada Hwy in Winnipeg (partial beltway)
Hwy-75 from Hwy-100/Trans Canada Hwy (Winnipeg) south to link with 1-29 (US border)

Roads in the province of Ontario

Hwy-69/Trans Canada Hwy from Muskoka district to Sudbury
Hwy-17/Trans Canada Hwy from Ottawa Detailed Area Coverage to Manitoba border
Hwy-17B at Sault Ste Marie to link with 1-75 (US border)
Hwy-61 from Hwy-17 at Thunder Bay to link with US-61 (US border)
Hwy-11 from Muskoka district to North Bay
Hwy-60 and Hwy-127 in Nipissing County

Map, and Features, Voice Operation, Entering Addresses

| Problem | Solution |
|---|---|
| Why does the Disclaimer screen need to be displayed every time I start the car? I am the only driver. | The Disclaimer screen reminds you and your guest drivers to always operate the navigation system in a safe manner. |
| The Setup or Information screen has “grayed out” items that I cannot select. Why? | You need to select OK on the Disclaimer screen to view these items. See <i>System Function Diagram</i> on page 22. |
| I tried entering an address, but the city or street could not be found. Is there any other way to route to the location? | Some cities are lumped in with a major metro area Try entering the street first. In rural “unverified” areas or new subdivisions, streets may be missing, or only partially numbered. Try selecting the destination directly from the map. See <i>By Map Input</i> on page 39. |
| When I enter an address, some letters become grayed out. Is this normal? | Yes, as you enter each letter in an address or a point of interest (POI), the system looks in the database to see what letters are possible and “grays out” letters that do not apply. |
| How do I delete Personal Address, Previous Destinations, or the Home Address? | This is done in Setup, under “Personal Information.” See page 80. |
| I cannot hear the navigation system voice. | 1) Ensure that Volume in the Setup screen (first) is not Off . See page 77. 2) Go to “Basic Settings” in the Setup screen (second), and set Voice Recognition Feedback to On . See page 96. |
| The voice control system is having difficulty recognizing my Voice commands. | Ensure that the vents are not blowing on the microphone on the ceiling, place your hand over the microphone; if you feel any airflow, adjust the vents. Ensure the vehicle is as quiet as possible, and that you are using the correct command when speaking (See <i>Improving Voice Recognition</i> on page 14). Say “Help” at any screen to see a list of the applicable voice commands. If the system cannot recognize your command because of background noise, speak louder. |
| When the system pronounces the street name in the guidance command, or reads the destination address it sounds strange. What causes this? | The basic guidance phrase uses a studio-recorded voice, but the street name is pronounced by the system using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times. |

Frequently Asked Questions

| Problem | Solution |
|--|---|
| When I drive at night, the screen is bright and will not switch to the night display mode. Why? | The system thinks it's in Day display mode. Verify the following: The display mode in Setup is set to Auto , the dash brightness is not set to maximum (must adjust with the headlights on), and Map Color in Setup is set to Black for Night. See <i>Display</i> on page 78. |
| The daytime map screen is dark like the night display mode, and it is hard to see. Why? | Verify the following: The display mode in Setup is set to Auto , and Map Color in Setup is set to White for Day. See <i>Display</i> on page 78. |
| During the day, I turned on the lights because it started to rain, but the screen went dark. How can I make it still display day mode? | Adjust the dash brightness (with the headlights on) to full bright. Remember to set it back to a medium setting, or at night, the screen will be bright. See <i>Display</i> on page 78. |
| How can I input my destination using map coordinates? | The navigation system was not designed for this. However, you can view the coordinates of an address by touching the vehicle position icon on the map. See <i>Map Screen Legend</i> on page 52. |
| How do I change or remove my PIN? | Go to "Personal Information" in the Setup screen (second), and select PIN Number . Select User 1 or User 2 and enter your existing PIN. You then have the choice to change or remove the PIN. See page 84. |
| I forget the PIN for Home, or the PIN for personal addresses (User 1 or User 2). How do I reset it? | PINs are optional. See information regarding PINs on page 84. Your dealer can reset the PIN for you. |
| CALL is not available on the Calculate route to screen. Why? | This function is available only for the Touring model. If your vehicle is the Touring model, your phone is not "paired" to the HFL, or if your phone is "paired," it is in use; press HFL BACK button. |

Guidance, Routing

| Problem | Solution |
|---|---|
| The navi does not route me the same way I would go, or the way some other mapping program displays. Why is this? | The navigation system attempts to generate the optimum route. See <i>Changing the Routing Method</i> on page 48. |
| Why is the street I'm on not shown on the map? It has been here for more than a year. | The mapping database is constantly undergoing revision. See page 110 for ways to obtain the latest detailed coverage information. |
| The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing. | <ul style="list-style-type: none"> • The GPS antenna (located under the center of the dash) may be blocked by personal items. For best reception, remove items from the dash, such as radar detectors, cell phones, or loose articles. • Metallic tinting or other after-market devices can interfere with the GPS reception. Please see your dealer. Also see <i>System Limitations</i> on page 103. |
| I entered a destination, but the blue highlighted route and voice guidance stopped, or turned into a blue/purple dashed line before I got to my destination. Why is this? | Your route has entered an unverified area. See <i>Unverified Area Routing</i> on page 87. |
| The map rotates while I make a turns, How can I stop this? | Select the "North-up" map orientation by voice, or by touching the map orientation icon on the map screen. See <i>Map Orientation</i> on page 57. |
| Sometimes I can not select between the North-up, and Heading-up map orientations, why is this? | The "Heading-up" map orientation can only be shown in the lower scales (1/20 - 1 mile scales). See <i>Map Scale</i> on page 56. |
| While driving to my destination, the "time to go" display sometimes increases even though I am getting closer. | The "Time to go" is based on actual road speeds. However if your speed slows down when you encounter slower traffic, the system updates the "Time to go" based of your actual speed to give you a better estimate of arrival time. |
| The vehicle position icon on the map "lags" a short distance behind especially when I arrive at an intersection. Is there anything wrong? | No, when at an intersection, the system is unaware of the width of the intersecting road. Large differences in vehicle position can indicate a temporary loss of the GPS signal. See <i>GPS Reception Issues</i> on page 103. |

Frequently Asked Questions

| Problem | Solution |
|--|--|
| While I drive, my screen shows white dots (“breadcrumbs”) on it. What do they mean? | These are called “breadcrumbs.” If you drive more than 1/2 mile from mapped roads, the off-road tracking feature begins to function. See <i>Off-road Tracking</i> on page 62 and 94. |
| How can I get rid of the white dots (“breadcrumbs”) from my screen? | Go to “Vehicle” in the Setup screen (second), and set Off-road Tracking to Off , then return to the map. See page 94. |
| A road that I selected to avoid is being used when routing. What is wrong? | When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection. See page 91. |
| When I arrive at my destination, the “bulls-eye” is shown at a different location on the street. Why? | The system calculates the “bulls-eye” location based on the street address range allocated for that street. See <i>Destination Icon</i> on page 58 for an example. |
| My elevation (shown when I touch the vehicle position icon) seems to fluctuate even though my elevation has not changed. | This is normal, and due to errors in satellite position. The elevation can vary +/- 100 feet. See <i>System Limitations</i> on page 103. |
| My elevation is missing on the “current position” screen. Why? | If the GPS antenna cannot receive at least four satellites, the elevation is not displayed. Try moving the vehicle into an open area. If the elevation is zero, or below sea level, the elevation is also not displayed. |

Ordering a Navi DVD, Coverage, Map Errors, Limitations

| Problem | Solution |
|---|--|
| I want to buy a new DVD. How do I purchase one? | You cannot obtain a new DVD from the dealer. See <i>Obtaining a Navigation Update DVD</i> on page 108. |
| I want to order a DVD. How can I determine the DVD version in my navigation system? | The version is on the label of your DVD. It starts with “Ver:.” See <i>Changing the DVD</i> on page 109. |
| I got a Navi DVD from a “friend,” but it does not work. Why? | Your vehicle was designed to use a white DVD. DVDs with different colored labels, or from different manufacturers, will not operate correctly. Always obtain DVDs from the DVD order desk. See page 108. |
| When is my city going to become part of a fully verified detailed coverage area? | The mapping database vendor is constantly revising map coverage. See page 108 for ways to obtain the latest detailed coverage information. |
| Will the navigation system work outside North America? | The navigation system contains maps only for the lower 48 states, and portions of southern Canada. The system will not work in Mexico, Hawaii, Alaska, or overseas. Canada coverage is limited. See <i>Map Coverage</i> on page 110. |
| Can I play video DVDs in my navigation system? | No. The navigation system is designed only to read the white DVD provided with your vehicle. Map discs for other vehicle manufacturers, or PC map programs will not work. |
| I found some errors in the database. How do I report them? | Minor errors are bound to occur in a large database. If you encounter major errors, you can report them following the instructions on page 107. |

Frequently Asked Questions

Display, Accessories

| Problem | Solution |
|---|---|
| The display appears dim when starting the car in real cold weather. Is there a problem? | No, this is normal, and will become brighter after a few minutes. |

Rear Camera

| Problem | Solution |
|--|---|
| When I shift gears, the rear camera image is delayed. | When shifting into or out of reverse, you may experience delays when the screen image switches between the navi screen and the rear camera image. This is normal. |
| The rear camera image is too dark or too bright, how do I adjust the brightness. | While the camera image is displayed, use the Zoom In/Zoom Out controls to adjust the brightness. This adjustment does not affect the Setup screen brightness adjustments. |

Miscellaneous Other Questions

| Problem | Solution |
|--|---|
| My clock frequently changes forward and backward by one hour. Why is this? | The clock is being automatically set based on your GPS location. If you live and work on the boundary between two time zones, you can turn off this feature. See page 98 . |
| When driving near a time zone border, the time changes even though I am not near the time zone. Why is this? | The time zone borders are only approximated in the system. Depending on the geography of the time zone boundary, the switch to a different zone can be erratic. See page 98 . |
| My state does not observe daylight savings time. How do I turn off this feature? | You can turn off this feature. See page 97 . |

Frequently Asked Questions

| Problem | Solution |
|--|--|
| Daylight savings time occurred, but the navigation system did not change time even though Setup shows “Auto Daylight Saving Time” is “On.” | Go to the Clock adjustment screen in Setup and select DST Selection . Ensure that the correct DST schedule is selected. For more information, see <i>Clock Adjustment</i> on page 97. |
| The navigation system automatic daylight time feature is not switching the navigation system clock on the correct dates. Why is this? | <ol style="list-style-type: none"> 1) Go to the Clock adjustment screen in Setup and ensure that Auto Daylight Saving Time is On. 2) The navigation system is designed to switch to daylight savings time according to the months selected in the DST schedule selection screen. Ensure that the appropriate schedule is selected. For more information, see <i>Clock Adjustment</i> on page 97. |
| The navigation system clock switched by one hour for no apparent reason. What can cause this? | <ol style="list-style-type: none"> 1) You may be driving near a time zone boundary (see <i>Auto Time Zone by GPS</i> on page 98). 2) The navigation system does not, or incorrectly switches between standard and Daylight Savings Time. Set Auto Daylight Saving Time to On on the Clock adjustment screen in Setup, and ensure that the correct month switching schedule is chosen on the DST schedule selection screen. See page 97 for more information. |
| My battery was disconnected, or went dead, and the navigation system is asking for a code. Where do I find this code? | There should have been a card in the glove box with the anti-theft code for the navigation/audio system. This card contains the 4-digit security code and serial number. If you cannot find it, your dealer can help you out. |
| I speak a language other than English. When will other languages be available for the navigation system? | This is being considered as a future enhancement. |

Troubleshooting

| Screen Error Message | Solution |
|---|---|
| Navigation system is unable to acquire a proper GPS signal. | Make sure there is nothing on the dash blocking the GPS antenna (after-market metallic window tinting or after-market devices placed on the dash, like radar detectors, cell phones, or loose items). If the dashboard is clear of objects, move the vehicle to an open space away from tall buildings, trees, etc. |
| Navigation unit door is open or No DVD disc is inserted. Please check system. | Make sure that the navigation DVD disc is inserted with the label side up and the navigation unit door is fully snapped closed (see page 109). |
| No DVD disc. Please check system. | Check that the navigation DVD disc is inserted with the label side up (see page 109). If the problem persists, see your dealer. |
| Display temp is too high. System will shut down until display cools down. | This message will appear briefly when the display temperature is too high, and then the display will turn off until the temperature cools down. The system will turn back on when the display cools down. |
| DVD disc reading error (unformatted). Please consult your dealer. | Check the DVD disc surface for deep scratches or other damage. Make sure you are using a Navigation DVD (white colored label). The system cannot read other mapping databases or video DVDs. If the problem persists, see your dealer. |
| Route has not been completed. Please try again from a different location. | This message will appear when you are routing to or from a place (new area) that is not in the database. Try planning a different route to or from a different location.* |
| No alternate route found. Original route will be followed. | No alternative route method was found. The original route method will be used.* Ensure that a road name is displayed at the bottom of the map. |
| This destination cannot be found in database. | The destination was not found in the database. Try another destination nearby, or select the destination with the joystick.* |
| Vehicle is out of the database coverage area. | The vehicle is located outside of the mapped area provided by your navigation DVD. See page 110 for map coverage. |

* If the error persists, or is shown for a wide area, see your dealer.

Glossary

The following is a glossary of terms pertaining to the voice recognition navigation system.

Avoid Area - Areas you wish to avoid can be entered into the system, and will be avoided while routing.

Breadcrumbs - Off road tracking dots that can be followed on the map to retrace your route back to a mapped (digitized) road. This function can be turned on/off in **Setup** screen (second).

Database - This consists of the map data, and the POI (Points Of Interest) data stored on the DVD.

DCA - Detailed Coverage Area. The main metropolitan areas in the lower 48 states, and southern Canada are mapped to this level. See page [110](#) for a list of these areas.

Digitized Road - A road that appears on the navigation screen. The road name will appear at the bottom of the navigation screen. If the user drives “off road,” the navigation system will display “breadcrumbs,” depending on how far you drive from a mapped road.

Disclaimer Screen - Screen containing cautionary information. It is meant to be read carefully and acknowledged by the customer when using the navigation system.

DVD or DVD-ROM - Digital Versatile Disc. The navigation program and database resides on this disc. For information on how to order a replacement or update DVD, see page [108](#).

FAQ - Frequently Asked Questions. See page [121](#) for a list of the customer FAQs, and troubleshooting information.

GPS - Global Positioning System. A network of 24 satellites in orbit around the earth. The navigation system can simultaneously receive signals from up to 12 satellites to accurately position the vehicle on the map.

GPS Antenna - Located in the center of the dash. Electronic items operating in this general location can interfere with the GPS signal.

HFL - Bluetooth® HandsFreeLink®. Only the Touring model is equipped with this feature, which uses Bluetooth technology as a wireless link between the vehicle and your Bluetooth compatible cell phone.

Icon - Symbol representing Points of Interest (POI) that can be displayed on the map.

Initialization - This refers to the period needed to reacquire the GPS satellite orbital information whenever the navigation system power has been disconnected. This can take 10 to 45 minutes with the vehicle out in an open area.

Glossary

LCD - Liquid Crystal Display. The navigation screen.

Map Matching - The received GPS information allows the navigation system to position the vehicle on the map. Map matching has occurred if the map screen is displaying the current street name in the bottom-shaded area.

Mic - Abbreviation for the microphone used for receiving voice commands. It is located near the map light in the ceiling.

MP3 - A music file format that can be played from a CD-R.

MW - Maneuver Window. While on-route to a destination, this window displays information about the next maneuver.

Navi - Abbreviation for the navigation system.

North Pointer - The map symbol showing the map orientation (see page 57).

Off Route - This occurs when the user leaves mapped roads. Off road tracking dots (“breadcrumbs”) are displayed if the option is enabled in the Setup screen. The user can use them to return to a mapped road. The bottom of the navigation screen will say “Not on a digitized road”

Outlying Areas - These are rural areas that typically have only their main roads mapped. All other roads are shown in light brown for reference only, since they have not been verified.

PIN - Personal Identification Number. A random 4-digit number created by the customer to protect personal information.

POI - Point Of Interest. These are the businesses, schools etc. found under the **Places** option on the Enter destination by screen. See page 33.

Polygon - Colored areas on the map screen denoting parks, schools etc. See *Map Screen Legend* “Map Features” for a list of the assigned colors. See page 52.

QWERTY - Keyboard layout resembling the typewriter keys. The keyboard layout can be changed to an alphabetical layout in the Setup, Basic Settings screen.

Reminder - Automatic “pop-up” Calendar message. See *Calendar* on page 72.

RES - Rear Entertainment System. (Factory installed)

Security Code - Code needed to activate the navigation system or audio unit. See *Entering the Security Code* on page 101.

Touch Sensor - The touch sensor on the front of the LCD consists of a touch sensitive resistive membrane with an infinite number of possible touch locations. The sensing locations are confined to a grid of 20 vertical and 10 horizontal touch locations.

Unverified Streets - These streets have not been verified for turn restrictions, one-way, etc. They are shown in light brown on the map. Unverified streets may be missing from the map, shown in the wrong location, or have an incorrect name or address range.

Vehicle Speed Sensor - Provides speed signal to the navigation system for moving the VP icon on the map.

Verified Streets - These streets consist of the detailed metropolitan coverage areas, and all other inter-town connection roads. These roads are shown in black on the map.

Voice Control - See VR.

VP - Vehicle Position. When in map mode, this circular icon shows the vehicle position on the map. Touch this icon to show the latitude, longitude, and elevation of your current position.

VR - Voice Recognition. This allows voice control of many of the navigation functions. The hardware consists of the microphone, voice control switch (**NAVI TALK/NAVI BACK** buttons), and the front speakers.

Waypoint - A temporary destination you may enter on route (e.g., a gas station, ATM, etc.). See page 65.

WMA - A Windows media audio file that can be played from a CD-R.

Yaw Rate Sensor - Senses when the vehicle makes a turn, which makes the VP change direction on the map as you turn.

Zagat Ratings - Restaurant ratings information provided by Zagat Survey. See the Information screen on page 75 for an explanation of the ratings.

Voice Command Index

Global Commands

The system accepts these commands on any screen.

Help (reads list of the commands for the displayed screen)

Setup (displays **Setup** screen (first))

Display map (displays the **map** screen)

Display menu (displays the **Enter destination by screen**)

Display audio screen

Information (displays the **Information** screen)

Back (to previous screen, same as **CANCEL** or **NAVI BACK** button)

Cancel (cancels current activity)

What time is it?

The “Voice Command Help” option on the **Information** screen lists many of the following controls. To avoid distraction while you are driving, the system can read the commands for you.

The commands are accessible at any time while driving and can be read to you so that you do not need to memorize all of them.

Navigation General Commands

The system accepts these commands on a **map/guidance** screen.

Display menu (if on route, displays the **Change route by screen**)

Display navigation (if on route, displays the **Change route by screen**)

Display map

Display map guide (same function as the **MAP/GUIDE** button)

Display setup (or just *Setup*)

Display information (or just *Information*)

Display audio screen

Cancel

Backward (or just *Back*)

What time is it?

Repeat voice (repeats the screen prompt for most screens)

Help (displays the voice command allowed for the screen you are viewing)

Voice command help

How long to the destination? (when on route, tells the time to destination)

How far to the destination? (when on route, tells the distance to destination)

Display destination map (when on route, shows the map of the destination)

Display entire route (when on route, adjusts the map scale so that the entire route is displayed)

Register the current location (puts current location in the personal **Address Book**)

Navigation Display Commands

The system accepts these commands on a map/guidance screen.

Display current location (shows current latitude, longitude, and elevation)

Display north up

Display heading up

Display zoom in

Display zoom out

Display: (the selected scale)

1/20 mile (80 m) scale

1/8 mile (200 m) scale

1/4 mile (400 m) scale

1/2 mile (800 m) scale

1 mile (1600 m) scale

2 mile (3 km) scale

5 mile (8 km) scale

15 mile (24 km) scale

50 mile (80 km) scale

150 mile (240 km) scale

350 mile (560 km) scale

Display: (display the selected icon on the screen)

ATM

gas station

restaurant

post office

grocery store

lodging (hotel, motel)

parking garage

parking lot

school

hospital

one way

freeway exit information

Hide: (hide the selected icon from the screen)

ATM

gas station

restaurant

post office

grocery store

lodging (hotel, motel)

parking garage

parking lot

school

hospital

one way

freeway exit information

Max zoom in

Max zoom out

Go home

Voice Command Index

Find Place Commands

The system accepts these commands on a map/guidance screen.

Find nearest: (find the nearest selection)

ACURA dealers

HONDA dealers

gas station

hydrogen station

ATM

bank

post office

hospital

police station

hotel

tourist attraction

restaurant (all restaurant types)

American restaurant

Chinese restaurant

fast food

Italian restaurant

Japanese restaurant

Mexican restaurant

seafood restaurant

shopping (all shopping types)

parking garage

parking lot

other car dealers

auto parts & electronics

auto repair & maintenance

car wash & detailing

motorcycle dealers

roadside assistance

check cashing

currency exchange

veterinarian

Zagat restaurant

Korean restaurant

California restaurant

continental restaurant

French restaurant

German restaurant

Greek restaurant

Indian restaurant

Thai restaurant

vegetarian restaurant

Vietnamese restaurant

other restaurant

business

civic center

convention center

library

school

city hall

court house

higher education

amusement park

golf course

historical monument

marina

movie theater

museum

park

performing arts

sports complex

bed & breakfast

accessory store

book store

clothing store

grocery store

home improvement store

mall

office supply store

pharmacy

pet food store

sewing store

shoe store

sporting goods store

toy store
airport
automobile club
bus station
camping
commuter rail station
ferry terminal
named place
park & ride
rental car agency
resort
rest area
ski area
tourist information
train station
travel agency
truck stop

Climate Control Commands

The system accepts these commands on most screens.

Climate control full automatic
(controls temperature to 72 degrees F)

Climate control automatic
(controls temperature to your selection)

Climate control off

*Air conditioner on**

*Air conditioner off**

*Climate control defrost on**

*Climate control defrost off**

*Rear defrost on**

*Rear defrost off**

Climate control fresh air

Climate control recirculate

Climate control vent

Climate control bi-level (Vent and floor)

Climate control floor

Climate control floor and defrost

Fan speed up

Fan speed down

Fan speed # (#:1-7)

Front climate control automatic

Front climate control off

Rear climate control automatic

Rear climate control off

Rear climate control vent

Rear climate control bi-level

Rear climate control floor

Rear fan speed up

Rear fan speed down

Rear fan speed # (#:1-5)

- * Repeating these commands switches (toggles) the function between On and Off. Because of this, the action that occurs may not match the command you speak.

Voice Command Index

Temperature Voice Commands

The system accepts these commands on most screens.

Temperature # degrees (#: 57-87 degrees F)

Temperature up

Temperature down

Temperature max hot

Temperature max cold

Temperature balance

Temperature sync on (sets passenger and rear temperature to driver's set temperature)*

*Temperature sync off**

Driver temperature # degrees (#: 57-87 degrees F)

Passenger temperature # degrees (#: 57-87 degrees F)

Rear temperature up

Rear temperature down

Rear temperature # degrees (#: 57-87 degrees F)

- * Repeating these commands switches (toggles) the function between On and Off. Because of this, the action that occurs may not match the command you speak.

Radio Voice Commands

The system accepts these commands on most screens.

*Audio on**

*Audio off**

*Radio on**

*Radio off**

Radio select FM1

Radio select FM2

Radio select AM

Radio tune to # FM (#: frequency.

Example *Radio 95.5 FM*)

Radio tune to # AM (#:frequency.

Example *Radio 1020 AM*)

Radio seek up

Radio seek down

Radio next station (same as radio seek)

Radio preset # (#: 1-6)

Radio FM preset # (#: 1-6)

Radio FM1 preset # (#: 1-6)

Radio FM2 preset # (#: 1-6)

Radio AM preset # (#: 1-6)

*Radio auto select**

*Radio scan**

Radio select XM1

Radio select XM2

XM channel # (#: 1-255)

XM channel up

XM channel down

XM category up

XM category down

XM preset # (#: 1-6)

XM1 preset # (#: 1-6)

XM2 preset # (#: 1-6)

*XM scan**

*XM category scan**

*XM channel scan**

XM category mode

XM channel mode

- * Repeating these commands switches (toggles) the function between On and Off. Because of this, the action that occurs may not match the command you speak.

CD Voice Commands

The system accepts these commands on most screens.

CD play
CD play disc # (#:1-6)
CD play track # (#: 1-30)
CD play disc #1 track #2 (#1:1-6, #2:1-30)
CD skip forward
CD skip back
CD play next disc
CD play previous disc
*CD track random**
*CD track repeat**
*CD disc repeat**
*CD track scan**
*CD disc scan**
CD normal play
CD track list
*CD folder random**
*CD folder repeat**
*CD folder scan**
CD folder list

- * Repeating these commands switches (toggles) the function between On and Off.

DVD Voice Commands

The system accepts these commands on most screens.

DVD play (use “DVD normal play”)
*DVD pause**
*DVD title up***
*DVD title down***
*DVD next title***
*DVD previous title***
DVD chapter up
DVD chapter down
DVD next chapter (same as “chapter up”)
DVD previous chapter (same as “chapter down”)
DVD title # (#: 1-30)**
DVD chapter # (#: 1-30)
DVD title #1 chapter #2 (#1:1-30, #2:1-30)
DVD play track # (#: 1-30)
DVD skip forward
DVD skip back

DVD track random (for playing CD only)*
DVD track repeat (for playing CD only)*
*DVD track scan**
DVD normal play
DVD folder random (for playing CD only)*
DVD folder repeat (for playing CD only)*
*DVD folder scan**

- * Repeating these commands switches (toggles) the function between On and Off.
- ** The title commands select the main menu items, called “titles” (e.g., “Play movie” or “Extras”). Some DVDs do not support selecting these features by voice command.

Voice Command Index

AUX Voice Commands

The system accepts these commands on most screens.

AUX play

Rear Radio Voice Commands

The system accepts these commands on most screens.

NOTE:

These commands are available for a vehicle with factory RES.

*Rear audio on**

*Rear audio off**

*Rear radio on**

*Rear radio off**

Rear radio select FM1

Rear radio select FM2

Rear radio select AM

Rear radio tune to # FM (#: frequency)

Rear radio tune to # AM (#: frequency)

Rear radio seek up

Rear radio seek down

Rear radio next station (same as radio seek)

Rear radio preset # (#: 1-6)

Rear radio FM preset # (#: 1-6)

Rear radio FM1 preset # (#: 1-6)

Rear radio FM2 preset # (#: 1-6)

Rear radio AM preset # (#: 1-6)

*Rear radio auto select**

*Rear radio scan**

Rear radio select XM1

Rear radio select XM2

Rear XM channel # (#:1-255)

Rear XM channel up

Rear XM channel down

Rear XM category up

Rear XM category down

Rear XM preset # (#: 1-6)

Rear XM1 preset # (#: 1-6)

Rear XM2 preset # (#: 1-6)

*Rear XM scan**

*Rear XM category scan**

*Rear XM channel scan**

Rear XM category mode

Rear XM channel mode

* Repeating these commands switches (toggles) the function between On and Off. Because of this, the action that occurs may not match the command you speak.

Rear CD Voice Commands

The system accepts these commands on most screens.

NOTE:

These commands are available for a vehicle with factory RES.

*Rear CD play (use “normal play”)
Rear CD play disc # (#: 1-6)
Rear CD play track # (#: 1-30)
Rear CD play disc #1 track #2 (#1:
1-6, #2: 1-30)
Rear CD skip forward
Rear CD skip back
Rear CD play next disc
Rear CD play previous disc
Rear CD track random*
Rear CD track repeat*
Rear CD disc repeat*
Rear CD track scan*
Rear CD disc scan*
Rear CD normal play*

Rear CD folder random
Rear CD folder repeat*
Rear CD folder scan**

- * Repeating these commands switches (toggles) the function between On and Off.

Rear DVD Voice Commands

The system accepts these commands on most screens.

NOTE:

These commands are available for a vehicle with factory RES.

*Rear DVD play (use “normal play”)
Rear DVD pause*
Rear DVD title up**
Rear DVD title down**
Rear DVD next title**
Rear DVD previous title**
Rear DVD chapter up
Rear DVD chapter down
Rear DVD next chapter
Rear DVD previous chapter
Rear DVD title # (#: 1-30)**
Rear DVD chapter # (#: 1-30)
Rear DVD title #1 chapter #2
(#1: 1-30, #2: 1-30)**
Rear DVD play track # (#: 1-30)
Rear DVD skip forward
Rear DVD skip back
Rear DVD track random*
Rear DVD track repeat**

Voice Command Index

*Rear DVD track scan**
Rear DVD normal play
*Rear DVD folder random**
*Rear DVD folder repeat**
*Rear DVD folder scan**

- * Repeating these commands switches (toggles) the function between On and Off.
- ** The title commands select the main menu items, called “titles” (e.g., “Play movie” or “Extras”). Some DVDs do not support selecting these features by voice command.

Rear AUX Voice Commands

The system accepts these commands on most screens.

NOTE:

These commands are available for a vehicle with factory RES.

Rear AUX play

Information Screen Voice Commands

These are additional commands not found on the Voice Command Help screen available when viewing the Information screen. Follow the voice prompts.

*Cellular Phonebook**
Voice command help (the system reads and lists all of the commands, starting with Navigation General Commands)
Map legend
Calendar
Calculator
Key to Zagat ratings

- * Only for the Touring model.

Setup Screen (first) Commands

The system accepts these commands on Setup screen (first). (For Setup screen (second), simply say what is written on the screen, and follow the voice prompts)

Brightness up
Brightness down
Brightness minimum/min.
Brightness maximum/max.
Volume up
Volume down
Volume minimum/min.
Volume maximum/max.
Volume off
Display clock
Display day
Display night
Display auto
Contrast adjust
Guidance prompts normal
Guidance prompts maximum/max.
Guidance prompts minimum/min.

On-Screen Commands

The system accepts these commands on any screen. There are over 100 on-screen commands. Just say what is written on the screen (this excludes keyboard letters, and listed items)

Next (or “Down”)

Previous (or “Up”)

Return

OK (except at Disclaimer screen)

Delete

Done

On-Screen Commands Assist

Say or touch the desired letter. When speaking the letters or using “spell mode,” you can substitute the name that represents each letter or symbol. This improves recognition.

NOTE:

- *The system will only respond to the names shown in the graphic below.*
- *For instance, to select the letter “A,” you can touch the “A” on the screen, or say “A,” or say “Alpha” or “Apple.”*
To select the number “1,” touch the “1” on the screen, or say “one,” or say “Number One.”
To select the symbol “- (hyphen),” touch the “-” on the screen, or say “Hyphen,” or say “Symbol Hyphen.”
- *When selecting letters using the voice control system, a confirmation box may pop up to confirm the letter.*

Edit message:

JOE_ 1ST LINE

| | | | | | | | | | | |
|-----------------------|--------------------|-------------------------|------------------------|-----------------------|-----------------------|----------------------|----------------------|---------------------|---------------------|-----------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 | - Hyphen |
| A Alpha Apple | B Bravo Boy | C Charlie | D Delta Dog | E Echo Edward | F Foxtrot Frank | G Golf George | H Hotel Henry | I India Igloo | J Juliet John | ' Apostrophe |
| K Kilo King | L Lima Larry | M Mike Mary | N November Nancy | O Oscar | P Papa Paul | Q Quebec Queen | R Romeo Robert | S Sierra Sam | T Tango Tom | & Ampersand |
| U Uniform Uncle | V Victor | W Whiskey William | X X-Ray | Y Yankee Yellow | Z Zulu Zebra | | | / Slash | ← | |
| Delete | Shift | Space Space | More | Done | | | | | | |

Voice Command Index

Symbol Assist Definitions

Enter name:

DON_

| | | | | | | | | | | |
|---------------------------|----------------------|-------------------|-----------------------|-----------------|--------------------|--------------------------|---------------------------|--------------|--------------------|---------------------|
| À a grave | Â a circumflex | Ä a umlaut | Ç c cedilla | È e grave | É e acute | Ê e circumflex | Ë e umlaut | Ì i grave | Î i circumflex | Ï i umlaut |
| Ô o circumflex | Ù u grave | Û u circumflex | Ü u umlaut | | | | | + Plus | { Open brace | } Close brace |
| ! Exclamation Point | ” Double Quote | # Pound | \$ Dollar | % Percent | ` Back Quote | (Open parenthesis |) Close parenthesis | ~ Tilde | ^ Caret | , Comma |
| - Underscore | @ At sign | * Asterisk | ? Question mark | ; Semi colon | : Colon | < Less than | > Greater than | . Dot | ← | |
| Delete | Shift | Space Space | | More | Done | | | | | |

NOTE:

The term “grave” used for these keys (À, È, Ì, and Û) is pronounced like “save.”

A

| | |
|---------------------------------------|------------|
| Accessing the Address Book List | 81 |
| ADD TO Today's | |
| Destinations | 44, 47 |
| Adding Destinations to the List | 44 |
| Address | 23, 24, 82 |
| Address Book | 23, 45, 80 |
| Address Book PIN | 84 |
| Advanced | 35 |
| Auto Daylight Saving Time | 97 |
| Auto Service | 34 |
| Auto Time Zone by GPS | 98 |
| Avoid Streets | 67 |

B

| | |
|---------------------------------|------------|
| Back to Current Route | 68 |
| Banking | 34 |
| Basic Settings | 96 |
| Bluetooth® HandsFreeLink® | 17 |
| Breadcrumbs | 20, 62, 94 |
| Brightness | 77 |
| By Address | 24 |
| By Address Book | 45 |
| By Go Home | 46 |
| By Intersection | 28 |
| By Map Input | 39 |
| By Places | 33 |

| | |
|--------------------------------|----|
| By Previous Destinations | 42 |
| By Today's Destinations | 43 |

C

| | |
|-----------------------------------|------------|
| Calculator | 74 |
| Calendar | 19, 72 |
| CANCEL button | 10 |
| Cancel Current Route | 68 |
| Category | 33, 45, 83 |
| CD Voice Commands | 137 |
| Cellular Phonebook | 70 |
| Change Method | 48 |
| Change Routing Method | 48, 67 |
| Change State | 24, 29 |
| Changing the DVD | 109 |
| Changing the Route | 65 |
| Changing the Routing Method | 48 |
| City | 24, 29, 40 |
| City Vicinity | 35, 37 |
| Climate Control Commands | 135 |
| Clock Adjustment | 97 |
| Clock Screen | 18, 79 |
| Clock Settings | 18, 79 |
| Clock Type | 18, 79 |
| Color | 99 |
| Community | 34 |
| Continental USA | 41 |
| Contrast | 79 |

| | |
|--------------------------------|--------|
| Convert (Unit) | 75 |
| Correct Vehicle Position | 95 |
| Coverage Areas | 110 |
| Current Location | 21, 63 |
| Current Position | 39, 82 |
| Current Street | 6 |
| Customer Assistance | 107 |

D

| | |
|-----------------------------------|----------------|
| Database Limitations | 105 |
| Daylight Savings Time (DST) | |
| Selection | 98 |
| Delete Previous Destination | 85 |
| Deleting waypoints | 67 |
| Destination | 23, 47, 54, 68 |
| Destination Icon | 58 |
| Destination Map | 50 |
| Detailed Coverage Areas | 110, 115 |
| Detour | 67 |
| Direct Route | 48 |
| Direction List | 54 |
| Display | 78 |
| Driving to Your Destination | 47 |

E

| | |
|-----------------------|----|
| Easy Route | 48 |
| Edit Avoid Area | 91 |

Index

| | |
|---------------------------------------|-----|
| Edit Waypoint Search Area..... | 93 |
| Edit/Delete Address | 83 |
| Editing Today's Destination List..... | 43 |
| Emergency | 34 |
| Entering Address Book..... | 81 |
| Entering Security Code..... | 101 |
| Entering the Street Number..... | 28 |
| Entering Your Schedule..... | 73 |
| Error Message..... | 128 |
| Exit Info | 55 |

F

| | |
|----------------------------------|-----|
| Find Place Commands..... | 134 |
| Frequently Asked Questions | 121 |

G

| | |
|--------------------------|--------|
| Getting Started..... | 10 |
| Global Commands | 132 |
| Glossary | 129 |
| Go Home..... | 23, 46 |
| Go Home PIN..... | 46, 85 |
| Going Off the Route..... | 62 |
| GPS Initialization..... | 102 |
| Guidance Mode..... | 94 |
| Guidance Prompts..... | 51, 79 |
| Guidance Screen | 53 |

H

| | |
|--|-----|
| Home Address | 84 |
| Honda Automobile Customer Service | 107 |
| Hotel/Motel (Lodging) | 34 |

I

| | |
|---|--------|
| Icon Bar | 60 |
| INFO button | 11, 70 |
| Information..... | 70 |
| Information Screen Voice Commands..... | 140 |
| Intersection..... | 23, 28 |

J

| | |
|----------------|----|
| Joystick | 10 |
|----------------|----|

K

| | |
|---------------------------|----|
| Key to Zagat Ratings..... | 75 |
| Keyboard Layout | 96 |

L

| | |
|-----------------------------|----|
| Landmark Icons | 58 |
| Leisure | 34 |
| Lodging (Hotel/Motel) | 34 |

M

| | |
|---------------------------|------------|
| Map Color | 99 |
| Map Coverage..... | 110 |
| Map Input..... | 23, 39 |
| Map Legend..... | 20, 52, 72 |
| Map Matching..... | 102 |
| Map Orientation..... | 57 |
| Map Scale..... | 56 |
| Map Screen..... | 20, 50, 52 |
| MAP/GUIDE button..... | 10, 53 |
| Maximize Freeways | 48 |
| MENU button | 11, 23 |
| Menu Color | 99 |
| Message | 73 |
| Microphone | 12 |
| Minimize Freeways | 48 |
| Minimize Toll Roads | 48 |

N

| | |
|-----------------------------------|------------|
| Name | 33, 37, 81 |
| NAVI BACK button..... | 13 |
| NAVI TALK button | 12 |
| Navigation Display Commands | 133 |
| Navigation General Commands..... | 132 |

O

| | |
|---------------------------------|--------|
| Off-road Tracking | 62, 94 |
| One-Way Traffic Icon | 58 |
| On-Screen Commands | 141 |
| On-Screen Commands Assist | 141 |
| On-Screen Keyboard | 16 |

P

| | |
|-----------------------------|----------------|
| PC Card | 109 |
| Personal Information | 80 |
| Phone Number | 33, 38, 82 |
| PIN Number | 84 |
| Place Name | 35, 37 |
| Place Name by Keyword | 35, 36 |
| Places | 23, 33, 82 |
| Previous Destinations | 23, 42, 82, 85 |

R

| | |
|---|--------|
| Radio Voice Commands | 136 |
| Read List | 34, 72 |
| Rear CD Voice Commands | 139 |
| Rear DVD Voice Commands | 139 |
| Rear Radio Voice Commands | 138 |
| Rear View Camera | 100 |
| Rear View Camera Brightness Adjustment | 100 |

| | |
|--------------------------|----------------|
| Recalculation | 86 |
| Reporting Errors | 107 |
| Rerouting | 86 |
| Restaurant | 34 |
| Route | 47, 50, 62, 65 |
| Routing & Guidance | 86 |
| Routing Method | 48 |

S

| | |
|--|------------|
| Save Current Location | 63 |
| Schedule | 73 |
| Schedule List | 73 |
| Screen | 11 |
| Search Waypoint on Route | 65, 66 |
| Security Code | 101 |
| Selecting the City | 24, 29 |
| Selecting the State or Province | 24, 29 |
| Selecting the Street | 26, 31 |
| SETUP button | 11 |
| Setup Screen (first) Commands | 140 |
| Shopping | 35 |
| Showing Icons on the Map | 58, 60 |
| Sort by Distance to Travel | 35, 37 |
| Split Screen Guidance | 55 |
| State | 24, 29, 40 |
| Street | 26, 31 |
| System Controls | 10 |

| | |
|-------------------------------|-----|
| System Function Diagram | 22 |
| System Information | 96 |
| System Initialization | 101 |
| System Limitations | 103 |
| System Set-up | 77 |
| System Start-up | 18 |

T

| | |
|----------------------------------|--------|
| Temperature Voice Commands | 136 |
| Time Adjustment | 98 |
| Title | 73 |
| Today's Destinations | 23, 43 |
| Today's Destinations List | 43 |
| Travel | 35 |
| Troubleshooting | 128 |

U

| | |
|--------------------------------------|--------|
| Unit Conversion | 75 |
| Units (mile or km) | 96 |
| Unverified Area Routing | 87, 88 |
| Unverified Streets | 7 |
| Update DVD | 108 |
| User Name | 85 |
| Using the Voice Control System | 13 |

Index

V

| | |
|------------------------------------|-----|
| Vehicle..... | 94 |
| Verified Streets | 7 |
| View Routes | 49 |
| Voice Command Help | 71 |
| Voice Command Index | 132 |
| Voice Control Basics..... | 12 |
| Voice Recognition Feedback..... | 96 |
| Voice Recognition, Improving | 14 |
| Volume | 77 |

W

| | |
|-----------------|--------|
| Waypoints | 65, 93 |
|-----------------|--------|

Z

| | |
|-------------------|------------|
| Zagat 2007 | 33, 34, 38 |
| ZOOM buttons..... | 11 |

License notice

You have acquired a device (“DEVICE”) that includes software licensed by ALPINE ELECTRONICS, INC., from an affiliate of Microsoft Corporation (collectively “MS”). Those installed software products of MS origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT ALPINE ELECTRONICS, INC., FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE.

This EULA grants you the following license;

You may use the SOFTWARE only on the DEVICE.

NOT FAULT TOLERANT. THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE ELECTRONICS, INC., HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON ALPINE ELECTRONICS, INC., TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.

NO WARRANTIES FOR THE SOFTWARE. THE SOFTWARE is provided “AS IS” and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO

NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.

No Liability for Certain Damages. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S.TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).

Limitations on Reverse Engineering, Decompilation, and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Additional Software/Services. The SOFTWARE may permit ALPINE ELECTRONICS, INC., MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of

the SOFTWARE after the date you obtain your initial copy of the SOFTWARE (“Supplemental Components”).

- If ALPINE ELECTRONICS, INC., provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.
- If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).

ALPINE ELECTRONICS, INC., MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

RECOVERY MEDIA. If SOFTWARE is provided by ALPINE ELECTRONICS, INC., on separate media and labeled “Recovery Media” you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.

SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS. You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is of U.S. origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>.

*As required by the FCC:
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Industry Canada Standard RSS-210.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.