

TECHNOLOGY  
REFERENCE  
GUIDE



*Accord*

[owners.honda.com](http://owners.honda.com)

31T3WC10  
00X31-T3W-C100

2015 Honda Accord Hybrid Touring  
Technology Reference Guide  
©2014 American Honda Motor Co., Inc. — All Rights Reserved

Printed in U.S.A.



2015 Accord Hybrid Touring

# TECHNOLOGY REFERENCE GUIDE

This Technology Reference Guide is designed to help you get acquainted with your 2015 Honda Accord Hybrid Touring and provide basic instructions on some of its technology and convenience features.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual or Navigation Manual.

*The vehicle interior colors shown in this guide may not represent what is included in your actual vehicle. The feature information and procedures in this guide are intended to be used for instructional purposes only.*

Smart Entry with Push Button Start.....	2
Instrument Panel Indicators .....	4
Multi-Information Display (MID) .....	6
Sport Hybrid i-MMD.....	8
Eco Assist™.....	10
Tire Pressure Monitoring System (TPMS) .....	12
Settings for Your Vehicle .....	13
Auto Door Locks .....	14
Driving Position Memory System (DPMS).....	15
One-Touch Turn Signal.....	16
Auto Headlights with Wiper Integration.....	16
Multi-View Rear Camera .....	17
LaneWatch™ .....	18
Lane Departure Warning (LDW).....	19
Forward Collision Warning (FCW) .....	20
Adaptive Cruise Control (ACC).....	22
Intelligent Multi-Information Display (i-MID).....	24



Using the Touchscreen.....	25
Voice Recognition.....	26
Navigation.....	30
Bluetooth® HandsFreeLink® (HFL).....	33
SMS Text Messaging and E-Mail .....	37
Basic Audio Operation .....	38
iPod® or USB Flash Drive .....	39
Hard Disc Drive (HDD) Audio .....	40
Song By Voice.....	41
Pandora®.....	42
HondaLink featuring Aha™.....	43
Bluetooth® Audio .....	44
HomeLink® .....	45
Honda Owners .....	46
Safety Reminder .....	46
Fuel Recommendation.....	47
Honda Roadside Assistance.....	47

## SMART ENTRY WITH PUSH BUTTON START

### Unlocking the Doors



Grab either one of the front door handles when the vehicle is off. Wait until the doors unlock, then pull the handle to open.



### Locking the Doors



Press the door lock button on either front door handle when the vehicle is off.



### Opening the Trunk




Press the trunk release button under the trunk handle. The vehicle can be on or off.



Operate certain functions of your vehicle by simply having the remote transmitter within operating range.

### Power Button

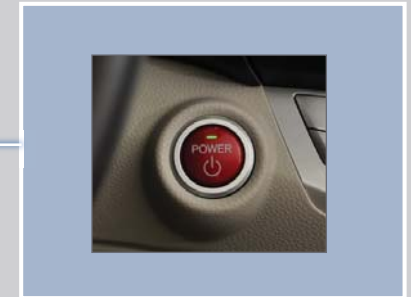

#### Accessory or On Mode

Press POWER once without pressing the brake pedal for Accessory mode. Press it again for ON mode.

#### Starting the Engine

Press and hold the brake pedal, then press POWER.

#### Turning the Vehicle Off

Shift to Park, then press POWER.

**Note:** If you press POWER and the shift lever is not in Park, the vehicle goes into Accessory mode.








 
 
 




## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

 Charging system	 Anti-Lock Brake System (ABS)
 Brake system, low brake fluid	 Malfunction lamp (check engine light)
 Low oil pressure	 Tire Pressure Monitoring System (TPMS) ( <i>blinks and stays on</i> )
 Supplemental restraint system (SRS)	 Vehicle Stability Assist® (VSA)
 Electric power steering (EPS)	 Smart Entry System
 Forward Collision Warning (FCW)	 Brake system
 Lane Departure Warning (LDW)	 Power system



Low fuel:  
**Refill**



Low tire pressure:  
**Add air**



System message indicator:  
**Check MID**

### On/Off Indicators



PASSENGER AIRBAG **OFF**  
(next to upper display)



Exterior lights **on**



VSA **OFF**



Turn signals/hazards **on**



FCW **OFF**



High beams **on**



ECON Mode **on**



Electric motor **on**



EV mode **on**


### Condition Indicators

Action is needed by driver

 Parking brake on:  
**Release**

 Seat belt reminder:  
**Fasten seat belt(s)**

 READY:  
**Ready to drive**

 Immobilizer (*blinks*):  
**Use other vehicle key and see dealer**

## MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

### Accessing the Information Display




To toggle between the different displays:


- Press either Info button (▲/▼) for the main displays.
- Press SEL/RESET for the lower displays.

Main Displays


Lower Displays

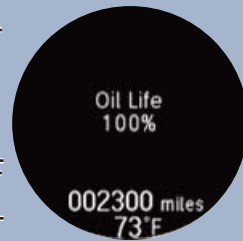


### Lower Displays

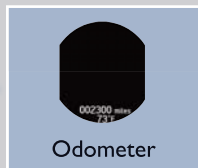

Odometer

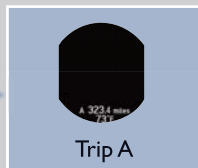


Trip A

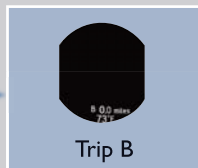

Trip B

### Main Displays

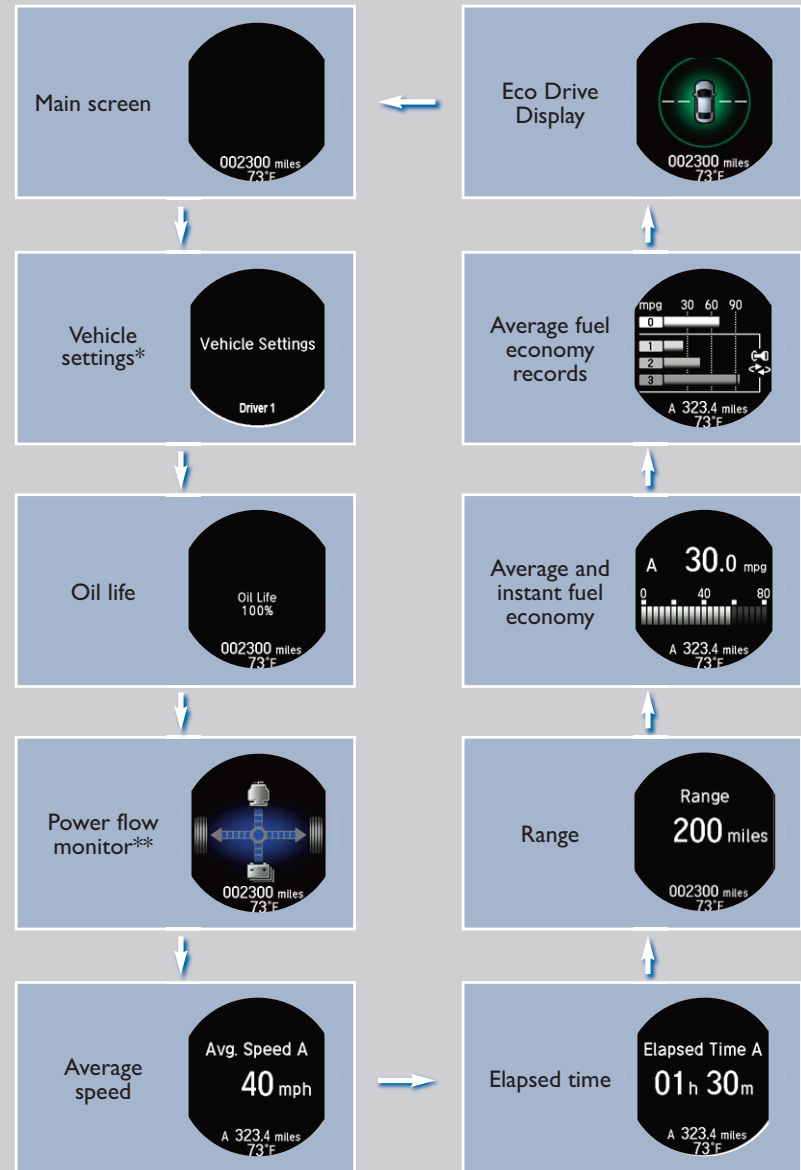





\*You can also change Vehicle Settings using the i-MID (see page 13).

\*\*You can also view the power flow monitor on the navigation screen. Press INFO on the center panel and use the interface dial to select Vehicle Energy.

# SPORT HYBRID i-MMD

Learn how the Sport Hybrid i-MMD (intelligent Multi-Mode Drive) system operates. Your vehicle is able to operate in electric, hybrid, charge, or full engine mode.

## How Your Vehicle Operates

Operating mode	Electric Vehicle (EV)	Hybrid Vehicle (HV)	Engine	Regeneration	
Vehicle speed	Stopped or low/moderate speed	Accelerating or driving uphill	High speed	Decelerating	
Vehicle operation	Only the electric motor provides power to the wheels.	The electric motor provides power to the wheels. The gas engine provides power to the generator. The generator provides electricity to the electric motor for added power or to the battery for charging.	Only the gas engine provides power to the wheels. The battery provides electricity to the electric motor for added power.	The gas engine turns off. The electric motor provides electricity to the battery through regenerative braking.	
Power Flow Monitor <sup>TM</sup> (on the MID)					
System Components	Electric motor	Stopped or running	Running	Generating	Regenerating
	Generator	Stopped	Generating	No operation	Stopped
	Gas engine	Stopped	Running	Running	Stopped
	Battery	Discharging	Charging or discharging	Charging	Regenerating

\*See page 6-7 for how to display the power flow monitor.

## Driving Modes




Press the EV button to switch between EV or HV mode.



### Electric (EV) Mode

When driving at low to moderate speed, your vehicle runs in EV mode when the battery is fully charged.

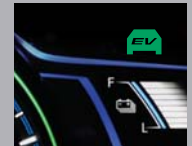

Hybrid (HV) mode or gas engine operation may override EV mode if:

- You drive aggressively, at high speed, or uphill.  
After returning to normal driving conditions, press the EV button to return to EV mode.
- The battery temperature is too high or low.
- The battery begins to run low.
- The climate control system is in heavy use.

### Hybrid (HV) Mode

The gas engine and generator supply electricity to the battery and electric motor, while the battery maintains its current charge level. Press the EV button to switch between HV or EV mode (when possible).

## Auto Engine Stop/Start

While your vehicle is at a stop, the hybrid system may shut the engine off to maximize fuel efficiency. Occurrence and duration vary depending on driving conditions, climate control use, and battery level. The engine may restart when you accelerate or release the brake pedal.

# ECO ASSIST™

Provides various ways to monitor your fuel efficiency and driving style.

## ECON Button

Helps maximize fuel efficiency.

1. Press ECON to turn the system on or off.



2. The ECON mode indicator comes on.



3. Check the MID.



**Note:** When turned on, performance of the climate control system may be adjusted.


## Ambient Meter

Indicates real-time fuel efficiency using color-coded bars.



## Driver Feedback

Indicates real-time fuel efficiency. Results are displayed on the MID, where the vehicle icon and its surrounding color change based on your driving style.

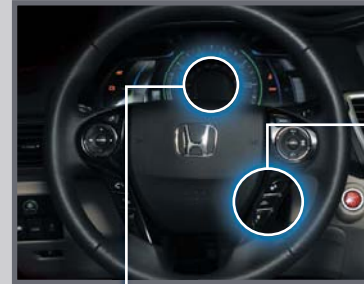


Press either Info (▲/▼) button to toggle to the Eco Drive Display.



Real-time Fuel Efficiency Coach	
Driving Style	Eco Drive Display (on the MID)
Smooth, steady acceleration <b>maximizes fuel efficiency</b>	
Smooth, steady deceleration <b>maximizes fuel efficiency</b>	
Aggressive acceleration <b>lowers fuel efficiency</b>	
Aggressive deceleration <b>lowers fuel efficiency</b>	

As you drive, you earn leaves for driving efficiently, or lose them for driving inefficiently. When you turn the vehicle off, your drive cycle and lifetime score are displayed on the MID.

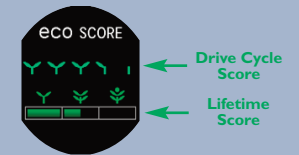

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

### How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

### What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
4. Start TPMS calibration.



### TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **TPMS Calibration**.
4. Select **Calibrate**. The low tire pressure indicator blinks, and calibration begins.
5. Press **BACK** to exit the menu.



You can also change vehicle settings using the multi-information display (see page 6).

## SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

### Adjusting Vehicle Settings



Press **SETTINGS** to select the settings menu. Use the interface dial to make and enter selections.

Choose from the available options:



#### Navi Settings

Change various settings for navigation system routing.

#### Camera Settings

Change camera modes.

#### Vehicle Settings\*

TPMS calibration, meter setup, door setup, and more.

\*The shift lever must be in Park (P) to access this menu.

#### System Settings

Adjust the display, system language, and more.

#### Phone Settings

Pair a phone, change call and text/e-mail options, and more.

#### Info Settings

Import wallpaper and select clock type.

#### Audio Settings

Change sound options and various settings for audio modes.



## AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

### Door Locks



#### Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

#### Default Unlock Setting

All doors are set to unlock when the driver's door is opened.

### Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in ON mode. See your Owner's Manual for complete setting options.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Auto Door Lock or Auto Door Unlock.
4. Select from the options.
5. Press **BACK** to exit the menu.



You can also change vehicle settings using the multi-information display (see page 6).

**Note:** The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for unlocking the rear doors when a front door handle is pulled.

## DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote transmitter (1 or 2).

### Programming the DPMS

1. Turn on the vehicle. Make sure the shift lever is in Park (P).
3. Press **SET**. You will hear a beep.



2. Adjust the seat to your preferred position.
4. Press the memory button corresponding to the remote (1 or 2) you are using within 5 seconds. You will hear two beeps.



**Note:** Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.

## ONE-TOUCH TURN SIGNAL

Use this quick and convenient method to signal a lane change.

### How It Works

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.



## AUTO HEADLIGHTS WITH WIPER INTEGRATION

For your convenience, your vehicle's headlights automatically turn on when the windshield wipers operate.

### How It Works



Make sure your headlights are in the AUTO position.



Turn on your windshield wipers. The headlights also turn on. When you turn off the windshield wipers, the headlights turn off shortly after.

## MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

### How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the upper display, along with helpful parking guidelines.
- Press the interface dial to toggle between views.
- The display turns off when you shift out of Reverse.



Wide (default)



Normal



Top down



### Changing Settings

Turn the guidelines on or off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Camera Settings**.
3. Select **Rear Camera**.
4. Select one of the options.

*Fixed Guidelines:* Guidelines appear when you shift into Reverse. Select **On** or **Off**.

*Dynamic Guidelines:* Guidelines move as you turn the steering wheel. Select **On** or **Off**.

5. Press **BACK** to exit the menu.




## LANEWATCH™

Helps you check your right blind spot when you make a lane change to the right.

### How It Works

When the right turn signal is activated, a camera located in the passenger side door mirror shows the right rear area outside your vehicle on the display.

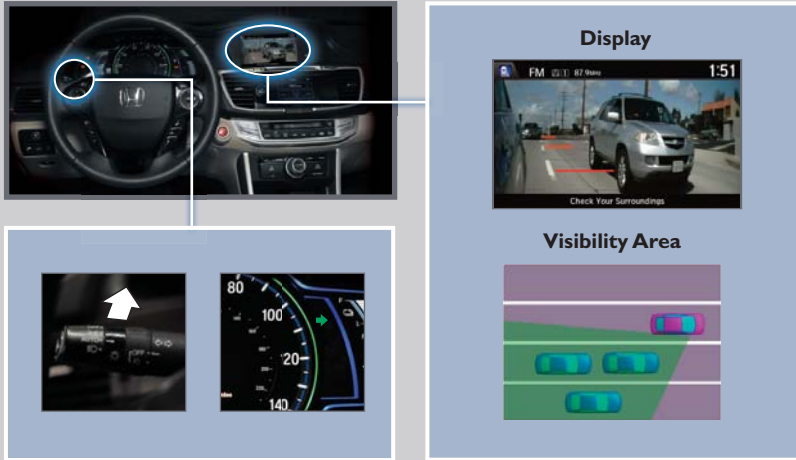

### LaneWatch Display

Press the LaneWatch button on the turn signal switch to view a constant real-time display. Press it again to turn the display off. The display still appears when the right turn signal is activated.



See your Owner's Manual for more information on adjusting LaneWatch settings.

## LANE DEPARTURE WARNING (LDW)


Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated.

### How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.



If you cross a lane line without using your turn signal, a message appears on the MID and a beep sounds. Steer the vehicle to return to your lane.

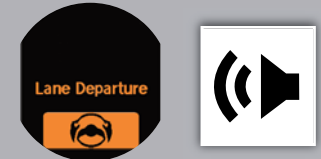

LDW may not activate under certain conditions. See your Owner's Manual for more information.

### Turning LDW On or Off

Press the LDW button to turn the system on or off. A green indicator light appears on the button when the system is on.




## FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

### How It Works

At 10 mph or higher, if the radar sensor in the front grille detects a vehicle in front of you and the system determines a collision is likely, the system warns you with the following visual and audible alerts:

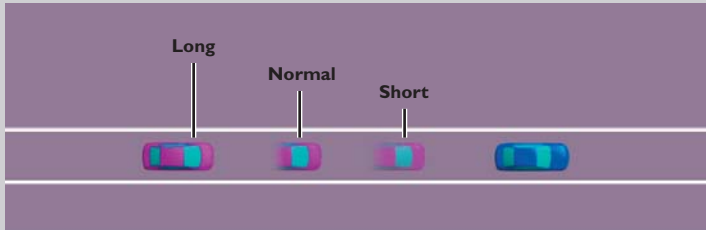

When the FCW distance is set to Short:

- the heads-up light near the windshield flashes continuously
- BRAKE flashes continuously
- a beep sounds continuously until you take preventive action.

When the FCW distance is set to Normal or Long:

- The heads-up light near the windshield flashes twice.
- If you do not take action to prevent a collision and the distance to the other vehicle becomes sufficiently close, BRAKE flashes on the MID, the heads-up light flashes, and a beep sounds continuously until you take preventive action.



FCW may not activate under certain conditions. See your Owner's Manual for more information.

## Changing Settings

Determine the warning timing, or turn the system off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Forward Collision Warning Distance.
4. Select Long, Normal, Short, or Off.
5. Press **BACK** to exit the menu.




You can also change vehicle settings using the multi-information display (see page 6).

## ADAPTIVE CRUISE CONTROL (ACC)

### Operating ACC

Check the MID for information.

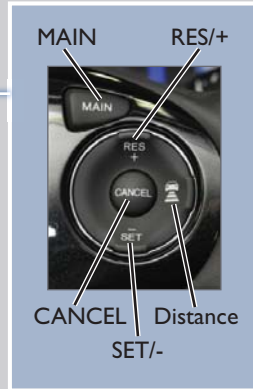

### How to Use ACC

#### Turning ACC On

1. Press MAIN.
2. ACC appears in the MID.

#### Using ACC

1. Accelerate to the desired speed (above 25 mph).
2. Press SET/- and release the accelerator pedal. The set speed is fixed, and ACC begins.
3. To increase speed, press RES/+. To decrease speed, press SET/-.

#### Standard Cruise Control

1. Press and hold the Distance button.
2. A beep sounds, and the selected mode appears in the MID.

#### Canceling ACC

There are three ways to cancel:


- Press MAIN.
- Press CANCEL.
- Tap the brake pedal.

Set a space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and increases or decreases your vehicle's speed to maintain a set following distance or speed.

### Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

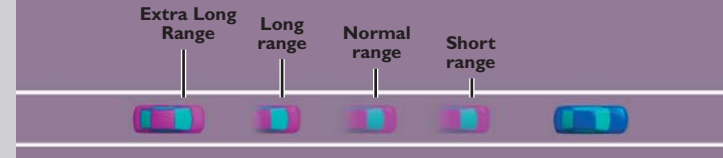

Press the Distance button to shuffle through four ranges.



The selected range and set speed are shown on the MID.

Range	MID Screen
Extra Long	50 mph
Long	50 mph
Middle	50 mph
Short	50 mph

If a vehicle enters the ACC range, a beep sounds and a vehicle icon appears on the MID.



If there is no vehicle ahead of you, a dotted-line vehicle icon appears on the MID.



**Note:** The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.

## INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper screen.

### Changing the Display



Press the Display button to change the main displays.

You can also press the corresponding buttons on the center panel.



### Display Options

**Navigation**  
Shows map or navigation information.



**Phone**  
Shows phone screen.



**Audio**  
Shows current audio information.



**Info**  
Shows information screen and options.



## USING THE TOUCHSCREEN

Interactive touchscreen display includes audio and *Bluetooth®* HandsFreeLink® functionality.

### Audio Options



**Source:** Select audio sources.

**Preset:** Select preset stations.



FM screen shown

**Title:** Display audio information.

**Skip/Seek:** Change stations, tracks, etc.

**More:** Select menu options and sound settings.

### Bluetooth® HandsFreeLink® Options\*

When you enter the Dial screen from the Phone Menu, you can use the touchscreen to enter the number.



When you enter the Phonebook screen from the Phone Menu and select Search, you can use the touchscreen to enter names.




\*These options are inoperable while the vehicle is moving.

### Sound/Screen Options

Select More from the main screen.



Select Sound to adjust the audio system.

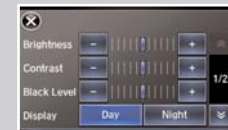

Select Screen Settings to adjust various screen features.

## VOICE RECOGNITION

### How It Works

The voice control system uses the steering wheel buttons and the ceiling microphone.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.**



**Pick-Up button:** Answer an incoming call.




**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.




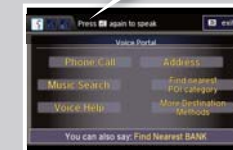
**Talk button:** Give phone, navigation, audio, or climate control commands.




 
To keep your eyes on the road and hands on the wheel, use the  Talk button to say voice commands to operate certain vehicle features. For a full list of commands, say “Voice Help.”

### Voice Command Portal

When you press the  Talk button from any of the main screens (NAV, PHONE, INFO, AUDIO), the voice portal screen appears and the system gives you examples of voice commands that can be used. For more examples, see page 28.



Press the  Talk button again, and the system waits for you to say a command.



 


The system recognizes your command.



The system confirms the command.

### Voice Command Tips

- When the  Talk button is pressed, all available voice commands are highlighted in yellow. To bypass the system prompts, press and release the  Talk button again to say a command.
- To hear a list of available commands at any time, press and release the  Talk button, then say “Voice Help.”
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

## Commonly Used Voice Commands

Here are some examples of commonly used voice commands, most of which are accepted on the Voice Portal screen. Try some of these to familiarize yourself with the voice command system.

Press and release the  Talk button before you say a command.

### General Commands

- Display map
- Display menu
- Display phone
- Display information
- Display audio screen
- What time is it?




### Find Place Commands

- Find nearest:
  - ATM
  - gas station
  - Mexican restaurant
  - post office
  - Honda dealer
  - airport
  - hospital
  - bank
  - charging station 120V/240V




### Navigation Commands

- How long/far to the destination?
- Display destination map
- Display entire route

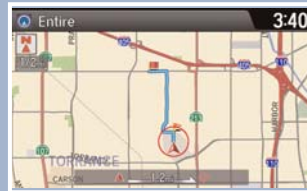

### Display Commands


- Display (or hide):
  - ATM
  - gas station
  - restaurant
  - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

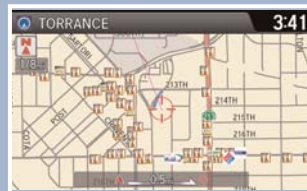

Press and release the  Talk button before you say a command.

### Audio Commands

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- DISC play
- DISC play track #
- DISC skip forward/back
- iPod/USB/HDD play

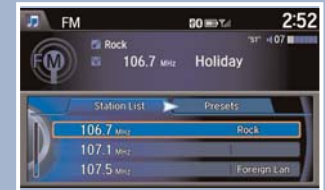

### Phone Commands

- Call by name
- Call by number



### Climate Control Commands

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



### Help Commands

- Voice help (list of all available commands by category)





## NAVIGATION

### Entering a Destination Using Voice Commands

For information on setting other destination options, see your Navigation Manual.


#### Entering a Street Address

Press and release the  Talk button before you say a command.


1. Say "Address."
2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. Say the number next to the street you want to select.
4. Say the entire street address number. For example, "1-2-3-4." If necessary, say "OK" to proceed.
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.
6. Say "Set as destination" to set the route.



#### Using the "Find Nearest" Command

Press and release the  Talk button before you say a command.

1. From the map screen, say "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. Say "Set as destination" to set the route.

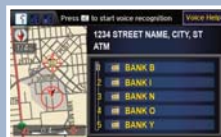

**Note:** It is recommended that you enter your destination before driving or when the vehicle is stopped.

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

### FM Traffic

Provides continuously updated information, including traffic speed, incidents, and construction in major metro areas.

Press and release the  Talk button before you say a command.

#### Displaying Traffic Information

Say "Display traffic" to view traffic flow and incident icons.



Heavy traffic

Moderate traffic

#### Incident Icons



Incident



Road closed



Congestion



Weather



Construction

**Note:** Traffic flow and incident icons are displayed on map scales of 5 miles or less.


#### Traffic Rerouting™

The system can automatically provide detours around traffic or incidents when a destination is set and Traffic Rerouting is turned on in Navi Settings (see page 13), or you can manually reroute.

1. Say "Display traffic on my route" to view a list of incidents on your route.
2. Say the number of the incident you want to avoid.
3. Say "Avoid" and the incident list returns.
4. Say "Recalculate route" to set the new route.




## Map Screen Legend

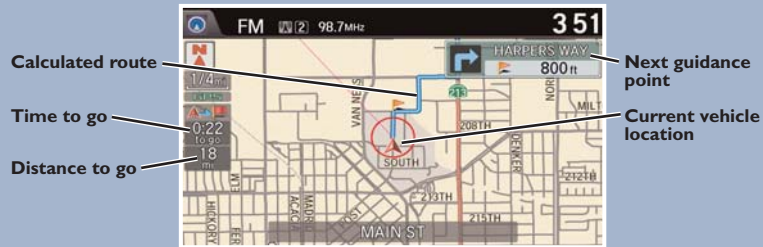

## Turn-by-Turn Directions

Shows a more detailed view of the next maneuver during route guidance on the multi-information display. See your Owner's Manual for instructions on how to turn this feature on or off.

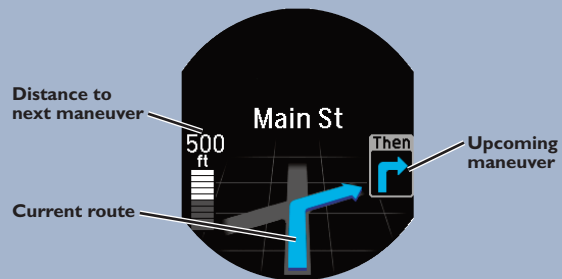


## BLUETOOTH® HANDSFREELINK® (HFL)


Make and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone.

**To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

## Using HFL

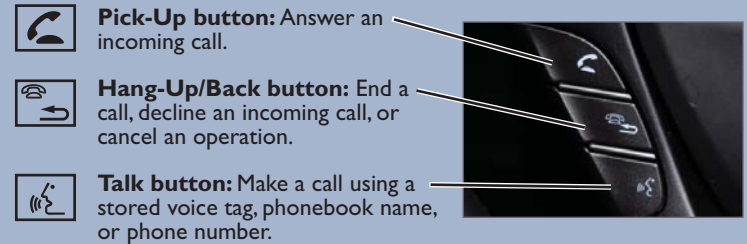

Use these buttons to navigate through the HFL menus.

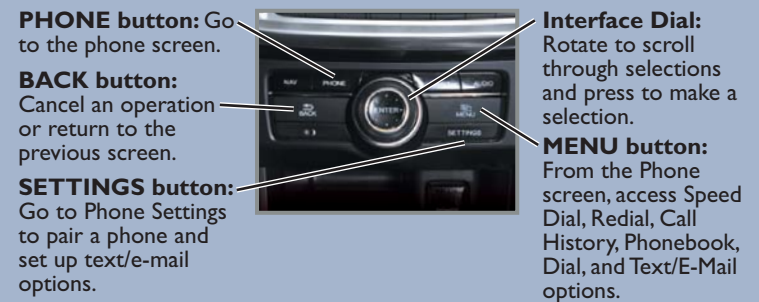

## Pairing Your Phone

Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Use the interface dial to make and enter selections.

1. Press **SETTINGS**.
2. Select **Phone Settings**.
3. Select **Bluetooth Device List** (if no phone has been paired) or **Connect Phone** (if pairing an additional phone).




4. Select **Add Bluetooth Device**.
5. Make sure your phone is in discovery mode and select **OK**.
6. HFL searches for your phone. Select your phone when it appears on the list.



*If your phone does not appear:*  
Select **Phone Not Found** and search for HandsFreeLink from your phone.

7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable **Phone Synchronization**. Select **On** to automatically import contacts and call history.

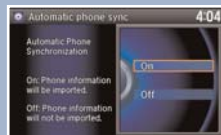

## Receiving a Call

A notification is heard and the incoming call information appears on the display.

Press the **Pick-Up** button to answer the call.



You can also select the icons on the touchscreen.



Press the **Hang-Up** button to end or decline the call.



## Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu\*

Use the interface dial to make and enter selections.

1. Press **PHONE**.
2. Press **MENU**.
3. Select **Dial**.
4. From the navigation screen or the touchscreen, enter the phone number. Select the green phone icon to call.



\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the  **Talk** button before you say a command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-1-2-3-4."
3. The system begins to dial.



## Using Speed Dial and Call History

Store 20 speed dial entries for quick calling, or view the last 20 calls.

Use the interface dial to make and enter selections.

1. Press **PHONE**.
2. From the **Speed Dial** tab, scroll through the list to find the entry you want to call, and select it to call.

For **Call History**, move the interface dial to the right and scroll through the list.




## Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

### Using the Menu\*


Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.

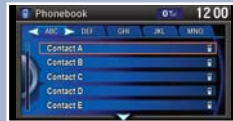

\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

### Using Voice Commands

Press and release the  Talk button before you say a command.

1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."



## SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages and e-mails from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to see if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

### Receiving Messages

Use the interface dial to make and enter selections.


1. A notification appears on the display. Select Read to open the message.
2. The message is displayed, and the system reads it aloud.



### Replying to Messages

Use the interface dial to make and enter selections.


1. With the message open, select Reply.
2. Select one of the six available reply messages.
3. Select Send to send the message.

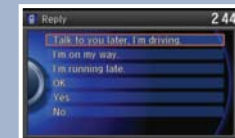

### Calling the Sender

Use the interface dial to make and enter selections.

1. With the message open, select Call.
2. The system begins dialing the number.

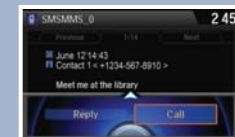

**Note:** Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in Phone Settings (see page 13).

## BASIC AUDIO OPERATION

Operate basic controls of your audio system using various and convenient methods.

### Steering Wheel Controls

**Volume increase button**

**◀ button:** Go to previous stations or tracks.

**Volume decrease button**



**SOURCE button:** Change audio source.

**▶ button:** Go to next stations or tracks.

### Touchscreen Controls

Select various controls depending on the audio source being played.

**Source:** Select audio sources.

**Preset:** Select preset stations.



FM screen shown

**Title:** Display audio information

**Skip/Seek:** Change stations, tracks, etc.

**More:** Select menu options and sound settings.

### USB Connection



Connect an iPhone or iPod cable or a USB flash drive to the USB port in the front console.

Connect your device only when your vehicle is stopped.

 
## iPod® OR USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

### Playing Audio Files



Select the iPod or USB icon from Source.




1. Connect the iPod cable or USB flash drive to the USB port in the front console (see page 38).
2. Select Source and select the iPod or USB icon.
3. Use the touchscreen or steering wheel controls to change tracks.

*iPod is a trademark of Apple, Inc.*

### Searching for Music

1. Press AUDIO. Use the interface dial to make and enter selections.
2. Press MENU.
3. Select Music Search.
4. Select a category or folder.
5. Select a track and press ENTER to begin playing.

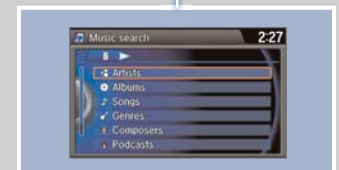

## HARD DISC DRIVE (HDD) AUDIO

Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.

### Playing HDD Audio




Select the HDD icon from Source.



1. Select Source and select the HDD icon. The last recorded album begins playing.
2. Use the touchscreen or steering wheel controls to change tracks.

### Searching for Music

1. Press AUDIO. Use the interface dial to make and enter selections.
2. Press MENU.
3. Select Music Search.
4. Select one of the categories.
5. Select a track and press ENTER to begin playing.

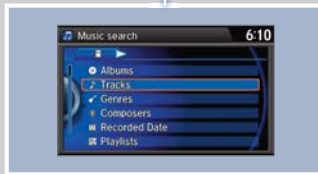

## SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most screens by using simple voice commands.

### Using the "Play" Command

Press and release the  Talk button before you say a command.

1. Say "Music search."
2. Say "Play" and a song, album or artist. For example, "Play XYZ."
3. The system plays the first song by the artist or the specified song and returns to your original screen.



### Using the "List" Command

Press and release the  Talk button before you say a command.

1. Say "Music search."
2. Say "List" and an artist or album. For example, "List XYZ."
3. A list of tracks by the artist or album is displayed. Say the number of your selection. For example, "One."
4. The system plays the selected song and returns to your original screen.



## PANDORA®

Play and operate Pandora from your compatible phone through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone. Standard data rates apply.

### Playing Pandora



Select the Pandora icon from Source.



1. *For Bluetooth connection:* Make sure your phone is paired to *Bluetooth® HandsFreeLink®* (see page 34) and the screen is on and unlocked.  
*For USB connection:* Connect the iPhone cable to the USB port in the front console (see page 38).
2. Select Source and select the Pandora icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

*iPhone is a trademark of Apple, Inc.*

#### Notes:

- iPhone can connect via Bluetooth or USB; Android and BlackBerry can connect via Bluetooth only.
- If you cannot operate Pandora through the audio system, it may be streaming through *Bluetooth® Audio*. Make sure the Pandora source on your audio system is selected.
- A pop-up may appear on your phone requesting you to allow access for the app to be launched.
- Operate your phone only when your vehicle is stopped.

 
## HondaLink featuring Aha™

Access music and information programming, location-based services, and social media through your vehicle's audio system. Download the HondaLink app to your phone from [owners.honda.com/apps](http://owners.honda.com/apps) before using this feature. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone. Standard data rates apply.

### Playing Aha



Select the aha icon from Source.



Select Stations to select from 16 favorite stations.

Press MENU to view the complete station list.

1. *For Bluetooth connection:* Make sure your phone is paired to *Bluetooth® HandsFreeLink®* (see page 34) and the screen is on and unlocked.  
*For USB connection:* Connect the iPhone cable to the USB port in the front console (see page 38).
2. Select Source and select the aha icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

*iPhone is a trademark of Apple, Inc.*

#### Notes:

- iPhone can connect via Bluetooth or USB; Android can connect via Bluetooth only.
- If you cannot operate Aha through the audio system, it may be streaming through *Bluetooth® Audio*. Make sure the Aha source on your audio system is selected.
- A pop-up may appear on your phone requesting you to allow access for the app to be launched.
- Operate your phone only when your vehicle is stopped.

## BLUETOOTH® AUDIO

Play stored or streaming audio from your compatible phone through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone.

### Playing Bluetooth Audio



Select the Bluetooth icon from Source.



1. Make sure your phone is on and paired to *Bluetooth® HandsFreeLink®* (see page 34).
2. Select Source and select the Bluetooth icon.
3. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.
4. Use the touchscreen or steering wheel controls to change tracks.


#### Notes:

- You may need to enable additional Bluetooth settings on your phone for playback.
- The play/pause function and remote audio controls are not supported on all phones.
- Operate your phone only when your vehicle is stopped.

## HOMELINK®

Program your vehicle to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

### Training a Button

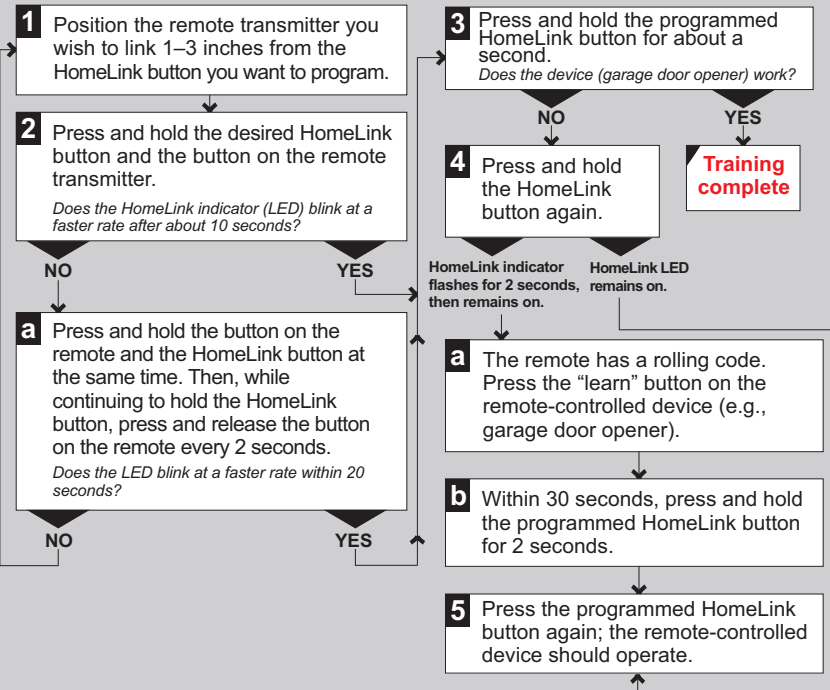


If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit [www.homelink.com](http://www.homelink.com).



## HONDA OWNERS

Visit [owners.honda.com](http://owners.honda.com) and register to explore features and technologies specific to your vehicle, obtain and update maintenance and service records, manage your financial services account, and access other useful information. For added convenience, Honda Owners can also be accessed on a mobile device.

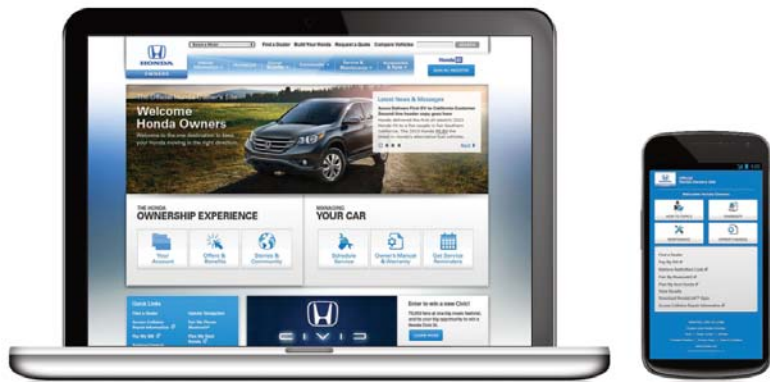

## SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

An audible warning alerts pedestrians that your vehicle is approaching when the speed is 12 mph or less.

See your Owner's Manual for more information.

## FUEL RECOMMENDATION

Use of unleaded gasoline of 87 octane or higher is recommended.

- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.

See your Owner's Manual for more information.

Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under your new vehicle warranty.

TOP TIER Detergent Gasoline (recommended) never contains MMT and has detergent additives to keep your engine clean. For further information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit [owners.honda.com](http://owners.honda.com).

## HONDA ROADSIDE ASSISTANCE

24-hour emergency road service is available to you in the United States throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply). Call (866) 864-5211.