

Wi-Mic

 
HB-1303

User Manual



Identifying parts

Wi-Mic

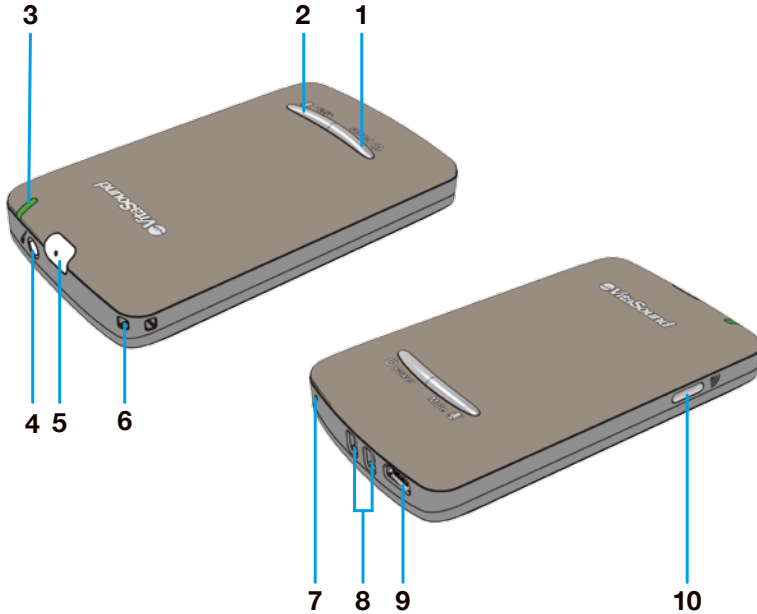

1. Power button
2. Mute button
3. Charging/Power LED
4. External Mic port
5. Internal Mic
6. Hook for neck loop
7. Reset button
8. Charging port for Base Unit
9. Micro-USB charging port
10. Wireless pair button

Charging the Wi-Mic

1. Turn off the Wi-Mic.
2. Plug the micro-USB charger into micro-USB charging port of the Wi-Mic. RED charging/power LED lights up during charging.
(**Optional:** The Wi-Mic can be charged when placed it into the charging port of the Base Unit.)
3. The charging/power LED is off when charging is completed.

Power On

Press and hold the power button for 2 seconds until GREEN power LED lights up.

Power off

Press and hold the power button for 2 seconds until power LED is off.

Mute On

To mute the internal/external Mic, press the mute button once. The GREEN power LED is flashing when Wi-Mic is in mute mode.

Mute off

To cancel the mute status of Wi-Mic, press mute button once. The GREEN power LED lights up and stops flashing.

Pairing with Personal Audio Enhancer (PAE-300)

 
1. Turn on both Wi-Mic and PAE-300.
2. First, press the TV function button on all of the PAE-300 needed for wireless pairing to set them into TV mode. Then, press and hold the Wireless Pair Button on those PAE-300 until the GREEN power LED on those PAE-300 is flashing.
3. Second, press and hold the Wireless Pair Button of the Wi-Mic until the GREEN power LEDs on both PAE-300 and Wi-Mic are fast flashing for pairing.
4. The GREEN power LEDs on both Wi-Mic and PAE-300 are lit solid when the pairing succeeds.

Note:

please follow the above procedures; otherwise, it will result in pairing failure.

How Wi-Mic Works

- Spokesman can speak to the internal mic on Wi-Mic. The voice of the spokesman will go through the Wi-Mic, and then is transmitted to all PAE-300 which are paired with the Wi-Mic. The PAE-300 users are able to listen to the spokesman's voice through the PAE-300 headset.
- External mic can be used by inserting it into the external mic port on the Wi-Mic. Spokesman can speak to the external mic instead of the internal mic without holding the Wi-Mic all the time.

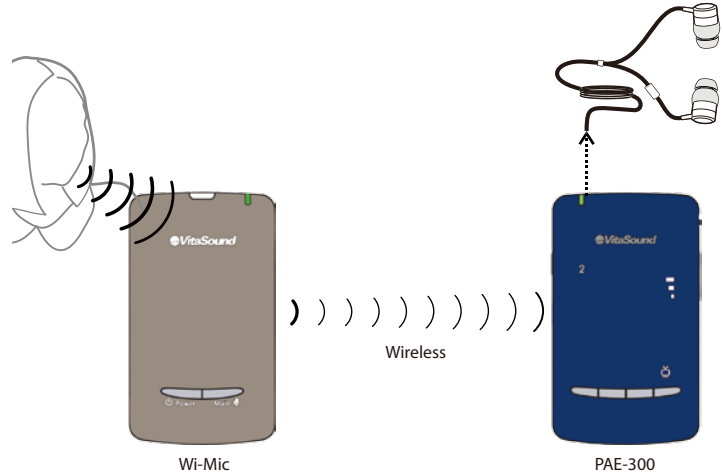

Reset Wi-Mic

When the Wi-Mic cannot be operated in any situation, press the reset button by a small pin object to reset the Wi-Mic.



www.vitasound.com

info@vitasound.com

1-877-967-0742