

TABLE OF CONTENTS
IMPORTANT SAFETY INSTRUCTIONS
SAFETY GUIDELINES
GENERAL SAFETY RULES
ADDITIONAL SPECIFIC SAFETY RULES
ADDITIONAL SAFETY RULES FOR PAINT REMOVAL
<b>CARTON CONTENTS</b>
FUNCTIONAL DESCRIPTION10
<b>ASSEMBLY</b>
<b>OPERATION</b>
TROUBLESHOOTING14
<b>MAINTENANCE</b>
<b>SERVICE</b> 15
ACCESSORIES
<b>WARRANTY</b>
<b>ESPAÑOL</b>
FRANÇAISE
SERVICE CENTER LOCATIONSback cover

# **IMPORTANT SAFETY INSTRUCTIONS**

**AWARNING** Read and understand all warnings and operating instructions before using any tool or equipment. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Porter-Cable strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed.

If you have any questions relative to its application DO NOT use the product until you have written Porter-Cable and we have advised you.

Online contact form at <u>www.porter-cable.com</u> Postal Mail: Technical Service Manager Porter-Cable Corporation 4825 Highway 45 North Jackson, TN 38305 Information regarding the safe and proper operation of this tool is available from the following sources: Power Tool Institute

1300 Sumner Avenue, Cleveland, OH 44115-2851

#### www.powertoolinstitute.org

National Safety Council 1121 Spring Lake Drive, Itasca, IL 60143-3201

American National Standards Institute, 25 West 43rd Street, 4 floor, New York, NY 10036 <u>www.ansi.org</u> ANSI 01.1Safety Requirements for Woodworking Machines, and the U.S. Department of Labor regulations <u>www.osha.gov</u>

# **SAFETY GUIDELINES - DEFINITIONS**

It is important for you to read and understand this manual. The information it contains relates to protecting YOUR SAFETY and PREVENTING PROBLEMS. The symbols below are used to help you recognize this information.



	indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
<b>A</b> WARNING	indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
CAUTION	used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

**AWARNING** Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints
- crystalline silica from bricks and cement and other masonry products
- arsenic and chromium from chemically-treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, always wear NIOSH/OSHA approved, properly fitting face mask or respirator when using such tools.

# **GENERAL SAFETY RULES**

**AWARNING** Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool. SAVE THESE INSTRUCTIONS



- 1) Work area safety
  - a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
  - b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
  - c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

#### 2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- 3) Personal safety
  - a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
  - b) **Use safety equipment. Always wear eye protection.** Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
  - c) Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.

# GENERAL SAFETY RULES continued

- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust-related hazards.

#### 4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

#### 5) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

# **ADDITIONAL SPECIFIC SAFETY RULES**

- 1. Hold power tools by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
- 2. Use proper safety equipment. Wear safety goggles for eye protection, wear hearing protection, and wear a protective mask to minimize breathing in the fine dust created while sanding.
- **3.** Always disconnect the sander cord plug from the power circuit before changing abrasive sheets. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- 4. Sanding of lead-based paint is not recommended. Lead-based paint should only be removed by a professional.
- 5. Always maintain a firm grip on the belt sander handles with both hands to prevent loss of control.
- 6. Do not operate belt sander without all guards and covers securely in place.
- 7. Wear eye and hearing protection. Always use safety glasses. Everyday eyeglasses are NOT safety glasses. USE CERTIFIED SAFETY EQUIPMENT. Eye protection equipment should comply with ANSI Z87.1 standards. Hearing equipment should comply with ANSI S3.19 standards.
- 8. AWARNING Use of this tool can generate and disburse dust or other airborne particles, including wood dust, crystalline silica dust and asbestos dust. Direct particles away from face and body. Always operate tool in well ventilated area and provide for proper dust removal. Use dust collection system wherever possible. Exposure to the dust may cause serious and permanent respiratory or other injury, including silicosis (a serious lung disease), cancer, and death. Avoid breathing the dust, and avoid prolonged contact with dust. Allowing dust to get into your mouth or eyes, or lay on your skin may promote absorption of harmful material. Always use properly fitting NIOSH/OSHA approved respiratory protection appropriate for the dust exposure, and wash exposed areas with soap and water.

SYMBOL		DEFINITION
V		volts
А		amperes
Hz		hertz
W		watts
kW		kilowatts
F		farads
μF		microfarads
I		litres
g		
kg		kilograms
bar		bars
Pa		pascals
h .		
min		
S		
n <sub>o</sub>		•
/min d	ormin-1	Revolutions or reciprocations per minute
o	r d.c	direct current
$\sim$ .	r a.c	alternating current
2 \lambda		two-phase alternating current
2N ∕ ∪		two-phase alternating current with neutral
3'U		three-phase alternating current
3N′∪		three-phase alternating current with neutral
A A		rated current of the appropriate fuse-link in amperes
×	for	time-lag miniature fuse-link where X is the symbol the time/current characteristic, as given in IEC 60127
÷		protective earth
IPXX	•••••	IP SYMDOI

#### ADDITIONAL SAFETY RULES FOR PAINT REMOVAL

Extreme care should be taken when removing paint. The peelings, residue, and vapors of paint may contain lead, which is poisonous. Exposure to even low levels of lead can cause irreversible brain and nervous system damage. Young and unborn children are particularly vulnerable.

Before beginning any paint removal process you should determine whether the paint you are removing contains lead. This can be done by your local health department or by a professional who uses a paint analyzer to check for lead.

#### Lead-based paint should only be removed by a professional.

Persons removing paint should follow these guidelines:

- 1. Keep the work area well ventilated. Open the windows and put an exhaust fan in one of them. Be sure the fan is moving air from inside to outside.
- 2. Remove or cover any carpets, rugs, furniture, clothing, cooking utensils, and air ducts. Such preventive safety measures reduce the risk of exposure.
- 3. Place drop cloths in the work area to catch any paint chips or peelings. Wear protective clothing such as extra work shirts, overalls and hats. Such preventive safety measures reduce the risk of exposure.
- 4. Work in one room at a time. Furnishings should be removed or placed in the center of the room and covered. Work areas should be sealed off from the rest of the dwelling by sealing doorways with drop cloths.
- 5. Children, pregnant, or potentially pregnant women and nursing mothers should not be present in the work area until the work is done and all cleanup is complete. Such preventive safety measures reduce the risk of injury.
- 6. Wear a dust respirator or a dual filter (dust and fume) respirator mask which has been approved by the Occupational Safety and Health Administration (OSHA), the National Institute of Safety and Health (NIOSH), or the United States Bureau of Mines. These masks and replaceable filters are readily available at major hardware stores. Be sure the mask fits. Beards and facial hair may keep the masks from sealing properly. Change filters often. DISPOSABLE PAPER MASKS ARE NOT ADEQUATE.
- 7. Keep food and drink out of the work area. Wash hands, arms, and face and rinse mouth before eating or drinking. Do not smoke or chew gum or tobacco in the work area.
- 8. Clean up all removed paint and dust by wet mopping the floors. Use a wet cloth to clean all walls, sills and any other surfaces where paint or dust is clinging. DO NOT SWEEP, DRY DUST OR VACUUM. Use a high phosphate detergent or trisodium (TSP) to wash and mop areas.
- 9. At the end of each work session, put the paint chips and debris in a double plastic bag, close it with tape or twist ties and dispose properly. Such preventive safety measures reduce the risk of exposure.
- 10. Remove protective clothing and work shoes in the work area to avoid carrying dust into the rest of the dwelling. Wash work clothes separately. Wipe shoes off with a wet rag, then wash that rag with the work clothes. Wash hair and body thoroughly with soap and water.

# MOTOR

Many Porter-Cable tools will operate on either D.C., or single phase 25 to 60 cycle A.C. current and voltage within plus or minus 5 percent of that shown on the specification plate on the tool. Several models, however, are designed for A.C. current only. Refer to the specification plate on your tool for proper voltage and current rating.

**CAUTION** Do not operate your tool on a current on which the voltage is not within correct limits. Do not operate tools rated A.C. only on D.C. current. To do so may seriously damage the tool.

## **EXTENSION CORD SELECTION**

If an extension cord is used, make sure the conductor size is large enough to prevent excessive voltage drop which will cause loss of power and possible motor damage. A table of recommended extension cord sizes will be found in this section. This table is based on limiting line voltage drop to 5 volts (10 volts for 230 volts) at 150% of rated amperes.

If an extension cord is to be used outdoors, it must be marked with the suffix W-A or W following the cord type designation. For example – SJTW-A to indicate it is acceptable for outdoor use.

RECOMMENDED EXTENSION CORD SIZES FOR USE WITH PORTABLE ELECTRIC TOOLS

	Length of Cord in Feet										
	115V	25 Ft.	50 Ft.	100 Ft.	150 Ft.	200 Ft.	250 Ft.	300 Ft.	400 Ft.	500 Ft.	
	230V	50 Ft.	100 Ft.	200 Ft.	300 Ft.	400 Ft.	500 Ft.	600 Ft.	800 Ft.	1000 Ft.	
Ampere Rating	0-2	18	18	18	16	16	14	14	12	12	
	2-3	18	18	16	14	14	12	12	10	10	
	3-4	18	18	16	14	12	12	10	10	8	
	4-5	18	18	14	12	12	10	10	8	8	
	5-6	18	16	14	12	10	10	8	8	6	
	6-8	18	16	12	10	10	8	6	6	6	
	8-10	18	14	12	10	8	8	6	6	4	
late	10-12	16	14	10	8	8	6	6	4	4	
hep	12-14	16	12	10	8	6	6	6	4	2	
Nameplate	14-16	16	12	10	8	6	6	4	4	2	
	16-18	14	12	8	8	6	4	4	2	2	
	18-20	14	12	8	6	6	4	4	2	2	

SAVE THESE INSTRUCTIONS!

# **CARTON CONTENTS**

These sanders are shipped with an instruction manual and a parts list.

# **FUNCTIONAL DESCRIPTION**


## FOREWORD

Porter-Cable Belt Sanders are designed for smoothing rough boards, removing old paint and varnish, fine-surfacing wood, metal, plastics, and other materials.

# ASSEMBLY

**NOTE:** This tool is shipped assembled. No assembly time or tools are required.

**NOTE:** The knob (A) Fig. 1 was removed from the front of the unit for shipping purposes. Screw the knob (A) into the threaded hole (B) securely.

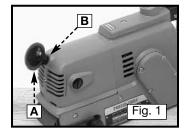

#### SELECTING AN ABRASIVE BELT

The principal abrasive material used on belts for machine sanding are aluminum oxide and silicon carbide. Aluminum oxide is not as hard as the silicon carbide, but is tougher and more suited for woods and soft (nonferrous) metals. Silicon carbide is extremely hard and is best suited for surfacing stone, marble and glass.

Abrasives are classed as open-coated (grit spaced) or closed-coated (Grit nonspaced). Closed coatings provide hard, fast cutting action for hardwoods and dense metals while the open coatings are more suited to soft materials and painted surfaces.

To obtain the best finish, start with a "COARSE" grade of abrasive and change to "MEDIUM" and "FINE" grades as work progresses.

A wide range of available PORTER-CABLE Sanding Belts is listed in the back of the manual. Keep a full assortment on hand so that the correct belt will always be available.

# INSTALLING AND REMOVING THE ABRASIVE BELT

AWARNING Disconnect tool from power source.

- Lay the sander on its left side and move the tension relief lever (A) Fig. 2 to the right. Lock it under the catch on the plate.
- 2. Remove the old belt.
- 3. Install the new belt so that the arrow (B), printed on the inside of the belt, is at the top and pointing toward the front of the sander.


B A FORTER + CREALE FIG. 2

**NOTE:** Some sanding belts are bidirectional. These bi-directional belts will not have arrows printed on them. They may be installed to run in either direction.

- 4. Position the belt so that the outer edge is flush with the outer ends of the pulleys.
- 5. Release the tension lever to restore belt tension.

## TO START AND STOP THE BELT SANDER

- Be certain that the the switch is "OFF" and the power circuit voltage is the same as the voltage shown on the specification plate. Connect the tool to a power circuit.
- 2. Squeeze the trigger (A) Fig. 3 to start the motor. Release the trigger to stop the motor.
- 3. To allow the motor to run without constantly holding the trigger, press the trigger switch (A), push the lock button (B) Fig. 3, and release the trigger switch.

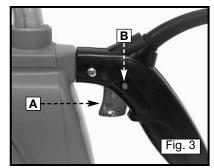


4. To release the lock button, squeeze the trigger and release.

# TRACKING THE ABRASIVE BELT

To prevent excessive wear on both the sander and belt, **NEVER** allow the abrasive belt to rub on the sander frame. To make sure that the belt is tracking correctly, do the following:

AWARNING Make sure that the trigger switch is "**OFF**" before connecting the tool to the power circuit.

- 1. Lift the tool clear of the workpiece and turn the motor "**ON**".
- 2. Turn the belt aligning screw (A) Fig. 4 in either direction until the edge of the belt runs flush with the outer edges of the pulleys.
- 3. Turn the motor "**OFF**" and allow the sander to come to a **complete stop** before putting it down.

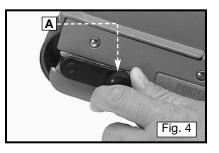

# **OPERATION**

Do not use this sander in any position other than that shown in Fig. 5. Using the sander in a vertical or upsidedown position may cause excessive gear wear because of a lack of lubrication.



#### 

Secure the work and maintain a firm grip on the sander. Friction between the sanding belt and the work will tend to move the work backward and the sander forward.

# 

Always be sure that the switch is **"OFF"** before connecting the tool to the power source.

- 1. Hold the sander off the work before starting the motor.
- 2. Lower the sander to the work, touching the rear part of the belt first. Level the machine when moving it forward.
- 3. Guide the machine over the work in overlapping strokes. Allow the sander to do the work.
- Avoid applying excessive pressure. The weight of the machine is usually sufficient for a fast smooth finish. A slight increase in pressure may speed removal of material, but too much pressure will slow the motor and decrease removal.
- 5. Work back and forth over a fairly wide area to obtain an even surface.
- 6. Do not let the tool tilt. The edge of the belt can make a deep cuts into the surface.
- 7. Do not pause in any one spot during the sanding operation. The belt will eat into the work and make the surface uneven.
- 8. Lift the tool from the work before turning the motor "OFF".
- 9. Always be sure that the motor has completely stopped before putting the tool down.

# FAST SANDING ON ROUGH WORK

To smooth a rough surface quickly, use a coarse grit abrasive belt. With the belt positioned diagonally across the grain, move the tool in the direction of the grain (Fig. 6).

Overlap the strokes and cover the entire surface, working from both sides of the board (angle left and then angle right.) Smooth the surface by guiding the sander back and forth with the grain. Change the belt to a medium grit and follow the same procedure.



Finish by thoroughly working the grain lengthwise. Change again to a fine grit and repeat. Always finish sanding with the grain.

## **REMOVING OLD PAINT AND VARNISH**

**A**WARNING

# Read and follow "ADDITIONAL SAFETY RULES FOR PAINT REMOVAL" section of this manual.

This sander is an excellent tool for removing old paint and varnish from flat surfaces. However, two problems are common: 1) sanding material that loads the abrasive and, 2) friction heat caused by working too long in one place. To overcome the loading problem, use a coarse grit open coat abrasive belt and a single stroke action. Overheating can be avoided by using a fairly quick stroke and moving to another area quickly. A piece of felt about 1/4" thick can be inserted under the shoe for fast spot sanding and for working on stubborn areas of paint and varnish.

#### SPECIAL SANDING PROCEDURES

**AWARNING** Generally, the operator should sand with a back and forth motion. Some materials and some types of operations, however, require a different technique. In rough sanding, use the tool at an angle. In spot sanding, use the tool with only the front pulley touching the surface (especially useful in smoothing excess glue from wood joints). On metals, slate, marble, or plastic materials, sanding can be done in all different directions because of a lack of grain.

#### **DOORS AND MILL WORK**

When sanding doors, cabinet frames, sash, storm windows and screens, take care to avoid working into the cross grain where one member meets another. Notice that the right edge of the belt is visible on the sander. Work carefully along the edge where the rail meets the stile. If the joint is slightly uneven, use a fine abrasive and very light sanding pressure to smooth it before making finishing runs.

For lengthy work on walls or other vertical surfaces, balance the tool with a length of sash cord, two small pulleys, a light wood frame, and a weight that is the same as, or slightly less than, the weight of the sander. The frame consists of two pieces leaning against a wall with a third piece nailed to their top ends. The two pulleys are located so that the weight on one end of the cord will be out of the way, but will balance the sander fastened to the other end. When starting vertical work, angle the sander so you can see that the belt makes contact with the material. As the belt touches, level the machine and make the stroke away and to the left. This movement will offset the tendency to cut heavily into the work at the start of the stroke.

#### **GOOD SANDING TECHNIQUE**

Getting to know the sander is most important in obtaining smooth results with a minimum of labor. Operators will quickly learn how to start a stroke with a sweeping motion to produce the best results. Use a long even stroke without additional pressure on the tool. Overlap each stroke and vary the length of movement so the results will be even. Always lift the tool from the work before starting and stopping the motor.

**BE CAREFUL** when sanding at the end of a board. Keep the tool level and flat on the work surface. Don't let the front of the tool drop. (Fig. 7). If this happens, it will round the edge.



#### SANDING METAL

Use the Belt Sander to obtain a grained satin finish on metal. A special graphite pad is available to replace the steel shoe on the bottom of the sander. The softness of this pad aids in blending the graining. The pad is the proper length for sanders using a 3" x 24" belt. For sanders using shorter belt lengths, cut the pad so that it is the same length as the steel shoe. Replace the steel shoe with the graphite pad.

# TROUBLESHOOTING

For assistance with your tool, visit our website at **<u>www.porter-cable.com</u>** for a list of service centers or call the Porter-Cable help line at 1-800-487-8665.

# MAINTENANCE

#### KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. All plastic parts should be cleaned with a soft damp cloth. NEVER use solvents to clean plastic parts. They could possibly dissolve or otherwise damage the material.

#### **AWARNING** Wear ANSI Z87.1 safety glasses while using compressed air.

#### FAILURE TO START

Should your tool fail to start, check to make sure the prongs on the cord plug are making good contact in the outlet. Also, check for blown fuses or open circuit breakers in the line.

## **DRIVE PULLEY**

The rubber-covered drive pulley at the rear of the machine is tapered from the center to either side to make the abrasive belt run in line with the idler pulley at the front of the machine. After considerable use, the crown of the pulley will wear away and the belt will begin to run off the side of the pulley and cut into the guide block or frame. When this happens, have the drive pulley replaced by your Authorized Porter-Cable Service Station. Check the crown each time the abrasive belt is replaced and tracked. After the belt is tracked to the front pulley, watch it for a few seconds to see that it stays in place on the back pulley. Avoid getting oil and grease on the rubber cover.

## **BELT GUIDE**

The belt guide, or traction block, is made of hardened steel, and is located to the left and to the rear of the idler pulley, fastened to the frame. This block protects the frame of the machine. Always readjust the belt so it moves evenly across (without rubbing) the guide block. This block can be turned over for further use when it becomes worn and uneven. Once both sides are worn and uneven, replace the block. Look for the correct part, specified in the parts list for your sander.

#### LUBRICATION

Although all PORTER-CABLE tools have been thoroughly lubricated with a sufficient amount of high grade lubricant at the time of manufacture, check the oil level in the gear chamber prior to using your tool and periodically thereafter.

Use the following instructions for your specific tool.

## CHECKING THE OIL IN THE GEAR CHAMBER:

**AWARNING** Disconnect tool from power source.

- 1. Place the sander on a level surface
- 2. Remove the oil plug from right side of the sander.
- 3. Ensure that the oil is level with the bottom of the hole.
- 4. If oil is required, remove the oil fill plug from the rear of the housing (near the trigger switch) and add a small amount of PORTER-CABLE SPECIAL OIL #803442 (S.A.E. 90 Gear Oil).
- 5. Repeat steps two through five until the oil level is correct. Let any surplus oil run out before replacing the plugs.

#### LUBRICATING THE CHAIN

Lubricate the chain case every six months, or once a month if the sander is in constant use.

**AWARNING** Disconnect tool from power source.

- 1. Lay the tool on its right side and remove the cover (Fig.8).
- Clean and repack the chain case to approximately half of its capacity with PORTER-CABLE SPECIAL GREASE #875667. Do not over-fill.



#### **DRIVE CHAIN CARE**

Replace the chain when the chain links become loose on the pins.

#### **BRUSH INSPECTION** (If applicable)

For your continued safety and electrical protection, brush inspection and replacement on this tool should ONLY be performed by an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE DELTA FACTORY SERVICE CENTER.

At approximately 100 hours of use, take or send your tool to your nearest authorized Porter-Cable Service Station to be thoroughly cleaned and inspected. Have worn parts replaced and lubricated with fresh lubricant. Have new brushes installed, and test the tool for performance.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

# SERVICE

## **REPLACEMENT PARTS**

When servicing use only identical replacement parts. For a service parts list or to learn more about Porter-Cable visit our website at <u>www.porter-cable.com</u>

#### SERVICE AND REPAIRS

All quality tools will eventually require servicing, or replacement of parts due to wear from normal use. For assistance with your tool, visit our website at **www.porter-cable.com** for a list of service centers or call the Customer Care Department at **1-800-487-8665.** All repairs made by our service centers are fully guaranteed against defective material and workmanship. We cannot guarantee repairs made or attempted by others.

Should you have any questions about your tool, feel free to write us at any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

# ACCESSORIES

A complete line of accessories is available from your Porter-Cable•Delta Supplier, Porter-Cable•Delta Factory Service Centers, and Porter-Cable Authorized Service Stations. Please visit our Web Site <u>www.porter-cable.com</u> for a catalog or for the name of your nearest supplier.

AWARNING Since accessories other than those offered by Porter-Cable•Delta have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Porter-Cable•Delta recommended accessories should be used with this product.

# WARRANTY

# PORTER-CABLE LIMITED ONE YEAR WARRANTY

Porter-Cable warrants its Professional Power Tools for a period of one year from the date of original purchase. We will repair or replace at our option, any part or parts of the product and accessories covered under this warranty which, after examination, proves to be defective in workmanship or material during the warranty period. For repair or replacement return the complete tool or accessory, transportation prepaid, to your nearest Porter-Cable Service Center or Authorized Service Station. Proof of purchase may be required. This warranty does not apply to repair or replacement required due to misuse, abuse, normal wear and tear or repairs attempted or made by other than our Service Centers or Authorized Service Stations.

ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL LAST ONLY FOR ONE (1) YEAR FROM THE DATE OF PURCHASE.

To obtain information on warranty performance please write to: PORTER-CABLE CORPORATION, 4825 Highway 45 North, Jackson, Tennessee 38305; Attention: Product Service. THE FOREGOING OBLIGATION IS PORTER-CABLE'S SOLE LIABILITY UNDER THIS OR ANY IMPLIED WARRANTY AND UNDER NO CIRCUMSTANCES SHALL PORTER-CABLE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

#### **PORTER-CABLE • DELTA SERVICE CENTERS** (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA) (CENTRE DE SERVICE PORTER-CABLE • DELTA)

Parts and Repair Service for Porter-Cable • Delta Power Tools are Available at These Locations (Obtenga Refaccion de Partes o Servicio para su Herramienta en los Siguientes Centros de Porter-Cable • Delta) (Locations où vous trouverez les pièces de rechange nécessaires ainsi qu'un service d'entretien)

#### ARIZONA

Tempe 85282 (Phoenix) 2400 West Southern Avenue Suite 105 Phone: (602) 437-1200 Fax: (602) 437-2200

#### CALIFORNIA

Ontario 91761 (Los Angeles) 3949A East Guasti Road Phone: (909) 390-5555 Fax: (909) 390-5554

San Diego 92111 7638 Clairemont Blvd. Phone: (858) 277-9595 Fax: (858) 277-9696

San Leandro 94577 (Oakland) 3039 Teagarden Street Phone: (510) 357-9762 Fax: (510) 357-7939

#### COLORADO

Arvada 80003 (Denver) 8175 Sheridan Blvd., Unit S Phone: (303) 487-1809 Fax: (303) 487-1868

FLORIDA Davie 33314 (Miami) 4343 South State Rd. 7 (441) Unit #107 Phone: (954) 321-6635 Fax: (954) 321-6638

Tampa 33609 4538 W. Kennedy Boulevard Phone: (813) 877-9585 Fax: (813) 289-7948

GEORGIA Forest Park 30297 (Atlanta) 5442 Frontage Road, Suite 112 Phone: (404) 608-0006 Fax: (404) 608-1123

# ILLINOIS Addison 60101 (Chicago)

400 South Rohlwing Rd. Phone: (630) 424-8805 Fax: (630) 424-8895 Woodridge 60517 (Chicago) 2033 West 75th Street Phone: (630) 910-9200 Fax: (630) 910-0360

# MARYLAND Elkridge 21075 (Baltimore) 7397-102 Washington Blvd. Phone: (410) 799-9394

Fax: (410) 799-9398 MASSACHUSETTS Franklin 02038 (Boston) Franklin Industrial Park 101E Constitution Blvd Phone: (508) 520-8802 Fax: (508) 528-8089

#### MICHIGAN Madison Heights 48071 (Detroit) 30475 Stephenson High Phone: (248) 597-5000 Fax: (248) 597-5004

MINNESOTA Minneapolis 55429 5522 Lakeland Avenue North Phone: (763) 561-9080 Fax: (763) 561-0653

#### MISSOURI North Kansas City 64116 1141 Swift Avenue Phone: (816) 221-2070

Fax: (816) 221-2897 St. Louis 63119 7574 Watson Road Phone: (314) 968-8950 Fax: (314) 968-2790

NEW YORK NEW YORK Flushing 11365-1595 (N.Y.C.) 175-25 Horace Harding Expwy. Phone: (718) 225-2040 Fax: (718) 423-9619

NORTH CAROLINA Charlotte 28270 9129 Monroe Road, Suite 115 Phone: (704) 841-1176 Fax: (704) 708-4625

оню Columbus 43214 4560 Indianola Avenue Phone: (614) 263-0929 Fax: (614) 263-1238

Cleveland 44125 8001 Sweet Valley Drive Unit #19 Phone: (216) 447-9030 Fax: (216) 447-3097

OREGON Portland 97230 4916 NE 122 nd Ave. Phone: (503) 252-0107 Fax: (503) 252-2123

PENNSYLVANIA Willow Grove 19090 (Philadelphia) 520 North York Road Phone: (215) 658-1430 Fax: (215) 658-1433

TEXAS Carrollton 75006 (Dallas) 1300 Interstate 35 N. Suite 112 Phone: (972) 446-2996 Fax: (972) 446-8157

Houston 77043 4321 Sam Houston Parkway, West Suite 180 Phone: (713) 983-9910 Fax: (713) 983-6645

WASHINGTON Auburn 98001(Sea 3320 West Valley HWY, North Building D, Suite 111 Phone: (253) 333-8353 Fax: (253) 333-9613

Authorized Service Stations are located in many large cities. Telephone 800-487-8665 or 731-541-6042 for assistance locating one. Parts and accessories for Porter-Cable • Delta products should be obtained by contacting any Porter-Cable • Delta Distributor, Authorized Service Center, or Porter-Cable • Delta Factory Service Center. If you do not have access to any of these, call 888-848-5175 and you will be directed to the nearest Porter-Cable • Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Lame al 800-487-8665 ó al 731-541-6042 para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable • Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable • Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable • Delta. Si no tiene acceso a ninguna de estas opciones, llame al 888-848-5175 y le dirigirán al Centro de Servicio de Fábrica Porter-Cable • Delta más cercano. Des centres de service agréés sont situés dans beaucoup de grandes villes. Appelez au 800-487-8665 ou au 731-541-6042 pour obtenir de l'aide pour en repérer un. Pour obtenir des pièces et accessoires pour les produits Porter-Cable • Delta, s'adresser à tout distributeur Porter-Cable • Delta, centre de service agréé ou centre de service d'usine Porter-Cable • Delta. Si vous n'avez accès à aucun de ces centres, appeler le 888-848-5175 et on vous dirigera vers le centre de service d'usine Porter-Cable • Delta le plus proche

#### **CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS** MANITOBA QUÉBEC 1699 Dublin Avenue

Fax: (204) 632-1976

ONTARIO

ALBERTA Bay 6, 2520-23rd St. N.E. Calgary, Alberta T2E 8L2 Phone: (403) 735-6166 Fax: (403) 735-6144 BRITISH COLUMBIA 8520 Baxter Place Burnaby, B.C. V5A 4T8 Phone: (604) 420-0102 Fax: (604) 420-3522

#### 1515 Ave. St-Jean Baptiste, Suite 160 Winnipeg, Manitoba R3H 0H2 Québec, P.Q. G2E 5E2 Phone: (418) 877-7112 Phone: (204) 633-9259 Fax: (418) 877-7123 1447, Begin 505 Southgate Drive Guelph, Ontario N1H 6M7 St-Laurent, (Mtl), P.Q. H4R 1V8 Phone: (519) 767-4132 Fax: (519) 767-4131 Phone: (514) 336-8772 Fax: (514) 336-3505

Tak. (014) 762-752 Tak. (014) 762-753 Tak. (014) 763-753 Tak. (014) 753-753 Tak. (014) 7

WOODWORKER'S CHOCE™. Trademarks noted with ™ and ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Traditionale force manifer and e all registre of the second outcest a dark and the densities of online and registre data second exact a dark and the densities of the second exact a dark and the densities of the second exact a dark and the densities of the second exact a dark and the densities of the second exact a dark and the densities of the second exact a dark and the densities of the densities of the second exact a dark and the densities of the densities o marques déposées aux Etats-Unis et pourraient être déposées aux autres pays