

FCC Part 15 Subpart C Transmitter Certification

Direct Sequence Spread Spectrum Transmitter

Test Report

FCC ID: KDZLXEMX7P1

FCC Rule Part: 15.247

ACS Report Number: 05-0341-15C

Manufacturer: LXE, Inc.
Model: MX7

Operators Guide

MX7 User's Guide

(Microsoft® Windows® CE 5.0 Equipped)

**FOR REVIEW – DO NOT PUBLISH OR DISTRIBUTE – LXE
CONFIDENTIAL – DRAFT 08 –**



Copyright © November 2005 by LXE Inc.
All Rights Reserved
E-EQ-MX70GWW-A



Language: English Notices

LXE Inc. reserves the right to make improvements or changes in the products described in this guide at any time without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, LXE assumes no liability resulting from any errors or omissions in this document, or from the use of the information contained herein. Further, LXE Incorporated, reserves the right to revise this publication and to make changes to it from time to time without any obligation to notify any person or organization of such revision or changes.

Copyright:

This document is copyrighted. All rights are reserved. This document may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form without prior consent, in writing, from LXE Inc.

Copyright © 2005 by LXE Inc. An EMS Technologies Company.
125 Technology Parkway, Norcross, GA 30092 U.S.A. (770) 447-4224

Trademarks:

LXE® is a registered trademark of LXE Inc. *Odyssey Client* © Copyright 2002-2005 Funk Software, Inc. All rights reserved. Odyssey® and Funk® are registered trademarks of Funk Software, Inc. *Microsoft*®, *Windows*® and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries. *Java*® and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. or other countries, and are used under license. All other brand or product names are trademarks or registered trademarks of their respective companies or organizations. When this document is in PDF format: "Acrobat © Reader Copyright © 1987-2005 Adobe Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated." Applies.

Initial Release November 2005.

The user is strongly encouraged to read Appendix B, "Regulatory Notices and Safety Information". Important safety cautions, warnings and regulatory information is contained in Appendix B.



Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.

Table of Contents

INTRODUCTION	1
Overview	1
Important Battery Information	2
Document Conventions	3
Environmental Specifications	3
Laser Warnings and Labels	4
Components	5
Front Views	5
Back View	6
Scanner / Imager Aperture	7
AC Adapter	7
Cables	8
Handle and Handstrap	9
QUICK START	11
In Brief	11
Troubleshooting	11
Inserting Fully Charged Battery	12
Tapping the Power Key	13
Tapping the Touchscreen with a Stylus	14
Keypad Shortcuts	14
Calibrating the Touchscreen	15
Checking Battery Status	15
Optional Accessory Installation	16
Installing Trigger Handle (Optional)	16
Attaching Handstrap	17
Assembling the AC Power Adapter	18
Connecting the Multipurpose USB / Power Cable	19
Connecting the Multipurpose RS-232 / Power Cable	19
Connecting to a Printer Interface Cable	20
Connecting Audio Cable	20
Using the 55 Key ANSI / CE Keypad	21
Using the 32-Key Numeric-Alpha Keypad	22
Entering Data	23
Keypad Entry	23
Stylus Data Entry	23
Scanner Entry	24
Tethered Scanners	24
Input Panel – Virtual Keyboard	25
Getting Help	26
Manuals	26
Accessories	26

THE MX7 HAND HELD COMPUTER	27
Reboot Sequence	27
Warm Reset	27
Cold Reset	27
Saving Changes to the Registry	27
Touchscreen Display	28
Applying the Protective Film to the Display	28
Touchscreen Calibration	29
Cleaning the Glass Display/Scanner Aperture	29
Adjusting the Display Backlight	30
Set the Display Backlight Brightness	30
Set the Display Backlight Timer	30
Setting the Power Schemes Timers	31
Battery Power Scheme	31
AC Power Scheme	31
Setting The Audio Speaker Volume	32
Using the Keypad	32
Using the Touchscreen	33
The Keypads	34
LED Indicators	35
System Status	35
Scan Status	35
Alpha Mode (32-key Alph Key)	35
Standard Keys	36
Function Keys	36
Sticky Keys	36
Ctl / Ctrl (Control key)	36
Alt (Alternate key)	36
Shft (Shift key)	36
Orange and Blue Keys	37
Field Exit	37
Mode Key Functions	38
CapsLock Mode	38
55-Key Keypad	38
32-Key Keypad	38
Mappable Diamond Keys	39
55 Key Keypad	39
32 Key Keypad	40
Batteries	41
Main Battery	41
Backup Battery	41
Battery Hotswapping	42
Battery Chargers	43
Charge Main Battery in MX7 Multi-Charger	43
Passive Vehicle Mount Cradle	45
Cradle Assembly Components	46
U-Bracket	46
U-Bracket Footprint	46
RAM Ball and Cylinder	47
RAM Assembly Footprint	48

How to Install the Cradle U-Bracket	49
How To Install the RAM Bracket.....	51
APPENDIX A KEY MAPS	55
<hr/>	
Introduction.....	55
55-Key Alphanumeric Keymaps	55
ANSI / CE Keypad	55
5250 Key Map for the 55-Key Keypad	60
32-Key Numeric-Alpha Keypad	61
APPENDIX B REGULATORY NOTICES AND SAFETY INFORMATION	67
<hr/>	
MX7 Approvals/Standards	68
INDEX	75
<hr/>	

Illustrations

Figure 1 CDRH / IEC 825 Caution Label Location – MX7, Back	4
Figure 2 Caution Label – Class 2 Laser Scanner	4
Figure 3 Front Components	5
Figure 4 Back Components	6
Figure 5 Scanner Aperture	7
Figure 6 AC Adapter.....	7
Figure 7 Handle and Handstrap.....	9
Figure 8 Main Battery Pack	12
Figure 9 Power Key Location	13
Figure 10 Touchscreen Recalibration	15
Figure 11 Handle Attach Points	16
Figure 12 Attaching the Handstrap	17
Figure 13 AC Power Adapter Assembly	18
Figure 14 Connect the USB / Power Cable to the MX7 Port	19
Figure 15 Connect the RS-232 / Power Cable to the MX7 Port.....	19
Figure 16 Connect to a Printer Interface Cable	20
Figure 17 Connect Audio Jack.....	20
Figure 18 Scan Beam.....	24
Figure 19 Scan Status LED	24
Figure 20 Input Panel / Virtual Keyboard.....	25
Figure 21 Touchscreen Display	28
Figure 22 Touchscreen Recalibration	29
Figure 23 Setting the Display Backlight Timer.....	30
Figure 24 Volume & Sounds Properties	33
Figure 25 The 32-key and 55-key Keypads	34
Figure 26 Mappable Diamond Keys	39
Figure 27 Lithium Ion Battery Pack.....	41
Figure 28 MX7 Multi-Charger / Analyzer	43
Figure 29 Insert Battery Pack in Charging Pocket.....	44
Figure 30 Passive Vehicle Mount Cradle and U-Bracket	46
Figure 31 U-Bracket Mounting Footprint	46
Figure 32 Passive Vehicle Mount Cradle / RAM Ball Assembly	47
Figure 33 RAM Bracket Components.....	47
Figure 34 RAM Assembly Footprint	48
Figure 35 Installing the Cradle U-Bracket.....	49
Figure 36 Installing the RAM Assembly	51

Introduction

Overview

The LXE® MX7 is a rugged, portable, hand-held Microsoft® Windows® CE 5.0 equipped mobile computer capable of wireless data communications. The mobile device can transmit information using an 802.11 radio and it can store information for later transmission through an RS-232 or USB port. Bluetooth® radio is not supported by LXE.

The mobile device is vertically oriented and features backlighting for the display. The touch-screen display supports graphic features and Windows icons that the Windows CE 5.0 operating system supports. Keypads are available in 55-key alphanumeric and 32-key numeric-alpha versions. Also available is a 5250 55-key keypad overlay.

This device is a Windows CE 5.0 compatible computer that can be scaled from a limited function batch computer to an integrated RF scanning computer.

The attached stylus is used to assist in entering data and configuring the mobile device. Protective film for the touchscreen is available as an accessory. A trigger handle is available as an accessory.

The MX7 is powered by a 2200 mAh Lithium-Ion main battery pack and an internal NiCd backup battery.



Important

If the mobile device has AppLock installed, please refer to the “MX7 Reference Guide”, “Chapter 4 – AppLock” for setup and processing information before continuing.

When you are ready to set up the radio, security and wireless parameters, please refer to the “MX7 Reference Guide”, “Chapter 5 – Wireless Network Configuration”.

Related Manuals

If you need to set up the integrated SE824 or SE1524 scanner **barcode reading parameters**, please refer to Chapter 2 in the “Integrated Scanner Programming Guide” on the LXE Manuals CD or the LXE ServicePass website.

If you need to set up the Intermec EV15 linear imager, please refer to Chapter 3 in the “Integrated Scanner Programming Guide”.



Important Battery Information

Note: This mobile device's backup battery maintains its charge by drawing power from the main battery pack. Always store unused devices with a fully charged main battery pack installed. LXE recommends an in-use mobile device be frequently connected to an external power source to maintain optimum power levels in the main battery pack and the backup battery. When the backup battery and main battery pack are dead, the mobile device reverts to the last saved setup defaults when a fully charged main battery pack is installed and the device is powered On again.







Tap  | **Settings** | **Control Panel** | **Battery** tab.

- Until the main battery and backup battery are completely depleted, the MX7 is always drawing power from the batteries (On).
- New batteries must be fully charged prior to use.
- Whenever possible, use the AC power adapter with the MX7 to conserve the main battery and recharge the backup battery.
- When a new battery is installed in the MX7 for the first time (or when the backup battery is completely depleted), the Time and Date reverts to its default values.

Tap  | **Settings** | **Control Panel** | **Date/Time** tab.

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Document Conventions


ALL CAPS	All caps are used to represent disk directories, file names, and application names.
Menu Choice	Rather than use the phrase “choose the Save command from the File menu”, this guide uses the convention “choose File Save”.
“Quotes”	Indicates the title of a book, chapter or a section within a chapter (for example, “Document Conventions”).
< >	Indicates a key on the keypad (for example, <Enter>).
	Indicates a reference to other documentation.
ATTENTION	Keyword that indicates vital or pivotal information to follow.
	Attention symbol that indicates vital or pivotal information to follow. Also, when marked on product, means to refer to the user’s guide.
	International fuse replacement symbol. When marked on the product, the label includes fuse ratings in volts (v) and amperes (a) for the product.
<i>Note:</i>	Keyword that indicates immediately relevant information.
CAUTION 	Keyword that indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
WARNING 	Keyword that indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
DANGER 	Keyword that indicates a imminent hazardous situation which, if not avoided, will result in death or serious injury.

Environmental Specifications

Operating Temperature	14°F to 122°F (-10°C to 50°C) [non-condensing]
Storage Temperature	-4°F to 158°F (-20°C to 70°C) [non-condensing]
Water and Dust	IEC 60529 compliant to IP54
Operating Humidity	5% to 90% non-condensing at 104°F (40°C)
Vibration	Based on MIL Std 810D
ESD	8 kV air, 4kV contact

Laser Warnings and Labels

- Do not look into the laser's lens.
- Do not stare directly into the laser beam.
- Do not remove the laser caution labels from the MX7.
- Do not connect the laser barcode window to any other device. The laser barcode window is certified for use with the MX7 only.

<p>Caution:</p> 	<p><i>Laser radiation when open. Please read the caution labels.</i></p> <p><i>Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</i></p>
--	--

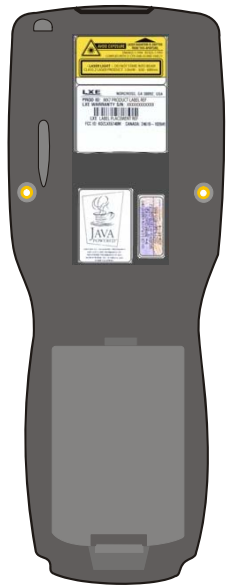


Figure 1 CDRH / IEC 825 Caution Label Location – MX7, Back


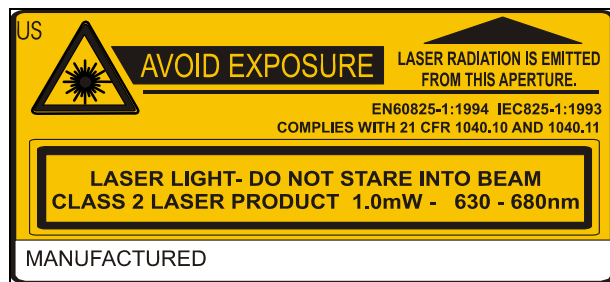


Figure 2 Caution Label – Class 2 Laser Scanner

Components


Front Views

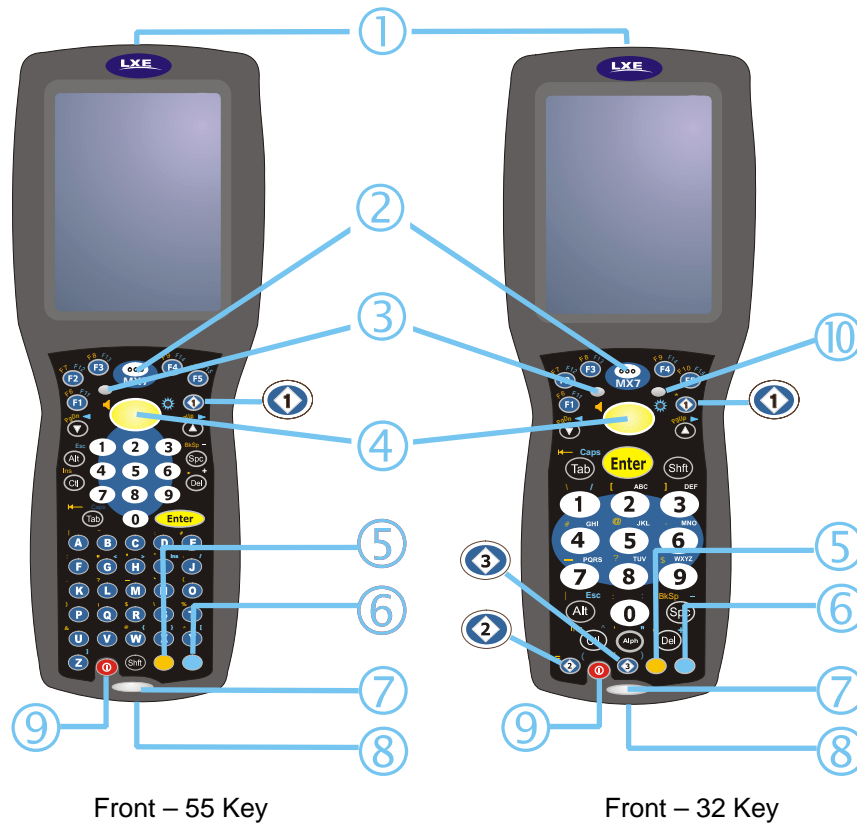

Front – 55 Key

Front – 32 Key

Figure 3 Front Components

- 1 Scanner Aperture
- 2 Speaker
- 3 System Status LED
- 4 Scan Button
- 5 Orange Key (Sticky Key)
- 6 Blue Key (Sticky Key)
- 7 Scan Status LED
- 8 Cable Port
- 9 On / Off Button
- 10 “Alpha” Lock LED
-  Diamond Number Keys

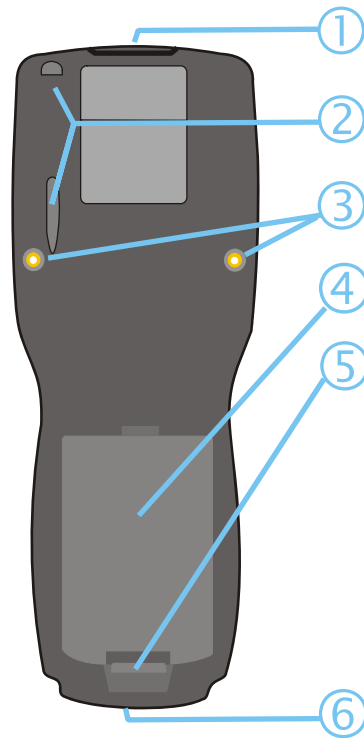
Back View

Figure 4 Back Components

- 1 Scanner Aperture
- 2 Stylus and stylus holder
- 3 Trigger Handle Attach Points
and
Handstrap Retainer Bracket Attach Points
- 4 Main Battery
- 5 Battery Fastener
- 6 Cable Ports

Scanner / Imager Aperture



Figure 5 Scanner Aperture

Note: The Imager has clear plastic protecting the imager engine. The Scanner has red plastic protecting the scanner engine. The No-Scanner option has an opaque window protecting the MX7 internal components.

AC Adapter



AC Adapter



AC Power Cable



Figure 6 AC Adapter

Cables


Cable: Multipurpose RS-232 and Power
MX7A055MULTICBLDA9F




Cable: Multipurpose USB and Power
MX7A052MULTICBLUSB



Adapter/Cable : Audio
MX7A060ADPTCBLVOICE

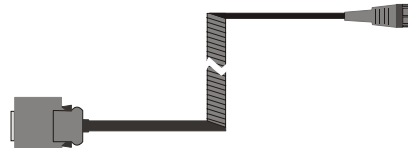

Adapter: RS-232 PC port to D9 male
MX7A058ADPTCBLPER

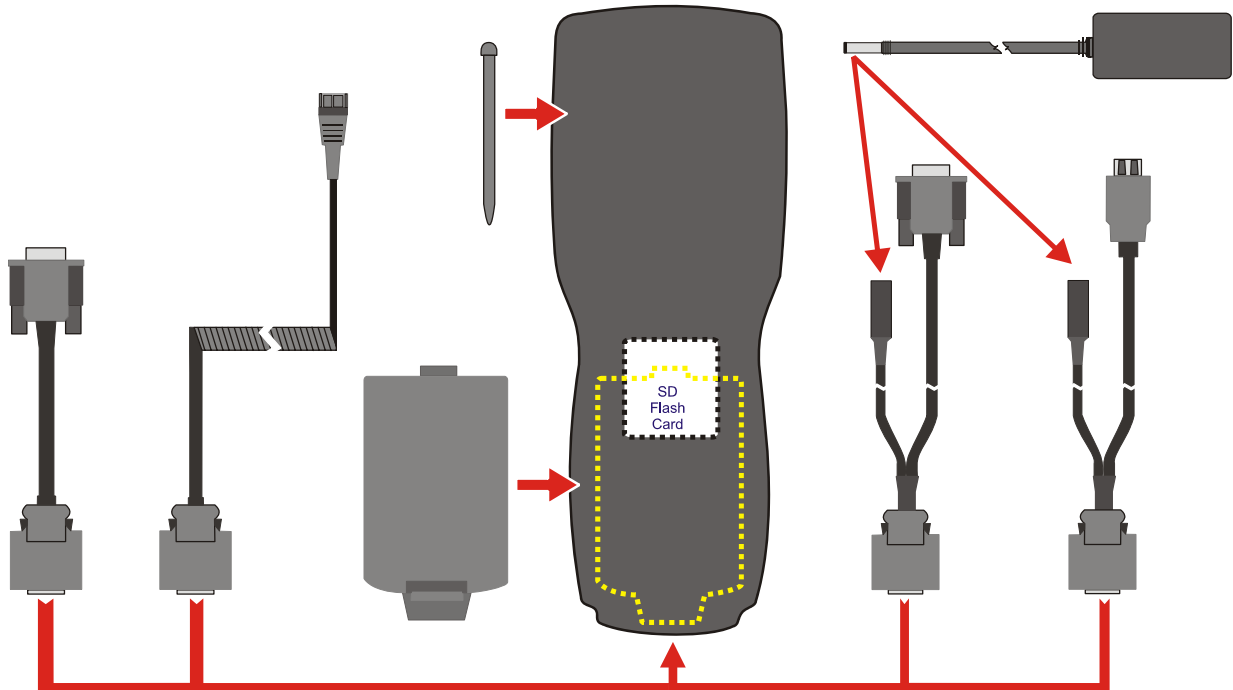

Handle and Handstrap

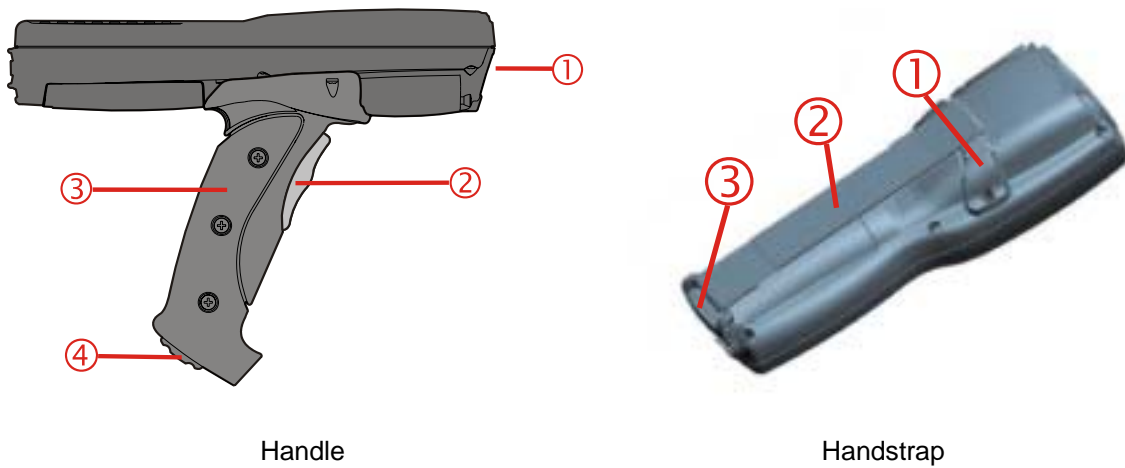


Figure 7 Handle and Handstrap

- | | | | |
|---|---------------------|---|----------------------------|
| 1 | Scan Aperture | 1 | Handstrap Retainer Bracket |
| 2 | Trigger | 2 | Handstrap |
| 3 | Handle | 3 | Handstrap Clip |
| 4 | Tether Attach Point | | |

Note: Either the trigger handle is attached to the MX7 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times.

LXE pre-installs the handstrap when the MX7 is purchased without a trigger handle.



Quick Start


In Brief . . .

Note: When your mobile device is pre-configured, the radio, keypad and scan aperture configurations are assembled by LXE to your specifications.

This section's instructions are based on the assumption that your new device is pre-configured and requires only accessory installation (e.g. stylus) and a power source. LXE recommends that installation or removal of accessories be performed on a clean, well-lit surface. When necessary, protect the work surface, the mobile device, and components from electrostatic discharge.

This guide takes you through an introduction to and operation of the MX7.



1. Insert a fully charged main battery pack. (Always put a fully charged battery in the mobile device at the beginning of the shift or workday.)
2. Connect an external power source to the unit (if required).
3. If the screen does not automatically display, tap the Power key.
4. Calibrate the touchscreen.
5. After all files are loaded and the Desktop is displayed, adjust audio volume and other parameters if desired.

If needed, change the Time and Date from its default value by tapping the  | **Settings** | **Control Panel** | **Date/Time** icon.

Troubleshooting

Can't calibrate the touch screen, change the date/time or adjust the volume.	AppLock is installed and running on the mobile device. AppLock restricts User access to running programs. Changes or modifications require Administrator access. Refer to the "MX7 Reference Guide", "Chapter 4 - AppLock" for setup and processing information.
--	---

Inserting Fully Charged Battery

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Note: The unit will not function unless the main battery pack is in place and securely latched. Be sure to place the mobile device in suspend before removing the battery. If you don't, you may lose all unsaved data.



Figure 8 Main Battery Pack

The main battery is located in a compartment on the back of the unit. To insert or replace the battery, complete the following steps:

1. Place the MX7 in Suspend mode.
2. Detach the bottom hook of the handstrap (if installed).
3. Press the battery locking tab up to release the main battery pack. The battery case serves as the back cover for the battery well for the MX7.
4. Pull the battery up and out of the battery well with a hinge motion. Place the discharged battery pack in a powered battery charger/analyzer.
5. Tilt the end (without the latch) of the fully charged battery pack into the upper end of the battery compartment, and firmly press the other end (with the latch) until it is fully inserted into the battery compartment.
6. Push down on the battery pack until it clicks into place.
7. Replace the handstrap clip in its holder.

Note: The battery should not be replaced in a dirty, harsh or hazardous environment. When the battery is out of the MX7, any dust or moisture that enters the battery compartment can get into the main unit, potentially causing damage.

Tapping the Power Key

Note: Refer to the section titled "Power Modes" in the "MX7 Reference Guide" for information relating to the power states of the MX7.

Important: Until the main battery and backup battery are completely depleted, the MX7 is always drawing power from the batteries (On).

When a battery is inserted in the MX7 for the first time press the Power key.

Tapping the Power key places the MX7 immediately in Suspend mode.

Tapping the Power key again immediately returns the MX7 from Suspend.

or

Tap  | Suspend.

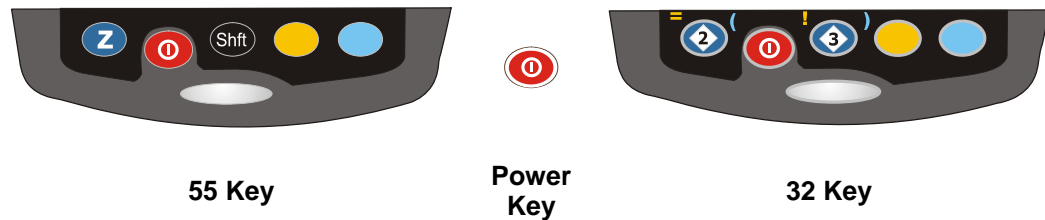


Figure 9 Power Key Location

See section "LED Indicators" and "System Status LED" later in this guide.

Tapping the Touchscreen with a Stylus

Note: Always use the point of the stylus for tapping or making strokes on the touchscreen. Never use an actual pen, pencil or sharp object to write on the touchscreen.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. Firmly press the stylus into the stylus holder when the stylus is not in use.

Like using a mouse to left-click icons on a desktop computer screen, using the stylus to tap icons on the touchscreen is the basic action that can:

- Open applications
- Choose menu commands
- Select options in dialog boxes or drop-down boxes
- Drag the slider in a scroll bar
- Select text by dragging the stylus across the text
- Place the cursor in a text box prior to typing in data or retrieving data using the integrated barcode scanner or an input/output device connected to the serial port.

A stylus replacement kit containing 10 stylus' can be ordered from LXE. See the section titled "Accessories" for the stylus replacement kit part number.

Note: A "right mouse click" function must be programmed by the customer to accept a constant stream of left mouse click messages. An application can choose to interpret this stream of messages as a right mouse click. LXE does not support non-LXE application programming.

Keypad Shortcuts

Use keyboard shortcuts instead of the stylus:

- Press <Tab> and an <Arrow> key to select a file.
- Press <Shift> and an <Arrow> key to select several files.
- Once you've selected a file, press <Alt> then press <Enter> to open its Properties dialog.
- Press to delete a file.
- To force the Start menu to display, press <Ctl> and release, press <Blue> and release, then press <Esc> (the Alt key).

Calibrating the Touchscreen

If the touchscreen is not responding properly to stylus taps, you may need to recalibrate the touchscreen. Recalibration involves tapping the center of a target. If you miss the center, keep the stylus on the screen, slide it over the target's center, and then lift the stylus.

If the touchscreen is not accepting taps or needs recalibration, press <Ctrl>+<Esc> to force the Start Menu to appear.

To recalibrate the screen, select  | **Settings** | **Control Panel** | **Stylus** | **Calibration** tab.

To begin, tap the Recalibrate button on the screen with the stylus.

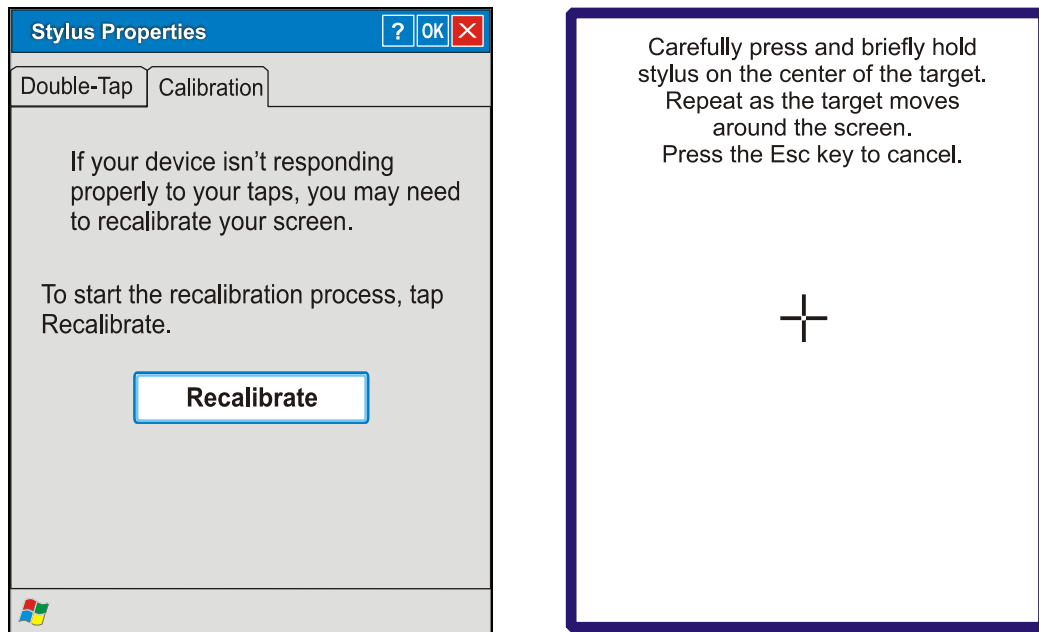



Figure 10 Touchscreen Recalibration

Follow the instructions on the screen and press the Enter key to save the new calibration settings or press Esc to cancel or quit.

Checking Battery Status

Tap the  | **Settings** | **Control Panel** | **Battery** icon. Main battery level, backup battery level, status and other details are displayed.

Optional Accessory Installation

Installing Trigger Handle (Optional)

Note: Either the trigger handle is attached to the MX7 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times.

The MX7 can be purchased with a customer-installable trigger handle. The handle is shipped with a wrist strap. The handle enables the user of the MX7 to hold the mobile device comfortably while pointing and activating the scanner with one hand. With the handle installed, the MX7 can balance on a tabletop supported by the nose of the mobile device and the bottom of the handle.

Pressing the trigger on the handle activates the laser scanner / imager. The trigger performs the same function as the Scan key on the keypad. With the handle installed the Scan key on the keypad remains active.

The handle is built of a durable and flexible plastic with a rubber grip that will not detach from the MX7 if the unit is dropped. The trigger handle is a mechanical device. Battery or external A/C power is not required for operation of the trigger handle. The trigger handle does not need to be removed when replacing the main battery. The trigger handle does not contain a battery pack.

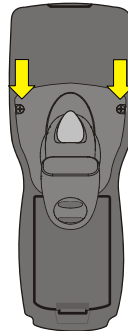


Figure 11 Handle Attach Points

Handle Installation

1. Place the MX7, with the screen facing down, on a flat stable surface.
2. Remove the main battery pack.
3. Slide the locking tab on the underside of the pistol grip into the slot at the back of the battery compartment and press it firmly into place.
4. Ensure that the battery can be inserted into the battery compartment before securing the pistol grip handle into place.
5. Attach the pistol grip handle to the MX7 (as shown above) with the set of two screws and washers provided.
6. Test the handle's connection making sure the MX7 is securely connected to the handle.

Periodically check the pistol grip handle for wear and the connection for tightness. If the handle gets worn or damaged, it must be replaced. If the pistol grip connection loosens, it must be tightened before the MX7 is placed in service.

Attaching Handstrap

Note: Either the trigger handle is attached to the MX7 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times. LXE pre-installs the handstrap on devices that are purchased without a trigger handle.

Once installed, the handstrap provides a means for the user to secure the computer to their hand. It is adjustable to fit practically any size hand and does not interfere with the multipurpose cable, if connected, when the mobile device is in a cradle.



Figure 12 Attaching the Handstrap

- 1 Handstrap Retainer Bracket
- 2 Handstrap
- 3 Handstrap Clip

Tool Required: #1 Phillips Screwdriver (not supplied by LXE)

Installation

1. Place the MX7, with the screen facing down, on a flat stable surface.
2. Attach the handstrap retainer bracket to the MX7 with the screws provided.
3. Slip the Handstrap Clip into the bracket at the base of the MX7.
4. Making sure the closed loop fastener surfaces on the handstrap are facing up, slide the strap through the pin in the retainer bracket and the clip.
5. Fold each end of the the strap over so that the closed loop fastener surfaces mate evenly.
6. Test the strap's connection making sure the MX7 is securely connected to each end of the strap connectors.

Check the closed loop fastener, retainer bracket and clip connections frequently. If they have loosened, they must be tightened before the MX7 is placed into service again.

Assembling the AC Power Adapter

The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.



Figure 13 AC Power Adapter Assembly

- Firmly press the female end of the power cable into the male connector on the power adapter.
- Plug the 3-prong cable into an AC wall outlet. AC power is now being supplied to the power adapter.

Press the power cable connector pin from the power adapter into the connector on the (USB/Power or RS-232/Power) cable attached to the base of the MX7.

AC power is now being supplied to the MX7.

Connecting the Multipurpose USB / Power Cable



Figure 14 Connect the USB / Power Cable to the MX7 Port

- Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B Firmly push the power cable connector pin into connector B until you hear a slight click. Plug the 3-prong cable into an AC wall outlet.
- Connector C Insert the USB Type A plug into an appropriate USB port on a desktop/laptop computer for ActiveSync communication.

Connecting the Multipurpose RS-232 / Power Cable

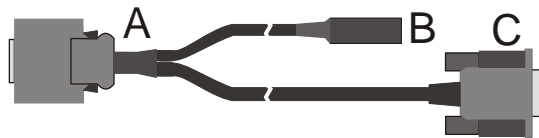


Figure 15 Connect the RS-232 / Power Cable to the MX7 Port

- Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B Firmly push the power cable connector pin into connector B until you hear a slight click. Plug the 3-prong cable into an AC wall outlet.
- Connector C Align the RS-232 serial cable end carefully to an appropriate serial port on a desktop/laptop computer for ActiveSync communication. Press the ends together and hand tighten the screws on either side of the serial cable until the MX7 is securely connected to the serial device.

Connecting to a Printer Interface Cable



Figure 16 Connect to a Printer Interface Cable

- Connector A** Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B** Align the RS-232 serial cable end carefully to the serial port on the cable from the printer. Press the ends together and hand tighten the screws on either side of the serial cable until it is securely connected to the printer cable.

Connecting Audio Cable

The audio connector is located at the base of the MX7.


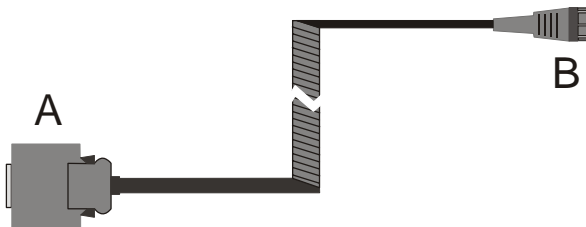


Figure 17 Connect Audio Jack

- Connector A** Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B** Firmly push connector B into the headphone jack until you hear a slight click. See section titled “Set the Audio Speaker Volume”.


Note: The audio option draws power from the main battery.

Using the 55 Key ANSI / CE Keypad

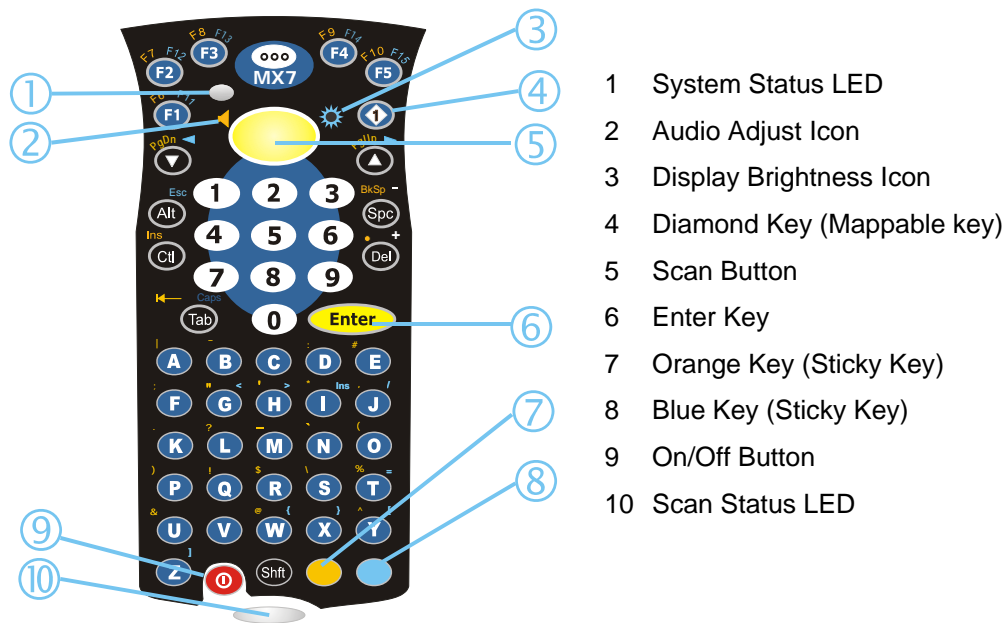

- When using a sequence of keys that includes a sticky key, press the sticky key first, release it, then press the rest of the key sequence.
- When using a sequence of keys that includes the Orange or Blue keys, press the color key first then the rest of the key sequence.
- Alphabetic keys default to lower case letters. Press the Shift key, then the alphabetic key for an uppercase letter.
- When the computer boots, the default condition of Caps (or CapsLock) is Off. The Caps (or CapsLock) condition can be toggled with Blue plus Tab key sequence.

Using the 32-Key Numeric-Alpha Keypad

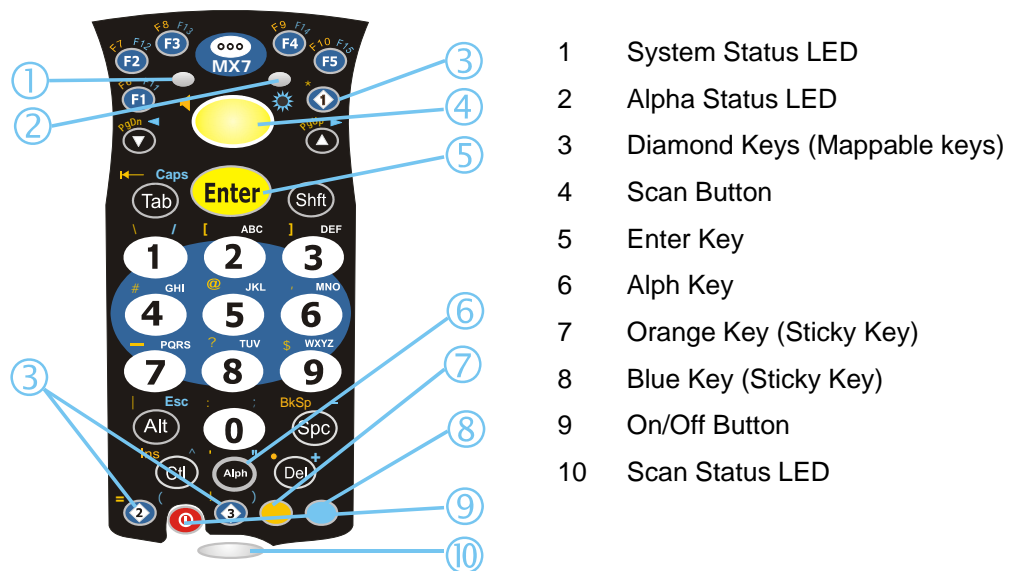

- 1 System Status LED
- 2 Alpha Status LED
- 3 Diamond Keys (Mappable keys)
- 4 Scan Button
- 5 Enter Key
- 6 Alph Key
- 7 Orange Key (Sticky Key)
- 8 Blue Key (Sticky Key)
- 9 On/Off Button
- 10 Scan Status LED

- When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shft sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.
- Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.
- To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.
- When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

Entering Data

You can enter data into the MX7 through several different methods. The Scanner aperture provides barcode data entry, the Input/Output (I/O) port is used to input/output data, and the keypad provides manual entry.

Mobile devices with a touch screen use a stylus to input data, the I/O port and/or the keypad. An input panel (virtual keyboard) is available in applications that expect keyed input.

Keypad Entry

The keypad is used to manually input data that is not collected otherwise. Almost any function that a full sized computer keyboard can provide is duplicated on the MX7 keypads but it may take a few more keystrokes to accomplish a keyed task. Please refer to “Appendix A – Key Maps” for instruction on the specific keypresses to access all keypad functions.

Almost every key has two or three different functions. The primary alpha or numeric character is printed on the key.

The Orange or Blue keys are pressed when you want to use a “sticky” key function. For example, when you press a Blue or Orange key (the sticky key), then press the key that has the desired second-function key, the second-function key is the “active” key. The specific sticky character is printed above the corresponding key in either Orange or Blue.

Stylus Data Entry

Note: This section is directed to the MX7 daily user. The assumption is that the mobile device has been configured and the touch panel calibrated by the System Administrator prior to releasing the MX7 for daily use. The touch screen should be calibrated before initial use.

The stylus performs the same function as the mouse that is used to point to and click elements on a desktop computer. The stylus is used in the same manner as a mouse – single tap or double tap to select menu options, drag the stylus across text to select, hold the stylus down to activate slider bars, etcetera.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. The touch screen responds to an actuation force (touch) of 4 oz. (or greater) of pressure.

The stylus can be used in conjunction with the keyboard and scanner and an input/output device connected to the serial port.

- Touch the stylus to the field of the data entry form to receive the next data feed.
- The cursor begins to flash in the field.
- The unit is ready to accept data from either the physical keypad, virtual keyboard, or the integrated scanner.

Note: Always use the point of the stylus for tapping or making strokes on the display. Never use an actual pen, pencil or sharp object to write on the touch screen.

Scanner Entry

Read all cautions, warnings and labels **before** using the laser scanner.

Do not look into the laser's lens.
Do not stare directly into the laser beam.

To scan with the integrated laser barcode reader, point the laser aperture towards a barcode and press the Scan button. You will see a red laser beam strike the barcode.



Figure 18 Scan Beam

Align the red beam so that the barcode is centered within the beam. The laser beam must cross the entire barcode. Move the MX7 towards or away from the barcode so that the barcode takes up approximately two-thirds the width of the beam.

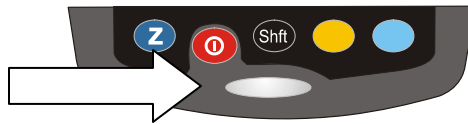


Figure 19 Scan Status LED

The Scan Status LED (oval shaped LED below keypad) turns red when the laser beam is on. Following a barcode scan and read the Scan Status LED turns green for two seconds and the MX7 beeps or vibrates, indicating a successful scan. If the scan was unsuccessful, the Scan Status LED turns off and a different beep sequence is heard.

The laser engine and Scan Status LED automatically turn off after a successful or unsuccessful read. The scanner is ready to scan again after the Scan key (or trigger on the handle if installed) is released, or after the Scan Status LED turns off following a successful scan.

Tethered Scanners

Tethered scanners are not supported on the MX7.

Input Panel – Virtual Keyboard

The virtual keyboard is always available when needed e.g. text field input. Tap the keyboard icon at the bottom of the screen to put the virtual keyboard on the display. Using the stylus:

- Tap the Shift key to type one capital letter.
- Tap the CAPS key to type all capital letters.
- Tap the au key to access symbols.

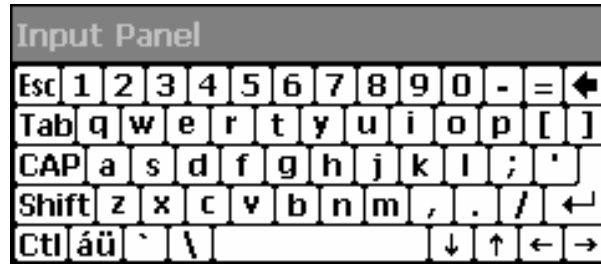


Figure 20 Input Panel / Virtual Keyboard

Some applications do not automatically display the Input Panel. In this case, do the following to use the Input Panel:

1. Tap the Input Panel/Virtual Keyboard icon in the taskbar.
2. Select “Keyboard” from the menu.
3. Tap the data entry area on the display when you want to enter data using the Input Panel.

Getting Help

All LXE user guides are now available on one CD and they can also be viewed/downloaded from the LXE ServicePass website. Contact your LXE representative to obtain the LXE Manuals CD.

You can also get help from LXE by calling the telephone numbers listed on the LXE Manuals CD, in the file titled “Contacting LXE”. This information is also available on the LXE website.

Explanations of terms and acronyms used in this guide are located in the file titled “LXE Technical Glossary” on the LXE Manuals CD and the LXE ServicePass website.

Manuals

MX7 Reference Guide
 MX7 Multi-Charger / Analyzer User’s Guide
 LXEbook – MX7 User’s Guide (download to mobile device)
 RFTerm Reference Guide
 Integrated Scanner Programming Guide

Accessories

Battery Chargers

MX7 Multi-Charger/Analyzer (5 bay) with Power Cord, US	MX7A385CHGR5US
MX7 Multi-Charger/Analyzer (5 bay) w/o Power Cord, Int’l	MX7A386CHGR5WW
Li-Ion Battery, MX7	MX7A380BATT

Power Supplies

AC-DC Wall Power Supply, 120VAC US, with power cord	MX7A308PSACUS
AC-DC Wall Power Supply, 220VAC Int’l, w/o power cord	MX7A309PSACWW

Cables, Adapters

Cable: Multipurpose USB and Power	MX7A052MULTICBLUSB
Cable: Multipurpose RS-232 and Power	MX7A055MULTICBLDA9F
Adapter: RS-232 terminal port to D9 male	MX7A058ADPTCBLPER
Adapter/Cable: Audio	MX7A060ADPTCBLVOICE

Cradles, Carrying Cases

RAM Bracket for Vehicle Mount Cradle	MX7A001RAMBRKT
Passive Vehicle Cradle, No Communications	MX7A007VMCRADLE
Handstrap, MX7, No Handle, Replacement	MX7A401HANDSTRAP
Nylon Carrying Case with Shoulder Strap w/ Handle Support	MX7A403CASEHDL
Nylon Carrying Case with Shoulder Strap w/o Handle Support	MX7A402CASENHDL
Nylon Carrying Case for Audio	MX7A404CASEVRNHDL
Nylon Holster with Handle Support	MX7A405HOLSTERHDL
Nylon Holster w/o Handle Support	MX7A404HOLSTERNHDL
Nylon Belt w/Velcro Fastener for Holsters	9200L67
Rubber Protective Boot for Rugged Environments, Black	MX7A488PROTBOOT
Rubber Protective Boot for Rugged Environments, Yellow	MX7A489PROTBOOTYEL

Miscellaneous

Touchscreen Protective Film (10 pack)	MX7A584PROTFILM
Trigger Handle	MX7A406HANDLE
Stylus (10 pack)	MX7A584STYLUS
MX7 SDK	MX7SSDK01A

The MX7 Hand Held Computer

Reboot Sequence


When the Windows CE desktop is displayed or an application begins, the power up (or reboot) sequence is complete. If you have previously saved your settings, they will be restored on reboot. Application changes are saved when OK is clicked on an application applet.

Warm Reset


Hold down the Power key for 15 seconds until the display blanks, then release the key. A warm reset does not affect the operating system and no data loss occurs. The network connection will need to be re-established.

Cold Reset

Important:-- Because of the extreme nature of the Cold Reset, LXE recommends that the Cold Reset be used only as an emergency procedure and the Warm Reset be used whenever necessary.




Tap  | **Run** and type COLDBOOT.EXE. Tap the OK button to coldboot the MX7. The default settings are restored when the device powers on again.

Calibrating the touchscreen will need to be performed when the cold boot process is complete.

If needed, change the MX7 Time and Date from it's factory default value by tapping the  | **Settings** | **Control Panel** | **Date/Time** icon.


Saving Changes to the Registry

The MX7 saves the registry when you:

- Tap the  | **Run** | **Warmboot**.
- Perform a Suspend / Resume function (by pressing the Pwr key and then pressing it again).
- Install Restart in the Start menu by  | **Run** | CTL RESTART=1 and then tap  | **Restart**.

The registry save process takes 5 – 10 seconds.

The registry is automatically saved every 20 minutes. It is also saved every tenth time the registry settings are changed. Registry settings are changed when control panel applet (e.g. Date/Time) parameters are changed by the user and a warm boot was not performed afterward.

When you tap  | **Run** | **Coldboot**, factory default registry settings are loaded. All user changes and settings are lost.

Touchscreen Display



Figure 21 Touchscreen Display

The touchscreen display is an active color LCD unit capable of supporting VGA graphics modes. Display size is 240 x 320 pixels or ¼ VGA in portrait orientation. The touchscreen allows signature capture and touch input. A pen stylus is included. The touchscreen responds to an actuation force (touch) of 4 oz. of pressure (or greater).

The color display is optimized for indoor lighting. The display is off when the mobile device is in Suspend mode and when the device is being powered by the backup battery only.

Applying the Protective Film to the Display

First, clean the display of fingerprints, lint particles, dust and smudges.

Remove the protective film from its container. Remove any protective backing from the film sheet by lifting the backing from a corner of the film. Discard the backing.

Apply the film to the screen starting at one side and smoothing it across the display. If air bubbles appear, raise the film slightly and continue smoothing the film across the display until it covers the glass surface of the display.

If dust, lint or smudges are trapped between the protective film and the glass display, remove the protective film, clean the display and apply the protective film again.

Touchscreen Calibration

If the touchscreen is not responding properly to stylus taps, the touchscreen may need to be recalibrated. Press <Ctrl>+<Esc> to force the Start Menu to appear, if needed. Contact your System Administrator for assistance.

To recalibrate the screen, select  | **Settings** | **Control Panel** | **Stylus** | **Calibration**.

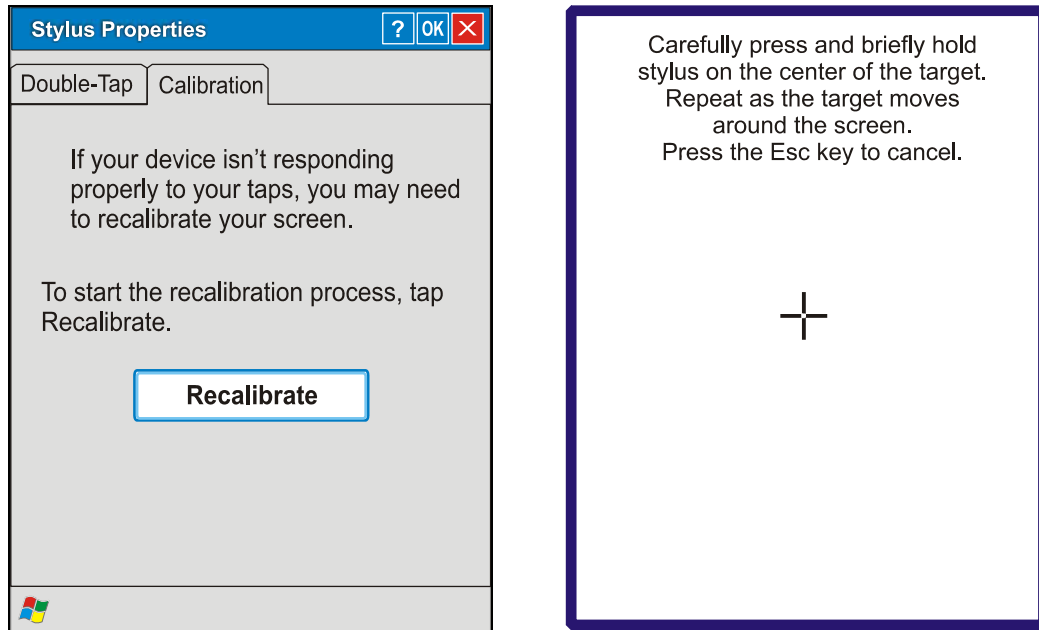


Figure 22 Touchscreen Recalibration

To start, tap Recalibrate. Follow the instructions on the screen and press the Enter key to save the new calibration settings or press <Esc> to cancel or quit.

See the “MX7 Reference Guide” for complete instructions.

Cleaning the Glass Display/Scanner Aperture

Note: These instructions are for components made of glass. If there is a removable protective film sheet on the display screen, remove the film sheet before cleaning the screen.

Keep fingers and rough or sharp objects away from the scan aperture and display. If the glass becomes soiled or smudged, clean only with a standard household cleaner such as Windex® without vinegar or use Isopropyl Alcohol. Do not use paper towels or harsh-chemical-based cleaning fluids since they may result in damage to the glass surface. Use a clean, damp, lint-free cloth. Do not scrub optical surfaces. If possible, clean only those areas which are soiled. Lint/particulates can be removed with clean, filtered canned air.

Adjusting the Display Backlight

Set the Display Backlight Brightness

When the backlight is on, press the **Blue** key and the **Scan** key.

- Use the Up Arrow and Down Arrow keys to adjust backlight brightness until the display lightens or darkens to your satisfaction.
- Press the Enter key to exit this mode.

At the minimum dimness level, the display is still viewable. The brightness setting is recalled upon a return from Suspend and also upon a warm reset.

Set the Display Backlight Timer

Select  | **Settings** | **Control Panel** | **Display** | **Backlight** tab. Change the parameter values and tap OK to save the changes.

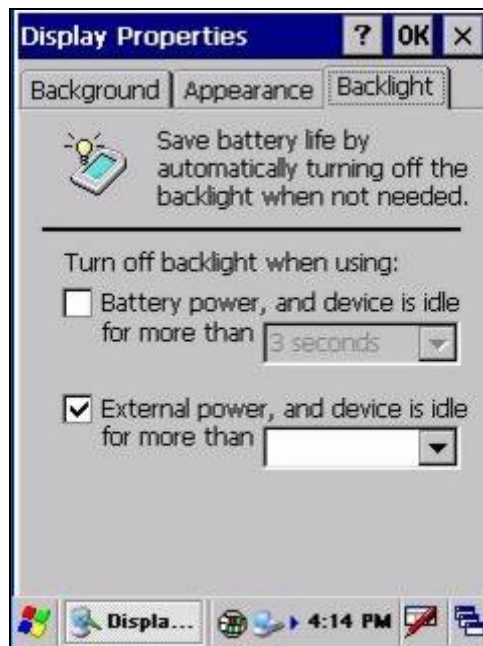


Figure 23 Setting the Display Backlight Timer


The first option affects the mobile device when it is running on battery power only. The second option affects the device when it is running on external power (e.g. AC adapter).

The default value for the battery power timer is 3 seconds. The default value for the external power timer is 2 minutes. **The backlight will remain on all the time when both checkboxes are blank.**

The display backlight timer *dims the backlight* at the end of the specified time.

Setting the Power Schemes Timers

Note: Refer to the section titled “Power Modes” in the MX7 Reference Guide for information relating to the power states of the mobile device.

Select  | **Settings** | **Control Panel** | **Power** | **Schemes** tab. Change the parameter values and tap OK to save the changes.

Battery Power Scheme

Use this option when the device will be running on battery power only.

Switch state to User Idle:	Default is After 3 seconds
Switch state to System Idle:	Default is After 15 seconds
Switch state to Suspend:	Default is After 5 minutes

AC Power Scheme

Use this option when the device will be running on external power (e.g. AC adapter).

Switch state to User Idle:	Default is After 2 minute
Switch state to System Idle:	Default is After 2 minutes
Switch state to Suspend:	Default is After 5 minutes

These mode timers are cumulative. The System Idle timer begins the countdown after the User Idle timer has expired and the Suspend timer begins the countdown after the System Idle timer has expired. When the User Idle timer is set to “Never”, the power scheme timers never place the device in User Idle, System Idle or Suspend modes (even when the device is idle).

Because of the cumulative effect, and using the Battery Power Scheme Defaults listed above:

- The backlight turns off after 3 seconds of no activity,
- The display turns off after 18 seconds of no activity (15sec + 3sec),
- And the device enters Suspend after 5 minutes and 18 seconds of no activity.

Setting The Audio Speaker Volume

Note: An application may override the control of the speaker volume. Turning off sounds saves power and prolongs battery life.

The speaker is located on the front of the device above the MX7 logo. The audio volume can be adjusted to a comfortable level for the listener. The volume is increased or decreased one step each time the volume key sequence is pressed. The device has an internal speaker and a jack for an external headset. Operational “beeps” are emitted from the speaker.

Using the Keypad

Note: *Volume & Sounds (in Settings) must be enabled before the following key sequences will adjust the volume.*

To adjust speaker volume:

- Tap the **Orange** key then the **Scan** key to enter Volume change mode.
- Use the **Up Arrow** and **Down Arrow** keys to adjust volume until the speaker volume is satisfactory.
- Press the **Enter** key to exit this mode.

Using the Touchscreen

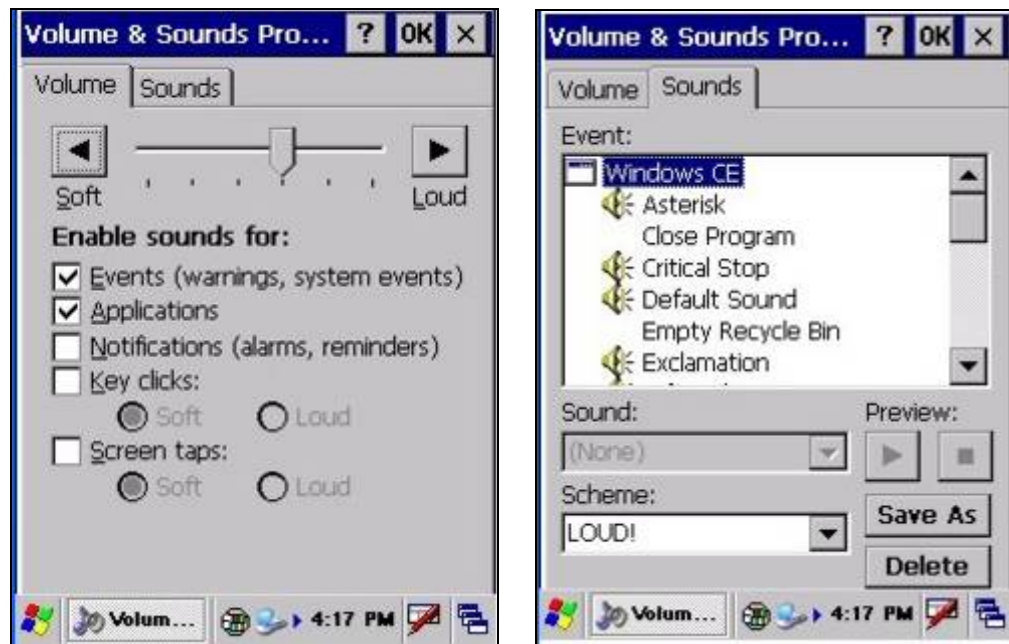



Figure 24 Volume & Sounds Properties

Tap  | **Settings** | **Control Panel** | **Volume & Sounds** | **Volume** tab. Change the volume setting and tap OK to save the change. You can also select / deselect sounds for key clicks and screen taps and whether each is loud or soft.

As the volume scrollbar is moved between Loud and Soft, the computer will emit a tone each time the volume increases or decreases in decibel range.

The Keypads

The keypad is installed and configured by LXE to your specifications.

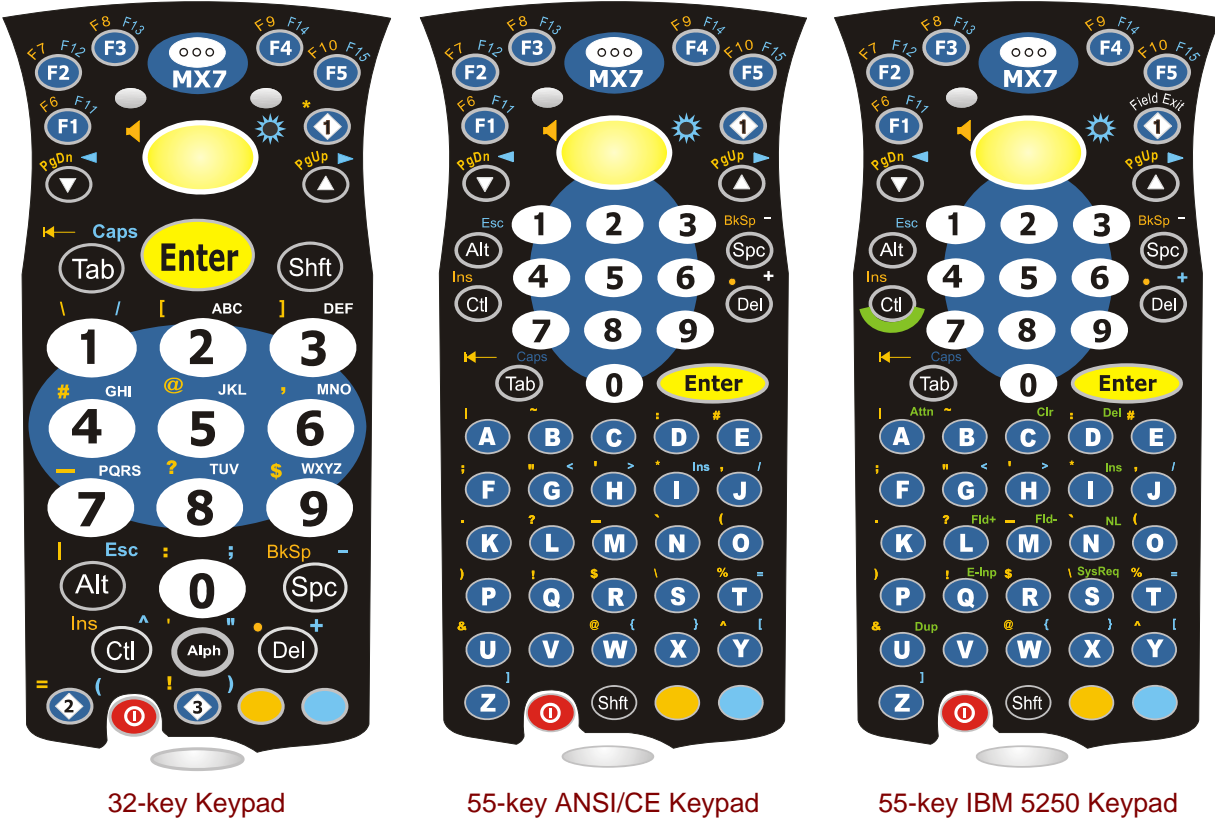


Figure 25 The 32-key and 55-key Keypads

See “Appendix A – Key Maps” for instruction on the specific keypresses to access all keypad functions.

LED Indicators

System Status

The System Status LED is located at the top left of the keypad, above the Scan button.

When the LED is . . .	The Status is . . .	Comment
Blinking Red	Power Fail	Replace the main battery with a fully charged main battery. Or Connect the MX7 to external AC power (to allow the internal charger to charge the main battery).
Steady Red	Main Battery Low	Replace the main battery with a fully charged main battery.
Blinking Green	Video Off	No user intervention required.
No Color	Good	No user intervention required.

Scan Status

The Scan Status LED is located below the MX7 keypad.

When the Scan Status LED is . . .	The Status is . . .
Steady Green	Good Scan
Steady Red	Scan in Progress
No Color	Scanner/Imager ready for use.

Alpha Mode (32-key Alph Key)

The Alpha Mode LED is located below the <F4> key on the 32-key keypad.

LED functions outlined in previous sections titled “System Status LED” and “Scanner LED” are the same for the 32-key mobile device.

When the Alph LED is . . .	The Status is . . .
Steady Green	Device is in “Alpha” character input mode.
No Color	Device is in “Numeric” key input mode.

Standard Keys

Scan	The integrated scanner scans only when the Scan button is pressed (or when the scan trigger is pressed on the optional trigger handle).
Enter	The Enter key is used to confirm a forms entry or to transmit information. How it is used is determined by the application running on the mobile device.
Diamond	The Diamond key(s) can be programmed to duplicate a single keypress (as defined by Windows CE) with the exception of the Shift, Alt and Ctrl/Ctl key.
Numeric	The number keys are used to add numbers to data entry fields.
Alpha	The alpha keys are used to add letters and characters to data entry fields.
Space	The Spc key adds a space to the line of data on the display. This function is similar to a regular keyboard's Spacebar. Note that the Spc key only stays active for one keystroke.

Function Keys

Sticky Keys

The Sticky Key feature allows the user to activate multi-keypress combinations with one finger.

Ctl / Ctrl (Control key)



A Control sticky keypress stays active until the Control key is pressed again. The Control key enables the control functions of the keypad. This function is similar to a regular keyboard's Control key. Each time you need to use a Control function, you need to press the Ctl / Ctrl key before pressing the desired key.

Alt (Alternate key)



An Alt sticky keypress stays active until the Alt key is pressed again. The Alt key enables the alternate functions of the keypad. This function is similar to a regular keyboard's Alt key. Each time you need to use an alternate function, you need to press the Alt key before pressing the desired key.

Shft (Shift key)



A Shift keypress ends a sticky key function. The Shft key enables the shifted functions of the keypad. This function is similar to a regular keyboard's Shift key. Note that the Shift key only stays active for one keystroke. Each time you need to use a Shifted function, you need to press the Shft key before pressing the desired key.

When the Shft key is pressed the next key is determined by the major key legends, i.e., the alpha keys display lower case letters -- when CAPS is On alpha characters are capitalized. For example, when CAPS is On and the Shft key and the G key are pressed, a lower case g is displayed.

Orange and Blue Keys



The Orange and Blue keys are sticky keys that, when tapped, activate the second functions of the keypad. Printed above many keys are small characters, in either orange (on the left side of the key) or blue (on the right side of the key), that represent the second function of that key. Using the sticky key activates the second key function.

Note that the blue and orange sticky keys only stay active for one keystroke. Each time you need to activate a second function you must press the Orange or Blue key. To cancel a sticky key function before pressing another key, press the same sticky key again.

Orange Key

Tap the Orange key to enter “orange” mode. Tap it again to cancel “orange” mode.

If you were in “blue” mode before you pressed the Orange key, blue mode is cancelled and you enter Orange mode.

Blue Key

Tap the Blue key to enter “blue” mode. Tap it again to cancel “blue” mode.

If you were in “orange” mode before you pressed the Blue key, orange mode is cancelled and you enter Blue mode.

Field Exit

A square icon with a black background. It features a white circle containing a blue number '1'. Above the circle, the words 'Field Exit' are written in white.	<p>The Diamond 1 key can be programmed as a Field Exit key. The Field Exit key is used to exit an input field. If the field is an Auto Enter field, the auto transmit function is activated. Refer to the “Mappable Diamond Keys” section for instruction.</p>
A square icon with a black background. It features a white circle containing the letters 'Ctl' in white. A green highlight is visible at the bottom of the circle.	<p><i>IBM 5250 specific keypad only.</i> A Control sticky keypress stays active until the Control key is pressed again. The Control key enables the control functions of the keypad. This function is similar to a regular keyboard’s Control key. Each time you need to use a Control function, you need to press the Ctl key before pressing the desired key.</p> <p>Note the green highlight on the Control key and the 5250 commands highlighted in green on the 5250 keypad overlay.</p>

Mode Key Functions

CapsLock Mode

This function is similar to a regular keyboard's CapsLock key. Note that the CapsLock mode stays active until the CapsLock key sequence is pressed again. Each time you need to use a Caps function, you need to press the Caps key sequence first. To cancel a CapsLock function press the Caps key sequence again.

The CapsLock key sequence is Blue key then the <Tab> key.

55-Key Keypad

- No CapsLock AND No Shift keypress – result is a lowercase letter.
- CapsLock OR Shift – result is an uppercase letter.
- CapsLock AND Shift keypress – result is a lowercase letter.

Visual Cue: A Capital A is displayed in the taskbar when the device is in CapsLock mode or the Caps Key has been pressed and the next key (to be capitalized) has not been pressed.


32-Key Keypad

Example: 2 B or Not 2 B

- | | |
|--|---|
| To put the number 2 in a text entry field: | Tap the <2> key once. |
| To put a lowercase “b” in a text field: | Tap the <Alph> key, then tap the <2> key twice. |
| To put an uppercase “B” in a text field: | Tap the <Alph> key, tap the <Shft> key or the <CapsLock> key, then tap the <2> key twice. |
- To enter a string of letters in a text field, tap the <Alph> key to toggle it On. It remains active until it is tapped again and toggled off.
- To enter a string of numbers in a text field, make sure the <Alph> key is toggled off.

Mappable Diamond Keys

The Diamond keys can be programmed to perform specific functions. For example, using this Settings option, you could set the Diamond 1 key to function as an ESC key. Setting the Diamond 1 key to function as an ESC key does not disable the function of the “standard” ESC key sequence (Blue+Alt).

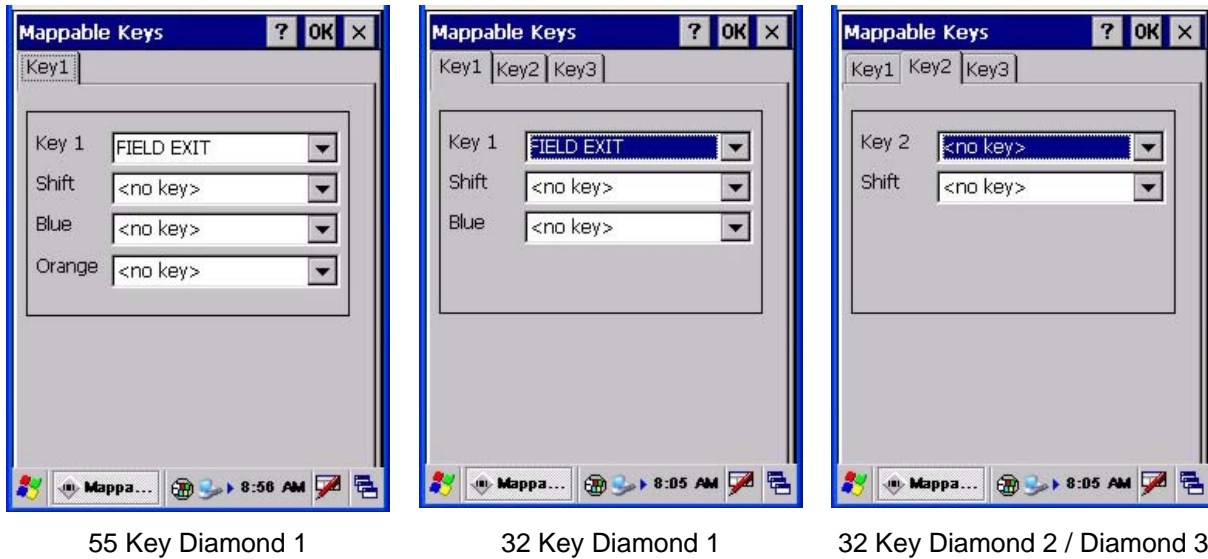

55 Key Diamond 1

32 Key Diamond 1

32 Key Diamond 2 / Diamond 3

Figure 26 Mappable Diamond Keys





The Diamond 1 key defaults to Field Exit on both keypads. Diamond 2 and Diamond 3 keys default to <no key> on the 32-key keypad. The default value for Diamond keys and Diamond-Sticky key combinations is <no key>.

To edit the diamond key parameters, Tap  | **Settings** | **Control Panel** | **Mappable Keys** tab. Change the parameter values using the drop down list and tap OK to save the changes. The change takes effect immediately.

See Also: Appendix A “Key Maps”.

55 Key Keypad












The user can program four key combinations using the Diamond 1 key:

			
e.g. ESC (Blue+Alt)	e.g. Home (Shft+Down Arrow)	e.g. BackTab (Orange+Tab)	e.g. Insert (Blue+I)

Any combination of “standard” keypresses can be used.

32 Key Keypad

The user can program seven key combinations using the Diamond keys:

 user defined without using a sticky key	 + 	asterisk (*)	 + 
 user defined without using a sticky key	 + 	equal sign (=)	open parenthesis (
 user defined without using a sticky key	 + 	exclamation mark (!)	closed parenthesis)

Note: Refer to the “MX7 Reference Guide” before mapping the Diamond keys. The Reference Guide also contains instructions for the Key Map Utility for the keypad.

Batteries

Note: New batteries must be charged prior to use. If the main battery and backup battery are depleted, the mobile device reverts to factory default values. Wireless configuration parameters will need to be re-entered after reverting to factory default values. The backup battery is continually recharged by the main battery pack.

The mobile device is designed to work with a 2200 mAh Lithium-Ion (Li-ion) battery from LXE. Under normal conditions it should last approximately eight to ten hours before requiring a recharge. The more you use the scanner or the RF transmitter, the shorter the time required between battery recharges. The operating system keeps date and time valid for a minimum of four days using a fully charged backup battery and a main battery pack installed that has reached the Low Warning point.

Battery Pack Model Number – 159904-0001 / MX7A380BATT

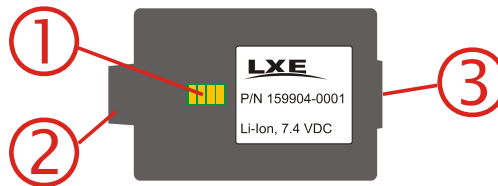




Figure 27 Lithium Ion Battery Pack


1. Contacts, Battery Charging
2. Retaining Clip
3. Tab

Main Battery

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

The main battery has a rugged plastic enclosure that is designed to withstand the ordinary rigors of an industrial environment. Exercise care when transporting the main battery making sure it does not come in contact with excessive heat or any power source other than an MX7 MultiCharger or the mobile device.


Backup Battery

The internal 50mAh Nickel Cadmium (NiCd) backup battery provides power to the device for a short amount of time when the main battery has been depleted, removed or has failed. The backup battery status and conditioning is available using  | **Settings** | **Control Panel** | **Battery**. The backup battery is charged by the main battery pack only. If the backup battery is completely discharged, it may take up to 5 hours to recharge.

Backup battery replacement is performed by LXE.

Note: An uninterrupted external power source (wall AC adapters) transfers power to the computer's internal charging circuitry which, in turn, recharges the main battery and backup battery. Frequent connection to an external power source, if feasible, is recommended to maintain backup battery charge status as the backup battery cannot be recharged by a dead or missing main battery.

Battery Hotswapping

Important: When the backup battery power is Low or Very Low ( | **Settings** | **Control Panel** | **Power** | **Battery** tab) connect the AC adapter to the MX7 *before* replacing the main battery pack.

Replace the main battery pack after first pressing the Power key and placing the MX7 in Suspend Mode. LXE recommends any work in progress be saved prior to replacing the main battery pack.

Simply replace the discharged main battery with a fully-charged main battery. A fully charged backup battery will retain data during a main battery hotswap for 5 minutes.

Warning: Never replace the main battery in a hazardous location.

Battery Chargers

The MX7 Multi-Charger is not approved for use in a Hazardous Location.

Charge Main Battery in MX7 Multi-Charger

The main battery pack can be charged while it is in the MX7 (connected to an AC power supply) or while it is in the LXE MX7 Multi-Charger.

Please refer to the “MX7 Multi-Charger User’s Guide” for instruction.

The multi-charger requires an external power source before battery pack charging/analyzing can commence.

The external Power Supply for the Multi-charger is shipped with the multi-charger.

MX7 Multi-Chargers are not approved for use in Hazardous Locations.

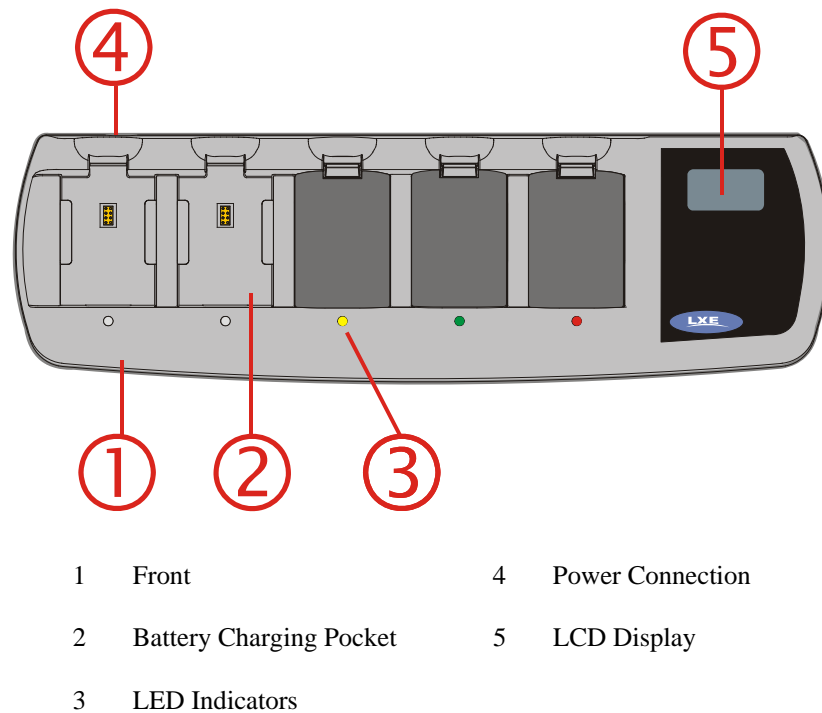


Figure 28 MX7 Multi-Charger / Analyzer

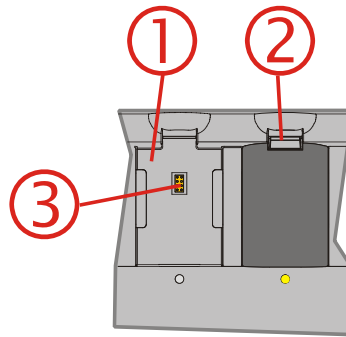


Figure 29 Insert Battery Pack in Charging Pocket

1. Battery Well
2. Retaining Clip
3. Battery Charging Contacts

Lower the battery pack straight into the battery charger pocket and push it down firmly. Do not "slam" the battery into the charging cup or drop it into the cup.

Failure to follow these instructions can result in damage to the main battery or the charger.



Please refer to the multi-charger user's guide for technical information and operating instructions.

Passive Vehicle Mount Cradle

A passive vehicle mount cradle is available for the MX7. The cradle restrains the MX7. The passive cradle does not have an external device connector e.g. power/RS-232 cable. Wireless client interaction is available as long as the mobile device has sufficient energy in the MX7 main battery pack and a clear signal path.

The cradle is lined with strips of hook-and-loop fabric to ensure a snug fit between the MX7 and the inside of the cradle.

The vehicle cradle should be mounted in an area in the vehicle where it:

- Does not obstruct the driver's vision or safe vehicle operation.
- Will be protected from rain or inclement weather.
- Will be protected from extremely high concentrations of dust or wind-blown debris.
- Can be easily accessed by a user seated in the driver's seat.

There are two mounting options for the cradle:

- U-bracket mounting
- RAM ball cylinder mounting

Before installation begins, verify you have the applicable vehicle mounting bracket assembly components necessary for your mount type, as shown in the section titled “Assembly Components”.

Do not slide the MX7 into the passive cradle until the cradle is securely fastened to the vehicle.

Cradle Assembly Components


Note: Bolts, washers, and wrench needed when attaching the mobile device to the vehicle are not supplied by LXE.

U-Bracket



Figure 30 Passive Vehicle Mount Cradle and U-Bracket

U-Bracket Footprint

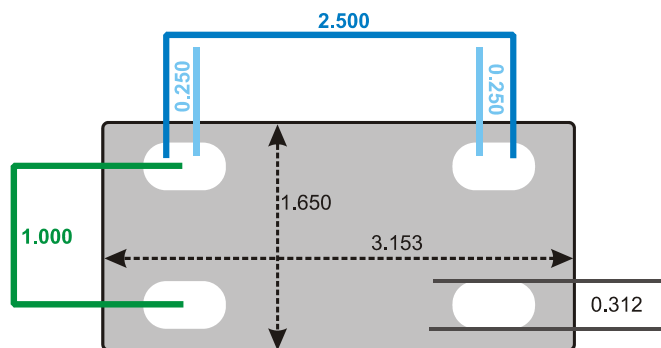

Not To Scale

Figure 31 U-Bracket Mounting Footprint

Note: LXE does not supply the bolts or washers needed when mounting the cradle assembly to the vehicle chassis. LXE recommends using bolts with a maximum 10/32" (0.3125) diameter

RAM Ball and Cylinder



Figure 32 Passive Vehicle Mount Cradle / RAM Ball Assembly



Figure 33 RAM Bracket Components



Mount the cradle U-bracket to the upper RAM ball assembly with the bolts, washers and nuts supplied by LXE.

Qty 4 - Hex Cap 1/4-20 x 3/4 bolts

Qty 4 - 1/4 flat washer

Qty 4 - 1/4-20 nylon insert lock nuts

RAM Assembly Footprint

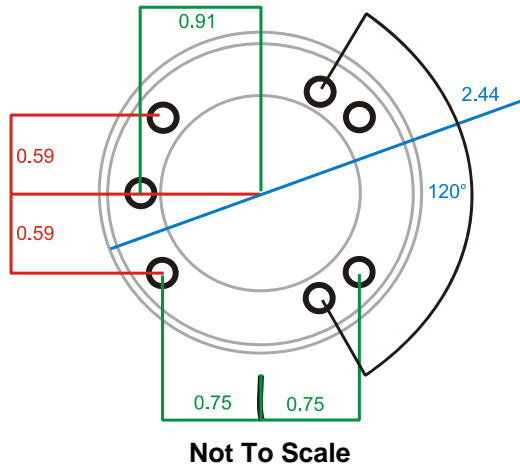


Figure 34 RAM Assembly Footprint


Note: LXE does not supply the bolts or washers needed when mounting the cradle assembly to the vehicle chassis. LXE recommends using bolts with a maximum 10/32" (0.3125) diameter.

How to Install the Cradle U-Bracket

 


Figure 35 Installing the Cradle U-Bracket

1. Attach the U-Bracket to the vehicle, making sure it does not impede safe operation of the vehicle.

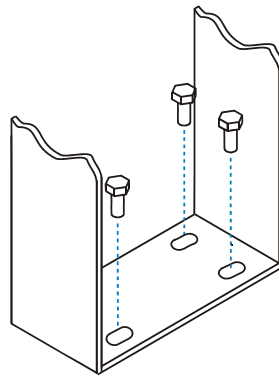

2. Attach the Passive Cradle to the U-Bracket using the Angle Adjust knobs.



Use both knobs to loosen and tighten the cradle to the U-bracket while determining the best viewing angle.

3. The passive vehicle mounted cradle is ready for use.



Periodically test the mounting device and retighten bolts and/or knob as needed. If the cradle becomes cracked or warped it must be replaced.

How To Install the RAM Bracket


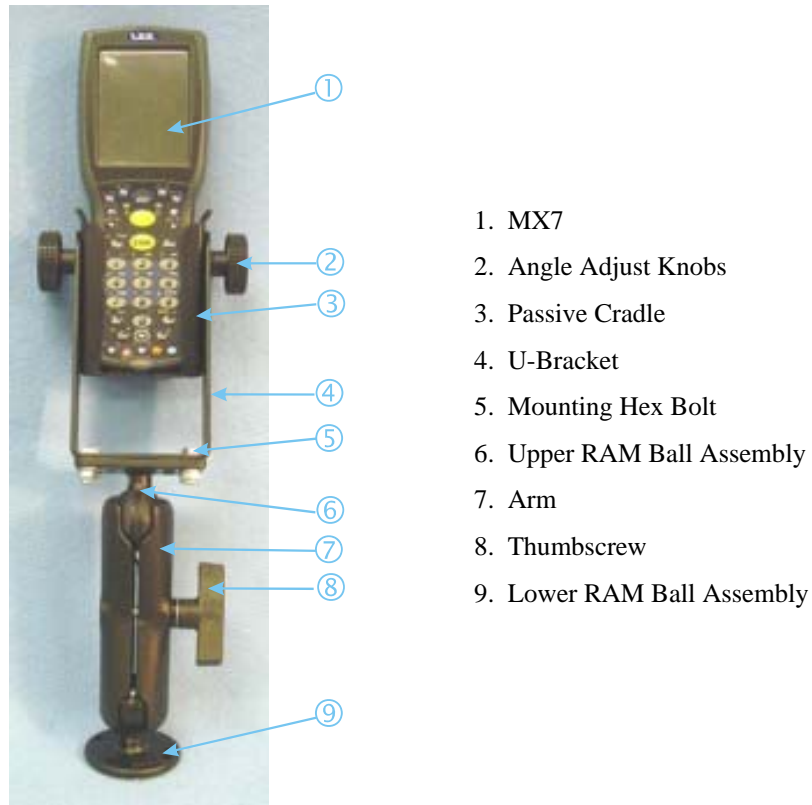



Figure 36 Installing the RAM Assembly

1. Attach the lower RAM ball assembly to the vehicle, making sure it does not impede safe operation of the vehicle.
2. Fasten the upper RAM ball assembly to the base of the U-bracket using the supplied bolts, washers and screws.

- Loosen the turnscrew on the RAM arm, place the lower socket over the vehicle mount RAM ball, then the other arm socket over the RAM ball on the U-bracket.

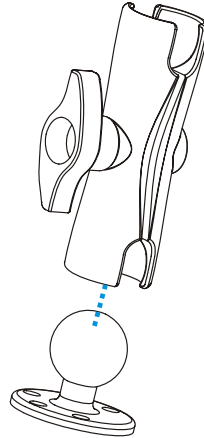

 - Tighten the arm turnscrew until the U-bracket is secured to the RAM arm and the vehicle.
- Attach the Passive Cradle to the U-Bracket using the Angle Adjust knobs.



Use both knobs to loosen and tighten the cradle to the U-bracket while determining the best viewing angle.

- The passive vehicle mounted cradle is ready for use.



Periodically test the mounting device and retighten bolts and/or knob as needed. If the cradle becomes cracked or warped it must be replaced.



Appendix A Key Maps

Introduction

Remember :

“Sticky” keys are also known as “second” function keys.

Ctl/Ctrl, Alt, Shft, Blue and Orange keys are “sticky keys”. Sticky keys do not need to be held down before pressing the next (or desired) key. It is valid to use combined modifiers on specific keys.

Note: The key mapping in this appendix relates to the physical keypad. See section titled “Input Panel” for the Virtual (or Soft) Keypad used with the stylus.

55-Key Alphanumeric Keymaps

ANSI / CE Keypad

When using a sequence of keys that includes a sticky key, press the sticky key first, release it, then press the rest of the key sequence.

When using a sequence of keys that includes the Orange or Blue keys, press the color key first then the rest of the key sequence.

Alphabetic keys default to lower case letters. Press the Shft key, then the alphabetic key for an uppercase letter.

When the computer boots, the default condition of Caps (or CapsLock) is Off. The Caps (or CapsLock) condition can be toggled with Blue plus Tab key sequence.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
Power / Suspend							Power ¹
Field Exit (default VK_PAUSE) <i>MAP=Mappable</i>	MAP	MAP			MAP		Diamond#1
Volume Adjust Mode	x	x					Scan Key ² or V

¹ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

² Orange+Scan (and Blue+V) enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
Display Backlight Brightness Adjust Mode	x						Scan Key ³
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shft
Alt							Alt
Control							Ctl
Scan							Scan Key
Esc	x						Alt
Space							Spc
Enter							Enter
CapsLock (Toggle)	x						Tab
Back Space		x					Spc
Tab							Tab
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert	x						I (letter i) or Ctl
Delete		x					Del
Home					x		Down Arrow
End					x		Up Arrow
Page Up		x					Up Arrow
Page Down		x					Down Arrow
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5

³ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
F11	x						F1
F12	x						F2
F13	x						F3
F14	x						F4
F15	x						F5
F16					x		F1
F17					x		F2
F18					x		F3
F19					x		F4
F20					x		F5
F21		x			x		F1
F22		x			x		F2
F23		x			x		F3
F24		x			x		F4
a							A
b							B
c							C
d							D
e							E
f							F
g							G
h							H
i							I
j							J
k							K
l							L
m							M
n							N
o							O
p							P
q							Q
r							R
s							S
t							T
u							U
v							V
w							W
x							X
y							Y
z							Z

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
A					x		A
B					x		B
C					x		C
D					x		D
E					x		E
F					x		F
G					x		G
H					x		H
I					x		I
J					x		J
K					x		K
L					x		L
M					x		M
N					x		N
O					x		O
P					x		P
Q					x		Q
R					x		R
S					x		S
T					x		T
U					x		U
V					x		V
W					x		W
X					x		X
Y					x		Y
Z					x		Z
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0							0
. period or (period)		x					DEL or K
<	x						G

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
[x						Y
]	x						Z
>	x						H
=	x						T
{	x						W
}	x						X
/	x						J
-	x						Spc
+	x						Del
* (asterisk)		x				x	I (letter i) or 8
: (colon)		x					D
; (semicolon)		x					F
. (period)		x					K
?		x					L
` (accent)		x					N
_ (underscore)		x					M
, (comma)		x					J
' (apostrophe)		x					H
~ (tilde)		x					B
\		x					S
		x					A
“		x					G
!		x					Q or 1
@		x				x	W or 2
#		x				x	E or 3
\$		x				x	R or 4
%		x				x	T or 5

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
^		x			x		Y or 6
&		x			x		U or 7
(x			x		O or 9
)		x			x		P or 0 (zero)

5250 Key Map for the 55-Key Keypad

Legend	Explanation	Key Sequence
Attn	Attention	Ctl + A
Clr	Clear	Ctl + C
Del	Delete	Ctl + D
Dup	Duplicate	Ctl + U
E-Inp	Erase Input	Ctl + Q
Field Exit	Enter	Diamond 1
Fld -	Field Minus	Ctl + M
Fld +	Field Plus	Ctl + L
Ins	Insert	Ctl + I
NL	New Line	Ctl + N
SysReq	System	Ctl + S

Please refer to the “RFTerm Reference Guide” for further information about 5250 key functions on the mobile device.

32-Key Numeric-Alpha Keypad

When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shft sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.

Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.

To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.

When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctrl	Alt	Shft	Alpha	
Power / Suspend							Power ⁴
Field Exit (default VK_PAUSE)	MAP				MAP		Diamond#1 <i>MAP=Mappable</i>
= or (x	x			MAP		Diamond#2 Default is MAP <i>MAP=Mappable</i>
! or)	x	x			MAP		Diamond#3 Default is MAP <i>MAP=Mappable</i>
Volume Adjust Mode		x					Scan Key ⁵
Display Backlight Brightness Adjust Mode	x						Scan Key ⁶
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shft
<u>Toggle Alpha Mode</u>							<u>Alph</u>
Alt Mode							Alt
Control Mode							Ctrl
Scan Mode							Scan Key
Esc	x						Alt
Space							Spc
Enter							Enter
CapsLock (Toggle)	x						Tab
Back Space		x					Spc
Tab							Tab

⁴ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

⁵ Orange+Scan enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

⁶ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert		x					Ctrl
Delete							Del
Home					x		Down Arrow
End					x		Up Arrow
Page Up		x					Up Arrow
Page Down		x					Down Arrow
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5
F11	x						F1
F12	x						F2
F13	x						F3
F14	x						F4
F15	x						F5
F16					x		F1
F17					x		F2
F18					x		F3
F19					x		F4
F20					x		F5
F21		x			x		F1
F22		x			x		F2
F23		x			x		F3
F24		x			x		F4
a						x	2
b						x	22
c						x	222
d						x	3
e						x	33

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
f						x	333
g						x	4
h						x	44
i						x	444
j						x	5
k						x	55
l						x	555
m						x	6
n						x	66
o						x	666
p						x	7
q						x	77
r						x	777
s						x	7777
t						x	8
u						x	88
v						x	888
w						x	9
x						x	99
y						x	999
z						x	9999
A					x	x	2
B					x	x	22
C					x	x	222
D					x	x	3
E					x	x	33
F					x	x	333
G					x	x	4
H					x	x	44
I					x	x	444
J					x	x	5
K					x	x	55
L					x	x	555
M					x	x	6
N					x	x	66
O					x	x	666
P					x	x	7
Q					x	x	77
R					x	x	777
S					x	x	7777

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
T					x	x	8
U					x	x	88
V					x	x	888
W					x	x	9
X					x	x	99
Y					x	x	999
Z					x	x	9999
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0							0
. (period)		x					DEL
<	x						7
[x					2 or 2
]	x						3 or 3
>	x						8
=		x					Diamond#2
{	x						4
}	x						5
/	x						1
-	x						Spc
+	x						Del
* (asterisk)					x		8 or Diamond#1
: (colon)		x					0
; (semicolon)	x						0
. (period)		x					Del
?		x					8
` (accent)	x						6
_ (underscore)		x					7

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
, (comma)		x					6
' (apostrophe)		x					Alph
~ (tilde)	x						9
\		x					1
		x					Alt
"	x						Alph
!		x					Diamond#3 or 1
@					x		2 or 5
#					x		3 or 4
\$		x					9 or 4
%					x		5
^					x		6 or Ctrl
&	x						7
(x						Diamond#2 or 9
)	x						Diamond#3 or 0 (zero)



Appendix B Regulatory Notices and Safety Information

FCC Information:

This device complies with FCC Rules, part 15. Operation is subject to the following conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning: Changes or modifications to this device not expressly approved by LXE, Inc., could void the user's authority to operate this equipment.

EMC Directive Requirements:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Industry Canada:

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouiller du Canada. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Classe A prescrites dans le Règlement sur le brouillage radioélectrique édictés par le ministère des Communications du Canada.

RF Safety Notice

Caution



This device is intended to transmit RF (Radio-Frequency) energy. In order to comply with FCC and Industry Canada radio-frequency exposure requirements for body-worn operations, this device should be used with the Nylon Holster with Belt-Loop accessory (P/N: 159890-0001) in accordance with the user instructions. This device may also be operated with body-worn holster and carry-case accessories that do not contain metallic components and maintain a minimum separation distance of 1.5 cm between the back side of the device (battery compartment side) and the user's body. This device must not contain co-located transmitters. Use of this device in a manner not consistent with these instructions can increase the risk of radio-frequency exposure.

Notice:

The long term characteristics or the possible physiological effects of radio frequency electromagnetic fields have not been investigated by UL.

Li-Ion Battery

When disposing of the MX7 main battery, the following precautions should be observed: The battery should be disposed of promptly. The battery should not be disassembled or crushed. The battery should not be heated above 212°F (100°C) or incinerated.

R&TTE Directive Requirements (Applies only to equipment operated within the EU/EFTA)**Information to User**

A label on the exterior of the device should resemble one of the labels shown below (the label contains the LXE part number of the installed radio card). The labels shown below and affixed to the device, identify where the device may be used and where its use is restricted. Use of a device is prohibited in countries not listed below or otherwise identified by the label. (May or may not include the 0560 Notified Body No. Substitute 4 digit Notified Body No. may also be applied.)



Permitted for use in: Austria, Belgium, Denmark, Finland, Germany, Greece, Hungary, Iceland, Italy, Ireland, Liechtenstein, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, and the United Kingdom



Permitted for use in France.

MX7 Approvals/Standards

Product	EMI / EMC Standards	Safety Standards
MX7	FCC Part 15 Subpart B, Class A EN 55022 Class A (CISPR 22) EN 55024:1998 AS/NZS 3548, Class A (CISPR 22)	UL 60950 / CSA C22.2 No. 60950 IEC/EN 60950-1 CDRH: 21 CFR 1040.10 IEC/EN 60825-1



Transceiver:

Transceiver	RF (2.4 GHz) standards	RF Safety Standards
MX7 with 802.11b/g	FCC Part 15, subpart C Industry Canada RSS 210 ETSI 300 328	FCC O.E.T. Bulletin 65 Industry Canada RSS 102

	<p>Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.</p>
--	---

LXE 802.11b/g WLAN Declaration of Conformity

LXE

DECLARATION OF CONFORMITY	
according to:	
the R&TTE Directive;	99/5/EEC
The EMC Directive;	89/336/EEC
The Low Voltage Directive;	73/23/EEC
and the Marking Directive;	93/68/EEC
<p>Type of Equipment: DSSS 2.4GHz WLAN Brand Name or Trademark: LXE Type Designation: MX7 with 802.11b/g WLAN Manufacturer: LXE Inc. Address: 125 Technology Parkway Norcross, GA 30092 USA</p>	
<p>The following harmonized European Norms have been applied:</p> <p>EMC Standards:</p> <p>EN 301 489-1: 07-2000 Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements</p> <p>EN 301 489-17:07-2000 Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for Wideband data and HIPERLAN equipment</p> <p>EN 55022: 1998 Limits and methods of measurement of radio disturbance characteristics of information technology equipment</p> <p>Radio Standards:</p> <p>EN 300 328-1 and -2: 2000-7 Radio Equipment and Systems (RES); Wideband transmission systems; Technical characteristics and test conditions for data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques</p> <p>Safety Standard:</p> <p>EN60950-1: 2001 Safety of information technology equipment, including electrical business equipment</p>	
<p>The product carries the CE Mark:</p> <div style="text-align: center;">  </div> <p>We, LXE Inc., declare that the equipment specified above complies with all Essential Health and Safety Requirements of the above Directives and Standards, as amended.</p>	
<p>Date of issue: November 8, 2005</p>	 Cyril A. Binnom Jr. EMC Approvals Engineer

LXE Inc. 125 Technology Parkway Norcross, GA 30092-2993 USA
ph. 770/447-4224 fax 770/447-6928



A/C Power Supply Safety Statement – MX7 Output Rated 12 VDC, 1.25 A.



The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.



Optional A/C Power Supply:

Outside North America, this unit is intended for use with an IEC certified ITE power supply with output rated as stated at the top of this page. (US)

Alimentation c.a. optionnelle:

Hors de l'Amérique du Nord, cette unité est conçue pour être utilisée avec une alimentation ITE certifiée CEI de sortie nominale indiquée au haut de cette page. (FR)

Valgfrit vekselstrømforsyning

Udenfor Nord Amerika er denne enhed udstattet med en IEC (international elektronisk Kommission) udfærdiget med en ITE strømfor syning med strømudgang som fastslået på denne sides begyndelse. (DK)

Vaihtohtoinen vaihtovirran syöttölaite:

Pohjois-Amerikan ulkopuolella tämä laite on tarkoitettu käytettäväksi sellaisen IEC:n sertifioiman ITE-tehonsyöttölaitteen kanssa, jonka antoteho on tämän sivun yläosassa esitetyn mukainen. (FI)

Optionales Netzteil (Wechselstrom)

Außerhalb Nordamerikas sollte diese Einheit über ein der IEC-Norm entsprechendes ITE-Netzteil gespeist werden, und zwar mit einer wie oben auf dieser Seite genannten Ausspeisung. (DE)

Προαιρετική Τροφοδοσία Συνεχούς Ρεύματος

Εκτός Β. Αμερικής, η μονάδα αυτή προορίζεται για χρήση με ένα τροφοδοτικό ITE πιστοποιημένο κατά IEC με ονομαστική ισχύ όπως δηλώνεται στην αρχή της σελίδας. (GR)

Alimentazione opzionale a corrente alternata:

Al di fuori dei paesi dell'America del nord, l'unità deve essere impiegata con un dispositivo d'alimentazione per attrezzature informatiche approvato dalla IEC la cui potenza nominale sia pari a quella indicata all'inizio della pagina. (IT)

Vekselstrømforsyning (ekstrautstyr):

Utenfor Nord-Amerika skal dette produktet brukes med en IEC-sertifisert ITE-strømforsyning med klassifisert effekt som angitt øverst på denne siden. (NO)

Fornecimento opcional de CA:

Fora dos EUA, esta unidade destina-se a ser usada com dispositivos de fornecimento de corrente ITE com certificação IEC, com a capacidade indicada no topo desta página. (PT)

Suministro optativo de corriente alterna

Fuera de América del Norte, esta unidad se debe utilizar con un alimentador ITE homologado por la IEC (comisión electrotécnica internacional) con una salida que tenga la calificación que figura en la parte superior de esta página. (ES)

Valfri A/C Strömförsörjning

Utanför Nordamerika är det meningen att denna enheten används med en IEC-certifierad ITE-strömförsörjare med den uteffekt som anges längst uppe på den här sidan. (SE)

İsteğe Bağlı A/C Güç Kaynağı:

Kuzey Amerika dışında, bu ünite, çıkış sınıflandırması bu sayfanın başında belirtilen IEC sertifikalı bir ITE güç kaynağı ile birlikte kullanılmak üzere tasarlanmıştır. (TR)

Updated 10/01/2001

Legend: Danish – DK; English – US; Finnish – FI; French- - FR; German – DE; Greek – GR; Italian – IT; Norwegian – NO; Portuguese – PT; Spanish – ES; Swedish – SE; Turkish – TR.



Laser Light Safety Statement



Warning:

This product uses laser light. One of the following labels is provided on the scanner. Please read the Caution statement. (US)

Mise én garde:

Ce produit utilise un rayon laser. L'une des étiquettes suivantes est apposée sur le scanner. Veuillez lire l'avertissement qu'elle contient. (FR)

Advertência:

Este produto usa luz de laser. O scanner contém um dos seguintes avisos. Favor ler o Aviso. (PT)

Varning:

Denna produkt använder laserljus. En av de nedanstående etiketterna sitter på scannern. Var god läs varningstexten. (SE)

Advarsel:

Dette produkt anvender laserlys. En af følgende mærkater anvendes på scanneren. Læs venligst sikkerhedsforanstaltningen. (DK)

Varoitus:

Tämä tuote käyttää laservaloa. Skannerissa on jokin seuraavista tarroista. Lue Huomio-kohta. (FI)

Warnung:

Dieses Produkt verwendet Laserlicht. Eines der folgenden Etiketten befindet sich auf dem Scanner. Bitte lesen Sie den Gefahrenhinweis. (DE)

Attenzione:

Questo prodotto utilizza luce laser. Una delle etichette seguenti c'è ubicata sullo scanner. Si raccomanda di leggere con attenzione le avvertenze riportate. (IT)

Advarsel:

Dette utstyret bruker laserlys. En av følgende etiketter er plassert på scanneren. Les advarselen på etiketten. (NO)

Advertencia:

Este producto usa luz de láser. Las etiquetas se proveen en la máquina exploradora. Por favor, lea detenidamente la explicación para las precauciones. (ES)

Waarschuwing:

Dit product gebruikt laserlicht. Een van de volgende labels is op de scanner aangebracht. Lees a.u.b. de waarschuwing onder Oppassen. (NL)



Laser Light Safety Statement



<p>Uyarý: Bu ürün lazer ýbýdý kullanýr. Arađýdaki etiketlerden bir tanesi tarayýcýnýn üstünde sađlanýr. Lütfen Dikkat ifadesini okuyun. (TR)</p>	<p>Προειδοποίηση: Αυτό το προϊόν χρησιμοποιεί λέιζερ φως. Υπάρχει μία από τις ακόλουθες ετικέτες στο σαρωτή. Παρακαλούμε διαβάστε τη δήλωση με τίτλο Προσοχή. (GR)</p>
<p>경고: 본 제품은 레이저 광선을 사용합니다. 다음 라벨 중 하나가 스캐너에 제공됩니다. 주의 사항을 읽어 주십시오. (KR)</p>	<p>警告: この製品はレーザー光線を使用します。 次のラベルのうち1つがスキャナーに貼られています。 注意事項をお読みください。 (JP)</p>
<p>警告: 本产品使用激光。 下列一个标签将随扫描仪一道提供。 请阅读“当心”一栏的内容。(CN)</p>	<p>Legend: Chinese-CN; Danish-DK; Dutch-NL; English-US; Finnish-FI; French-FR; German-DE; Greek-GR; Italian-IT; Japanese-JP; Korean-KR; Norwegian-NO; Portuguese-PT; Spanish-ES; Swedish-SE; Turkish-TR</p>

Labels – MX7 Hand Held Computer

ENGLISH			FRENCH
DANISH			GERMAN
GREEK			ITALIAN
NORWEGIAN			SPANISH
TURKISH			DUTCH
SIMPLIFIED CHINESE			PORTUGUESE
JAPANESE			SWEDISH
KOREAN			FINNISH

Index

2nd key function, described	37
32-key Keymap	61

5

55-key Keymaps	55
----------------------	----

A

AC Power	
and LEDs on cradles	44
AC Power Scheme	31
Accessories	26
Electrostatic Discharge	11
Installing	11
Alph key	
Enter a string of letters in a text field	38
Alpha Mode LED	35
Alt key function	36
Alt sticky keypress	36
ANSI CE Keypad	21
Audio Volume settings	32

B

Backlight timer	30
Battery	
Charge New	11
Check status	15
Important	2
Battery Multi-Charger	43
Battery Power Scheme	31
Battery, Backup	
described	41
Battery, Main	41
described	41
Battery, replace	12

C

Cable	
Audio connection	20
Printer connection	20
RS232 connection	19
USB connection	19
Calibrate touch screen	29

CapsLock key sequence	38
CapsLock mode function	38
Change the Time and Date	11
Charger, battery	43
Cleaning	29
Cold reset, How to	27
Color Display	28
Color displays and backlight timers	30
Components	5
Contact LXE	26
Control sticky keypress	36
Cradle	45
Ctl key function	37
Ctrl key function	36

D

Data entry	
keypad	23
laser scanner	24
stylus	23
virtual keyboard	25
Data entry	23
Display	28
Backlight brightness	30
Display and scanner aperture cleaning	29
Display backlight timer	30
Documentation, for the User	26

E

Edit the button parameters	39
Enter key function	36
Entering Data	23
Environmental Specifications	3

F

Features	1
Field Exit key function	37
Forms entry	23
Function	
2nd Key	37
Alt Key	36
CapsLock Mode	38
Ctl Key	37
Ctrl Key	36

Enter Key	36
Field Exit Key	37
Shft Key	36
Spc Key	36
Function keys	36

G

Getting Started	11
-----------------------	----

H

Handle, How to	16
Handstrap, installation	17
Help	26
Hotswapping cautions	42

I

IEC IP54	3
Input panel virtual keyboard	25
Install Mounting Brackets, Vehicle	45

K

Key	
Alpha	36
Diamond	36
Enter	36
Numeric	36
Scan	36
Space	36
Key functions	36
Keypad and entering data	23
Keypad Shortcuts	14
Keypad, 32 Key	22

L

Lithium-Ion (Li-ion)	41
----------------------------	----

M

Mappable Diamond Keys	39
Mode Key Functions	38
Mode timers	31

N

New Battery	11
-------------------	----

O

Operating Temperature	3
Orange and Blue sticky keypresses	37

P

Passive vehicle cradle	45
Pen Stylus	14
Pen Stylus and data entry	23
Pistol Grip Handle, How To	16
Power key	13
Power Scheme	31
Protective Film	28

Q

Quick Start Instructions	11
--------------------------------	----

R

Reboot, How to	27
Recalibrate	15, 29
Registry and save settings	27
Regulatory Notices	67

S

Safety Information	67
Save settings	27
Scan Status LED	35
Scanner status, LED	24
Scanning and data entry	24
Scheme	31
Screwdriver	
Phillips, for handstrap	17
Shift key function	36
Shift keypress and sticky keys	36
Sound Scheme	33
Space key function	36
Specifications	
Environmental	3
Sticky Key	36
Sticky keys in keypad data entry	23
Stylus	14
Stylus and data entry	23
Suspend mode, How To	13
Suspend Timer	31

System Idle Timer.....	31
System Status LED.....	35

T

Technical Glossary	26
Tethered scanners	24
Timer	
User, System, Suspend.....	31
Touch Screen	14, 28
Touch Screen and data entry.....	23
Touch Screen and Keypad Shortcuts	14
Touch screen calibration.....	15
Troubleshooting	
Startup.....	11

U

User Guides	26
-------------------	----

User Idle Timer.....	31
----------------------	----

V

Vehicle Mounting Bracket, Installation Procedure	45
Virtual keyboard	
Input panel	25
Volume	
adjust audio volume	32

W

Warm reset, How to.....	27
Warnings and Labels	
Laser Scanner.....	4, 24
When the backup battery power is Low or Very	
Low.....	42

