 
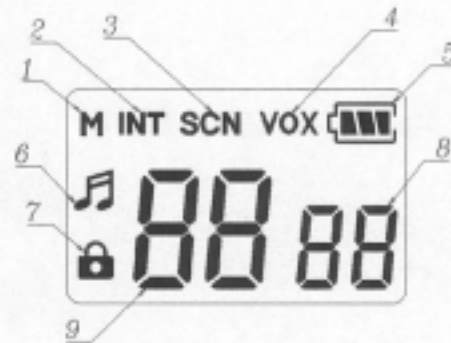 


OPERATION

Please refer to the user's manual for details

HJC-FRS X2 user's manual

1. description

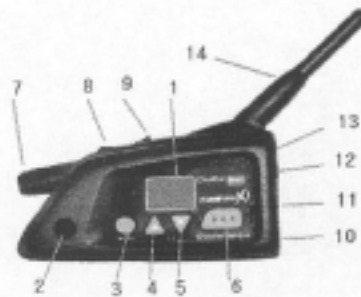

(1) LCD

LCD	description
1	MODE
2	INTERCOM MODE
3	SCAN MODE
4	VOX
5	BATTERY
6	BEEP
7	KEY LOCK
8	CTCSS SUB TONE
9	CHANNEL

- (2) PTT button
hold down to transmit and release to receive.
- (3) MODE button
press to go several mode.
- (4) UP BUTTON
to select the channel and option in mode operation.
- (5) DOWN BUTTON
to select the channel and option in mode operation.
- (6) INTERCOM BUTTON
to go INTERCOM mode and to monitor
- (7) POWER ON/OFF KNOB
to power on or off and to select VOX level
- (8) VOLUM DOWN BUTTON
to reduce the volume level
- (9) VOLUM UP BUTTON
to increase the volume level
- (10) EXTERNAL SPEAKER/MIC SOCKET
to connect to external speaker/mic
- (11) INTERCOM SPEAKER/MIC SOCKET
to connect to INTERCOM speaker/mic
- (12) HAND FREE SOCKET
to connect the telephone or external PTT
- (13) AUDIO IN SOCKET
to connect external AUDIO IN.
- (14) ANT

2. Operation

1) power ON/OFF

Push the POWER ON/OFF BUTTON 0.5 second, the radio is on with signal tone after self-checking.
Push the POWER ON/OFF BUTTON 2 seconds, the radio is off with signal tone.

2) channel select

Choose the desired channel with pressing UP/DOWN BUTTON, and press PTT BUTTON to complete



 
3) volume level select

Choose the desired volume level with VOLUME UP/DOWN BUTTON, and press PTT BUTTON to complete. The radio is mute when the volume level is selected '00'



4) tone select

Press MODE BUTTON one times. During the tone number blinking, choose the desired tone number with pressing UP/DOWN BUTTON. Press PTT BUTTON to complete.

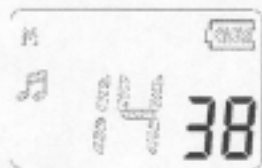


5) beep ON/OFF select

Press MODE BUTTON two times. Choose BEEP ON or OFF with pressing UP/DOWN BUTTON and press PTT BUTTON to complete.

BEEP ON :



 BEEP OFF

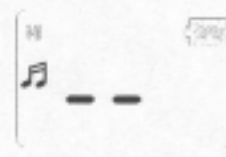


6) key lock ON/OFF select

Press MODE BUTTON three times. Choose key lock ON/OFF with pressing UP/DOWN BUTTON and press PTT BUTTON to complete

KEY LOCK ON:



 KEY LOCK OFF:

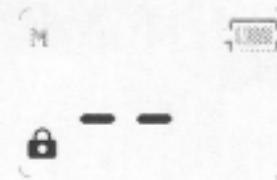

7) scan

Press MODE BUTTON four times. During the channel number blinking, press UP BUTTON to upward scan or press DOWN BUTTON to downward scan. The radio stops scanning after detecting a signal and remains on the same channel until the signal drops out for 2 seconds. Press PTT BUTTON to stop scanning.



8) power save level select

Press MODE BUTTON five times. Choose the desired power save level with pressing UP/DOWN BUTTON and press PTT BUTTON to complete

POWER SAVE OFF



NORMAL POWER SAVE



HIGH POWER SAVE



9) INTERCOM

Press INTERCOM BUTTON over 2 seconds.



10) monitor

Press INTERCOM BUTTON shortly to monitor, and press it shortly again to stop.

11) hand free

Connect the telephone to HAND FREE SOCKET. When the telephone signal comes, press the EXTERNAL SEND BUTTON to receive with hand free. Press EXTERNAL SEND BUTTON again to finish.

