

	150 mm		
	11		
	15	I.	
	של Honsenn	i i	
		1	
	(1)§ 15.19 Labelling requirements.	l I	
	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including		
	interference that may cause undesired operation. § 15.21 Changes or modification warning		
	Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	I.	
	§ 15.105 Information to the user. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are		
	designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the		
·	instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or	I.	
	television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:		
	 -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which 		
	the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.	I.	
		i i	
•		I.	
_		I	

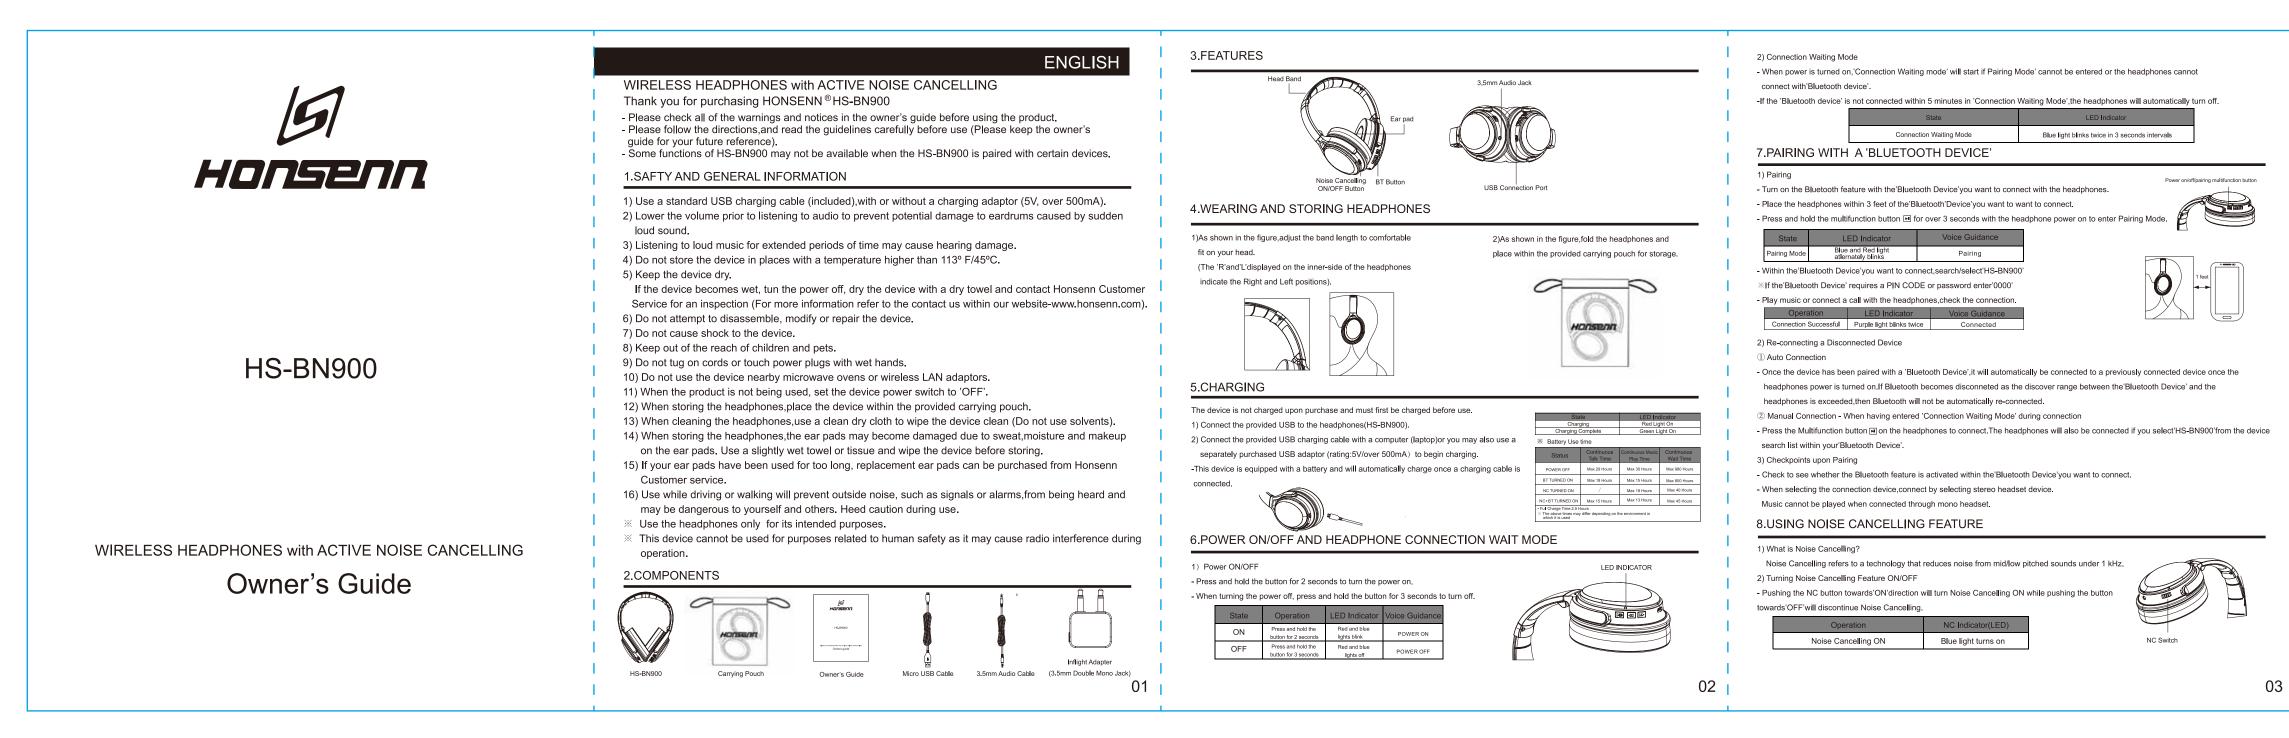

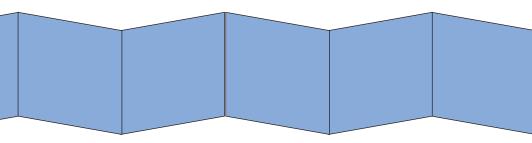

	I contract of the second s
	I contract of the second s
	1
	I contract of the second s
	1
	I contract the second
	1
	I construction of the second se
	1
	I construction of the second se
	I construction of the second
	· · · · · · · · · · · · · · · · · · ·

1) Playing Music	X When the battery charge is under 3%, the alarm will sound. If use is continued for several minutes the battery will be completely drained, the		
- Shortly press the Multifunction button III once to play music from the 'Bluetooth Device'.	'Power Off' voice guidance is provided and the power will automatically turn off.	Problems	
- While music is playing shortly press the Multifunction button 🗉 to pause the playing music . The music will be played	2) Resetting the Device	The power does not	
from the paused point when playig music again.	- To reset to factory settings, press the Multifunction button 📧 for 5 seconds simultaneously while in the Pairing Mode	turn on	- Charge
- While music is playing, pressing and holding the Multifunction buttor I for one second will stop the playing music.	Operation State		_
The music will be played from the start when playing music again.	Pairing Information Initialization		- Check
The Stop function may not be supported depending on your 'Bluetooth Device'.	Voice Guidance ON	The device dose not	- Check
2) Controlling Volume and Using Seek	Auto Connection mode ON	charge	- When
• Shortly press the Multifunction button I to go to previous song. Hold the Multifunction button I to volume up.			_
- Shortly press the Multifunction button Image to go to next song. Hold the Multifunction button Image to volume down.			- Check
State LED Indicator	13.CONNECTING AND USING THE CABLE	The device dose not	- Check
	1) This headphones can also be used with the cable connected as shown in the figure.	pair	- Check
While music is playing Blue Light slowly blinks every 3 seconds			(Pairing
*Music can be listened to through the headphone by directly operating your Bluetooth Device'.			- Check
When the battery is completely drained, you can connect the provided audio cable to continue listening. Next/volume down button			- Check
10.ACCEPTING/MAKING A CALL WHILE PLAYING MUSIC		Music cannot be played	- Check
1) Accepting a Call while Plaving Music			- Check - When
- When the incoming call tone is heard through the headphones, press the Multifunction button I. The music will be paused and the call is connected.	※ When connected due to a drained battery, only the music and phone features are supported.		- when
- Once the call has ended, press the Multifunction button 🗉 to terminate the call. Once the call is terminated, the paused music will play again.	14.SPECIFICATIONS		- Check
2) Making a Call while Playing Music		Noise is heard or	conne
- While playing music, press and hold the Multifunction button I for about 1 second to pause the music and connect with the most recent number.	- Type: Φ 40 mm Driver Units - Sensitivity: 110 dB	the sound lags	- Check
*This feature may slightly differ depending on your 'Bluetooth Device'.	- Frequency Response: 20 Hz ~ 20 kHz		(max c
11. USING THE CALL FUNCTION	- Impedace: 32 Ω	The other party connet	
	- Max Output Power: 50 mW	The other party cannot be heard while on a call	- Check
1) Accepting a Call	- Cable Length:1.0m		
- When the incoming call tone is heard through the headphones, press the Multifunction button I (Adjusting Call Volume: to control the call	- Weight:0.64 lb/210 g(without Cable)	Outside noise is too high	- Check
voume, press the Multifunction I buttons).	- Communication Network: Bluetooth Standard Ver. 4.2	or not reduced	- Check
2) Ending a Call	- Output Power:Power Class 2 - Max.Communication Range: Discoverable within 15 m		are not
- While on a call, shortly pressing the the Multifunction button 🗹 to end the call.	- Full Charging Time: 2.5 Hours.	HONSENN TECHNOLOGY	Y CO., LTE
3)Rejecting a Call	- Standby Time (NC on/off): 49 Hours/980 Hours	Address: Hongtai Technopark,	
- When the incoming call tone is heard through the headphones, press and hold the the Multifunction button I for about 1 second(The	- Battery: Lithium Polymer DC 3.7V/550 mAh	Dongcheng District, Dongguar	in City, Gua
incoming call is rejected). 4) Making a Call		Tel:+86-769-81925525 Fax:+86-769-81925526	
- Press and hold the the Multifunction button II for about 1 second. A call is connected with the most recent number.		Web:www.honsenn.com	
* This feature may slightly differ depending on your 'Bluetooth Device'.			
	05		
04	05		
4			

Caution upon using Noise Cancelling feature

Heed caution during use.

- Noise Cancelling cannot be used when the battery is completely drained.

9.LISTENING TO MUSIC (PLAY & CONTROL)

- Use while driving or walking will prevent outside noise, such as signals or alarms, from being heard and may be dangerous to yourself and others.

- Noise Cancelling is optimized for mechanical noises from airplanes, buses and subway trains and is not required for use within quiet interior

5) Call Waiting(supported only when having applied for this service with your telecom provider). When there is another incoming call while on a call.

- Press and hold the Multifunction button 🗉 for about 1 second to place the current call on call waiting and connect the second call(Press the

Multifunction button 🖬 again for about 1 second to switch between the waiting call and connected call).

1) For Apple iOS version 5 or above, the remaining battery is displayed at the top right side of the mobile phone screen.

- Shortly press the Multifunction button 🖻 to end the current call and connect the second call.

12.MISCELLANEOUS FEATURES

Address: Hongtai Technopark, Sangyuan shijing industrial zone, Dongcheng District, Dongguan City, Guangdong Province, China

- Microphone Frequency Range: 10 ~ 4.000Hz

- Operating Temperature: 41 ~ 113 °F/5 ~ 45 °C

- Support Echo Cancellation and Talk Noise CVC Solution

* The Specifications are subject to change without prior notice for quality improvement.

arge the device.If the power does not turn on even after charging,contact Honsenn Customer Servic

When using a separately purchased USB AC adaptor, check to see that it has been properly connected.

Check whether the Bluetooth feature within the 'Bluetooth Device' you want to connect is enabled.

Check whether there is an electronic device using the 2.4 GHz frequency band nearby the device and

Check whether the headphones are worn properly (Noise will not be properly reduced if the ear pads

Check whether the USB charging cable has been properly connected with the device.

Check whether the 'Bluetooth Device' you want to connect is within the supported range

eck whether the PC power is on and that it has been properly connected.

Check whether the power of the 'Bluetooth Device' you want to connect is on.

Check whether the Bluetooth profile within the 'Bluetooth Device' is compatible.

Check whether music is being played within the connected 'Bluetooth Device'.

- When using an extension cord, check to see that the plug is properly connected.

Check whether the connected 'Bluetooth Device'is far away from this device

Check whether the volume within the connected 'Bluetooth Device'is low.

Check whether the volume within the connected'Bluetooth Device'is low.

Check whether the power of the device and 'Bluetooth Device'is on.

Pairing is supported only when within 3 feet).

connected'Bluetooth Device'.

max communication range:within 30 feet).

The other party cannot - Check whether the power of the 'Bluetooth Device'you want to connect is on.

Check whether Nosie Cancelling is turned ON.

are not properly worn on the ears).

15.PRODUCT SYMPTOMS AND TROUBLESHOOTING

- Microphone Sensitivity: -42 dB