

User Manual

 


GENERATION FUTURE




IRONspeed

Parts Description

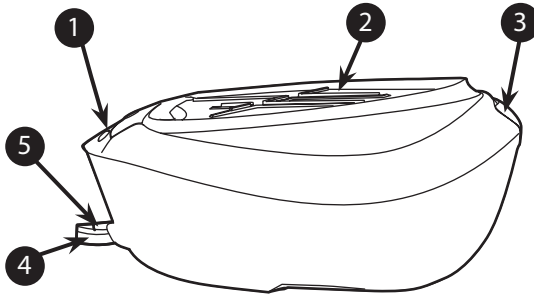


1	Control Panel
2	Iron Resting Mat
3	Water Tank Filler Cover
4	Supply Hose
5	Mains

 Fig. 1: Base and Tank Description

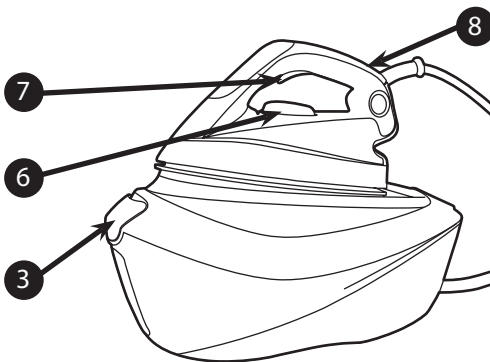

6	Temperature Dial
7	Steam Trigger
8	Temperature Dial Indicator

 Fig. 2: Domestic Iron Description

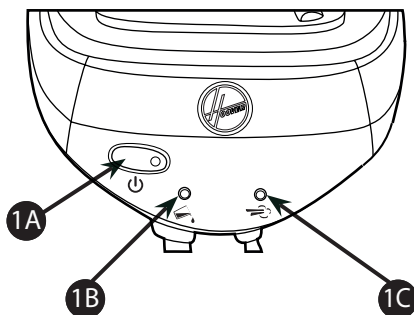

1A	On/off switch
1B	"Water Tank Empty" Light
1C	"Steam Ready" Light

Fig. 3: Domestic Iron Control Panel

Introduction

Dear customer,

First of all, we would like to congratulate you for purchasing this Hoover ironing system and to thank you for the confidence you have in Hoover brand.

This appliance has been manufactured with great care, respecting all of our quality criteria and has been tested several times. We hope its use will fulfil your expectations. We are strongly convinced that it will make your ironing much faster and better.

Before using your new Hoover appliance, please read carefully this user's manual. If you need further information or if you encounter any trouble which are not noticed in this manual, please contact the after-sales service or your standard dealer.

Important Safety Instructions

Read this user manual carefully before you first use and save it for future reference.


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Important Safety Instructions

- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible and the guarantee will not apply.
- Before connecting your appliance, check if the main voltage is the same as the voltage indicated on your appliance and that the power outlet is connected to the earth.
- Ensure before each use that the electric cord or any other important part is not damaged.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the appliance shows evidence of breakdown, malfunction, leakages. Please make sure it is checked by an authorized Service Centre to avoid any danger.
- Always make sure the appliance is switched off, unplugged and cooled down

Important Safety Instructions

before doing any maintenance work.

- The iron must not be left unattended while it is connected to the supply mains and before it has cooled down.
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the iron, the stand, the cable or the plugs in water. Never hold them under the water tap.
- The soleplate of the iron can become extremely hot and may cause burns if touched. Never touch the electric cords with the soleplate.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- The surfaces with  are liable to get hot during use.
- To have a electronic copy of the instruction manual contact the after sales service in guarantee card.
- The iron must be used and rested on a stable surface.

Chapter 1 - Control Panel

On/off switch (1A)

A light on the switch will illuminate to indicate that the appliance is switched on.

When the appliance is switched on and “Steam ready” light (1C) is off, it means that steam is ready. You can press the steam trigger and steam will escape from the soleplate. Please note that during use, the steam light will switch on but you can continue steam ironing.

“Water tank empty” light (1B) is on: There is no more water in the tank. Please refill the tank following the instructions in the chapter 2.2

Chapter 2: Preparation for Use

Due to the powerful output of steam, Hoover recommends the use of an active ironing board with blowing and vacuuming function which allows escape of any excess steam.

Place the ironing system on a stable and level surface, for example on the hard part of an ironing board or on a heat-resistant surface.

Chapter 2.1 : What Kind of Water May be Used?

The Hoover ironing system has been designed to be used with tap water only.

There is no need to use distilled or pure distilled water.

Nevertheless, in case you live in a hard water area, you can mix 50% of distilled water with 50% of tap water.

Do not use any other kind of water or do not add any contents to water tank as it can damage your appliance.

Chapter 2.2 : Filling the Water Tank

Switch off the appliance and unplug it.

Open the water tank filler cover (3) to gain access to the water tank.

Fill it with tap water with the help of a bottle.

Do not exceed the max mark.

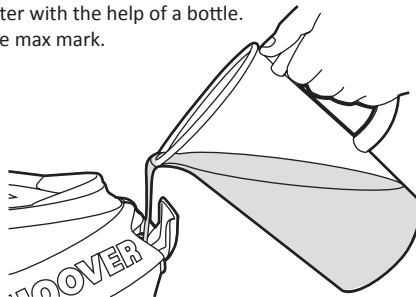 


Fig. 4: Water Tank Filling

Warning: Do not add vinegar, hot water, perfume, or any other kind of chemical agents or any other contents in the water tank. It could damage the steam generator and shorten its life use.

Chapter 2.3 - Switching on the Appliance

Connect the appliance with the mains cord to an earthed socket and switch on the power. Press the on/off switch. The light **(1A)** will illuminate, this tells you that the appliance is working and that the boiler is heating up. After approximately 2 minutes, the “steam ready” led will light off and you can now start to use the steam feature.

N.B.

The first time the appliance is used, you may find some fumes, dust and a smell should appear.

It's quite normal and will quickly disappear.

This is due to a treatment applied to the soleplate that improves the steam performance. Before use, please use the iron as described in Chapter 3.4 Vertical Steam Ironing.

Chapter 3: Using Your Steam Generator

Chapter 3.1: Regulating the Soleplate Temperature

Select the temperature of the soleplate by turning the dial **(6)** on the iron to the desired position. Wait a few moments until the temperature indicator **(8)** is off. It will indicate to you that the soleplate has reached the requested temperature.

While ironing, the temperature dial indicator may turn on and off, the temperature adjusts without interrupting your ironing.

Help

To know the best suitable temperature for each textile, check the laundry care label of the article to be ironed. Please note that during use, the temperature light goes on from time to time. It signifies that the iron is heating up to the set temperature.

If a fabric is made with various kinds of fibres always select the soleplate temperature in adequacy with the most delicate one.

If you select a lower temperature while ironing, wait until the iron has cooled down to the set temperature before you continue ironing.

If the temperature is too low, some drops of water could escape from the soleplate. Please raise up the temperature above the 2 dots (••) to avoid this issue.

Chapter 3.2 - Ironing

Dry Ironing

 
Select the temperature of the soleplate following the indications of chapter 3.1. Start your ironing without pressing the steam trigger **(7)**, when the soleplate reaches the appropriate temperature.

Steam Ironing

Select the temperature of the soleplate following the indications of chapter 3.1. The steam will be ready to be used after 8 minutes and the dedicated lamp **(1C)** will turn off. Starting from that time you can begin your ironing and press the steam trigger **(7)** for having steam. The steam flow stops when you release the trigger.

N.B.

During use, you may hear noise coming from your steam generator. This is normal. It signifies that a pump is injecting water into the boiler. Ideally, avoid using the steam trigger at this precise moment to avoid a fall in pressure.

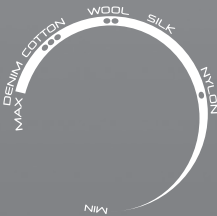

Chapter 3.3 - How to choose the Correct Soleplate temperature

To obtain the best results, it is important to set the correct temperature of the soleplate.

Textile	Soleplate T°C
Wrinkled Textiles	•••/Max
Tricky Zone	••/•••
Jeans	Max
Cotton	•••
Linen	Max
Starched Clothes	•••
Velvet/Alcantara	••
Wool	••
Silk	••
Cashmere	••
Rayon	••
Polyester	•
Nylon	•
Acrylic	•
Lycra	•
Polyamid	•

Help

When steam ironing clothes on which shiny patches may occur, we recommend you to set the soleplate temperature to a lower temperature or to iron the garment on the reverse. Start with the fabrics that needed to be ironed at a lower temperature (•) and finish with those that needed to be ironed at the higher temperature (•••/Max).

Chapter 3.4 - Vertical Steam Ironing

Set the soleplate temperature **(6)** to the max temperature.

Hang curtains and clothes (jackets, suits, coats). Hold the iron in vertical position at a short distance of the fabric to avoid burning it. Press the steam trigger **(7)** to steam iron moving it from top to bottom.

Warning: Do not direct the steam jet towards people or animals

Chapter 3.5 - Refilling the Water Tank During Usage

 
You can fill the water tank at any time during use.

When the water tank is empty, the "Empty water tank" light **(1B)** will switch on.

No more steam escapes from the soleplate.

Open the water tank filler cover **(3)** and refill the water tank with the help of a bottle of water without exceeding the max mark level.

Please refer to chapter 2.2 for more detailed instructions.

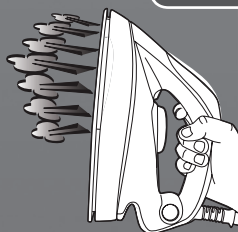

Chapter 4: Maintenance and Cleaning

To prevent any risk of burns, all maintenance and cleaning operations should only be carried out when the unplugged appliance has cooled down for at least 2 hours.

Chapter 4.1 - Cleaning the Appliance

Do not use any detergent or descaling products for cleaning the soleplate. Regularly clean it with a humid and non-metallic pad.

Empty the water tank after each use before storing it.

To clean the plastic parts of the stand, please use soft clothes.

Troubleshooting

These are common problems you may encounter when using your appliance.

If you are unable to solve any issue please contact your local Hoover Service Office.

Problem	Cause	Solution
The appliance does not become hot	There is a connection problem.	Check the mains cord, the plug and the wall socket
	The appliance is not switched on.	Press on the on/off switch
	The soleplate temperature is too low.	Set a higher temperature of the soleplate
The appliance does not produce steam	The appliance is not switched on	Press on the on/off switch
	The boiler has not yet heated up	Wait a few moments until the steam ready lamp is off
	The boiler may be empty	Refill the water tank
	You are not pressing the steam trigger	Press the steam trigger
	The soleplate temperature is set to the maximum	It works but steam is not visible as very hot and dry.
The soleplates becomes dirty or brown	There should be chemical or additives in the water used for ironing	Never use any chemical or additives in the water. Contact your after sales service if the linen is still dirty
	The linen is still dirty	Clean the soleplate with a non-metallic sponge
Water stripes appear on the textile	Your ironing board cover is saturated in water	Change the cover or use a mesh ironing board
Some scale deposit appears on the soleplate	Your boiler has not been rinsed for a while	Follow the indications in the appropriate chapter
The empty water tank LED is on	There is no more water in the tank	Refill the water tank with water

Important Information

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering spare parts, always check your model number.

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office. Please see all the contact details below.

Safety

Hoover believes that independent approval is the best way of demonstrating safety in design and manufacture.

All Hoover iron systems have been manufactured in compliance of all safety regulations and approved by the most qualified independent approval certification bodies.

ISO 9001

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



CE This product complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EC.

HOOVER Limited, Pentrebach, Merthyr Tydfil, Mid Glamorgan, CF48 4TU, UK

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.



GENERATION FUTURE[®]

Printed in P.R.C.
PART No. 48007881/01