


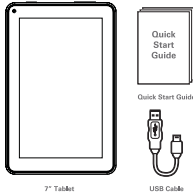 
EM744: QSG

08/15/2013



 
Quick Start Guide
Model: EM744

In the box



7" Tablet
Quick Start Guide
USB Cable


Buttons, ports & hardware

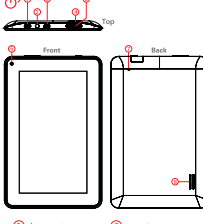

Top: Infrared USB Cable
Front: Power Button, Headphone Jack, Micro USB port, Micro SD Card Slot, Volume
Back: Front Camera, Reset, Speaker

Basic operation

 Charging the battery:
Make sure the tablet is in lockstandby mode (display is off), and connect it to a PC using the included USB cable as shown below.



Charging information:

- Quick charge: 3-4 hours (about 50%-60% charged)
- Full charge: 6-7 hours

The tablet may also be charged using an **OPTIONAL** USB rapid charger that can fully charge the tablet in under 2 hours.

To order the **OPTIONAL USB rapid charger:**

- On your PC, go to: gaibatt.com/optionusbcharge.asp, and click on the "Quickstart" and "Reset" way to get your rapid charger.
- On your tablet, select "Online Help" > "Shop Accessories" then select "Shop".
- Call us: 1-855-272-4600

Turning on the tablet
Press and hold the On button until the startup screen appears.

Power off the tablet
Press & hold the On button until the "Power off" option appears.

Lock the tablet (standby)
Briefly press the On button, flick the device to conserve the battery.

Unlock the tablet
Slide the "Lock icon" to the right.

Connecting to Wi-Fi

Setting up Wi-Fi
To browse web sites, use email and download apps, you must first connect the tablet to the internet.


To set up Wi-Fi:

1. Swipe the Home screen to the left to access the Settings widget.
2. Select "Wi-Fi Setup".
3. Select a network.
4. If required, enter the correct password and select "Connect".
5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Micro SD card


Inserting a Micro SD card
The tablet supports Micro SD cards up to 32GB (not included). To insert a Micro SD card into the tablet, insert the card as shown below, into the card slot until it clicks and locks into place.

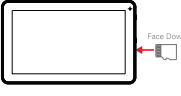


Downloading apps

Downloading apps & other app stores
Your tablet includes an app store with access to a large library of free & paid apps and games. However, for your convenience, we have provided links to several other app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.


1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Settings widget.



2. Select an app store, and follow the instructions to download and install on the tablet.




3. Click here.

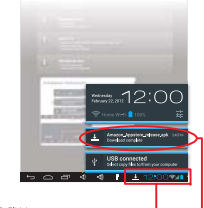

4. Select the downloaded app store. Tap "Get" from the Pop-up window.

5. Select "Install" to install the app.

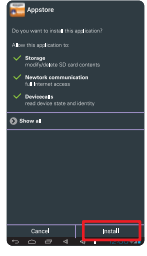

Legal information

CCC Notice
This information has been prepared and is to be used with this tablet with the Emerson 7" tablet. This information is provided for informational purposes only and does not constitute an offer of insurance or any other financial product. For more information, please contact your insurance broker or agent.

Warranty
Emerson warrants the tablet for a period of 12 months from the date of purchase. This warranty is limited to the tablet and does not cover accessories, software, or data. The warranty is void if the tablet is used for commercial purposes, is damaged by accident, misuse, or unauthorized repair, or if the tablet is used in conjunction with any other Emerson product.

Download App Stores
The download app stores are provided for your convenience. Emerson is not responsible for the content or availability of any app store. Please use these app stores at your own risk.

Limited Warranty

Warranty
Emerson warrants the tablet for a period of 12 months from the date of purchase. This warranty is limited to the tablet and does not cover accessories, software, or data. The warranty is void if the tablet is used for commercial purposes, is damaged by accident, misuse, or unauthorized repair, or if the tablet is used in conjunction with any other Emerson product.

Legal Information
This information has been prepared and is to be used with this tablet with the Emerson 7" tablet. This information is provided for informational purposes only and does not constitute an offer of insurance or any other financial product. For more information, please contact your insurance broker or agent.

