

PTAB782 QSG
20130826

Polaroid Kids Tablet Model: PTAB782

In the box
 Kids Tablet, Quick Start Guide, USB Cable, AC Adapter

Buttons, ports & hardware
 List of buttons: Front Camera, Earpiece, Home Button, Power Button, Volume Up, Volume Down, Headset Jack, Micro-USB, Rear Camera.

Basic operation
Power ON: Press and hold the On/Off button for 5 seconds.
Power OFF: Press and hold the On/Off button for 10 seconds.
Lock the tablet (optional): Press and hold the On/Off button for 10 seconds.
Unlock the tablet: Press the On/Off button to the right.
Charging the battery: Connect the USB cable to the Micro-USB port and the AC adapter to a power outlet.
Display lock: The tablet has a display lock. Press and hold the On/Off button for 10 seconds to lock the display. Press the On/Off button to the right to unlock the display.

Wi-Fi setup
 1. Select "Wi-Fi Setup".
 2. Select "Wi-Fi Setup".
 3. Select "Wi-Fi Setup".

Parental controls
 1. Select "Parental Controls".
 2. Select "Parental Controls".
 3. Select "Parental Controls".

Safe browser
 1. Select "Safe Browser".
 2. Select "Safe Browser".

Home screens
 AppShop home screen, Main home screen, Game home screen.

Apps screens
 All Apps screen, New Apps screen.

SD card
 Inserting an SD card.

Safe mode
 Safe Mode ON, Safe Mode OFF.

Care & safety precautions
 CAUTION: Do not use the tablet in the following situations:
 - In a car or other moving vehicle.
 - In the presence of flammable or explosive materials.
 - In the presence of strong magnetic fields.

Legal information
 Copyright © 2013 Polaroid Corporation. All rights reserved.

Limited Warranty
 This tablet is warranted for 12 months from the date of purchase.