


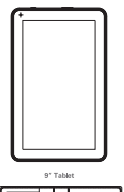
PMID920: QSG

08/16/2013


9" Internet Tablet
In the box
Buttons, ports & hardware
Basic operation
Connecting to Wi-Fi




Quick Start Guide
Model : PMID920




9" Tablet

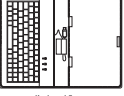


Keyboard Case



 
Quick Start Guide



USB Cable




AC Adaptor

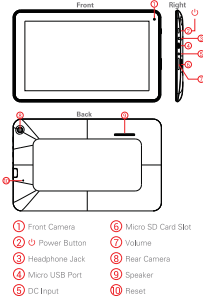

Front Back

- ① Front Camera
- ② Power Button
- ③ Headphone Jack
- ④ Micro USB Port
- ⑤ DC Input
- ⑥ Micro SD Card Slot
- ⑦ Volume
- ⑧ Rear Camera
- ⑨ Speaker
- ⑩ Reset

Charging the battery:
Connect the tablet to a wall outlet using the included AC adaptor.

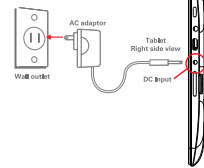

Turning on the tablet
Press and hold the On button until the startup screen appears.

Power off the tablet
Press & hold the On button until the "Power off" option appears.


Lock the tablet (standby)
Briefly press the On button. Lock the device to conserve the battery.

Unlock the tablet
Slide the "Lock icon" to the right.


Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet the display in off to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

Startup screen




Lock screen




Setting up Wi-Fi
To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

To set up Wi-Fi:


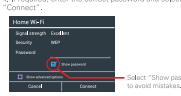

1. Swipe the Home screen to the left to access the Settings widget.



Settings widget

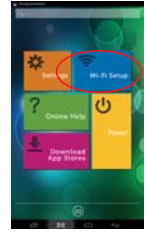


2. Select "Wi-Fi Setup".
3. Select a network.
4. If required, enter the correct password and select "Connect".
5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Micro SD card
Downloading apps
Keyboard case
Legal information
Limited warranty

Inserting a Micro SD card
The tablet supports Micro SD cards up to 32GB (not included). To insert a Micro SD card into the tablet, insert the card as shown below, into the card slot until it clicks and locks into place.

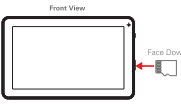


Front View

Face Down


Downloading apps & other app stores
Your tablet includes an app store with access to a large library of free & paid apps and games. However, for your convenience, we have provided links to several other app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.

1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Settings widget.

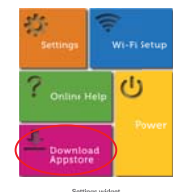


Settings widget

2. Select an app store, and follow the instructions to download and install it on the tablet.
3. Click here.




app store options

5. Select "Install" to install the app.
6. The app store appears on the Apps screen.

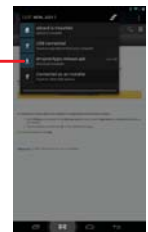

app store options

Secure the tablet with the (physical) bands



Connecting the tablet to the keyboard case

1. Place the tablet on the top flap and secure using the 4 elastic bands.
2. Connect the micro USB cable to the port as shown above.

Legal information

DC-Not For Sale:

This product is not for sale in the United States and is not intended for sale in the United States. It is intended for sale in the United States and is not intended for sale in the United States. It is intended for sale in the United States and is not intended for sale in the United States.

Warranty:

The manufacturer warrants that the product is free from defects in materials and workmanship for a period of 12 months from the date of purchase. This warranty does not cover damage caused by accident, misuse, or unauthorized repair or alteration. The manufacturer's warranty does not cover the cost of transportation, handling, or insurance charges. The manufacturer's warranty does not cover the cost of shipping or handling charges. The manufacturer's warranty does not cover the cost of return shipping or handling charges.

Limited warranty

WARRANTY TO ORIGINAL PURCHASER

The Product is warranted to be free from defects in materials and workmanship for a period of 12 months from the date of purchase. This warranty does not cover damage caused by accident, misuse, or unauthorized repair or alteration. The manufacturer's warranty does not cover the cost of transportation, handling, or insurance charges. The manufacturer's warranty does not cover the cost of shipping or handling charges. The manufacturer's warranty does not cover the cost of return shipping or handling charges.