 
 


Quick Start Guide

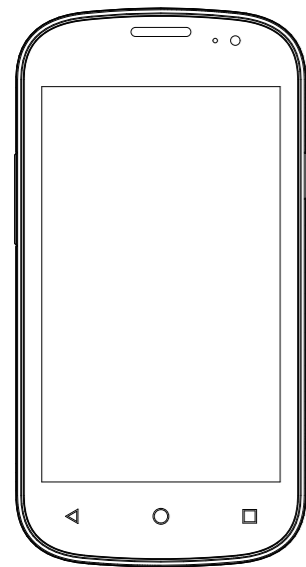

H460

Getting to Know Your Phone

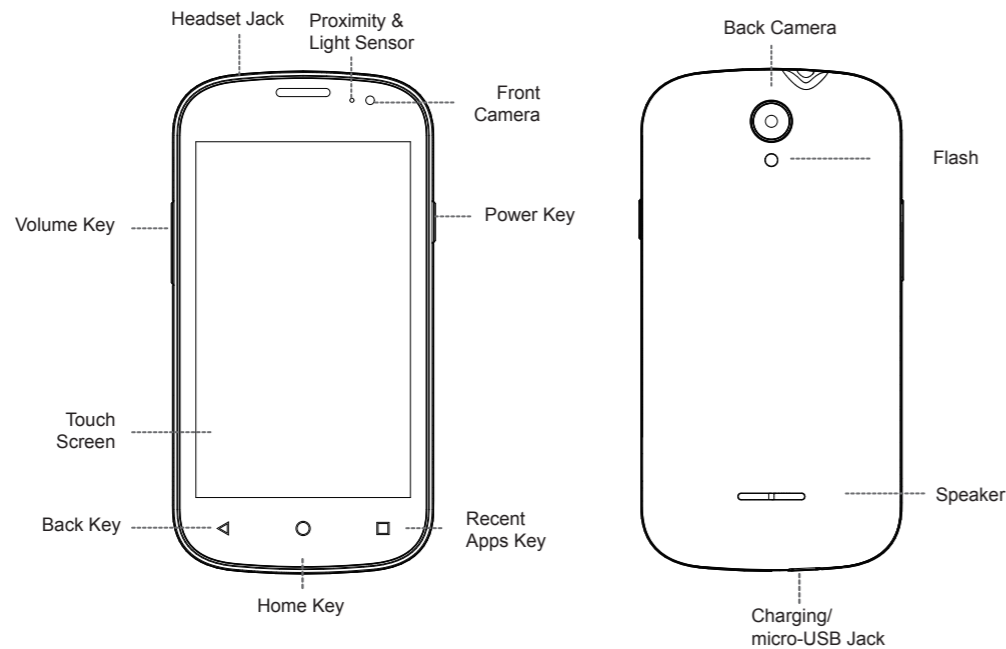

Power Key

- Press and hold to turn on or off airplane mode, power off or restart the phone.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Search.

Back Key

Touch to go to the previous screen.

Recent Apps Key

Touch to see recently used applications.

Volume Key

Press or hold either end of the key to turn the volume up or down.

 
Starting Up

Switch off your phone before installing or replacing the battery or the USIM card. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.



2. Hold the micro-USIM card with its cut corner oriented as shown and slip it into the card holder.

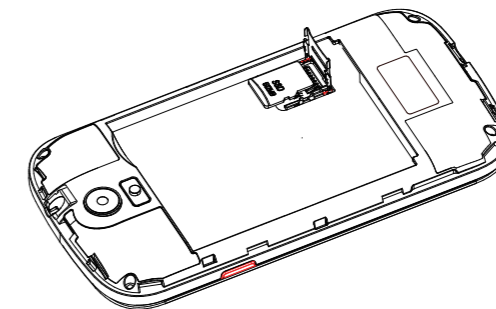

3. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot.



WARNING!

 
To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider



NOTE:

Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

4. Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.

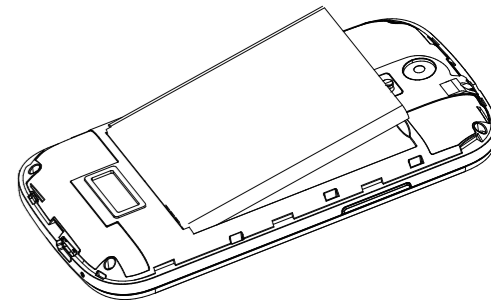

5. the Align backcover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body with the separation of 15 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2AKQN-H460.

For this device, the highest reported SAR value for usage near the body is 1.129W/kg and for head is 1.138W/kg. Hotspot RF exposure is 1.109W/kg, Simultaneous RF exposure is 1.513W/kg.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

This device complies with the FCC HAC requirements has also been tested E-Field, H-Field and T-Coil, the worst test result of M rating is M4, the T rating is T4.

Powering On/Off Your Phone




- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu and touch **Power off**.

Restarting Your Phone

If the screen freezes or takes too long to respond, try pressing and holding the **Power Key** for about 10 seconds to restart the phone.

 
Calling and Voicemail

Making a Call



1. Touch the **Home Key** > .
2. Touch  and enter the phone number or the contact name with the dialpad. The phone will display matching information from your contact list.
3. Touch the matching contact to call the contact or touch  to call the number.

 
NOTE:

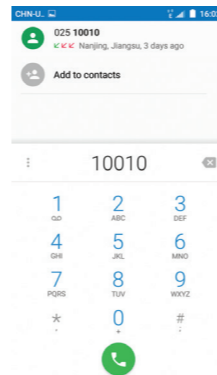You can also touch the search box at the top of the Phone app screen and enter the phone number or contact name you want to call. Touch the matching contact or **Call** [number] to place the call.

 
 




 
 
Checking Voicemail

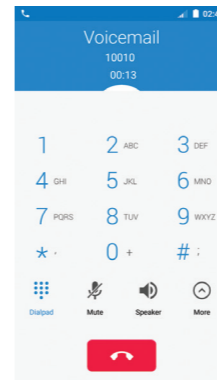1. Touch the **Home Key** >  > .
2. Touch and hold the **1 Key** on the dialpad. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

 




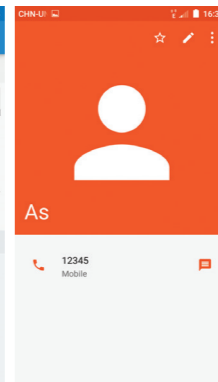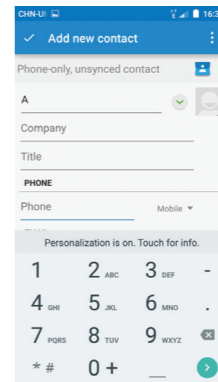


Creating a New Contact

1. Touch the **Home Key** >  >  and touch the all contacts tab **CONTACTS**.
2. Touch  to add a new contact.
3. If you have multiple account types associated with your phone, touch the field above the name and select a contact type.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch  to save the contact.



Sending a Message

1. Touch the **Home Key** >  > .
2. Touch  at the bottom.
3. Add recipients by one of the following ways.
 - ▶ Touch the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - ▶ Select recipients from your contacts by touching .
4. Touch the **Type message** field and enter the content of your text message.
5. If you want to send a multimedia message, touch the paper clip icon  to attach a file or a slideshow to the message.
6. Touch  to send.