


Warning:

It is possible that the receiver may be too far from the wireless mouse or too near a large metal (or computer monitor CPU object) may be interfering with the receiver's radio reception (LED sparkling), please try changing the position of the receiver.

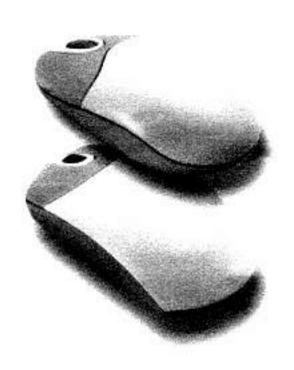

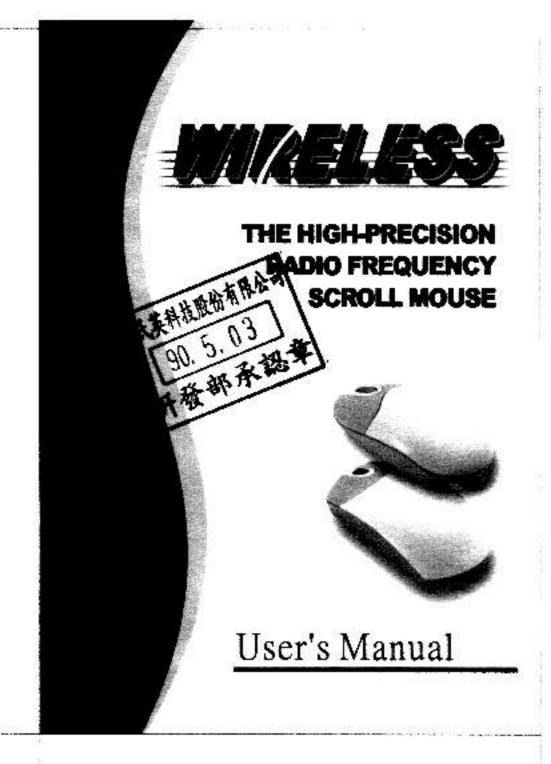


General Function Setting:

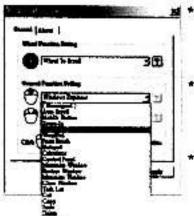

- * Press middle or right button to set the functions below.
- * Press middle or right button once to practice the functions.
- To stop the function just press middle button.


Choose Wheel Mode/Parameters:

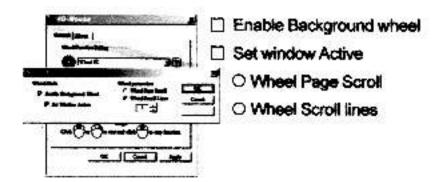

Wheel Function Setting:

Choose wheel 4D and press the task button to view the window below.



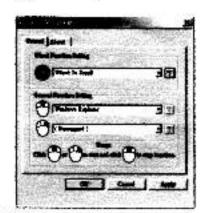

Choose wheel To Scroll and press the task button to set the speed.

