



User Manual

Model: SW001

SW001

ON  OFF

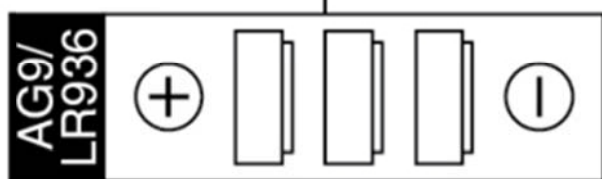

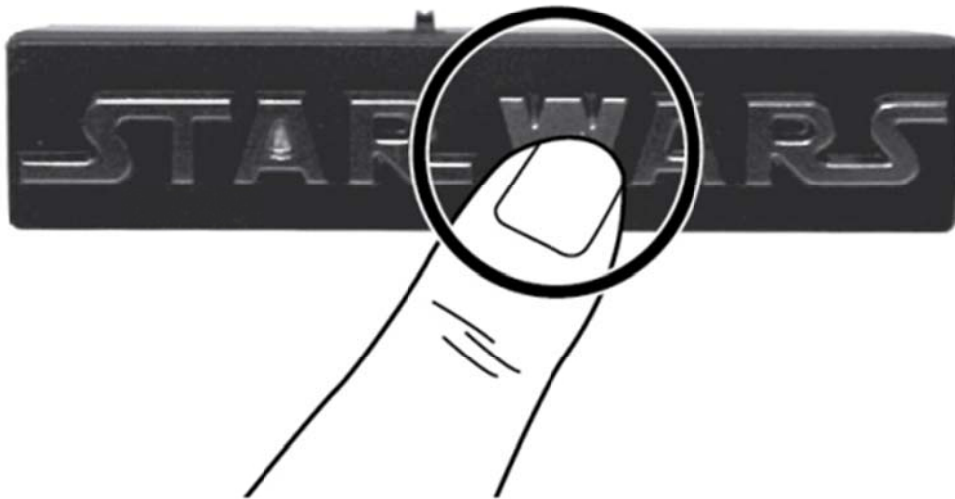

Put in three batteries (AG9/LR936, 1.5V) into the remote. Press the "W" button on the remote to activate the figure sound effect function.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.