



DESIGNJET T120/T520 ePrinter Series

Service Manual



DESIGNJET T120/T520 ePrinter Series

Service Manual

© 2012 Hewlett-Packard Development Company, L.P.

1st edition, August 2012

Legal notices

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Notices

Warranty	WARNING	WARNING
<p>The information contained in this document is subject to change without notice.</p>	<p>The procedures described in this manual are to be performed by HP-qualified service personnel only.</p>	<p>The Warning symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning symbol until the indicated conditions are fully understood and met.</p>
<p>Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.</p>	<p>Electrical Shock Hazard</p> <p>Serious shock hazard leading to death or injury may result if you do not take the following precautions:</p>	<p>CAUTION</p>
<p>Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.</p>	<ul style="list-style-type: none">● Ensure that the AC power outlet (mains) has a protective earth (ground) terminal.● Disconnect the printer from the power source prior to performing any maintenance.● Prevent water or any other liquids from running onto electrical components or circuits, or through openings in the enclosure.	<p>The Caution symbol calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the printer. Do not proceed beyond a Caution symbol until the indicated conditions are fully understood and met.</p>
	<p>Electrostatic Discharge</p>	
	<p>See the beginning of Chapter 4's Introduction on page 143 of this manual, for precautions you should take to prevent damage to the printer circuits from electrostatic discharge.</p>	
	<p>Safety Symbols</p>	
	<p>General definitions of safety symbols are given immediately after the table of contents.</p>	

Customer Assurance

Customer Experience Section

Large Format Printing Division

Hewlett-Packard Espanola, S.A.

Avenida Graells, 501

08174 Sant Cugat del Vallès

Spain

Using this manual

This service manual contains information necessary to test, maintain, and service the following:

HP Designjet T120 Basic Printer 24 inch	CQ891A
HP Designjet T520 Pro Printer 24 inch	CQ890A
HP Designjet T520 Pro Printer 36 inch	CQ893A

For information about using these printers, see the user's guide.

Readership

The procedures described in this service manual are to be performed by HP Certified service personnel only.

Part numbers

Part numbers for printer service parts are located in [Parts and diagrams on page 126](#).

Table of contents

1 Printer fundamentals	1
Overview	1
Using the front panel	2
Start-up sequence	3
Subsystems	5
2 Troubleshooting	34
Printer troubleshooting flowchart	35
Basic printer troubleshooting	36
System error codes	39
Paper troubleshooting	61
Communication troubleshooting	66
Ink-supplies troubleshooting	70
Print-quality troubleshooting	83
Update the firmware	97
3 Support menus	101
Entering the support menus	102
Support menu	104
Extended Support menu	124
4 Parts and diagrams	126
Introduction	126
Printer support	127
Covers	128
Roll covers	129
Right-hand assemblies	130
Left-hand assemblies	132
Carriage assembly	134
Paper path (front)	136
Paper path (rear)	137
Roll supports	138
Sensor Kit	139
Miscellaneous parts	140

5 Removal and installation	141
Introduction	143
Customer Self Repair parts	145
Videos available	146
Recommended checks after replacing parts	146
Top Cover	147
Front Cover	150
Right Cover	153
Ink Cartridge Cover	156
Left Cover	158
Roll Cover	160
Back Cover	163
Front Panel	165
Front Panel Cable	171
Central Cover	172
Upper-Roll Paper Guide	177
Left Roll Support	180
Right Roll Support	185
Top Cover Sensor	188
Top Cover Sensor Cable	191
Encoder Strip	193
Ink Cartridge Cover PCA Assembly	198
Power Supply	202
Main PCA	205
Paper Motor	211
Encoder PCA and Index	213
Encoder Disk	217
Trailing Cable	220
Service Station	227
Prime Pump	233
Carriage and Belt	236
Carriage Belt	243
Right Gear Train Module	245
Starwheel Assembly	247
Output Shaft	249
Output Tray	257
Multi-Sheet Tray Assembly	260
Multi-Sheet Tray Assembly Extensions	261
Output Platen	263
Carriage Motor	268
Cutter Assembly	272
Cutter Guide	279
Out-Of-Paper Sensor	281
Out-Of-Paper Sensor Cable	284

Output Tray Sensor Assembly	286
Output Tray Extender Sensor Cable	289
Carriage Line Sensor	293
Bundle Board	297
Bundle Board FFC cable	299
Pinchwheels	304
Left Spittoon	310
6 Preventive maintenance	313
Preventive maintenance	314
Preventive maintenance kits	320
7 Appendices	323
Important links	324
Front-panel home screen and menu map	325
Support menu tree	335
Extended Support menu tree	336
How to check whether your computer is connected to your network	337
Wireless troubleshooting report error cases	340
CSR fliers	351

