

User Manual

HUAWEI C2202



Copyright © 2006 Huawei Technologies Co., Ltd.








All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei.

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

Safety Precautions

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely. For details, see "Warnings and Precautions".

	Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
	Do not use your phone while driving.
	Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your phone or its accessories in containers with strong electromagnetic field.






	<p>Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.</p>
	<p>Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.</p>
	<p>Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.</p>
	<p>Use approved batteries and chargers only to avoid explosion.</p>
	<p>Observe the laws or regulations on phone use. Respect others' privacy and legal rights when using your phone.</p>

Table of Contents

Table of Contents	i
1 Getting to Know Your Phone	1
Front View	1
Key and Functions	1
Icons.....	2
2 Getting Started.....	4
Installing the Battery	4
Removing the Battery	4
Charging the Battery.....	4
Powering On/Off the Phone	5
Changing the Display Language.....	5
Making a Call.....	5
Answering/Rejecting a Call	6
Options During a Call.....	6
Locking the Phone Manually.....	7
Locking the Keypad Manually	7
3 Text Entry	8
Introduction to the Text Input Mode.....	8
Entering English	8
Entering Numbers.....	9
Entering Symbols.....	9
4 Message	9
Creating a New Message.....	9

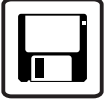5 Phonebook 11
 Adding a New Contact11
 Searching for a Contact.....11

6 Alarm Clock..... 12
 Activating the Alarm Clock..... 12
 Deactivating the Alarm Clock 12


Security 13
 Setting the Phone Lock 13
 Setting PIN Lock 13
 Call Restrict..... 13

8 Menu Options 15

Warnings and Precautions 24

1 Getting to Know Your Phone

 Front View

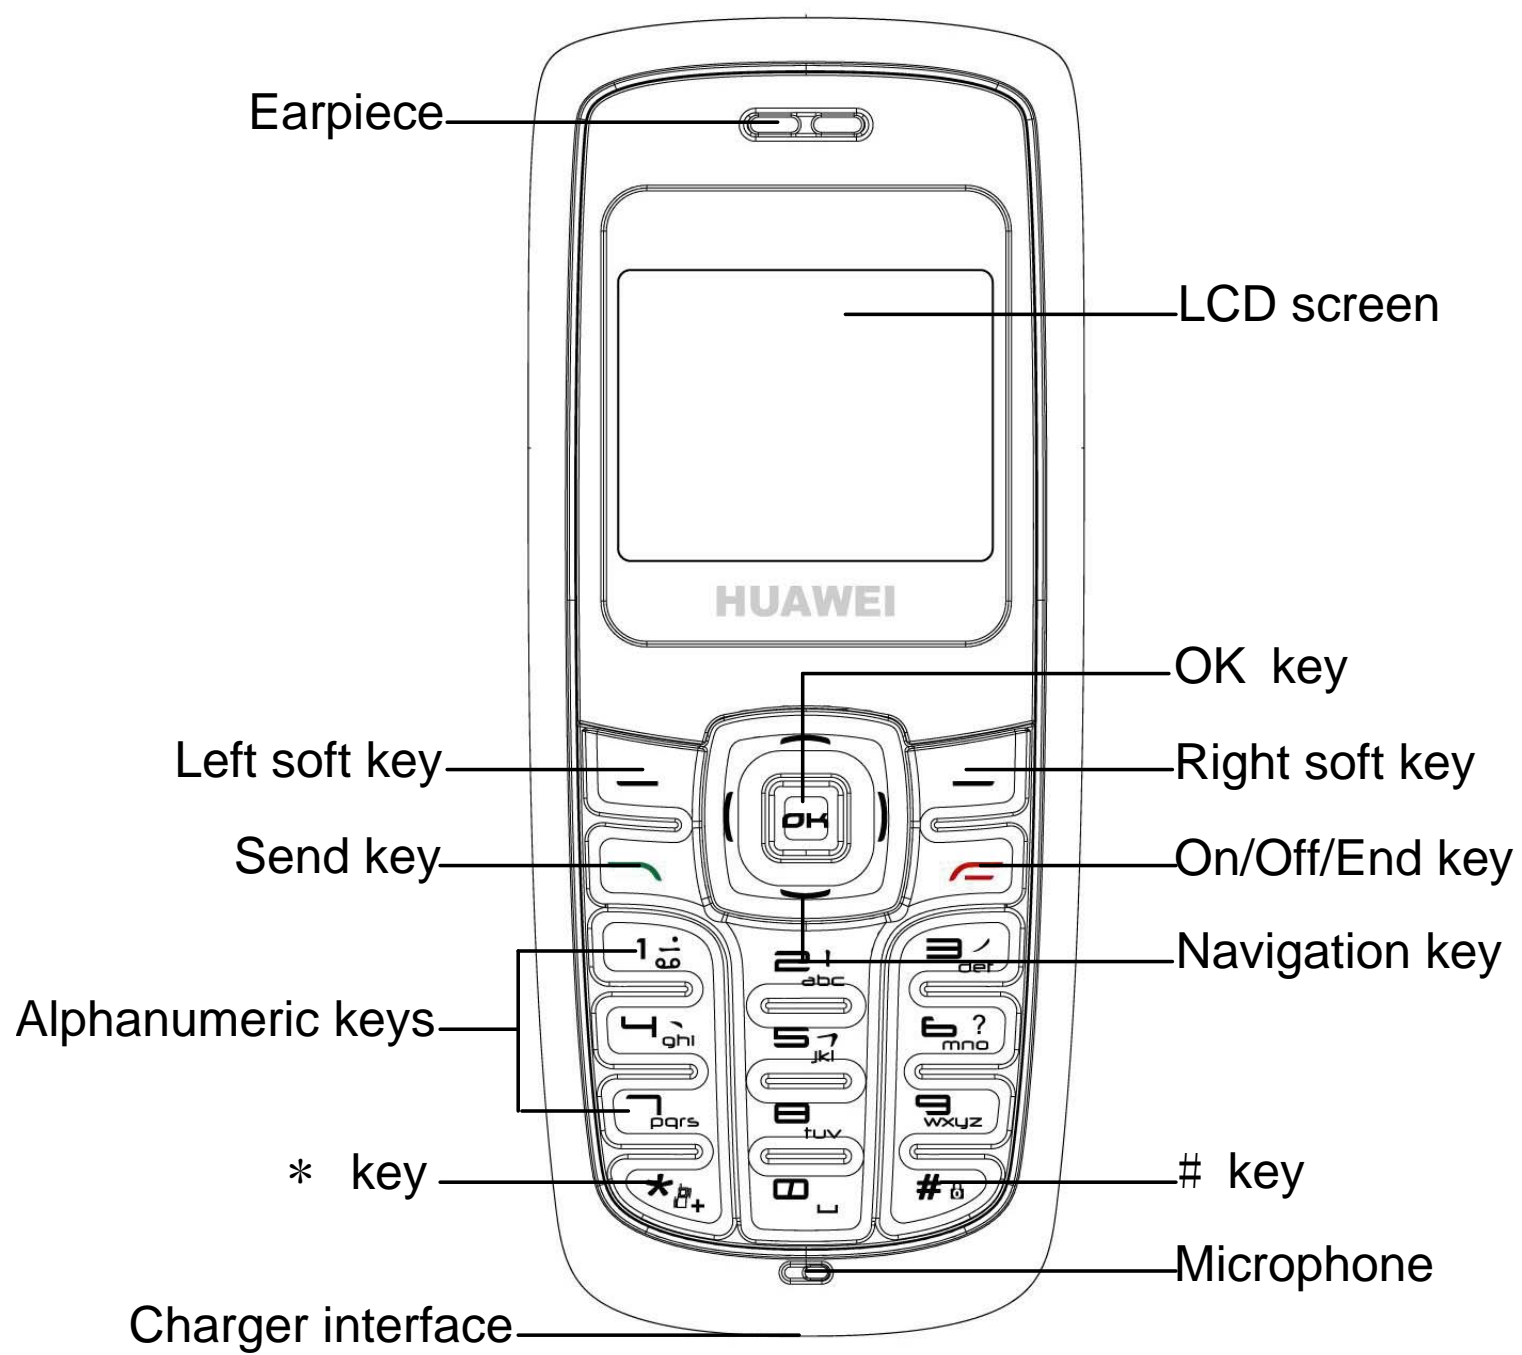








Key and Functions

Press	To
Power	<ul style="list-style-type: none">● Power on or off the phone● End a call, or reject an incoming call● Return to the idle screen
Send	<ul style="list-style-type: none">● Make a call● In the standby mode, press it to display the Call Records
Left soft	<ul style="list-style-type: none">● In the standby mode, press it to display the main menu or press and hold it to access the Brew function● Select the option displayed on the lower left corner of the screen
Right soft	Select the option displayed on the lower right corner of the screen
Scroll	<p>In the standby mode,</p> <ul style="list-style-type: none">● Up: Write a new message● Down: Display Inbox● Left: Set the alarm clock● Right: Display the Calendar <p>During a call, press Left or Right to adjust the earpiece volume.</p>

Press	To
OK	In the standby mode, press it to access the main menu (the function of the OK key is similar to that of the left soft key)
Alphanumeric	Enter numbers and characters or choose menu items
Star	<ul style="list-style-type: none"> ● In the text entry mode, press it to display the symbol list ● In the English input mode, press it to switch between upper case and lower case. ● Up scroll a menu. ● In the standby mode, press and hold it to switch between the ringtone mode and vibration mode ● In the standby mode, press it to enter *, P, or T
Hash	<ul style="list-style-type: none"> ● When the phone lock is on, press and hold it to lock the phone ● Down scroll a menu ● In the edit mode, press it to switch between the input modes or press and hold it to switch to the number input mode

Icons


Icon	Meaning
	Indicates the network signal strength
	The phone is out of the service area
	Alarm clock is on

	Vibration is on
	You have received a new message or the inbox is full
	The phone is roaming
	Indicates the battery power level

2 Getting Started


Installing the Battery

 If the phone is powered on, press and hold **Power** to power off the phone first.

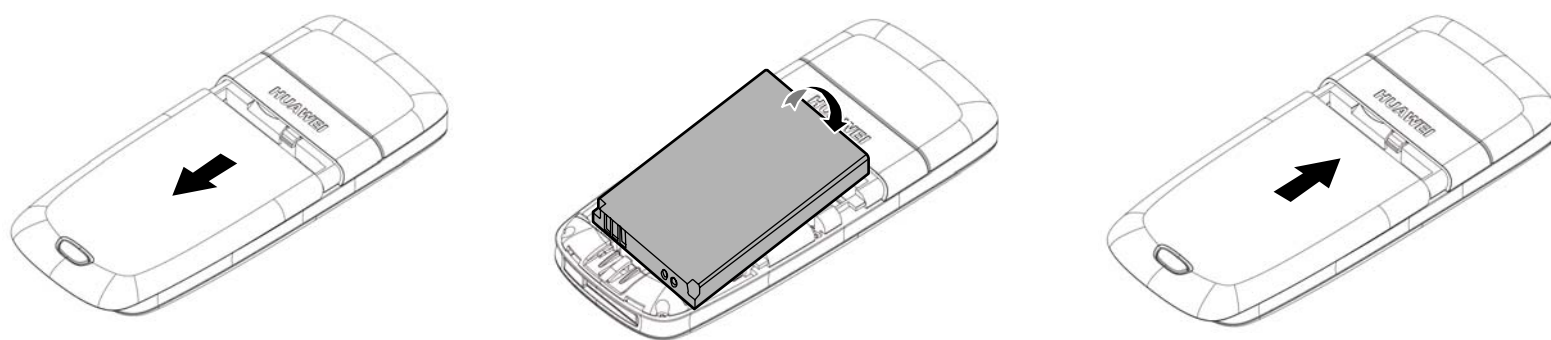


Removing the Battery

 If the phone is powered on, press and hold **Power** to power off the phone first.

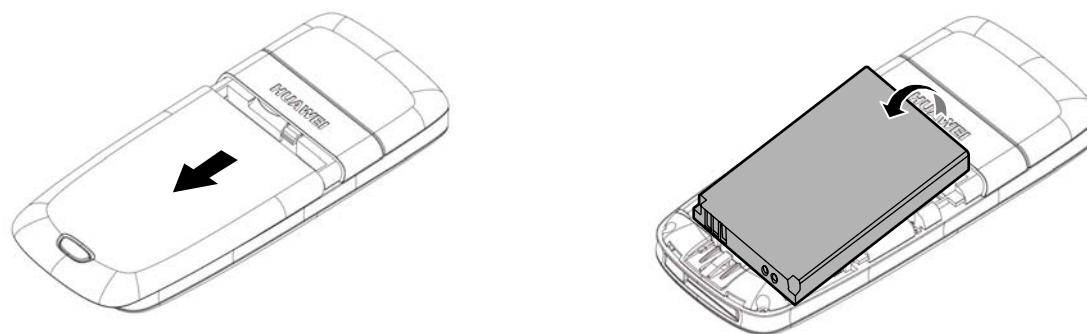

Charging the Battery

1. Install the battery first.
2. Connect the travel charger to the charger interface at the bottom of the phone.
3. Connect the charger to an AC power socket.
4. During the charging, the  icon on the upper right corner of the screen is in an animated status. When the animation is blinking, the charging finishes.

5. Disconnect the charger from the AC power socket when the charging finishes and remove the charger connector from the phone.



Caution:

- Use the battery and charger manufactured or approved by Huawei only.
- Do not use any damaged battery or charger.
- When using the phone for the first time, charge the battery for at least eight hours. New batteries reach the best performance after recharged for several times.

Powering On/Off the Phone

Press and hold **Power** to power on or off the phone.

Changing the Display Language

1. In the standby mode, select **Menu > Settings > Phone Settings > Languages**.
2. Select **English**.

Making a Call

Using the Keypad

1. In the standby mode, press alphanumeric keys to enter the area code (if necessary) and phone number.
2. Press **Send** to dial.

Using the Phonebook

1. In the standby mode, press the right soft key to access **Phonebook** and then select a contact.
2. Press **Send** to dial.

Using the Call History

1. Press **Send** to display **Call Records**.
2. Select a record and press **Send** to dial.

From a Message

1. Press the **Down** key to access **Inbox**.
2. Select a message and then select **View > Options > Call** to dial.

Speed Dialing

Press and hold an alphanumeric key (**2** to **9**) to speed dial a contact.

Making an International Call

1. Press and hold **0** to enter the symbol "+".
2. Enter the country code, area code and phone number.
3. Press **Send** to dial.

Answering/Rejecting a Call

When there is an incoming call, the phone alerts according to the mode you set.

If you have saved the phone number of the incoming call as a contact to the phonebook, your phone displays the name and the phone number. Otherwise, you phone only displays the phone number.

- To answer the call, press **Send** or the left soft key.
- To reject the call, press **Power** or the right soft key.
- Press **Up** or **Down** to disable or re-enable the current alert mode.

You can answer a call by selecting Auto or Any key.

Options During a Call

Adjusting Volume

Press **Left** or **Right** to adjust the earpiece volume.

Scratchpad

The scratchpad feature allows you quickly record the important number and other numeric information.

1. Press **Left soft key** and then select **Scratchpad**.
2. Press **Left soft key** to enable the scratchpad.
3. Enter the number, and then press **Left soft key** to save it. The prompt " Number Stored In Call List" is displayed on the screen.

Muting

1. Press the left soft key to select **Mute**.
2. Press the left soft key to hold the current call. After you hold the call, the other side cannot hear your voice.

Voice Privacy

1. Press the left soft key to select **Voice Privacy**.
2. Select the voice privacy level. You can select **Standard** or **Enhanced**.

Text Message

1. Press the left soft key to select **Messages**.
2. Press the left soft key to access the **Messages** menu.

Phonebook

1. Press the left soft key to select **Phonebook**.
2. Press the right soft key to access the **Phonebook** menu.

Key Beep Length

1. Press **Left soft key** to select the key beep length.
2. Press **Left soft key** to set the key beep length.

Locking the Phone Manually

In the standby mode, lock the phone manually.

1. Activate the phone lock code.
2. Press and hold **#** to lock the phone manually.

Locking the Keypad Manually

In the standby mode, press the left soft key and numeric key **1** in turn to lock the keypad manually.

Follow the same steps to unlock the keypad.

3 Text Entry

Introduction to the Text Input Mode

Your phone allows you to input English, Chinese and numbers. While entering text, you can change the input mode by pressing **Hash**. The supported input modes and their indicators are shown as follows.

- **ABC\abc**: Upper case /lower case English input mode
- **ABCabc** : Upper case /lower case predictive English input mode
- **123** : Number input mode

Entering English

In the text input mode, press the star key to switch between input modes.

Alphabetical Text Input

To enter a word, you can press an alphanumeric key labeled with required letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

If the letter you want to enter is on the same key as the previous one, you can enter the latter one only after the cursor appears again or after you press **Down** to move the cursor to the next space.

Example:

To enter "huawei", do as follows.

1. Switch to the English input mode.
2. Press **4** twice to enter "h".
3. Press **8** twice to enter "u".
4. Press **2** once to enter "a".
5. Press **9** once to enter "w".
6. Press **3** twice to enter "e".
7. Press **4** three times to enter "i".

Predictive English Input

To enter a word in the predictive input mode, perform the following steps.

1. Press the alphanumeric keys corresponding to the letters of the word.
2. Press **Up** or **Down** until the desired word appears.
3. Press **0** to select the word and enter a space after this word.

Example:

To enter the word "COOL", do as follows:

1. Switch to the upper case predictive input mode.
2. Press **2**, **6**, **6**, and **5** in turn. The word "BOOK" is displayed.
3. Press **Up** or **Down** to select the predictive term "COOL", and then press **OK**. Press **0** to enter a space and move the cursor to the front or next space.

Entering Numbers

You can use either of the following methods to enter numbers:

- In the "123" input mode, you can directly press alphanumeric keys labeled with the desired digits.
- In any of the English input modes, you can press and hold the alphanumeric key until the desired digit appears on the screen.

Entering Symbols

There are two methods available for entering symbols.

- In any input mode, press **Star** to display a symbol list. You can press the scroll keys to select the desired symbol. You can also press and hold the alphanumeric key labeled with the symbol to enter this symbol.
- In the English and Chinese input modes, press **1** repeatedly to enter symbols.

4 Message

Creating a New Message

To write and send a short message to a specific phone number, do as follows.

1. Select **Menu > Messages > Write Message** or press **Up** in the standby mode to access the message edit screen.

2. Enter the content in the **Edit** window. The lower side of it displays the remaining characters you can enter.
3. Press the left soft key for the following options.
 - **Send**: Send the message to the specified recipient.
 - **Send & Save**: Send the message to the specified recipient and save the message to **Outbox**.
 - **Save**: Save the message to **Outbox**.
 - **Insert Phrase**: Insert a phrase into the message.
 - **Insert PH. NO.:** Insert a phone number from the phonebook into the message.
 - **Insert Name**: Insert a name from the phonebook into the message.
4. Select **Send > Search** to search for a recipient's phone number in phonebook or enter a phone number.
5. Press the **Send** key to send messages. Alternatively, press the left soft key for the following options.
 - **Send**: Send the message to the recipient.
 - **Add**: Add phone numbers of multiple recipients.
 - **Erase**: Erase the selected recipients.
 - **Priority**: Select one of the priority levels, including **Normal**, **Urgent**, and **Emergency**.
6. Select **Send** to send the message.

5 Phonebook

Adding a New Contact

The new contact will be saved to the current memory in use.


1. Select **Menu > Phonebook > New**.
2. Enter the phone number and press the left soft key to confirm.
3. Enter the name and press the left soft key.

Searching for a Contact

The contacts in the phonebook will be ordered in the alphabetic sequence according to the initial letter of the contact name.

1. Select **Menu > Phonebook > Search**.
2. Enter the contact name and then press the left soft key.
3. At the result, select **View** to view details. Press **Up/Down** to view other contacts.
4. Select **Options** for the following options.
 - **Write Message**: Send a message to a contact.
 - **Edit**: Edit the name and phone number of the contact.
 - **Copy**: Copy the contact to the phone or the UIM card.
 - **Erase**: Erase the contact.

6 Alarm Clock

Your phone provides two alarm clocks. After you set an alarm clock, your phone displays . After the alarm clock is activated, the phone rings or vibrates at a specified time when the phone is powered on.

Activating the Alarm Clock

1. Select **Menu > Extras > Alarm**.
2. Select an alarm clock and press the left soft key for the following settings.
 - **On or off:** Select **On** to enable the alarm clock.
 - **Set the time:** Press **Left** or **Right** to move the cursor. You can enter the time directly. If you use the 12-hour format, press **Up** or **Down** to select **am** or **pm**.
 - **Set Repeat Method:** After setting the time, set the repeat method: **Once**, **Everyday**, **Mon-Fri** or **Mon-Sat**.
3. Press the left soft key to save the settings.



Note:

If there is no operation when the alarm clock alerts, it stops temporarily and alerts again ten minutes later. It alerts for 7 times before it is stopped thoroughly.

Deactivating the Alarm Clock

1. Select **Menu > Extras > Alarms**.
2. Select an alarm clock and press the left soft key.
3. Select **Off** to deactivate the alarm clock.

7 Security

Setting the Phone Lock

Select **Menu > Settings > Security > Phone Lock**.

- **Phone Lock On:** Enable the Phone Lock function.
- **Phone Lock Off:** Disable the Phone Lock function.
- **Change Code:** Change the phone lock. The default phone lock code is 0000.

After the phone is locked, you can still dial the emergency numbers.

Setting PIN Lock

PIN protects your UIM card from unauthorized use.

PIN code should be delivered with your UIM card by the service provider.

Select **Menu > Settings > Security > PIN Lock** for the following options.

- **PIN Lock On:** Activate PIN code check function.
- **PIN Lock Off:** Deactivate the PIN code check function.
- **Change Code:** Change the PIN code. After you enter the new PIN code twice, the message "PIN changed!" is displayed.



Note:

- If you enter wrong PINs for 3 times, the phone prompts you to enter the correct personal unlocking key (PUK).
- If you enter wrong PUKs for 10 times, the UIM card becomes invalid permanently. Contact the service provider for a new UIM card.

 
Call Restrict

Your phone provides the Call Restrict function.

1. Select **Menu > Settings > Security**.


2. Enter the correct phone lock code and select **OK**.
3. Select **Call Restrict** for the following options.
 - **Off**: Disable the Call Restrict function.
 - **Int'l Calls**: Block all outgoing international calls.
 - **All Calls**: Block all outgoing calls.



8 Menu Options

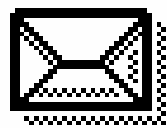


Messages


Write Message	<p>Allow you to write and send messages.</p> <p>A message can contain up to 160 English characters or 70 Chinese characters.</p>
Inbox	<p>Allows the phone to store the received messages and delivery ack.</p> <p>You can view, reply, erase, and forward the messages in Inbox. You can save the numbers to the phonebook, or make a call.</p>
Outbox	<p>Allow the phone to stores the messages successfully sent, if the Auto Save function is activated.</p> <p>You can view, edit, erase, and forward the messages in Outbox.</p>
Voice Mail	<p>Allows you to send and receive voice mails.</p> <p>Voice Mail is a network-dependent function. You need to subscribe to this service from your local network operator.</p>
Erase	<p>Allows you to erase messages in each SMS box.</p>

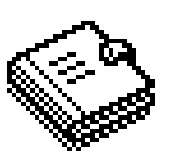Msg Settings	<p>Voice Mail No. Allows you to set the voice mail Number.</p> <p>Memory Status Allows you to view the memory status of the phone and the UIM card (if any).</p> <p>Delivery Ack Allows you to require a message delivery report from the SMSC.</p>
<div style="display: flex; align-items: center;">  Phonebook </div>	
Search	Allows you to finds a phone number from the phonebook.
New	<p>Allows you to add new contacts to the phonebook.</p> <p>The phone memory can save up to 300 contacts, while the capacity of the UIM card varies.</p>
Groups	Allows you to rename or view a group, add members to a group, view the group, or erase the members of it.
Speed Dial	Allows you to make a call by pressing and holding only one alphanumeric key.
Copy All	If the UIM card is available, you can copy or move all contacts from the phone to the UIM card or from the UIM card to the phone.

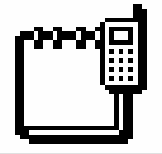Erase	<p>Allows you to erase all the contacts in the phonebook.</p> <p>If the UIM is available, you can erase all the contacts in the phone or the UIM card.</p>
Options	<p>My Phone Num.</p> <p>Allows you to set your phone number.</p> <p>Memory In Use</p> <p>Allows you to set the memory in use (either the phone or the UIM card), if the UIM card is available.</p> <p>Memory Status</p> <p>Allows you to check the remaining space in the phone and the UIM card (if any).</p>
 Call History	
Missed Calls	<p>Allows you to view, save and erase call records (each up to 20), or send messages to the corresponding numbers.</p>
Received Calls	
Dialed Calls	
Erase	<p>Allows you to erase each or all the call records.</p>
Call Duration	<p>Allows you to view and clear the duration of the last calls, received calls, dialed calls and total.</p>
 Extras	

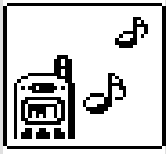Alarm	<p>If activated, allows the alarm clock to alert according to the specified mode at the specified time.</p> <p>The phone must be powered on. You can set 2 alarm clocks at most.</p>
Calculator	<p>Allows you to calculate arithmetic expressions.</p> <p>The calculator supports fractional arithmetic. You can press Star to enter the decimal point, and press Hash to enter the minus. You can press the scroll keys to enter operators such as add, subtract, multiply and divide.</p>
Calendar	<p>Allows you to schedule your activities according to the solar calendar or the lunar calendar. The date range is from January 1, 1999 to December 31, 2099.</p>
Games	<p>Provides games for entertainment.</p> <p>For details, see Help in your phone.</p>
SW Version	<p>Allows you to view the software version and the version release time.</p>
<div style="display: flex; align-items: center;">  Sound </div>	
Volume	<p>Allows you to adjust the volume of Ring Tone, Earpiece and Keypad Tone (also called keybeep) by pressing Left and Right.</p>

Ring Type	Allows you to set the alert mode, including Off, Ring, vibration, vib + Ring, and Ring after Vib.
Ring Tones	Allows you to select a ring tone and an alarm tone from the 15 tones provided by the phone.
Alarm Tones	
Key Tones	Allows you to select either a tone or a click sound as the key tone (also called keybeep). Allow you to set the keybeep length: Normal and Long .
Keybeep Length	
Power Up	Allows you to select a power on/off music from the three tones provided by the phone.
Power Down	
SMS Recv. Tone	Allows you to enable or disable the SMS receive tone and SMS send tone. If enabled, allows you to select one from the three tones provided by your phone.
SMS Send Tone	

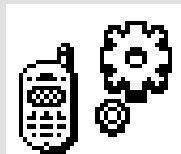 

Settings

Display

Backlight

Allows you to set the backlight of the LCD and the keypad.

Contrast

Allows you to set the LCD contrast by pressing the left/right scroll keys.

Banner

Allows you to enable or disable the banner.

If you choose **On**, you can edit the banner.

Animation

Allows you to enable or disable the animation played while the phone is powered on or off.

Wallpaper

Allows you to select a wallpaper from the 10 wallpapers provided by the phone.

Time

Time Format

Allows you to set the time format to a 12-hour clock or a 24-hour clock.

Data Format

Allows you to set the date format to dd/mm/yy or yy.mm.dd.

Time Zones

Allows you to set the time zone of your phone according to your location.

Call Settings

Call Waiting

Allows you to activate or deactivate the call waiting function of the phone.

Call Waiting is a network-dependent service. For more information, consult your service provider.

Call Forwarding

Allows you to forward all your incoming calls to another number or a voice mail connection.

Any Key Answer

If activated, allows you to answer call by pressing any key except the right soft key, **Off**, **Up** and **Down**.

Auto Redial

If activated, redials the number automatically after the first call attempt fails, until the call is put through.

Minute Alert

If activated, allows the phone to remind you with a prompt tone during a call.

Int'l Call Prefix

Allows you to set and save the prefix of an international call.

Phone Settings

Language

Allows you to set the language, including **English** and simplified Chinese.

Auto Answer

If activated, allows you to answer an incoming call automatically some time after the phone alerts.

Auto Off

If activated, allows the phone to power off automatically at a specified time.

Security

Phone Lock

If enabled, allows you to protect the phone from unauthorized use.

Allows you to change the phone lock code (0000, by default).

PIN Lock

If enabled, allows you to protect your UIM card from unauthorized use.

Allow you to change the PIN Lock code (which is delivered with the UIM card by your service provider).

Call Restrict

The phone supports the call restrict function.

Auto Key Guard	<p>If enabled, allows the phone to lock the keypad of your phone automatically after the phone is idle for a period of time.</p> <p>Even if the keypad is locked, you can still answer calls or dial emergency numbers.</p>
Factory Settings	<p>Allows you to restore your phone to the factory settings.</p>
Privacy	<p>Allows you to set the privacy mode, including Standard and Enhanced.</p>
<div data-bbox="245 1243 413 1398" data-label="Image"> </div> <div data-bbox="433 1351 504 1414" data-label="Text"> <p>FM</p> </div>	
	<p>Your phone provides you with the radio function. You can search for and manage channels according to your interests.</p>

Warnings and Precautions

Electronic Device

Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices. Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Turn off bi-direction wireless equipment"
- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charge from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorized service center for help.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.

- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the power cord at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment.
- Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear off the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is powered on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.869 W/kg, and when properly worn on the body is 0.940 W/kg.



Ver: V1.10 BOM: 31016510