



HUAWEI C2285

CDMA 1X Mobile Phone

User Manual

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei.

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

Safety Precautions



Do not switch on the phone when phone use is prohibited.



Do not use the phone while driving.



Switch off the phone near medical apparatus.



Switch off the phone in an aircraft.



Switch off the phone near high-precision electronic devices.



Do not attempt to disassemble the phone or its accessories.



Do not place the phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near the phone.



Do not put the phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Do not allow children to use the phone without guidance.



Use approved batteries and chargers only to avoid explosion.



Observe the laws or regulations on phone use. Respect others' privacy and legal rights when using the phone.

Agreement

Operation

Format	Meaning
Press and hold	Press a button for two to three seconds and release it.
Press	Press a button and release it quickly.

Interface Language

Format	Meaning
Bold	Any string displayed on the phone screen is in boldface. Such as Menu.
>	Multi-level menu is separated by ">". such as " Menu > Messages " means " Messages " is the submenu under " Menu ".

Symbols

Symbol	Description	Meaning
	Caution	Warnings and precautions for operations
	Note	Description and note for operations


Contents

1 Getting to Know Your Phone	1
Your Phone.....	1
Key and Functions.....	2
Screen Icons.....	3
Interfaces.....	4
2 Getting Started.....	5
Installing the Battery	5
Installing the UIM Card	5
Charging the Battery	5
Powering On/Off the Phone	6
Using the Function Menu	6
3 Voice Services	7
Making a Call.....	7
Receiving a Call.....	7
Operations During a Call.....	7
4 Text Entry	8
Text Input Mode	8
Entering English	8
Entering Number.....	9
Entering Symbols.....	10
5 Writing and Sending Messages	11
6 Phone Book.....	12
Adding a New Contact	12
Searching for a Contact	12

7 FM Radio	13
Switching On/Off the Radio	13
Selecting a Channel	14
Setting a Frequency	14
Adding a Channel	14
Deleting a Channel.....	14
Searching for a Channel	15
8 Alarm Clock	16
Activating the Alarm Clock.....	16
Deactivating the Alarm Clock	16
9 Security	17
Enabling/Disabling the Phone Lock.....	17
Changing the Phone Lock Code.....	17
Enabling/Disabling the PIN Lock	17
Changing the PIN Code	17
10 Menu Commands	18
11 Warnings and Precautions	26

1 Getting to Know Your Phone

Your Phone

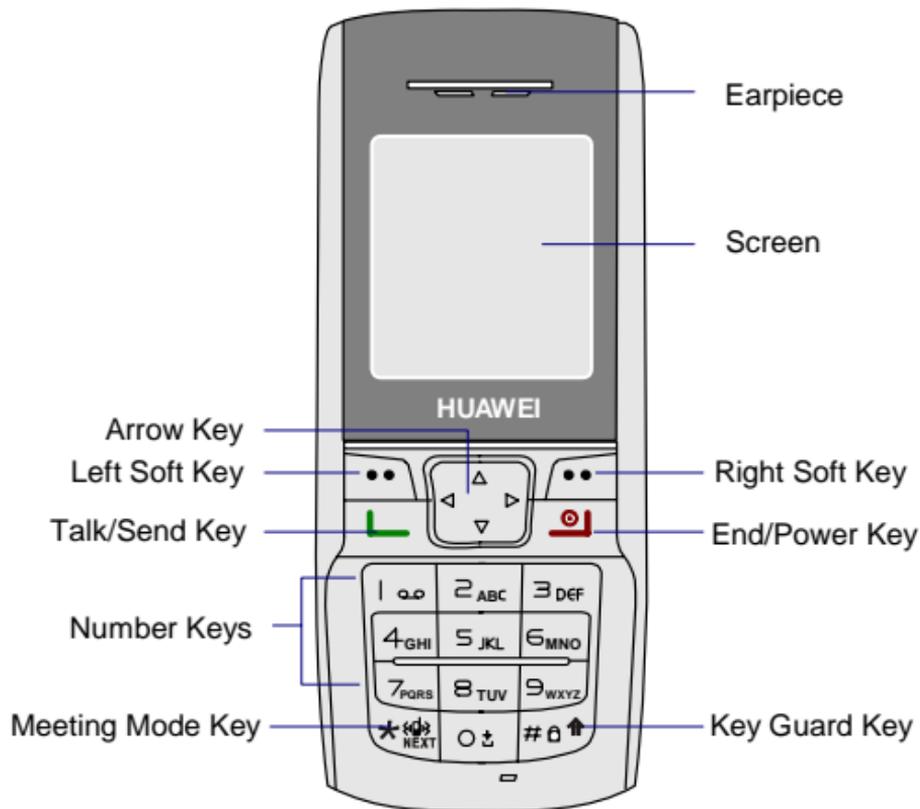

Key and Functions

Key	To...
	<ul style="list-style-type: none">● Power on or off the phone.● End a call.● Returns to the home screen.
	<ul style="list-style-type: none">● Make a call.● View dialed calls.
	<ul style="list-style-type: none">● Display the Menu.● Select the highlighted menu option.
	Return to the previous menu.
	<ul style="list-style-type: none">● Quick access:  Brew;  Messages;  Scheduler;  Alarm.● During a call:  and  increase volume;  and  decrease the volume.
 —	<ul style="list-style-type: none">● Enter numbers and characters.● Select a menu item.
	
	<ul style="list-style-type: none">● Switch between the meeting profile and the current profile in the standby mode (by pressing and holding it for two seconds).● Enter the * symbol in the standby mode (by pressing it).
	<ul style="list-style-type: none">● Lock the keypad in the standby mode (by pressing and holding it for two seconds).● Enter the # symbol in the standby mode (by pressing it).

Screen Icons

Icon	Meaning
	Indicates the signal strength. The larger the number of bars is, the stronger the signal is.
	Indicates that there is an incoming call, a call is being set up, or the phone is in conversation.
	Indicates that the keypad is locked.
	Indicates that a new message is received.
	Indicates that the Inbox is full.
	Indicates that the General profile is activated.
	Indicates that the Meeting profile is activated.
	Indicates that the Silent profile is activated.
	Indicates that the Outdoor profile is activated.
	Indicates that the Headset profile is activated.
	Indicates that the Car kit profile is activated.
	Indicates that an alarm clock is set.
	Indicates the battery power level. The larger the number of bars is, the more power of the battery is left.

Interfaces

Your phone provides two interfaces.

Interface	Function
Charger interface	It is located at the bottom of your phone. It is used to connect the travel charger.
Headset jack	It is located at the upper left corner of the phone. It is used to connect the headset.

2 Getting Started


Installing the Battery



1.




2.

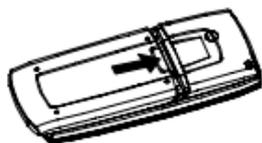


3.

Installing the UIM Card

If the phone is powered on, press and hold  for two seconds to power off it. Then, remove the battery.

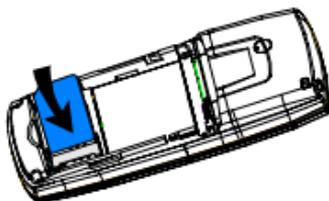

1.

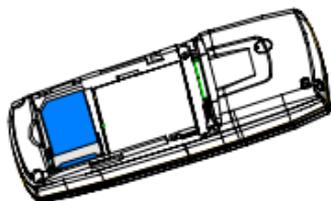

2.

Charging the Battery

1. Connect the travel charger to the charger interface at the bottom of your phone.
2. Connect the charger to an AC power socket.
3. Wait until the phone is fully charged. During the charging, the  icon on the upper right corner of the screen is in an animated status.
4. When the animation becomes static, the charging finishes. Disconnect the charger from the AC power socket.
5. Press the gray buttons on both sides of the charger connector to disconnect it from the phone.

**Caution:**

- Do not use a damaged battery or charger.
- Before using the travel charger, ensure that the battery is installed in your phone.

Powering On/Off the Phone

Press and hold  for two seconds to power on or off the phone.

Using the Function Menu

1. In the standby mode, press  (**Menu**).
2. Press the arrow key to select the desired function menu.
3. Press  (**Select**) to display the selected menu.
4. Display the submenu in either of the ways:
 - Press  to select a submenu and then press  (**Select**) to display the selected submenu.
 - Press the number key corresponding to the serial number of a submenu to display it.
5. To return to the previous menu or quit the function menu, press  (**Back**).
To return to the standby mode, press .

3 Voice Services

Making a Call

1. In the standby mode, enter the phone number.
2. Press  to dial this number.
3. To cancel or end the call, press  or .

Receiving a Call

When there is an incoming call, you can press  or  to answer it, or press  to reject it.

- If the **Any-key Answer** function is enabled, you can press any key to answer an incoming call except  and .
- If the **Headset Auto Answer** function is enabled and the headset is connected to the phone, the incoming call is answered automatically.

Note:

- Set **Any-key Answer** in the **Settings > Call Settings**.
- Set **Headset Auto Answer** in the **Profiles > Headset > Edit**.

Operations During a Call

Press  or  to increase the volume, and press  or  to decrease the volume.

During a call, press  (**Options**) for the following options:

- **Save Number**: Save the phone number to the phone book.
- **Phone Book**: Enter the **Phone Book** menu.
- **Messages**: Enter the **Messages** menu.
- **Third Party Call**: Call a third party to make a third party call.

Note:

The third party call is network dependent. For more information, consult the service provider.

4 Text Entry

Text Input Mode

You can enter English letters and numbers.

While entering text, you can change the input mode by pressing .

The following table lists the input modes and their indicators.

Indicator	Text Input Mode
eZiEn	Smart English
ABC	English upper case
abc	English lower case
123	Number input

Note:

- Press  (**Clear**) once to delete the letter on the left of the cursor. By pressing and holding  (**Clear**) for about two seconds, you can delete all letters at a time.
- While you edit a message, the phone displays the maximum number of characters allowed to enter for the current input mode.

Entering English

Alphabetical Text Input

Alphabetical text input allows you to enter uppercase ("ABC") or lowercase ("abc") English letters. You can press a number key labeled with required letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

If the letter you want to enter is on the same key as the previous one, you can enter the latter only after the cursor appears again or after you move the cursor to the next space.

Notes:

- Press  repeatedly to choose and enter the commonly used punctuation.
- Press  once to enter a space, twice to enter "0", and three times to move the cursor to the next line.
- Press  to select the desired symbols.

Smart English Input

In the "eZiEn" input mode, follow these steps to enter English.

1. According to the desired word, press the corresponding number key once, and then the phone will make out candidate words.
2. Press  or  to select the desired word.
3. Press  to confirm your selection. The word is displayed in the input area.

Alternatively, press  and confirm your selection and enter a space behind the word.

Notes:

- After you enter several letters, the phone can give other letters to make out the candidate words. Press  or  to select the desired word and press  to confirm; or press the number key to enter desired letters.
- Press  to enter a point.
- Press  to enter a space.
- Press  to select the desired symbol.
- In the editing area, you can press  to switch the selected characters between upper case and lower case. If no character is selected, press  to switch between text input modes.

Entering Number

You can use either of the following methods to enter numbers:

- In the "123" input mode, you can directly press number keys labeled with desired digits.
- In the "ABC" or "abc" input mode, you can press the number key repeatedly until the desired digit appears on the screen.

- In the "eZiEn" input mode, you can press the number key and then press  until the desired digit appears on the screen.

Entering Symbols

1. In any input mode, press  to display the symbol list.
2. Press  to scroll up or down the symbol list.
3. Press the corresponding number key to enter this symbol.

5 Writing and Sending Messages

Follow these steps to write and send a message:

1. Press  (**Menu**) and select **Messages > Write Message**.
2. Enter the content. For the information on text input method, see "Text Entry" on P8. You can enter up to 160 characters or 70 Chinese characters.

While entering the content, press  (**Options**) for the following operations.

- **Insert Templates:** Insert a common phrase.
 - **Insert Phone Number:** Insert a phone number from the phonebook.
3. Press  (**Options**) for the following operations:
 - **Send:** Send the message without saving.
 - **Send & Save:** Send the message and save it to the outbox if it is sent successfully or save it to the draft if it is sent unsuccessfully.
 - **Save:** Save the message to the draft.
 4. You can add up to 10 recipients. There are three methods.
 - Enter phone numbers directly.
 - Press  (**Search**) and select **Search Phone Book** to select the phone number of one contact from the phonebook.
 - Press  (**Search**) and select **Search Groups** to select phone numbers of a group of contacts.
 5. Press  (**Send**) to send a message.

6 Phone Book

Adding a New Contact

The new contact will be saved to the memory in use.

1. Press  (**Menu**) and select **Phone Book > Add New**.
2. Enter the name, and press  (**OK**).
3. Set other items:
 - If you save the contact to your phone, you can enter the following information: **General Number**, **Home Number**, **Office Number**, **Memo** and **Group** (you need to set at least one number).
 - If you save the contact to the UIM card, you can only enter **General Number**.
4. Press  (**OK**) to save the current settings and press  to set other items.
5. Press  (**Save**) to save the contact; press  (**Back**) to cancel.

Searching for a Contact

1. Press  (**Menu**) and select **Phone Book > Search**.
2. Enter the name and press  (**OK**).
3. Press  to search the contact.
4. Press  (**View**) to view the details and  (**Options**) for any of the following options.
 - **Edit**: Modify or view the contact.
 - **Delete**: Delete the contact.
 - **Copy To Phone (Copy To UIM)**: If the contact is saved on the UIM card, copy the contact to the phone memory; If the contact is saved in the phone memory, copy it to the UIM card.
 - **Send Message**: Send a message. After selecting the number, press  (**OK**) to edit and send the message.

Note:

Directly press  (**OK**) to display the phonebook. Enter the first word of the contact name. Then the contacts whose names begin with the word will be displayed.

7 FM Radio

There is an embedded radio in the phone. You can listen to the radio by simply inserting the headset. The headset cable is used as the antenna.



Cautions:

- Use an approved headset only.
- Adjust the volume when using the headset. A very high volume may damage your hearing.
- The radio performance depends on the signal strength in the area.

Switching On/Off the Radio

Switching On the Radio

1. Connect the headset to the phone correctly.
2. Press  (**Menu**) and select **FM Radio**.
The phone displays "**Radio On!**". The radio is switched on and the broadcasting interface is displayed.
3. Select a channel and play the program.

Switching Off the Radio

1. In the standby mode, press  (**Menu**) and select **FM Radio**.
2. Press  (**Options**) and select **Switch Off**.
3. Press  (**Select**) to switch off the radio and return to the main screen.

Notes:

- The radio is switched off if you disconnect the headset for over two minutes, unless you are answering a call.
- If you set the ring tone or adjust the volume while the radio is on, the radio is muted automatically until you finish setting.
- When there is an incoming call, the radio is muted automatically until you finish talking. You can answer the call by using the headset or disconnecting the headset. If you disconnect the headset and do not re-connect it in two minutes the radio is switched off.

Selecting a Channel

When the radio is switched on,

- The channel you listened to last time is selected; or if there is no latest channel
- The first non-empty channel in the list is selected; or if all channels in the list are empty
- The frequency 87.5 MHz is selected by default.

In the broadcasting interface of the radio, press  to change the channel and press  to adjust the volume.

You can also change the channel by using the headset button.

Setting a Frequency

1. In the standby mode, press  (**Menu**) and select **FM Radio**.
2. Press  (**Options**) and select **Set Frequency**.
3. Enter a frequency, which is from 87.5 MHz to 108.0 MHz.
If you enter 3 digits before the decimal, the cursor moves to the right side of the decimal automatically; if you enter 2 digits before the decimal, press  to move the cursor to the right side of the decimal.
4. Press  (**OK**) to save the settings and return to the broadcasting interface.

Press  (**Clear**) to clear the settings and then return to the main interface of the radio, press  to move the cursor to clear all the settings.

Adding a Channel

1. Search for or set a frequency. For details, see "Searching for a Channel" on P15, "Setting a Frequency" on P14.
2. Press  (**Options**) and select **Save Channel**.
3. Select a channel in the channel list and press  (**OK**).
4. If you change the frequency of the selected channel, the phone prompts "**Replace existing channel?**"

Press  (**Yes**) to replace. Press  (**No**) to re-select.

Deleting a Channel

1. In the standby mode, press  (**Menu**) and select **FM Radio**.

2. Press  (**Options**) and select **Delete Channel**.
3. In the channel list, press  and select a non-empty channel.
4. Press  (**Delete**) to delete the selected channel.
5. Press  (**Yes**) to delete; press  (**No**) to cancel.

Searching for a Channel

Auto Tuning

1. In the standby mode, press  (**Menu**) and select **FM Radio**.
2. Press  (**Options**) and select **Auto Tuning**.
3. The phone searches for all available channels automatically and save them.

Notes:

Your phone can save up to 20 channels. When 20 channels are found, the phone stops searching automatically.

Manual Tuning

1. In the standby mode, press  (**Menu**) and select **FM Radio**.
2. Press  (**Options**) and select **Manual Tuning**.
3. The phone searches for an available channel automatically.
4. Press  to switch a channel.
5. Press  (**Set**) to set the found channel as the current channel for playing; press  (**Back**) to stop tuning and return to the broadcasting interface.

Inching Tuning

1. In the standby mode, press  (**Menu**) and select **FM Radio**.
2. Press  (**Options**) and select **Inching Tuning**.
3. Press  and the phone searches a band of 0.1 MHz for available channels. The total frequency band for radio is from 87.5 MHz to 108.0 MHz.
4. Press  (**Set**) to set the found channel as the current channel for playing; press  (**Back**) to stop tuning and return to the broadcasting interface.

8 Alarm Clock

If the phone is on and the alarm clock is activated, the phone rings, vibrates and/or vibrates at the preset time. You can set five alarm clocks at most.

Activating the Alarm Clock

1. Press  (**Menu**) and select **Fun & Utility > Alarm**.
2. Press  to select an alarm clock.
3. Select **Alarm On** to activate the alarm clock.
4. Set the time, and press  (**OK**).
5. Select the alerting mode:
 - If you select **Once**, the alarm clock alerts once.
 - If you select **Everyday**, the alarm clock alerts once a day.
 - If you select **Custom**, the alarm clock alerts at a specified time.

Note:

- When the alarm clock alerts, press any key except  (**Snooze**) to stop it. Alternatively, press  (**Snooze**) to snooze it for five minutes, after which the alarm alerts again.
- If nothing is done to the alarm clock when it alerts, it stops temporarily and alerts again 5 minutes later. It alerts for five times before it stops.

Deactivating the Alarm Clock

1. Press  (**Menu**) and select **Fun & Utility > Alarm**.
2. Press  to select an alarm clock.
3. Select **Alarm Off** to deactivate the alarm clock.

9 Security

Enabling/Disabling the Phone Lock

1. Press  (**Menu**) and select **Settings > Security > Phone Lock**.
2. Enter the correct phone lock code and press  (**OK**).
3. Select **On/Off** to enable/disable the phone lock.

Changing the Phone Lock Code

The default phone lock code is "000000", you can change it into any numeric string of 4 to 8 digits.

1. Press  (**Menu**) and select **Settings > Security > Phone Lock**.
2. Enter the correct phone lock code and press  (**OK**).
3. Select **Change Code**.
4. Enter a new phone lock code and press  (**OK**).
5. Re-enter the new phone lock code and press  (**OK**).

Enabling/Disabling the PIN Lock

PIN protects your UIM card from unauthorized use. You can use the personal unlocking key (PUK) to unlock PIN. PIN and PUK are delivered with UIM card.

Note:

For details of PIN and PUK, consult your service provider.

To set the PIN lock, do as follows.

1. Press  (**Menu**) and select **Settings > Security > PIN Lock**.
2. Enter the correct PIN and press  (**OK**).
3. Select **On/Off** to enable/disable PIN lock.

Changing the PIN Code

If your PIN is locked, you can change your PIN by entering the correct PUK.

1. Enter the correct PUK code and press  (**OK**).
2. Enter a new PIN and press  (**OK**).
3. Re-enter the PIN and press  (**OK**).

10 Menu Commands

 Call History	
Missed Calls	View, save and delete call records (up to 20), or send messages to the corresponding numbers.
Received Calls	
Dialed Calls	
Call Duration	View the duration of the recent calls, or clear the call counter.
Delete All	Delete all the missed calls, answered calls, dialed calls, or call memos.
 Phone Book	
Search	Find a contact from the phonebook.
Add New	Add new contacts to the phonebook. Each contact may have three numbers. The phone memory can save up to 500 contacts, while the capacity of the UIM card varies.
Groups	View or rename a group; delete the members of a group; add members to a group; set the group ring.
Speed Dial	Set the speed dial key. Then, you can press and hold only one number key to make a call in the standby mode.

Copy All	If a UIM card is available, you can copy all contacts from the phone memory to the UIM card or from the UIM card to the phone memory.
Delete All	Delete all the records in the phone book. If the UIM is available, you can choose to delete all contacts saved in the Phone or UIM Card .
My Phone No.	Your phone number.
Memory Info	If a UIM card is available, set the memory in use (either the Phone or the UIM Card). Check the remaining and total space in the phone and the UIM card.
 Profiles	
General	Set the alerting mode and other sound/vibration-related features.
Meeting	The General , Outdoor , Headset , and Carkit profiles contain settings for the Volume , Alert Type , Incoming Call , Alarm Clock , SMS Alert , Key Tone , and Power On/Off Tone .
Silent	
Outdoor	
Headset	
Carkit	
 Gallery	
Pictures	Store pictures downloaded from network.
Musics	Store music files downloaded from network.

Others	Store files downloaded from the network.
Sys Info	View the information of your phone space.
 Messages	
Write Message	Write and send a message. A message can contain up to 160 English letters.
Inbox	Store the received messages and delivery ack. You can view, reply to, delete, forward messages in the inbox. You can save phone numbers of message senders, or make a call from the numbers.
Outbox	When you send a message, if you choose Send&Save and the message is sent successfully, the message is saved to the outbox. If the Auto Save function is enabled, the message is saved to the outbox after it is sent successfully. You can delete, forward or re-send messages in the outbox.
Draft	When you send a message, if you choose Send&Save and the message is sent unsuccessfully, the message is saved to the draft. If you choose Save after writing a message, the message is saved to the draft. If the Auto Save function is enabled and the message is not sent successfully, it is saved to the draft. You can edit, send or delete the messages in the draft.

Voice Mail	<p>Receive voice mails.</p> <p>You can set the Voice Mail Number, Call Voice Mail Center, and Clear Voice Mail Notification.</p>
Templates	<p>Edit up to 10 predefined phrases.</p>
Messages Setting	<p>Group Settings</p> <p>Set up to 10 SMS groups, each of which can contain up to 10 contacts.</p> <p>Auto Save</p> <p>If enabled, messages sent successfully are saved to the outbox, and messages sent unsuccessfully are saved to the draft.</p> <p>Auto Delete</p> <p>If enabled, the earliest messages are automatically deleted to spare room for new messages. If disabled, the phone cannot receive new messages if the memory is full.</p> <p>Priority</p> <p>Set the priority of messages sent from the SMS center. From the lowest to the highest, the priorities are Normal, Urgent, and Emergency.</p> <p>The message priority function is network dependent.</p> <p>Delivery Ack</p> <p>Require a message delivery report from the short message service center (SMSC).</p> <p>Memory In Use</p> <p>Set the memory in use (either the phone or the UIM card).</p>

Messages Setting	Memory Status View the status of memory for messages (both the memory in use and the total memory). The phone can save up to 100 messages and the capacity of the UIM card varies.
Delete All	Delete messages in each SMS box.
 Game	
TOYGOLF Game	Provide games for entertainment. For details, see Help in your phone.
XKID Game	Games for entertainment. For details, see Help in your phone.
 Fun & Utility	
Alarm	If the phone is on and the alarm clock is activated, the phone rings, vibrates and/or vibrates at the preset time.
Scheduler	Store your appointments (up to 20), so that your phone reminds you at the specified time.
Calculator	Calculate arithmetic expressions. The calculator supports fractional arithmetic. You can press  to enter the decimal point. You can select navigation key to choose operators such as add, subtract, multiply and divide.
Stopwatch	Use the stopwatch function.

World Clock

View the current time of the local area and other major cities/areas around the world.

**FM Radio**

See "FM Radio" on P13.

**Settings**

Display**Backlight**

Set the backlight of the LCD and the keypad.

Contrast

Set the LCD contrast by pressing the navigation keys.

Time Format

Set the time format to 12-hour clock or 24-hour clock.

Data Format

Set the date format to yyyy-mm-dd, dd-mm-yyyy or mm-dd-yyyy.

Wallpaper

Set a picture in the phone as the wallpaper.

Banner

Enable or disable the banner.

If you choose **On**, you can edit the banner.

Idle Time

Display or hide time on the idle screen.

If you select **On**, the current time is displayed on the idle screen.

Display

Idle Date

Display or hide date on the idle screen.

If you select **On**, the current date is displayed on the idle screen.

Screen Saver

Enable or disable the screen saver function. This function can reduce the power consumption of the phone and protect the screen.

If you select **On** and the phone is no operation within 30 seconds in any mode, the saver program will be enabled. The program will display the current time on the screen. You can press any key to quit the saver program.

Call Settings

Call Waiting

Consult your service provider for more information about this function.

Call Forwarding

Forward all your incoming calls to another number or a voice mail connection.

Any-key Answer

Answer an incoming call by pressing any key except



Minute Alert

If activated, notify you of the call duration by giving an alert ten seconds before the end of each minute.

Call Timer

Display the duration of the current call.

Phone Settings	<p>Language Select the language, including English.</p> <p>Keyguard Enable or disable the Keyguard function.</p> <p>Version View the software version.</p>
Security	<p>Restrict All Calls If enabled, restrict all outgoing calls.</p> <p>Phone Lock If enabled, protect the phone from unauthorized use. You can change the default phone lock code (000000) into any numeric string of 4 to 8 digits.</p> <p>PIN Lock If enabled, protect your UIM card from unauthorized use. You can also change the PIN Lock code.</p> <p>Restore Factory Settings Restore the phone to the factory settings.</p>

11 Warnings and Precautions

Electronic Device

Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Turn off bi-direction wireless equipment"
- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.

- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charge from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorize service center for help.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling.

Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.

- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is powered on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure.

The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.951W/kg, and when properly worn on the body is 0.782W/kg.

