

# **User Manual**

## **HUAWEI C2288**



**Copyright © 2006 Huawei Technologies Co., Ltd.**

## **All Rights Reserved**

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## **Trademarks**



**HUAWEI** and other Huawei trademarks are the trademarks or registered trademarks of Huawei Technologies Co., Ltd. in the People's Republic of China and certain other countries.









 



All other trademarks mentioned in this manual are the property of their respective holders.

## **Notice**

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

# Safety Precautions

Before using the phone, please read the safety precautions carefully and instruct your children suitably, so that you can use your phone correctly and safely. For details, see “Warnings and Precautions”.

	Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
	Do not use your phone while driving.
	Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your phone or its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Use approved batteries and chargers only to avoid explosion.
	Observe the laws or regulations on phone use. Respect others' privacy and legal rights when using your phone.



# Table of Contents

<b>1 Getting to Know Your Phone.....</b>	<b>1</b>
<b>2 Getting Started.....</b>	<b>4</b>
<b>3 Text Entry .....</b>	<b>8</b>
<b>4 Message.....</b>	<b>10</b>
<b>5 Phonebook.....</b>	<b>11</b>
<b>6 Alarm Clock.....</b>	<b>12</b>
<b>7 Security .....</b>	<b>13</b>
<b>8 Menu Description.....</b>	<b>14</b>
<b>9 Safety Precautions.....</b>	<b>20</b>
<b>10 Warnings and Precautions.....</b>	<b>21</b>



# 1 Getting to Know Your Phone

## Front View of Your Phone

















## Key Description

Key	Description
Send key	<p>Press it to make or answer a call.</p> <p>In the standby mode, press it to access the <b>Call Records</b> menu.</p>
Power key	<p>Press it to power your phone on or off, end a call or reject a call.</p> <p>In the non-standby mode, press it to return to the standby mode.</p>
Left soft key	<p>In the standby mode, press it to access the main menu.</p> <p>In the non-standby mode, press it to select a corresponding option.</p>
Right soft key	<p>In the non-standby mode, press it to select a corresponding option.</p>
Alphanumeric keys	<p>Press them to enter numbers, letters, and symbols.</p> <p>For items with a number prefix, press the numeric key to select a corresponding item.</p>
Navigation keys	<p>In the standby mode:</p> <p>Up: Create a new message.</p> <p>Left: Display the calendar.</p> <p>Down: Display contacts of the phonebook.</p> <p>Right: Access the inbox.</p> <p>During a call, press the up or down key to adjust the earpiece volume.</p>
* key	<p>During the editing, press it to display the list of symbols.</p> <p>In the English input mode, press and hold it to switch between the ABC mode and the Predictive Input mode.</p>
# key	<p>During the editing, press it to switch between input</p>



	<p>modes.</p> <p>In the English input mode, press and hold it to switch among the upper case, lower case, and sentence caps mode.</p> <p>After the phone lock is enabled, press and hold it to lock the phone.</p>
--	--

 
## Icon Description

Icon	Description	Icon	Description
	Network signal strength		Silence on
	Phone lock enabled		Vibration on
	New voice mail		Alarm clock on
	Outside the network service area		Call privacy enabled
	Text message received		Roaming
	Urgent message received		Battery level
	High urgent message received		Calling

## 2 Getting Started

 
### Installing the Battery

If your phone is on, press and hold the **Power** key to power off your phone.

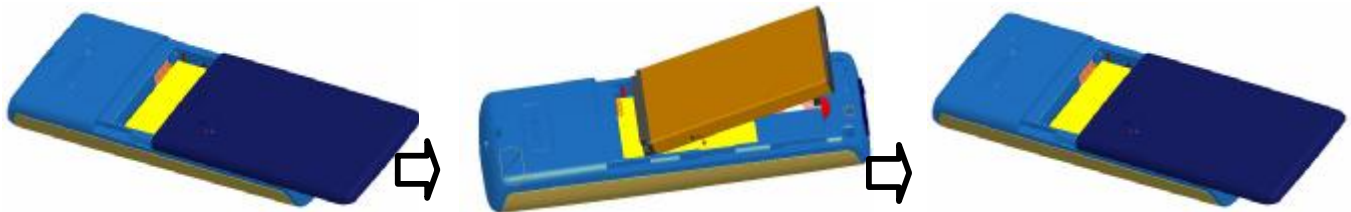


### Removing the Battery

If your phone is on, press and hold the **Power** key to power off your phone.

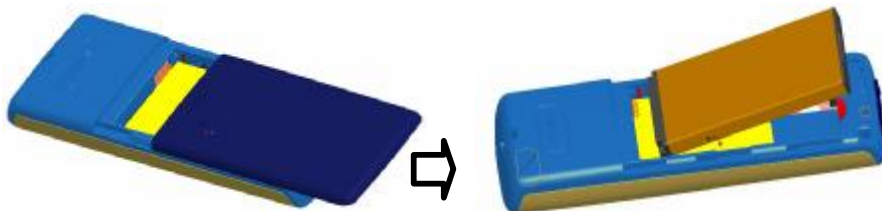

### Charging

1. Install the battery.
2. Connect the charger plug to the charger connector of your phone.
3. Connect the power cord of the travel charger to the power socket.
4. During the charging, the icon  scrolls. When the icon stays still, it indicates that the battery is fully charged.
5. Disconnect the travel charger from the power socket and your phone.



#### Caution:

- I Use the charger manufactured or approved by Huawei only.
- I Do not use any damaged or worn out battery or charger.

- I Charge the battery for at least eight hours at the first time. A new battery can reach its best performance after it is charged and recharged several times.

## Powering Your Phone On or Off

Press and hold the **Power** key to power your phone on or off.

## Changing the Language

1. In the standby mode, select **Menu > Settings > Language**.
2. Select **English**.

## Making a Call

### Through the Keypad

1. In the standby mode, press alphanumeric keys to enter the area code and phone number.
2. Press the **Send** key to dial.

### From the Phonebook

1. In the standby mode, press the **Down** key to display contacts of the phonebook. Then, select the contact.
2. Press the **Send** key twice to dial.

### From the Call History

1. Press the **Send** key to display call records. Then select the record.
2. Press the **Send** key to dial.

### From a Message

1. Press the **Right** key to access the inbox. Then select the message.
2. Select **View > Options > Call** to dial.

## Speed Dialing

Press and hold **2** to **9** to speed dial a phone number.

## Making an International Call

1. Press the \* key twice to enter +.
2. Enter the country code, area code and phone number.
3. Press the **Send** key to dial.

## Answering/Reject a Call

When there is an incoming call, your phone alerts. Then you can press the **Send** key to answer it.

If you have saved the phone number of the incoming call as a contact to the phonebook, your phone displays the name and the phone number. Otherwise, you phone only displays the phone number.

- I Press the **Send** key or the left soft key to answer an incoming call.
- I Press the **Power** key or the right soft key to reject an incoming call.

You can set the answer mode to auto, any key or flip open.

## Available Operations During a Call

### Adjusting the Volume

Press the **Up** or **Down** key to adjust the earpiece volume.

### Muting

1. Select **Mute**. After you mute the call, the other party cannot hear you.
2. Select **Unmute** to let the other party hear you again.

### Voice Privacy

1. Select **Voice Privacy**.
2. Select the voice privacy level. You can select **Standard** or **Enhanced**.

### Text Message

1. Select **Messages**.

2. Press the right soft key to return to the **Call** window.

## **Phonebook**

1. Select **Phonebook**.
2. Press the left soft key to access the phonebook.

## **Manually Locking the Phone**

In the standby mode, you can manually lock the phone.

1. Enable the phone lock.
2. Press and hold the **#** key to manually lock the phone.

# 3 Text Entry

## Input Modes

You can enter English letters, numbers, and symbols. The following input modes are available:

I English input: You can enter English through normal input mode or predictive input mode.

I 123 input: Enter numbers.

During the editing, you can press the **#** key to switch between input modes.

## Entering English

In the English input mode, press and hold the **\*** key to switch between the ABC mode and the Predictive Input mode, press and hold the **#** key to switch among the upper case, lower case, and sentence caps mode.

## ABC Input Mode

You need to press the key labeled with the required letters.

I Press once to enter the first letter.

I Press twice to enter the second letter.

For example, enter "Huawei".

1. Switch to the ABC input mode.
2. Switch to the sentence caps mode.
3. Press the **4** key twice to enter "H".
4. Press the **8** key twice to enter "u".
5. Press the **2** key once to enter "a".
6. Press the **9** key once to enter "w".
7. Press the **3** key twice to enter "e".
8. Press the **4** key three times to enter "l".

## Predictive Input Mode

In the Predictive input mode, press keys labeled with required letters in a sequence, your phone will display candidate words. You can press the **Up** or **Down** key to select a previous or next word. Also, you can press the **Left** or **Right** key to confirm and move the cursor to the

left or right or a selected word.

For example, enter "Book".

1. Press the **#** key to switch to the Predictive input mode.
2. Switch to the sentence caps mode.
3. Press the **2**, **6**, **6**, and **5** key once. "Cool" is displayed.
4. Press the **Up** or **Down** key to select "Book". Press the **0** key to enter a space, and then enter the next word. Or, press the **Left** or **Right** key to confirm and move the cursor to the left or right of "Book".

## ABC Input Mode

You can enter numbers in two ways:

- I Press the **#** key to switch to the 123 input mode. Then press numeric keys to enter numbers.
- I In any input mode, press and hold numeric keys to enter numbers.

## Entering Symbols

You can enter symbols in three ways:

- I In any input mode, press the **\*** key to display the list of symbols. Then press the navigation keys to select the symbol. Press the left soft key to enter. Or, you can press and hold a corresponding numeric key to enter a symbol.
- I In ABC input modes, press the **1** key consecutively to enter symbols.
- I In Predictive input mode, press the **1** key to display ".". Press the **Up** or **Down** key to select other symbols.

# 4 Message

## Creating a Message

Create a message to send it to a phone number or contact.

1. Select **Menu > Messages > White Message**. Also, you can press the **Up** key to access **White Message**.
2. Enter the content in the **Edit** window. The upper side of it displays the remaining characters you can enter.
3. Select **Options** to select:
  - Ø **Send**: Send the message to a recipient.
  - Ø **Send & Save**: Send the message to a recipient and save it to the outbox.
  - Ø **Save**: Save the message to the outbox.
  - Ø **Priority**: Select **Normal**, **Urgent** or **Emergency**.
  - Ø **Call Back No.**: Set the call back number.
  - Ø **Insert Phrase**: There are ten frequently used phrases to select.
  - Ø **Insert Number**: Insert a phone number of a contact in the phonebook into the message.
  - Ø **Insert Name**: Insert a name of a contact into the message.
4. Select **Send** to access the **Add Number** menu. You can add up to ten phone numbers.
5. After selecting a contact, you can press the **Send** key to send the message. Alternatively, you can select **Option** to select:
  - Ø **Send**: Send the message.
  - Ø **Delete**: Delete a selected contact.
6. Select **Send** to send the message.



# 5 Phonebook

## Adding a Contact

A new contact is saved to the memory in use.  
Do the following to add a contact:

1. Select **Menu > Phonebook > Add New**.
2. Enter the phone number and press the left soft key to confirm.
3. You can set the type of the phone number to:
  - Mobile
  - Office
  - Home
4. Enter the name. Then press the left soft key to confirm or press the right soft key to clear.
5. Select **Save**.

## Searching for a Contact


Contacts are arranged in accordance with the alphabetic order.  
Do the following to search a contact::

1. Select **Menu > Phonebook > Search** to access the **Name** window.
2. Enter the name of a contact in the **Name** window. Then select **OK**.
3. Select **View** to view details.
4. Select **Options** to select:
  - White Message**: Send a message to the contact.
  - Edit**: Edit the name and phone number of the contact.
  - Copy Record**: Copy the contact to your phone or the UIM card.
  - Delete**: Delete the contact.
  - View**: View details.

## 6 Alarm Clock

Your phone provides three alarm clocks. After you set the alarm clock, your phone alerts you at the set time in the mode you set. You can press the **Power** key or the left soft key to turn off the alarm clock. Alternatively, you can press the right soft key to snooze the alarm clock.

### Setting the Alarm Clock

After you set the alarm clock,  appears.

1. Select **Menu > Extras > Alarms**.
2. Scroll to an alarm clock and select **OK**. Do the following to set the alarm clock:
  - Ø On or off: Select **On** to enable the alarm clock.
  - Ø Set the time: Press the **Left** or **Right** key to move the cursor. You can enter the time directly or press the **Up** or **Down** key to adjust the time. If you use the 12-hour format, press the **Up** or **Down** key to select **AM** or **PM**.
  - Ø Set the repeat method: Set it to **Once**, **Everyday**, **Mon-Fri** or **Mon-Sat**.
3. After setting, select **OK** to save the setting.

#### Note:

If you do not turn off the alarm clock, your phone auto snoozes it and plays the alarm tone in ten minutes. Your phone can snooze the alarm clock for three times.

### Canceling the Alarm Clock

1. Select **Menu > Extras > Alarms**.
2. Scroll to an alarm clock and select **OK**.
3. Select **Off**.

# 7 Security

## Setting the Phone Lock Code

1. Select **Menu > Settings > Security > Phone Lock**.
2. Select **Enable** or **Disable**.

After your phone is locked, you can still make an emergency call.

## Changing the Phone Lock

The default phone lock is "0000".

1. Select **Menu > Settings > Security > Change Phone Lock**.
2. Enter the current phone lock code. Then select **OK**.
3. Enter the new phone lock code twice. You can change the current phone lock to any numeric string of four digits.

## PIN1

The personal identity number (PIN) can protect your UIM card from authorized use. If you enter wrong PIN codes three times in a row, you need to use the personal unblocking key (PUK) to unblock PIN. The PIN code is delivered with the UIM card.

1. Select **Menu > Settings > Security > PIN1**.
2. Select **Enable** or **Disable**.

## Changing PIN1

1. Select **Menu > Settings > Security > Change PIN1**.
2. Enter the current PIN code. Then select **OK**.
3. Enter the new PIN code twice. The new PIN code should be any numeric string of four digits.


If you enter wrong PIN codes three times in a row, your phone locks the UIM card. In this case, you need to use the PUK code to unblock PIN. And if you enter wrong PUK codes ten times in a row, the phone will be locked. If the situation occurs, contact your service provider.



## 8 Menu Description




### Messages

<b>Write Message</b>	<p>You can create and send a message.</p> <p>A message can contain up to 160 English letters or 70 Chinese characters.</p>
<b>Inbox</b>	<p>The inbox saves received messages and delivery acknowledge.</p> <p>You can view, reply to, delete, or forward a message saved in the inbox. In addition, you can save or dial the phone number of a received message.</p>
<b>Outbox</b>	<p>The outbox saves sent messages.</p> <p>You can view, re-send, edit, delete, or forward a message saved in the outbox.</p>
<b>Draftbox</b>	<p>The draftbox saves drafts.</p> <p>You can view, edit, send, or delete a message saved in the draftbox.</p>
<b>Voice Mail</b>	<p>You can send or receive a voice mail.</p> <p>Voice mail is network dependent. For details, consult your service provider.</p>
<b>Delete All</b>	<p>You can delete some or all messages saved in the inbox, outbox, and draftbox,</p>

<b>Settings</b>	<p><b>Voice Mail No.</b> You can set the voice mail number.</p> <p><b>Call Back No.</b> You can set the call back number.</p> <p><b>Memory Status</b> You can view the message memory status of your phone and the UIM card.</p> <p><b>Delivery ACK</b> You will receive a delivery report from the short message service center.</p>
	<p><b>Phrase</b> You can edit up to 10 frequently used phrases.</p> <p><b>Signature</b> You can add or edit signatures.</p> <p><b>Statistic</b> You can view the number of sent messages and the number of received message.</p>
 <b>Phonebook</b>	
<b>Search</b>	<p>You can search for a contact.</p>
<b>Add</b>	<p>You can add a contact to the phonebook. A contact can contain 3 phone numbers. Your phone can save up to 300 contacts. The UIM card capacity decides how many contacts it can save.</p>
<b>Group</b>	<p>You can rename a group, add a contact to a group, view or delete a contact in a group.</p>
<b>Speed Dial</b>	<p>When making a call, you can press and hold a key to call the corresponding contact quickly.</p>
<b>Copy All</b>	<p>If the UIM card is available, you can copy contacts from your phone to the UIM card and the way back.</p>

<b>Delete All</b>	You can delete all contacts of the phonebook. If the UIM card is available, you can delete some or all contacts saved in the UIM card or your phone.
<b>Options</b>	<p><b>My Phone Number</b> You can set your phone number.</p> <p><b>Memory In Use</b> You can set to save contacts to your phone or the UIM card.</p> <p><b>Memory Status</b> You can view the memory status of your phone or the UIM card.</p>
 <b>Call Records</b>	
<b>Missed Calls</b>	You can view, save, delete all, or send a message to call records. Your phone can save up to 20 records for missed calls, answered calls, and dialed calls respectively.
<b>Answered Calls</b>	
<b>Dialed Calls</b>	
<b>Delete All</b>	You can delete all call records or delete call records separately.
<b>Call Duration</b>	You can view the call duration of last call. In addition, you can clear the call duration of answered calls, dialed calls, or total.
 <b>Extras</b>	
<b>Alarm Clock</b>	Your phone provides three alarm clocks. After you set the alarm clock, with your phone powered on, your phone alerts you at the set time in the mode you set.
<b>Calendar</b>	You can check both the solar calendar and the lunar

	calendar. The date range is from January 1, 1999 to December 31, 2099.
<b>Calculator</b>	You can use your phone to do basic calculation. You can press the * key to enter a decimal and press the # key to enter a minus. You can press navigation keys to select the algorithm.
<b>Stopwatch</b>	The stopwatch can record up to 24: 00: 00: 0. Your phone displays the last record and can save up to 10 records.
<b>Time Zone</b>	Your phone provides 72 time zones for you to check the time of different time zone.
<b>Games</b>	Your phone provides multiple games.
 <b>Sound</b>	
<b>Volume</b>	You can adjust the volume of the ringtone, earpiece, and keypad tone. Press the <b>Up</b> or <b>Down</b> key to adjust the volume.
<b>Alert Mode</b>	You can set the alert mode to silence, ring, vibra, vibra & ring or ring after vibra.
<b>Ring Tone</b>	You can set the ringtone and alarm tone.
<b>Alarm Tone</b>	
<b>SMS Receive Tone</b>	You can enable or disable the SMS receive tone or SMS send tone.
<b>SMS Send Tone</b>	
<b>Other Tones</b>	You can enable or disable the power on tone, power off tone, flip tone, warning tone, or info prompt tone.



## Settings





 


<b>Display</b>	<b>Wallpapers</b> You can set the wallpaper and the color of the font. <b>Backlight</b> You can set the backlight enable time. <b>LCD Contrast</b> You can press the navigation keys to adjust the LCD contrast. <b>Animation</b> You can enable or disable the animation for power-on or power-off. <b>Greetings</b> You can set the greetings. <b>Operator Logos</b> You can enable or disable the display of the operator logo. <b>LED</b> You can enable or disable the LED.
<b>Time</b>	<b>Time Format/Date Format</b> You can set the time format and the date format. <b>Display Time/Display Date</b> You can enable or disable the time display or the date display.
<b>Call</b>	<b>Call Waiting</b> You can enable or disable the call waiting function. <b>Call Forward</b> You can forward incoming calls to a phone number. Call forward is network dependent. For details, contact your service provider. <b>Call Restriction</b>





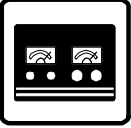


	<p>You can enable or disable the call restriction function.</p> <p><b>Answer Mode</b></p> <p>You can set the answer mode.</p> <p><b>Auto Retry</b></p> <p>If you enable the auto retry function, when the call attempt fails, your phone will auto re-dial the phone number in the preset period until the call is put through.</p> <p><b>Minute Alert</b></p> <p>If you enable the minute alert function, your phone will reminds you of the time by playing the minute alert every minute during a call.</p> <p><b>International Call Prefix</b></p> <p>You can set and save the international call prefix.</p> <p><b>Privacy</b></p> <p>You can set the privacy to standard or enhanced.</p>
<b>Language</b>	<p>You can set the language of your phone to English or Chinese.</p>
<b>Security</b>	<p><b>Phone Lock/ Change Phone Lock</b></p> <p>The phone lock function can protects your phone from unauthorized use.</p> <p>You can change the default phone lock "0000" to any numeric string of four digits.</p> <p><b>PIN/ Change PIN1/ Change PIN2</b></p> <p>PIN can protect your UIM card from authorized use. The PIN code is delivered with the UIM card.</p> <p>You can change the default PIN1 to any numeric string of four digits.</p> <p><b>Reject Other UIM</b></p> <p>You can enable or disable the reject other UIM function.</p>
<b>Factory Restore</b>	<p>You can restore your phone to the factory settings.</p>

## 9 Safety Precautions

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely. For details, see "Warnings and Precautions".

	Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
	Do not use your phone while driving.
	Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your phone or its accessories in containers with strong electromagnetic field.

	<p>Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.</p>
	<p>Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.</p>
	<p>Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.</p>
	<p>Use approved batteries and chargers only to avoid explosion.</p>
	<p>Observe the laws or regulations on phone use. Respect others' privacy and legal rights when using your phone.</p>

## 10 Warnings and Precautions

### Electronic Device

Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.

### Hospital

Pay attention to the following points in hospitals or health care facilities:

- I Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- I Do not use your phone at places for medical treatment where phone use is prohibited.
- I When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

## **Area with Inflammables and Explosives**

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- I Gas station
- I Area for storing fuels (such as the bunk under the deck of a ship)
- I Device/Vehicle for transporting and storing fuels or chemical products
- I Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- I Area with the sign of "Explosives"
- I Area with the sign of "Turn off bi-direction wireless equipment"
- I Area where it is generally suggested to stop the engine or a vehicle

## **Traffic Safety**

- I Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- I Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- I Use the phone after the vehicle stops at a safe place.

- I If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- I Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- I Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

## **Storage Environment**

- I Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- I Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- I Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- I Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- I Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- I Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

## Children Safety

- I Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- I Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- I Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

## Operating Environment

- I The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charge from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- I Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- I Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- I When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- I If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- I On a thunder stormy day, do not use your phone outdoors or when it is being charged.

- I Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- I The phone may interfere with nearby TV sets, radios and PCs.
- I In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

## **Cleaning and Maintenance**

- I Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- I Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- I Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- I Keep the plug dry when you clean it, to prevent fire.
- I If the phone or any of its fittings does not work, turn to the local authorized service center for help.

## **Environmental Protection**

- I Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste.
- I This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

## Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

## Battery

- I Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- I Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- I Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- I Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- I If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- I If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- I If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- I If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- I When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- I Do not take out the battery when the phone is turned on.



- I If you do not use the battery for a long time, store it in normal temperature after charging.

## Charger

- I Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- I Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- I If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the power cord at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- I Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- I Do not use the charger in a dusty and damp environment.
- I Keep the power cord away from any heating appliance.
- I Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear off the power cord.
- I Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- I Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- I When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- I Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise,

overheating, fire and other malfunction may occur.

## **Certification Information (SAR)**

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.02 W/kg, and when properly worn on the body is 0.95

W/kg.

## Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- I Reorient or relocate the receiving antenna.
- I Increase the separation between the equipment and receiver.
- I Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- I Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications made to this equipment not expressly approved by **HUAWEI** may void the FCC authorization to operate this equipment.



**Version: V1.10 Bom: 31017004**