

CDMA 1X Mobile Phone

User Guide




and other Huswei trademarks are trademarks of Huswei Technologies Co., Ltd. All other trademarks and trade names mentioned in this document are the property of their respective holders. The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind. express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, People's Republic of China Tel: +86-755-28780808 Global Hotline: +86-755-28560808

E-mail: mobile@huawei. com Website: www.huawei.com

Your Phone

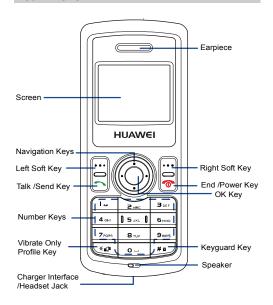

Keys and Functions

Press	То			
	 View the dialed calls in the standby mode. 			
	Make or answer a call.			
	• Power on or off the phone (by pressing and holding			
	it).			
	 End a call or reject an incoming call. 			
	Return to the home screen.			
ОК	• Display the UNI interface in the standby mode.			
	Accept a selection.			
•••	Select the option displayed on the lower left corner of			
	the screen.			
··•	Select the option displayed on the lower right corner of			
	the screen.			
	• Display the Magic interface (()), the Messages			
	interface (O), the Scheduler interface (O),			
	and the Alarm interface () in the standby			
	mode.			
	• Increase the volume () or decrease the volume			
	(during a call.			
	_			

Press	То
	• Enter word one and above tone



numbers and characters

· Speed-dial phone numbers in the standby mode (by pressing and holding the 1-9 keys).



· Select a submenu item labeled with the corresponding number.

· Enter the * symbol.



· Enable or disable the vibrate only profile (by pressing and holding it).

- · Provide different functions according to the phone features being used.
- · Enter the # symbol.



· Lock the keypad in the standby mode (by pressing and holding it).

 Provide different functions according to the phone features being used.

Screen Icons

Icon	Description	Icon	Description
Yull	Network signal strength	(IWI	Battery power level
-	Calling	Ħ	Alarm clock on
£	Keypad locked	Ø	Silent profile
M	Message received Memory for messages full(Icon blinks)	n B n	Vibrate Only profile

Menu Tree

Phone Book

- 1 Search
- 2 Add New
- 3 Groups 4 Speed Dial
- 5 Copy All
- 6 Delete All
- 7 My Phone No. 8 Memory Status

Messages

- 1 Write Message
- 2 Inhox 3 Outbox
- 4 Draft
- 5 Voice Mail 6 Message Settings
- 7 Delete All

Call History

- 1 Missed Calls
- 2 Received Calls
- 3 Dialed Calls
- 4 Call Duration
- 5 Delete All

Fun & Utility

- 1 Recorder
- 2 Alarm
- 3 Scheduler
- 4 Calculator
- 5 Gallery
- 6 Line Game

Profiles

- 1 General
- 2 Vibrate Only
- 3 Silent
- 4 Outdoor

Settings

- 1 Display
 - 2 Call Settings 3 Phone Settings
 - 4 Security

UNI

- 1 Magic
 - 2 Info

Installing the UIM Card and Battery

Consult the network operator if a UIM card is needed.

Make sure that the golden area on the UIM card is facing downwards and the cut-off edge is correctly aligned with the card holder.







Removing the Battery and UIM Card








Charging the Battery

- Connect the charger to the charger interface at the bottom of your phone. Make sure that the arrow on the charger connector faces the front side of the phone.
- 2. Connect the charger to an AC power socket.
- During the charging, the charging icon in the animated status is displayed.
- When the charging icon becomes statistic, the phone is fully charged. Disconnect the charger from the AC power socket.
- Press the gray buttons on both sides of the charger connector inwards to disconnect the charger from the phone.

Using the Function Menu

Press to scroll to a menu item.
 Press (Select) to display the menu.
 Display the submenu in either of the ways:

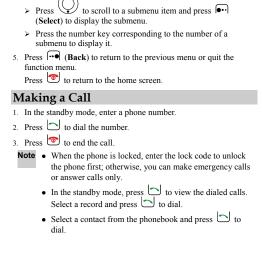

6

1. In the standby mode, press ••• to display the **Menu** interface.

Answering a Call

When there is an incoming call, you can press , (Answer) to answer it, or press to reject it.

- If the any-key answer function is enabled, you can press any key except and to answer an incoming call.
- If the headset auto answer function is enabled, and the headset is connected to the phone, the incoming call is answered automatically.

Note If the headset is connected to the phone, you can press the button on the headset cable to answer or end a call.

Phone Lock

The phone lock protects your phone from unauthorized use. The default phone lock code is 000000. You can change it into any numeric string of 4 to 8 digits.

If the phone lock is enabled, you need to enter the correct phone lock code when the phone is powered on.

PIN and PUK

The personal identity number (PIN) protects your UIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are delivered with the UIM card. For details, consult your service provider.

If you enter wrong PINs three times consecutively, the phone asks you to enter the PUK code.

If you enter wrong PUKs ten times, the UIM card is invalidated permanently. Contact your service provider for a new card.

Locking the Keypad

In the standby mode, press and hold to lock the keypad. When the keypad is locked, you can press to answer an incoming call or make emergency calls.

You can press ••• and ** to unlock the keypad.

When the keyguard function is enabled, if there is no operation on the phone for a preset period, the keypad is locked automatically.

Changing the Text Input Modes

The indicator of the current text input mode is displayed on the screen. In the editing mode, press to change the input mode.


Note

- In the editing mode, press ••• (Clear) once to delete the letter on the left of the cursor. Press and hold ••• (Clear) to delete all the letters at a time.
- In the "eZiEn" input mode, press o to enter a space. In the "ABC" or "abc" input mode, press once to enter a space, twice to enter "0", and three times to move the cursor to the next line
- In the "ABC" or "abc" input mode, press repeatedly to select and enter the commonly used punctuations. In the "eZiEn" input mode, press repeatedly to enter a full stop.

Entering English (eZiEn)

In the "eZiEn" input mode, do the following to enter the English letters:

 Press each desired key once corresponding to the sequence of the word. Then the phone displays the commonly used words according to the numeric sequence of key presses.

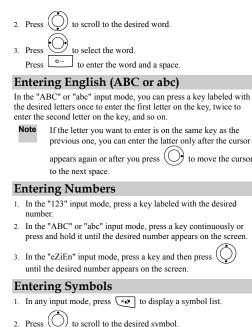

3. Press the number key to enter the symbol.

Warnings and Precautions

Electronic Device

- Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic
 gates, and other automatic-control devices. If you are using an electronic
 medical device, consult the device manufacturer to confirm whether the radio
 wave affects the operation of this device.
- Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pace-maker to avoid potential interference with the pace-maker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
 - Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- · Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- · Area with the sign of "Turn off bi-direction wireless equipment"
- · Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
 - Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area.
 Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place.
 Otherwise, malfunction of the products, fire, or explosion may occur.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock.
 Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

Put your phone, battery, and charger in places beyond the reach of children.
 Do not allow children to use the phone, battery, or charger without guidance.

- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet iam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry.
 Protect the phone, battery and charge from water or vapor. Do not touch the
 phone with a wet hand. Otherwise, short-circuit and malfunction of the
 product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may
 affect call quality and cause the phone to operate with more power. As a result,
 the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.

- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor
- · Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorized service center for help.
- Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.

Environmental Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste.
- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- This symbol indicates that the equipment carry-ing this mark must NOT be thrown into general waste but should be collected separately and properly recy-cled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.

- The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least two hours.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes
 can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- · Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the power cord at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment.
- · Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear off the power cord.
- Use the AC power supply defined in the specifications of the charger. An
 improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.

- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREOUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. L'CNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worm on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.985 W/kg, and when properly worn on the body is 1.1 W/kg.