

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase. Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

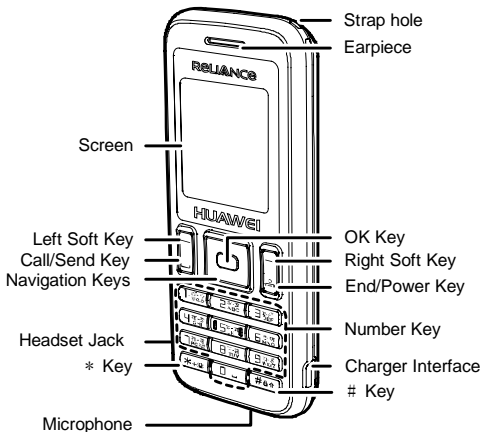 
Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.


 
 
 










Table of Contents

 

 
 
1 Your Phone	1
2 Keys and Functions.....	2
3 Screen Icons.....	4
4 Menu Tree	5
5 Installing the SIM Card and Battery	6
6 Charging the Battery.....	6
7 Using the Function Menu.....	7
8 Voice Services	7
9 Recording a Voice Clip.....	9
10 Switching On the Radio	9
11 Locking the Keypad.....	10
12 Changing the Text Input Modes	10
13 Entering English (En).....	11
14 Entering English (Abc).....	12
15 Entering Hindi	12
16 Entering Numbers	12
17 Entering Symbols.....	13
18 Organiser & Tools	13
19 Profiles	15
20 Using the Airplane Mode	15
21 Security	15
22 Menu Commands.....	18
23 Warnings and Precautions.....	28

1 Your Phone























2 Keys and Functions

Press...	To...
	<ul style="list-style-type: none">• View the Call history in the standby mode.• Make or answer a call.
	<ul style="list-style-type: none">• Power on or off the phone (by pressing and holding it).• Silence the ringer when there is an incoming call (single press).• Reject an incoming call (double press).• End a call.• Return to the standby mode.
 left soft key	Select the option displayed on the lower left corner of the screen.
 right soft key	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none">• Display the Menu interface in the standby mode.• Confirm a selection.
	<ul style="list-style-type: none">• Display the Messages interface () , the Calendar interface () , the Mobile World interface () , and the Profiles interface () in the standby mode.• Increase the volume ( or ) or decrease the volume ( or ) during a call.

Press...	To...
 -	<ul style="list-style-type: none"> • Enter numbers, letters and symbols. • Access the voice mail in the standby mode (by pressing and holding the 1 key). • Speed-dial phone numbers in the standby mode (by pressing and holding the 2-9 keys).
	<ul style="list-style-type: none"> • Select a submenu item labeled with the corresponding number.
	<ul style="list-style-type: none"> • Enter the * symbol. • Enable or disable the Vibrate profile in the standby mode (by pressing and holding it). • Provide different functions according to the phone features being used.
	<ul style="list-style-type: none"> • Enter the # symbol. • Lock the keypad in the standby mode (by pressing and holding it). • Provide different functions according to the phone features being used.

3 Screen Icons

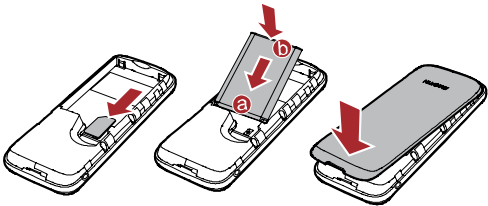 
Icon	Description	Icon	Description
	Network signal strength		Battery power level
	No network signal		Calling
	Keypad locked		Alarm clock on
	Domestic roaming		General profile
	Overseas roaming		Silent profile
	Memory for messages full		Vibrate profile
	Call privacy enabled		Outdoor profile
	Yellow, new message		One Beep profile
	Voice mail received		My Profile
	Urgent message received		The earpiece function

4 Menu Tree

Contacts	Profiles	Settings
<ul style="list-style-type: none">1 Search2 Add New3 Groups4 Speed Dial5 My Number6 Management	<ul style="list-style-type: none">GeneralSilentVibrateOutdoorOne BeepMy Profile	<ul style="list-style-type: none">1 Phone Settings2 Display Settings3 Call Settings4 Airplane Mode5 Security Settings
Messages	Organiser & Tools	Radio
<ul style="list-style-type: none">1 Write Message2 Inbox3 Outbox4 Drafts5 Voice Mail6 Templates7 Settings8 Delete All	<ul style="list-style-type: none">1 My Files2 Recorder3 Alarms4 Calendar5 Calculator6 Stopwatch7 World Clock	<p>Access the radio Application</p>
Call Log	Premium Service	Mobile World
<ul style="list-style-type: none">1 All Calls2 Missed Calls3 Received Calls4 Dialed Calls5 Call Memo6 Call Duration	<ul style="list-style-type: none">1 SMS 51234 Services2 Dial 51234 Services3 Reliance Caller Tunes	<ul style="list-style-type: none">1 R Menu2 Reset R Menu3 Games4 SIM Tool Kit

 
5 Installing the SIM Card and Battery

Make sure that the golden area on the SIM card is facing downwards and the cut-off edge is correctly aligned with the card holder.



 


 


 

 
6 Charging the Battery


1. Connect the charger to the charger interface at the right side of your phone.
2. Connect the charger to an alternating current (AC) power socket.



3. During charging, the battery icon displays a progression from empty () to full ().
4. When the charging icon becomes static, the phone is fully charged. Disconnect the charger from the AC power socket.
5. Disconnect the charger from the phone.

 
 
 
 
 
7 Using the Function Menu

1. In the standby mode, press  (**Menu**) or  to display the **Menu** interface.
2. Press  to scroll to a menu item.
3. Press  (**Select**) or  to display the menu.
4. Do the following to display the submenu:
 - Press  to scroll to a submenu item and press  (**Select**) or  to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  (**Back**) to return to the previous menu or quit the function menu.





Alternatively, press  to return to the standby mode.

8 Voice Services


 


■ Making a Call



 

1. In the standby mode, enter a phone number.
Press  twice to enter "+"; press  three times to enter "P"; press  four times to enter "T".
2. Press  to dial the number.
3. Press  to end the call.




 
- When the phone is locked, enter the lock code to unlock the phone first; otherwise, you can make emergency calls or answer calls only.
- In the standby mode, press  to view the call log. Select a record and press  to dial.
- Select a contact from the phonebook and press  to dial.
- Select a message from the inbox and press  to dial.

■ Answering a Call

When there is an incoming call, press ,  (**Answer**) or  to answer it, press  to send SMS on call reject.

- When there is an incoming call, you can press  once to mute the speaker and twice to reject it. If the phone is in the Silent mode, you can press  only once to reject it.
- If the any key answer function is enabled, press any key (except  or ) to answer an incoming call.
- If the **Headset Auto Answer** function is enabled, and the headset is connected to the phone, the incoming call is answered automatically.
- If the headset is connected to the phone, you can press the button on the headset cable to answer or end a call.

■ Operations During a Call


 

When there is an ongoing call, you can press  to activate or deactivate the speaker, or press  (**Options**) for the following options:

- **Mute/Unmute:** Allows you to mute or unmute your voice during a call. If you select it, the other party can not hear your voice

during the call. This function is available only after the call is set up. You can not mute/unmute the ringtone.

- **Start Record:** Allows you to record the call.
- **Save Number:** Allows you to enter a phone number and save it to the phonebook.
- **Contacts:** Allows you to search for or create a contact.
- **Messages:** Allows you to access the **Messages** menu.
- **Call Memo:** Allows you to record text memo during a call.
- **Voice Privacy:** Allows you to set the privacy mode, including **Standard** and **Enhanced**.

9 Recording a Voice Clip

 

1. In the standby mode, select **Menu > Organiser & Tools > Recorder**.
2. Press  to start or pause recording.
3. Press  (**Stop**) to stop recording.
4. Press  to play the voice clip.

All the voice clips are saved in **Menu > Organiser & Tools > My Files > Musics > recorder**.

10 Switching On the Radio

 


1. Insert the headset to the headset jack properly.
2. In the standby mode, select **Menu > Radio** to access the radio.



■ Auto Tuning

1. In the radio screen, press  (**Options**) to select **Tuning**.
2. Press  to select **Auto Tuning**.

3. The phone automatically searches for channels and saves them to the channel list.

■ Manual Tuning

1. In the radio screen, press  (**Options**) to select **Tuning**.
2. Press  to select **Manual Tuning**.
3. Press  to tune from 87.5 MHz to 108.0 MHz.

In the radio screen, you can press  or headset button to change the channel and press  to adjust the volume.

 
■ FM recording


Assume that certain channels are searched and saved already. To perform FM recording while listening to a channel, do as follows:

 
 
Press  (**Options**) to select **Start Record** to record the current program.

All recorded files are stored in **Menu > Organiser & Tools > My Files > Musics > recorder**.

11 Locking the Keypad

 
In the standby mode, press and hold  to lock the keypad.

When the keypad is locked, press  to answer incoming calls or make emergency calls.

 
 

 

 

 
You can press  (**Unlock**) and  to unlock the keypad.

When the keyguard function is enabled, if there is no operation on the phone for a preset period in the standby mode, the keypad is locked automatically.

12 Changing the Text Input Modes


 
The indicator of the current text input mode is displayed on the screen. Press  to change the input mode.





- In the editing mode, press  (**Clear**) once to delete the letter on the left of the cursor. Press and hold  (**Clear**) to delete all the letters at a time.
- In the "En" input mode, press  to enter a space. In the "Abc" input mode, press  once to enter a space and twice to enter "0", press  three times to move the cursor to the next line.
- In the "Abc" input mode, press  repeatedly to select and enter the commonly-used punctuations. In the "En" input mode, press  once to enter a full stop, twice and three times to enter a smiley.
- In the "En" and "Abc" input mode, press any key and then press  immediately to change the input modes between "EN", "en" and "En".

13 Entering English (En)

In the "En" input mode, do the following to enter English letters:

 
1. Press each key only once according to the spelling sequence of the desired word. Then the phone displays the commonly used words according to the numeric sequence of key presses.
2. Press  to scroll to the desired word.
3. Press  to switch the selected characters between upper case and lower case.

4. Press  to enter the word.

Press  to enter the word and a space.

14 Entering English (Abc)

In the "Abc" input mode, you can press a key labeled the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

When you enter letters, press  to switch between the uppercase and lowercase of the highlighted letter.

If the letter you want to enter is on the same key as the previous one, enter the latter only after the cursor appears again or after you press




to move the cursor to the next space.

15 Entering Hindi

 

You can enter Hindi words in the Hindi input mode, including "हिन्दी".

Hindi input mode is similar to English input mode. For details, see "Entering English (En)" and "Entering English (Abc)".

16 Entering Numbers

- In the "123" input mode, press a key labeled the desired number.
- In the "Abc" input mode, press a key repeatedly or press and hold it until the desired number appears on the screen.
- In the "En" input mode, press a key and then press  until the desired number appears on the screen. Or press and hold a key until the desired number appears on the screen.

17 Entering Symbols



 

1. In any input mode, press  to display a symbol list.
2. Press  to scroll to the desired symbol.
3. Press the numeric key to enter the symbol.

18 Organiser & Tools


 
■ Alarm Clock

After an alarm clock is enabled, the phone notifies you at the specified time. You can set up to five alarm clocks.

To enable an alarm clock, do as follows:

1. Select **Menu > Organiser & Tools > Alarms**.
2. Press  to select an alarm clock.
3. Press  or  (**Edit**) to set the alarm clock.
4. Press  (**Save**) to save the settings.

To disable an alarm clock, do as follows:

1. Select **Menu > Organiser & Tools > Alarms**.
2. Press  to select an alarm clock.
3. Press  (**Off**) to disable the alarm clock.


You can also select **Menu > Organiser & Tools > Alarms > Cancel All** to disable all alarm clocks.

■ Calendar

With the calendar, you can view dates and set reminders for appointments and meetings.




 
 

To add a schedule, do as follows:

1. Select **Menu > Organiser & Tools > Calendar**.


 
 


 
2. Select a desired date.
3. Press  to view the schedule, or select **Options > Add Schedule** to add a schedule.

■ Calculator


With the Calculator, you can perform the addition, subtraction, multiplication, and division operations on your phone.

- Press the number keys to enter figures.
- Press  to enter operators.
- Press  (CE) to clear data.
- Press  (Back) to exit the Calculator.
- Press  to enter a radix point.
- Press  (Clear) to delete the character on the left of the cursor.
- Press  to enter an equal sign.

■ Stopwatch


1. Select **Menu > Organiser & Tools > Stopwatch**.
2. Press  to start measuring time.
3. Press  (Lap) to record the first duration.
Press  (Lap) again to record the second duration, and so on. The stopwatch supports a maximum of five records.
4. Press  to pause, and press  again to continue. After you pause the stopwatch, you can press  (Reset) to reset the stopwatch.

■ World Clock

With the world clock function, you can view the local time and the time of other major cities or areas around the world. Press  to select the desired cities or areas.

19 Profiles

You can set the profile and other sound-related or vibration-related features on the phone. The phone provide six profiles, including **General**, **Silent**, **Vibrate**, **Outdoor**, **One Beep**, and **My Profile**.

You can press  to set the profiles, or select **Options** > **Edit** to edit a preset profile.

20 Using the Airplane Mode

In many countries, you are required by laws to switch off the phone when you are on an airplane. A way of switching off the phone is to set your phone to the airplane mode. In airplane mode, all wireless functions of your phone are disabled.

You can enable or disable the airplane mode by selecting **Menu** > **Settings** > **Airplane Mode**.

21 Security


 
 
■ Enabling or Disabling the Phone Lock

The phone lock protects your phone from unauthorized use. The phone lock function is not enabled when you purchase the phone. You can change the default phone lock code **0000** to any numeric string of 4 to 8 digits.

1. Select **Menu** > **Settings** > **Security Settings** > **Phone Lock**.
2. Select one of the following phone lock modes:
 - **Immediate**: to lock the phone immediately.
 - **Power On**: to enable the phone lock when the phone is powered on next time.
 - **Off**: to disable the phone lock.

■ Changing the Phone Lock Code

Do remember your phone lock code. If you forget it, contact your local dealer.

1. Select **Menu > Settings > Security Settings > Change Phone Code**.
2. Enter the correct phone lock code, and then press  (OK).
3. Enter the new phone lock code, and then press  (OK).
4. Enter the new phone lock code again, and then press  (OK).

■ PIN and PUK


Consult the network operator if a SIM card is required. The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.


If you enter wrong PINs for a specified number of times consecutively, you are required to enter the PUK code.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalid permanently. Contact your service provider for a new card.

■ Setting the PIN Lock

To set the PIN lock, do as follows:

1. Select **Menu > Settings > Security Settings > PIN Code Request**.
2. Select **On/Off** to enable or disable the PIN lock.
3. Enter the correct PIN code, and then press  (OK).


 The default pin code is "0000" .


■ Changing the PIN Code


If your PIN is blocked, you can change your PIN by entering the correct PUK.

1. Enter the correct PUK code, and then press (OK).
2. Enter a new PIN, and then press (OK).
3. Enter the PIN again, and then press (OK).

22 Menu Commands

 Contacts	
Search	Allows you to find a contact from the phone book.
Add New	Allows you to add new contacts to the phone book. If you add a new contact to your phone, each contact may have three numbers. If you add a new contact to the SIM card, each contact only has one number. Your phone memory can save up to 500 contacts.
Groups	Allows you to view or rename a group, delete the members of a group, add members to a group and set the group ring. Allows you to set up to 10 groups.
Speed Dial	Allows you to make a call by pressing and holding only one number key (except 0 and 1) in the standby mode. 8 speed dial options are available.
My Number	Allows you to set your own phone number.
Management	Show Contacts From: Allows you to choose the current storage location of the contacts. Delete Multiple: Allows you to delete multiple contacts at a time. Copy Multiple: Allows you to copy multiple contacts at a time. Move Multiple: Allows you to move multiple contacts at a time.

	Memory Status: Allows you to check total space and the remaining space for contacts in the phone.
	Messages
Write Message	Allows you to write and send a message. A message can contain up to 160 English letters.
Inbox	Allows the phone to store received messages. Allows you to view, reply, delete, and forward the messages stored in the inbox. Allows you to call and save the phone numbers of the message senders.
Outbox	Allows the phone to store the messages successfully sent, if the auto save function is activated. Allows you to delete, resend and forward the messages in the outbox.
Drafts	Allows the phone to store drafts and the messages failed to be sent. Allows you to edit, send, and delete the messages in the draft. A maximum of 1000 messages can be stored in the inbox, outbox, and drafts.
Voice Mail	Voice Message: Allows you to view and receive voice messages. Voice Mail Number: Allows you to set the voice mail center number. Clear Voice Mail Notification: Allows you to clear the voice mail notifications.

Templates	Allows you to insert or edit the phrases. The phone includes 10 default templates.
Settings	<p>Send Settings: Allows you to set the Auto Save, Priority, Delivery Report, Callback Number, Signature, Deferred Delivery and Validity Period.</p> <p>Auto Delete: If this function is activated, the phone automatically deletes the earliest messages to spare room for a new message when the message memory is full. If it is deactivated, the phone can not receive new messages when the memory is full.</p> <p>Statistics: Allows you to view the number of the sent messages, the received messages, and the time when you clear the statistics the last time.</p> <p>Save Location: Allows you to choose the phone or the SIM card to save the messages.</p> <p>Memory Status: Allows you to view the memory usage of the phone and the SIM card (both the used memory and the total memory). The phone can save up to 1000 messages.</p>
Delete All	Allows you to delete all the messages stored in the inbox, the outbox, the draft, the SIM card, or the phone, or delete all the messages.
 Call Log	
All Calls	Allows you to view all the missed calls, received calls or dialled calls. Up to 30 call records for each
Missed Calls	

Received Calls	can be saved on the phone. Allows you to view, edit, save and delete call records, send messages, make calls to the corresponding numbers.
Dialled Calls	
Call Memo	Allows you to view the text memo recorded during a call or to create a new memo.
Call Duration	Allows you to view the duration of the latest call, the dialed calls, received calls and all calls, or clear the call counter.





Profiles


General	Allows you to set the profiles of the phone. Allow you to set the alerting mode and other sound/vibration-related features.
Silent	
Vibrate	
Outdoor	
One Beep	
My Profile	

 
 
 



Organiser & Tools




My Files	<p>Pictures: Allows your phone to store pictures downloaded from network.</p> <p>Musics: Allows your phone to save audio clips or music files downloaded from network.</p> <p>Memory Status: Allows your phone to view the information of your phone space.</p>
Recorder	Allows you to record audio clips that are saved in Musics in My Files .

Alarms	Allows you to set up to five alarm clocks. When the phone is powered on, an alerting tone is played at the preset time.
Calendar	Allows you to store up to 20 appointments on the phone. The phone reminds you at the specified time.
Calculator	Allows you to do some basic calculations.
Stopwatch	Allows you to measure time.
World Clock	Allows you to view the local time and the time of other major cities/areas around the world.
 Premium Service	
SMS 51234 Services	Exciting SMS-based infotainment services such as News, Jokes, Horoscope etc are available to Reliance subscribers.
Dial 51234 Services	Listen and follow the voice and enjoy lots of wonderful task.
Reliance Caller Tunes	Now you can greet your callers with your favorite tunes every time they call you. Subscribe to My Tunes, the caller ringback tune service, and greet your friends and family with your favourite song.
 Settings	

Phone Settings	<p>Language: Allows you to select the language, including English and हिन्दी.</p> <p>Auto Keyguard: After you enable the function, the keypad locks automatically if there is no operation on the phone after 15 Seconds, 30 Seconds, or 1 Minute.</p> <p>Auto Power On/Off: Allows you to set the auto power-on/power-off time.</p> <p>Power-saving mode: After you enable the function, the phone enters the power saving mode, and it can turn off the keypad backlight automatically between 9:00 to 17:00.</p> <p>Version Info: Allows you to view the version.</p>
Display Settings	<p>Wallpaper: Allows you to set a picture in your phone as the wallpaper.</p> <p>Date & Time: Allows you to set the Idle Display, Date Format and Time Format.</p> <p>Backlight: Allows you to select backlight time, including 5 Seconds, 10 Seconds, and 20 Seconds.</p> <p>Contrast: Allows you to set the LCD contrast by pressing .</p> <p>Banner: Allows you to enable or disable the banner. If you choose On, you can edit the banner.</p>

Call Settings	<p>Call Waiting: Allows you to enable the call waiting service. Consult your service provider for more information about this function.</p> <p>Call Forwarding: Includes options for requesting the network to forward all your incoming calls to another number or a voice mail connection.</p> <p>Answer Mode: Allows you to answer an incoming call by pressing send key or any key except  and .</p> <p>Minute Alert: Notifies you of the call duration by giving an alert 45 Seconds, 50 Seconds or 55 Seconds before the end of each minute, if activated.</p> <p>Voice Privacy: Allows you to set the voice privacy.</p> <p>Call Timer: Allows your phone to display the duration of the current call.</p> <p>Headset Auto Answer: Allows the headset to answer the call automatically when no one answers it in 2 Seconds, 5 Seconds, or 10 Seconds, if this function is enabled.</p> <p>International Call Prefix: Allows you to set the international call prefix.</p> <p>Edit SMS on Call Reject: Allows you to edit a message for rejecting an incoming call.</p> <p>When there is an incoming call, press  to send SMS on call reject.</p>
Airplane Mode	<p>When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.</p>

Security Settings	<p>PIN Code Request: Allows you to set the PIN, enable or disable the PIN. The PIN can protect your SIM card from unauthorized use. The default pin code is "0000".</p> <p>Change PIN Code: Allows you to change the default PIN code.</p> <p>Phone Lock: Protects the phone from unauthorized use, if it is activated.</p> <ul style="list-style-type: none"> • Immediate: Allows you to lock the phone immediately. • Power On: Allows the phone lock to be activated when the phone is powered on next time. • Off: Allows you to deactivate the phone lock. <p>Change Phone Code: Allows you to change the default phone lock code (0000) into any numeric string of 1 to 8 digits.</p> <p>Restrict Outgoing Calls: Allows the phone restrict the outgoing calls except the emergency calls, if enabled.</p> <p>Restore Factory Settings: Allows you to restore the phone to the factory settings after you enter the correct phone code.</p> <p>Emergency Numbers: Allows you to edit emergency numbers after the correct phone code is entered.</p>
 Radio	
Switch Off	Allows you to switch off the radio.

Channel List	Allows you to display the list of channels that are found. Your phone can save a maximum of 20 channels.
Start Record	Allows you to record the currently played program.
Delete Current	Allows you to delete current channel.
Tuning	<p>Auto Tuning: Allows your phone to search for all available channels automatically and save them.</p> <p>Manual Tuning: Allows you to search an available channel manually.</p> <p>Fine Tuning: Allows you to adjust the frequency of a channel. Press  and your phone searches a band of 0.1 MHz for available channels.</p> <p>Set Frequency: Allows you to set the frequency of a channel. Press  to select an integer or decimal numbers.</p>
Auto Play	Allows you to play the FM radio automatically.
Help	Allows you to display the help of the FM radio.
 Mobile World	
R Menu	This connects you to Reliance Mobile World Data Services like Ringtones, News and more provided by your service provider.
Reset R Menu	You can reset R Menu.

Games	Gulper: You must eat given food at stage by managing snake that increase its body little by little. Use Navigation keys or 2(up), 4(left), 6(right), 8(down) to move snake. While entering your name, use Key 5 to submit.
SIM Tool Kit	Features available on the SIM card can be accessed through this menu.

23 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive

atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body.

Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.

- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand.

Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.43 W/kg, and when properly worn on the body is 1.38 W/kg.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.