



HUAWEI C5005

CDMA 1X Mobile Phone

User Guide

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



HUAWEI and other Huawei trademarks are the trademarks or registered trademarks of Huawei Technologies Co., Ltd. in the People's Republic of China and certain other countries.

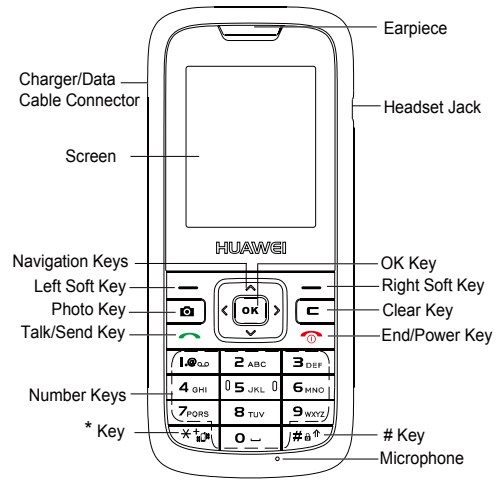 
All other trademarks mentioned in this manual are the property of their respective holders.

Notice



 
 












The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.


 
 
 


Table of Contents

Your Phone	1
Keys and Functions	2
Screen Icons.....	4
Menu Tree.....	5
Installing the Battery	6
Removing the Battery.....	6
Charging the Battery.....	7
Using the Function Menu	7
Making a Call	7
Answering a Call	8
Phone Lock.....	9
Locking the Keypad.....	9
PIN and PUK.....	9
Changing the Text Input Modes	10
Entering English (En).....	10
Entering English (Abc).....	11
Entering Spanish.....	11
Entering Numbers.....	11
Entering Symbols	12
Sending a Multimedia Message (MMS).....	12
Taking a photo	13
Switching On the Radio.....	13
WAP.....	13
Warnings and Precautions	14
























Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> Power on or off the phone (by pressing and holding it).
	<ul style="list-style-type: none"> End a call or reject an incoming call. Return to the home screen.
	<ul style="list-style-type: none"> View the call log in the standby mode. Make or answer a call.
	<ul style="list-style-type: none"> Display the Menu interface in the standby mode. Confirm a selection.
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> Display the Profiles interface () , the Messages interface () , the Create Message interface (by pressing and holding ) , the BREW interface () , and the WAP interface () in the standby mode.
	<ul style="list-style-type: none"> Increase the volume () or ) or decrease the volume () or ) during a call.

Press...	To...
 - 	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Access the voice mailbox in the standby mode (by pressing and holding the 1 key). • Speed-dial phone numbers in the standby mode (by pressing and holding the 2–9 keys). • Select a submenu item labeled with the corresponding number.
	<ul style="list-style-type: none"> • Enter the * symbol. • Activated or deactivated the Meeting profile in the standby mode (by pressing and holding it). • Provide different functions according to the phone features being used.
	<ul style="list-style-type: none"> • Enter the # symbol. • Lock the keypad in the standby mode (by pressing and holding it). • Provide different functions according to the phone features being used.
	Launch the Camera.
	<ul style="list-style-type: none"> • Delete items, such as pictures, sounds, and contacts. • Delete letters in edit mode.

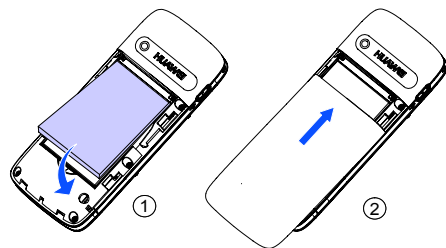 
Screen Icons

Icon	Description	Icon	Description
	Network signal strength		Battery power level
	No network signal		Low battery
	CDMA 1X network		Alarm clock on
	Domestic roaming		General profile
	Overseas roaming		Silence profile
	Calling		Meeting profile
	Keypad locked		Outdoor profile
	Push SMS received		My profile
	Message received		Voice mail received
	Memory for messages full		Data service
	Urgent message received	-	-

Menu Tree

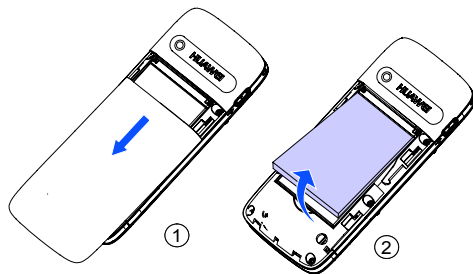 
<p>Call Log</p> <ul style="list-style-type: none"> 1 All Calls 2 Missed Calls 3 Received Calls 4 Dialed Calls 5 Call Memo 6 Call Duration 	<p>Contacts</p> <ul style="list-style-type: none"> 1 Search 2 Search By Location 3 Add New 4 Groups 5 Speed Dial 6 My Number 7 Management 	<p>Multimedia</p> <ul style="list-style-type: none"> 1 My Files 2 Recorder 3 Radio
<p>Messages</p> <ul style="list-style-type: none"> 1 SMS 2 MMS 	<p>BREW</p> <p>You can consult your service provider for more information about this function.</p>	<p>WAP</p> <ul style="list-style-type: none"> 1 Home 2 Enter URL 3 Bookmarks 4 History 5 Saved Pages 6 Push Messages 7 Settings 8 Exit
<p>Settings</p> <ul style="list-style-type: none"> 1 Profiles 2 Display Settings 3 Date & Time 4 Call Settings 5 Phone Settings 6 Security Settings 7 Restore Factory Settings 	<p>Camera</p> <ul style="list-style-type: none"> 1 Shot Mode 2 Resolution 3 Frame 4 Self Timer 5 Night Mode 6 Effect 7 Shortcut Guide 8 Settings 9 Go To My Files 	<p>Tools</p> <ul style="list-style-type: none"> 1 Alarms 2 Scheduler 3 Calculator 4 Stopwatch 5 World Clock 6 Ducati

Installing the Battery



Removing the Battery

 


 


 

 

Make sure that your phone is powered off.



Charging the Battery

1. Connect the charger to the charger interface at the left side of your phone.
2. Connect the charger to an alternating current (AC) power socket.
3. During the charging, the charging icon is displayed in the animated status.
When the charging icon becomes static, the phone is fully charged.
4. Disconnect the charger from the AC power socket and the phone.

Using the Function Menu

1. In the standby mode, press  or  to display the **Menu** interface.
2. Press  to select a menu item.
3. Press  (**Select**) or  to display the menu.
4. Do the following to display the submenu:
 - Press  to scroll to a submenu item and press  (**Select**) or  to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  (**Back**) to return to the previous menu or quit the function menu.
Alternatively, press  to return to the home screen.

Making a Call

1. In the standby mode, enter a phone number.

- To make an international call, press twice to enter the international long distance code of "+". Then enter the number to be dialed, in the format of "country code + region code + phone number".
 - To call a number with an extension, press three times to insert "P" or press four times to insert "T" between the phone number and the extension.
2. Press to dial the number.
 3. Press to end the call.

Note

- When the phone is locked, enter the lock code to unlock the phone first; otherwise, you can make only emergency calls or answer calls.
- In the standby mode, press to view the call log. Select a record and press to dial.
- Select a contact from the phonebook and press to dial.

Answering a Call

When there is an incoming call, press , (**Answer**), or to answer it; Press (**Silence**) once to mute the tone and twice to reject the call; Press to reject it.


- If the any key answer function is enabled, press any key (except or) to answer an incoming call.
- If the **Headset Auto Answer** function is enabled, and the headset is connected to the phone, the incoming call is answered automatically.
- If the headset is connected to the phone, you can press the button on the headset cable to answer or end a call.


Phone Lock

 

The phone lock protects your phone from unauthorized use. The default phone lock code is "1234". You can change it into any numeric string of 4 to 8 digits.

If the phone lock is enabled, you need to enter the correct phone lock code when the phone is powered on.

Locking the Keypad

In the standby mode, press and hold  to lock the keypad.

When the keypad is locked, press  to answer incoming calls or make emergency calls.

You can press  and  to unlock the keypad.

When the keyguard function is enabled, if there is no operation on the phone for a preset period, the keypad is locked automatically.

 
 
PIN and PUK

The personal identity number (PIN) protects your UIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are delivered with the UIM card. For details, contact your service provider.



 
 


If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK code.

If you enter wrong PUKs for a specified number of times consecutively, the UIM card is invalidated permanently. Contact your service provider for a new card.

Changing the Text Input Modes




 
The indicator of the current text input mode is displayed on the screen. When no letters are selected in the input field, press  to change the input mode. When letters are selected, press  to change the letters between lowercase and uppercase.

Note

- In the editing mode, press  once to delete the letter on the left of the cursor. Press and hold  to delete all the letters at a time.
- In the "En" input mode, press  to enter a space. In the "Abc" input mode, press  once to enter a space and twice to enter **0**.
- In the "Abc" input mode, press  repeatedly to select and enter the commonly-used punctuations. In the "En" input mode, press  repeatedly to enter a full stop or smiley.

 
Entering English (En)


In the "En" input mode, do the following to enter the English letters:

1. Press each desired key once corresponding to the sequence of the letters. Then the phone displays the commonly-used words according to the numeric sequence of key presses.
2. Press  to scroll to the desired word.
3. Press  to switch between the uppercase and lowercase.
4. Press  to select the word.
Press  to enter the word and a space.

Entering English (Abc)

In the "Abc" input mode, press a key labeled with the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.


When you enter letters, press  to switch between the uppercase and lowercase of the highlighted letter.

Note If the letter you want to enter is on the same key as the previous one, enter the latter only after the cursor appears again or after you press  to move the cursor to the next space.

 
Entering Spanish


You can enter Spanish words in the "Smsp" or "Es" input mode. Spanish input mode is similar to English input mode. For details, see "Entering English (En)" and "Entering English (Abc)".

Entering Numbers

- In the "123" input mode, press a key labeled with the desired number.
- In the "Abc" input mode, press a key continuously or press and hold it until the desired number appears on the screen.
- In the "En" input mode, press a key and then press  until the desired number appears on the screen.

Entering Symbols

1. In any input mode, press  to display a symbol list.

2. Press  to scroll to the desired symbol.


3. Press the numeric key to enter the symbol.

Sending a Multimedia Message (MMS)





1. Select **Menu > Messages > MMS > New MMS**.

2. Enter the content of a multimedia message (MMS) in the following fields:

 


- **Recipient:** Allows you to enter the recipients of message. You can add up to 20 recipients.
- **Subject:** Allows you to enter the subject of message.
- **Slides:** Allows you to insert images, audio files and texts into a slide. You can set the duration of displaying each slide for your preview.
- **Timing:** Allows you to set the duration of switching the slides.

3. After you write the multimedia message, select **Menu > Send** and press  key to send it.

Taking a photo

1. In the standby mode, select **Menu > Camera** or press  to access the camera preview mode.
2. Focus the lens on the scene and press the  key to take a photo. When focusing the lens, press  key to zoom in, and press  key to zoom out.
3. You can preview the photo and save it.

Switching On the Radio

1. In the standby mode, select **Menu > Multimedia > Radio**.
2. Press  (**Tuning**) to select **Automatic Tuning**.
3. Press  to tune the channel.
4. Press  to adjust the volume.

WAP

In the standby mode, select **Menu > WAP** to use the WAP function. It allows your phone to access the specified services provided by network service providers, and allows you to enjoy the mobile life easily. For example, you can browse the Internet and download your favorite pictures, ringtones or music. For more information about this function, consult your service provider.

Warnings and Precautions

Electronic Device

- Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.
- Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pace-maker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, power off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)

- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Power off bi-direction wireless equipment"
- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, power off the phone and take out the battery. In areas where phone use is prohibited, power off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Power off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.

- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Keep the ambient temperature between 0°C and 45°C while the battery is being charged. Keep the ambient temperature between -20°C and 60°C for storing the battery. If the ambient temperature is too low (especially below 0°C) or too high, the capacity and life of the battery will be reduced.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or

vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.

- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not power on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.
- While using the mobile phone, observe the local laws and regulations, and respect others' privacy and legal rights.


Clearing and Maintenance

- Before you clean or maintain the phone, power off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can

clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.

- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorize service center for help.
- Do not dismantle the mobile phone or accessories. Only an authorized service center is allowed to maintain the mobile phone.

Environment Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.
- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- : This symbol indicates that the equipment carrying this mark must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.

- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.

- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio

wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.11 W/kg, and when properly worn on the body is 1.04 W/kg.

The SAR limit adopted by the CNIRP is 2.0W/kg over one gram of tissue. The value guarantees a safe distance to protect mobile phone users and the difference caused by measurement errors. Under different test requirements and frequency, the value varies.

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. Operation is subject to the condition that this device does not cause harmful interference.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this equipment not expressly approved by *HUAWEI* may void the FCC authorization to operate this equipment.

Please refer color and shape to product.
Huawei reserves the right to make changes or improvements to any of the products without prior notice.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, P.R.China
Tel: +86-755-28760808 **Global Hotline:** +86-755-28560808
E-mail: mobile@huawei.com **Website:** www.huawei.com