

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or

modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

 
Contents

1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions.....	2
Installing the microSD Card and the Battery.....	5
Charging the Battery	5
Screen Icons	6
2 Text Input	8
Text Input Modes.....	8
Entering English	8
Entering Spanish.....	9
Entering Numbers	9
3 Voice Services	10
Making a Call	10
Answering a Call	11
4 Contacts	11
Adding a Contact	11
Searching for a Contact.....	11
5 Creating and Sending a Message	12
6 Camera	12
Camera Settings.....	12
Taking a Photo.....	13
Recording a Video.....	13
7 Multimedia	13
Music Player	13
Video Player.....	15
Recorder.....	15
8 FM Radio	15

Switching On the FM Radio.....	16
Switching Off the FM Radio	16
9 Security.....	17
Phone Lock.....	17
Keypad Lock.....	17
10 Bluetooth	17
Using a Bluetooth Headset	18
Transferring Data.....	18
11 Warnings and Precautions	18

1 Getting to Know Your Phone

Your Phone

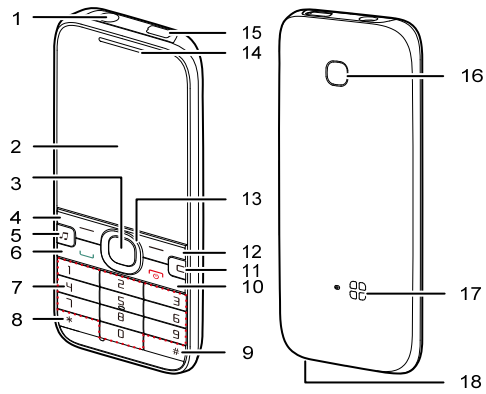









1	Headset jack	2	Screen
3	Confirm key	4	Left soft key
5	Music key	6	Call/Answer key
7	Number keys	8	* key
9	# key	10	End/Power key


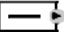 




11	Clear key	12	Right soft key
13	Navigation keys	14	Earpiece
15	Charger/Data cable connector	16	Camera
17	Speaker	18	Strap hole








Keys and Functions

Note


In this guide, your phone's navigation keys are indicated by the following icons:  (up navigation key),  (down navigation key),  (left navigation key),  (right navigation key),  (up and down navigation keys) and  (left and right navigation keys).

Press...	To...
	<ul style="list-style-type: none"> View the call logs in standby mode. Make or answer a call.
	<ul style="list-style-type: none"> Power the phone on or off (press and hold the key for about 3 seconds). End or reject a call. Turn the phone backlight on or off in standby mode. Return to standby mode.

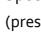 Press...	To...
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	Delete a character in text editing mode or delete a selected item in an application.
	Access Music player in standby mode.
	Activate or deactivate the Meeting profile in standby mode (press and hold the key for about 3 seconds).
	<ul style="list-style-type: none"> • Lock the keypad in standby mode (press and hold the key for about 3 seconds). • Switch between text input methods in text editing mode.

Press...	To...
  	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call your voicemail in standby mode (press and hold  for about 3 seconds). • Speed-dial phone numbers in standby mode (press and hold the keys  for about 3 seconds if speed dial numbers are assigned).
	Confirm a selection.
	Scroll up, down, left, and right through menu options.

 Installing the microSD Card and the Battery

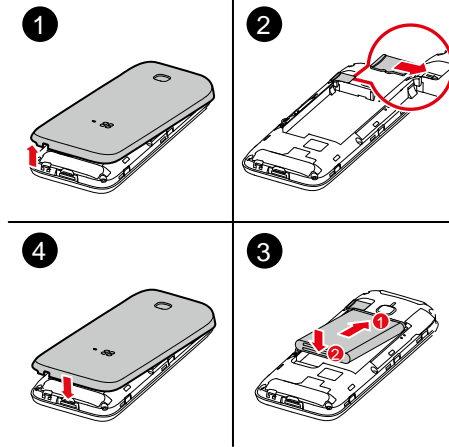

Note








The microSD card is optional and may not be included in your phone packaging. If a microSD card is required, you can buy one.













Charging the Battery

Before charging the battery, ensure that it is installed in your phone. Do not use a damaged battery or charger.

1. Connect the charger to the charger connector.
2. Connect the charger to an alternating current (AC) power outlet.
3. Wait until the battery is fully charged. When the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.
4. Unplug the charger from the AC power outlet and the USB cable from the phone.
5. Disconnect the charger from the phone.
6. The USB cable should be shielded cable.

Screen Icons

Icon	Indicates...
	Signal strength.
	Call in progress.
	Roaming.
	Text message received.
	Voicemail message received.
	Multimedia message received.
	Alarm clock enabled.

Icon	Indicates...
	microSD card inserted.
	Music player playing in the background.
	Headset connected.
	Battery charging.
	Battery level.
	General profile activated.
	Silent profile activated.
	Meeting profile activated.
	Outdoor profile activated.
	Offline profile activated.
	My profile 1 profile activated.
	My profile 2 profile activated.

2 Text Input





Text Input Modes


In text editing mode, press  to switch between text input modes.

Indicator	Text Input Mode
En	Predictive English input
Abc	Multi-tap English input
SmSp	Predictive Spanish input
Es	Multi-tap Spanish input
123	Number input

Entering English


Predictive English Input Mode (En)


1. Press each number key once according to the spelling sequence of the desired word. The phone displays candidate words that may be spelt by the keystroke sequence.
 2. Press  to scroll to the desired word.
 3. Press  or  to enter the selected word.
- Press  once to enter a space, twice to start a new line, and three times to enter a new paragraph.

- Press  to display the symbol list. Then select and enter a symbol.

Multi-Tap English Input Mode (Abc)

In **Abc** mode, press the number key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

If the letter you want to enter is on the same key as the previous letter entered, enter the desired letter after the cursor appears again or after pressing  to move the cursor to the right of the previous letter.

- Repeatedly press **1** to enter commonly used symbols.
- Press **0** once to enter a space, twice to start a new line, and three times to enter **o**.
- Press  to display the symbol list. Then select and enter a symbol.

Entering Spanish

You can enter Spanish words using Spanish text input modes.

The multi-tap and predictive Spanish input modes are similar to the multi-tap and predictive English input modes respectively. For details, see "**Entering English**".

Entering Numbers

- In **123** mode, press the number key labeled with the desired number.
- In **Abc** and **Es** modes, press and hold the number key labeled with the desired number, or repeatedly press it until the number






appears on the screen.

- In **En** and **SmSp** modes, press and hold the number key labeled with the desired number until the number appears on the screen.

3 Voice Services

Making a Call

Dialing a Number Using the Keypad

1. In standby mode, press the number keys  to enter a phone number.
 - To make an international call, press  twice to enter the international long-distance code (+). Then enter the country or region code, area code, and phone number.
 - To call an extension number, enter the switchboard number, press  three times to enter **P** or four times to enter **T**, and then enter the extension number.
2. Press  to dial the number.
3. Press  or select **Cancel** to end the call or cancel the dialing.




Note


- If you enter **P** between the switchboard number and the extension number, after the call is connected to the switchboard, the phone prompts you to choose whether to dial the extension number.
- If you enter **T** between the switchboard number and the extension number, after the call is connected to the switchboard, the phone

automatically dials the extension number.

Dialing from Contacts



Select **Menu > Contacts**, select a contact, choose a phone number, and press  to make a call.


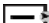 
Dialing from Call Logs

Select **Menu > Call log** or press  in standby mode to view the call logs, from where you can select the desired number to call.

Then press  to dial the number.

Answering a Call

When there is an incoming call, press  to answer it or press  to reject it.

- If the **Any key answer** function is enabled, press any key except  and  to answer an incoming call.
- If the **Headset auto-answer** function is enabled and the headset is connected to the phone, the incoming call will be answered automatically.

4 Contacts

Adding a Contact



1. Select **Menu > Contacts > Create contact**.
2. Enter the contact information.
3. Select **Save** to save the contact.

Searching for a Contact

1. Select **Menu > Contacts**.

2. Enter the contact's name in the text box. The phone automatically lists the contacts that match the search information you entered.

5 Creating and Sending a Message

1. Select **Menu > Messages > Create message**.
2. Enter one or more recipient's numbers directly, or press  to access the contact list and select one or multiple recipients.
3. Enter the message text in the text box. Press  to add a picture, video, or audio to the message, and the message will be automatically converted to a multimedia message.
4. Select **Options > Send** to send the message.




Note

Your phone supports a maximum multimedia message size of 400 KB.

6 Camera

Camera Settings

1. Select **Menu > Camera** to access the camera's viewfinder screen.
2. Press  and select **Shooting mode** to switch between **Camera** and **Video camera** modes.




Note


The phone can memorize the mode (**Camera** or **Video camera** mode) that you used last time.

On the viewfinder screen, press  or  for the camera settings.

Taking a Photo

1. Launch the camera. Set **Shooting mode** to the **Camera** mode.
2. Frame the picture you want to take on the viewfinder screen.
Press  to take a photo.
3. Your photo is automatically saved to the album of the default storage that you select.


Recording a Video

1. Launch the camera. Set **Shooting mode** to the **Video camera** mode.
2. Press  to start recording.
3. Select **Pause** to pause, or **Continue** to continue.
4. Select **Stop** to stop recording.
5. Your video clip is automatically saved to the folder of the default storage that you select.

7 Multimedia

Music Player

Starting the Music Player

To start the music player, select **Menu > Multimedia > Music player**, or press  in standby mode.

Note

When you access the music player for the first time, the phone prompts you to set the theme. The options are as follows:

- **Simple:** The information about the currently playing song is displayed

together with a waveform.

- **Lyrics:** The information about the currently playing song is displayed together with the song lyrics.

Adding a Playlist






1. Select **Menu > Multimedia > Music player.**
2. Select **Options > Media library > Playlist.**
3. Select **Options > Create** to create a new playlist.
4. Open the new playlist and select **Add** to add songs to the playlist.

Note


You can also select **Menu > My files** to select music to play, but some functions of the media library cannot be used while music is playing.

Playing Music

When music is playing:


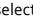 
- Press  to pause the song; press it again to resume playing.
- Press  to play the next song. Press and hold  to fast-forward the song.
- Press  to play the previous song. Press and hold  to rewind the song.
- Select **Options > Exit** to exit the music player.

Note

When a song is played, you can select **Minimize** or press  to minimize the music player screen. In this case, the music player plays music

in the background.

Video Player



1. Select **Menu > Multimedia > Video player**.
2. Select **Options > All videos** to view videos.
3. Press  to select a video and press  to start playing it.



Note

After you access the **All videos** list, you can select **Options > Refresh** to refresh the media library.

Recorder

1. Select **Menu > Multimedia > Recorder**.
2. Press  to start recording. Select **Pause** to pause, then **Continue** to continue. Select **Stop** to stop recording. After you stop, the sound clip is automatically saved to the recordings folder of the default storage that you have selected.
3. Press  to play the sound clip.



Note

When recording a sound clip, keep your phone's microphone close to the sound source for a better quality recording.

8 FM Radio






Note

To use the FM radio, connect the headset to the headset jack of the phone first.

The headset cable also functions as the radio's antenna when the radio is switched on. To ensure good radio reception, do not severely bend the headset cable when listening to the radio.

When you listen to the radio for the first time, the channel list is empty. Select **Options**, and then select **Automatic tuning**, **Manual tuning**, **Precise tuning**, or **Set frequency** to search for channels.

Switching On the FM Radio

1. Select **Menu > FM radio** to switch on the FM radio. The phone is automatically tuned to the channel you last listened to.
2. When listening to the radio:
 - Press  to switch between the headset and the speaker.
 - Press  to adjust the volume.
 - Press  to switch between the channels saved in the channel list.
 - Select **Minimize** to minimize the **FM radio** screen, the radio program that you are listening to will continue to play in the background. In this case, press the headset button to switch between channels.

Switching Off the FM Radio

Select **Options > Exit**, or press and hold the headset button to switch off the FM radio.




Note

When the headset is disconnected from your phone for more than two minutes, the radio will automatically switch off.


9 Security

Phone Lock




The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. You can change the preset password (1234) to any string of 4 to 8 digits.

1. Select **Menu > Settings > Security > Phone lock**.
2. Press  to select:
 - **On:** the phone lock will be enabled when the phone is next powered on.
 - **Off:** The phone lock will be disabled.

Keypad Lock

When the keypad is locked, you can still press  to answer incoming calls or make emergency calls.

If the **Auto keypad lock** function is enabled, the phone's keypad will automatically lock after being idle in standby mode for a pre-defined period.

1. In standby mode, press and hold  to lock the keypad.
2. To unlock the keypad, press  then .

10 Bluetooth

Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, and use a Bluetooth headset.


You can configure Bluetooth-related settings only after enabling

the Bluetooth function.

Select **Menu > Settings > Connectivity > Bluetooth**, and then select **On** to enable the Bluetooth function.

Using a Bluetooth Headset

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one yourself.

1. Select **Search for devices** to search for the Bluetooth headset.
2. After the search, press .
3. Enter the password for pairing the phone with the Bluetooth headset.

After the phone sets up a connection with the headset, the headset icon is displayed on the standby screen and you can use the headset.

Transferring Data

Select **My device > Search new device** to search for available Bluetooth devices, and then pair the phone with the desired device. After pairing, you can transfer data between the phone and the Bluetooth device.

When a Bluetooth device sets up a connection with the phone for the first time, you need to enter a pairing password for authentication.

1.1 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully

before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in

progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the roadside before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you due to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and

disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety.

Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelry. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles.

Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. If the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire,

or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You

should not rely solely on the device for essential communications.

Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.568W/kg, and when properly worn on the body is 0.663 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Caution

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.