


Guide to the Installation of the D602 external antenna for the Data Modem E368

Installing the D602

1. Connect the D602 to a jack of the E368 as shown.
2. Connect the E368 with the PC. The external antenna receives signals during network access. You can adjust the direction of the external antenna for favorable signal reception.

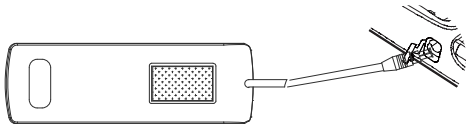

Removing the D602

After using the D602, remove it from the data modem and then keep it properly.

Note:

The figures provided in this document are for your reference only. The appearances of the external antenna and the E368 may differ from those shown in these figures.

Caution:

- **The D602 is for indoor use only.** Do not use your E368 during thunderstorms to prevent any danger caused by lightning.
- **Use only the external antenna D602 specified in the user manual.**
- The data modem and its external antenna must not be located with any other transmitter or antenna within a host device.
- The external antenna should be mounted in place. Provide at least 1 cm separation distance between the external antenna and the user's body.