

HUAWEI

EC301/321/351

Data Card User Manual



Wonderful Communication, Mobile Life

Welcome to use EC301/321/351 Data Card from Huawei

HUAWEI EC301/321/351 Data Card

User Manual

Copyright © 2005 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks













and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the property of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, expressed or implied.

Safety Precautions

Before using the wireless data card, please read the safety precautions carefully and also let your children know these, so that you can use your wireless data card correctly and safely. For details, see the section “Warnings and Precautions”.

	Do not switch on your wireless data card when it is prohibited to use wireless device or when the wireless data card may cause interference or danger.
	Do not use your wireless data card while driving.
	Follow any rules or regulations in hospitals and health care facilities. Switch off your wireless data card near medical apparatus.
	Switch off your wireless data card in aircraft. The wireless data card may cause interference to control signals of the aircraft.
	Switch off your wireless data card near high-precision electronic devices. The wireless data card may affect the performance of these devices.
	Do not attempt to disassemble your wireless data card or its accessories. Only the qualified personnel is allowed to service or repair the wireless data card.
	Do not place your wireless data card and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your wireless data card. Radiation from the wireless data card may erase the information stored on them.
	Do not put your wireless data card in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your wireless data card and its accessories away from children. Do not allow children to use your wireless data card without guidance.



Observe any laws or regulations on the use of wireless data cards. Respect others' privacy and legal rights when using your wireless data card.

Contents

1 Overview	1
2 What is in Your Packing Box?	3
3 Getting to Know Your EC301/321/351	5
4 Getting Started	9
Computer Configuration Requirements	9
Preparing the EC301/321/351	9
5 Installation Guide	11
Installing the EC301/321/351 Manager	11
Installing the EC301/321/351 Hardware Driver	12
Removing the EC301/321/351	12
Uninstalling the EC301/321/351 Manager	13
6 The EC301/321/351 Manager GUI Description	15
Accessing the EC301/321/351 Manager GUI	15
Introduction to the Main Screen	16
7 Menu	19
8 Internet Service	21
Network Connection Settings	21
Accessing the Internet	22
Volume Statistic	23
9 Call Service	25
Making Calls	25

Contents

Answering Calls	27
Supplementary Services	28
Volume Adjustment and Mute	28
Shortcut Keys for Call Service	29
10 SMS	31
Sending and Receiving Messages	31
Message Storage Management	40
SMS Settings	41
11 Managing Your Contacts	43
Managing the Items in the Contacts	43
Importing/Exporting Contacts	46
12 Call Logs	49
Missed Calls	49
Received Calls	51
Dialed Calls	52
13 PC Fax	55
14 Settings and Information Query	57
PIN Code Management	57
System Settings	59
Diagnostics	62
15 Technical Parameters	63
16 FAQ on EC301/321/351 Data Card	65
17 Warnings and Precautions	67
Electronic Device	67
Hospital	67

Area with flammables and Explosives	67
Traffic Safety.....	68
Storage Environment.....	68
Children Safety	69
Operating Environment.....	69
Cleaning and Maintenance	69
Environmental Care	70
Emergency Call.....	70
Exposure to Electromagnetic Energy	70
18 Abbreviations and Acronyms.....	71

1 Overview

Welcome to use the HUAWEI EC301/321/351 Data Card. With the EC301/321/351, you can easily:

- Access the Internet
- Make and answer calls
- Send and receive messages
- Use the contacts
- Use the call logs service

2

What is in Your Packing Box

Your EC301/321/351 packing box contains:

- An EC301/321/351 data card
- An earphone
- A CD which contains a PDF document of user manual and a setup program.
- A quick start guide

3

Getting to Know Your EC301/321/351

The following is an illustration of your EC301/321/351:



Note:

This is a schematic drawing of an EC301/321/351 profile; your EC301/321/351 may be different from this schematic drawing. It is subject to your actual one.

Antenna

EC301/321/351 adopts built-in antenna that can be pulled out and adjusted in any directions freely. When using the EC301/321/351, you may adjust the angle of the antenna according to the actual signal reception situation so as to reach a most favorable signal reception quality.

Warning:

After pulling out the data card antenna, do not wobble it at will. Otherwise, the antenna might be damaged and cannot receive network signals due to strong impacts.

Earphone Jack

Please insert your earphone into the jack on the EC301/321/351 when you have call service.

Indicator

This LED indicates the status of your EC301/321/351. Normally, the indicator is green.

Indicator status	Meaning
The indicator is not shining.	EC321 is disabled.
The indicator is shining all the time.	EC321 is to startup.
Single-flash: The indicator is flashing every two seconds.	After the startup, EC321 is searching the network or EC321 can not find the network and need to authenticate by PIN or de-lock by PUK.
Double-flash: The indicator is shining two times every two seconds.	EC321 is in the state of stand-by or conversation.

Indicator status	Meaning
Quick flash: The indicator is flashing quickly with an interval of 0.1 second.	There is coming call and the tone is ringing, or EC321 is transferring data when using the data service.

4 Getting Started

Computer Configuration Requirements

To use the EC301/321/351, the following are recommendatory required for your computer:

- CPU: Pentium 4 , 1GHz or above
- Memory: 256MB RAM or above
- Hard Disk: 50MB free disk space
- OS: Windows XP or Windows 2000 operating system
- Data Card Interface: A type II PCMCIA Card slot, supporting CARDBUS
- Display Resolution: Display resolution of 800 by 600 pixels or above; that of 1024 by 768 pixels is recommended.

Note:

If the configuration of your computer is inferior to the recommended configuration, the running performance of the data card software may be affected.

 
Preparing the EC301/321/351

Note:


Whether a UIM card needs to be installed in your EC301/321/351, please consult your network operator.

4 Getting Started

- 1 Take out the EC301/321/351 from the protective cover.
- 2 Take out the UIM card slot from the EC301/321/351, and then place the UIM card into the slot, as shown in the following figure. And make sure that the UIM card is fully in place.

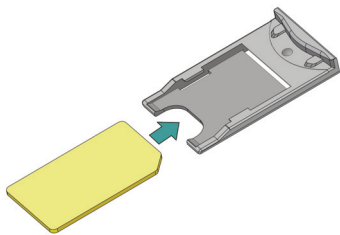

 - 3 As shown in the following figure, place the slot into the EC301/321/351.

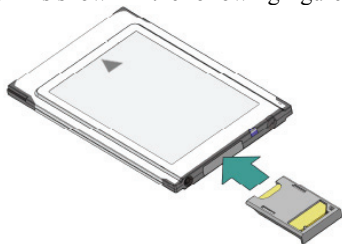

5 Installation Guide

The installation process differs slightly in different operating systems, such as Windows XP and Windows 2000. During the actual installation, if any step differs from what is described here, please follow the specific installation instructions. Here, we will take the Windows XP operating system as an example.

Note:


Please make sure that the EC301/321/351 Manager has been installed before the EC301/321/351 card is inserted into the computer.

Installing the EC301/321/351 Manager

- 1 Put the EC301/321/351 CD into the CD-ROM drive.
- 2 The setup program will start automatically, and the EC301/321/351 installation screen will appear later.

 
Note:

If the auto-run program does not start, go to the drive path, find the Setup.exe file and double click on it, and then the program is running.

- 3 The Choose Language dialog box appears. Select the installation language correspondingly and click **OK**.
- 4 Follow the instructions of the program.
- 5 Once the installation completes, the shortcut icon  for the EC301/321/351 Manager appears on the desktop.

Installing the EC301/321/351 Hardware Driver

- 1 Insert the EC301/321/351 which contains the UIM card into the PCMCIA slot of your computer:

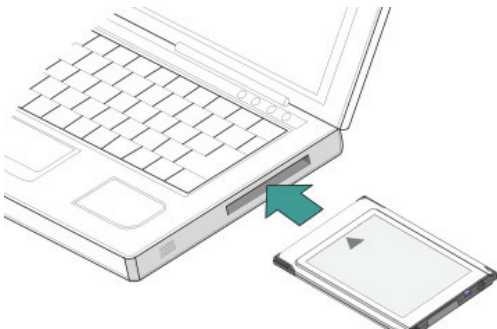


- 2 The system will find the new hardware and start the New Hardware Installation Wizard automatically.
- 3 If a prompt such as "The software failed to pass the Windows logo test" appears, click **Continue Anyway** to continue.
- 4 When the system prompts you that the installation is finished, click **Finish** to finish the installation of the EC301/321/351 driver.

Removing the EC301/321/351

If you want to remove the EC301/321/351 from the computer, please do it after having stopped it through the hardware removing feature provided by Windows.

When you want to remove the EC301/321/351 from your computer, follow the procedure below:

- 1 Double click  on at the lower right of your screen, a dialog box of "Safely Remove Hardware" will pop up.
- 2 Select "NEC PCI to USB Open Host Controller", and then execute the operation of stopping the use of the EC301/321/351.
- 3 When the system prompts you that it is safe to remove the device, pull out the EC301/321/351.


Uninstalling the EC301/321/351 Manager

Please uninstall the EC301/321/351 Manager through the Add/Remove function of Windows.

6

The EC301/321/351 Manager GUI Description

 
Accessing the EC301/321/351 Manager GUI

- 1 To start the program, double click the shortcut icon  of the EC301/321/351 Manager on the desktop.
- 2 If you are prompted to enter the PIN (Personal Identification Number) code, please enter the correct one and click **OK**.
You can try three times to enter your PIN code. If you failed to do that after three times, your UIM card would be locked. If this happens, use the PUK (PIN Unblocking Key) code to unlock it.
You can try 10 times to enter your PUK code. If you failed to do that after 10 times, your UIM card would not operate. If this happens, please contact your network operator.
- 3 When you failed to enter the PIN code or the PUK code, you can click **Cancel** to leap over the operation of PIN code validation. Then, the functions related to the UIM card such as connecting to the Internet, making and answering calls, sending and receiving text messages, and reading the messages recorded in the UIM card may be unavailable for you. However, you can still make emergency calls.
The PIN code and the PUK code are provided by your operator. For information about how to modify and enable/disable your PIN code, please refer to "PIN Code Management".

 
Introduction to the Main Screen

Main Screen Overview

The initial screen after the EC301/321/351 manager starts is as follows:

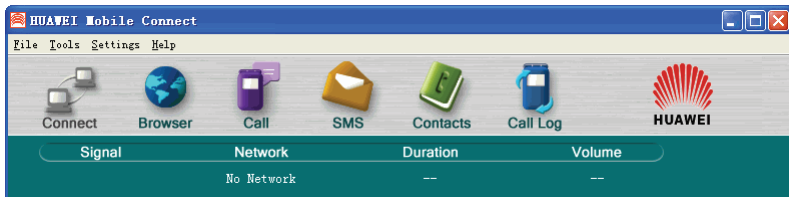



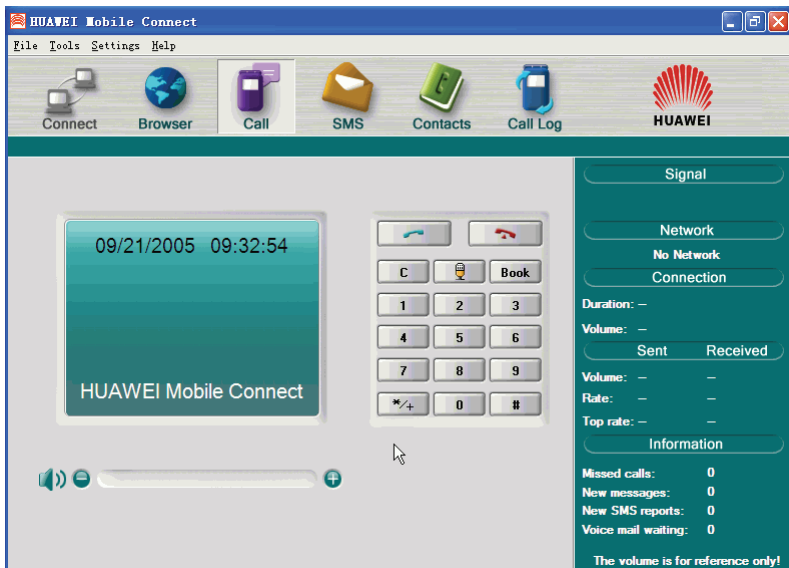



When you maximize the screen, it becomes the following:



Shortcut Icons and Keys

The list below describes the Shortcut icons and keys provided by the EC301/321/351 Manager.

Shortcut icon/key	Description
F1	Access the online help.
 /F2	Connect to/Disconnect from the network.
 /F3	Start the default Internet browser in your operating system.
 /F4	Access the Call service screen.
 /F5	Access the SMS screen.
 /F6	Access the Contacts service screen.
 /F7	Access the Call Log service screen.

Status Information on the Screen

The status information shown on the screen depends on the service that is going on. All the status that may appear and their descriptions are listed below:

When the screen is being initialized and in minimized status:

Status information	Description
Signal strength	Displays the current network type and signal strength. More erect bars indicate stronger signal.
Network	Information about the network operator
Duration of this connection	Displays the duration of the current data connection

Status information	Description
Volume of this connection	Displays the volume of the current data connection

When the screen is maximized:

Status information	Description
Signal strength	Indicates the current network type and signal strength.
Network	The information about the network operator
Connection	Includes: <ul style="list-style-type: none"> • The duration of the current connection • The data volume of the current connection • The volume, rate and the top rate of the current sending and received data
<p>Note:</p> <p>When a prompt for hibernate appears here, it indicates the data service is in hibernate status, and you can answer and make calls.</p>	
Missed calls	Displays the number of missed calls that have not been viewed in real time. If there are any missed calls, the number will blink.
New messages	Displays the number of new messages in real time. If there are any new messages, the number will blink.
New SMS reports	Displays the number of new SMS reports in real time. If there are any new SMS reports, the number will blink.
Voice mail waiting	Displays the number of Voice mail waiting in real time.

7

Menu

- 1 File
 - 1.1 Connect/Disconnect
 - 1.2 Import Contacts from File
 - 1.3 Export Contacts to File
 - 1.4 Contacts Storage Manager
 - 1.5 SMS Storage Manager
 - 1.6 Exit
- 2 Tools
 - 2.1 Open Browser
 - 2.2 Call
 - 2.3 SMS
 - 2.4 Contacts
 - 2.5 Call Log
 - 2.6 Volume Statistic
 - 2.7 Diagnostics
- 3 Settings
 - 3.1 Modify PIN Code
 - 3.2 PIN Code Protection
 - 3.2.1 Validate
 - 3.2.2 Enable

7 Menu

3.2.3 Disable

3.3 Options

3.4 SMS Settings

3.5 Network Connection Settings

4 Help

4.1 Help Topics

4.2 HUAWEI Online Support

4.3 About

8

Internet Service

Network Connection Settings

Creating a Profile

Select [Settings/Network Connection Settings] on the menu bar:

Step	Operation and description
1	Click New .
2	Enter a new profile name in the "Profile name" field.
3	Enter required relevant information for the settings.
4	Click Save to finish creating the profile.

Note:

- If you use the High-speed Packet Data Service to access the internet, please input #777 into the phone number. For more information, consult the network operator.
- If you use the Low-speed Data Service Access to access the internet, please consult the network operator for all the information to be inputted.

Deleting a Profile

Select [Settings/Network Connection Settings] on the menu bar:



Step	Operation and description
1	From the "Choose Profile Name" field, select a profile you want to delete.
2	Click Remove .


Modifying a Profile

Select [Settings/Network Connection Settings] on the menu bar:

Step	Operation and description
1	From the "Choose Profile Name" field, select a profile you want to modify.
2	Click Modify .
3	Make some changes.
4	Click Save .

Accessing the Internet

Step	Operation and description
1	Select [Settings/Network Connection Settings], choose a profile you want, and click OK .
2	Click on  to set up a connection.
3	After a prompt appears indicating that the connection is set up, click on  or start the Explorer on your computer, and then you can access the Internet.

Step	Operation and description
4	Click on  to disconnect the connection.

Once the connection is established, the following detailed information about the network connection is displayed on the main screen:

- The duration of the current connection
- The data volume of the current connection
- The volume, rate and the top rate of the current sending and received data

Volume Statistic

You can view the content of the volume statistic.

Select [Tools/Volume Statistic] on the menu bar:

- Last Volume Statistic: the volume of the last connection with the Internet, including sent and received volume statistic values and the duration of the connection.
- Total Volume Statistic: the total volume of all connections since the last operation of resetting you made, including sent and received volume statistic values and the duration of the connections.
- Last Reset Time: recording the last time that you execute the operation of resetting.
- Click **Reset** and you can clear the last volume statistic information and the total volume statistic information.

Note:

The above data of volume statistic is for your reference only.

9

Call Service

When you request the call service, you should insert the earphone to the jack on the EC301/321/351.

Note:


- You can use the control key on the earphone to answer or reject an incoming call conveniently;
- When the ring for an incoming call sounds, you can press the control key to answer the call;
- When the ring for an incoming call sounds, you can press and hold the control key to reject it;
- During a call, you can press and hold the control key to end the call.



Making Calls

The EC301/321/351 provides many easy and quick ways to make calls.


By Directly Entering a Telephone Number

You may make a call by entering directly a telephone number:

Step	Operation and description
1	Click on  or select [Tools/Call], the Call service screen is displayed.
2	Enter a telephone number by one of the following ways: <ul style="list-style-type: none">• Enter the number directly with the keyboard of your computer.• Click the telephone keypad on the Call screen.




Step	Operation and description
3	Click on  to make a call.
4	Click on  to hang up.

Note:

You can remove the number on the call screen digit by digit by pressing the  key. Pressing and holding down it can remove the whole number. You can also press the backspace key to do this.




By Choosing a Telephone Number from the Contacts List

You may make a call by choosing a telephone number from the Contacts list:

Step	Operation and description
1	Click on  or select [Tools/Call], the Call service screen is displayed.
2	Click on  , and the Contacts screen is displayed. Double click a contact or select a contact and then click Call : <ul style="list-style-type: none"> • If the contact you have selected has only one number, the number will appear on the call screen and be dialed out directly. • If the contact has two or more numbers, double click on this intended number from the pop-up Select Phone Number window or click Call after selecting the number; and the selected number will appear on the call screen and be dialed out directly.
3	Click on  to hang up.

By Selecting a Recently Dialed Number

You may make a call by selecting one from the recently dialed numbers:

Step	Operation and description
1	Click on  or select [Tools/Call], the Call service screen is displayed.
2	Click on  to display a list of 10 recently dialed numbers. Double click the intended telephone number or click Call after selecting the number, then the number will be dialed out directly.
3	Click on  to hang up.




Answering Calls

The default alert mode of the EC301/321/351 for incoming calls is by sound. You can select [Settings/Options] to set the mode: You can select the sound alert, and the display alert. For specific operations, please refer to "System Settings".

When you have any missed call, the amount of missed calls is displayed in real time under the status information on the main screen.

With the Setting of Sound Alert

When there is an incoming call, you will hear a sound alert:

Step	Action
1	Click on  or select [Tools/Call], the Call service screen is displayed.
2	Click on  to answer a call.
3	Click on  to hang up.

With the Setting of Display Alert

An alert window is displayed when a call comes. You can choose to:

Option	Description
Click Answer	Answer the call.
Click Reject/Ignore	Reject/Ignore the call.


Supplementary Services





The EC301/321/351 data card supports the following supplementary services:

- Call Forwarding-Busy
- Call Forwarding-Default
- Call Forwarding-No Answer
- Call Forwarding-Unconditional
- Call Waiting
- Three-Way Calling
- Caller ID Display
- Conference Call

To use the supplementary services, you need the operator to enable them. For details of the operation, please consult the network operator.

 


Volume Adjustment and Mute

Click on  or select [Tools/Call], the Call service screen is displayed. You can adjust the volume no matter when you are making a call or not. You can also mute your voice so that the person you are talking to cannot hear you even though the line is still active.

- To increase the volume, press .
- To decrease the volume, press .
- To mute your voice, press .
- To resume normal talk, press .

Shortcut Keys for Call Service


The following table shows the shortcut keys and their usages:

Shortcut keys	Description
Enter	<ul style="list-style-type: none"> • After entering a call number, press this key to make the call directly. • Press this key to answer an incoming call.
Ctrl+B	The shortcut key for  .
Ctrl+D	The shortcut key for  .
Ctrl+H	The shortcut key for  .
Ctrl++/-	The shortcut key for volume adjustment.

10 SMS

Sending and Receiving Messages

Writing New Messages

Click on  or select [Tools/SMS], the SMS (Short Message Service) screen is displayed:

Step	Operation and description
1	Click Write , the Write screen is displayed.
2	Enter telephone number. You can enter one or more numbers by one of the following ways: <ul style="list-style-type: none">• To enter one or more numbers directly: In the Contacts textbox, input numbers directly with semicolons ";" as the separator.• To select a number from the Contacts: Click Contacts, select one or more contact and click OK, and then select the number to send message in the pop-up dialog box and click OK..

Note:

- You can directly input the numbers or select them from the Contacts.
- When you select more than one contact, you can press **Shift** key to select a sequence of contacts, or press **Ctrl** to select them one by one
- If you select several receivers, click the **Apply to all items** check box to simplify the following operations

Step	Operation and description
3	Input the message, the character number is displayed in real time on the upper right of the Contacts text box. The maximum length of each message is 1000 characters.
4	<ul style="list-style-type: none"> • Click Send to send the message. After the message is sent out, it is saved automatically to the Outbox. If the sending fails, you will be prompted whether to send it again. If you cancel the sending, the message will be saved automatically to the Outbox. • Click Save to save the message to the Draft. • Click Clear to clear the contacts and the message you just input.

Note:

- The EC321 supports to send a message to a group of up to 20 numbers.
- When your message contains no more than 160 characters, it will be sent as one message. If this limit is exceeded, the message will be divided into several messages and sent one by one.
- When you use the SMS, you can always operate in this way to go to the Write screen or select contacts.

Inbox

The Inbox contains the messages you have received. It supports up to 1000 messages.

When the Inbox is full and a new message is coming, the earliest message in the Inbox is removed automatically to the Trash.


The amount of all the unread messages is displayed under the status information in the main screen in real time, if any such message exists.

Go to the SMS window and click **Inbox** to open the Inbox.



Going to the Inbox to View Your Messages

1 Go to the Inbox to View Your Messages Directly

You may go to the inbox to browse and view your messages:

Step	Operation and description
1	Click on  or select [Tools/SMS], the SMS screen is displayed.
2	Click Inbox to go to the Inbox and browse; double click a message to view the detailed contents.

There are two types of icons in the Inbox:


- : Standing for unread messages;
- : Standing for read messages.

2 View Messages When New Messages Come

According to the settings you have made on [Settings/Options], You can be alerted to a new message in different ways. You can select Sound alert or Display alert; for specific operations, please refer to "System Settings".

- With sound alert being set:

When a new message is coming, you can hear the sound alert:

Step	Operation and description
1	Click on  or select [Tools/SMS], the SMS screen is displayed.
2	Click Inbox to go to the Inbox and check new messages; double click a message to view the detailed contents.

- With display alert being set:

When a new message is coming, you can see the alert window.

Option	Operation and description
Click View on the alert window	The content of the message is displayed.
Click Close on the alert window	The content of the message is not displayed.

Replying Messages

You can reply to the sender directly in the Inbox.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Reply .
2	The telephone number of the original sender appears automatically in the blank field behind the "Contacts" and you can change it.
3	Input the content for the message you want to reply.
4	Click Send .

Forwarding Messages

You can forward messages received in the Inbox.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Forward .
2	Input the telephone number you want to forward to, or click Contacts to select the number.
3	The content of the message you want to forward appears automatically in the text box. You can edit it.
4	Click Send to forward the message.

Making Calls

You can call back the number of a message sender.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Call .
2	The call service screen is displayed, the number of the sender appears and it is dialed out automatically at the same time.

Removing Messages

You can remove the messages you have received.

Step	Operation and description
1	<ul style="list-style-type: none"> • Select one or more messages and click Delete; • Double click a message to go to the screen with the detailed message and click Delete.
2	The messages are removed to the Trash.

Saving Numbers

You can save the sender's numbers of the received messages to your contacts.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Get Number .
2	The new contact screen is displayed, and the sender number of this message appears automatically in the blank field behind Mobile Number.
3	Input the information for this number as required.
4	Click Save .

Outbox

The messages you have sent out are saved in the Outbox. Up to 1000 messages can be stored in this box. When the Outbox is full and an additional message is coming, the earliest message in the Outbox will be moved to the Trash automatically.

Access the SMS screen, click **Outbox** and the Outbox is displayed.

Viewing Messages in the Outbox

You may go to the Outbox to check and view messages:

Step	Operation and description
1	You may browse all the messages in the Outbox.
2	Double click a message to view the detailed contents.

Sending Messages

In the Outbox, you can send a new message to the receivers you have already sent a message to.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Send .
2	The telephone numbers of the receivers whom the message was sent to are displayed automatically in the blank column behind the "Contacts". You can change these numbers.
3	Input the content for the new message.
4	Click Send to send the new message.

Forwarding Messages

In the Outbox, you can forward the messages that have already been sent out.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Forward .
2	Input the telephone number you want to forward to in the blank column behind the "Contacts", or Click Contacts to select the number you want.
3	The content of the message you want to forward appears automatically in the text box. You can edit it.
4	Click Send to forward the message.

Making Calls

In the Outbox, you can dial out a number of a receiver whom a message has been sent to.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Call .
2	The call service screen is displayed, the number of the receiver whom this message was sent to appears on the screen and the number is dialed out automatically at the same time.

Removing Messages

You can remove the messages from the Outbox.

Step	Operation and description
1	<ul style="list-style-type: none"> • Select one or more messages and click Delete; • Double click a message to go to the screen with the detailed contents then click Delete.
2	The messages are removed to the Trash.

Saving Numbers

You can save the receiver number of a message in the Outbox to your contacts.

Step	Operation and description
1	Select a message or double click it to go to the screen with the detailed message and click Get Number .
2	The new contact screen is displayed, and the receiver number of this message appears automatically in the Mobile column.
3	Input the information for this number as required.
4	Click Save .

Draft

The new messages that you wrote on the Write window, if having been saved, will have been stored in the Draft. Up to 1000 messages can be stored in the Draft.

When you save these messages, only the contents of them are saved in the Draft, the numbers you specified are not saved.

Access the SMS screen, click **Draft** and the Draft screen is displayed.

Editing Messages

You can edit a message in the Draft:

Step	Operation and description
1	<ul style="list-style-type: none"> • Select a message and click Edit, or • Double click on a message item.
2	The Write screen is displayed, change the information and select Send , Save , or Clear .

Removing Messages

You can remove the messages in the Draft.

Step	Operation and description
1	Select one or more messages and click Delete .
2	The messages are removed to the Trash.

Trash

The messages you removed from the Inbox, Outbox and Draft are all stored in the Trash. Up to 1000 messages can be stored in the Trash.

When the Trash is full and another message is removed to it, the earliest message in this box is removed automatically.

Access the SMS screen, click **Trash** and the trash screen is displayed.

Restoring Messages

You can restore messages in the Trash to their original boxes.

Step	Operation and description
1	Select one or more messages and click Restore .
2	The messages are restored to the original boxes they stayed in before they were removed.

Removing Messages

If you remove a message from the Trash, it is permanently removed.

Step	Operation and description
1	Select one or more messages and click Delete .
2	If you are sure to do this, click OK and the messages are removed permanently.

Reports

The Reports contains all the message reports you have received. Up to 1000 message reports can be stored in the Reports. When this box is full and another report is coming in, the earliest report in this box is removed automatically.

Access the SMS screen, click **Reports** and the Reports box is displayed:



Step	Operation and description
1	Select one or more messages and click Delete .
2	If you are sure, click OK and this return notification message is removed.

Message Storage Management

Access [File/SMS Storage Manager], and then you can import the messages saved in the computer, UIM card and EC301/321/351 memory from one to another.

Note:

  - With the message storage management, you can copy/move messages between different memories in mailboxes of the same type. Copying and moving messages cannot be executed between the mailboxes of different types. You cannot copy/move messages between two message report boxes nor between two Draft boxes.
- The messages saved in EC301/321/351 memory will not be lost due to the changes of the UIM card and PC.
- WMI Box: Waiting voice message indicator box.

Step	Operation and description
1	From the window of SMS Storage Manager, you can select the source position and the aim position for the importing.
2	Select an operation mode: <ul style="list-style-type: none"> • Copy: the message at the source position will be kept • Move: the message at the source position will be deleted
3	Choose the message at the source position. Then, <ul style="list-style-type: none"> • Click on  to import the message from the left of the arrow to the right of it. • Click on  to import the message from the right of the arrow to the left of it.

SMS Settings

Select [Settings/SMS Settings], and the SMS settings screen is displayed:

Option	Description
Reports	You can enable or disable this function. When the function is enabled and you are sending a message, the network will send a message to inform you that the receiver has got the message you have sent.
Priority	Select the priority level for sending messages.

Note:

If no storage space is available in your UIM card for the reports, the "Request status report" option is invalid, please contact your UIM card provider for details.


11

Managing Your Contacts

The EC301/321/351 supports up to 1000 items in the Contacts.

You can create, modify and delete items in the Contacts. You can also send messages, make calls with the contacts. The EC301/321/351 also supports the import/export of the contacts for your convenience to manage the Contacts.

Managing the Items in the Contacts

Click on , or select [Tools/Contacts], and the contacts management screen is displayed.

Creating Items in the Contacts

Procedure:

Step	Operation and description
1	Click New .
2	Fill in the Name, Mobile Number, Family Phone Number, Office Phone number, E-mail addresses, and/or the Comments.
3	Click Save to save a new item in the Contacts.

Modifying Items in the Contacts

Procedure:

Step	Operation and description
1	Select the item you want to modify from the Contacts, double click on this contact or click Edit .
2	Make some changes.
3	Click Save .

Removing Items from the Contacts

Procedure:

Step	Operation and description
1	Select one or more items you want to remove from the Contacts, click Delete .
2	If sure, click OK .

Sending Messages

The EC301/321/351 allows you to select numbers from the contacts and send messages. The procedure is as follows:

Step	Operation and description
1	Select one or more items from the contacts.
2	Click Send , and then the EC301/321/351 picks up the numbers in the items you just select from the contacts, and the Write SMS screen is displayed.
3	The numbers retrieved appear in the blank column behind the "Contacts". Input the content for the message and click Send .

Making Calls

You can dial out the number you have selected from the contacts. The procedure is as follows:

Step	Operation and description
1	Select the item that contains the number you want to dial from the contacts, click Call .
2	<ul style="list-style-type: none"> • If the item you have selected contains only one telephone number, the Call service screen will be displayed automatically. • IF two or more telephone numbers are contained in the item you select, the Select Phone Number window is displayed and you are prompted to select one number. After doing that, click Call and the Call service screen is displayed.
3	The number you have selected appears on the Call service screen automatically, and at the same time, the number will be dialed out automatically.

Searching for Items in the Contacts

The EC301/321/351 provides the function of searching for wanted items in the Contacts.

Step	Operation and description
1	Click Search .
2	<ul style="list-style-type: none"> • Select a field item such as Name, Mobile, Family, Office or E-mail from the pull down list in the Condition area; • Enter relevant searching terms in the Value text box; • Choose Match Whole Word Only and/or Match Case for Matching Type.
3	Click Search Now to begin searching.
4	Click Stop Search to stop searching.

Importing/Exporting Contacts

Importing Contacts

The EC301/321/351 allows you to import the contacts items from a file in a specified format to the EC301/321/351 Contacts.

The file formats that the EC301/321/351 supports for importing are .txt and .csv.

Step	Operation and description
1	Select [File/Import Contacts From File].
2	From the Open window, select a file you want to import.
3	Click Open , and the items in the file are imported to the EC301/321/351 Contacts automatically.

Exporting Contacts

EC301/321/351 allows you to export the items from the EC301/321/351 Contacts to a file. The procedure is as follows:

Step	Operation and description
1	Select [File/Export Contacts To File].
2	Select whether to be compatible with the Outlook from the pop-up window according to the actual conditions, and then select OK .
Note:	
	If you need export the contacts to the Outlook, check the checkbox, otherwise, error may occur while exporting.
3	In the Save as window, input a file name with .csv as its extension.
4	Click Save , and the items in the EC301/321/351 Contacts are exported to the specified file.

Note:

 
 
Error occurs to the re-imported files if the exported files have been modified.

Contacts Storage Management

Access [File/Contacts Storage Manager], and then you can import the contacts saved in the computer, UIM card and EC301/321/351 Memory from one to another.


Note:

The contacts information saved in EC301/321/351 Memory will not be lost due to the changes of the UIM card and PC.

Step	Operation and description
1	From the window of Contacts Manager, you can select the source position and the aim position for the importing.
2	Select an operation mode: <ul style="list-style-type: none"> • Copy: the contacts information at the source position will be kept • Move: the contacts information at the source position will be deleted
3	Choose the contacts information at the source position. Then, <ul style="list-style-type: none"> • Click on  to import the contacts information from the left of the arrow to the right of it. • Click on  to import the contacts information from the right of the arrow to the left of it.

12 Call Logs

The call log contains information about dialed, received and missed calls. Each kind of log supports up to 1000 items.

Click on  or select [Tools/Call Log], the Call Log screen is displayed.

Missed Calls

Click **Missed calls**, and the Missed Calls screen is displayed.

Sending Messages

You can send messages to the numbers in the Missed calls items.

Step	Operation and description
1	Select one or more items.
2	Click Send , and then the EC301/321/351 automatically retrieves the numbers in the items you select, and the Write SMS screen is displayed.
3	The numbers retrieved automatically are displayed in the blank column behind the "Contacts". Input the content for the message and click Send .

Making Calls

You can dial out a number in a Missed calls item.

Step	Operation and description
1	Select an item.
2	Click Call .
3	The Call service screen is displayed, and the number you have selected appears automatically on the screen, and at the same time, the number will be dialed out automatically.

Saving Numbers

You can save numbers in the Missed calls items.

Step	Operation and description
1	Select an item.
2	Click Get Number .
3	The New contact screen is displayed. By default, the EC301/321/351 will save the number of this selected item to the Mobile column in the Contacts. You can change the number if you think that this number is not the one you want to save to the Mobile column.
4	Click Save .

Removing Items

You can remove items from the Missed calls.

Step	Operation and description
1	Select one or more items.
2	Click Delete . If you are sure, click OK .

Received Calls

Click **Received calls**, and the Received calls screen is displayed.

Sending Messages

You can send messages to the numbers in the Received calls items.

Step	Operation and description
1	Select one or more items.
2	Click Send , and the EC301/321/351 automatically retrieves the numbers in the items you select, and the Write SMS screen is displayed.
3	The numbers retrieved automatically are displayed in the blank column behind the "Contacts". Input the content for the message and click Send .

Making Calls

You can dial out a number in a Received calls item.

Step	Operation and description
1	Select an item.
2	Click Call .
3	The Call service screen is displayed, and the number you have selected appears automatically on the screen, and at the same time, the number will be dialed out automatically.

Saving Numbers

You can save numbers in the Received calls items.

Step	Operation and description
1	Select an item.
2	Click Get Number .
3	The New contacts screen is displayed. By default, the EC301/321/351 will save the number of this item to the Mobile column in the Contacts. You can change the number. if you think that this number is not the one you want to save to the Mobile column.
4	Click Save .

Removing Items

You can remove items from the Received calls.

Step	Operation and description
1	Select one or more items.
2	Click Delete . If you are sure, click OK .

Dialed Calls

Click **Dialed calls**, and the Dialed calls screen is displayed.

Sending Messages

You can send messages to the numbers in the Dialed calls items.

Step	Operation and description
1	Select one or more items.
2	Click Send , and the EC301/321/351 automatically retrieves the numbers in the items you select, and the Write SMS screen is displayed.
3	The numbers retrieved automatically are displayed in the blank column behind the "Contacts". Input the content for the message and click Send .

Making Calls

You can dial out a number in a Dialed calls item.

Step	Operation and description
1	Select an item.
2	Click Call .
3	The Call service screen is displayed, and the number you have selected appears automatically on the screen, and at the same time, the number will be dialed out automatically.

Saving Numbers

You can save numbers in the Dialed calls items.

Step	Operation and description
1	Select an item.
2	Click Get Number .
3	The New contacts screen is displayed. By default, the EC301/321/351 will save the number of this item to the Mobile column in the contacts. You can change the number if you think that this number is not the one you want to save to the Mobile column.
4	Click Save .

Removing Items

You can remove items from the Dialed calls.

Step	Operation and description
1	Select one or more items.
2	Click Delete . If you are sure, click OK .

13 PC Fax

The EC301/321/351 supports the service of PC fax. You can select PC fax software freely.

Step	Operation and description
1	Be sure that you have installed the management program for data card completely and that the data card is inserted into the computer;
2	Install the fax software on the computer;
3	Select “HUAWEI Mobile Connect-3G Modem” as the modem for the PC fax software;
4	Follow the relevant descriptions of the PC fax software to operate the fax.

Note:

This function needs to be supported by the network. For more information, please ask the local network operator.

14

Settings and Information Query

PIN Code Management

The PIN code is used to prevent your UIM card from the invalid uses. Generally, the PIN code is provided along with your UIM card. You can change your PIN code, and you can also enable/disable the PIN feature. If you enable the feature, you must enter a PIN code when the EC301/321/351 starts up.

PIN Code Modification

You can change your PIN code:

Step	Operation and description
1	Select [Settings/Modify PIN Code].
2	Enter the current PIN code and the new PIN code, and then enter the new code again to confirm it.
3	Click OK to modify it.

PIN Code Validation

After accessing the EC301/321/351 management program, you can still use the function of PIN code validation:

Step	Operation and description
1	Select [Settings/PIN Code Protection].
2	Selecting "Validate", you can access the PIN code validation flow which is the same as that when the EC manager starts. For more information, please refer to the descriptions on page 15.

PIN Code Protection

You can enable/disable the PIN feature. If the feature is enabled, you must enter a PIN code when the EC301/321/351 starts up. Otherwise, you need not do this.

Step	Operation and description
1	Select [Settings/PIN Code Protection].
2	Select "Enable" or "Disable". After that, you should enter the PIN code according to the prompt. <ul style="list-style-type: none"> • Enable: You must enter the PIN code when the EC301/321/351 starts up. • Disable: You need not enter the PIN code when the EC301/321/351 starts up.

System Settings

The system settings include the startup mode of the EC301/321/351 manager, the alert mode for incoming calls, the alert mode for messages, and so on.

Select [Settings/Options].

Startup

Selecting the “Startup Settings” tab, you can set the EC301/321/351 manager to start along with the Windows, to be displayed in the minimized mode when it starts, or otherwise.

Option	When the box is checked
Launch software on Windows start up	The EC301/321/351 manager starts along with the Windows.
Start main window minimized	The program is displayed in the minimized mode when it starts.
When starting, check unread message	When the program starts, it will check the unread messages in the UIM card and the data card.

Call Alerts Settings

Selecting the “Prompts” tab, by default, the EC301/321/351 sounds whenever a call comes, meanwhile, an alert window can also be displayed if you select the appropriate option.

Option	Description
Alert window	Check the checkbox, and an alert window is displayed whenever a call comes. You can: <ul style="list-style-type: none"> • Click Answer to answer the call, or • Click Reject to reject the call.
Sound	<ul style="list-style-type: none"> • Click Browse to select a sound file. • Click Play to hear the sound. Once a sound file is selected, it plays on the sound card of computer whenever a call comes.
Earphone alert tone	Check the checkbox, the ring sounds on the earphone of data card when a call comes.

Note:

The alert files can be in *.wav or *.mid form.

Message Alerts Settings

Selecting the “Prompts” tab, the options you can select for the message alert are sound alert and display alert.

Option	Description
Alert window	<p>Check the box, and an alert window is displayed whenever a new message comes. You can:</p> <ul style="list-style-type: none"> • Click View to see the new message, or • Click Close to leave the message unseen.
Alert tone	<ul style="list-style-type: none"> • Click Browse to select a sound file. • Click Play to hear the sound. <p>Once a sound file is selected, it plays on the earphone of data card whenever a new message comes.</p>

Note:

The alert files can be in *.wav or *.mid form.

Standby/Hibernate Settings

Enter the “Standby/Hibernate” tab, and then you have the following options:

Option	Description
Prevent Standby or Hibernate	To prevent the computer from standby or hibernate mode.
Allow Standby or Hibernate	To allow the computer to start the standby or hibernate mode.

Note:

Select [Settings/Options], and then you can set the default values on each tab. To recover the current default configuration, click **Default**.

Diagnosics

EC301/321/351 allows you to query information about the EC301/321/351 and the UIM card.

Select [Tools/Diagnosics]:

- Messages in Wireless Device: This information is displayed in the format of "XX/YY", here XX indicates the amount of the existing messages, and YY indicates the capacity of the data card.
- Contacts in Wireless Device: This information is displayed in the format of "XX/YY", here XX indicates the amount of the existing contacts, and YY indicates the capacity of the data card.
- Messages in UIM: This information is displayed in the format of "XX/YY", here XX indicates the amount of the existing messages, and YY indicates the capacity of the UIM card.
- Contacts in UIM: This information is displayed in the format of "XX/YY", here XX indicates the amount of the existing contacts, and YY indicates the capacity of the UIM card.
- ESN Number: the ESN number of the EC301/321/351.
- API Version: the version of the API.
- Firmware Version: the board software version of the EC301/321/351.
- Hardware Version: the hardware version of the EC301/321/351.

15

Technical Parameters

Item	Description
PC Card Type	Type II, 68 Pin, CARDBUS
Radio System	CDMA2000 1x: <ul style="list-style-type: none">• EC301: 450MHz• EC321: 800MHz• EC351: 1900MHz
Radio Frequency band	<ul style="list-style-type: none">• EC301: 450MHz Band Block A: Reverse Link: 452.5MHz to 457.5MHz; Forward Link: 462.5MHz to 467.5MHz.450MHz Band Block C: Reverse Link: 450.0MHz to 454.8MHz; Forward Link: 460.0MHz to 464.8MHz.• EC321: Reverse Link: 824MHz to 849MHz; Forward Link: 869MHz to 894MHz.• EC351: Reverse Link: 1850MHz to 1910MHz; Forward Link: 1930MHz to 1990MHz.
Radio power output	>200mW

Item	Description
Services	<ul style="list-style-type: none">• Voice Service: 8K EVRC• High Speed Packet Data Service: Maximum Data Rate 153.6kbps/Reverse Link, 153.6kbps/Forward Link• Asynchronous Data Service: Maximum Data Rate 14.4kbps• PC Fax: Maximum Data Rate 14.4kbps• Short Message Service
Size(D×W×H)	88.4mm×54mm×5mm
Weight	Approx. 50g
Battery	Powered via the PC card slot, uses laptop battery
Operating temperature	-10°C to 55°C
Storage temperature	-20°C to 65°C

16

FAQ on EC301/321/351 Data Card

How to Judge Whether the EC301/321/351 Data Card has been Installed Correctly?

After installing the EC301/321/351 Data Card, two devices are displayed in the device manager, namely, the “HUAWEI Mobile Connect-3G Modem” and the “HUAWEI Mobile Connctet-3G Application Interface”.

Check whether these two devices are installed correctly at first. If a yellow exclamatory mark or other signs appear in front of the devices, it means that the data card has not been installed correctly, and you need to retry.

After Installing the EC301/321/351 Management Software, the System Always Prompts “Data Card does not Exist”. Why?

Probably you have inserted the data card before the completion of installing the EC301/321/351 management software. Pull out the data card and insert it after the installation of EC301/321/351 management software is completed. Then, install the EC301/321/351 hardware driver by following the guide for hardware installation.

After installing the EC301/321/351 Management Software, the System Always Prompts “Unidentified USB device”. Why?

If the prompts “Unidentified USB device” occurs to the task bar, your data card still can be use.

What Shall I Do if I cannot Access the Internet?

- 1 Check whether you have activated the wireless online service at first. Please ask the local network operator for how to activate it;
- 2 If you are sure that the wireless online service has been activated, please refer to “Internet Service” to implement relevant settings.

Only Part of the Message is Displayed After I Use the “Paste” Function to Edit it. Why?

While editing the message, at most 1000 characters are supported in the text. If the quantity of the pasted information exceeds the limitation, the exceeding part will be deleted automatically.

When a Message is received, no Prompting Window Appears. Why?

Because you have not set the function of “Display alerts when a message is received”.

Select [Settings/Options], and then check the “Display alerts when a message is received” from the “Message alerts settings”.

How to Dial the Telephone Numbers with “+” Sign?

Double-click the “*/+” key on the telephone service interface, or input it through the PC keyboard.

Why cannot I Paste the Telephone Numbers?

Only such telephone numbers as “0123456789##*+” are legal. Confirm no other character is contained in the cut or pasted texts.

17

Warnings and Precautions

Electronic Device

- Switch off your wireless data card near high-precision electronic devices. The wireless data card may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer and confirm whether the radio wave affects the operation of this electronic device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your wireless data card into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your wireless data card at places for medical treatment where it is prohibited to use wireless devices.

Area with flammables and Explosives

In the area with inflammables and explosives, disconnect your wireless data card from your PC and turn off the PC to avoid explosion and fire. The area with inflammables and explosives include:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of Explosives
- Area with the sign of Turn off bi-direction wireless equipment.

- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe the relevant regulation of the area or country where you are. Do not use your wireless data card while driving to avoid traffic accident.
- Secure the wireless data card on its holder. Do not place the wireless data card on the seat or other places where it can get loose in a sudden stop or collision. Use the wireless data card after the vehicle stops at a safety place.
- Do not place the wireless data card over the air bag or in the air bag outspread area. Otherwise, the wireless data card may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. On or nearby a plane, disconnect the wireless data card from your PC and turn off the PC. In areas where it is prohibited to use wireless device, do not use the wireless data card. Otherwise, the wireless signal of the wireless data card can disturb the plane control signals. Disconnect the wireless data card from your PC and turn off the PC before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the wireless data card. Radiation from the wireless data card may erase the information stored on them.
- Do not put your wireless data card in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion can be caused.
- Do not leave your wireless data card in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion can be caused.
- If your PC is equipped with earphones, do not place sharp metal objects such as pins near the earphones. The earphones may attract these objects and hurt you when you are using the wireless data card.
- Do not put your wireless data card in the pocket on the back side of trousers or a skirt to avoid wireless data card damage while seating.

Children Safety

- Put your wireless data card in places beyond the reach of children. Do not allow children to use the wireless data card without guidance.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The wireless data card is not water-resistant. Keep it dry. Protect the wireless data card from water or vapor. Do not touch the wireless data card with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock can be caused.
- Do not use the wireless data card in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit can be caused.
- Do not connect or disconnect the wireless data card when it is near your ears to avoid negative impact on your health.
- When you carry or use the wireless data card, keep it at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- On a thunder stormy day, do not use your wireless data card outdoors.
- Do not touch the wireless data card when it is running. This may affect call quality and cause the wireless data card to operate with more power.
- The wireless data card may interfere nearby TV sets and radios.
- In accordance with the international standards for radio frequency and radiation, use wireless data card accessories approved by Huawei only.

Cleaning and Maintenance

- Before you clean or maintain the wireless data card, disconnect your wireless data card from your PC and turn off the PC. Otherwise, electric shock or short-circuit may be caused.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the wireless data card. Otherwise, part damage or a fire can be caused. You can clean the wireless data card with a piece of soft antistatic cloth that is a little wet.

- Do not scratch the shell of the wireless data card. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the wireless data card at once and go to see a doctor.
- If the wireless data card or any of its fittings does not work, turn to the local authorize service center for help.

Environmental Care

Please observe the local regulations regarding the disposal of your packaging materials, old wireless data card and please promote their recycling. Do not dispose of old wireless data card in a dustbin or fire. Otherwise, explosion can be caused

Emergency Call

You can use your wireless data card for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the wireless data card for essential communications.

Rules for Exposure to Radio Frequency Energy

This product is designed not to exceed the limits for exposure to electromagnetic energy set by ICNIRP (International Commission on Non-ionizing Radiation Protection). The limits include a margin designed to assure the safety of all persons, regardless of age and health. The rules for exposure to electromagnetic energy adopt SAR value as the basis of judgment. The SAR value is measured in a standard mode. That is, this wireless product transmits with maximum transmit power in the bands it use during the measuring. The SAR value limit suggested by ICNIRP is 2W/kg (10 g Average).

The SAR limit adopted by the 1999/519/EC is 2.0 watts/kilogram (W/kg) averaged over ten gram of tissue. The highest SAR value for this device type when tested is 0.614 W/kg.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use is 0.929 W/kg.

18

Abbreviations and Acronyms

C

CDMA Code Division Multiple Access

E

ESN Electronic Serial Number

EVRC Enhanced Variable Rate Coder

G

GUI General User Interface

P

PIN Personal Identification Number

PUK PIN Unblocking Key

S

SMS Short Message Service

U

UIM User Identity Module