

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions

 HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations


Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Appearance

Note:

The figures in this guide are provided for your reference only.

Front View

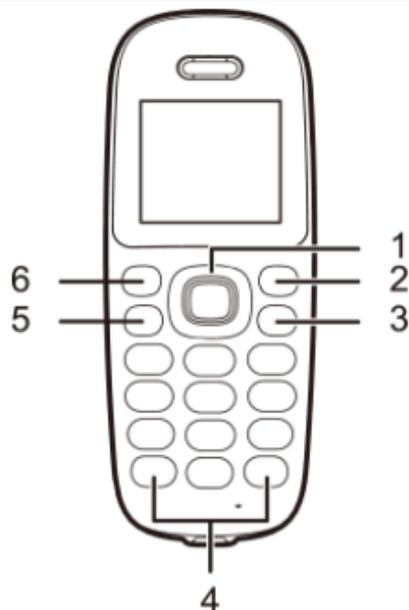

No.	Press...	To...
1	Navigation keys ▲ ◀ OK ▶ ▼	<ul style="list-style-type: none">• Access the main menu by pressing the OK key in standby mode.• Access a shortcut menu by pressing the corresponding navigation key in standby mode.• Adjust the volume by pressing the navigation keys during a call.
2	Right function key	Select the option displayed in the lower right corner of the screen.

No.	Press...	To...
3	End key 	<ul style="list-style-type: none"> • End or cancel a call. • Power the phone on or off by pressing and holding the key. • Turn the backlight on or off in standby mode. • Return to the standby mode.
4	Number and symbol keys	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Number keys (2–9): Speed-dial a phone number by pressing and holding a key in standby mode. • # key: Switch between text input methods in editing mode. • * key: Display the symbol list in editing mode.
5	Call/Send key 	<ul style="list-style-type: none"> • Make or answer a call. • View the call log in standby mode.
6	Left function key	Select the option displayed in the lower left corner of the screen.


Screen Icons

Icon	Description	Icon	Description
	Signal strength		Battery level
	Alarm clock		Call in progress
	CDMA2000 1x network		Roaming

Installation

(Optional) Installing a UIM Card

Ensure that the phone is powered off and disconnected from the power adapter. When installing a User Identity Module (UIM) card, ensure that the golden contacts of the UIM card are facing downward and that the beveled edge of the UIM card is properly aligned with that of the UIM card slot. Then check that the UIM card is completely inserted.

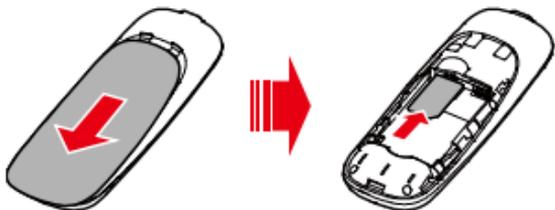


Note:

Do not frequently remove the UIM card when using the phone.

Installing the Battery

Ensure that the phone is powered off and disconnected from the power adapter. When installing the battery, ensure that the golden contacts of the battery are in good contact with those in the battery slot.

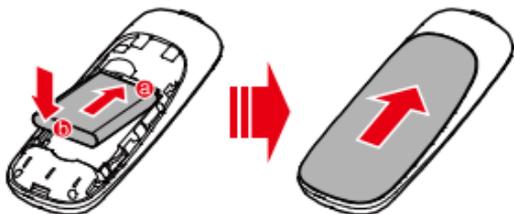

Note:

If the phone will not be used for a long time, remove the battery from the phone.

Charging the Battery

- Method 1:



- Method 2:



Note:

- When the phone is delivered, the battery power is lower. Therefore, charge the phone for a while and then power on the phone the first time you use it.
- When you plug your phone into or out of the charging dock, hold the charging dock with one hand and the phone with the other. Ensure that moderate strength is exerted.

Powering On the Phone

To power on the phone, press and hold the end key until the screen lights up.

Note:

Press and hold the end key to power off the phone.

Call Functions

Making a Call

1. In standby mode, press the number keys to enter a phone number.
2. Press the call key to dial the number.
3. Press the end key to end the call or cancel the dialing.

Note:

- In standby mode, press the call key to view the call log. Find the desired number in the call log, and then press the call key dial the number.
- Find the desired number in the phonebook, and then press the call key to dial the number.

Answering or Rejecting a Call

When there is an incoming call, press the call key to answer the call; press the end key to reject the call.

Messages

Creating a Message

1. Select **Messages > Create Message**.
2. Edit the message.
3. Press the **OK** key and then add a recipient using the following methods:
 - Enter the recipient's phone number.
 - Add the recipient from the phonebook.
4. Press the **OK** key to send the message.

Reading a Message

The phone stores received messages in the inbox.

1. Select **Messages > Inbox**.
2. Press the Up or Down navigation key to scroll to a message in the list.
3. Press the **OK** key to open and read the message.
4. Press the left function key to manage the message.

Text Input Methods

Switching Between Input Methods

In editing mode, press the **#** key to switching between input methods.

Note:

- In editing mode, press the right function key to delete the character to the left the cursor; press and hold the right function key to delete all characters.
- In "En", "ABC" and "abc" input modes, press the **0** key to enter a space.
- In any input mode, press the * key to display the symbol list.

Predictive English Input ("En")

1. Press the keys labeled with the letters required to spell the desired word once according to the spelling sequence of the word.
As you enter letters, the phone attempts to predict the desired word and displays candidate words.
2. Press the Up or Down navigation key to scroll to the desired word.
3. Press the Left or Right navigation key to enter the word, or press the **0** key to enter the word followed by a space.

Traditional English Input ("ABC" or "abc")

In "ABC" or "abc" text input mode, press the number keys to enter letters. Press a number key repeatedly until the desired character appears. If the next letter you want to enter is on the same key as the current one, wait until the current letter is entered, and then enter the next one.

Number Input

In "123" input mode, enter a desired number by pressing the number key.

Settings

To configure and customize your phone settings, select **Menu > Settings**.

Phone Lock

To set the phone lock, select **Settings > Security Settings > Phone Lock**. You can change the default phone lock code (**0000**) to a personalized password.

Note:

When restoring the phone to factory settings, you must enter the correct phone lock code.

Keypad Lock

In standby mode, press and hold the **#** key to lock the keypad.

In standby mode, press the Left function key and then the ***** key to unlock the keypad.

(Optional) PIN and PUK

A Personal Identification Number (PIN) protects your UIM card from unauthorized use. A PIN Unblocking Key (PUK) is used to change a blocked PIN. If you enter an incorrect PIN a pre-defined number of consecutive times, your UIM card will be locked and the phone asks you to enter the PUK to unlock it. Both the PIN and the PUK are supplied with the SIM card. For details, contact your service provider.

FAQs

If problems occur during the use of the phone, refer to the following sections for a proper solution. If a problem persists, contact your phone vendor.

Phone Cannot Be Powered On

1. Remove the battery cover and check whether the battery is installed properly.
If the battery is properly installed, a possible cause for the problem is that the battery power is low.
2. Charge the battery, and then try to power on the phone.

No Information Is Displayed on the Phone Screen

If the phone is not used for a long time and the battery runs out of power, the phone may not display any information when it is being charged. This is a normal phenomenon. The phone can be powered on after the battery is charged for a while.

Battery Cannot Be Charged

1. Check that the phone and the power adapter are connected properly.
2. Check that the power adapter and the power socket are connected properly.
3. Replace the power adapter or the battery with a new one of the same model.

Signal Strength Is Weak

1. Check that the UIM card is installed properly.
2. Place the phone at a location where strong signals can be received.

Call Volume is Too High or Too Low

During a call, press navigation keys to adjust the volume.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.

- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine.

Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an

aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.628 W/kg, and when properly worn on the body is 0.497 W/kg.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.