

# **HUAWEI F361**

# **USER GUIDE**

#### Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its artiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

#### Trademarks and Permissions





are trademarks or registered trademarks

of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

#### Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

#### DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

#### Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.


#### Privacy Policy

Please refer to our privacy policy on our websites for the information about how we protect your personal information.

# **Getting Started**

The figures in this document are provided only for your reference. The phone that you have purchased may differ from that shown.

# Front View

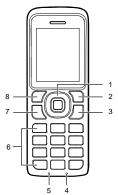

1	Navigation keys	<ul> <li>In standby mode, press OK to access the main menu.</li> <li>In standby mode, press a navigation key to access specific shortcut menu.</li> <li>During a call, press left or right navigation key to adjust the call volume.</li> </ul>	
2	Right function key	Press this key to select the menu option in the lower right corner of the screen.	
3	End key	<ul> <li>End a call or reject an incoming call.</li> <li>Press and hold this key to power on or off the phone.</li> <li>In standby mode, press this key to turn on/off the display screen.</li> <li>In non-standby mode, press this key to return to standby mode.</li> </ul>	
4	Microphone	Microphone.	
5	Power indicator	The power indicator is steady red when the phone is connected to a power supply.	
6	Number and Symbol keys	<ul> <li>Press the keys to input numbers or characters.</li> <li>Keys 1: In standby mode, press and hold the 1 key to access voicemail.</li> <li>Keys 2 to 9: In standby mode, press and hold these keys for speed</li> </ul>	

		dialing.		
		<ul> <li>Key * : In edit mode, press this key to</li> </ul>		
		open the symbol list. In standby mode, activate or deactivate the <b>Silent</b> profile by pressing and holding this key in standby mode. When keypad is locked, press left function key and this key to unlock.		
		<ul> <li>Key # : In edit mode, press this key to</li> </ul>		
		switch the input method. In standby mode, press and hold this key to lock keypad.		
7	Send key	<ul> <li>Press this key to make or receive calls.</li> </ul>		
		<ul> <li>In standby mode, press this key to browse through the call history.</li> </ul>		
8	Left function key	Press this key to select the menu option in the lower left corner of the screen.		


## lcons

¥dl	Signal strength		Battery level
ী	Missed calls	Β	Unread messages
٠	Alarm activated	*	Silent profile activated
Ů	Keypad locked		

# Installation

# Installing the SIM Card

Before installing the SIM card, ensure that the phone is powered off and disconnected from the power adapter. When installing the SIM card, ensure that the gold contact area faces down, that the beveled edge of the SIM card aligns with that of the SIM card slot, and that the SIM card is fully inserted.

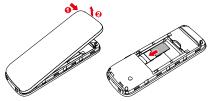


小

Do not frequently remove or insert the SIM card when using the phone.

## Installing the Battery

Before installing the battery, ensure that the phone is powered off and disconnected from the power adapter. Ensure that the battery is correctly installed and that the battery poles are not reversed.

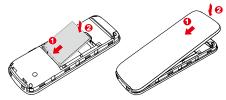

**Charging the Battery** 

Method 1:

Method 2:



- If you plan to leave the phone unused for a long period, you must remove the battery from the phone.
  - The battery supplies power for only a limited period. Ensure that the battery has been fully charged before using the phone without the line power supply connected.
  - If your battery power is exhausted or the battery is unused for a long period, the phone screen may not be able to light up when you charge the battery. This is normal. The phone will be ready for use after being charged for a while.

# **Powering On the Phone**

To power the phone on, press and hold the 23 until the screen lights up.

In standby mode, press and hold stop to power off the phone.

# **Call Functions**

# Making a Call

- 1. In standby mode, press the number keys to input the phone number.
- 2. Press to call the number.
- 3. Press 2 to end a call or cancel the dialing.
- In standby mode, press to view the call history. Select number and press to make the call.
  - In Phonebook, select a contact and press to make the call.

# Answering or Rejecting a Call

When there is an incoming call, press to answer the call; press to reject the call.

# Message

# Creating a Message

- 1. Select Message > New message.
- 2. Write the message.
- 3. Press (or and then add a recipient using the following methods:
- Enter the recipient's phone number.
- Add the recipient from the phonebook.
- 4. Press **OK** to send the message.

# Reading a Message

The phone stores received messages in the inbox.

- 1. Select Message > Inbox.
- 2. Press the up or down navigation key to scroll to a message in the list.
- 3. Press  $(\mathbf{OK})$  to read the message.
- 4. Press (-/ to manage the message.

# Input Methods

# Switching Between Input Methods

In edit mode, press # key to switch between text input methods.

- In edit mode, press to delete the character to the left of the cursor, press and hold to delete all characters.
  - In the s ABC or s abc input mode, press 0 key to enter a space. In the ABC, abc or Abc input mode, press 0 key once to enter a space, twice to enter "0".
  - In any input mode, press \* key to open symbol list.

## s ABC/s abc

Enter a word in **s ABC** or **s abc** input mode, do the following steps:

 Press the keys labeled with the letters required to spell the desired word once according to the spelling sequence of the word.

As you enter letters, the phone attempts to predict the desired word and displays candidate words.

- 2. Press up or down navigation key to select the desired word.
- Press the left or right navigation key to confirm the selection and press OK to enter the word. You can also press the 0 key to confirm the selection to enter the word followed by a space.

# ABC/abc

In **ABC** or **abc** input method, press the number keys to enter letters. Press a number key repeatedly until the desired character appears. If the next letter you want to enter is on the same key as the current one, wait until the current letter is entered, and then enter the next one.

# 123

- In 123 input method, press number keys to input numbers.
- In s ABC/s abc/ABC/abc input method, press and hold a number key to enter the number.

# Symbols

- 1. In any input mode, press \* key to display a symbol list.
- 2. Press the navigation key to select the desired symbol.
- 3. Press  $\frown$  to enter the symbol.

# FM Radio (Optional)

To listen to the radio, select **Tools** > **FM radio**. Press the left or right navigation key to change channel, press the up or down navigation key to decrease or increase the volume.

You can select Options for the following options:

- Channel list: To display the channel list.
- Manual input: To input a frequency manually.
- Auto search: To search channels automatically.
- Settings: To set whether to play the radio in background.
- Power: To turn the FM radio on/off.

# Settings

# Phone Lock

To set the phone lock, select **Settings** > **Security settings** > **Phone security**. You can change the default code (**1234**) to any number string of four to eight digits.



When restoring the phone to factory settings, you must enter the correct phone lock code.

# Keypad Lock

In standby mode, press and hold # key to lock the keypad.

When the keypad is locked, press (-/ first, and then press \* key to unlock the keypad.

If automatic keypad lock function is activated, the keypad is automatically locked when the phone leaves unused for a period longer than the preset period in standby mode.

# **PIN and PUK**

Personal identification number (PIN) code helps effectively prevent unauthorized use of your SIM card.

Personal unblocking key (PUK) code helps change the locked PIN code.

If you enter the wrong PIN code for three times, your SIM card will be locked. In this case, you need to enter the PUK code to unblock the locked PIN code.

PIN code and PUK code are provided together with the SIM card. For details, consult your service provider.

# Warnings and Precautions

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## Electronic Device

Power off your device when use is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

## Accessories

- Using an unapproved or incompatible charger or battery may cause fire, explosion or other hazards.
- Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other types of batteries, chargers, or accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please contact your retailer for information about the availability of approved batteries, chargers, and accessories in your area.

## Charger safety

- Unplug the charger from electrical outlets and the device when not in use.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not drop or cause an impact to the charger.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.

- If your device has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.

## Battery safety

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Do not solder battery poles or dismantle the battery. Doing so may lead to electrolyte leakage, excessive heat, fire, or explosion.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.
- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, and may be damaged, take it to an authorized service center for inspection.

- Improper battery use may lead to fire, explosion, or other hazards.
- Dispose of used batteries in accordance with local regulations.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.
- If the battery is improperly replaced, it may explode. Recycle or dispose of used batteries according to local regulations or refer to your device instructions.
- If the device standby and talk time shortens significantly, replace the battery.

### **Operating environment**

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using or charging your device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.
- Avoid touching the antenna when you are on a call. Touching the antenna affects call quality, increases power consumption, and reduces talk and standby time.
- Ideal operating temperatures are 0° C to 45° C. Ideal storage temperatures are -20° C to 60° C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- Do not place your device or batteries on or in heating devices, such as microwave ovens, stoves, water heaters, or radiators. Batteries may explode if overheated.

- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not use your device's camera flash directly in the eyes of people or pets. Otherwise temporary loss of vision or damage to the eyes may occur.
- Do not allow children or pets to bite or suck the device or battery. Doing so may result in damage or explosion.

## Child's safety

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

#### Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.

#### Areas with flammables and explosives

 Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.

• Do not store or transport the device in containers with flammable liquids, gases, or explosives.

### Traffic security

Observe local laws and regulations while using the device. If using the device while driving a vehicle, observe the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not hold the device while driving. Use hands-free accessories.
- When you must make or answer a call, pull of the road safely and park the vehicle first.
- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding. Using wireless devices in an aircraft may disrupt wireless networks, present a hazard to aircraft operation, or be illegal.

### **Cleaning and maintenance**

- Before you clean or maintain the device, power it off, and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or charger. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and charger.

- Keep the device and accessories dry. Protect them from water and humidity. Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- Avoid collision, which may lead to battery leakage, device malfunctions, overheating, fire, or explosion.
- Do not place magnetic storage media, such as magnetic cards and floppy disks, near the device. Radiation from the device may erase the information on magnetic storage media.
- Do not expose your device, battery, or charger to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion. Battery performance is affected at temperatures lower than 0° C.
- Do not place sharp metal objects, such as pins, near the earpiece or speaker. The earpiece may attract these objects and result in injury.
- Do not dismantle the device or accessories. This voids the warranty and releases the manufacturer from liability for damage.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact an authorized service center.

## Emergency calls

The availability of emergency calls is subject to your cellular network quality, service provider policy, and local laws and regulations. Never rely solely on your device for critical communications like medical emergencies.

## **Disposal and recycling information**



This symbol (with or without a solid bar) on the device, batteries (if included), and/or the packaging, indicates that the device and its electrical accessories (for example, a headset,

adapter, or cable) and batteries should not be disposed of as household garbage. These items should not be disposed of as unsorted municipal waste and should be taken to a certified collection point for recycling or proper disposal.

For more detailed information about device or battery recycling, contact your local city office, household waste disposal service, or retail store.

Disposal of the device and batteries (if included) is subject to WEEE Directive Recast (Directive 2012/19/EU) and Battery Directive (Directive 2006/66/EC). The purpose of separating WEEE and batteries from other waste is to minimize the potential environmental impacts and human health risk of any hazardous substances that may be present.

#### Reduction of hazardous substances

This device is compliant with the REACH Regulation [Regulation (EC) No 1907/2006] and RoHS Directive Recast (Directive 2011/65/EU). Batteries (if included) are compliant with the Battery Directive (Directive 2006/66/EC). For up-to-date information about REACH and RoHS compliance, please visit the web site www.huaweidevice.com/certification.

### EU regulatory conformance

#### Body worn operation

The device complies with RF specifications when used near your ear or at a distance of X cm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

#### Certification information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an independent scientific organization, and include safety measures designed to ensure the safety of all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level during operation can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue, and the highest SAR value for this device complies with this limit.

The highest SAR value reported for this device type when tested at the ear is X.XX W/kg, and when properly worn on the body is X.XX W/kg.

#### Statement

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the web site www.huaweidevice.com/certification.

The following marking is included in the product:

# **CE**0979

Notice: This device may be operated in all member states of the EU.

Notice:

Observe national and local regulations where the device is used.

This device may be restricted for use, depending on the local network.

## FCC Regulatory Compliance

#### Body worn operation

The device complies with RF specifications when used near your ear or at a distance of 5 mm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit.

The highest SAR value reported to the FCC for this device type when tested for use at the ear is 1.441 W/kg, when properly worn on the body is 1.276 W/kg.

#### FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this device not expressly approved by Huawei Technologies Co., Ltd. for compliance could void the user's authority to operate the equipment.

Please visit <u>www.huaweidevice.com/worldwide/support/hotline</u> for recently updated hotline and email address in your country or region.