



HUAWEI FT2260VW

Home Phone Adaptor

USER MANUAL

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Contents

1 Warnings and Precautions	1
2 Introduction	4
Inside the Package	4
Top View	5
Back View	5
3 Installation	6
Installing the Battery	6
Installing the Antenna	6
Installing the Power Adapter	7
Connecting the Device to a Telephone	7
Mounting the Device	7
4 General Functions	9
Powering on the Device	9
Viewing the Indicators	9
Making Calls	10
Receiving Calls	10
Using Voice Mail	10
Supplementary Services	10
For More Information	10
5 Troubleshooting	11

1

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when usage causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- On a stormy day with thunder, do not use your device, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- Use accessories authorized by the manufacturer. Using unauthorized accessories will render the warranty null and void.

- Because the device needs to disperse heat during working, place the device and the power supply in a ventilated and shady place. Never cover the device, put objects on it, or place it near water, fire as well as inflammable and explosive materials.
- This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.

- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

2 Introduction

Inside the Package

The package should contain the following items. If any of the items are missing or damaged, contact your local dealer immediately.



Main unit




Antenna




Battery




Telephone line cord

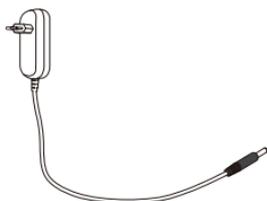


Power adapter

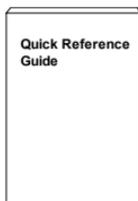

Quick Reference Guide

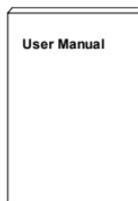

User Manual

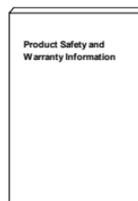


Product Safety and Warranty Information

Top View


Note:

The figures are only for your reference, the actual shape and color of the product may slightly differ.

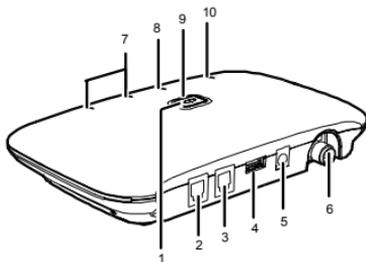

- | | | | |
|---|---|----|----------------------------|
| 1 | Power On/Off switch | 6 | Antenna port |
| 2 | Telephone port 1 | 7 | Signal strength indicators |
| 3 | Telephone port 2 | 8 | Battery indicator |
| 4 | USB port (It is used by professional after-sales personnel only for the maintenance of the device.) | 9 | Power indicator |
| 5 | DC 12V power port | 10 | Voice mail indicator |

Back View

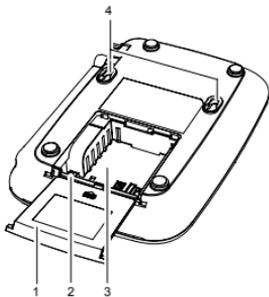

- | | | | |
|---|---------------|---|------------------------|
| 1 | Battery cover | 3 | Battery slot |
| 2 | Battery port | 4 | Wall-mounting brackets |


3 Installation

Installing the Battery

Note:


- When the ambient temperature exceeds the temperature allowed for charging, the system will stop charging the battery.
- When the power adapter is connected, the battery will automatically charge; when fully charged, the battery will automatically stop the charge.
- Remove the battery if the device will be unused for two weeks.

Insert the connection cable of the battery into the battery port (make sure the battery is correctly inserted), and then place the battery in the battery slot.

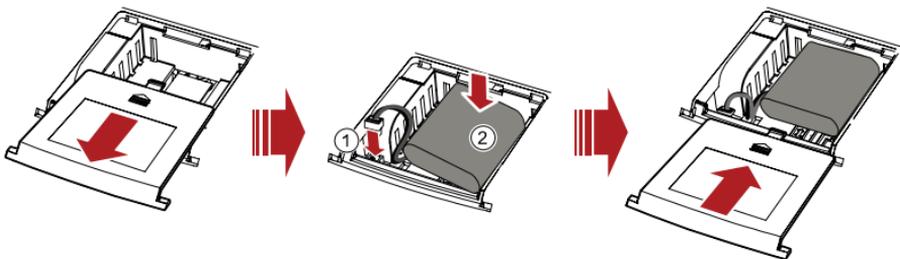

Installing the Antenna

Align the antenna with the antenna port on the device as illustrated below. Screw the antenna into the port, ensuring that the connection is secure.

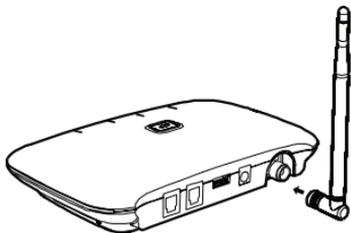

Installing the Power Adapter

Under normal usage, the device relies on the external power adapter for its power supply.

Insert one end of the power adapter into the DC input port, and the other end into an AC wall outlet.




Backup battery power will only be used during power failure or if the external power adapter is not in use.

Connecting the Device to a Telephone

Note:

- Use the telephone line cord provided by the manufacturer.

The device provides two telephone ports. They are in parallel connection and use the same telephone number.

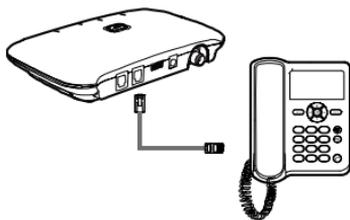


Mounting the Device

Horizontal Mounting

Place the device on a smooth surface with good ventilation. Place it at least 4 inches away from other objects.

Vertical Mounting

Fix two wall screws into the wall with the screw heads extending approximately 3.0 mm from the surface of the wall. The diameter of a screw head should be between 5.6 mm and 7.0 mm. The distance between two screws should be 76 mm. Align the mounting brackets with the screws, push the device towards the wall, and connect the brackets with the screws, ensuring the device is stable.

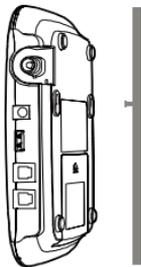

4

General Functions

Powering on the Device

Press the  key to power on the device. When the device is on, the power indicator will be blue.

 **Note:**

- Press and hold the  key for one second to power off the device.

Viewing the Indicators

The indicators indicate the following:

Icon	Indicator	Status
Voice mail 	Blinking Blue	New Message
Battery 	Blue	Full Charge
	Blinking Blue	Partial Charge
	Blinking Red	Low Charge
Signal Strength 	Both Blue	Strong
	One Blue	Moderate
	One Blinking Blue	Weak
Power	Blue	The device is on

Making Calls

1. Before making a call, make sure at least one signal strength indicator ( ) is lit up.
2. Dial a telephone number as you normally would, and the number will begin dialing in several seconds.
3. Make sure to hook on the telephone in place, so that you can receive calls.

Receiving Calls

When there is an incoming call, you can lift the handset to answer it.

 **Note:**

- During a power outage, you can make or receive calls with the back up battery.

Using Voice Mail

1. When the voice mail indicator () is blinking blue, it indicates you have new voice message(s).
2. Dial a voice mail number.
3. View the voice message.

 **Note:**

- The voice mail number is provided by the service provider. For details, consult your service provider.

Supplementary Services

Please contact [support [verizonwireless.com](https://www.verizonwireless.com)/Customer Service **1-800-229-1235**] to enable additional services on your [device name]. Additional services include:

Caller ID display, Three-Way Calling, Call Forwarding, Call Waiting, Emergency Call.

For More Information

Call Customer Service toll free at 800-922-0204 or *611 from your Verizon Wireless mobile phone.

5 Troubleshooting

I am not getting a dial tone on my handset.

1. Check to make sure the telephone line cord is securely plugged in (refer to page 7 in the User Manual).
2. Check to make sure the power indicator is illuminated.



3. Check to make sure you are not roaming outside of the VZW network.

How do I check my voice messages?

You can visually see if you have a voice message by checking the voice mail indicator on the device. (Refer to page 9 in the User Manual to learn how to retrieve your messages.)

Can I use my telephone answering device instead of voicemail?

Yes, you can. Please set the answering device to fewer rings so it picks up the call first.

Does 911 work on this device?

Yes, 911 works the same as it would on your VZW cell phone using GPS.

Does this product work during a power outage?

Yes, this device has a back up battery.

Note: The telephone connected to the device must work during a power outage (i.e. a corded phone that doesn't require additional power).

How long does the back up battery last?

2 hours during talk time and 36 hours on standby.

How can I replace the battery?

You can purchase a replacement battery from the following locations: (insert list or link here)

How does Caller ID (CID) work?

CID works the same as it would on your VZW cell phone. CID allows you to see the caller's phone number before you take the call. CID may display the number of the person calling you (for all unblocked numbers). It may also display the name of the person if you've stored it in your phone's memory.

The volume is too loud.

You can adjust the voice volume. Four volume levels are available, with level 1 being the lowest and level 4 the highest. The default setting is level 4.

1. Take the phone off the hook so you can hear the dial tone and verify that telephone service is available.
2. Press **# # 1** to adjust the volume.
3. Press keys **1** to **4** to select the desired volume.
4. After selecting the desired volume, press the * key to save it. If you hear a single confirmation tone, you have successfully set the volume level.

Note: If you hear a double tone you have pressed an incorrect key. The system will return to the off-hook state, and you can try adjusting the volume again when you hear the dial tone.