



HUAWEI G1101

GSM Mobile Phone

User Guide

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS” . EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

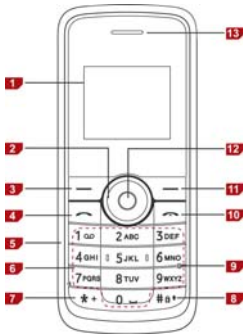 
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Table of Contents

Your Phone	1
Keys and Functions	2
Screen Icons	4
Installing the SIM Card	4
Removing the SIM Card	5
Charging the Battery	6
Using the Function Menu	6
Creating a phone number	6
Searching a phone number	7
Making a Call	7
Answering a Call	8
Phone Lock	8
PIN and PUK	8
Locking the Keypad	9
Changing the Text Input Modes	9
Multi-tap Input Mode	10
Predictive Input Mode	10
Entering Digits	11
Entering Symbols	11
FM Radio	11
Warnings and Precautions	13





Your Phone

The following figure shows the appearance of your phone and it is for your reference only.







- | | | | |
|---|----------------------|----|----------------|
| 1 | Screen | 8 | # key |
| 2 | Navigation key | 9 | Reset key |
| 3 | Left soft key | 10 | End/Power key |
| 4 | Call/Answer key | 11 | Right soft key |
| 5 | Charger/Headset jack | 12 | OK key |
| 6 | Number keys | 13 | Earpiece |
| 7 | * key | | |

Keys and Functions



Press...	To...
	<ul style="list-style-type: none">• Make a call.• Answer an incoming call.• View the Outgoing call in standby mode.
	<ul style="list-style-type: none">• Power on or off the phone (by pressing and holding it more than 2s).• End a call, or reject an incoming call.• Return to the standby mode.
	<ul style="list-style-type: none">• Display Menu in standby mode.• Execute functions that the left-down corner indicator shows.
	<ul style="list-style-type: none">• Display Contacts in standby mode.• Return to the previous menu.• Execute functions that the right-down corner indicator shows.

Press...

To...

- Access: **Inbox** (), **SIM Phonebook** (), **Call Records** (), and **Alarm** () in standby mode.



- During a call, increase the volume () or decrease the volume ().



- Enter numbers and letters.
- Call the voice mail center in standby mode (by pressing and holding the **1** key more than 2s).



- Speed-dial phone numbers in standby mode (by pressing and holding the **2-9** keys more than 2s).



- In standby mode, press the key once to enter *****, press the key twice to enter **+**, press the key thrice to enter **P**.
- In standby mode, press the key more than 2s to set the **conference** as current profile.
- Display the symbol list in any input mode.

Press...

To...




- Enter #.
- Lock the keypad in standby mode (by pressing and holding the key more than 2s).
- Change input modes when editing texts.







- Turn off your phone when it go wrong.



If the phone cannot be powered on after you press and hold , the reason is probably that the battery is used up. In this case, charge the phone for five minutes (during this period, the charging animation may be not displayed on the screen) and power it on again.

Screen Icons

Icon	Description
	Signal strength.
	A new text message is received.
	The keypad is locked.
	Battery charge level.



An alarm is activated.



 
The Conference profile is activated.



Coming call(s).

 
Installing the SIM Card

Before installing the SIM card, ensure that your phone is powered off. Ensure that the golden contact area on the SIM card is facing upward, and the beveled corner is properly aligned with the SIM card slot.

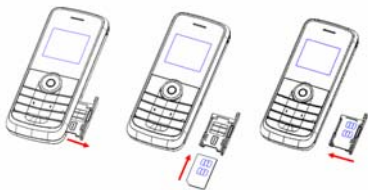

Removing the SIM Card



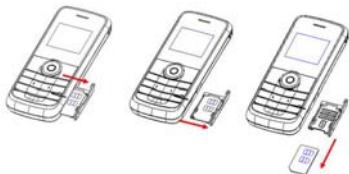


Before removing the SIM card, ensure that your phone is powered off.

 


Charging the Battery

1. Connect the charger to an AC power socket.
2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged.
During the charging, the charging icon is displaying in animation. When the charging icon becomes static, the battery is fully charged.
4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.




Using the Function Menu

1. In standby mode, press  (**Menu**).
2. Press  to select the desired function menu.
3. Press  (**OK**) to display the selected menu.
4. Press  to scroll to select a submenu .
5. Press  (**OK**) to display the menu.

6. Press  (**Cancel**) to return to the previous menu or exit the function menu.





 To return to the standby mode, press .

Creating a phone number


1. In standby mode, enter the phone number.
2. Press  (**Save**) choose to save to ME or SIM.
3. Press  to edit the name and the number.
4. Press  (**Save**) to save the phone number success.

 You can also save a phone number through call records, phonebook, and messages.


Searching a phone number


1. In standby mode, Press  (**Contacts**).
2. Press  (**Option**) to choose **search phone number**.
3. Press  (**OK**) to input the name.
4. Press  (**OK**) to find it.

Making a Call

1. In standby mode, enter the phone number.
- To make an international call, press the  twice to enter the international long distance code. Then enter

the country code or region code, area code, and phone number in sequence.

- To call an extension, enter the phone number, press the  key thrice to insert **P**, and then enter the extension number.

2. Press  to dial the number.

3. Press  or  to end the call.







- You can also make a call through call records, phonebook, and messages.

- During a call, press  to adjust the volume.

Answering a Call

When there is an incoming call, you can do as follows:

- Press  or  (**Accept**) to answer it.

- Press  (**Reject**) or  to reject it.

If the **Any key answer** function is enabled, you can press any

key except  and  to answer an incoming call.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) into any numeric string in the range of four to eight digits.

 


Do remember your phone lock code. If you forget it, contact the service center.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.



If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK. If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new one.

Locking the Keypad

 
In standby mode, press and hold  more than 2s to lock the keypad. To unlock the keypad, press  (**Unlock**) and then long press  in succession.

If the **Keypad lock** function is enabled and the phone is idle for a preset period in standby mode, the keypad is locked automatically.




 
When the keypad is locked, you can press  or  (**Accept**) to answer an incoming call .

Changing the Text Input Modes

The indicator of the current text input mode is displayed on the upper left corner of the screen. You can press  to change the text input mode.

Indicator	Text Input Mode
ABC, Abc and abc	Multi-tap input mode
Eng	Predictive input mode
123	Number input mode


 


Press  (**Delete**) once to delete the letter on the left of the cursor. Press and hold  (**Delete**) more than 2s to delete all the letters.

Multi-tap Input Mode

In multi-tap input mode, you can press a key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.




- Press  consecutively to select and enter commonly used punctuations.
- Press  once to enter a space, twice to enter 0.


Predictive Input Mode

 
In predictive input mode, do as follows to enter a word:

1. Press each key only once according to the spelling sequence of the desired word.


 
The phone displays the commonly used word according to the numeric sequence of key presses.

2. Press  to scroll to the desired word.

You can press  to switch the selected characters between upper case and lower case.

3. Press  to enter the word.




- Press  to display commonly used punctuations.
- Press  to enter a space.


Entering Digits

- In "123" input mode, you can directly press number keys labeled with desired digits.
- In multi-tap input mode, press the number key consecutively until the desired digit appears on the screen.

Entering Symbols


1. Press  to display the symbol list.




2. Press  to scroll to the desired symbol.

3. Press  to enter the symbol.

 


FM Radio

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

1. Connect a compatible headset to the phone.
2. Select  (**Menu**) > **FM radio** to launch the FM radio.
3. On the **FM radio** screen, you can do as follows:

- Press  to change the channel.
- Press the number key corresponding to the serial number of a channel to play the channel.
- Press  to adjust the volume.
- Press  (**Option**) to **set frequency, save frequency, Auto seek, view and set channel list.**



- Press  more than 2s to turn on the FM in standby mode, plug the headset first.
- Press  or  to change the listening channel 0~19.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the mobile safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Switch off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be

advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.

- Use accessories authorized by manufacturers. Using unauthorized accessories will render the warranty null and void.
- Keep the ambient temperature between 0° C and 55° C while the device is being charged. Keep the ambient temperature between -10° C to 55° C for using the device powered by battery.

Preventing Hearing Damage

Using the receiver, earbuds, headphones, speakerphone, or earpieces at high volume can result in permanent hearing loss. Be extremely careful when listening at high decibel levels. Set the volume to a safe level. If you experience strange sounds in your ears like ringing or if you hear muffled speech, get your hearing checked. If you continue to use high volume, your hearing will soon get affected. Hearing experts offer the following suggestions to protect your hearing:

- Reduce the time you use the receiver, earbuds, headphones, speakerphone, or earpieces at high volume.
- Do not increase the volume to block noisy surroundings.
- Reduce the volume if you can't hear people speaking near you.

Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may

present a choking hazard. Make sure that small children are kept away from the device and accessories.

Environment Protection

Follow all the local regulations regarding the disposal of your devices or electrical accessories (such as chargers, headsets, or batteries). Recycle them. Do not dispose of an exhausted battery or a used device in a garbage can.

Accessories

Use only the accessories, such as the charger, battery, and headset, delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

Battery and Charger

- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Clearing and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise,

it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.
- If the ambient temperature is considerably low or high, the capacity and life of the battery is reduced. When the temperature is lower than 0° C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves. Your device is a low-power radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit adopted by the 1999/519/EC is 2.0 watts/kilogram (W/kg) averaged over 10 gram of tissue. The highest SAR value for this device type when tested at the ear is 2 W/kg.

Body Worn Operation Important safety information regarding radiofrequency radiation (RF) exposure to ensure compliance with RF exposure guidelines the device must be used with a minimum of 1.5 cm separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

EU regulatory conformance

CE Manufacturer declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CE 0682

Version: V100R001_01 NO.: 6010381

FEDERAL COMMUNICATIONS COMMISSION
INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and must provide at least 1.5 cm separation between the device and the user's body.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

Max. SAR Measurement (1g)

Head: 0.977 W/kg

Body: 0.822 W/kg