
Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

 
1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons	4
2 Getting Started	4
Installing the SIM Card and the Battery	4
Installing the microSD Card	5
Charging the Battery	5
Using a Function Menu	6
Automatically Switching Between Profiles	6
Phone Lock	7
PIN and PUK	7
Locking the Keypad	7
3 Voice Services	8
Making a Call	8
Answering a Call	8
4 Text Entry	9
Changing the Text Entry Mode	9
Multi-Tap Text Entry Mode	10
Predictive Text Entry Mode	10
Chinese Text Entry Mode	10
Entering a Number	12
Entering a Symbol	12

5 Movitalk	12
6 Messaging	15
Writing and Sending a Text Message	15
Writing and Sending a Multimedia Message	16
7 Contacts	17
Creating a New Contact.....	17
Searching for a Contact.....	17
8 Multimedia	18
Camera.....	18
FM Radio	18
Sound Recorder	19
9 Services	19
Configuring Network Settings	20
Connecting to the Network.....	20
10 Ebook Reader	21
11 Warnings and Precautions	22

1 Getting to Know Your Phone





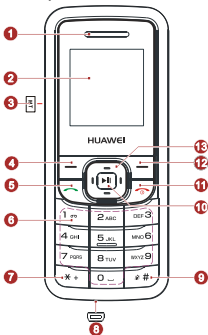





Your Phone

The following figure shows the appearance of your phone and it is for your reference only.



- | | | | |
|---|-----------------|----|----------------------|
| 1 | Earpiece | 8 | Charger/Headset jack |
| 2 | Screen | 9 | # key |
| 3 | MT key | 10 | Confirm/Music key |
| 4 | Left soft key | 11 | End/Power key |
| 5 | Call/Answer key | 12 | Right soft key |
| 6 | Number keys | 13 | Navigation keys |
| 7 | * key | | |

Keys and Functions

Press...	To...
	<ul style="list-style-type: none">• Make a call.• Answer an incoming call.• View call logs in standby mode.
	<ul style="list-style-type: none">• Power on or power off the phone (by pressing and holding the key for about 3s).• End a call or reject an incoming call.• Return to the standby mode.
	<ul style="list-style-type: none">• Access main menu in standby mode.• Confirm a selection.
	<ul style="list-style-type: none">• Access Contact list in standby mode.• Return to the previous menu.
	<ul style="list-style-type: none">• Access Audio player in standby mode.• Confirm a selection.• Take a picture on the camera screen.
	Access Shortcuts (by pressing ) , My Files (by pressing ) , Write message (by pressing ) , and camera screen (by pressing ) in standby mode.

Press...

To...



-



- Enter numbers and letters.
- Call the voicemail in standby mode (by pressing and holding the **1** key for about 3s).
- Speed-dial a phone number by pressing and holding a key from 2 to 9 for about 3s in standby mode (select **Menu > Settings > Call settings > Speed dial**, enable speed dial function and assign the desired phone numbers to the corresponding keys).
- Select a submenu item labeled with the corresponding number.



- Enter * (by pressing the key once), + (by pressing the key twice), **P** (by pressing the key three times), and **W** (by pressing the key four times) in standby mode.
- Display the symbol list in any text entry mode.


















- Enter **#**.
- Enable or disable the **Meeting** profile in standby mode (by pressing and holding the key for about 3s).



Press to Launch **Movitalk** in any mode.

 
Screen Icons

Icon	Indicates...
	Signal strength.
	The alert type is Ring only .
	The alert type is Vib. only .
	The alert type is Vib. and ring .
	The alert type is Vib. then ring .
	The headset is connected to the phone.
	Missed calls.
	The call forwarding function is enabled.
	The stopwatch function is enabled.
	Unread text messages.
	Unread multimedia messages.
	Alarms.
	The keypad is locked.
	Battery power level.
	Roaming.

2 Getting Started

 
Installing the SIM Card and the Battery

When installing the subscriber identity module (SIM) card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

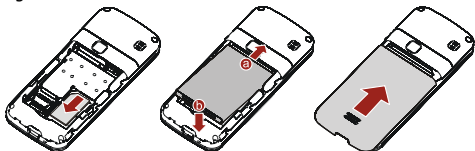

Installing the microSD Card

You can expand the storage space of your phone by installing a microSD card with a capacity of up to 2 GB on your phone. When installing the microSD card, ensure that the golden contact area on the microSD card is facing downward.

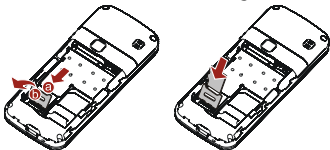











Charging the Battery

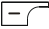1. Connect the charger to the charger jack on the phone.



2. Connect the charger to an alternating current (AC) power socket.
The battery begins to get charged, with the charging icon displayed in an animated state.
3. When the charging icon becomes static, indicating that the battery is fully charged, disconnect the charger from the power socket.
4. Disconnect the charger from the phone.


Using a Function Menu

1. In standby mode, press  (**Menu**).
2. Press  to select the desired function menu.
3. Press  (**OK**) or  to display the function menu.
4. Press  or  to select a submenu.
5. Press  (**OK**) or  to display the submenu.
6. Press  (**Back**) to return to the previous menu or exit the function menu.
To return to the standby mode, press .

Automatically Switching Between Profiles

You can set your phone to automatically switch between profiles for up to three times a day.

1. Select **Menu > Settings > Profiles > Profile Switch Timing**.
2. Select a clock.

-
3. Press  (**Edit**) to configure the profile switching settings.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) to any numeric string of four to eight digits.

Do remember your phone lock code. If you forget the code, contact your service center.


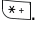


PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

If you enter wrong PINs a specified number of times consecutively, the phone prompts you to enter the PUK.


If you enter wrong PUKs a specified number of times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.

Locking the Keypad

In standby mode, to lock the keypad, press  (**Menu**) and then . To unlock the keypad, press  (**Unlock**) and then press .








If the **Auto keypad lock** function is enabled and if the phone is in standby mode for the preset period, the phone locks the keypad automatically.

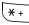

When the keypad is locked, you can press  to answer an incoming call or make an emergency call.


3 Voice Services





Making a Call



1. In standby mode, enter the phone number.
 - To make an international call, press  twice consecutively to enter the international call prefix. Then enter the country or region code, area code, and phone number in sequence.
 - To call an extension, enter the phone number, press  three times consecutively to enter **P**, and then enter the extension number.
 2. Press  to dial the number.
 3. Press  to end the call.
-  • You can also make a call through call log, contacts, and messages.
- During a call, you can press  and  to adjust the volume.

Answering a Call

When there is an incoming call, you can do as follows:


- Press  to answer the call.

- Press  to reject the call.
- Press  (**Silence**) to mute the ringtone, and then press  (**Reject**) to reject the call, or press  to accept the call.

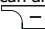


If **Answer mode** is set to **Any key**, you can answer an incoming call by pressing any key except  and . You can set **Answer mode** in **Profiles**.

4 Text Entry

Changing the Text Entry Mode

The indicator of the current text entry mode is displayed in the upper left corner of the screen. You can press  to change the text entry mode.


Indicator	Text Entry Mode
ABC, abc, es and ES	Multi-tap text entry mode
eZi ABC, eZi abc, eZi ES and eZi es	Predictive text entry mode
拼, 笔 and eZi 拼	Chinese text entry mode
123	Number entry mode

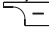 You can press  (**Clear**) once to delete the last character, press and hold  (**Clear**) for about 3s to clear all the characters.

Multi-Tap Text Entry Mode

In multi-tap text entry mode, you can press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.



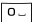

You can press  once to enter a space and twice to enter **0**.

Predictive Text Entry Mode

In predictive text entry mode, enter a word as follows:

1. Press each key only once according to the spelling sequence of the desired word.
The phone displays the candidate words that contain the entered letters.



2. Press  to scroll to the desired word.
3. Press  to enter the word.



You can press  to enter a space.



Chinese Text Entry Mode



You can enter a Chinese character three ways bellowed.

The input method is **eZi 拼**, which is predictive entry mode for Chinese:

1. Press each key only once according to the spelling sequence of the PINYIN.



The phone displays the candidate PINYIN that contains the entered one.

2. Press  to scroll to the desired PINYIN and press  to conform.

3. Press  to scroll to the desired Chinese character.
4. Press  to enter the Chinese character.



The input method is **拼**, which is Multi-tap entry mode for Chinese:

5. Press each key consecutively until the desired letter of the PINYIN displays, enter the whole letters in sequence. The phone displays the candidate Chinese characters that contain the entered one.

6. Press  to scroll to the desired Chinese character.
7. Press  to enter the Chinese character.

The input method is **笔**, which is Simplified Chinese Stroke entry mode:

8. Press a key labeled with the desired stroke to enter a stroke of the desired Chinese character. Enter part of the strokes in sequence until the required Chinese character displays in candidate list.


9. Press  to scroll to the desired Chinese character.
10. Press  to enter the Chinese character.


Entering a Number

- In number entry mode, directly press the number key labeled with the desired number.
- In multi-tap text entry mode, press the number key labeled with the desired number repeatedly until the number appears on the screen.

Entering a Symbol

1. Press  to display the symbol list.

2. Press  to scroll to the desired symbol.



3. Press  to enter the symbol.





5 Movitalk

Movitalk is a PTT (Push To Talk) service, which allows the user to talk with a individual or a group.







Availability Icons

These PTT icons display in idle screen are indicating your availability as well as the status of individuals and groups in your contacts.

Icon	Indicates...
	The Movitalk is available with General profile.
	The Movitalk is available with Silence profile.



Icon	Indicates...
	The individual or group has been moved out of the conversation, or they have logged out of the PTT.
	My availability is Do not disturb.
	There is PTT message, such as an invitation or contact alert.
	Contact group.


PTT Calling

1. Select **Menu > Movitalk > MT Contacts**, or press  in standby mode.
 2. Select a contact to whom PTT call is to be made, and then press  for about 3s.
 3. Press and hold , and then begin speaking after the "My turn tone".
 4. Release  when you are finished speaking.
 5. Press  when you want to finish the PTT call.
-  • Make sure to check the contacts' status, you may only can make calls to contacts that their statuses are available or on silent profile.
- Make a PTT call to a group, please refer to the steps of **PTT calling**.

Add Contact


1. Select **Menu > Movitalk > Add contact > Create new**.
2. Enter the name and number information.

-
3. Press  (**OK**) to save the contact, and then press  (**Yes**) to send an invitation.


-  • Once the individual accepts the invitation, he joins your PTT contacts, and you join his.
- The process how to **Add group**, please refer to the steps of **Add Contact**.


Make a Quick Group Call

1. Select **Menu > Movitalk > MT Contacts**, or press  in standby mode.
2. Press  (**Options**) > **Quick group**.
3. Press  or  to highlight contact, and press  (**Mark**) to select.
4. Press and hold  for about 3s to initiate the call.



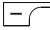



-  The maximum contact number can be added for quick group call is 7. The actual number may differ depending on your operator server.

Manage Availability

1. Select **Menu > Movitalk > MT Settings > My availability**.
2. Select **Do not disturb**, and then press  (**OK**) to confirm.
3. The availability icon changes to **Do not disturb**.


-
-  Anyone in your contacts can not make an incoming call to you, yet outgoing call still can be made.

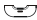
Call Me Alerts

1. Select **Menu > Movitalk > MT Contacts**, or press  in standby mode.
 2. Press  or  to select a contact.
 3. Press  (**Alert**) to send an invitation.
 4. The recipient will have a alert message, and press  to return the call.
-  • Make sure to check the contacts' status, you may only can make alert to contacts that their statuses are available or on silent profile.



6 Messaging

Writing and Sending a Text Message

1. Select **Menu > Messages > SMS > Write message**.
2. Write a message.
3. Press  (**Options**), and then select **Done** for the following options:
 - **Send only**: to enter a phone number or select a recipient from the phonebook list.
 - **Save and send**: to add a recipient and save the message after the message is sent.

-
- **Save:** to save the message to **Outbox** and exit the message editor.
 - **Send to many:** to add up to 10 recipients at a time.
 - **Send by groups:** to add all the members of a group as recipients.
4. Press  to send the message.

Writing and Sending a Multimedia Message



1. Select **Menu > Messages > MMS > Write message.**
2. Select **To, Cc,** or **Bcc.**
Add the phone numbers or groups to be sent, carbon copied, or blind carbon copied to.
3. Select **Subject.**
Edit the subject of the message.
4. Select **Edit content.**
Edit the content of the message. You can add pictures, audio files, and attachments to the multimedia message.
5. Press  (**Done**) for the following options:
 - **Send only:** to send the message without saving it.
 - **Save and send:** to send the message and save it to **Outbox.**
 - **Save to Drafts:** to save the message to **Drafts** and exit the message editor.
 - **Save as template:** to save the message as a user-defined template and exit the message editor.
6. Press  to send the message.




- Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to this service.
- Every MMS has a capacity of 300k bytes.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses that may damage your phone, such as malicious software.

7 Contacts

Creating a New Contact




1. Select **Menu** > **Contacts** > **Add new contact**.
2. Select **To SIM** or **To phone** for saving the contact.
3. Edit the contact, including **Name** and **Number**.
4. Press  (**OK**), and then press  (**Yes**) to save the contact.

Searching for a Contact

1. Press **Menu** > **Contacts**.
2. Select from the following options:
 - **Quick search**: to enter the contact name or the first consecutive letters of the name.
 - **Search contact**: to enter the full contact name, press  (**Options**), and then select **Search**.






8 Multimedia


Camera

1. Select **Menu > Multimedia > Camera** to launch the camera.
2. Select a scene for taking a picture, and then configure the corresponding settings as required.
3. Focus the camera on the scene, and then press  to take the picture.
4. Press  (**Save**) to save the picture or press  (**Delete**) to delete the picture.





FM Radio

The headset cable also functions as an antenna. To ensure good reception of radio programs, when listening to the radio, do not disconnect the headset from the phone or bend the headset cable with force.

1. Connect a compatible headset to the phone.
2. Select **Menu > Multimedia > FM radio**.
3. On the FM radio screen, you can do as follows:
 - Press  to pause or continue.
 - Press  and  to adjust the volume.
 - Press  or  to tune by 0.1 MHz.
 - Press a number key according to the serial number of the desired channel to play the channel.

-
- Press  (**Options**), and then select **Channel list**, **Manual input**, **Auto search settings**, **Settings**, **Record**, **Append**, or **File list**.
 - Press the key on the headset cable to switch to the next channel.
Press and hold the key for about 3s to stop the FM playing in the background.

Sound Recorder

1. Select **Menu > Multimedia > Sound recorder**.
2. Press  (**Options**), and then select **New Record**.
3. During the recording, press  (**Pause/Cont.**) or  to pause or continue, or press  (**Stop**) to stop recording.

9 Services



You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set relevant parameters on your phone.

For details about the service and the charge, contact your service provider.




Configuring Network Settings

To access WAP sites on your phone, you need to set the data account and the WAP parameters on your phone first.

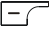
Setting the Connection Profile

1. Select **Menu > Browser > Data account**.
2. Select the network type (**GSM data** or **GPRS**).
3. Select your service provider.
4. Press  (**Edit**) to set the account.
5. Press  (**Done**) to save the settings.

Setting the WAP

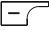1. Select **Menu > Browser > WAP > Settings > Profiles**.
2. Select your service provider.
3. Press  (**OK**) and select **Edit profile**, and then set the account.
4. Press  (**Done**) to save the settings.
5. Press  (**OK**) and select **Activate profile** to activate the account.

Connecting to the Network

1. Press **Menu > Browser > WAP > Input address**.
2. Enter a Uniform Resource Locator (URL) address.
3. Press  (**Options**), and then select **Done** to access the address.


10 Ebook Reader

Your phone supports ebooks in .txt format.

4. Select **Menu > Tools > E-book reader** to display the bookshelf.

The phone automatically adds the ebooks stored in the **Ebook** folder of the phone or the microSD card to the bookshelf.



5. Select an ebook.

6. Press  (**Options**) for the following options:

- **Open e-book:** to view the e-book content.
- **Global settings:** to configure the settings such as the font style, scroll type, scroll speed, encoding scheme, and alignment mode.

7. Press  (**Back**) to stop reading.



- When reading an ebook, you can press  and  to turn pages.
- Store ebooks in the **Ebook** folder of the phone or the microSD card. If you open an ebook in another folder, the phone automatically moves the ebook to the **Ebook** folder so that you can find it easily in your next reading.

11 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service

stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of

the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of X cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device X cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

-
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
 - If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
 - If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
 - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may

not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.44 W/kg and when worn on the body, as described in this user guide, is 1.02 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on FCC ID: QISG3501T.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

FCC Regulations:

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Version: V100R001_01 NO.: 6010346