
Copyright © Huawei Technologies Co., Ltd. 2011.
All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Table of Contents

1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions.....	2
Screen Icons.....	5
2 Getting Started.....	6
Installing the SIM Card and the Battery	6
Removing the Battery and the SIM Card	6
Installing the microSD Card	7
Charging the Battery.....	7
Using the Function Menu.....	7
Phone Lock.....	8
PIN and PUK.....	8
Locking the Keypad	9
File Management	9
3 Call Function.....	9
Making a Call	9
Answering a Call	10
4 Text Input	11
Changing the Text Input Mode	11
Multi-tap Input Mode.....	12
Predictive Input Mode.....	12

Entering a Digit.....	12
Entering a Symbol.....	13
5 Messages	13
Writing and Sending a Text Message	13
Writing and Sending a Multimedia Message.....	14
6 Contacts	15
Creating a New Contact.....	15
Searching for a Contact	15
7 Multimedia	16
Camera.....	16
Image Album	16
Audio Player.....	17
Video Recorder	17
Video Player.....	18
FM Radio (Optional).....	18
Sound Recorder	19
8 Bluetooth.....	19
9 WAP	20
Network Settings.....	20
Connecting to the Network.....	21
10 Warnings and Precautions	21

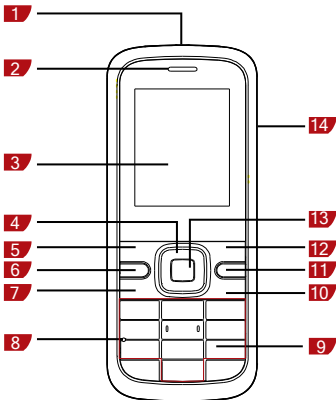 


Features marked with "optional" are optional. These features may vary according to service providers. For details, contact your service provider.

1 Getting to Know Your Phone





 
Your Phone

The following figure shows the appearance of your phone and it is provided for your reference only.



1	Torch	8	Microphone
2	Earpiece	9	Number keys
3	Screen	10	End/Power key
4	Navigation keys	11	Music key
5	Left soft key	12	Right soft key
6	Camera key	13	Confirm key
7	Call/Answer key	14	Charger jack

Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"> • Make a call. • Answer an incoming call. • View All calls in standby mode.
	<ul style="list-style-type: none"> • Power on or power off the phone (by pressing and holding it for about 3s). • End a call or reject an incoming call. • Return to the standby mode. • Turn off LCD backlight.
	<ul style="list-style-type: none"> • Access the Camera in standby mode.
	<ul style="list-style-type: none"> • Access the Audio Player in standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select the option displayed in the lower left corner of the screen.

Press ...

To ...









- Access **Phonebook list** in standby mode.
- Select the option displayed in the lower right corner of the screen.



- Access the main menu in standby mode.
- Confirm a selection.



- Access **Calendar** () , **Alarm** () , **User profiles** () , and **Write message** () in standby mode.
- During a call, increase the volume () or decrease the volume () .



- Enter numbers, letters, and characters.
- Call the voice mail center in standby mode (by pressing and holding the **1** key for about 3s).

-



- Speed-dial phone numbers in standby mode (by pressing and holding the **2–9** keys for about 3s).
- Select a submenu item labeled with the corresponding number.



- In standby mode, press the key once to enter *****, twice to enter **+**, three times to enter **P**, and four times to enter **W**.
- Display the symbol list in text input mode.
- Turn on or turn off the torch in standby mode (by pressing and holding it for about 3s).

















Press ...

To ...



- Enter #.
 - Change the text input method when editing texts.
 - Lock the keypad in standby mode (by pressing and holding it for about 3s).
-

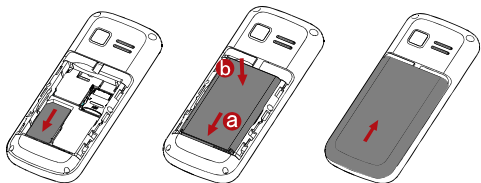 
Screen Icons

Icon	Indicates ...
	Signal strength.
	GPRS signal.
	Ring only alert type.
	Vib. only alert type (optional).
	Vib. and ring alert type (optional).
	Vib. then ring alert type (optional).
	Silent profile.
	Headset profile.
	Missed call(s).
	The call forwarding function is enabled.
	A new text message is received.
	A new multimedia message is received.
	A new push message is received.
	An alarm or the schedule is activated.
	The keypad is locked.
	Battery power level.

2 Getting Started

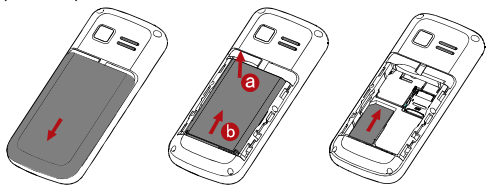 
Installing the SIM Card and the Battery

Ensure that the golden contact area on the SIM card is facing downward, and the beveled edge is properly aligned with the SIM card slot.



Removing the Battery and the SIM Card

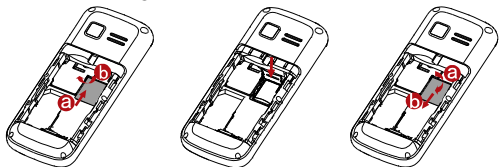 
Before removing the battery and the SIM card, ensure that your phone is powered off.



Installing the microSD Card

You can expand the storage space of your phone by installing a microSD card with a capacity of up to 16 GB on your phone.

 

Ensure that the memory card is inserted with the golden contact area facing downward.






 

 
 


Charging the Battery

1. Connect the charger to an AC power socket.
2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged.
During the charging process, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

Using the Function Menu

1. In standby mode, press  (Menu) or .

-
2. Press  to select the desired function menu.
 3. Press  (**OK**) or  to display the selected menu.
 4. Press  or  to select a submenu.
 5. Press  (**OK**) or  to display the submenu.
 6. Press  (**Back**) to return to the previous menu or exit the function menu.
- To return to standby mode, press .

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) into any number of four to eight digits.

Do remember your phone lock code. If you forget it, contact the service center.


PIN and PUK

 
The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.

Locking the Keypad

 
To lock the keypad, press and hold  in standby mode.

To unlock the keypad, press  (**Unlocked**) and then



If the **Auto Keypad Lock** function is enabled, after the phone is idle for a preset period in standby mode, the keypad is locked automatically.



When the keypad is locked, you can still press  to answer an incoming call or make an emergency call.


 
File Management

The File Manager is used to manage the multimedia files saved in the phone memory or on the microSD Card. Through the File Manager, you can view the size and creation date of an e-book, image, or audio clip and open a multimedia file.

3 Call Function

Making a Call



1. In standby mode, enter the phone number.

- To make an international call, press  twice consecutively to enter the plus sign (+). Then enter the international long distance code, country code or region code, area code, and phone number in sequence.
- To call an extension, enter the phone number, press  three times consecutively to insert **P**, and then enter the extension number.

2. Press  to dial the number.



3. Press  to end the call.

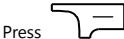
 
 






- You can also make a call through call logs, contacts, and messages.
- During a call, press  or  to adjust the volume.

Answering a Call

 
When there is an incoming call, you can do as follows:

- Press  to answer it.
- Press  to reject it.

- Press  (**Mute**) to mute the speaker, and then press  (**Reject**) again to reject it.
- Press  (**Options**) select **Answer** to answer it.
- If the **Any Key** answer function is enabled, you can press any key except , ,  and  to answer an incoming call.





4 Text Input

Changing the Text Input Mode

The indicator of the current text input mode is displayed on the upper left corner of the screen. You can press  to change the text input mode.

Indicator	Text Input Mode
ABC and abc	Multi-tap input mode
s ABC and s abc	Predictive input mode
123	Number input mode




- Press  (**Clear**) once to delete the letter on the left of the cursor. Press and hold  (**Clear**) for about 3s to clear all the letters.
- In any input mode (except the number input mode and s ABC, s abc input mode), press  to enter a space, or press  twice to enter 0.

Multi-tap Input Mode

In multi-tap input mode, you can press a key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

Predictive Input Mode

 


In predictive input mode, do as follows to enter a word:

1. Press each key only once according to the spelling sequence of the desired word.
The phone displays the commonly used word according to the numeric sequence of key presses.
2. Press Navigation key to scroll to the desired word.
3. Press  to enter the word.

Entering a Digit

 
 
 
In number input mode, directly press a number key labeled with the desired digit.

Entering a Symbol

 
 
 
1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.

5 Messages

Writing and Sending a Text Message

1. Press  (**Menu**), and then select **Messages > Write message > SMS**.
2. Write the message.
3. Press  (**Options**) select **Send to**, then select **Enter number** or **Add from Phonebook** for send.
4. Press  (**Options**) for the following options:
 - **Send**: to enter a phone number or select a recipient from the contact list, and send the message.
 - **Edit recipient**: to edit a recipient.
 - **Remove recipient**: to remove a recipient.
 - **Remove all recipients**: to remove all recipients at a time.
 - **Save to Drafts**: to save the text message to **Drafts**.

Writing and Sending a Multimedia Message


 
 
1. Press  (**Menu**), and then select **Messages > Write Message > MMS**.
2. Edit the content of the message. You can add pictures, audio clips, and attachments to the multimedia message. You can also insert a new slide, preview the message, and set the slide duration.
3. Press  (**Options**) select **Send to**, then select **Enter number** or **Add from Phonebook** for send.
4. Press  (**Options**) for the following options:
 - **Send**: to send the multimedia message.
 - **Send options**: to select the options for sending the message.
 - **Edit recipient**: to edit a recipient.
 - **Remove recipient**: to remove a recipient.
 - **Remove all recipients**: to remove all recipients at a time.
 - **Change to CC**: to change the recipient to CC.
 - **Change to Bcc**: to change the recipient to Bcc.
 - **Save to Drafts**: to save the multimedia message to **Drafts**.




- Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to this service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses, such as malicious software, that can damage your phone.

6 Contacts

Creating a New Contact


1. Press  (**Menu**), and then select **Phonebook > Add new contact**.
2. Select **To SIM** or **To phone** for saving the contact.
3. Edit the contact.
4. Press , and then press  (**Yes**) to save the contact.

Searching for a Contact

1. Press  (**Menu**), and then select **Phonebook**.
2. Enter the first letter of the contact name in search bar, and then show corresponding name.

7 Multimedia

Camera

Press  (**Menu**), and then select **Multimedia > Camera** to launch the camera.

In camera mode, you can do as follows:

 


 





 






 
1. Press  (**Options**) to view Image, or configure the relevant settings.
2. Press  to take a picture.
3. Press  (**Options**) to send or delete the picture, press  (**Back**) to save the picture.

 
Image Album

1. Press  (**Menu**), and then select **Multimedia > Image Album** to launch the Image Album.
2. Press  to view image.
3. Press  (**Options**) for other options, including View, Image information, Browse style, Send, Use as, Rename, Delete, Sort by, Delete all and Storage.


Audio Player


 
 
1. Press  (**Menu**), and then select **Multimedia > Audio player**.
2. Select an audio clip.
3. Press  to play the audio.
When the music is being played:
 - Press  to pause or continue.
 - Press  or  to adjust the volume.
 - Press and hold  or  to fast forward or rewind, press  or  to switch between songs.
4. If background playback is on, press  (**Back**) to exit the audio player screen and play the audio in the background.

Video Recorder

 

 
Press  (**Menu**), and then select **Multimedia > Video recorder** to launch the video recorder.

In video recorder mode, you can do as follows:

 

 



1. Press  (**Options**) to configure the relevant settings.


-
2. Press  to take a video.
 3. Press  to save or delete the picture, then press  (**Yes**) to save the video.

Video Player


1. Press  (**Menu**), and then select **Multimedia > Video player** to launch the Video player.
2. Select an Video clip.
3. Press  to view a video player.
4. Press  (**Options**) for other options, including Play, Send, Rename, Delete, Delete all, Sort by and Storage.


FM Radio (Optional)

 

1. Press  (**Menu**), and then select **Multimedia > FM Radio** to access the FM radio.
2. On the **FM radio** screen:
 - Press  to turn on or turn off the FM radio.
 - Press  or  to adjust the volume.
 - Press  or  to switch previous or next channel.

-
- Press  (**Options**) for other options, including **Channel list**, **Manual input**, **Auto search**, **Settings**, **Sound recorder**, **Append**, and **File list**.

Sound Recorder

 
1. Press  (**Menu**), and then select **Multimedia** > **Sound recorder**.

2. Press  (**Options**), and then select **New record**.

During the recording process, press  (or ) to pause or continue.

3. Press  (**Stop**) to stop recording.

8 Bluetooth

Press  (**Menu**), and then select **Organizer** > **Bluetooth** to set Bluetooth.

In Bluetooth mode, you can do as follows:

1. Activate Bluetooth: turn on/off Bluetooth function. when the Bluetooth is on, main LCD interface status bar will display the Bluetooth icon.
2. This device is visible: set the device can be searcher.
3. Search for Bluetooth device: show the devices which had matched with my device.

-
4. Search hands-free device: show the devices which is hands-free.
 5. Host device name: change device name.
 6. Advanced options: Include the following
 - Set audio path: set up voice to transfer path for Bluetooth headset or remain in the machine.
 - Storage: set up the storage, such as phone, memory card, or always ask.
 - Bluetooth device address: view Bluetooth device address.

9 WAP

 
You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.


For details about the service and the charges, contact your service provider.

 
Network Settings

To access the WAP sites on your phone, you need to set the data account and WAP parameters on your phone.

 
 
Setting the Connection Profile

1. Press  (Menu), and then select **Network Services > Data Account**.


 
-
2. Select the network type, press  (**Options**) and select **Edit**.

3. Press  (**OK**), and then select **Yes** to save the settings.

Setting the WAP

1. Press  (**Menu**), and then select **Network Services > WAP > Settings > Data account**.
2. Select your service provider, and then press  (**OK**).

Connecting to the Network

1. Press  (**Menu**), and then select **Network Services > WAP > Enter address**.
2. Enter a WAP site address.
3. Press  (**Options**), and then select **Done** to access the address.

10 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked.

Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

-
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
 - If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
 - If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
 - If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
 - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
 - Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

-
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
 - Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
 - Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
 - Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
 - Before you clean or maintain the device, power off the device and disconnect it from the charger.
 - Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
 - Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 1.6 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.72 W/kg.

FCC Regulations:

● This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

●The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

▶ RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is **0.72** W/kg and when worn on the body, as described in this user guide, is **0.775** W/kg

(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: **QISG3620**

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of **1.5 cm** from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of **1.5 cm** from your body when the phone is switched on.