



# **HUAWEI G3621**

---

**GSM Mobile Phone**

## **User Guide**

---

**Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.**

## **Trademarks and Permissions**



**HUAWEI, HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

---

# Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions.....	2
Screen Icons.....	4
<b>2 Getting Started.....</b>	<b>5</b>
Installing the SIM Cards and Battery.....	5
Installing a microSD Card.....	6
Charging the Battery.....	6
Phone Lock.....	7
PIN and PUK.....	7
Locking and Unlocking the Keypad.....	8
<b>3 Voice Services.....</b>	<b>8</b>
Dual-Card Management.....	8
Making a Call.....	8
Answering a Call.....	9
<b>4 Text Input .....</b>	<b>11</b>
Changing the Text Input Mode .....	11
Entering a Letter .....	12
Entering a Digit.....	13
Entering a Symbol.....	13

---

<b>5 Services</b> .....	<b>13</b>
Network Settings.....	13
Connecting to a Network.....	14
Chat Function .....	14
<b>6 Phonebook</b> .....	<b>15</b>
Creating a Contact.....	15
Searching for a Contact .....	15
<b>7 File Manager</b> .....	<b>15</b>
<b>8 Messaging</b> .....	<b>16</b>
Sending a Text Message .....	16
Sending a Multimedia Message .....	17
<b>9 Multimedia</b> .....	<b>17</b>
Audio Player.....	17
Video Player.....	18
Image viewer .....	18
FM Radio .....	19
Sound Recorder .....	19
<b>10 Organizer</b> .....	<b>20</b>
Calendar .....	20
Tasks.....	21
Alarm .....	21
Calculator .....	21
Stopwatch .....	21

---

Ebook Reader .....	21
Torch .....	22
STK.....	22
Games.....	22
<b>11 User profiles .....</b>	<b>23</b>
<b>12 Settings.....</b>	<b>24</b>
Phone Settings.....	24
Security Settings.....	24
<b>13 Warnings and Precautions .....</b>	<b>26</b>

 


Features marked with "optional" are optional. These features may vary according to service providers. For details, contact your service provider.

# 1 Getting to Know Your Phone

## Your Phone

The following figure shows the appearance of your phone and is provided for your reference only.

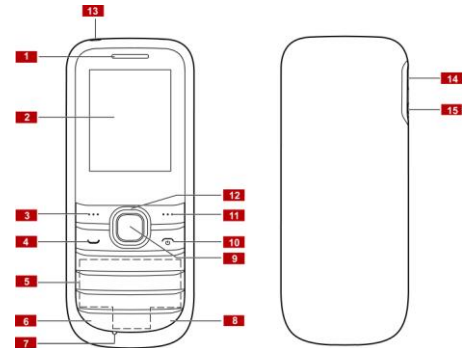









1 Earpiece

9 Confirm key


2	Screen	10	End/Power key
3	Left soft key	11	Right soft key
4	Call/Answer key	12	Navigation keys
5	Number keys	13	Torch
6	* key	14	Charge interface
7	Microphone	15	Headset interface
8	# key		

## Keys and Functions











Press ...	To ...
	<ul style="list-style-type: none"> <li>• Make a call.</li> <li>• Answer an incoming call.</li> <li>• View call logs in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold the key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> </ul>
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.







Press ...	To ...
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Confirm a selection.</li> <li>• Turn the torch on or off in standby mode (press and hold the key for about 3 seconds).</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the functions assigned to the navigation keys in standby mode.</li> <li>• Customize the functions assigned to the navigation keys, select <b>Menu</b> &gt; <b>Settings</b> &gt; <b>Phone settings</b> &gt; <b>Dedicated key</b>.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call voicemail in standby mode (press and hold the <b>1</b> key for about 3 seconds).</li> <li>• Speed-dial phone numbers in standby mode (press and hold the <b>2–9</b> keys for about 3 seconds).</li> <li>• Select an option labeled with the corresponding number.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter <b>*</b> (press the key once), <b>+</b> (press the key twice), <b>p</b> (press the key three times), and <b>w</b> (press the key four times) in standby mode.</li> <li>• Display the symbol list in editing mode.</li> <li>• Switch between the <b>Silent</b> profile and current profile in standby mode (press and hold the key for about 3 seconds).</li> </ul>



Press ...	To ...
	<ul style="list-style-type: none"> <li>• Enter #.</li> <li>• Switch between text input methods in editing mode.</li> <li>• Lock the keypad in standby mode (press and hold the key for about 3 seconds).</li> </ul>

## Screen Icons

Icon	Indicates ...
	Signal strength.
	General Packet Radio Service (GPRS) signal.
	The alert type is <b>Ring only</b> .
	The alert type is <b>Vib. only</b> .
	The alert type is <b>Vib. and ring</b> .
	The alert type is <b>Vib. then ring</b> .
	The alert type is <b>Silent</b> .
	The earphone is plugged.
	Missed calls.
	Call forwarding enabled.

Icon	Indicates ...
	New text messages.
	New multimedia messages.
	Alarms activated.
	Keypad locked.
	Battery level.
	MicroSD card inserted.

## 2 Getting Started

 
### Installing the SIM Cards and Battery

You can install up to two subscriber identity module (SIM) cards in the phone at the same time.

When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

Before removing the battery and the SIM cards, ensure that your phone is powered off.

To enable dual-SIM mode, power on the phone, select **Menu** > **Settings** > **Dual SIM settings** > **Dual SIM open**.

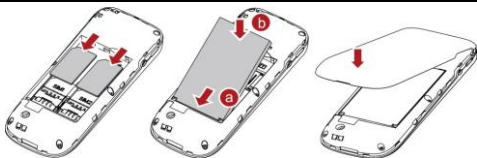

## Installing a microSD Card

When installing a microSD card, ensure that the gold contact area faces down, and that the beveled edge of the microSD card aligns with that of the microSD card slot.



## Charging the Battery

1. Connect the charger to an AC power socket.
2. Connect the charger to the phone's charger jack.
3. Wait until the battery is fully charged.

While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.



When you charge a completely exhausted battery, the charging icon may appear several minutes later.

4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

## Phone Lock



The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. You can change the preset phone unlock code (**1234**) to any number of four to eight digits.

If you forget the phone unlock code, contact your service provider.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the PIN lock:

1. In standby mode, select **Menu > Settings > Security settings > SIM 1/SIM 2 security > PIN lock**.
2. Enter the PIN, and press  (**OK**) or .

If you enter the incorrect PIN a specified number of times, the phone prompts you to enter the PUK.

---

If you enter the incorrect PUK a specified number of times, the SIM card will become permanently invalid. If this occurs, contact your service provider for a new SIM card.

## Locking and Unlocking the Keypad

To lock the keypad, press and hold for about 3 seconds in standby mode. To unlock the keypad, press (**Unlock**) then (**OK**) in quick succession.

If the **Auto keypad lock** function is enabled, the phone will lock the keypad automatically after being idle in standby mode for a pre-defined period.

When the keypad is locked, you can press (**Answer**) or to answer a call or make an emergency call.


# 3 Voice Services


## Dual-Card Management



Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes unusable.

## Making a Call


1. In standby mode, enter a phone number.



- To make an international call, press  twice to enter the plus sign (+). Then enter the country code or region code, area code, and phone number.

- To call an extension, enter the phone number, press  three times to enter **p**, and enter the extension number.

2. Press  or  and select **SIM1/SIM2 voice call** to dial the number.



3. Press  to end the call.


 
 • You can also make a call from call logs, contacts, and messages.



- During a call, you can press  to adjust the in-call volume. You can also press  (**Options**) and select **Volume**, and then press .

## Answering a Call



When there is an incoming call:

- Press  or  (**Answer**) to answer the call.

- Press  (**Silent**) to mute the speaker, and then press  (**Reject**) to reject the call.

- If the **Silent** profile is activated, press  or  (**Reject**) to reject the call.

---

If the **Any key** answer function is enabled, you can press any key except  and  to answer a call.

---

## 4 Text Input




 
 
 
 
 
### Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press to switch between text input modes.

Indicator	Text Input Mode
<b>ABC, abc</b> and <b>Abc</b>	Multi-tap input modes
<b>s ABC, s abc</b> and <b>s Abc</b>	Predictive input modes
<b>123</b>	Number input mode





- Press  (**Clear**) once to delete the last character entered. Press and hold  (**Clear**) for about 3 seconds to delete all the characters.
- In any input mode, press  to display the commonly used symbol list.
- In multi-tap input mode, repeatedly press  to select and enter commonly used symbols, press  once to enter a space, and press  twice to enter **0**.
- In predictive input mode, press  to display commonly used symbols, and press  to enter a space.



## Entering a Letter

In multi-tap input mode, press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter, and so on.

In Predictive input mode:

1. Press each key only once according to the spelling of the desired word.

The phone displays candidate words.





2. Press  to scroll to the desired word, and press  to turn pages.

- 
3. Press  (**Select**) or  to enter the desired word.

## Entering a Digit

In number input mode, simply press the number key labeled with the desired digit.

## Entering a Symbol

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  (**OK**) or  to enter the desired symbol.

# 5 Services

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the corresponding service from your service provider and configure your phone's relevant settings.

For details about services and charges, contact your service provider.

## Network Settings


Before attempting to access WAP sites on your phone, you must set your data account and WAP parameters.

### Setting Up Your Data Account

1. Select **Menu > Services > Internet service > Settings >**

---



### Data account > SIM1/SIM2.

2. Select your service provider.
3. Edit the data account information.
4. Press  (**OK**) to save the settings.

### Setting Up Your WAP Profile

1. Select **Menu > Services > Internet service > Settings > Select profile.**
2. Select **SIM1** or **SIM2** to set the default SIM card.

### Connecting to a Network

1. Select **Menu > Services > Internet service.**
2. Select **Homepage, Bookmarks, Input URL or search, Recent pages** or **Settings.**
3. Press  (**OK**) or  to access the website.

### Chat Function

The **Facebook** application is a social networking service (SNS) that lets you connect with family and friends.

To use Facebook, select **Menu > Services > Facebook**, and enter your email and password. You will then be connected to Facebook and redirected to its homepage.


 


- Check GPRS settings before using this application.
- Before saving the chat history, ensure that a microSD card has been inserted to the phone.

---

## 6 Phonebook

### Creating a Contact

1. Select **Menu** > **Phonebook** > **Add new contact**.
2. Select **To SIM1**, **To SIM2**, or **To Phone** for saving the contact.
3. Edit the contact information.
4. Press  or  (**Options**) and select **Save** to save the contact.

### Searching for a Contact







1. Select **Menu** > **Phonebook**.
2. Enter the first letter of the contact name in the search bar. Contacts who have names that start with this letter will be displayed.

## 7 File Manager

The **File manager** application lets you manage files and folders stored in the phone memory or microSD card.

To manage files and folders:



1. Select **Menu** > **File manager**.

- 
- Use  to scroll to the desired folder, and press  to open the folder, or press  (**Options**) for the following options:
    - **Open**: open the folder.
    - **New folder**: create a folder.
    - **Rename**: rename the folder.
    - **Delete**: delete the folder.
    - **Sort by**: sort folders by name, type, time modified, or size.
  - Use  to scroll to the desired file, and press  to open the file or press  (**Options**) for additional operations.

The operations applicable to files may be different from those applicable to folders.



## 8 Messaging

### Sending a Text Message

- Select **Menu** > **Messaging** > **New message** > **Text message**.
- Write the message.
- Press  and enter the recipient's phone number or add a recipient from **Phonebook**.
- Press , and select **From SIM1** or **From SIM2** to send the message.


## Sending a Multimedia Message











- Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to the service.
  - Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.
1. Select **Menu > Messaging > New message > Multimedia message**.
  2. Edit the message.  
You can add pictures, audio clips, and attachments to the message.
  3. Press , and enter the recipient's phone number or add a recipient from **Phonebook**.
  4. Press , and select **SIM1** or **SIM2** to send the message.







# 9 Multimedia


## Audio Player

1. Select **Menu > Multimedia > Audio Player**.
2. Press  (**List**), and select a music file.
3. Select an audio clip.


- 
4. Press  to play the audio clip.  
When the audio clip is being played:
    - Press  to pause or continue.
    - Press  or  to adjust the volume.
    - Press  or  to skip to the previous or next music file, or press and hold  or  for about 3 seconds to rewind or fast-forward the clip.

## Video Player


1. Select **Menu** > **Multimedia** > **Video Player**.
2. Select a video clip.
3. Press  to play the video clip.  
When the video clip is being played:
  - Press  to pause or continue.
  - Press  or  to adjust the volume.
  - Press  or  to rewind or fast-forward the clip.


 Video Player only supports video files in the MP4, avi and 3GP format.

## Image viewer

1. Press  (**Menu**), and then select **Multimedia** > **Image Viewer** to launch the Image album.

---

2. Press  to view image.

Press  (**Options**) for other options, including **View**, **Image information**, **Browse style**, **Send**, **Use as**, **Rename**, **Delete**, **Sort by**, **Delete all files** and **Storage**.







## FM Radio

Connect the headset to the phone before you attempt to listen to an FM radio station. The headset cable also functions as the radio's antenna when it is turned on. To ensure the best possible reception and therefore audio quality, do not unplug the headset or severely bend or twist the headset cable.

If your phone comes with a built-in FM radio antenna. You can listen to the FM radio without a headset.

1. Select **Menu** > **Multimedia** > **FM Radio** to access the **FM Radio** screen.

2. On the **FM Radio** screen, you can:




- Press  to turn the FM radio on or off.
- Press  or  to adjust the volume.
- Press  or  to adjust the frequency at 0.1MHz intervals.
- Press  (**Options**) for options such as **Channel list**, **Manual input**, **Auto search**, **Settings**, **Record**, and **File list**.

## Sound Recorder

1. Select **Menu** > **Multimedia** > **Sound Recorder**.

2. Press  (**Options**) and select **New record**.






 


- 
3. While recording, you can press  (**Pause/Continue**) or  to pause or continue.
  4. Press  (**Stop**) to stop recording.

## 10 Organizer

### Calendar

The **Calendar** application lets you view dates, edit schedules, and set alerts. If you create a memo in the schedule for a particular date, that date will be highlighted. To view all memos

for a day, press  to select the date. Press  (**Options**) for the following options:

- **View:** check memos for that specified day.
- **View all:** check all memos.
- **Add event:** enter **Type**, **Start**, **End**, **Subject**, **Alarm**, **Repeat**, **Location**, and **Details**. Press  or  (**Select/Edit**) to edit, or press  (**Save**) or  to save and exit.
- **Delete event:** clear memos in **All**, **Overdue**, or **Specific period**.
- **Jump to date:** enter and jump to a date.
- **Go to today:** go to today.
- **Go to weekly view:** display a weekly view of the calendar.

---

## Tasks

The **Tasks** application lets you record important events.

## Alarm

The **Alarm** application lets you set alarms to ring at specified times.

## Calculator

The **Calculator** application lets you perform a variety of mathematical operations. The accuracy of certain decimals is limited, and the calculator can only be used for simple calculations.


## Stopwatch


The **Stopwatch** application lets you timing in different ways.

## Ebook Reader

1. In standby mode, select **Menu > Organizer > Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in the default storage location (phone or microSD card) to the bookshelf.

2. Select an ebook.
3. Press  to open the ebook.

While reading the ebook, press  (**Options**) for options such as **Full screen on/off**, **Jump to**, **Add**

---

**bookmark, Go to bookmark, Delete bookmark, Auto scroll on/off** and **Close**.


 

4. Press  (**Back**) to close the ebook.



When reading an ebook, use  to turn pages, and use  to change lines.

## Torch

The **Torch** application lets you shine a bright light.

- In standby mode, select **Menu** > **Organizer** > **Torch**, press  or  (**On/Off**) to turn the torch on or off.
- In standby mode, press and hold  to turn the torch on or off.

## STK

Select **Menu** > **Organizer** > **STK** to enter STK function. The SIM Tool Kit (STK) function is a value-added service provided by your service provider; you can use it to send text messages, view news, and use other applications. For more information, contact your service provider.

## Games



 
This phone comes with three built-in games. Select **Menu** > **Organizer** > **Games** to select a game.

---

# 11 User profiles

Your phone provides you with various profiles: **General**, **Silent**, **Meeting**, **Outdoor**, and **My style**. You can customize the ringtone and other settings for each profile depending on the environment and need. You can activate or deactivate a profile.

To customize a profile:

1. Select **Menu** > **User profiles**.
2. Use  to scroll to the desired profile, and press  to select the profile or press  (**Options**) for the following options (except **Silent**):
  - **Activate**: activate the profile.
  - **Customize**: set the alert type, ring type, SIM1/2 incoming call, ringtone volume, SIM1/2 message, message volume, keypad tone, keytone volume, power on/off, and system alert.
  - **Reset**: Reset to default settings.



In the **My style** profile, you may **Rename** the profile name.

---

# 12 Settings

## Phone Settings

Select **Menu** > **Settings** > **Phone settings**.





Configure the following settings:

- **Time and date:** set the home city, time, date, auto update time, format, and time zone.
- **Schedule power on/off:** set the time at which the phone will power on or off automatically.
- **Language:** set the display language.
- **Pref. input method:** set the preferred input method.
- **Display:** set the wallpaper, time, date, network name, LCD backlight and keyboard backlight.
- **Dedicated Key:** set the shortcuts for dedicated key.

## Security Settings

### Changing PIN

To change the PIN, enable **PIN lock** first, and do the following:

1. Select **Menu** > **Settings** > **Security settings** > **SIM 1/SIM 2 security** > **Change PIN**.
2. Enter the PIN, and press  or  (**OK**).
3. Enter a new PIN, and press  or  (**OK**).
4. Re-enter the new PIN to confirm.

 



---

## Changing PIN2

PIN2 is the personal identification number used for special functions provided by the network, such as billing.

SIM1 PIN2 and SIM2 PIN2 are configured separately.

To change PIN2, do the following:

1. Select **Menu > Settings > Security settings > SIM 1/SIM 2 security > Change PIN2.**
2. Enter PIN2, and press  or  (**OK**).
3. Enter a new PIN2, and press  or  (**OK**).
4. Re-enter the new PIN2 to confirm.

---

# 13 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the

---

areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## **Traffic Security**

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.



- 
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
  - In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
  - Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in

---

power consumption. As a result, the talk time and the standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

---

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.

- 
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
  - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
  - Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an

---

explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves.

---

These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.200 W/kg, and when properly worn on the body is 1.06 W/kg.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

---

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

---

Version: 01 NO.:





# **HUAWEI G3621L**

---

**GSM Mobile Phone**

## **User Guide**

---

**Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.**

## **Trademarks and Permissions**



**HUAWEI, HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

---

# Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone.....	1
Keys and Functions.....	2
Screen Icons.....	5
<b>2 Getting Started.....</b>	<b>6</b>
Installing the SIM Cards and Battery.....	6
Installing a microSD Card.....	6
Charging the Battery.....	7
Phone Lock.....	7
PIN and PUK.....	8
Locking and Unlocking the Keypad.....	8
<b>3 Voice Services.....</b>	<b>9</b>
Dual-Card Management.....	9
Making a Call.....	9
Answering a Call.....	10
<b>4 Text Input .....</b>	<b>10</b>
Changing the Text Input Mode .....	10
Entering a Letter .....	11
Entering a Digit.....	12
Entering a Symbol.....	12

---

<b>5 Audio Player</b> .....	<b>12</b>
<b>6 Phonebook</b> .....	<b>13</b>
Creating a Contact.....	13
Searching for a Contact .....	13
<b>7 File Manager</b> .....	<b>14</b>
<b>8 Messaging</b> .....	<b>15</b>
<b>9 Multimedia</b> .....	<b>15</b>
Video player.....	15
Image viewer .....	16
FM radio .....	16
Sound recorder .....	17
<b>10 Organizer</b> .....	<b>18</b>
Calendar .....	18
Alarm .....	18
Calculator.....	18
Torch .....	18
STK.....	19
<b>11 User profiles</b> .....	<b>20</b>
<b>12 Settings</b> .....	<b>21</b>
Phone Settings.....	21
Security Settings.....	21
<b>13 Warnings and Precautions</b> .....	<b>23</b>

 


Features marked with "optional" are optional. These features may vary according to service providers. For details, contact your service provider.

# 1 Getting to Know Your Phone

## Your Phone

The following figure shows the appearance of your phone and is provided for your reference only.

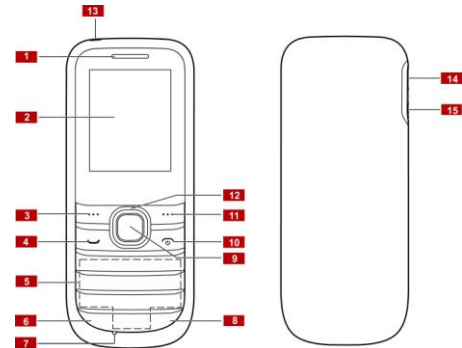









 
1 Earpiece



9 Confirm key

2	Screen	10	End/Power key
3	Left soft key	11	Right soft key
4	Call/Answer key	12	Navigation keys
5	Number keys	13	Torch
6	* key	14	Charge interface
7	Microphone	15	Headset interface
8	# key		

## Keys and Functions












Press ...	To ...
	<ul style="list-style-type: none"> <li>• Make a call.</li> <li>• Answer an incoming call.</li> <li>• View call logs in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold the key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Select the option displayed in the lower left corner of the screen.</li> <li>• Access <b>Menu</b> in standby mode.</li> <li>• Unlock the keypad (must also press the right soft key immediately after).</li> </ul>

Press ...	To ...
	<ul style="list-style-type: none"> <li>• Select the option displayed in the lower right corner of the screen.</li> <li>• Access <b>Names</b> in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Confirm a selection.</li> <li>• Turn the torch on or off in standby mode (press and hold the key for about 3 seconds).</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the functions assigned to the navigation keys in standby mode.</li> <li>• Customize the functions assigned to the navigation keys, select <b>Menu &gt; Settings &gt; Phone settings &gt; Dedicated key</b>.</li> </ul>
  	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call voicemail in standby mode (press and hold the <b>1</b> key for about 3 seconds).</li> <li>• Speed-dial phone numbers in standby mode (press and hold the <b>2-9</b> keys for about 3 seconds).</li> <li>• Select an option labeled with the corresponding number.</li> </ul>

Press ...	To ...
	<ul style="list-style-type: none"> <li>• Enter * (press the key once), + (press the key twice), <b>p</b> (press the key three times), and <b>w</b> (press the key four times) in standby mode.</li> <li>• Display the symbol list in editing mode.</li> <li>• Switch between the <b>Silent</b> profile and current profile in standby mode (press and hold the key for about 3 seconds).</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter #.</li> <li>• Switch between text input methods in editing mode.</li> <li>• Lock the keypad in standby mode (press and hold the key for about 3 seconds).</li> </ul>



## Screen Icons

Icon	Indicates ...
	Signal strength.
	The alert type is <b>Ring only</b> .
	The alert type is <b>Silent</b> .
	The earphone is plugged.
	Missed calls.
	Call forwarding enabled.
	New text messages.
	Alarms activated.
	Keypad locked.
	Battery level.
	MicroSD card inserted.

---

## 2 Getting Started

 
### Installing the SIM Cards and Battery

You can install up to two subscriber identity module (SIM) cards in the phone at the same time.

When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

 
Before removing the battery and the SIM cards, ensure that your phone is powered off.

To enable dual-SIM mode, power on the phone, select **Menu** > **Settings** > **Dual SIM settings** > **Dual SIM open**.

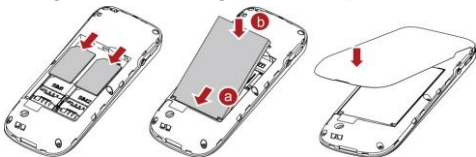

### Installing a microSD Card

When installing a microSD card, ensure that the gold contact area faces down, and that the beveled edge of the microSD card aligns with that of the microSD card slot.

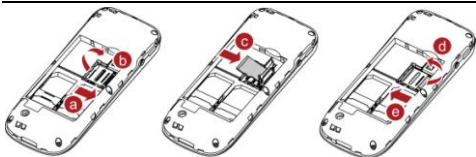

## Charging the Battery

1. Connect the charger to an AC power socket.
2. Connect the charger to the phone's charger jack.
3. Wait until the battery is fully charged.

While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.



When you charge a completely exhausted battery, the charging icon may appear several minutes later.

4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

## Phone Lock

 

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. You can change the preset phone unlock code (**1234**) to any number of four to eight digits.

If you forget the phone unlock code, contact your service provider.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.



 
To enable the PIN lock:

1. In standby mode, select **Menu > Settings > Security settings > SIM 1/SIM 2 security > PIN lock**.
2. Enter the PIN, and press  (OK) or .


 


If you enter the incorrect PIN a specified number of times, the phone prompts you to enter the PUK.

If you enter the incorrect PUK a specified number of times, the SIM card will become permanently invalid. If this occurs, contact your service provider for a new SIM card.

## Locking and Unlocking the Keypad

To lock the keypad, press and hold  for about 3 seconds in standby mode. To unlock the keypad, press  (**Unlock**) then  (**OK**) in quick succession.

If the **Auto keypad lock** function is enabled, the phone will lock the keypad automatically after being idle in standby mode for a pre-defined period.

 When the keypad is locked, you can press  (**Answer**) or  to answer a call, or press  to make an emergency call.






---

## 3 Voice Services




### Dual-Card Management

Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes unusable.

### Making a Call







1. In standby mode, enter a phone number.
  - To make an international call, press  twice to enter the plus sign (+). Then enter the country code or region code, area code, and phone number.
  - To call an extension, enter the phone number, press  three times to enter **p**, and enter the extension number.
2. Press  or  and select **SIM1/SIM2 voice call** to dial the number.
3. Press  to end the call.





- You can also make a call from call logs, contacts, and messages.
- During a call, you can press  to adjust the in-call volume. You can also press  (**Options**) and select **Volume**, and then press .

## Answering a Call


When there is an incoming call:

- Press  or  (**Answer**) to answer the call.
- Press  (**Silent**) to mute the speaker, and then press  (**Reject**) to reject the call.
- If the Silent profile is activated, press  or  (**Reject**) to reject the call.

If the **Any key** answer function is enabled, you can press any key except  and  to answer a call.




 
 
 
 

# 4 Text Input

## Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press  to switch between text input modes.

Indicator	Text Input Mode
<b>ABC</b> and <b>abc</b>	Multi-tap input modes
<b>s ABC</b> and <b>s abc</b>	Predictive input modes
<b>123</b>	Number input mode



- Press  (**Clear**) once to delete the last character entered. Press and hold  (**Clear**) for about 3 seconds to delete all the characters.
- In any input mode, press  to display the commonly used symbol list.
- In multi-tap input mode, repeatedly press  to select and enter commonly used symbols, press  once to enter a space, and press  twice to enter **0**.
- In predictive input mode, press  to display commonly used symbols, and press  to enter a space.





## Entering a Letter

In multi-tap input mode, press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter, and so on.

In Predictive input mode:

1. Press each key only once according to the spelling of the desired word.





The phone displays candidate words.

2. Press  to scroll to the desired word, and press  to turn pages.
3. Press  (**Select**) or  to enter the desired word.




## Entering a Digit

In number input mode, simply press the number key labeled with the desired digit.









## Entering a Symbol

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  (**OK**) or  to enter the desired symbol.

# 5 Audio Player


 
1. Select **Menu** > **Audio player**.
2. Press  (**List**), and select an audio clip.
4. Press  to play the audio clip. When the audio clip is being played:
  - Press  to pause or continue.



- 
- Press , ,  and  to adjust the volume.
  - Press  or  to skip to the previous or next music file, or press and hold  or  for about 3 seconds to rewind or fast-forward the clip.


## 6 Phonebook

### Creating a Contact

1. Select **Menu** > **Phonebook** > **Add new contact**.
2. Select **To SIM1**, **To SIM2**, or **To Phone** for saving the contact.
3. Edit the contact information.
4. Press  or  (**Options**) and select **Save** to save the contact.

### Searching for a Contact

1. Select **Menu** > **Phonebook**.
2. Enter the first letter of the contact name in the search bar. Contacts who have names that start with this letter will be displayed.







 Enter numbers in standby mode, and corresponding numbers or contacts will be displayed.

---

## 7 File Manager

The **File manager** application lets you manage files and folders stored on the microSD card.

To manage files and folders:



1. Select **Menu > File manager**.
2. Use  to scroll to the desired folder, and press  to open the folder, or press  (**Options**) for the following options:
  - **Open:** open the folder.
  - **New folder:** create a folder.
  - **Rename:** rename the folder.
  - **Delete:** delete the folder.
  - **Sort by:** sort folders by name, type, time modified, or size.
3. Use  to scroll to the desired file, and press  to open the file or press  (**Options**) for additional operations.

The operations applicable to files may be different from those applicable to folders.

---









## 8 Messaging

To send a text message:

1. Select **Menu** > **Messaging** > **New message**.
2. Write the message.
3. Press  and enter the recipient's phone number or add a recipient from **Phonebook**.
4. Press  and select **From SIM1** or **From SIM2** to send the message.

## 9 Multimedia




### Video player

1. Select **Menu** > **Multimedia** > **Video player**.
2. Select a video clip.
3. Press  to play the video clip.  
When the video clip is being played:
  - Press  to pause or continue.
  - Press , ,  and  to adjust the volume.
  - Press  or  to rewind or fast-forward the clip.



Video Player only supports video files in the MP4, avi and 3GP format.






## Image viewer

 
1. Press  (**Menu**), and then select **Multimedia > Image viewer** to launch the Image album.
2. Press  to view image.  
Press  (**Options**) for other options, including **View, Image information, Browse style, Use as, Rename, Delete** and **Sort by**.




## FM radio

Connect the headset to the phone before you attempt to listen to an FM radio station. The headset cable also functions as the radio's antenna when it is turned on. To ensure the best possible reception and therefore audio quality, do not unplug the headset or severely bend or twist the headset cable.

 



If your phone comes with a built-in FM radio antenna. You can listen to the FM radio without a headset.

1. Select **Menu > Multimedia > FM radio**.
2. Press  to turn the FM radio on or off.
3. On the **FM radio** screen, you can:
  - Press  or  to adjust the volume.
  - Press  or  to tune by 0.1 MHz.

- 
- Press  (**Options**) for options such as **Channel list**, **Manual input**, **Auto search** and **Settings**.

 When the FM radio is playing in background, in standby mode press  and then  (**Yes**) to turn it off.



## Sound recorder

1. Select **Menu > Multimedia > Sound recorder**.
2. Press  (**Options**) and select **New record**.
3. While recording, you can press  (**Pause/Conti...**) or  to pause or continue.
4. Press  (**Stop**) to stop recording or preview.

---

# 10 Organizer

## Calendar

The **Calendar** application lets you view dates. Press  to select the date. Press  (**Options**) for the following options:

- **Jump to date:** enter and jump to a date.
- **Go to today:** go to today.

## Alarm


 
The **Alarm** application lets you set alarms to ring at specified times.


## Calculator

The **Calculator** application lets you perform a variety of mathematical operations. The accuracy of certain decimals is limited, and the calculator can only be used for simple calculations.

## Torch

The **Torch** application lets you shine a bright light.

- In standby mode, select **Menu** > **Organizer** > **Torch**, press  or  (**On/Off**) to turn the torch on or off.

- 
- In standby mode, press and hold  to turn the torch on or off.

## STK



 
Select **Menu > Organizer > STK** to enter STK function. The SIM Tool Kit (STK) function is a value-added service provided by your service provider; you can use it to send text messages, view news, and use other applications. For more information, contact your service provider.

---

# 11 User profiles

Your phone provides you with various profiles: **General**, **Silent**, **Outdoor**, and **My style**. You can customize the ringtone and other settings for each profile depending on the environment and need (except **Silent**). You can activate or deactivate a profile.

To customize a profile:

1. Select **Menu** > **User profiles**.
2. Use  to scroll to the desired profile, and press  to select the profile or press  (**Options**) for the following options (except **Silent**):
  - **Activate**: activate the profile.
  - **Customize**: set the ring type, incoming call, ringtone volume, message, message volume, keypad tone, keytone volume, power on/off, and system alert.
  - **Reset**: Reset to default settings.



In the **My style** profile, you may **Rename** the profile name.



---

# 12 Settings

## Phone Settings

Select **Menu > Settings > Phone settings**.





Configure the following settings:

- **Time and date:** set the home city, time, date, and format.
- **Schedule power on/off:** set the time at which the phone will power on or off automatically.
- **Language:** set the display language.
- **Pref. input method:** set the preferred input method.
- **Display:** set the wallpaper, time, date, network name, LCD backlight and keyboard backlight.
- **Dedicated Key:** set the shortcuts for dedicated key.

## Security Settings

### Changing PIN

To change the PIN, enable **PIN lock** first, and do the following:

1. Select **Menu > Settings > Security settings > SIM 1/SIM 2 security > Change PIN**.
2. Enter the PIN, and press  or  (**OK**).
3. Enter a new PIN, and press  or  (**OK**).
4. Re-enter the new PIN to confirm.

 



---

## Changing PIN2

PIN2 is the personal identification number used for special functions provided by the network, such as billing.

SIM1 PIN2 and SIM2 PIN2 are configured separately.

To change PIN2, do the following:

1. Select **Menu > Settings > Security settings > SIM 1/SIM 2 security > Change PIN2.**
2. Enter PIN2, and press  or  (**OK**).
3. Enter a new PIN2, and press  or  (**OK**).
4. Re-enter the new PIN2 to confirm.

---

# 13 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the

---

areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## **Traffic Security**

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.

- 
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
  - In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
  - Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in

---

power consumption. As a result, the talk time and the standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

---

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.

- 
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
  - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
  - Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an



---

explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves.

---

These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.200 W/kg, and when properly worn on the body is 0.637 W/kg.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

---

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

---

Version: 01 NO.: