



HUAWEI G5730

GSM Mobile Phone

User Guide

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, People's Republic of China


Tel: **+86-755-28780808**
E-mail: mobile@huawei.com

Global Hotline: **+86-755-28560808**
Website: www.huawei.com

Copyright © Huawei Technologies Co., Ltd. 2009. All rights reserved.

Trademarks and Permissions



HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS

REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

 
1 Getting Started	1
Installing the MicroSD Card, SIM Card and Battery.....	1
Charging the Battery	1
2 Getting to Know Your Phone ...	2
Your Phone.....	2
Keys and Functions.....	4
Screen Icons	6
3 Voice Services	8
Making a Call.....	8
Answering a Call	9
4 Text Entry	10
Changing the Text Input Modes	10
Deleting Text	10
Entering Text	11
Entering Digits	11
Entering Symbols	11
5 Messaging	12
Writing and Sending a Text Message.....	12
Writing and Sending a Multimedia Message.....	12
6 Contacts	14
Creating a Contact.....	14
Searching for a Contact	14
7 Camera	15
Taking a Photo	15
Shortcut Keys on the Camera Screen.....	15
Taking a Video	16
8 Radio	17
Searching for Channels.....	17

Listening to the Radio	17
Operations On the FM Screen ..	18
9 Bluetooth	19
Enabling or Disabling the Bluetooth Function	19
Pairing a Device with the Phone	19
Bluetooth Settings.....	19
Viewing Phone Information	20
10 Multimedia	21
Video Player	21
Music Player	21
Adding a New Play List in Music Player.....	22
11 Being used as a USB Disk	22
12 WAP	23
13 Warnings and Precautions ..	23

1 Getting Started

Installing the MicroSD Card, SIM Card and Battery

Ensure that the golden contact area on the SIM card is facing downward, and the beveled corner is properly aligned with the SIM card slot.

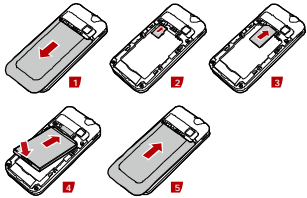

Charging the Battery

 
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged, disconnect the charger from the phone.


 








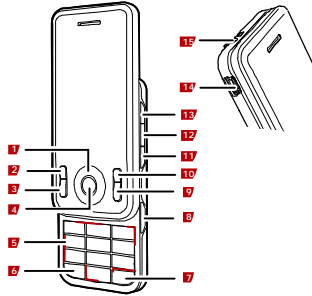

2 Getting to Know Your Phone

Your Phone




The following figure shows the appearance of your phone and it is for your reference only.






- 1 Navigation keys ()
- 2 Left soft key ()
- 3 Answer key ()
- 4 Confirm key ()
- 5 Number keys



- 6 * key (*)
- 7 # key (#)
- 8 Camera key ()
- 9 End key ()
- 10 Right soft key ()
- 11 Volume down key ()
- 12 Music key ()
- 13 Volume up key ()
- 14 Charger jack
- 15 Headset jack

Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"> Make a call. Answer an incoming call. View call logs in standby mode.
	<ul style="list-style-type: none"> Power on or power off the phone (by pressing and holding it). End a call, or reject an incoming call. Return to standby mode.
	Select the option displayed on the lower left corner of the screen.









Press ...	To ...
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> Display the main menu in standby mode. Confirm a selection.
	<ul style="list-style-type: none"> Scroll through the features on a menu screen or an option screen. Access the functions for which shortcuts are predefined in standby mode.









 

Press ...	To ...
	<ul style="list-style-type: none"> Enter numbers, letters, and characters.
0	<ul style="list-style-type: none"> Call the voice mail center in standby mode (by pressing and holding the 1 key).
-	
9	<ul style="list-style-type: none"> Speed-dial phone numbers in standby mode (by pressing and holding the 2-9 keys).



Press ...	To ...
	<ul style="list-style-type: none"> In standby mode, press the key once to enter *, twice to enter +, three times to enter P, and four times to enter W.
*	<ul style="list-style-type: none"> Enable or disable the meeting mode in standby mode (by pressing and holding it).
#	Enter #.
+, -	Adjust the volume.
	Access to the Music Player screen.
	Access to the Camera screen.

Screen Icons

You can know the phone status through the icons displayed on the top line of the screen.



Icon	Indicates...
	Signal strength.
	Roaming status.
	Battery power level.
	Edge signal.
	Ring alert type.
	Vibrate alert type.
	Ring and Vibrate alert type.
	Vibrate then ring alert type.
	Silence alert type.

Icon	Indicates...
	Missed call(s).
	Call forwarding.
	Unread text message.
	Unread multimedia message.
	Unread push message.
	An alarm is activated.
	The keypad is locked.
	Audio background playing.
	The Bluetooth function is enabled and the device is set to visible.
	The Bluetooth function is enabled but the device is set to invisible.

Icon	Indicates...
	The microSD card is installed and is available for use.
	The headset is connected and is available for use.

3 Voice Services

Making a Call

 
 


1. In standby mode, enter the phone number.
 - 1 To make an international call, press * twice consecutively to enter the plus sign (+). Then enter the international long distance code, country code or region code, area code, and phone number in sequence.
 - 1 To call an extension, enter the phone number, press * three times consecutively to insert P, and then enter the extension number.
2. Press  to dial the number.
3. Press  to end the call.





You can also make a call from Call Log, Contact List, or Inbox.

Answering a Call

When there is an incoming call, you can do as follows:

- 1 Press  to answer it.
- 1 Press  to reject it.
- 1 Press  (Mute) to mute the ringtone, and then press  (Reject) again to reject it.

 

If the **Cover Answer** function is enabled, you can open the slide to answer an incoming call.

 
If the **Any Key** answer function is enabled, you can press any key except  and  to answer an incoming call.


4 Text Entry

Changing the Text Input Modes


 
The indicator of the current text input mode is displayed on the upper left corner of the screen. You can press # to change the text input mode, press and hold # to change the input language and the preferential input methods.

Indicator	Text Input Mode
	Predictive
	Multi-tap

Indicator	Text Input Mode
	Numbers

-  In English input mode, press 1 to display the commonly used symbol list.
- In any input mode (except the "123" input mode), press 0 to enter a space. In multi-tap input mode, press 0 twice to enter 0.



Deleting Text

On the text-editing screen, press  (Clear) once to delete the character to the left of the cursor. Alternatively, press and hold  (Clear) to clear all characters at a time.

Entering Text

Using the Predictive Text Input Mode

1. Press each key only once according to the spelling sequence of the desired word.
The phone displays the commonly used words according to the numeric sequence of key presses.

2. Press  to scroll to the desired word.
3. Press  to enter the word.

Using the Multi-Tap Text Input Mode




In multi-tap input mode, you can press a key labeled with the desired letter once to enter the first letter on the key,

twice to enter the second letter on the key, and so on.

Entering Digits


1. In "123" input mode, you can directly press number keys labeled with desired digits.
1. In multi-tap input mode, press the number key consecutively until the desired digit appears on the screen.


Entering Symbols

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.

5 Messaging

Writing and Sending a Text Message



1. Select **Menu > Messages > SMS > Create message**.
2. Edit the text message.
3. Press  to select from the following options:
 - 1. **Send and save:** to add recipient(s), and set to save the message after sending it.
 - 1. **Send only:** to enter the phone number or select the recipient from the contact list.
 - 1. **Save:** to save the message.
 - 1. **Send to Many:** to add several recipients at a time.

1. **Send by Group:** to add all members of a group as the recipients.
4. Press  to send the message.

Writing and Sending a Multimedia Message





1. Select **Menu > Messages > MMS > Create MMS**.
2. Select **To, Cc or Bcc**.
Add phone numbers or email addresses to be sent.
3. Select **Subject**.
Edit the subject of the message.
4. Select **Edit Content**.
Edit the content of the message. You can add pictures, audio and video clips, and attachments to the multimedia message. You can also

insert a new slide, preview the message, and set the slide duration.

5. Press  to select from the following options:
 - | **Send and save:** to send the multimedia message and save it after sending.
 - | **Send only:** to send the multimedia message.
 - | **Save:** to save the multimedia message.
 - | **Save as template:** to save the multimedia message as a template.
-  Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and how to subscribe this service.


6 Contacts

Creating a Contact

1. Select **Menu > Contacts > Add New Contact**.
2. Select **To SIM** or **To Phone** for saving the contact.
3. Press  to edit the contact.
4. Press  to save the contact.
5. Press  (**Select**) to save the contact; press  (**Back**) to exit.

Searching for a Contact

1. Select **Menu > Contacts > Search contact**.
2. Enter the name, or the first letter of the name.

3. Press  and select **Search**.



To search for a contact, you can also enter the contact's name or the first letter of the name in the contact list.


7 Camera




Shortcut Keys on the Camera Screen

Taking a Photo


1. Select **Menu > Camera > Camera**.
2. Focus the lens on the scene. Press **← (Options)**, and then select to view the photo album or set relevant parameters.
3. Press **○** to take a photo. Then the picture is automatically saved in the **Photo** folder.
4. Press **← (Options)** to perform the following operations:
 - 1 **Delete**: to delete the picture.
 - 1 **Send**: to send the picture through the MMS or bluetooth.
 - 1 **Set as**: to set the picture as the wallpaper or screen saver.

Press ...	To ...
1	Set image effects.
	Zoom in on an image when viewing the photo album.
2	Improve the image quality under poor light conditions.
	Zoom out on an image when viewing the photo album.
3	Rotate an image when viewing the photo album.
4	Set the delay timer.
5	Set the continuous shooting.

Press ...	To ...
6	Set the night mode.
7	Set the image quality.
8	Set the image size.
	<ul style="list-style-type: none"> ↑ Zoom in or zoom out. ↑ Decrease or increase the luminance.
+ , -	Select a frame when focusing the lens with a resolution of 240 × 320 pixels.

3. Press  to start recording a video, and then press  (Stop) to stop.
4. Press  (Yes) to save the video.

Taking a Video

1. Select Menu > Camera > Video Recorder.
2. Press  (Options) to set relevant parameters.

8 Radio

The headset cable can be used as an antenna. To ensure good reception of radio programs, do not disconnect the headset from the phone or bend the headset cable extremely.


Searching for Channels

1. Select **Menu > FM** to access the FM screen.
2. Press **←** (**Options**) and choose **Tuning > Automatic Tuning**. Complete the search as prompted.




- | When you access the FM screen for the first time, the channel list is empty. Press **←** (**Tuning**) and complete the search as prompted.
- | The phone supports multiple searching modes, from which you can select as required.

Listening to the Radio



1. Select **Menu > FM** to activate the FM radio. After loading, the phone plays a program.
2. Press  to tune the required channel.
3. Press **+** or **-** to adjust the volume.

Operations On the FM Screen


Recording

Press  to start recording the program.

During the recording process, press


 to pause/continue, press  to stop.


Playing in the Background

Press  to enter the standby mode.


The radio program is then played in the background. The receiving effects of radio programs will not be affected by the operations unrelated to ringtones and voice services.

Handsfree Mode

Press  (Options) and select Loudspeaker to turn on the

speaker. To turn off the speaker, press  (Options) again and select Headset.

Switching Off the Radio

Press  (Options) and select Switch Off.

9 Bluetooth



Bluetooth communications can be set up between the devices within a maximum distance of 10 meters, and there should be no solid obstacles between the devices.

Enabling or Disabling the Bluetooth Function

1. Select **Menu > Settings > Bluetooth > Switch On/Off**.
2. Press **← (On/Off)** to enable or disable the Bluetooth function.

Pairing a Device with the Phone


1. Select **Menu > Settings > Bluetooth > Device list > Search new device** to search for available devices.
2. Select a device from the device list.
3. Press **← (Pair)** to pair the device with your phone. Enter the password if it is required.

Bluetooth Settings

Setting the Visibility of the Phone

1. Select **Menu > Settings > Bluetooth > Settings > Visibility**.
2. Press **← (On/Off)** to set the phone to be visible or invisible.

Renaming the Phone

1. Select **Menu > Settings > Bluetooth > Settings > Rename**.
2. Enter a new name.
3. Press  and then select **Done**.

Changing the Storage Location

1. Select **Menu > Settings > Bluetooth > Settings > Save location**.
2. Select the phone or the memory card as the storage location. If you select **Always ask**, you are asked to select a storage location before saving a file each time.

FTP Settings

- | **Shared folder:** to change the shared folder.




 


- | **Access right:** to select **Read only** or **Full control**.




Viewing Phone Information

Select **Menu > Settings > Bluetooth > My Device Information**. You can view the information, such as the device name, device address, and supported services.



 

 
10 Multimedia





Video Player

1. Select **Menu > Multimedia > Video Player > Phone/Memory card**.
2. Press  to select a video file.
3. Press  to play the video. When the video is being played, you can do as follows:
 - 1. Press  or  to adjust the volume.
 - 1. Press  to switch to the full-screen mode.
 - 1. Press  to fast forward or rewind the video.



1. Press  to pause/continue the video.
4. Press  or  (**Stop**) to stop playing the video.


Music Player

1. Select **Menu > Multimedia > Music Player**.
2. Press  to play the music. When the music is being played, you can do as follows:
 - 1. Press  or  to adjust the volume.
 - 1. Press  to display the play list.
 - 1. Press  to switch to the previous or next piece of music.

- 1. Press and hold  to fast forward or rewind the music.
- 2. Press  to pause/continue the music.
- 3. Press  to stop playing the music.
- 4. Press  (Back) to play the music in the Background.

Adding a New Play List in Music Player

1. Select Menu > Multimedia > Music Player.
2. Press  (Options) and select Play list to access My play lists.
3. Press  (Options) and select Add new play list.

4. Edit the paly list name.
5. Press  and select Done.

11 Being used as a USB Disk

Your phone can be used as a USB flash drive. In this case, you cannot operate the file systems on the phone, such as the camera and the MMS.

1. Connect the phone and the computer by using the USB cable.
2. Start Windows Resource Manager. Then you can drag and drop files between your phone and the computer.

12 WAP

It allows your phone to access the specified services provided by network service providers, and allows you to enjoy the mobile life easily. For example, you can browse the Internet and download your favorite pictures, ringtones, or music.

For more information about this function, consult your service provider.

13 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this

information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

Medical Device

- 1 Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- 1 Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and

do not carry the device in your front pocket.

- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on

the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. Also, if using

the device while driving a vehicle, please comply with the following guidelines:

- | Concentrate on driving. Your first responsibility is to drive safely.
- | Do not talk on the device while driving. Use hands-free accessories.
- | When you have to make or answer a call, park the vehicle at the road side before using your device.
- | RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- | In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- | Do not use your device while flying in an aircraft. Switch off your device

before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

Operating Environment

- | Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- | The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5

cm away from your body to meet the requirement earlier mentioned.

- ▮ On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- ▮ When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- ▮ While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- ▮ Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by battery.

Preventing Hearing Damage

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

Accessories

Use only the accessories delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An

improper power voltage may cause fire or the charger may not function properly.

- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally

heated while you charge or store the battery, remove the battery immediately and stop using it.

Otherwise, it may lead to battery leakage, overheating, explosion, or fire.

- | If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- | Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Clearing and Maintenance

- | The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a

wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.

- | Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- | Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- | Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function

properly and may lead to a fire or an explosion.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for

damages as the device and accessories are not covered by warranty.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves. Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the

independent scientific organization ICNIRP and include safety measures designed to ensure safety for all users, regardless of age and health.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the

FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 20 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested

for use at the ear is 0.628 W/kg, and when properly worn on the body is 0.956 W/kg.

void the FCC authorization to operate this device.

Issue: 01 Part number: 3101xxxx

FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by manufacturer name: Huawei Technologies Co., Ltd. may