

# User Guide

HUAWEI GSM Mobile Phone

Welcome to HUAWEI

# Contents

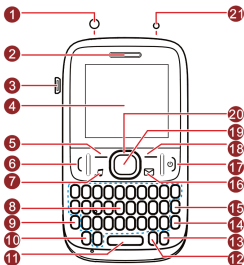 
<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Status Icons .....	4
<b>2 Getting Started .....</b>	<b>5</b>
Installing SIM Cards and the Battery .....	5
Removing the Battery and SIM Cards .....	5
Installing a microSD Card .....	6
Charging the Battery .....	6
Working with the Main Menu .....	7
Automatically Switching Between Profiles .....	7
Mass Storage .....	8
<b>3 Voice Services .....</b>	<b>8</b>
Dual-Card Management .....	8
Making a Call .....	9
Answering a Call .....	9
<b>4 Text Input .....</b>	<b>10</b>
Changing the Text Input Mode .....	10
Multi-Tap Input Mode .....	11
Predictive Input Mode .....	11
Number Input Mode .....	11
Entering Symbols .....	11
<b>5 Messaging .....</b>	<b>12</b>
Writing and Sending a Text Message .....	12
Writing and Sending a Multimedia Message .....	12

<b>6 Phonebook</b> .....	<b>14</b>
Creating a Contact .....	14
Searching for a Contact .....	14
Setting the Preferred Storage.....	14
Copying Contacts .....	14
<b>7 Multimedia</b> .....	<b>15</b>
Camera .....	15
Audio Player .....	16
FM Radio .....	17
<b>8 Services</b> .....	<b>17</b>
Network .....	18
STK .....	19
Facebook (optional) .....	19
<b>9 Bluetooth (optional)</b> .....	<b>20</b>
Using a Bluetooth Headset .....	20
Transferring Data .....	20
<b>10 File Manager</b> .....	<b>21</b>
<b>11 Tools and Games</b> .....	<b>21</b>
Alarm.....	21
Calculator .....	21
Calendar .....	21
Ebook Reader .....	22
Electronic Torch .....	22
Games .....	22
Stopwatch .....	23
Task .....	23
<b>12 Security Settings</b> .....	<b>23</b>
Phone Lock.....	23

PIN and PUK .....	24
Locking and Unlocking the Keypad.....	24
<b>13 Warnings and precautions .....</b>	<b>25</b>

# 1 Getting to Know Your Phone

## Your Phone











 



- |    |  |    |                            |
|----|--|----|----------------------------|
| 1  | Headset jack                                 | 12 | Sym key                    |
| 2  | Earpiece                                     | 13 | Input method switching key |
| 3  | Charger jack/Universal serial bus (USB) port | 14 | Enter key                  |
| 4  | Screen                                       | 15 | Delete key                 |
| 5  | Left soft key                                | 16 | Message key                |
| 6  | Call/Answer key                              | 17 | End/Power key              |
| 7  | Audio player key                             | 18 | Right soft key             |
| 8  | Keypad                                       | 19 | OK/Confirm key             |
| 9  | Fn key                                       | 20 | Navigation keys            |
| 10 | A/a key                                      | 21 | Torch                      |
| 11 | Space key                                    |    |                            |
















The figure above shows the appearance of your phone and is provided only for your reference.

## Keys and Functions



Press...	To...
	<ul style="list-style-type: none"><li>• Make a call from the SIM card 1 or 2 in standby mode.</li><li>• Answer a call.</li><li>• View call logs of SIM card 1 and 2 in standby mode.</li></ul>
	<ul style="list-style-type: none"><li>• Power the phone on or off (press and hold the key for about 3s).</li><li>• End or reject a call.</li><li>• Return to standby mode.</li></ul>
	<ul style="list-style-type: none"><li>• Access the main menu in standby mode.</li><li>• Select a highlighted item.</li></ul>
	<ul style="list-style-type: none"><li>• Access <b>Contacts</b> in standby mode.</li><li>• Return to the previous screen.</li></ul>
	Access <b>Audio player</b> in standby mode.
	Access <b>Inbox</b> in standby mode.
	<ul style="list-style-type: none"><li>• Access the main menu in standby mode.</li><li>• Confirm a selection.</li></ul>
	Scroll through the main menu (press  ,  ,  , or  ).


Press...	To...
 through through	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call voicemail in standby mode (press and hold the <b>1</b> key for about 3s).</li> <li>• Select an option labeled with the corresponding number.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter a space in editing mode.</li> <li>• Switch on or off torch in standby mode (press and hold the key for about 3s).</li> </ul>
	<ul style="list-style-type: none"> <li>• Lock the keypad in standby mode (press and hold the key for about 3s).</li> <li>• Switch between text input methods in editing mode.</li> </ul>
	Switch between uppercase and lowercase in editing mode.
	Display the symbol list in editing mode.

## Status Icons

Icon	Indicates...
	Signal strength for SIM card 1 or 2.
	New text messages for SIM card 1 or 2.
	New multimedia messages for SIM card 1 or 2.
	Call forwarding enabled for SIM card 1 or 2.
	Missed calls for SIM card 1 or 2.
	Alarms enabled.
	Keypad locked.
	Battery level.
	Bluetooth on.
	<b>General</b> profile activated.
	<b>Silent</b> profile activated.
 (optional)	<b>Meeting</b> profile activated.
	<b>Outdoor</b> profile activated.



Icon	Indicates...
	A microSD card installed.
	Headset connected.

 Features marked with "optional" are optional. These features may vary according to your service provider.

## 2 Getting Started

### Installing SIM Cards and the Battery

You can install two Subscriber Identification Module (SIM) cards in the phone at the same time. When inserting a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.




### Removing the Battery and SIM Cards

 
Before removing the battery and SIM cards, ensure that your phone is powered off.



## Installing a microSD Card

-  Before installing or removing a microSD card, power the phone off. When powered back on, the phone indicates whether the microSD card has been correctly installed.

 
You can expand your phone's memory capacity by installing a microSD card. When installing a microSD card, ensure that the gold contact area faces down.



## Charging the Battery

To charge the battery:










1. Connect the charger to the phone's charger jack.
2. Connect the charger to a power outlet.



3. Allow the battery to fully charge.  
When the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.

4. Disconnect the charger from the power outlet and then from the phone.



## Working with the Main Menu

1. In standby mode, press  (**Menu**) to access the main menu.
2. Press  to scroll to the desired submenu, and press  to access the submenu.
3. Press  or  to scroll to an option, and press  (**OK**) or  to select the option.
4. Press  (**Back**) to return to the previous screen or  to return to the standby mode.

## Automatically Switching Between Profiles

You can set your phone to activate different profiles at different times. The phone can automatically switch between profiles up to a maximum of three times a day.

To automatically switch between profiles:

1. Select **Menu > Settings > User profiles > Profile Switch Timing**.
2. Scroll to a time, and press  (**Edit**) to select the profile to be activated at the specified time.
3. Press  (**Done**) to save the settings.

## Mass Storage

When you have connected your phone to a computer using the USB cable, **Mass storage** is displayed on the phone screen.

Select **Mass storage** to manage the files stored in the phone memory or on the microSD card using the computer's file manager application.

The phone memory and its microSD card are displayed as removable disks on the computer. You can perform the following operations:

1. Double-click a disk to open it.
2. Copy, paste or delete files on a disk.
3. Disconnect the phone from the PC.







- Ensure that you connect and disconnect the USB cable correctly.
- Do not run the formatting command on the computer to format the phone memory; doing so may permanently damage the phone memory.
- You can transfer data and charge the battery by connecting the phone to the computer with the USB cable.

## 3 Voice Services

### Dual-Card Management

Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes unavailable, that is, no incoming calls can be received and the data services cannot be used.

 

## Making a Call

1. In standby mode, enter the phone number.
  - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number.
  - To call an extension, enter the switchboard number, press  to enter **P**, press  and then  to enter **W**, and enter the extension number.

2. Press  to dial the number.


 

3. Press  to end the call.







- You can also make calls from call logs, contacts, or messages.
- During a call, you can press  or  to adjust the in-call volume.



## Answering a Call

When you receive an incoming call:

- Press  to answer the call.
- Press  (**Answer**) to answer the call.
- Press  to reject the call.


- Press  (**Silent**) to mute the ringtone, and press  (**Reject**) to reject the call.
- Press  (**Silent**) to mute the ringtone, press  (**Answer**) to answer the call.

If the **Any key** answer function is enabled, you can press any key





except  and  to answer a call.

## 4 Text Input

### Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. You can press  to switch between text input modes.

Indicator	Text Input Mode
abc	Multi-tap input mode
eZi abc	Predictive input mode
123	Number input mode






- Press  (**Clear**) or  once to delete the last entered character. You can also press and hold  (**Clear**) to delete all the characters entered.
- In any text input mode, press  to start a new paragraph.

## Multi-Tap Input Mode

In multi-tap input mode, press the key labeled with the desired letter.

## Predictive Input Mode

To enter a word in predictive input mode:

1. Press each key once according to the spelling sequence of the desired word.  
The phone displays candidate words.
2. Press  or  to scroll left or right, and press  or  to turn pages.
3. Press  to enter the word.


## Number Input Mode

In number mode, press the key labeled with the desired digit.

## Entering Symbols






To enter a symbol with the QWERTY keypad in any input mode:

### Using to Enter a Symbol

- To enter only one symbol, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols, press  twice and then the keys labeled with the desired symbols.




### Using to Enter a Symbol

1. Press  to display the symbol list.

2. Press  or  to scroll left or right, and press  or  to scroll up or down.
3. Press  to select the desired symbol.

## 5 Messaging

### Writing and Sending a Text Message

 
1. In standby mode, select **Menu > Messages > Write message**.
2. Write the message.
3. Press  (**Options**), and select **Send to**.
4. Select **Enter recipient**, and enter the recipient's phone number; or select **Add from Phonebook** and add a recipient from the phonebook.  
To add multiple recipients, repeat this step.
5. Once the recipient or recipients have been added, and press  to send the message or press  (**Options**) for the following options:
  - **Send**: send the message to the recipient or recipients.
  - **Save**: save the message to Drafts and exit the message editing screen.
  - **From SIM1** or **From SIM2**: select the SIM card that you want to use to send or save the message.

 
 
### Writing and Sending a Multimedia Message

 

1. In standby mode, select **Menu > Messages > Write message**.




2. Write the message.

- Press  (**Options**), if you select **Add picture**, **Add sound**, **Add video**, or **Add subject**, the message automatically changes from a text message to a multimedia message. You can also select **Switch to MMS** to change from a text message to a multimedia message.

3. On the message editing screen, press , or press  (**Options**) and select **Send to**.
4. Select **Enter recipient** to enter the recipients' phone numbers, or select **Add from Phonebook** to add the desired recipients from the phonebook.

 

5. Once the recipient has been added, press  to immediately send the message, or press  (**Options**) for the following options:

- **Send**: send the message. Select **From SIM1** or **From SIM2** to select the SIM card that you want to use to send the message.
- **Change to Cc**: copy the message to the recipient.
- **Change to Bcc**: blind copy the message to the recipient.
- **Save to Drafts**: save the message to **Drafts**.

 

-  • You can contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message up to 300 KB.
  - Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

## 6 Phonebook

### Creating a Contact


 
1. In standby mode, select **Menu > Contacts > Add new contact**.
2. Select **To SIM1/SIM2** or **To Phone** for saving the contact.
3. Enter the contact information, press .
4. When prompted, press  (Yes).

### Searching for a Contact

1. In standby mode, select **Menu > Contacts**.
2. Enter the first letter of the contact name in the search box.
3. Press  or  to scroll to the desired contact.

### Setting the Preferred Storage



 
You can set the storage where you want to save new contacts.

1. In standby mode, select **Menu > Contacts**.
2. Press  (**Options**), and select **Phonebook settings > Preferred storage**.
3. Scroll to **SIM1**, **SIM2**, **Phone**, or **All** as desired.
4. Press  (**OK**).




 
### Copying Contacts

You can copy contacts to the phone, SIM 1 card or SIM 2 card.

## Copying One Contact

1. In standby mode, select **Menu > Contacts**.
2. Press  or  to scroll to the desired contact.
3. Press  (**Options**), and select **Copy**.
4. Select **To Phone**, **To SIM1**, **To SIM2**, or **To file** to copy the contact to the desired location.

 


## Copying All Contacts



 
 
 

1. In standby mode, select **Menu > Contacts**.
2. Press  (**Options**), and select **Phonebook settings > Copy contacts**.
3. Press  or  to scroll to the desired option, such as **From Phone** or **From SIM1/SIM2**.
4. Press  (**OK**) to copy all contacts to the desired location.

# 7 Multimedia

## Camera

 
 
 

 
 

 

The phone is equipped with a digital camera.

1. In standby mode, select **Menu > Multimedia > Camera**.
2. On the viewfinder screen:
  - Press  (**Options**) to view pictures or configure the camera settings.
  - Press  or  to adjust the exposure value.

- Press  or  to zoom in or zoom out.
  - 3. Focus the camera and press  to take a picture.
  - 4. Press  (**Back**) to return to the viewfinder; or press  (**Options**) and select **Delete** to delete the picture.
-  Only image resolution is 160\*128 can be set to wallpaper.

## Audio Player







The audio player plays audio files stored in **My music** in the phone memory or on the microSD card. If you want to listen to audio with enhanced quality sound, use the headset provided.

1. In standby mode, select **Menu > Multimedia > Audio player**; or press  in standby mode to access **Audio player**.
2. Press  to start playing audio files.  
When playing audio files:
  - Press  and  to adjust the volume.
  - Press  and  to switch between audio files.
  - Press the button on the headset cable to switch between audio files.
  - Press  (**List**) to view the audio file list, and press  (**Options**) to configure the relevant settings.
3. Press  to pause or continue.

## FM Radio

Your phone is equipped with a built-in antenna, so you can listen to radio programs through the loudspeaker. If the headset is included in the product package, you can also use the headset to listen to the FM radio.

1. In standby mode, select **Menu > Multimedia > FM radio**.
2. When listening to the radio:

- Press  to pause or continue.
- Press  and  to adjust the volume.
- Press  or  to switch between channels.
- Press a number key to switch to the corresponding channel in **Channel list**.
- Press  (**Options**) to view or edit the channel list, manually set a frequency, record an audio clip, append a new audio clip to an existing one, automatically search for and save channels, and configure the relevant settings.

## 8 Services

 
 
You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites, you must subscribe to the corresponding service from your service provider and set the relevant parameters on your phone. For details about the service and the charges, contact your service provider.


## Network

### Network Settings

 
Before accessing WAP sites, create your data account and configure WAP parameters.

To set the connection profile:

1. In standby mode, select **Menu > Settings > Connectivity > Data account**.
2. Press  (Options), and select **Add PS account**.
3. Edit **Account name, APN, User name, Password, Auth.type, SIM selection** and **Advanced settings** (such as **Homepage, Connection type, IP address**). Set the parameters based on the information provided by your service provider.
4. Press  (OK) to save the settings.

 If the data account provided by your service provider is already set up on your phone, you do not need to create a new data account.


To setting the WAP profile:

1. In standby mode, select **Menu > Services > Internet services > Settings > Data account**.
2. Select **SIM1** or **SIM2**.
3. Select your service provider, and press  (OK) to select a data account.

 
### Selecting which SIM Card to connect to the Internet

If dual-SIM mode is enabled, you must select which SIM card to use when connecting to the Internet.

To select a SIM card:

1. In standby mode, select **Menu > Services > Internet services > Settings > Select profile**.
2. Scroll to **SIM1**, **SIM2**, or **Always ask** as desired.
3. Press  (**OK**) to select the SIM card.

## Opening a Webpage

1. In standby mode, select **Menu > Services > Internet services > Search or input URL**.
2. Enter a Uniform Resource Locator (URL).
3. Press  to open the webpage.



It is recommended that you clear cache regularly to ensure a better browsing experience.

## STK

The SIM Tool Kit (STK) function is provided only by some service providers. It allows you to send text messages, read news, and use other applications. For details, contact your service provider.

## Facebook (optional)

The built-in social networking service (SNS) application **Facebook** on your phone allow you to send instant messages and files any time. Check that your phone has Internet access before you using the chat application.

To use **Facebook**:

1. In standby mode, select **Menu > Services > Facebook**.
2. Enter your registered email address and password.

 
## 9 Bluetooth (optional)

Bluetooth enables you to exchange data with other Bluetooth devices and use a Bluetooth headset.

### Using a Bluetooth Headset



No Bluetooth headset is included in the product package.

1. In standby mode, select **Menu > Settings > Connectivity > Bluetooth > Power**. Then select **On** to enable Bluetooth.
2. Select **Search audio device** to search for Bluetooth headsets in range.
3. Select the desired Bluetooth headset, and press  (**Pair**).
4. When a Bluetooth device is connected to the phone for the first time, you need to enter a pairing password for verification. Enter the password to pair with the Bluetooth headset.

After the phone is connected to the headset, a headset icon is displayed on the standby screen.

### Transferring Data

1. In standby mode, select **Menu > Bluetooth Settings > Connectivity > Bluetooth > Power**. Then select **On** to enable Bluetooth.
2. Select **My device > Search new device** to search for Bluetooth devices in range.
3. Pair the phone with the desired device.



4. After pairing your phone with another Bluetooth device, you can begin exchanging data with it.

## 10 File Manager

You can use **File manager** to organize files stored on your phone and microSD card. You can view photos, listen to music and read ebooks from **File manager**.

## 11 Tools and Games

### Alarm

The **Alarm** application lets you set five alarms or modify existing alarms.

You can set the alert time, repetition, and ring type.

Once an alarm has been set, the alarm icon is displayed on the notification panel.

### Calculator

The **Calculator** application lets you perform basic arithmetic operations.

### Calendar

The **Calendar** application lets you add events to the calendar and keep track of them.

 
## Ebook Reader

 
Your phone supports ebooks in .txt format.

1. In standby mode, select **Menu > Tools > Ebook reader** to display the bookshelf.

The phone automatically adds ebooks stored in **Ebook** on the microSD card to the bookshelf.



2. Scroll to the desired ebook.

3. Press  (**Options**), and then select **Open ebook** to start reading the ebook.

You can also press  (**Options**), and then select **Global settings** to configure settings such as **Font size**, **Scroll by** and **Brightness**.

4. Press  (**Back**) to stop reading.



- When reading an ebook, press  and  to turn pages.
- It is recommended that you store ebooks in **Ebook** on the microSD card.

## Electronic Torch

The electronic torch light the desired scene. Press  (**On**) to turn on the torch.

## Games

For your entertainment, your phone comes pre-installed with game. In standby mode, select **Menu > Fun & Games > Games > Games settings** to set the **Sound effect** and **Volume**.

## Stopwatch

Your phone equips with **Typical stopwatch** and **nWay stopwatch**. Select a type of stopwatch to measure time.

## Task

The **Tasks** application lets you view, add, edit, and delete tasks.

Once a task is added, the phone rings at the user-defined time to remind you of that specific task.


# 12 Security Settings

## Phone Lock

The phone lock protects your phone from unauthorized use. The preset password to unlock your phone is **1234**. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the password each time you power on the phone.

 
To enable the phone lock:


1. In standby mode, select **Menu > Settings > Security settings > Phone security > Phone lock**.

2. Enter the password, and press  (OK).

To change the password:

1. In standby mode, select **Menu > Settings > Security settings > Phone security > Change password**.

2. Enter the old password and press  (OK).

3. Enter a new password and press  (OK).  
The password must be a numeric string between four and eight digits.
  4. Enter the new password again to confirm it.
- If you forget the password, contact your service provider.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use.

 
If you incorrectly enter the PIN a specified number of times, the PIN is blocked and the phone prompts you to enter the PIN unblocking key (PUK).

If you incorrectly enter the PUK a specified number of times, the SIM card will become permanently invalid, and you must contact your service provider for a new SIM card.




Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

The lock for each SIM card must be configured separately.

 
To enable the PIN lock:

1. In standby mode, select **Menu > Settings > Security settings > SIM1 or SIM2 security > PIN lock**.
2. Enter the PIN and press  (OK).


## Locking and Unlocking the Keypad

To lock the keypad, press and hold  in standby mode for 3s. To unlock the keypad, press  (Unlock) and then  (OK).

If the **Auto keypad lock** function is enabled, the phone will automatically lock the keypad after being idle in standby mode for a preset period.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock** in stand mode, scroll to a period, and press  (OK) to select the period.



When the keypad is locked, you can press  to answer a call or make an emergency call.

## 13 Warnings and precautions

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic device

Power off your device when use is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

### Accessories

- Using an unapproved or incompatible charger or battery may cause fire, explosion or other hazards.
- Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other types of batteries, chargers, or accessories may void the warranty, may violate local regulations and laws, and may be dangerous.

Please contact your retailer for information about the availability of approved batteries, chargers, and accessories in your area.

## **Charger safety**

- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- If your device has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.
- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.

## **Battery safety**

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Do not solder battery poles or dismantle the battery. Doing so may lead to electrolyte leakage, excessive heat, fire, or explosion.
- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches

your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.

- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, and may be damaged, take it to an authorized service center for inspection.
- Improper battery use may lead to fire, explosion, or other hazards.
- Dispose of used batteries in accordance with local regulations.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.
- If the device standby and talk time shortens significantly, replace the battery.

## **Operating environment**

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using or charging your device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Observe local laws and regulations, and respect the privacy and legal rights of others.
- Avoid touching the antenna when you are on a call. Touching the antenna affects call quality, increases power consumption, and reduces talk and standby time.
- Ideal operating temperatures are 0 °C to 40 °C. Ideal storage temperatures are 0 °C to 40 °C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.

- Do not place your device or batteries on or in heating devices, such as microwave ovens, stoves, water heaters, or radiators. Batteries may explode if overheated.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- If your device has a camera flash, do not use it directly in the eyes of people or pets. Otherwise temporary loss of vision or damage to the eyes may occur.
- Do not allow children or pets to bite or suck the device or battery. Doing so may result in damage or explosion.

### Protecting your hearing when using a headset



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.
- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

### Child's safety

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

### Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to



prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.

## **Areas with flammables and explosives**

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

## **Traffic security**

Observe local laws and regulations while using the device. If using the device while driving a vehicle, observe the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not hold the device while driving. Use hands-free accessories.
- When you must make or answer a call, pull off the road safely and park the vehicle first.
- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding. Using wireless devices in an aircraft may disrupt wireless networks, present a hazard to aircraft operation, or be illegal.

## Cleaning and maintenance

- Before you clean or maintain the device, power it off, and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or charger. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and charger.
- Keep the device and accessories dry. Protect them from water and humidity. Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- Avoid collision, which may lead to battery leakage, device malfunctions, overheating, fire, or explosion.
- Do not place magnetic storage media, such as magnetic cards and floppy disks, near the device. Radiation from the device may erase the information on magnetic storage media.
- Do not expose your device, battery, or charger to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion. Battery performance is affected at temperatures lower than 0°C.
- Do not place sharp metal objects, such as pins, near the earpiece or speaker. The earpiece may attract these objects and result in injury.
- Do not dismantle the device or accessories. This voids the warranty and releases the manufacturer from liability for damage.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact an authorized service center.

## Emergency calls

The availability of emergency calls is subject to your cellular network quality, service provider policy, and local laws and regulations. Never

rely solely on your device for critical communications like medical emergencies.

## **Environmental protection**

- The device and its accessories, including but not limited to the power adapter, headset, and battery (if included) should not be disposed of with household garbage.
- Disposal of the device and its accessories is subject to local regulations. Support proper collection and recycling.

## **FCC Regulatory Compliance**

### **Body worn operation**

The device complies with RF specifications when used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

### **Certification information (SAR)**

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit.

The highest SAR value reported to the FCC for this device type when tested for use at the ear is 1.326 W/kg, and when properly worn on the body is 1.057 W/kg.

### **FCC statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not expressly approved by Huawei Technologies Co., Ltd. for compliance could void the user's authority to operate the equipment.

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

## Trademarks and Permissions



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

## Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

## **DISCLAIMER**

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

## **Privacy Policy**

Please refer to our privacy policy on our websites for the information about how we protect your personal information.

