

Trademarks and Permissions



HUAWEI, HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons.....	4
2 Getting Started	5
Installing SIM Cards and the Battery.....	5
Removing the Battery and the SIM Card.....	5
Installing a microSD Card.....	6
Charging the Battery.....	6
Working with the Main Menu	7
Automatically Switching Between Profiles.....	7
Phone Lock.....	8
Mass Storage	8
PIN and PUK	9
Locking the Keypad	10
Entertainment.....	10
3 Voice Services	11
Making a Call.....	11
Answering a Call.....	12
4 Text Input	13
Changing the Text Input Mode.....	13

Entering a Letter in Multi-Tap Input Mode.....	14
Entering a Word in Predictive Input Mode.....	14
Entering a Digit in Number Input Mode	14
Entering Symbols.....	14
5 Messaging	15
Writing and Sending a Text Message	15
Writing and Sending a Multimedia Message.....	16
6 Phonebook.....	17
Creating a Contact	17
Searching for a Contact	17
Setting the Preferred Storage.....	18
Copying Contacts	18
7 Video Recorder.....	19
8 Video Player	19
9 Sound Recorder.....	20
10 Ebook Reader.....	21
11 Camera.....	22
12 Audio Player.....	23
13 FM Radio	24
14 Java Applications	25
15 Services.....	27
Network Settings	27
Selecting a SIM card.....	28
Connecting to a Network.....	28


16 Bluetooth	28
Connecting a Bluetooth Headset to Your	29
Phone.....	29
Transferring Data	29
17 STK	30
18 Warnings and Precautions	30

1 Getting to Know Your Phone






Your Phone






 
 











- | | | | |
|---|-----------------|----|------------------|
| 1 | Earpiece | 11 | Input switch key |
| 2 | Screen | 12 | Enter key |
| 3 | Left soft key | 13 | Delete key |
| 4 | Menu key | 14 | End/Power key |
| 5 | Call/Answer key | 15 | Back key |
| 6 | Keypad | 16 | Right soft key |
| 7 | alt key | 17 | Ok/Confirm key |
| 8 | A/a key | 18 | Navigation keys |
| 9 | Space key | 19 | Headset jack |

 












 The figure above shows the appearance of your phone and is provided only for your reference.

Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Make a call from the SIM1 or SIM2 card in standby mode. • Answer a call. • View call logs of SIM1 and SIM2 cards in standby mode.
	<ul style="list-style-type: none"> • Power on or power off the phone (by pressing and holding the key for about 3s). • End or reject a call. • Return to the standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select a highlighted item.
	<ul style="list-style-type: none"> • Access Phonebook in standby mode. • Return to the previous menu.
	Access the main menu in standby mode.

Press...	To...
	<ul style="list-style-type: none"> • Access Phonebook in standby mode. • Return to the previous menu.
	<ul style="list-style-type: none"> • Access the dial screen in standby mode. • Confirm a selection.
	<ul style="list-style-type: none"> • Scroll to the desired icon in main menu (by pressing , , , and ). • Access the desired shortcut menu by pressing , , , or  in standby mode.
	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call the voicemail in standby mode (by pressing and holding the 1 key for about 3 seconds). • Select a submenu (by pressing the corresponding number key).
	Enter a space in text editing mode.
	<ul style="list-style-type: none"> • Lock the keypad in standby mode (by pressing and holding the key for about 3s). • Switch between input methods in text editing mode.
	<ul style="list-style-type: none"> • Activate or deactivate the Meeting profile in standby mode (by pressing and holding the key for about 3s). • Switch between the upper case and the lower case in text editing mode.
	Display the Select symbol list in text editing mode.

Screen Icons

Icon	Indicates...
	Signal strength.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	New voicemail messages.
	Enabled alarms.
	Keypad locked.
	Battery power level.
	General profile activated.
	Meeting profile activated.
	Outdoor profile activated.
	Headset connected to the phone.

2 Getting Started

Installing SIM Cards and the Battery

You can install two Subscriber Identification Module (SIM) cards in the phone at the same time. When inserting a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.




Removing the Battery and the SIM Card

 
Before removing the battery and the SIM cards, ensure that your phone is powered off.



Installing a microSD Card

 Before installing or removing a microSD card, power off the phone. Once the phone is powered on, it will indicate whether the microSD card has been installed properly.


You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the golden contact area on the microSD card is facing downward.

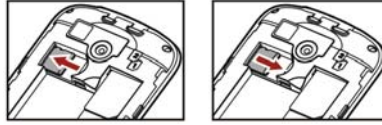

Charging the Battery





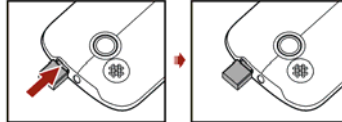 


 

To charge the battery, do the following:

1. Connect the smaller end of the USB cable to the charger jack of the phone and the larger end to the charger.
2. Connect the charger to a power socket.





-
3. Wait until the battery is fully charged.
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, it indicates that the battery is fully charged.
 4. Disconnect the charger from the power socket and then from the phone.

Working with the Main Menu

1. In standby mode, press  (**Menu**) to access the main menu.
2. Press  to scroll to the desired submenu, and then press  to access the submenu.
3. Press  or  to scroll to an option, and then press  (**OK**) or  to access the option.
4. Press  (**Back**) to return to the previous menu.
To return to the standby mode, press .

Automatically Switching Between Profiles


You can set your phone to activate different profiles at different times. The phone can automatically switch between profiles for a maximum of three times each day according to the settings.

1. Select **Menu > User profiles > Profile Switch Timing**.
2. Scroll to a clock, and then press  (**Edit**) to set the profile to be activated at a specified time.
3. Press  (**Done**) to save the settings.

Phone Lock



The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the phone code each time you power on the phone.

To enable the phone lock, do the following:

1. Select **Menu > Settings > Security settings > Phone security > Phone lock**.
2. Enter the phone code, and then press  (**OK**).

You can change the default phone code (**1234**) to any numeric string of four to eight digits.

To change the phone code, do the following:

1. Select **Menu > Settings > Security settings > Phone security > Change password**.
2. Enter the old phone code, and then press  (**OK**).
3. Enter the new phone code, and then press  (**OK**).
4. Enter the new phone code again to confirm it.


If you forget the phone code, contact the service provider.

Mass Storage

When the phone is connected to a personal computer (PC) through a USB cable, options such as **Mass storage** are displayed on the phone screen.

When you select **Mass storage**, you can manage the files stored in the phone memory and on the microSD card.

The microSD card and the phone memory are displayed as removable disks on the PC. You can perform the following operations:

- Double-click a disk to open it.
 - Copy, paste, or delete files on a disk.
 - Disconnect the phone from the PC.
-  • Ensure that you connect and disconnect the USB cable properly.
- Do not run the formatting command on the PC to format the phone memory. Otherwise, the phone memory may get permanently damaged.
 - You can transfer data and charge the battery by connecting the phone to the PC through the USB cable.


PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

SIM1 and SIM2 PINs are configured separately.

To enable the PIN lock, do the following:


1. Select **Menu > Settings > Security settings > SIM1 or SIM2 security > PIN lock.**

2. Enter the PIN, and then press  (**OK**).

If you enter wrong PINs a specified number of times consecutively, the phone prompts you to enter the PUK.


If you enter wrong PUKs a specified number of times consecutively, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.



Locking the Keypad

To lock the keypad, press and hold  in standby mode for 3s.

To unlock the keypad, press  (**Unlock**) and then .

If the **Auto keypad lock** function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a preset duration, and then press  (**OK**) to select the duration.

 When the keypad is locked, you can press  to answer a call or make an emergency call.





Entertainment



- **Camera:** to take pictures.
- **Image viewer:** to view the pictures stored in the phone memory or on the microSD card.

-
- **Audio player:** to play the audio clips stored in the phone memory or on the microSD card.
 - **Video player:** to play the video clips stored in the phone memory or on the microSD card.
 - **Sound recorder:** to record audio clips.
 - **Video recorder:** to record video clips.
 - **FM radio:** to listen to the radio.
 - **Ebook reader:** to read the ebooks stored in the phone memory or on the microSD card.
 - **Fun & Games:** to play games.
 - **Java:** to run Java applications.

3 Voice Services








Making a Call



1. In standby mode, enter the phone number.
 - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
 - To call an extension, enter the phone number, press  to enter **P**, and then enter the extension number.
2. Press  to dial the number.
3. Press  to end the call.

-
- You can also make calls through call logs, contacts, and messages.
 - During a call, you can press  or  to adjust the volume.

Answering a Call


When there is an incoming call, do the following:

- Press  to answer the call.
- Press  (**Options**), and then select **Answer** to answer the call.
- Press  to reject the call.
- Press  (**Silent**) to mute the speaker, and then press  (**Reject**) to reject the call.
- Press  (**Silent**) to mute the speaker, press  (**Options**), and then select **Answer** to answer the call.





 


If the **Any key** answer function is enabled, you can press any key except  and  to answer a call.

4 Text Input

Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press  to change the text input mode.

Indicator	Text Input Mode
abc	Multi-tap input mode
eZi abc	Predictive input mode
123	Number input mode






- You can press  (**Clear**) or  once to delete the last entered character. You can also press and hold  (**Clear**) for 3s to clear all the entered characters at a time, or press and hold  to delete the entered characters one by one.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to start a new paragraph.
- Press  to switch between the upper case and the lower case when the input language is English

Entering a Letter in Multi-Tap Input Mode

In multi-tap input mode, press the key labeled with the desired letter.

Entering a Word in Predictive Input Mode



In predictive input mode, do the following to enter a word:


1. Press each key once according to the spelling sequence of the desired word.
The phone displays the candidate words.
2. Press  or  to scroll left or right, and press 
or  to turn pages.
3. Press  to enter desired word.



Entering a Digit in Number Input Mode


In number input mode, press the number key labeled with the desired digit.


 




Entering Symbols

You can use  and  to enter symbols in any input mode.

To enter symbols by using  do the following:




- To enter only one symbol, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols, press  twice and then the keys labeled with the desired symbols.

To enter a symbol by using , do the following:






-
1. Press  to display the symbol list.
 2. Press  or  to scroll left or right, and press  or  to scroll up or down.
 3. Press  to enter the symbol.

5 Messaging

Writing and Sending a Text Message

1. Select **Menu** > **Messaging** > **Write message** > **Text message**.
2. Write the message.
3. Press  (**Options**), and then select **Send to**.
4. Select **Enter number**, and then enter the phone number of a recipient; or select **Add from Phonebook**, and then add a recipient from the phonebook.
To add multiple recipients, repeat this step.
5. Scroll to the desired recipient, and then press  to send the message or press  (**Options**) for the following options:
 - **Send**: to send the message to the recipient.
 - **Save to Drafts**: to save the message to **Drafts** and exit the message editing screen.

Writing and Sending a Multimedia Message

1. Select **Menu** > **Messaging** > **Write message** > **Multimedia message**.
2. Write the message.
3. Press  (**Options**) for the following options:
 - **Add subject:** to add a subject to the message.
 - **Add picture:** to add a picture to the message.
 - **Add sound:** to add an audio clip to the message.
 - **Add video:** to add a video clip to the message.
You can also add slides to the message, preview the message, and set the playing interval between two slides.
4. On the message-editing screen, press ; or press  (**Options**), and then select **Send to**.
5. Select **Enter recipient**, and then enter the phone number of a recipient; or select **Add from Phonebook**, and then add a recipient from the phonebook.
To add multiple recipients, repeat this step.
6. Scroll to the desired recipient, and then press  to send the message or press  (**Options**) for the following options:
 - **Send:** to send the message to the recipient.
 - **Change to Cc:** to copy the message to the recipient.
 - **Change to Bcc:** to blind copy the message to the recipient.



-
- **Save to Drafts:** to save the message to **Drafts** and exit the message editing screen.



- You can contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message of a maximum size of 300 KB.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.



6 Phonebook

Creating a Contact

1. Select **Menu** > **Phonebook** > **Add new contact**.
2. Select **To SIM1**, **To SIM2**, or **To phone** for saving the contact.
3. Enter the contact information.
4. Press  (**Done**) to save the contact.
5. When the phone asks you whether to save the information, press  (**Yes**).



Searching for a Contact

1. Select **Menu** > **Phonebook**.

-
2. Enter the first letter of the contact name.
 3. Press  or  to scroll to the desired contact.

Setting the Preferred Storage




You can set the storage where you want to save new contacts.

1. Select **Menu > Phonebook**.
2. Press  (**Options**), and then select **Phonebook settings > Preferred storage**.
3. Scroll to **SIM1**, **SIM2**, **Phone**, or **All** as desired.
4. Press  (**OK**) to select the preferred storage.


Copying Contacts





You can copy contacts to the phone, the SIM1 card, the SIM2 card, or a file.

Copying One Contact

1. Select **Menu > Phonebook**.
2. Press  or  to scroll to the desired contact.
3. Press  (**Options**), and then select **Copy**.
4. Select **To phone**, **To SIM1**, **To SIM2**, or **To file** to copy the contact to the desired location.








Copying Multiple Contacts

1. Select **Menu > Phonebook**.
2. Press  (**Options**), and then select **Phonebook settings > Copy contacts**.

-
3. Press  or  to scroll to the desired option, such as **From phone** or **From SIM1**.
 4. Press  to mark the desired contacts.
 5. Press  (**OK**) to copy [the marked](#) contacts to the desired location.

7 Video Recorder




To record a video clip, do the following:

1. Select **Menu > Multimedia > Video recorder**.
2. In video recording mode, do the following:
 - Press  to configure the relevant settings.
 - Press  to start recording or pause.
 - Press  or  to adjust brightness.
 - Press  to zoom in or  to zoom out.
 - Press  to stop recording and save the video clip as prompted.




 


8 Video Player


The video player plays downloaded or recorded video clips that are stored in the **Videos** folder in **File manager** of **Phone** or **Memory card**.

To play a video clip, do the following:

1. Select **Menu > Multimedia > Video player.**
2. Press  and  to select a video clip.
3. Press  (**Options**), and then select **Play** to play the video clip.

When the video clip is being played, you can do the following:


- Press  or  to adjust the volume.
- Press  to rewind the video clip or  to fast-forward the video clip.
- Press  to pause or continue.
- 4. Press  to stop playing the video clip.


 Only files in .mp4 and .3gp formats are supported. Files in other formats may fail to be played.


9 Sound Recorder

The sound recorder functions as a digital recorder.

To record an audio clip, do the following:

1. Select **Menu > Multimedia > Sound recorder.**
2. Press  (**Options**), and then select **New record** to record an audio clip.

During the recording, you can press  (**Pause** or **Cont.**) to pause or continue.


3. Press  (**Stop**) to stop recording the audio clip, and then save the recorded clip as prompted.


10 Ebook Reader


Your phone supports ebooks in .txt format.

1. Select **Menu** > **Extra** > **Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in **Ebook** in the phone memory or on the microSD card to the bookshelf.

2. Scroll to the desired ebook.
3. Press  (**Options**), and then select **Open ebook** to start reading the ebook.

You can also press  (**Options**), and then select **Global settings** to configure settings such as **Font size**, **scroll by**, **Auto scroll**, and **Alignment**.

4. Press  (**Back**) to stop reading the ebook.





- When reading an ebook, you can press and to turn pages.
- It is recommended that you store ebooks in **Ebook** in the phone memory or on the microSD card. When you open an ebook stored in a folder other than **Ebook**, the phone automatically moves the ebook to **Ebook** so that you can find it easily next time you want to open it.

11 Camera











The phone is equipped with a built-in 1.3-megapixel complementary metal-oxide-semiconductor (CMOS) camera.

1. Select **Menu > Multimedia > Camera**.
2. On the picture taking screen, do the following:
 - Press to view pictures or configure relevant settings.
 - Press or to adjust brightness.
 - Press to zoom in or to zoom out.
 - Press the **1**, **2**, **4**, **6**, and **7** keys to configure the corresponding settings quickly.
 - Press to switch to the simplified mode.
3. Focus the camera on the scene, and then press to take a picture.

-
4. Press  (**Back**) to save the picture; or press  (**Options**), and then select **Delete** to delete the picture.

12 Audio Player

The audio player plays audio clips that are stored in **My music** in the phone memory or on the microSD card. It is recommended that you listen to audio clips by using the headset so that you can enjoy enhanced quality sound.

1. Select **Menu > Multimedia > Audio player**; or in standby mode, press .
2. Press  to start playing audio clips.
When audio clips are being played, you can do the following:
 - Press  and  to adjust the volume.
 - Press  and  to switch between audio clips.
 - Press the button on the headset cable to switch between audio clips.
 - Press  (**List**) to view the audio clip list, and then press  (**Options**) to configure the relevant settings.
3. Press  to pause or continue.
4. Press  to stop playing audio clips.






 
 
 


13 FM Radio

The headset cable also functions as an antenna. To ensure reception of radio programs, do not disconnect the headset from the phone or bend the headset cable with strength.

1. Connect the headset to the phone.


2. Select **Menu > Multimedia > FM radio**.

When listening to the radio, you can do the following:

- Press  to pause or continue.
- Press  or  to adjust the volume.
- Press  or  to adjust the frequency at a precision of 0.1 MHz.
- Press and hold  or , and then release the key to switch to an adjacent channel.
- Press  to search for and save channels.
- Press a number key to switch to the corresponding channel based on **Channel list**.
- Press the button on the headset cable to switch between channels.
- Press  (**Options**), and then select **Record** to record a radio program.
- Press  (**Options**) to view or edit the channel list, manually set a frequency, automatically search for and save channels, and configure the relevant settings.



14 Java Applications

You can install third-party Java applications to expand the capabilities of your phone.

- Not all Java applications are compatible with your phone. If you have trouble in installing or running a Java application, press  to return to the standby mode, and then remove the application from your phone.
- Certain Java applications require network connections. Therefore, ensure that the General Packet Radio Service (GPRS) connection is properly set up.


Installing a Java Application

To install a Java application on your phone, do the following:

1. Select a Java installation file in .jar or .jad format from **Phone** or **Memory card**, press  (**Options**), and then select **Install** to start the installation.
2. Press , (**Yes**) to confirm the certification information.
3. Select **Phone** or **Memory card** to install the Java application. When the installation is successful, the message "Installed" is displayed.



Running a Java Application

To run a Java application, do the following:

-
1. Select **Menu** > **Fun & Games** > **Java**.
 2. Select a Java application, and then press  (**Options**).
 3. Select **Launch** to run the Java application.

Deleting or Removing a Java Application

To delete or remove a Java application installed on your phone, do the following:

1. Select **Menu** > **Fun & Games** > **Java**.
2. Select a Java application, and then press  (**Options**).
3. Select **Delete** to delete the application.
4. Press  (**Yes**) to confirm the certification information.
When the Java application is deleted, the message "Deleted" is displayed.

15 Services



You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.


For details about the service and the charges, contact your service provider.

Network Settings


To access WAP sites on your phone, you need to set your data account and WAP parameters first.

Setting the Connection Profile

1. Select **Menu > Settings > Connectivity > Data account**.
2. Press  (**Options**), and then select **Add PS account**.
3. Set the parameters based on the information provided by your service provider.
4. Press  (**OK**) to save the settings.

 If the data account provided by your service provider already exists, you do not need to create a data account.


Setting the WAP profile

1. Select **Menu** > **Services** > **Internet service** > **Settings** > **Data account**.
2. Select your service provider, press  (**OK**) to activate it.


Selecting a SIM card

Only one SIM card can be used to connect to the Internet at a time.

To select a SIM card, do the following:


1. Select **Menu** > **Services** > **Internet service** > **Settings** > **Select profile**.
2. Scroll to **SIM1**, **SIM2**, or **Always ask** as desired.
3. Press  (**OK**) to select the SIM card.

Connecting to a Network


1. Press **Menu** > **Services** > **Internet service** > **Input address**.
2. Enter a Uniform Resource Locator (URL) address.
3. Press  (**Options**), and then select **Go to** to access the address.

16 Bluetooth


By using the Bluetooth function, you can exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.

 You can turn on the Bluetooth function by configuring Bluetooth settings.

Connecting a Bluetooth Headset to Your Phone


1. Select **Menu > Settings > Connectivity > Bluetooth > Power > On** to turn on the Bluetooth function.
2. Select **Search audio device** to search for available Bluetooth headsets.
3. Scroll to the desired Bluetooth headset, and then press  (**Pair**).
4. Enter the password for pairing the Bluetooth headset with your phone.

When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.

 No Bluetooth headset is included in the product package. If you want to use a Bluetooth headset, you need to purchase it individually.

Transferring Data

1. Select **Menu > Settings > Connectivity > Bluetooth > Power > On** to turn on the Bluetooth function.

-
2. Select **My device** > **Search new device** to search for available Bluetooth devices.
 3. Scroll to the desired Bluetooth device, and then press  **(Pair)**.
When the Bluetooth device is connected to your phone for the first time, you need to enter the password for pairing the device with your phone.
 4. Exchange data between your phone and the Bluetooth device.

17 STK

The SIM Tool Kit (STK) function is a value-added service provided by your service provider, and you can use it to send text messages, view news, and use other applications. For more information, contact your network operator.

18 Warnings and Precautions

This chapter contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using it is prohibited. Do not use the device if using it causes danger or interference with other electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device if using it is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between an electronic device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive

atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Safety and Regulations

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle on the road side before using your device.
- Radio frequency (RF) signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of

the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- During thunderstorms, do not use your device when it is being charged, to prevent any danger caused by lightning.
- During a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device.

Prevention of Hearing Damage

Using a headset at high volume may damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. The device and its accessories may include parts that present a choking hazard for children. Ensure that small children are kept away from the device and its accessories.

Accessories

Use the accessories provided by the device manufacturer only. Using third-party accessories with this device may invalidate any guarantee or warranty applicable to the device, result in malfunction of the device, and cause danger.

Battery and Charger

- Unplug the charger from the power socket and the device when the charger is not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shortened, replace the battery.
- Use the alternating current (AC) power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may short-circuit and cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

-
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. If the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
 - If the battery is deformed, changes color, or is abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
 - If the power cable is damaged (for example, the cord is exposed or broken), or if the plug loosens, stop using the cable immediately. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
 - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
 - There is a danger of explosion if the battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or instructions provided with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise,

it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before cleaning or maintaining the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire may be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or its accessories. Otherwise, the warranty on the device and the accessories becomes invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for RF energy absorbed by the body when the device is being used. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when the device is being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the Federal Communications Commission (FCC) and the Industry Canada (IC) for this device

type when it is tested for use at the ear is 1.22 W/kg, and that when it is properly worn on the body is 0.602 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when it is tested at the ear is 0.773 W/kg, and that when it is properly worn on the body is 0.485 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate RF energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is, however, no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

EU Regulatory Conformance

Huawei Technologies Co., Ltd. hereby declares that this device complies with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

C E 0682

Notice: Observe the national and local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

