

GSM Mobile Phone

HUAWEI G6110

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents


1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons	4
2 Getting Started	5
Installing the SIM Card and the Battery.....	5
Removing the Battery and the SIM Card.....	5
Installing the microSD Card	6
Charging the Battery.....	6
Accessing a Function Menu	6
Automatically Switching Between Profiles.....	7
Phone Lock.....	8
PIN and PUK	8
Locking the Keypad	8
Entertainment.....	9
3 Call Functions.....	10
Making a Call.....	10
Answering a Call.....	10
4 Text Input	11
Changing the Text Input Mode.....	11
Traditional Input Mode.....	12
Predictive Input Mode	12

Chinese Input Mode	13
Entering a Digit.....	13
Switching Input Methods	13
Entering a Digit or Symbol	13
5 Messaging	14
Writing and Sending a Text Message	14
Writing and Sending a Multimedia Message.....	15
6 Phonebook	16
Creating a Contact	16
Searching for a Contact	17
7 Multimedia	17
E-book Reader	17
Using the Sound Recorder.....	18
Using the camera.....	19
8 Audio player.....	19
9 FM radio	20
10 Services.....	21
Network Settings	21
Connecting to the Network	22
11 Other Applications	22
Chat Functions	22
12 Warnings and Precautions	23

1 Getting to Know Your Phone


Your Phone

The following figure shows the appearance of your phone and it is provided only for your reference.

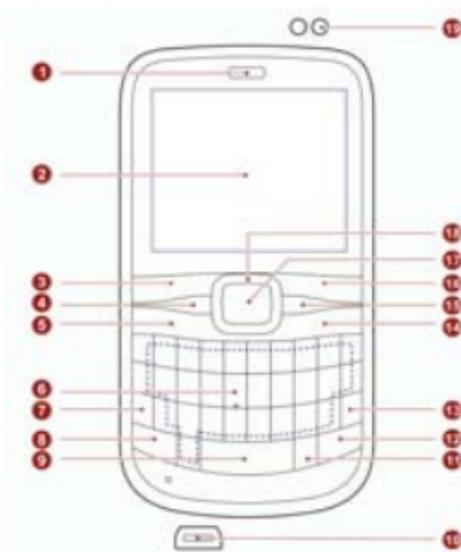



- | | | | |
|---|------------------|----|-----------------|
| 1 | Earpiece | 11 | Sym key |
| 2 | Screen | 12 | Aa key |
| 3 | Left soft key | 13 | Enter key |
| 4 | Menu key | 14 | End/Power key |
| 5 | Call/Answer key | 15 | Message key |
| 6 | Keypad | 16 | Right soft key |
| 7 | Alt key | 17 | OK/Confirm key |
| 8 | Input switch key | 18 | Navigation keys |
| 9 | SPACE key | 19 | Flashlight |

 Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Make a call in standby mode. • Answer an incoming call. • View call logs in standby mode.
	<ul style="list-style-type: none"> • Power on or power off the phone (by pressing and holding the key for about 3s). • End a call or reject an incoming call. • Return to the standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select a highlighted item.
	<ul style="list-style-type: none"> • Access the Phonebook list in standby mode. • Return to the previous menu.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Confirm a selection.
	<ul style="list-style-type: none"> • Press to select the desired quick icon option in standby mode (the key can be used in four ways, Up () , Down () , Left () , and Right () direction keys). • Press in left () or right () direction to select or function a function.

Press...	To...
 - 	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call the voicemail in standby mode (by pressing and holding the 1 key for about 3s). • Speed-dial a phone number by pressing and holding a key from 2 to 9 for about 3s in standby mode (select Menu > Phonebook > Options > Setting > Speed dial, enable speed dial function and assign the desired phone numbers to the corresponding keys). • Select a submenu labeled with the corresponding number.
	Access the main menu screen in standby mode.
	Access the Write message screen in standby mode.
	<ul style="list-style-type: none"> • Turn on or turn off the flashlight in standby mode (by pressing and holding the key for about 3s). • Switch input method in any input mode.
	<ul style="list-style-type: none"> • Confirm a selection in menu option mode. • Add new paragraph in any input mode.
	<ul style="list-style-type: none"> • Activate or deactivate the Meeting profile in standby mode (by pressing and holding the key for about 3s). • Input capital letter or small letter in any input mode.

  
Screen Icons

Icon	Indicates...
	Signal strength.
	New text messages.
	New multimedia messages.
	New push messages.
	The call forwarding function is enabled.
	Missed call(s).
	GPRS signal.
	The microSD card is inserted.
	Alarms.
	The keypad is locked.
	Battery power level.
	The General/Indoor profile is enabled.
	The Meeting profile is enabled.
	The Outdoor profile is enabled.
	The Silent profile is enabled.
	The headset is connected.

2 Getting Started


Installing the SIM Card and the Battery

When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward, and the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

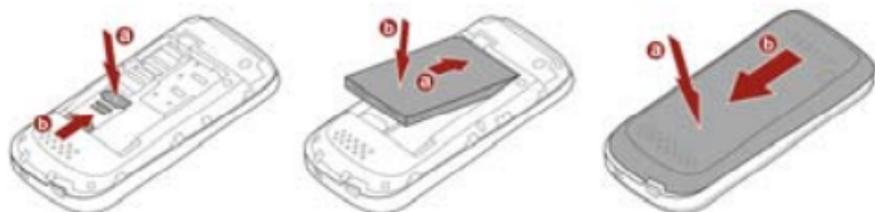


Removing the Battery and the SIM Card

Before removing the battery and the SIM cards, ensure that your phone is powered off.

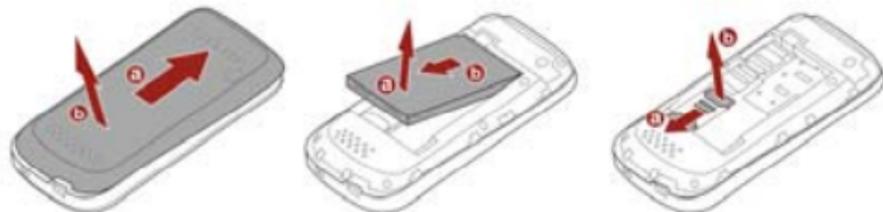


Installing the microSD Card

You can install two microSD cards on the phone at the same time. When installing a microSD card, ensure that the golden contact area on the microSD card is facing downward.

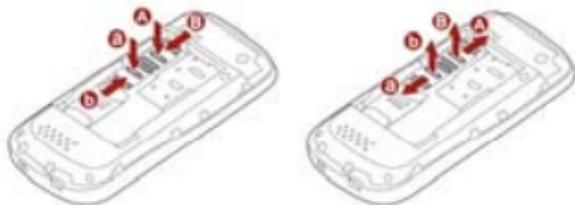

Charging the Battery

1. Connect the charger to the charger jack on the phone.

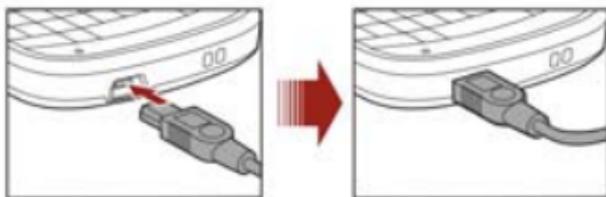

2. Connect the charger to an alternating current (AC) power socket.
3. Wait until the battery is fully charged.
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
4. Disconnect the charger from the AC power socket.
5. Disconnect the charger from the phone.

Accessing a Function Menu

1. In standby mode, press  (Menu).

2. Press  to select the desired function menu.
3. Press  (**OK**) or  to display the selected menu.
4. Press  or  to select a submenu.
5. Press  (**OK**) or  to display the submenu.
6. Press  (**Back**) to return to the previous menu or exit the function menu.

To return to the standby mode directly, press .

Automatically Switching Between Profiles

You can set your phone to activate different profiles for different time period. The phone can automatically switch between profiles for a maximum of three times each day according to your settings.

1. In standby mode, select **Menu** > **User profiles** > **Profile Switch Timing**.
2. Select a clock.
3. Press  (**Edit**) to set the status, time and assign a profile.
4. Press  (**Done**) to save the setting as prompted message.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) into any numeric string of four to eight digits.

Do remember your phone lock code. If you forget it, contact the service center.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.

Locking the Keypad

In standby mode, press and hold  for about 3s to lock the keypad. To unlock the keypad, press  (**Unlock**), and then .

If the auto keypad lock function is enabled, the keypad is locked automatically, when the phone is idle for a preset period in standby mode.



When the keypad is locked, you can still press  to answer an incoming call or make an emergency call.

Entertainment

- **Camera:** to take pictures.
- **Image viewer:** to show the pictures you have stored in the phone memory or on the microSD card.
- **Audio player:** to play the audio files stored in the phone memory or on the microSD card.
- **Sound recorder:** to record audio clips.
- **FM radio:** to listen to radio programs.
- **Schedule FM record:** to record radio programs in predefined time and date.
- **Fun & Games:** to play games and have fun.

3 Call Functions

Making a Call

1. In standby mode, enter a phone number.
 - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
 - To call an extension, enter the phone number, press  to enter **P**, and then enter the extension number.
 2. Press  to dial the number from SIM1 card, or press  to dial the number from SIM2 card.
 3. Press  to end the call.
-  • You can also make calls through call logs, contacts, and messages.
- During a call, you can press  or  to adjust the volume.

Answering a Call

When there is an incoming call, you can do as follows:

- Press  to answer the call.
- Press  (**Option**), and then select **Answer** to answer the call.
- Press  to reject the call.

- Press  (**Silent**) to silence the phone. Then press  (**Reject**) to reject the call. Or press  (**Option**), and then select **Answer** to answer the call.
- If the any-key answer function is enabled, you can press any key except  and  to answer an incoming call.

4 Text Input

Changing the Text Input Mode

The icon of the current text entry mode is displayed in the upper left corner of the screen. You can press  to change the mode.

Icon	Text Input Mode
Es, abc,	Traditional input mode
eZi es, eZi abc,	Predictive input mode
拼	Chinese input mode
123	Number input mode



- You can press  (**Clear**) or  once to delete the last entered character. You can also press and hold  (**Clear**) for about 3s to clear all the entered characters at a time; or press and hold  to delete the entered character one by one.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to add a new paragraph.

Traditional Input Mode

In traditional input mode, you can press the key labeled with the desired letter to enter the letter on the key.

Predictive Input Mode

In predictive input mode, you can enter a word as follows:

1. Press each key once according to the spelling sequence of the desired word.

The phone displays a commonly used word according to the sequence of key presses.

2. Press  to scroll to the desired word.
3. Press  to enter the word.

Chinese Input Mode

In Chinese input mode, you can enter a Chinese character as follows:

1. Press each key according to the spelling sequence of the PinYin.

The phone displays a commonly used Chinese character according to the sequence of key presses.

2. Press  to scroll to the desired word.
3. Press  to enter the word.

Entering a Digit

In “123” input mode, press the key labeled with the desired digit.

Switching Input Methods

To quickly switch the input methods, do as follows:

- Press  to switch between the traditional, predictive, number, and Chinese input modes.
- Press  to switch between **ABC**, **Abc** and **abc** by pressing  while it is in traditional or predictive input mode.

Entering a Digit or Symbol

To enter a digit or symbol with qwerty keypad in any input mode, do as follows:

- Press  once to enter the symbol or the digit labeled on the key temporarily.

- Press  twice to enter the symbol or the digit labeled on the key permanently.

In any input mode, press  to enter a symbol.

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.

5 Messaging

Writing and Sending a Text Message

1. Select **Menu > Messaging > Write message**.
2. Write the message.
3. Press  (**Options**) and select **Send to**, or press .
4. Input the recipients manually in **Enter recipient** option, or add from phonebook in **Add from Phonebook** option.
5. Highlight a recipient and press  to directly send the message; or press  (**Options**) for the sending options as follows:
 - **Send**: to send the message to the recipients.
 - **Save**: to save the message to **Outbox** and exit the message editing screen.

Writing and Sending a Multimedia Message

1. Select **Menu > Messaging > Write message**.
2. Write the message.
3. Press  (**Options**) for the following options:
 - **Switch to MMS:** to change the text message to multimedia message.
 - **Add subject:** to add the subject content for this multimedia message.
 - **Add picture/sound:** to add pictures and audio clips to this multimedia message. You can also add slides, add attachments, preview this message, and set the playing interval between two slides.
4. In message editing screen, press  (**Options**). Then select **Send to**, or press .
5. Input the recipients manually in **Enter recipient** option, or add from phonebook in **Add from phonebook** option.
6. Highlight a recipient and press to directly send the message; or press  (**Options**) for the sending options as follows:
 - **Send:** to send the multimedia message to the recipients.
 - **Change to To/Cc/Bcc:** the recipient to be sent, copied to, or blind copied to.
 - **Save to Drafts:** to save the multimedia message to **Drafts**.



- You can contact your service provider for the availability of the MMS and the method for subscribing to this service.
- Every MMS has a capacity of 300k bytes.
- You must open multimedia messages with caution. Objects in multimedia messages may contain viruses that might damage your phone, such as malicious software.

6 Phonebook

Creating a Contact

1. Select **Menu > Phonebook > Add new contact**.
2. Select **To SIM1/2** or **To phone** for saving the contact.
3. Edit the contact.

4. Press  (**OK**).
5. Press  (**Yes**) to save the contact or press  (**No**) to cancel the creation of the contact.

Searching for a Contact

1. Select **Menu** > **Phonebook**.
2. Enter the first letter of the contact name.
3. Press  or  to scroll to the desired contact.

7 Multimedia

E-book Reader

Your phone supports ebooks in .txt format.

1. Select **Menu** > **Multimedia** > **Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in **Ebook** in the phone memory or on the microSD card to the bookshelf.

2. Select an ebook.
 3. Press  (**Options**) for the following options:
 - **Open ebook**: to access the ebook reading screen.
 - **Global settings**: to configure the font, scroll type, encoding, alignment, and other relevant settings.
 4. Press  (**Back**) to stop reading the ebook.
-  • When reading an ebook, you can press  and  to turn pages.
- It is recommended that you store ebooks in **Ebook** in the phone memory or on the microSD card. If you open an ebook in another folder, the phone automatically moves the ebook to **Ebook** so that you can find it easily in your next reading.

Using the Sound Recorder

1. Select **Menu > Multimedia > Sound recorder**.
2. Press  (**Options**), and then select **New record** to record an audio clip.
During the recording, press  (**Pause/Cont.**) or  to pause or continue.
3. Press  (**Stop**) to stop recording the audio clip, and then save the recorded clip as prompted.

Using the camera

The phone is provided with a built-in 0.1 mega pixel CMOS camera at the back, which supports the photographing functions.

1. Select **Menu** > **Camera** to launch the camera.
2. Select a scene for taking a picture, and then press  to configure the relevant settings as required.
3. Focus the camera on the scene, and then press  to take the picture.
4. Press  (**Back**) to save the picture and ready for taking new one. Or press  (Options) and select **Delete** to delete the picture.

8 Audio player

1. Save downloaded music to My music in File manager of Memory card or Memory card2.
2. Select **Menu** > **Audio player**.
3. Press  to start playing music.
When the music is being played, you can do the following:
 - Press  and  to adjust the volume.
 - Press  and  to switch music.
 - Press  (**List**) to view the music list or configure relevant settings.
4. Press  to pause.

9 FM radio

In addition to be used for listening to the radio, the headset cable also functions as an antenna. To ensure good reception of radio programs, do not pull out the headset or bind the headset cable when listening to the radio.

1. Select **Menu > FM radio**.
2. On the FM radio screen, you can do as follows:
 - Press  to switch on or switch off the FM radio.
 - Press  (**Back**) to play radio programs in the background.
 - Press  or  to adjust the volume.
 - Press  or  to tune at a precision of 0.1 MHz.
 - Press number keys to select the corresponding channel. For example press  to select the first channel.
 - Press  (**Options**) to view the channel list or configure other settings.
 - Press the key on headset cable to switch to the next channel.

10 Services

You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.

For details about the services and charges, contact your service provider.

Network Settings

To access WAP sites on your phone, you need to set your data account and WAP parameters on your phone first.

Setting the Connection Profile

1. Select **Menu** > **Services** > **Data account**.
2. Select the network type (**GSM data** or **GPRS**).
3. Select your service provider.
4. Press  (**Edit**) to set the account.
5. Press  (**Done**) to save the settings.

Setting the WAP

1. Select **Menu** > **Services** > **Internet service** > **Settings** > **profiles**.
2. Select **SM1** or **SIM2**.
3. Select your service provider, and then press .
4. Select **Edit profile**, and then press  (**OK**).

5. Set the account, and then press  (**Done**) to save the settings.
6. Select your service provider, press  (**OK**), and then select **Activate profile**.

Connecting to the Network

1. Press **Menu** > **Services** > **Internet service** > **Input address**.
2. Enter a Uniform Resource Locator (URL) address.
3. Press  (**Options**), and then select **Done** to access the address.

11 Other Applications

Chat Functions

The built-in chat tool FACE BOOK on your phone, allows you to chat, send message and files on the move.

1. Press  in standby mode.
2. Enter the account and password information.

 Please check your GPRS settings before accessing the chat tools.

Before saving chat history, ensure that the microSD card has been inserted.

12 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths.

Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.

- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.

- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Sound Pressure

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.



Warning statement:

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by HUAWEI Technologies Co., Ltd. may void the FCC authorization to operate this device. Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and must provide at least 1.5 cm separation between the device and the user's body.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

SAR Vaule: Head: 0.983 W/kg

Body: 1.300 W/kg

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

C € 0682

根据实际编码

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.: 6010332