



**HUAWEI G6151**  

---

**GSM Mobile Phone**

**User Guide**

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

#### Trademarks and Permissions



**HUAWEI**, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, products, services, and company names mentioned are the property of their respective owners.

#### Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of the local network, and may not be activated or may be limited by local network operators or network service providers. Thus, the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

#### **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

#### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

# Contents

 
<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Screen Icons .....	4
<b>2 Getting Started .....</b>	<b>6</b>
Installing the SIM Card and the Battery .....	6
Removing the Battery and the SIM Card .....	6
Installing a microSD Card .....	7
Charging the Battery .....	7
Working with the Main Menu .....	8
Automatically Switching Between Profiles .....	8
Phone Lock .....	9
Mass Storage .....	9
PIN and PUK .....	10
Locking the Keypad .....	11
Other Applications .....	11
<b>3 Voice Services .....</b>	<b>12</b>
Making a Call .....	12
Answering a Call .....	12
<b>4 Text Input .....</b>	<b>13</b>
Changing the Text Input Mode .....	13
Entering a Letter in Traditional Input Mode .....	14

Entering a Word in Predictive Input Mode.....	14
Entering a Digit in Number Input Mode .....	14
Using the FN Key .....	15
Entering Symbols.....	15
<b>5 Messaging .....</b>	<b>16</b>
Writing and Sending a Text Message .....	16
Writing and Sending a Multimedia Message.....	16
<b>6 Phonebook.....</b>	<b>17</b>
Creating a Contact .....	17
Searching for a Contact .....	17
Setting the Preferred Storage.....	18
Copying Contacts .....	18
<b>7 WiFi .....</b>	<b>19</b>
<b>8 Video Recorder.....</b>	<b>19</b>
<b>9 Video Player .....</b>	<b>20</b>
<b>10 Sound Recorder .....</b>	<b>21</b>
<b>11 Ebook Reader.....</b>	<b>21</b>
<b>12 Camera.....</b>	<b>22</b>
<b>13 Audio Player.....</b>	<b>23</b>
<b>14 FM Radio .....</b>	<b>24</b>
<b>15 Java Applications .....</b>	<b>25</b>
<b>16 Services.....</b>	<b>27</b>
Network Settings.....	27
Selecting a SIM card.....	28
Connecting to a Network.....	28

<b>17 Bluetooth</b> .....	<b>28</b>
Connecting a Bluetooth Headset to Your Phone.....	29
Transferring Data .....	29
<b>18 STK</b> .....	<b>30</b>
<b>19 Warnings and Precautions</b> .....	<b>30</b>


# 1 Getting to Know Your Phone

## Your Phone

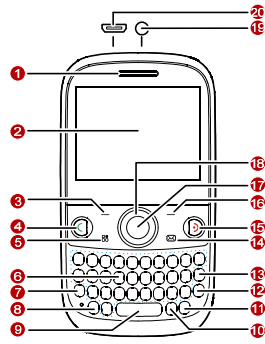






- |   |                 |    |                  |
|---|-----------------|----|------------------|
| 1 | Earpiece        | 11 | Input switch key |
| 2 | Screen          | 12 | Enter key        |
| 3 | Left soft key   | 13 | Delete key       |
| 4 | Call/Answer key | 14 | Message key      |
| 5 | Menu key        | 15 | End/Power key    |
| 6 | Keypad          | 16 | Right soft key   |
| 7 | Fn key          | 17 | Ok/Confirm key   |






 










8	A/a key	18	Navigation keys
9	Space key	19	Headset jack
10	sym key	20	Charger jack/Universal serial bus (USB) port

  The figure above shows the appearance of your phone and is provided only for your reference.















## Keys and Functions



Press...	To...
	<ul style="list-style-type: none"> <li>• Make a call from the SIM1 or SIM2 card in standby mode.</li> <li>• Answer an incoming call.</li> <li>• View call logs of SIM1 and SIM2 cards in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power on or power off the phone (by pressing and holding the key for about 3s).</li> <li>• End or reject a call.</li> <li>• Return to the standby mode.</li> </ul>
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	Access the main menu in standby mode.



Press...	To...
	Access <b>Messaging</b> in standby mode.
	<ul style="list-style-type: none"> <li>• Access the dial screen in standby mode.</li> <li>• Confirm a selection.</li> </ul>
	<ul style="list-style-type: none"> <li>• Scroll to the desired icon in main menu (by pressing , , , and )</li> <li>• Access the desired shortcut menu by pressing , , , or  in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call the voicemail in standby mode (by pressing and holding the <b>1</b> key for about 3 seconds).</li> <li>• Select a submenu (by pressing the corresponding number key).</li> </ul>
	Enter a space in text editing mode.
	<ul style="list-style-type: none"> <li>• Lock the keypad in standby mode (by pressing and holding the key for about 3s).</li> <li>• Switch between input methods in text editing mode.</li> </ul>
	Switch between the upper case and the lower case in text editing mode.
	Display the <b>Select symbol</b> list in text editing mode.

## Screen Icons

Icon	Indicates...
	Signal strength.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	New voicemail messages.
	Enabled alarms.
	Keypad locked.
	Battery level.
	The alert type is <b>Ring only</b> .
	The alert type is <b>Vib. Only</b> .
	The alert type is <b>Vib. and ring</b> .
	The alert type is <b>Vib. then ring</b> .
	<b>Silent</b> profile activated.

 
Icon	Indicates...
	Headset connected to the phone.
	WiFi is connected.

## 2 Getting Started

### Installing the SIM Card and the Battery

You can install up to two subscriber identity module (SIM) cards in the phone at the same time.

When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

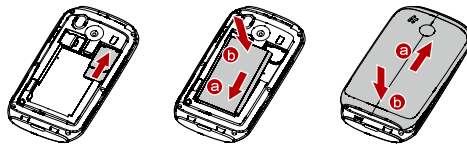


### Removing the Battery and the SIM Card

 
Before removing the battery and the SIM cards, ensure that your phone is powered off.



## Installing a microSD Card

 Before installing or removing a microSD card, power off the phone. Once the phone is powered on, it will indicate whether the microSD card has been installed properly.


You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the golden contact area on the microSD card is facing downward.

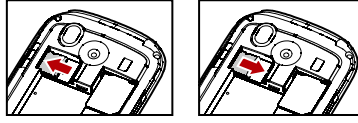

## Charging the Battery



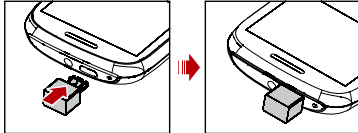 


 

 

To charge the battery, do the following:

1. Connect the smaller end of the USB cable to the charger jack of the phone and the larger end to the charger.
2. Connect the charger to a power socket.




3. Wait until the battery is fully charged.  
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, it indicates that the battery is fully charged.
4. Disconnect the charger from the power socket and then from the phone.

### Working with the Main Menu

1. In standby mode, press  (**Menu**) to access the main menu.
2. Press  to scroll to the desired submenu, and then press  to access the submenu.
3. Press  or  to scroll to an option, and then press  (**OK**) or  to access the option.
4. Press  (**Back**) to return to the previous menu.  
To return to the standby mode, press .

### Automatically Switching Between Profiles

You can set your phone to activate different profiles at different times. The phone can automatically switch between profiles according to your settings.

1. Select **Menu > User profiles > Profile Switch Timing**.
2. Select a clock.
3. Set the status, time, profile, and repetition days.
4. Press  (**Done**) to save the settings.

## Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the phone code each time you power on the phone.

The phone code is set to **1234** by default. You can select **Menu > Settings > Security settings > Phone security > Change password** > to change the phone code to any numeric string of 4 to 8 digits.

Do remember your phone code.

If you forget the phone code, contact the service provider.

## Mass Storage

When the phone is connected to a personal computer (PC) through a USB cable, options such as **Mass storage** are displayed on the phone screen.

When you select **Mass storage**, you can manage the files stored in the phone memory and on the microSD card.

The microSD card and the phone memory are displayed as removable disks on the PC. You can perform the following operations:

- Double-click a disk to open it.
- Copy, paste, or delete files on a disk.
- Disconnect the phone from the PC.



- Ensure that you connect and disconnect the USB cable properly.
- Do not run the formatting command on the PC to format the phone memory. Otherwise, the phone memory may get permanently damaged.
- You can transfer data and charge the battery by connecting the phone to the PC through the USB cable.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

SIM1 and SIM2 PINs are configured separately.

To enable the PIN lock, do the following:




1. Select **Menu > Settings > Security settings > SIM1 or SIM2 security > PIN lock**.
2. Enter the PIN, and then press  (**OK**).

If you enter wrong PINs a specified number of times consecutively, the phone prompts you to enter the PUK.


If you enter wrong PUKs a specified number of times consecutively, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.





## Locking the Keypad

To lock the keypad, press and hold  in standby mode for 3s. To unlock the keypad, press  (**Unlock**) and then  (**OK**).

If the **Auto keypad lock** function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a preset duration, and then press  (**OK**) to select the duration.

 When the keypad is locked, you can press  to answer a call or make an emergency call.

## Other Applications

- **Calculator:** to perform simple calculation.
- **Stopwatch:** to time a process.
- **Ebook reader:** to read the ebooks.
- **Calendar:** to view dates and set events.
- **Tasks:** to view and set tasks.
- **Alarm:** to set alarms.
- **Fun&Games:** to play games.
- **Java:** to run Java applications.





























































